
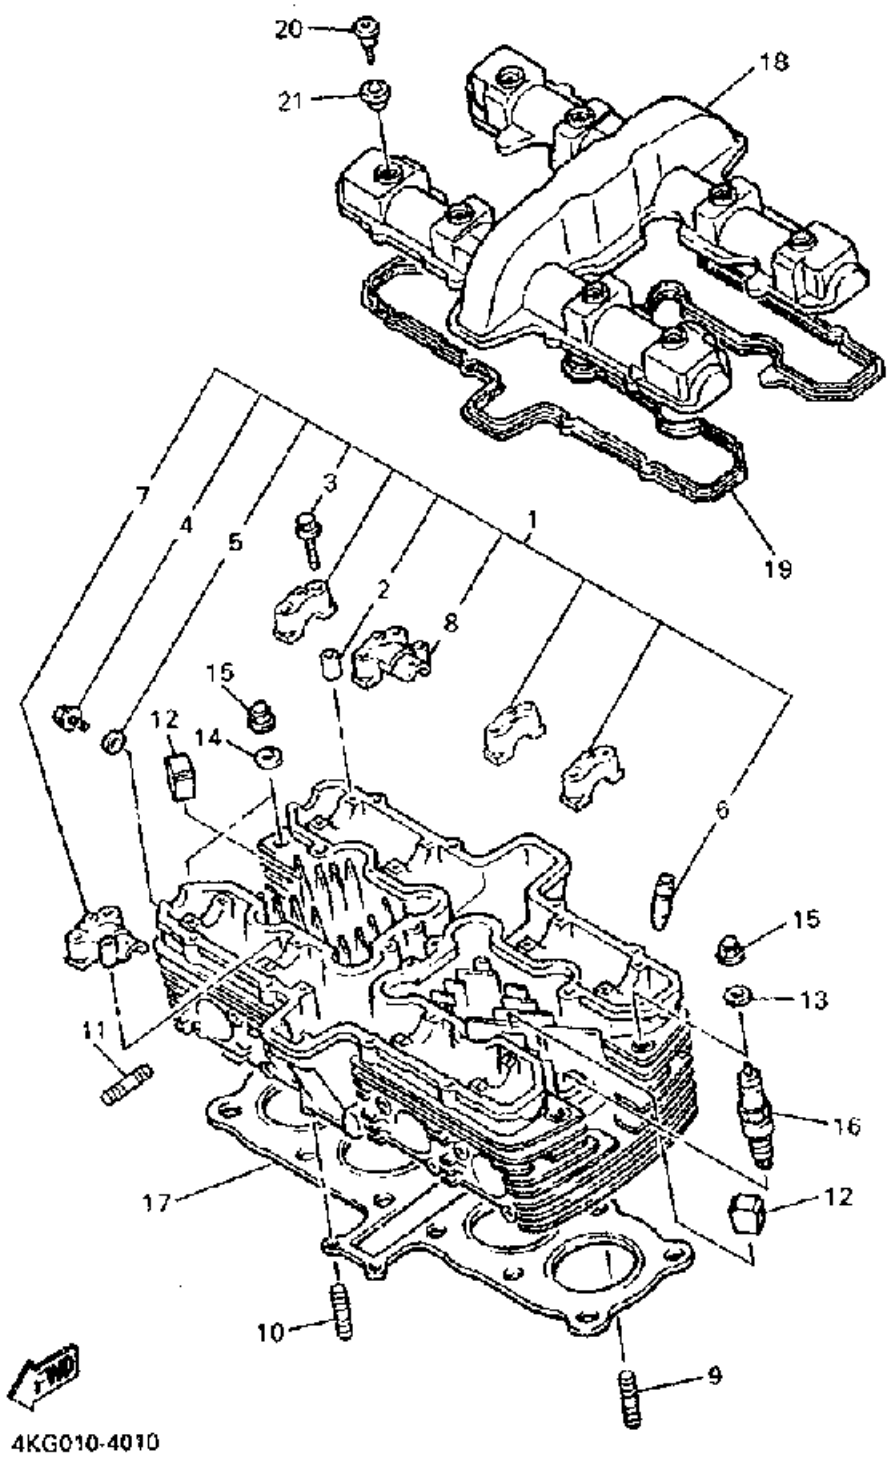



Ref No	Part No	Description
01	4KG-11101-00-00	Cylinder Head Assy
02	99510-08016-00	• . Pin, Dowel
03	90105-06305-00	• . Bolt, Washer Based
04	90153-06029-00	• . Screw, Hexagon
05	90430-06014-00	• . Gasket
06	36Y-11133-10-00	• . Guide, Intake Valve
07	36Y-12193-10-00	• . Cap, Camshaft 3
08	36Y-12178-10-00	• . Cap, Camshaft 4
09	95617-06625-00	Bolt, Stud
10	95617-06635-00	Bolt, Stud
11	95617-08625-00	Bolt, Stud
12	434-11161-00-00	Absorber 1
13	90201-102G9-00	Washer, Plate
14	90201-10128-00	Washer, Plate
15	90176-10077-00	Nut, Crown
16	94701-00241-00	Plug, Spark (ingk Dpr8ea-9)
17	1TX-11181-00-00	Gasket, Cylinder Head 1
18	4KG-11191-01-00	Cover, Cylinder Head 1
19	36Y-11193-00-00	Gasket, Head Cover 1
20	90109-066F0-00	Bolt
21	4KG-1111G-00-00	Rubber, Mount 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

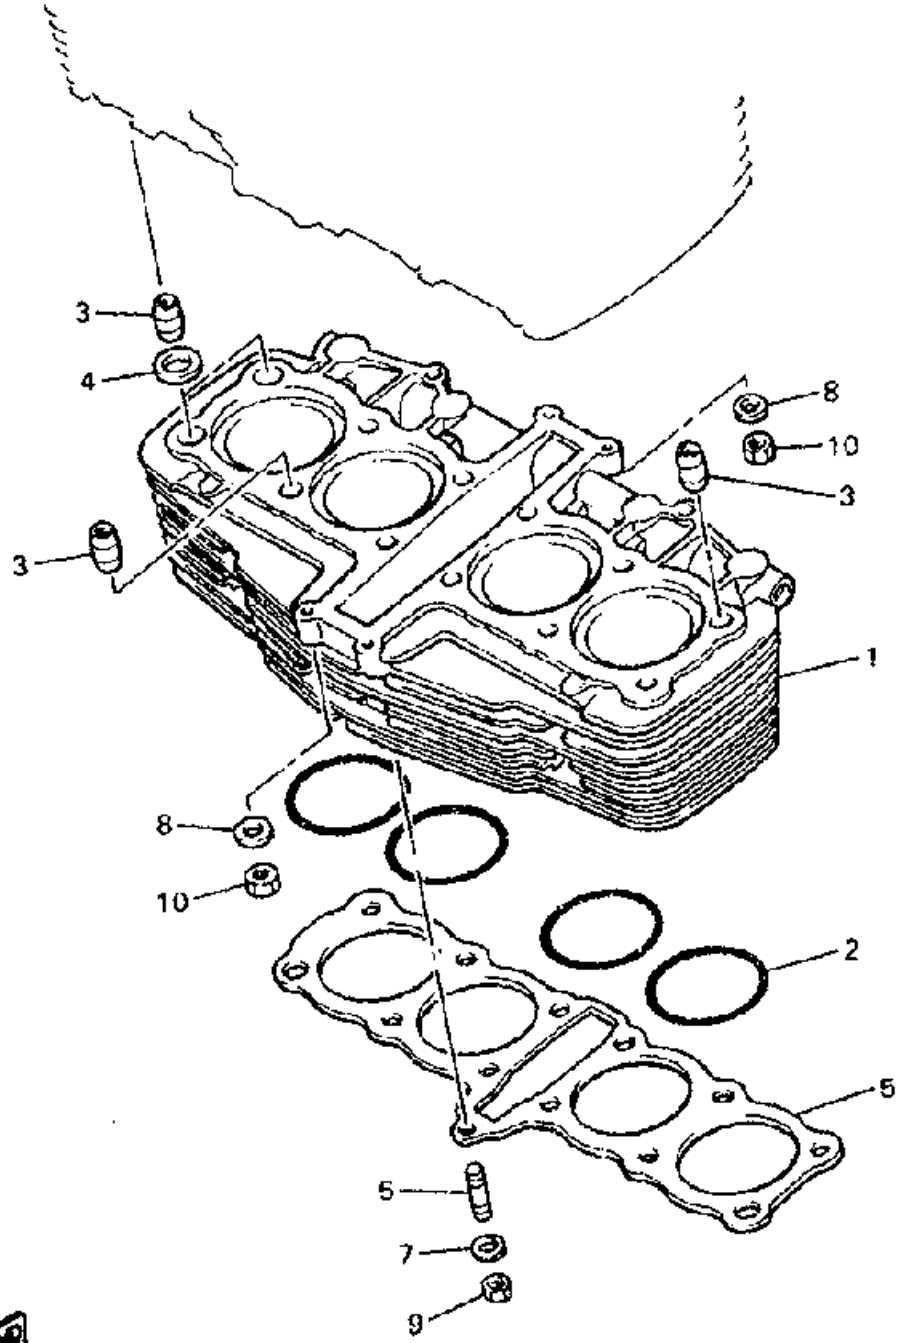

Ref No	Part No	Description
01	1TX-11310-00-00	Cylinder
02	93210-81731-00	O-ring
03	99530-14016-00	Pin, Dowel
04	90430-14131-00	Gasket
05	4CR-11351-00-00	Gasket, Cylinder
06	95627-08330-00	Bolt, Stud
07	90201-084G3-00	Washer, Plate
08	92907-06600-00	Washer, Plate
09	95317-08600-00	Nut
10	95317-06600-00	Nut


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

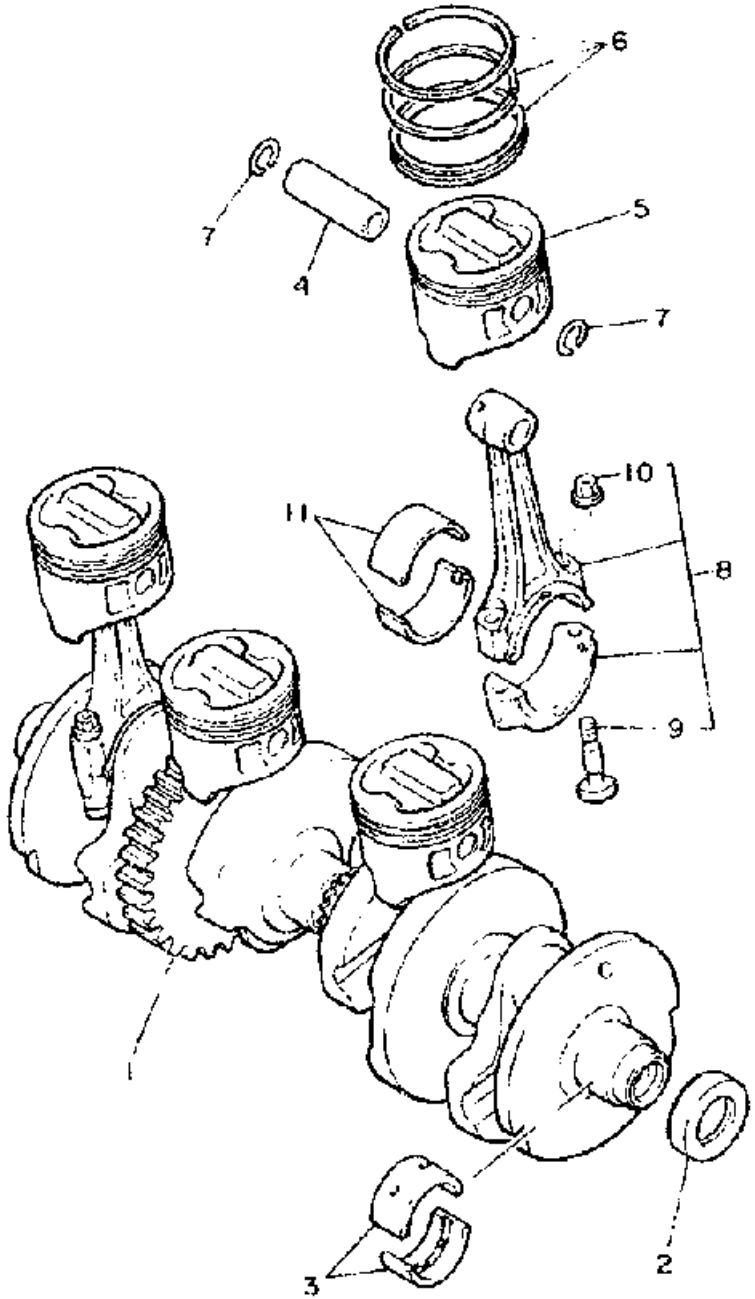

36Y310-4030


Ref No	Part No	Description
01	36Y-11411-01-00	Crankshaft
02	36Y-15389-09-00	Seal, Push Rod
03	2H7-11416-01-00	Plane Bearing, Crankshaft 1
03	2H7-11416-11-00	Plane Bearing, Crankshaft 1
03	2H7-11416-21-00	Plane Bearing, Crankshaft 1
03	2H7-11416-31-00	Plane Bearing, Crankshaft 1
03	2H7-11416-41-00	Plane Bearing, Crankshaft 1
04	30X-11633-03-00	Pin, Piston
05	4PU-11631-00-A0	Piston (std)
05	4PU-11636-00-00	Piston (0.50mm O/s)
06	4PU-11603-00-00	Piston Ring Set (std)
06	4PU-11605-00-00	Piston Ring Set (0.50mm O/s)
07	93450-19052-00	Circlip
08	36Y-11650-01-00	Connecting Rod Assy
09	36Y-11654-00-00	• . Bolt, Connecting Rod
10	90179-08327-00	• . Nut
11	36Y-11656-00-00	Plane Bearing, Connecting Rod
11	36Y-11656-10-00	Plane Bearing, Connecting Rod
11	36Y-11656-20-00	Plane Bearing, Connecting Rod
11	36Y-11656-30-00	Plane Bearing, Connecting Rod

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

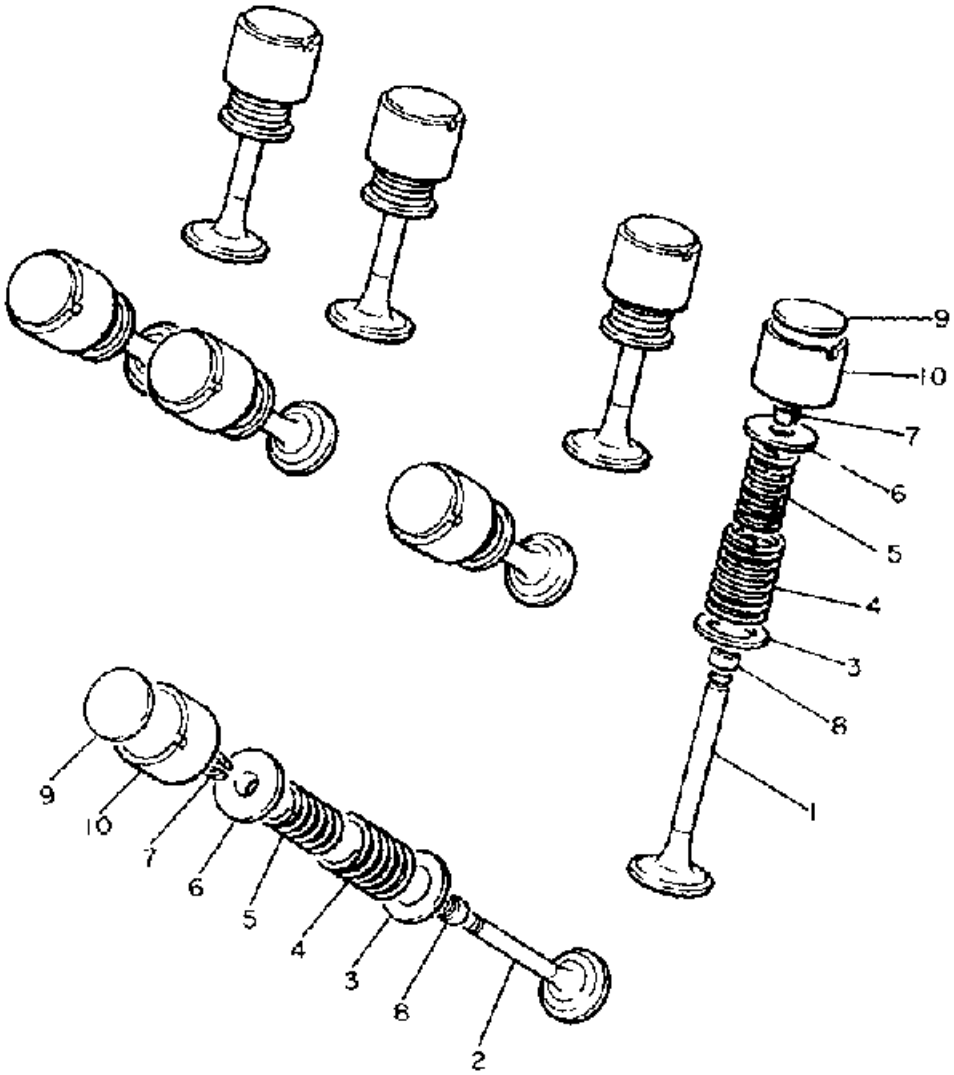


Ref No	Part No	Description
01	36Y-12111-00-00	Valve, Intake
02	36Y-12121-00-00	Valve, Exhaust
03	26H-12116-00-00	Seat, Valve Spring
04	36Y-12114-00-00	Spring, Valve Outer
05	36Y-12113-00-00	Spring, Valve Inner
06	30X-12117-00-00	Retainer, Valve Spring
07	30X-12118-00-00	Cotter, Valve
08	51Y-12119-00-00	Seal, Valve Stem
09	26H-12168-00-00	Pad, Adjusting (2.00)
09	26H-12168-M0-00	Pad, Adjusting (2.45)
09	26H-12168-R0-00	Pad, Adjusting (2.50)
09	26H-12168-U0-00	Pad, Adjusting (2.55)
09	26H-12168-W0-00	Pad, Adjusting (2.60)
09	26H-12168-Y0-00	Pad, Adjusting (2.65)
09	26H-12169-10-00	Pad, Adjusting (2.70)
09	26H-12169-30-00	Pad, Adjusting (2.75)
09	26H-12169-50-00	Pad, Adjusting (2.80)
09	26H-12169-70-00	Pad, Adjusting (2.85)
09	26H-12169-90-00	Pad, Adjusting (2.90)
09	26H-12168-20-00	Pad, Adjusting (2.05)
09	26H-12169-E0-00	Pad, Adjusting (2.95)
09	26H-12169-G0-00	Pad, Adjusting (3.00)
09	26H-12169-J0-00	Pad, Adjusting (3.05)
09	26H-12169-L0-00	Pad, Adjusting (3.10)
09	26H-12169-N0-00	Pad, Adjusting (3.15)
09	26H-12169-T0-00	Pad, Adjusting (3.20)
09	26H-12168-40-00	Pad, Adjusting (2.10)
09	26H-12168-60-00	Pad, Adjusting (2.15)
09	26H-12168-80-00	Pad, Adjusting (2.20)
09	26H-12168-A0-00	Pad, Adjusting (2.25)
09	26H-12168-F0-00	Pad, Adjusting (2.30)
09	26H-12168-H0-00	Pad, Adjusting (2.35)
09	26H-12168-K0-00	Pad, Adjusting (2.40)
10	26H-12153-00-J0	Lifter, Valve
10	26H-12153-00-Y0	Lifter, Valve

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

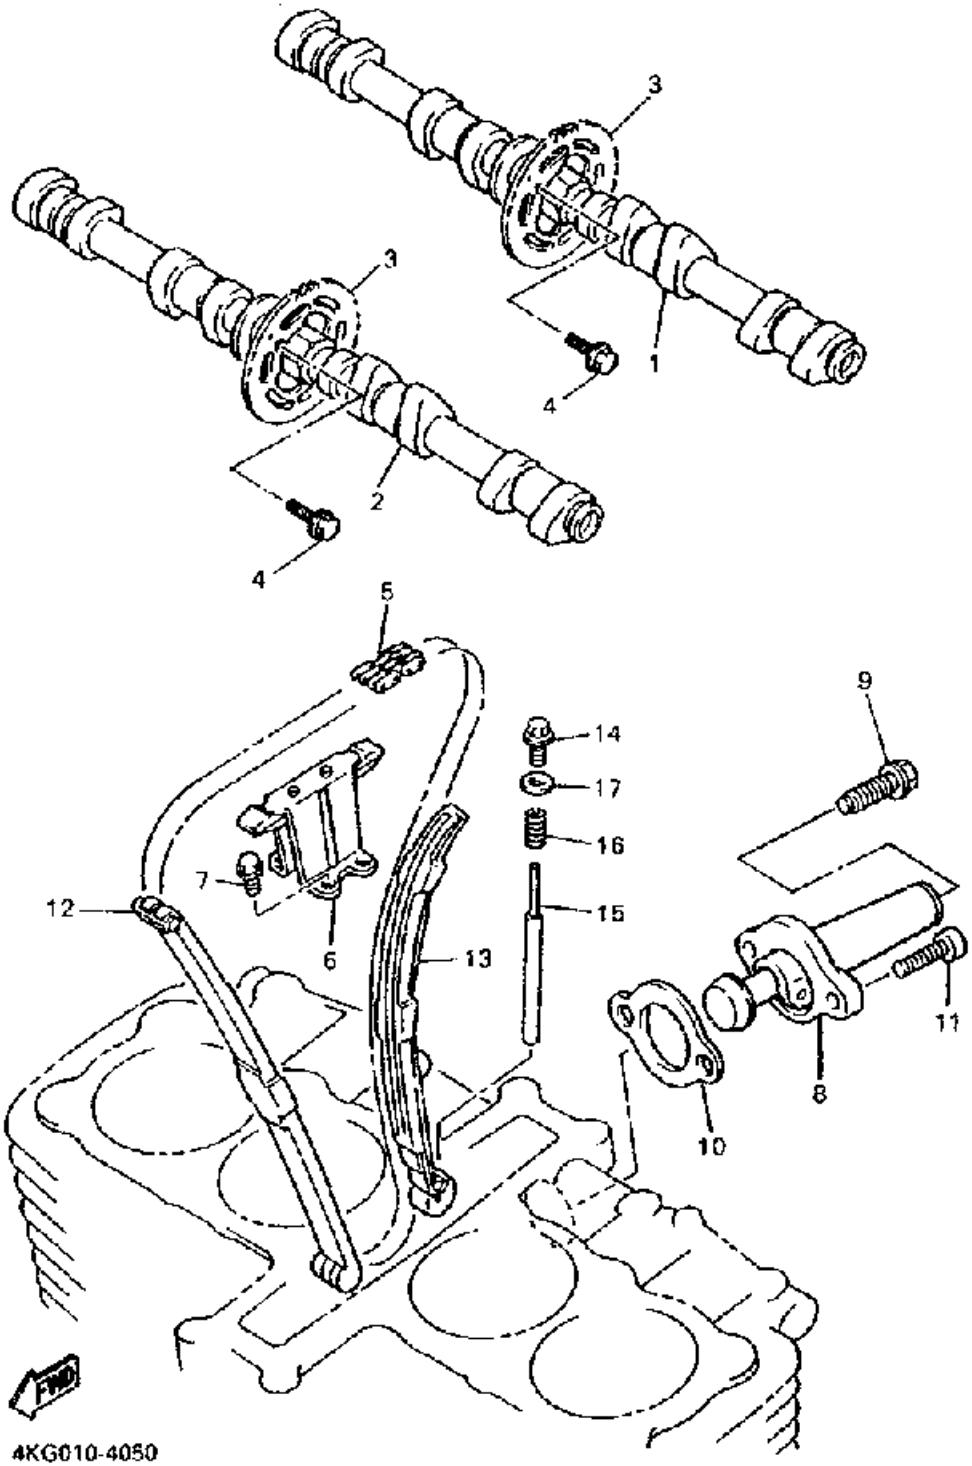


Ref No	Part No	Description
01	47M-12171-00-00	Camshaft 1
02	47M-12181-00-00	Camshaft 2
03	36Y-12176-00-00	Sprocket, Cam Chain
04	90105-07087-00	Bolt, Washer Based
05	94591-05156-00	Chain
06	36Y-12241-01-00	Guide, Stopper 2
07	90105-06424-00	Bolt, Washer Based
08	4KG-12210-00-00	Tensioner Assy, Cam Chain
09	4KG-12222-00-00	Plug
10	4BE-12213-00-00	Gasket, Tensioner Case
11	91317-06025-00	Bolt
12	36Y-12251-00-00	Damper, Chain 1
13	36Y-12252-03-00	Damper, Chain 2
14	90340-10108-00	Plug, Straight Screw
15	90249-04184-00	Pin
16	90501-153A2-00	Spring, Compression
17	90201-10118-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

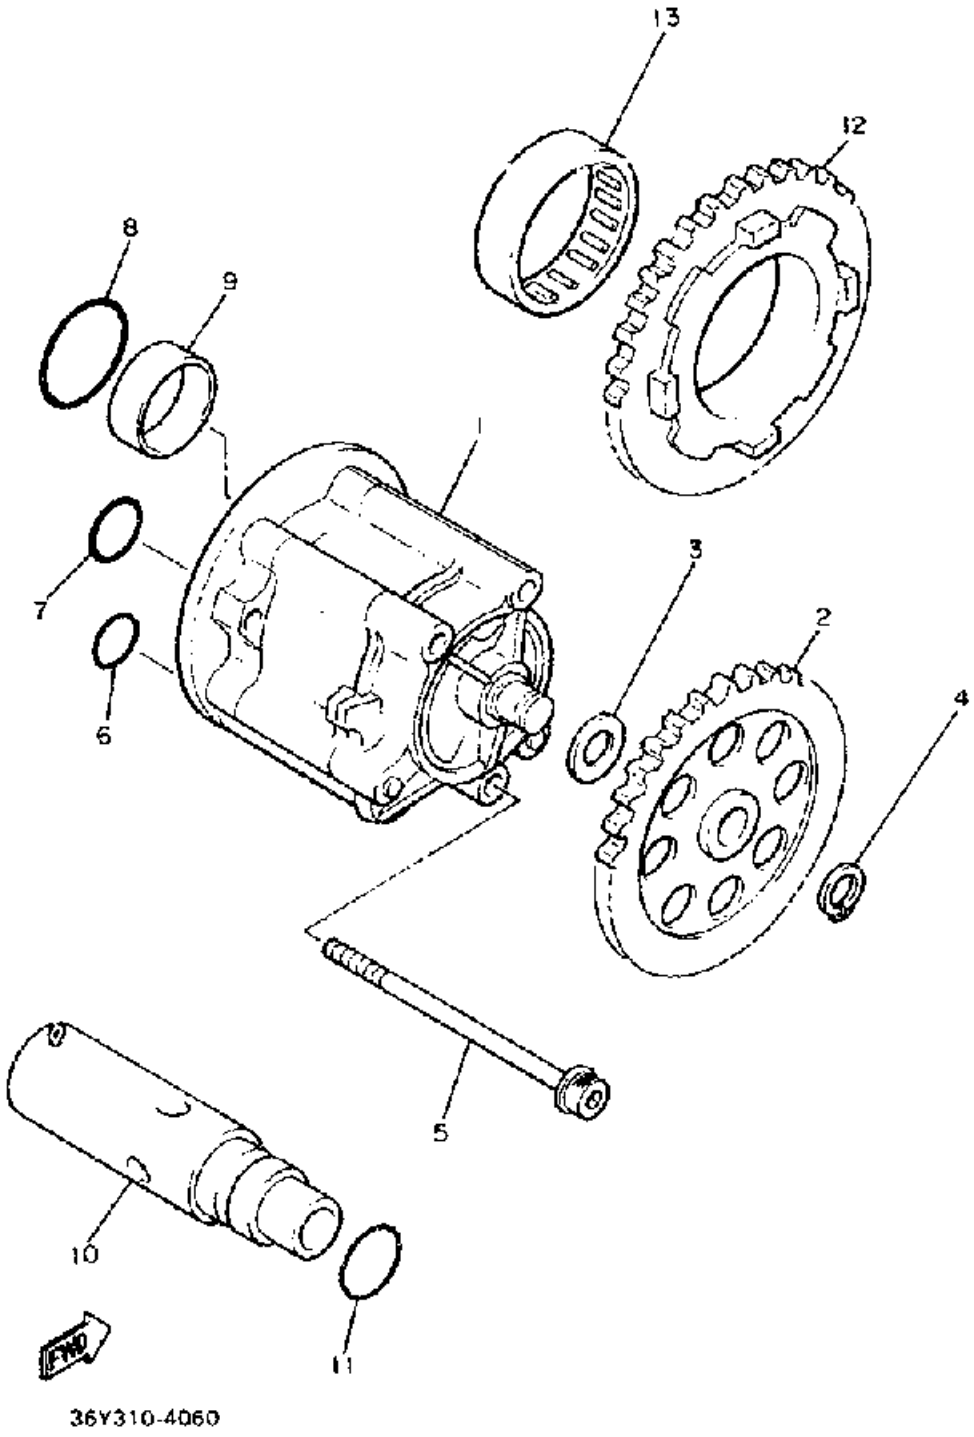


Ref No	Part No	Description
01	30V-13300-00-00	Oil Pump Assy
02	36Y-13325-00-00	Gear, Pump Driven (32z)
03	90201-106H7-00	Washer, Plate
04	93440-09139-00	Circlip
05	95817-06080-00	Bolt, Flange
06	93210-13657-00	O-ring
07	93210-15566-00	O-ring
08	93210-26658-00	O-ring
09	93626-08210-00	Pin, Dowel
10	36Y-13490-00-00	Relief Valve Assy
11	93210-15566-00	O-ring
12	36Y-13324-00-00	Gear, Pump Drive (36z)
13	93315-23607-00	Bearing

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

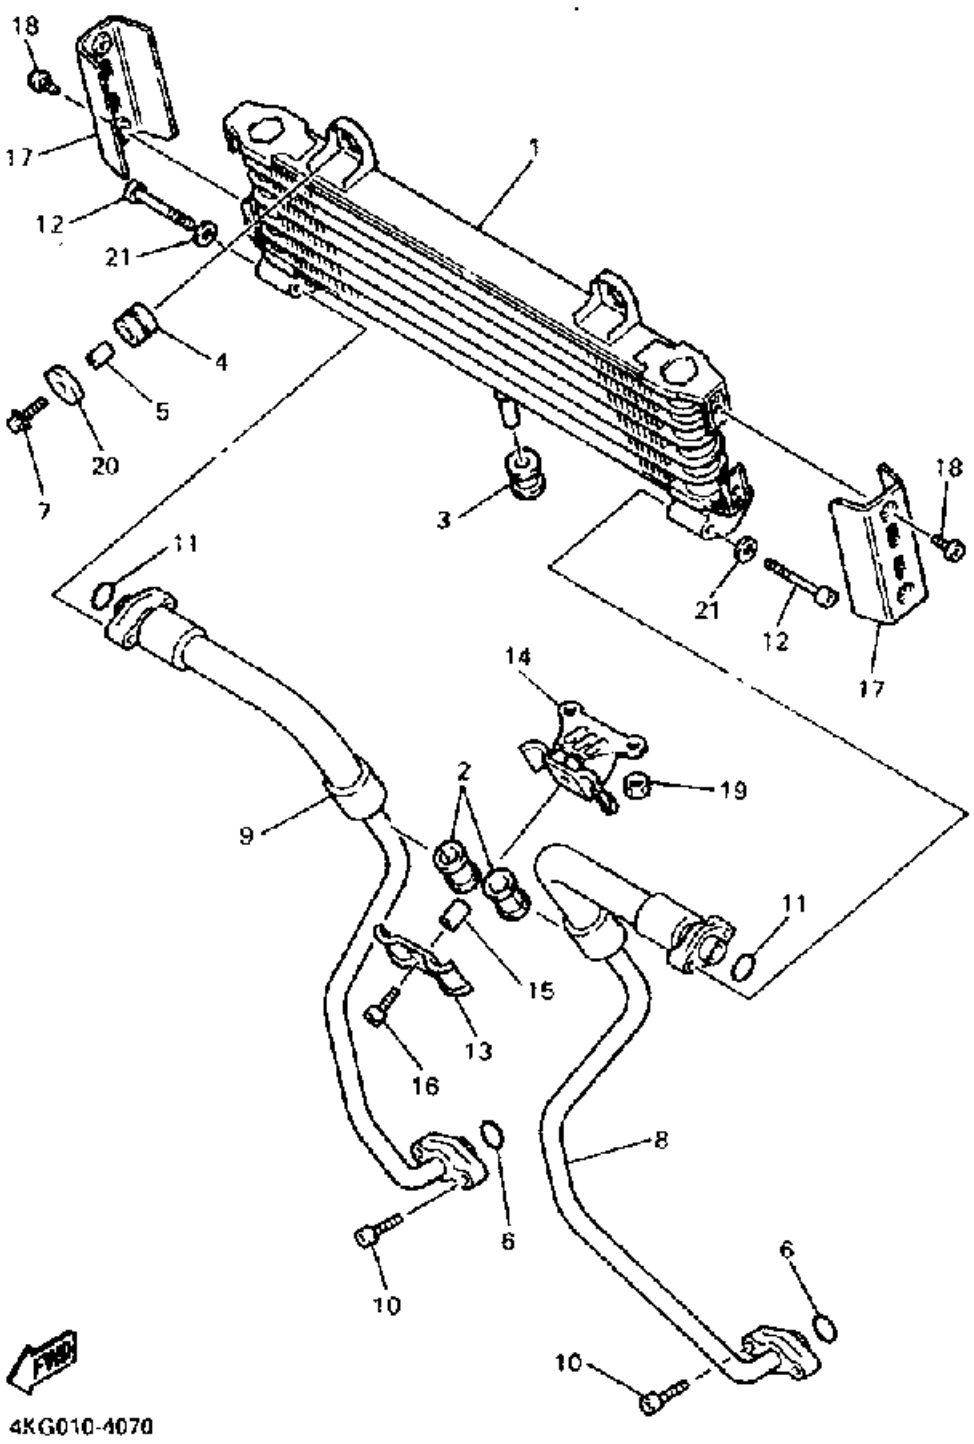

Ref No	Part No	Description
01	4KG-13470-00-00	Oil Cooler Assy
02	4KG-13159-00-00	Damper
03	90480-16284-00	Grommet
04	90480-12475-00	Grommet
05	90387-060A7-00	Collar
06	93210-13657-00	O-ring
07	95817-06020-00	Bolt, Flange
08	4KG-13464-00-00	Hose, Oil 1
09	4KG-13465-00-00	Hose, Oil 2
10	91317-06020-00	Bolt
11	93210-16629-00	O-ring
12	91317-06040-00	Bolt
13	4KG-13151-00-00	Stay
14	4KG-13152-00-00	Stay 2
15	90387-060A7-00	Collar
16	91317-06020-00	Bolt
17	4HM-13463-00-00	Cover, Oil Cooler
18	92014-06012-00	Bolt, Button Head
19	95317-06600-00	Nut
20	90209-06174-00	Washer
21	92907-06200-00	Washer


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

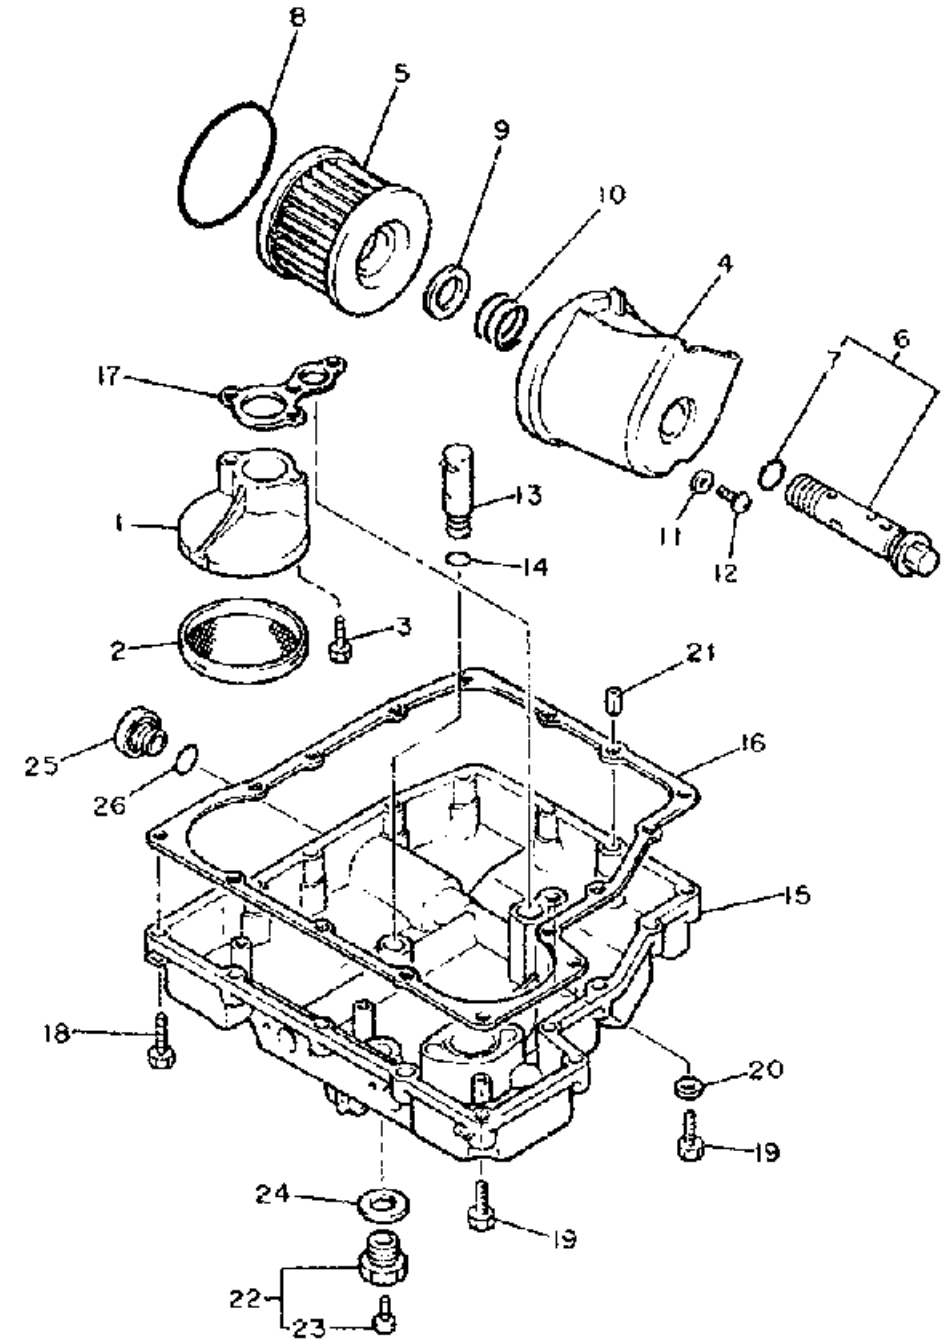

36Y310-4080


Ref No	Part No	Description
01	36Y-13412-00-00	Housing, Strainer
02	4H7-13411-02-00	Strainer, Oil
03	91317-06020-00	Bolt
04	4KG-13447-00-00	Cover, Oil Element
05	36Y-13441-00-00	Element, Oil Cleaner
06	36Y-13340-00-00	By-pass Valve Assy
07	93210-16629-00	• . O-ring
08	93210-87723-00	O-ring
09	90201-21608-00	Washer, Plate
10	90501-20422-00	Spring, Compression
11	90430-05126-00	Gasket
12	90149-05110-00	Screw
13	25G-13490-00-00	Relief Valve Assy
14	93210-10096-00	O-ring
15	36Y-13417-02-00	Cover, Strainer
16	4CR-13414-00-00	Gasket, Strainer Cover
17	4CR-13415-00-00	Seal, Oil Strainer
18	91317-06025-00	Bolt
19	91317-06035-00	Bolt
20	90430-06014-00	Gasket
21	99510-08016-00	Pin, Dowel
22	3VD-13455-00-00	Plug
23	98907-06008-00	• . Screw, Bind
24	214-11198-01-00	Gasket
25	36Y-15189-00-00	Plug
26	93210-16629-00	O-ring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

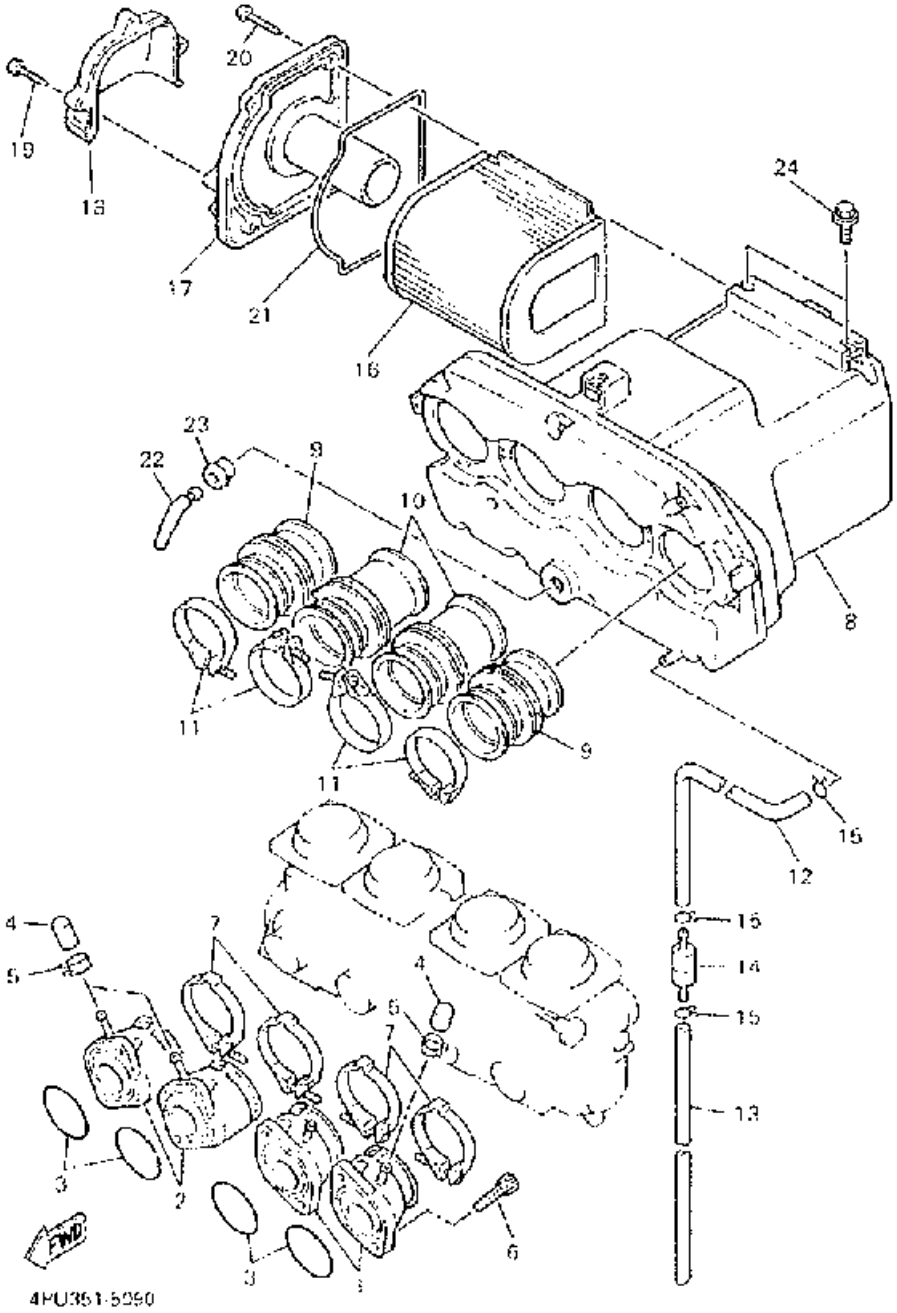


Ref No	Part No	Description
01	4KG-13586-00-00	Joint, Carburetor 1
02	4KG-13596-00-00	Joint, Carburetor 2
03	93210-40659-00	O-ring
04	16G-13569-00-00	Plug, Blind
05	90467-10039-00	Clip
06	91317-06020-00	Bolt
07	1AE-13575-01-00	Band
08	4KG-14401-00-00	Air Cleaner Case Assy
09	31A-14453-00-00	Joint, Air Cleaner 1
10	36Y-14463-00-00	Joint, Air Cleaner 2
11	90460-58015-00	Clamp, Hose
12	1HX-1443E-00-00	Pipe, Drain
13	90445-11153-00	Hose
14	4X7-2149Y-00-00	Filter Assy
15	90467-11106-00	Clip
16	4KG-14451-00-00	Element, Air Cleaner
17	4KG-14412-00-00	Cap, Cleaner Case 1
18	4KG-14437-00-00	Duct
19	97707-50525-00	Screw, Tapping
20	97707-50525-00	Screw, Tapping
21	34X-14457-00-00	Seal
22	31A-14419-00-00	Pipe
23	31A-14435-00-00	Grommet
24	95807-06016-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

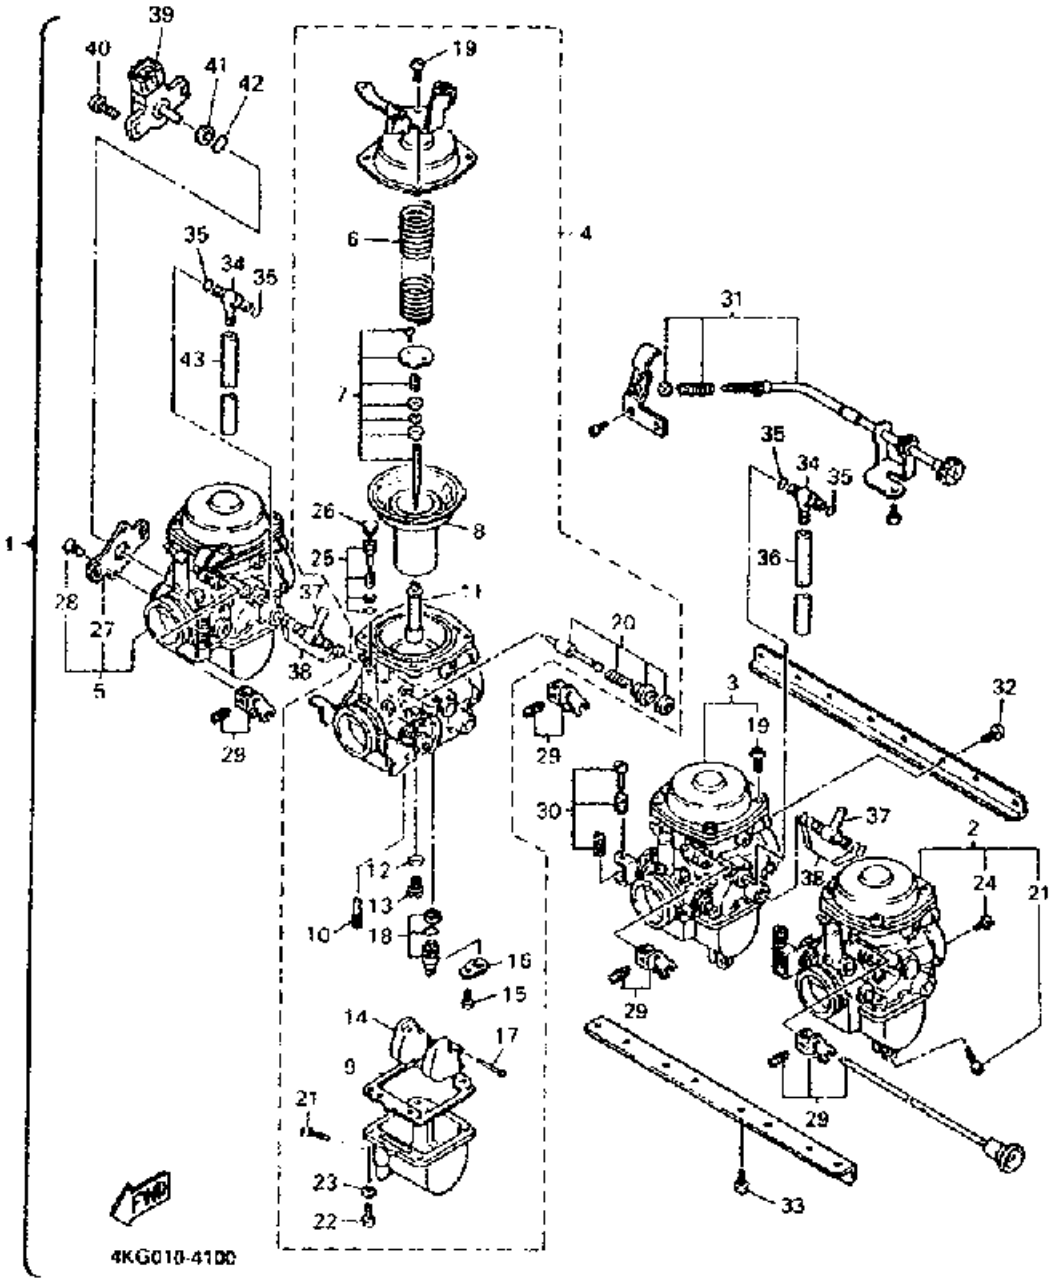


Ref No	Part No	Description
01	4KG-14900-20-00	Carburetor Assy
02	4KG-14901-20-00	• . Carburetor Assy 1
03	4KG-14902-20-00	• . Carburetor Assy 2
04	4KG-14903-20-00	• . Carburetor Assy 3
05	4KG-14904-20-00	• . Carburetor Assy 4
06	3Y6-14933-00-00	•• .. Spring, Diaphragm
07	4KG-1490J-00-00	•• .. Needle Set
08	4KG-14940-00-00	•• .. Diaphragm Assy
09	3XW-14984-00-00	•• .. Gasket, Float Chamber
10	4HR-14142-40-00	•• .. Jet, Pilot (40)
11	4KG-14141-92-00	•• .. Nozzle, Main
12	137-14153-00-00	•• .. Washer, Main Jet
13	620-14231-19-00	•• .. Jet, Main (95)
14	3H5-14985-00-00	•• .. Float
15	98501-04006-00	•• .. Screw, Pan Head
16	2H0-14146-00-00	•• .. Plate
17	537-14186-00-00	•• .. Pin, Float
18	3CF-14107-23-00	•• .. Needle Valve Set
19	98507-05010-00	•• .. Screw, Pan Head
20	4KG-1410A-00-00	•• .. Starter Set
21	12R-14191-00-00	•• .. Plug, Drain
22	98507-05016-00	•• .. Screw, Pan Head
23	92901-05100-00	•• .. Washer, Spring
24	3G2-14231-27-00	•• .. Jet, Main (135)
25	4CC-14105-00-00	•• .. Pilot Screw Set
26	22F-14991-00-00	•• .. Screw
27	4KG-14995-00-00	•• .. Bracket
28	98707-04008-00	•• .. Screw, Flat Head
29	58L-1490L-00-00	• . Starter Lever Set, 1
30	3KW-1490K-00-00	• . Stop Screw Set
31	4KG-14103-00-00	• . Throttle Screw Set
32	98507-05010-00	• . Screw, Pan Head
33	98503-06014-00	• . Screw, Pan Head
34	17A-14251-00-00	• . Nipple
35	822-14147-00-00	• . O-ring
36	50H-14987-00-00	• . Hose
37	36Y-14988-00-00	• . Pipe, Starter Connecting
38	36Y-14147-00-00	• . O-ring
39	4KG-85885-00-00	• . Throttle Sensor Assy
40	4HM-14216-00-00	• . Screw
41	4KG-14285-00-00	• . Washer
42	4KG-14147-00-00	• . O-ring
43	4G0-14197-00-00	• . Pipe

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

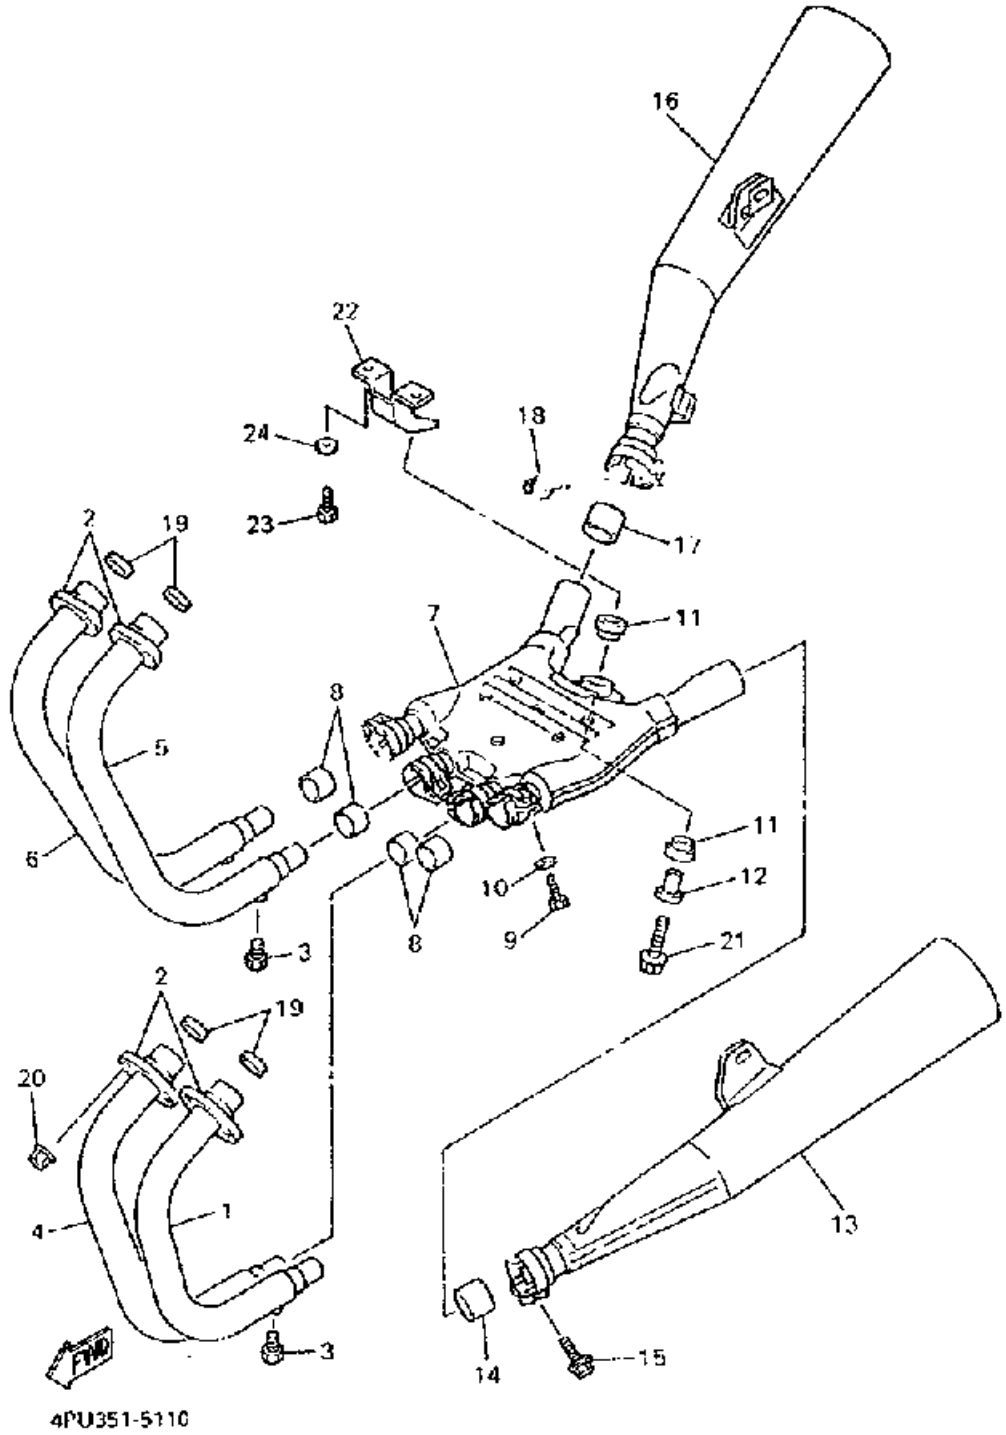


Ref No	Part No	Description
01	4KG-14611-00-00	Pipe, Exhaust 1
02	4KG-14612-00-00	Nut, Ring
03	90101-06576-00	Bolt
04	4KG-14621-00-00	Pipe, Exhaust 2
05	4KG-14631-00-00	Pipe, Exhaust 3
06	4KG-14641-00-00	Pipe, Exhaust 4
07	4PU-14615-00-00	Joint, Exhaust 1
08	3XW-14755-00-00	Gasket, Silencer
09	97027-08025-00	Bolt
10	92907-08600-00	Washer, Plate
11	36Y-14747-00-00	Damper, Muffler
12	4G0-14638-00-00	Collar
13	4PU-14711-00-00	Muffler 1
14	3XW-14714-00-00	Gasket, Muffler
15	95817-08025-00	Bolt, Flange
16	4PU-14271-00-00	Insulator
17	3XW-14714-00-00	Gasket, Muffler
18	95817-08025-00	Bolt, Flange
19	4BE-14613-00-00	Gasket, Exhaust Pipe
20	95617-08200-00	Nut, Self-locking
21	95807-10040-00	Bolt, Flange
22	4KG-14791-00-00	Stay, Muffler
23	97017-08025-00	Bolt
24	92907-08600-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

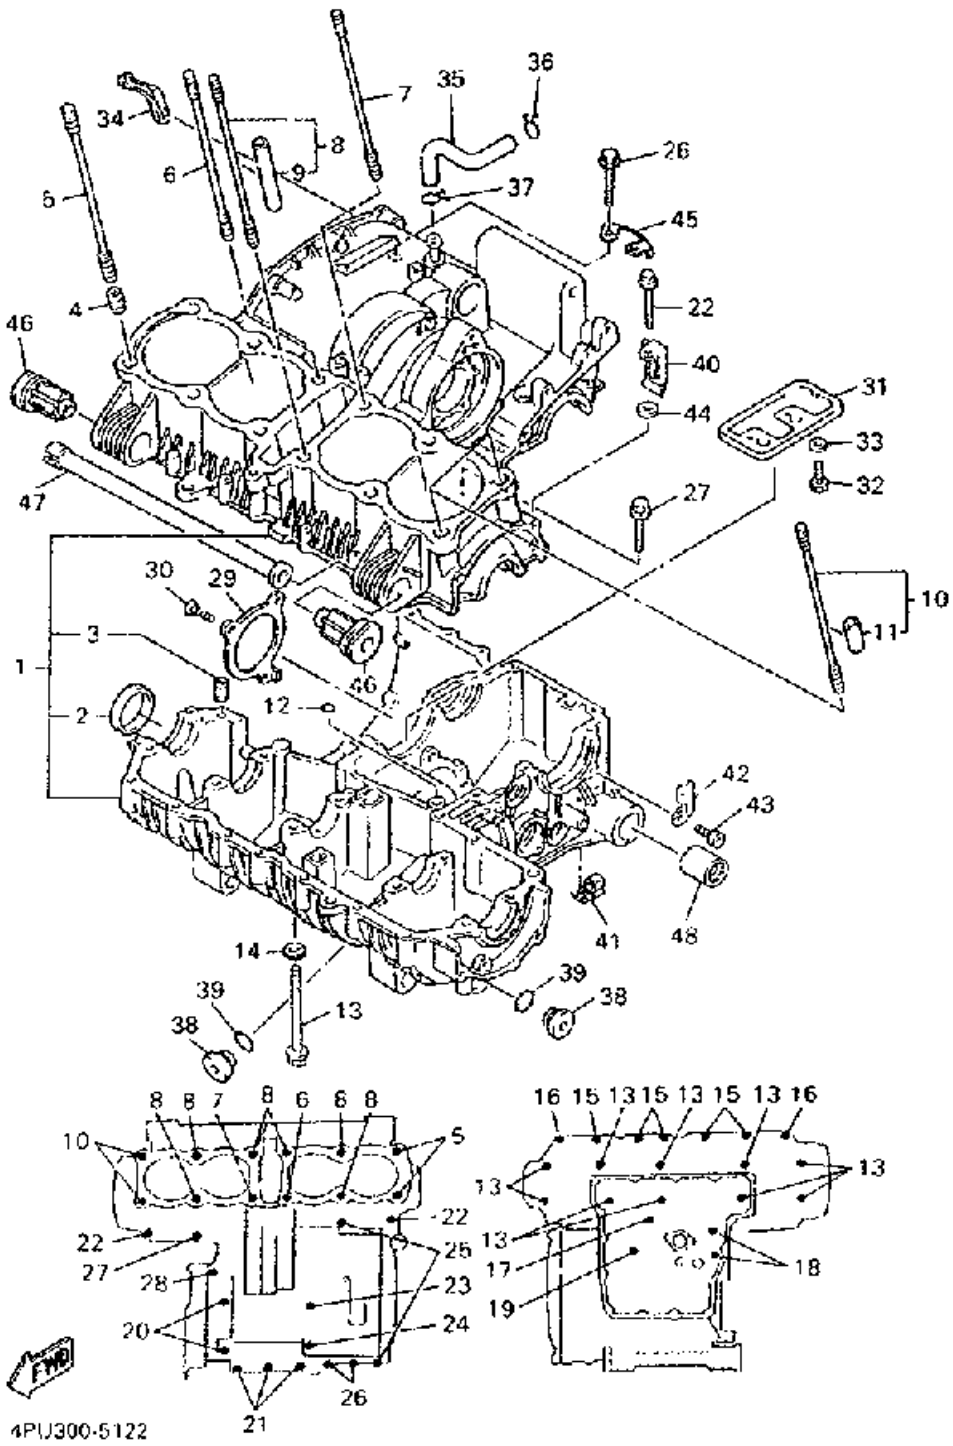


Ref No	Part No	Description
01	3XW-15100-02-00	Crankcase Assy
02	4H7-15167-10-00	• . Plug, Blind 1
03	99510-12016-00	• . Pin, Dowel
04	99530-14016-00	Pin, Dowel
05	90116-10563-00	Bolt, Stud
06	90116-10561-00	Bolt, Stud
07	90116-10562-00	Bolt, Stud
08	3XW-11363-01-00	Bolt, Cylinder Holding 3
09	3XW-1111J-00-00	• . Pipe 1
10	3XW-11364-01-00	Bolt, Cylinder Holding 4
11	3XW-1112J-00-00	• . Pipe 2
12	93210-07438-00	O-ring
13	95817-08100-00	Bolt, Flange
14	90201-094G1-00	Washer, Plate
15	95817-08045-00	Bolt, Flange
16	95817-10050-00	Bolt, Flange
17	95817-06110-00	Bolt, Flange
18	95817-06095-00	Bolt, Flange
19	95817-06040-00	Bolt, Flange
20	95817-08055-00	Bolt, Flange
21	95817-10060-00	Bolt, Flange
22	95817-06050-00	Bolt, Flange
23	95817-06125-00	Bolt, Flange
24	95817-06070-00	Bolt, Flange
25	95817-06065-00	Bolt, Flange
26	95817-06055-00	Bolt, Flange
27	95817-06040-00	Bolt, Flange
28	95817-06030-00	Bolt, Flange
29	36Y-15383-01-00	Plate, Bearing Cover
30	90151-06025-00	Screw, Countersunk
31	36Y-15412-00-00	Cover, Oil Pump
32	97007-05010-00	Bolt
33	92907-05600-00	Washer, Plate
34	1TX-15365-00-00	Grommet
35	4KG-11166-00-00	Pipe, Breather 1
36	90467-14015-00	Clip
37	90467-14015-00	Clip
38	4K0-15189-00-00	Plug
39	93210-20573-00	O-ring
40	90465-10251-00	Clamp
41	90465-08252-00	Clamp
42	90465-08253-00	Clamp
43	91317-06010-00	Bolt
44	92907-06600-00	Washer, Plate
45	90462-10145-00	Clamp
46	36Y-15336-00-00	Damper, Engine Mount 3
47	36Y-15317-00-00	Spacer, Engine Mount
48	93317-42060-00	Bearing

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

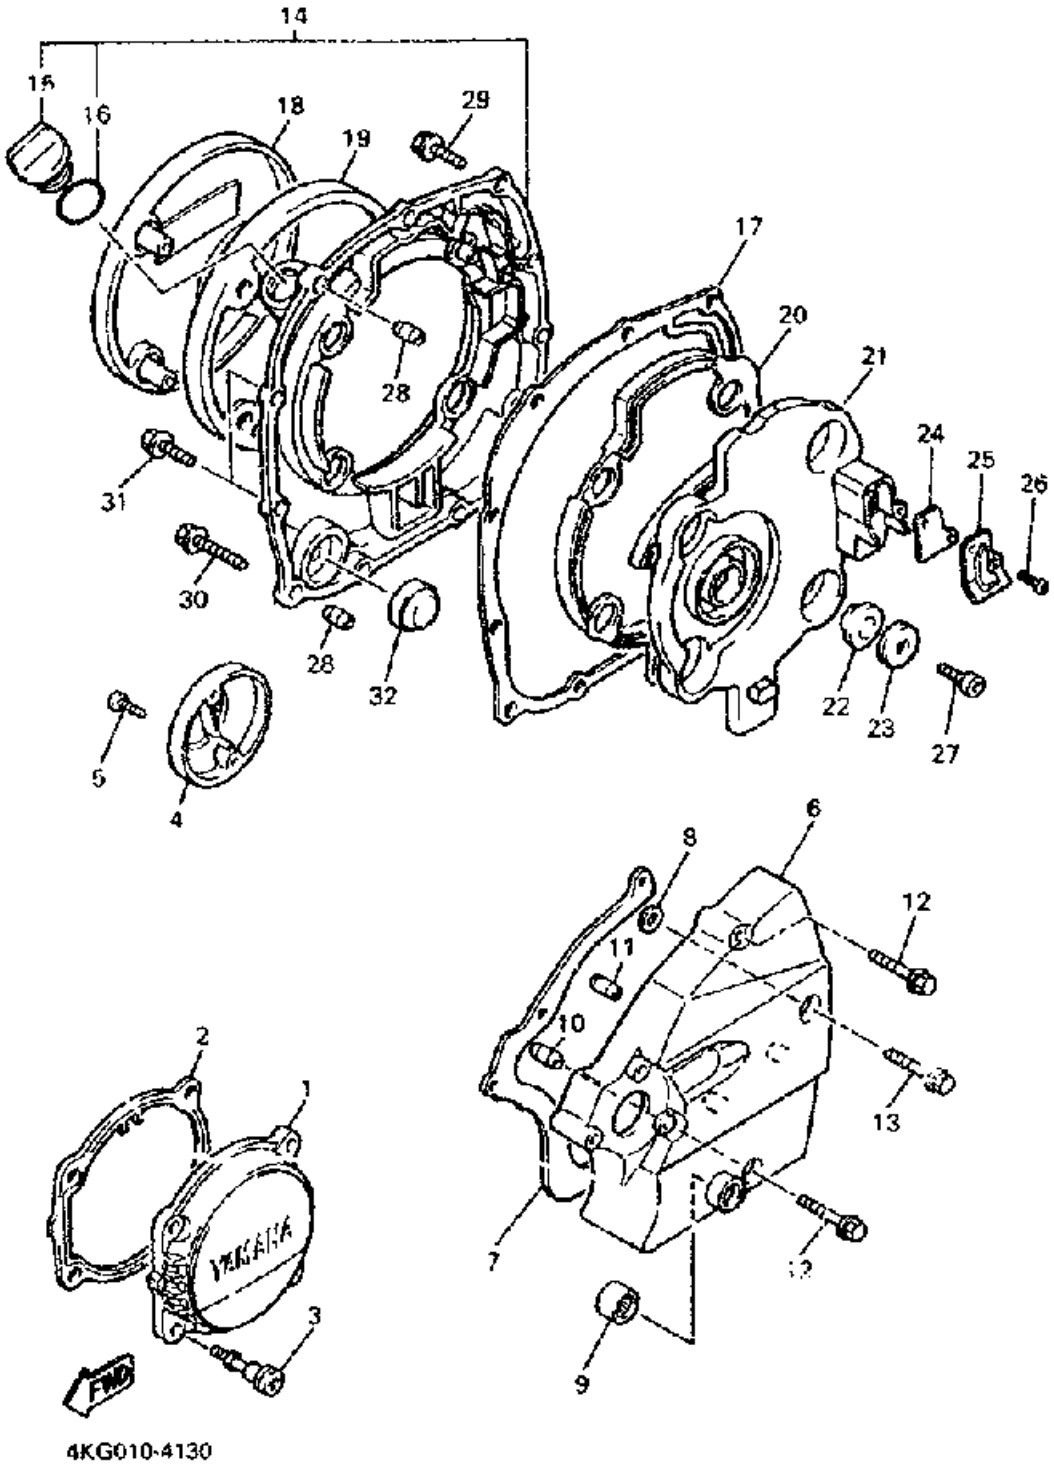


Ref No	Part No	Description
01	36Y-15416-00-00	Cover, Oil Pump
02	4KG-15449-00-00	Ring, Rubber
03	4KG-15481-00-00	Bolt 1
04	36Y-15426-00-00	Cover, Oil Pump 2
05	90154-05026-00	Screw, Binding
06	4KG-15411-00-00	Cover, Crankcase 1
07	4CR-15451-00-00	Gasket, Crankcase Cover 1
08	4CR-15467-00-00	Gasket
09	93317-21236-00	Bearing
10	99530-10014-00	Pin, Dowel
11	99510-08016-00	Pin, Dowel
12	95027-06040-00	Bolt, Flange
13	95027-06050-00	Bolt, Flange
14	3XW-W1543-00-00	Crankcase Cover Assy 2
15	3F9-15362-00-00	• . Plug, Oil Level
16	93210-27778-00	• . O-ring
17	4CR-15461-00-00	Gasket, Crankcase Cover 2
18	36Y-15417-01-00	Cover, Cap
19	36Y-15449-00-00	Ring, Rubber
20	1TX-15367-00-00	Grommet
21	1TX-15346-00-00	Breather 1
22	4H7-15486-00-00	Grommet
23	90209-06096-00	Washer
24	4CR-15374-00-00	Gasket, Breather
25	1TX-15333-00-00	Cover
26	90157-05095-00	Screw, Pan Head
27	91317-06012-00	Bolt
28	99530-10014-00	Pin, Dowel
29	95027-06020-00	Bolt, Flange
30	95027-06035-00	Bolt, Flange
31	95027-06025-00	Bolt, Flange
32	2H7-15361-00-00	Gauge, Level

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

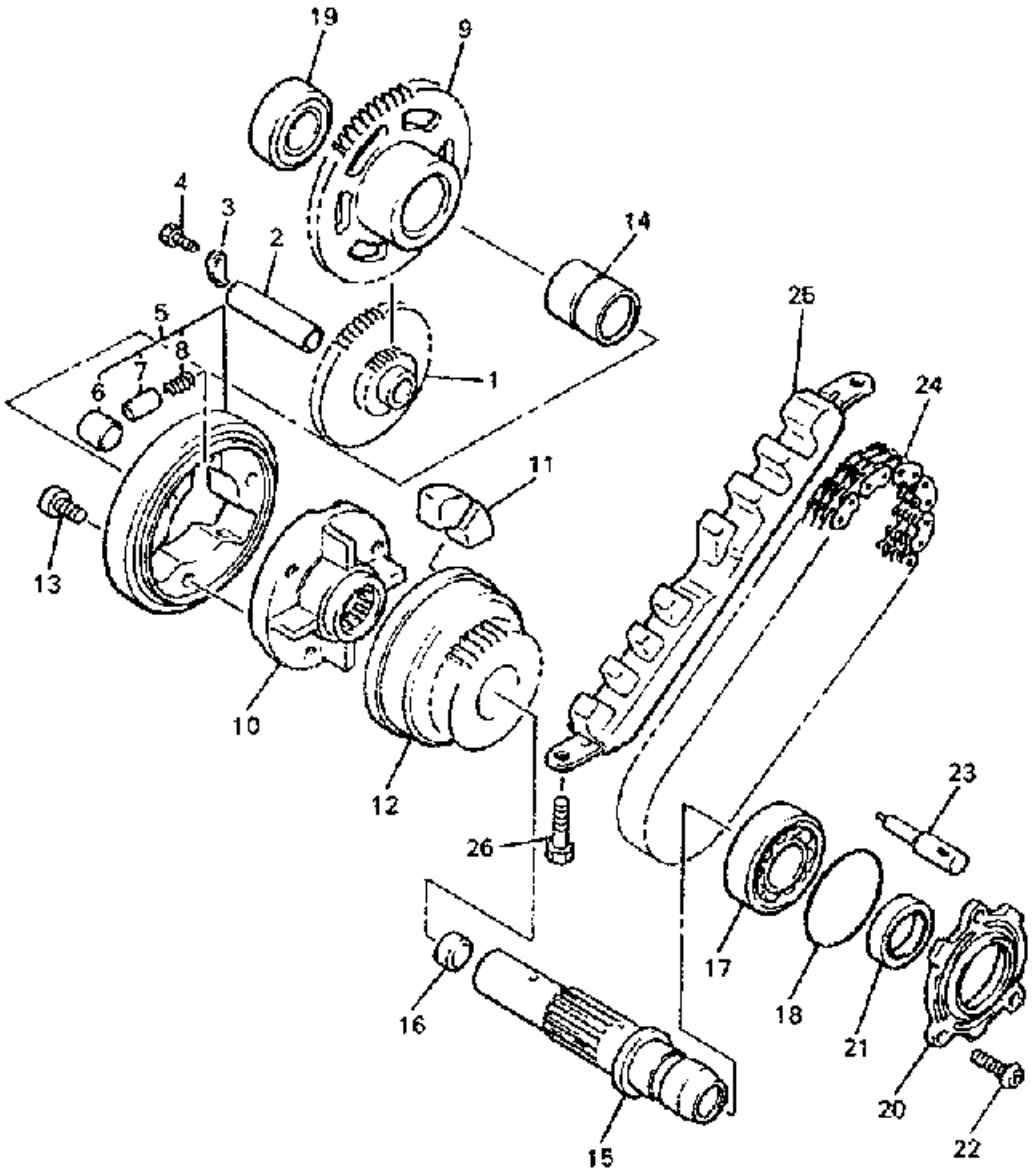


Ref No	Part No	Description
01	36Y-15512-01-00	Gear, Idler 1 (12/56z)
02	36Y-15521-01-00	Shaft 1
03	2H7-15531-00-00	Plate, Stopper
04	97027-06012-00	Bolt
05	36Y-15580-02-00	Starter Clutch Outer Assy
06	93615-17125-00	• . Pin, Dowel
07	1J7-15583-01-00	• . Cap, Starter Clutch Spring
08	90501-05764-00	• . Spring, Compression
09	36Y-15517-01-00	Gear, Idler 2 (45z)
10	12R-15524-00-00	Wheel, Starter
11	4H7-16155-01-00	Absorber 1
12	36Y-15519-00-00	Sprocket, Starter 2
13	91317-08016-00	Bolt
14	90387-201L2-00	Collar
15	3CV-15522-00-00	Shaft 2
16	90331-15039-00	Plug
17	93306-20545-00	Bearing
18	93210-47440-00	O-ring
19	93306-00426-00	Bearing
20	36Y-15163-00-00	Housing, Bearing 1
21	93102-25253-00	Oil Seal
22	90149-06228-00	Screw
23	36Y-13454-00-00	Nozzle
24	4FM-11456-00-00	Chain, Primary
25	36Y-11474-00-00	Guide, Upper
26	97017-06016-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

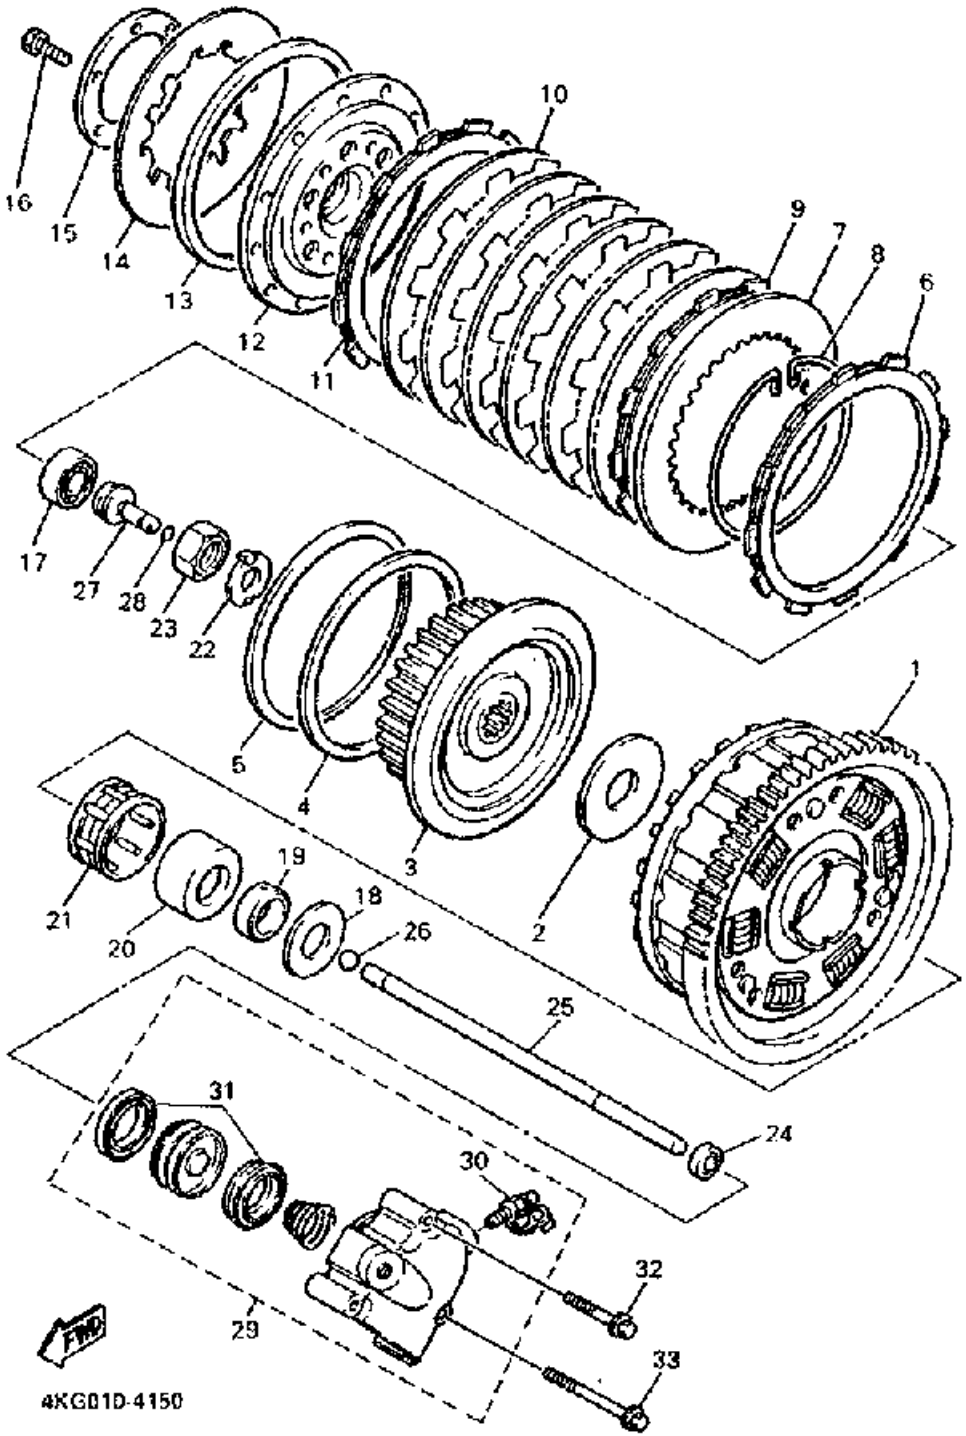


Ref No	Part No	Description
01	1TX-16150-01-00	Primary Driven Gear Comp.
02	36Y-16154-00-00	Plate, Thrust 1
03	36Y-16371-00-00	Boss, Clutch
04	36Y-16384-00-00	Plate, Seat
05	36Y-16383-00-00	Spring, Clutch Boss
06	36Y-16331-00-00	Plate, Friction 2
07	2H7-16325-00-00	Plate, Clutch 2
08	2H7-16385-00-00	Ring, Clutch Boss
09	341-16321-13-00	Plate, Friction
10	2H7-16325-00-00	Plate, Clutch 2
11	36Y-16331-00-00	Plate, Friction 2
12	36Y-16351-00-00	Plate, Pressure 1
13	36Y-16335-00-00	Housing, Spring
14	36Y-16334-00-00	Spring, Clutch 2
15	1TX-16352-00-00	Plate, Pressure 2
16	97017-06016-00	Bolt
17	93306-00315-00	Bearing (6003sh2c4)
18	90201-286H8-00	Washer, Plate
19	90387-284K1-00	Collar
20	36Y-16181-00-00	Spacer 1
21	93310-350M3-00	Bearing
22	90215-25218-00	Washer, Lock
23	90170-20323-00	Nut
24	93109-08061-00	Oil Seal
25	4KG-16357-00-00	Rod, Push 2
26	93511-32027-00	Ball
27	4KG-16356-00-00	Rod, Push 1
28	93210-06632-00	O-ring
29	36Y-16381-10-00	Push Lever Comp.
30	36Y-W0048-00-00	• . Bleed Screw Kit
31	26H-W0098-00-00	• . Push Lever Seal Kit
32	95027-06040-00	Bolt, Flange
33	90105-06723-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

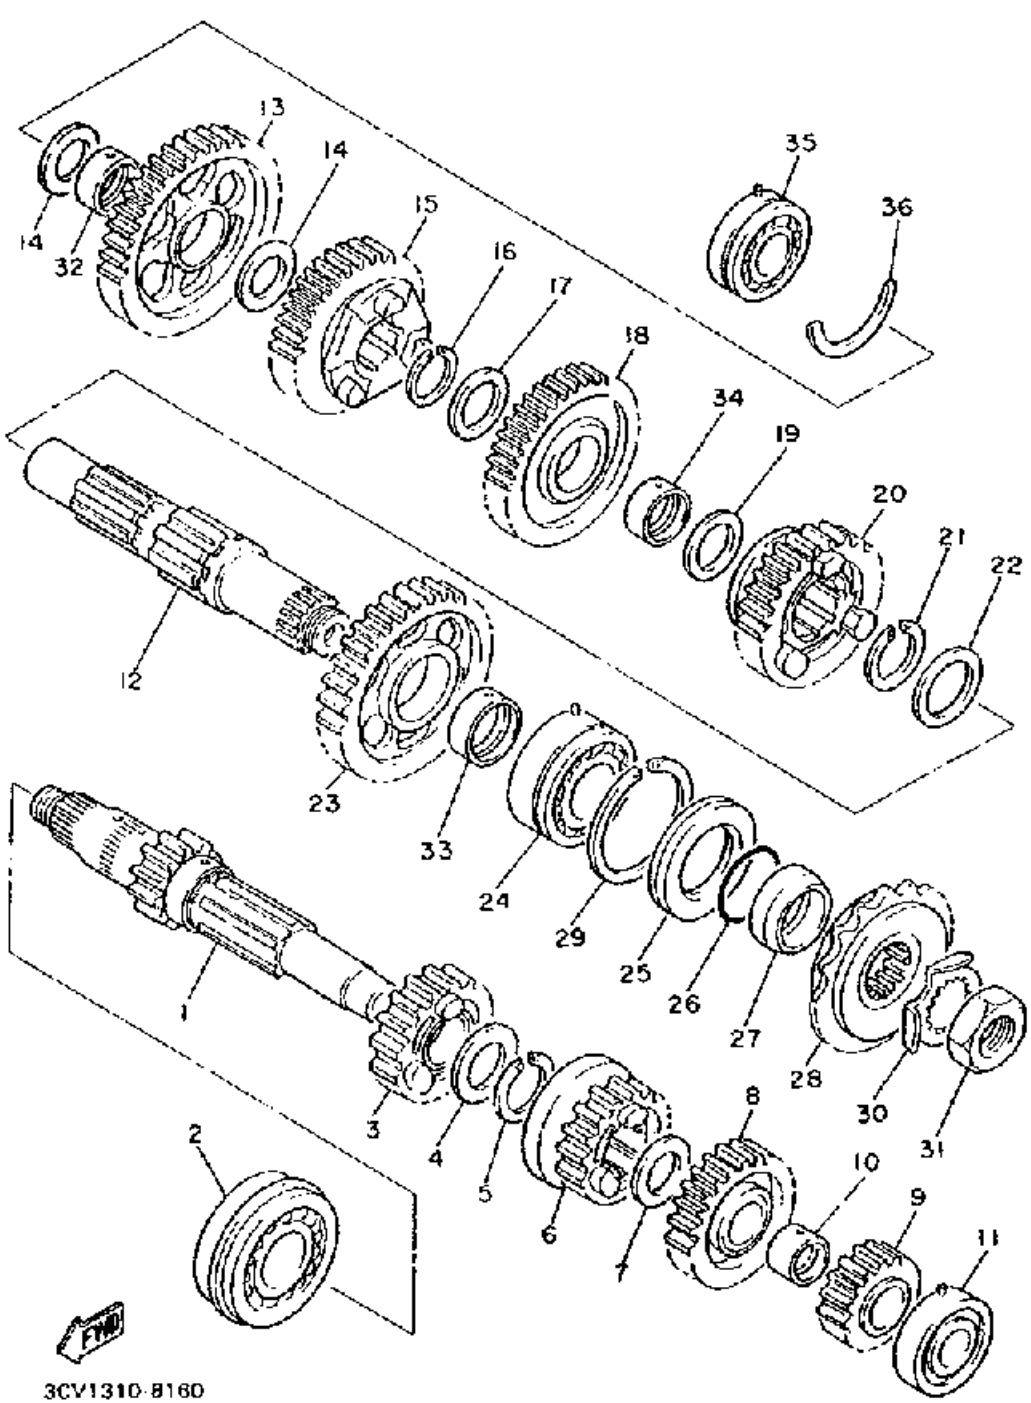


Ref No	Part No	Description
01	4KG-W1741-00-00	Main Axle Assy
02	93306-36401-00	Bearing
03	4CC-17141-00-00	Gear, 4th Pinion (24z)
04	90209-25196-00	Washer
05	93440-28062-00	Circlip
06	1TX-17131-00-00	Gear, 3rd Pinion (21z)
07	90201-226H9-00	Washer, Plate
08	1TX-17151-00-00	Gear, 5th Pinion (26z)
09	3CV-17121-00-00	Gear, 2nd Pinion (18z)
10	90387-220R2-00	Collar
11	93306-30434-00	Bearing
12	4KG-17421-00-00	Axle, Drive
13	1TX-17211-00-00	Gear, 1st Wheel (40z)
14	90201-257H0-00	Washer, Plate
15	4CC-17241-00-00	Gear, 4th Wheel (31z)
16	93440-30077-00	Circlip
17	90209-27192-00	Washer
18	1TX-17231-00-00	Gear, 3rd Wheel (33z)
19	90201-307H1-00	Washer, Plate
20	1TX-17251-00-00	Gear, 5th Wheel (29z)
21	93440-34025-00	Circlip
22	90209-32231-00	Washer
23	3CV-17221-00-00	Gear, 2nd Wheel (36z)
24	93305-20605-00	Bearing
25	93102-40330-00	Oil Seal
26	93210-30660-00	O-ring
27	90387-30038-00	Collar
28	4KG-17460-00-00	Sprocket, Drive (17z)
29	93440-62032-00	Circlip
30	90215-26241-00	Washer, Lock
31	90179-22063-00	Nut
32	90387-250R3-00	Collar
33	90387-350R5-00	Collar
34	90387-300R4-00	Collar
35	93306-20561-00	Bearing
36	93440-52118-00	Circlip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

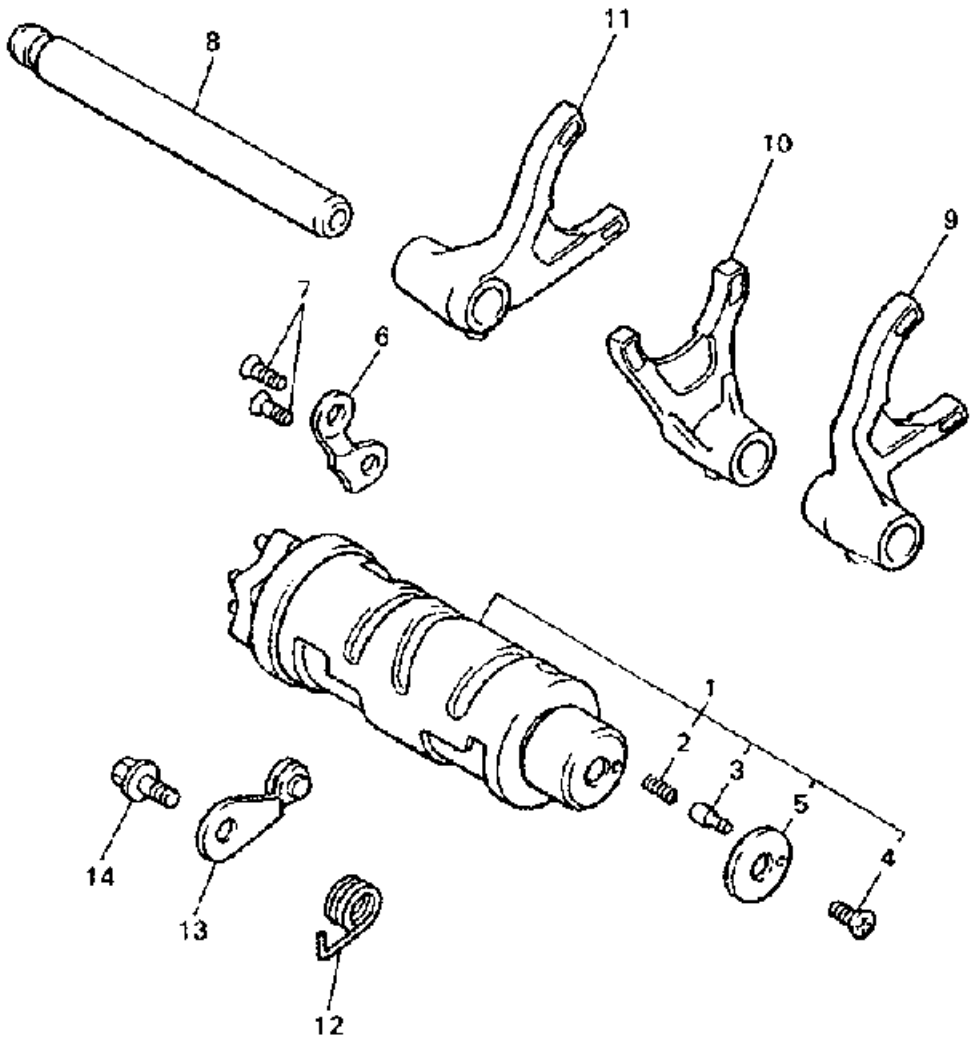

Ref No	Part No	Description
01	3XW-18540-00-00	Shift Cam Assy
02	90501-06022-00	• . Spring, Compression
03	278-18542-00-00	• . Point, Neutral
04	98707-05012-00	• . Screw, Flat Head
05	278-18566-00-00	• . Plate, Side 2
06	36Y-18562-00-00	Plate, Stopper 2
07	98701-06016-00	Screw, Flat Head
08	4BR-18531-00-00	Bar, Shift Fork Guide 1
09	3XW-18511-00-00	Fork, Shift 1
10	4KG-18512-00-00	Fork, Shift 2
11	3XW-18513-00-00	Fork, Shift 3
12	90508-23707-00	Spring, Torsion
13	36Y-18140-00-00	Stopper Lever Assy
14	90109-063F7-00	Bolt


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

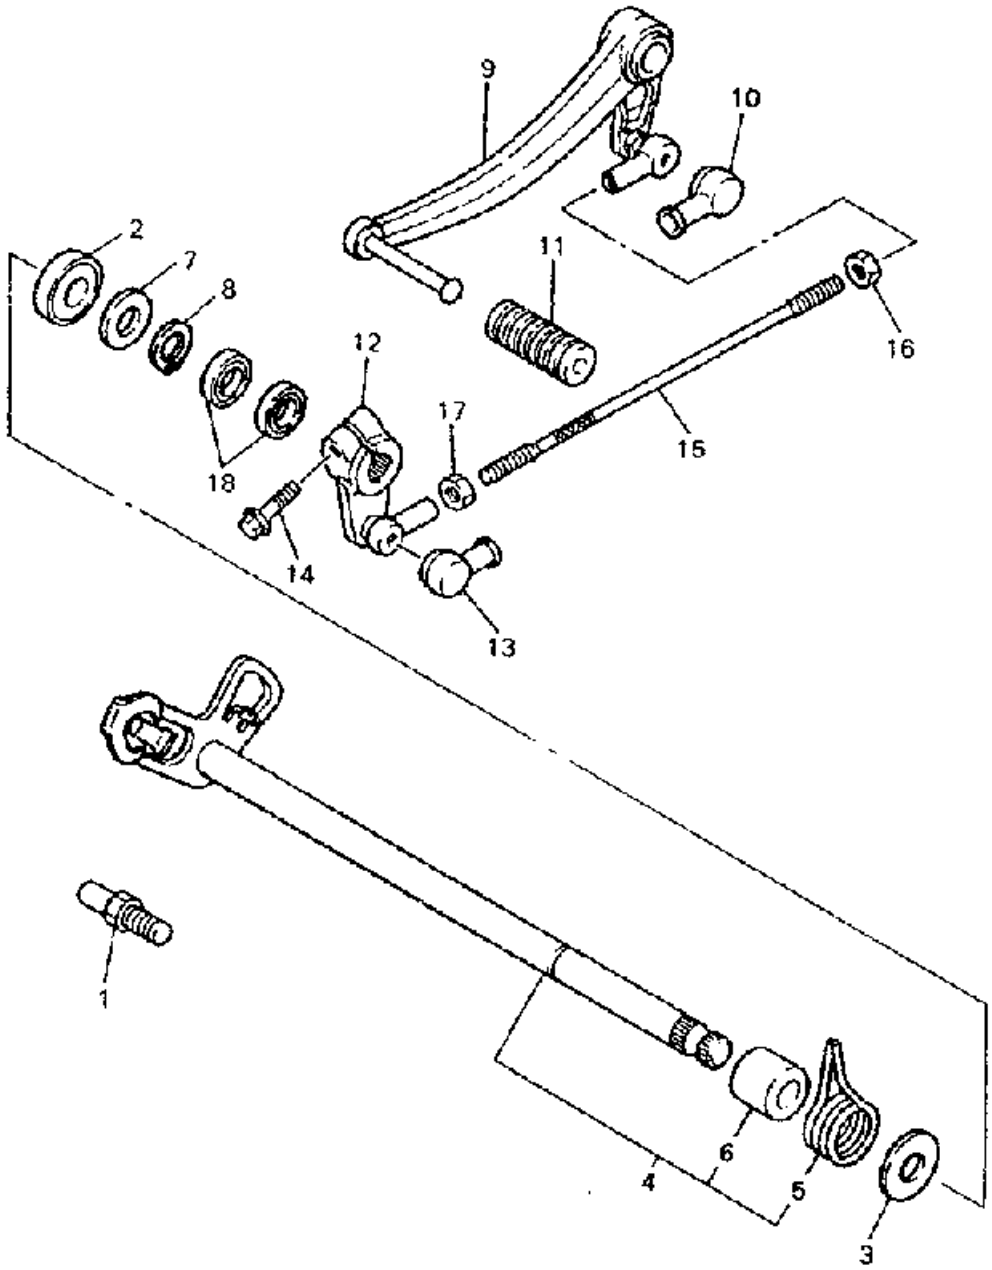

4KG010-4180


Ref No	Part No	Description
01	4G0-18127-00-00	Stopper, Screw
02	93102-12106-00	Oil Seal (sd 12-22-5 Hs)
03	90201-12588-00	Washer, Plate
04	4KG-18101-01-00	Shift Shaft Assy
05	90508-32682-00	• . Spring, Torsion
06	90387-114K8-00	• . Collar
07	90201-12575-00	Washer, Plate
08	99006-10600-00	Circlip
09	4KG-18111-00-00	Pedal, Shift
10	2H9-18154-00-00	Cover, Dust
11	132-18113-01-00	Cover, Shift Pedal
12	2GH-18112-01-00	Arm, Shift
13	2H9-18154-00-00	Cover, Dust
14	95817-06020-00	Bolt, Flange
15	2GV-18115-00-00	Rod, Shift
16	90170-06228-00	Nut (verkehtheit Schraube)
17	95304-06700-00	Nut
18	93109-12053-00	Oil Seal

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

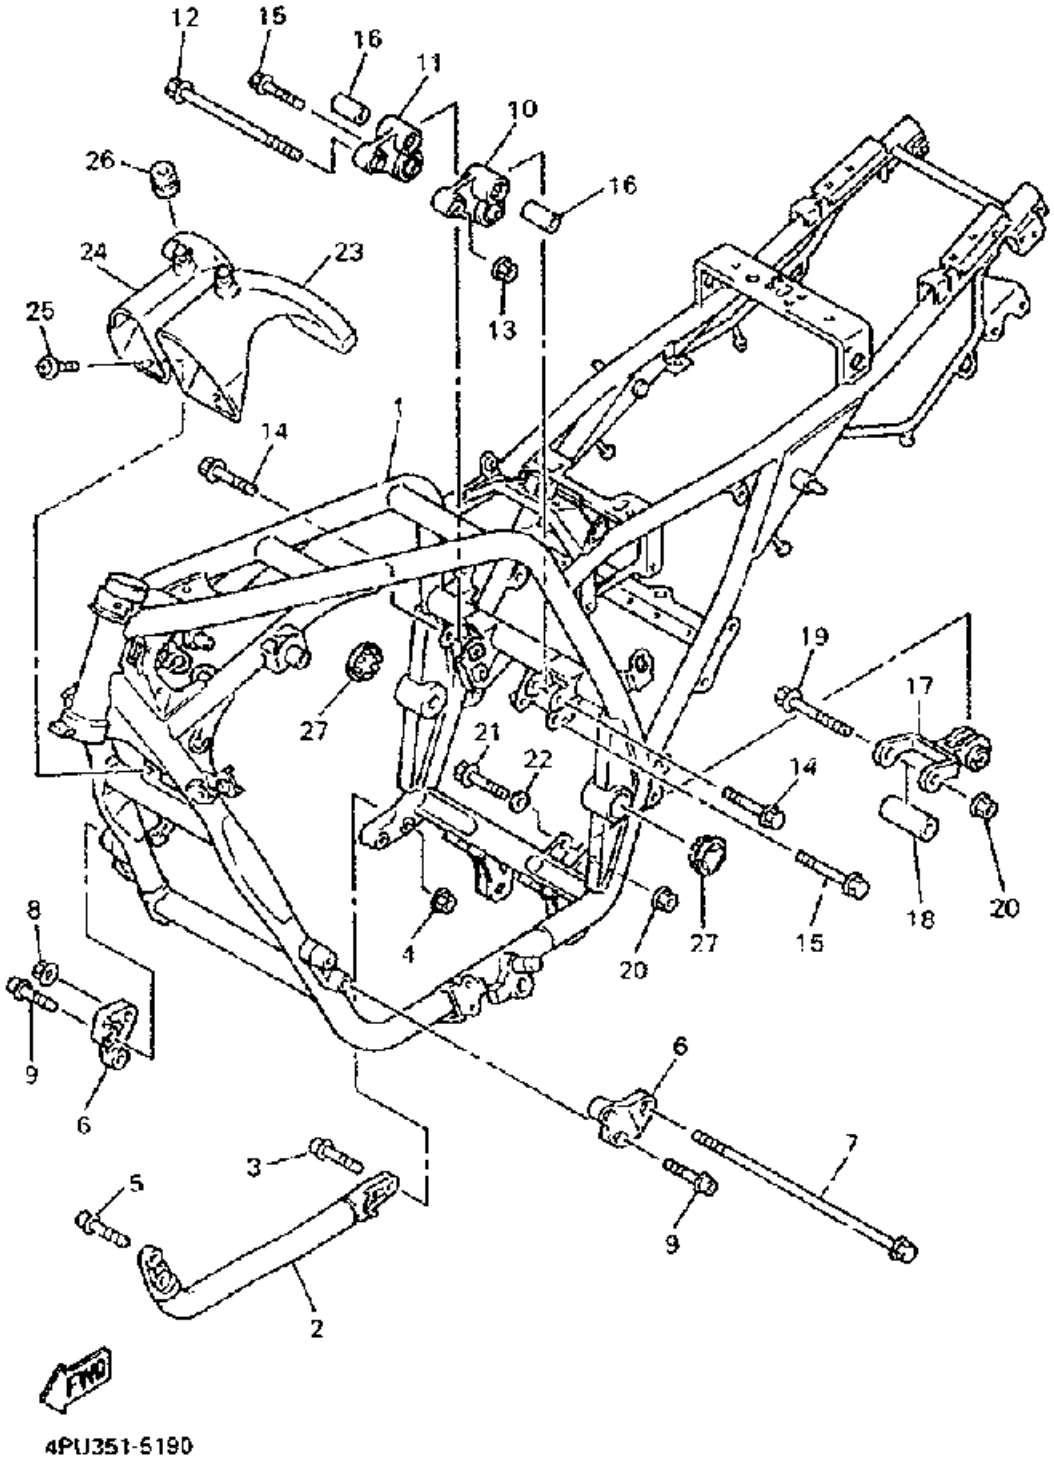


Ref No	Part No	Description
01	4PU-21110-00-33	Frame Comp.
02	4KG-21150-00-33	Down Tube Comp.2
03	90110-08232-00	Bolt, Hexagon Socket Head
04	95617-08200-00	Nut, Self-locking
05	90110-08231-00	Bolt, Hexagon Socket Head
06	4KG-21315-01-00	Stay, Engine 2
07	90105-10313-00	Bolt, Washer Based
08	90179-10658-00	Nut
09	90110-08199-00	Bolt, Hexagon Socket Head
10	4KG-2140X-00-00	Engine Bracket Sub-comp. 1
11	4KG-2140Y-00-00	Engine Bracket Sub-comp. 2
12	90105-10300-00	Bolt, Washer Based
13	90179-10658-00	Nut
14	90105-10402-00	Bolt, Washer Based
15	90105-12425-00	Bolt, Washer Based
16	90387-1003V-00	Collar
17	4KG-21400-00-00	Engine Bracket Comp.
18	90387-1003W-00	Collar
19	90105-10609-00	Bolt, Washer Based
20	90179-10658-00	Nut
21	90105-10323-00	Bolt, Washer Based
22	92907-10200-00	Washer, Plain
23	4KG-2838N-00-00	Duct 1
24	4KG-2838R-00-00	Duct 2
25	90159-06058-00	Screw, With Washer
26	90480-13567-00	Grommet
27	4BH-2219X-00-00	Cover

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

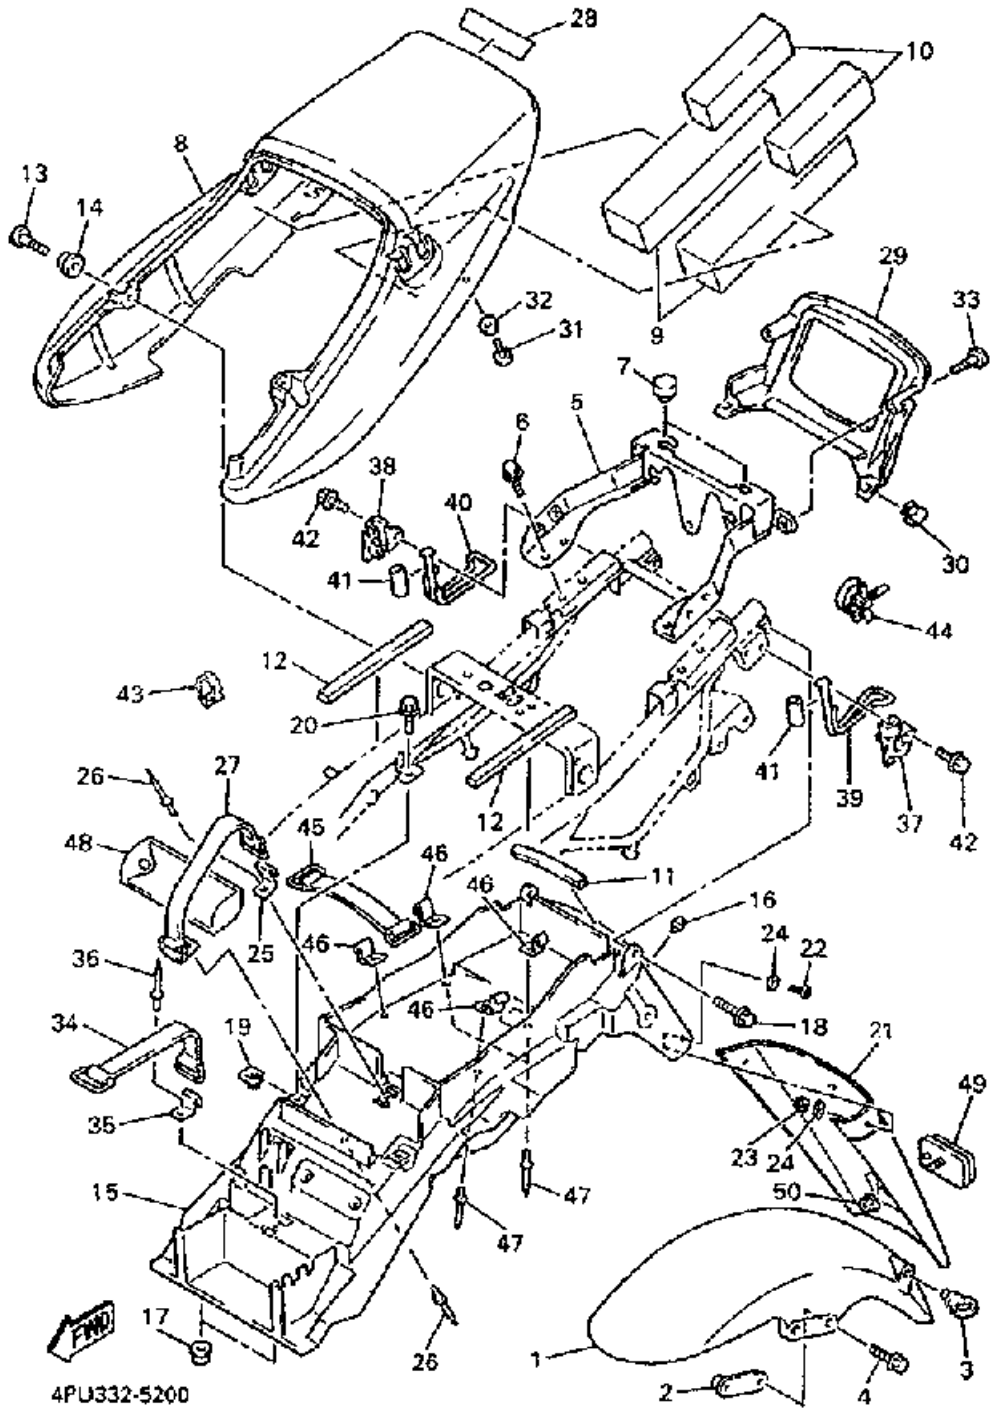


Ref No	Part No	Description
01	4KG-21511-00-P0	Fender, Front
01	4KG-21511-00-4B	Fender, Front
02	4KG-21512-00-00	Bracket, Fender
03	1A8-21518-00-00	Holder, Cable
04	95024-06025-00	Bolt, Flange
05	4PU-2117E-00-00	Bracket, Taillight
06	95817-08012-00	Bolt, Flange
07	22W-24741-00-00	Pad, Seat
08	4KG-21651-00-P0	Cover, Rear Fender
08	4KG-21651-00-4B	Cover, Rear Fender
09	4KG-21779-00-00	Damper, Locating 2
10	4KG-21778-00-00	Damper, Locating 1
11	4KG-2177N-00-00	Damper, Locating 4
12	4HM-2139X-00-00	Damper
13	90150-06036-00	Screw, Round Head
14	90480-13398-00	Grommet
15	4PU-21611-00-00	Fender, Rear
16	4G0-21639-00-00	Damper 2
17	90480-13398-00	Grommet
18	90109-063F1-00	Bolt
19	90183-06053-00	Nut, Spring
20	95807-06016-00	Bolt, Flange
21	3GM-21621-00-00	Flap
22	90149-04278-00	Screw
23	95607-04100-00	Nut, U
24	90201-04018-00	Washer, Plate
25	4HM-2162A-00-00	Hook
26	90267-40076-00	Rivet, Blind
27	4HM-82131-00-00	Band, Battery
28	99237-00100-00	Emblem, Yamaha
29	4PU-2163F-00-00	Cover, Rear Fender 3
30	90183-05061-00	Nut, Spring
31	90154-05059-00	Screw, Binding
32	90202-06113-00	Washer, Plate
33	90154-05059-00	Screw, Binding
34	4J2-82131-01-00	Band, Battery
35	4HM-2162A-00-00	Hook
36	90267-40076-00	Rivet, Blind
37	4KG-21331-00-00	Hook, Side Cover 1
38	4KG-21332-00-00	Hook, Side Cover 2
39	4KG-21654-00-00	Wire
40	4KG-21664-00-00	Wire, 2
41	4KG-21639-00-00	Damper 2
42	95807-06016-00	Bolt, Flange
43	90464-15157-00	Clamp
44	90464-12036-00	Clamp
45	120-82131-00-00	Band, Battery
46	36F-28379-00-00	Hook
47	90267-40076-00	Rivet, Blind
48	4KG-28100-00-00	Tool Kit
49	3G1-85130-01-00	Rear Reflector Assy
50	95707-05500-00	Nut, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

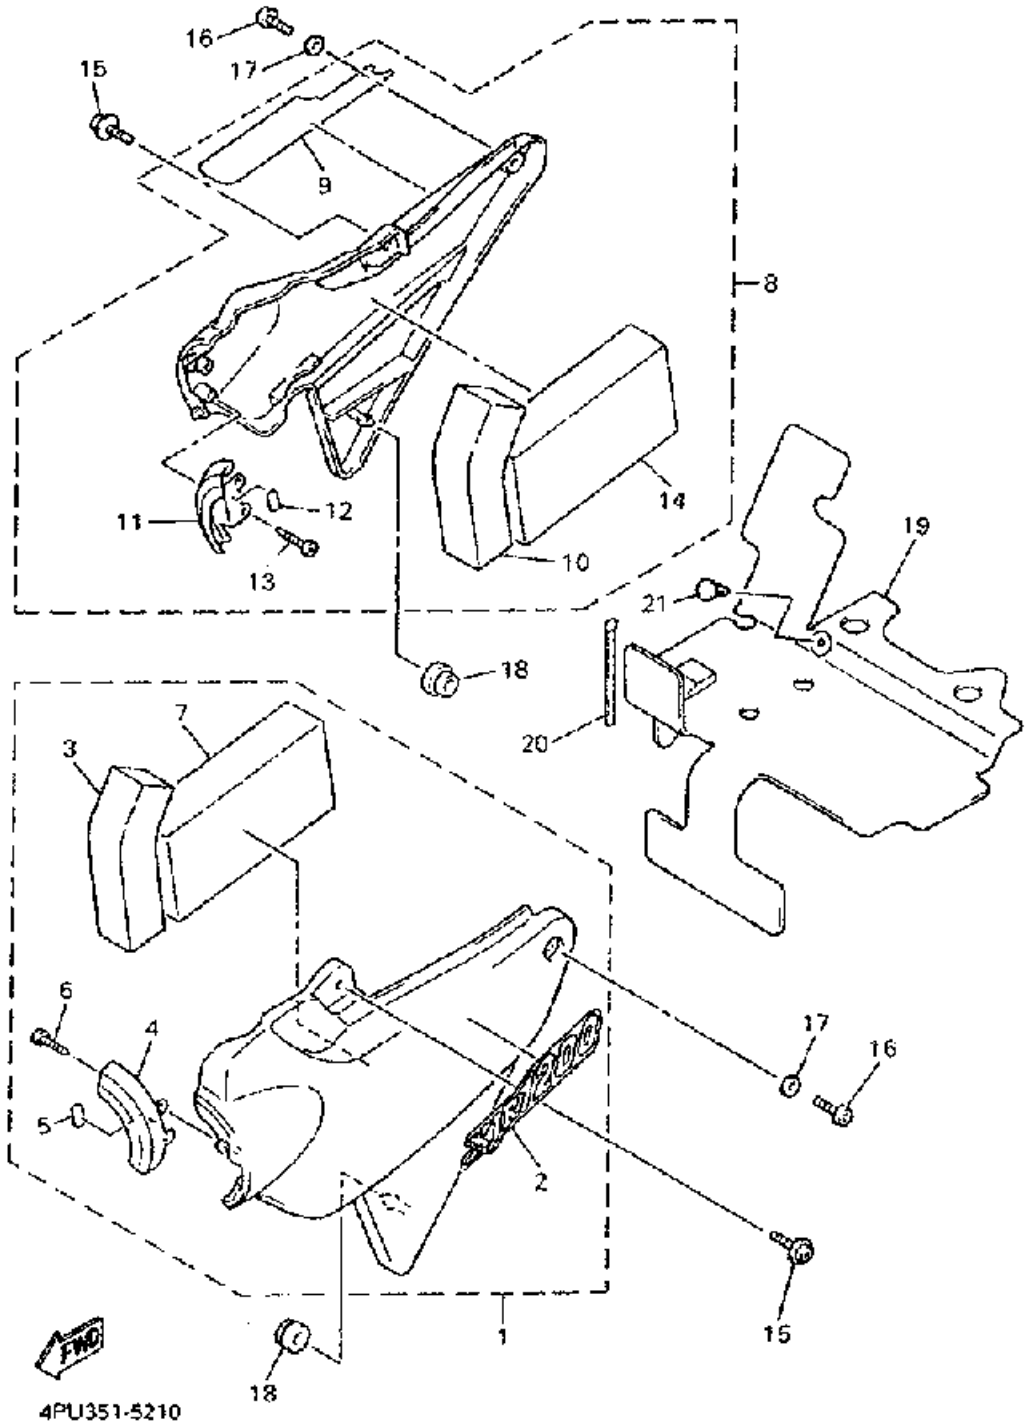


Ref No	Part No	Description
01	4KG-Y2171-10-0X	Cover, Side 1
01	4KG-Y2171-10-1X	Cover, Side 1
02	4KG-21781-00-00	• . Emblem 1
03	4KG-21717-00-00	• . Damper
04	4KG-2172A-00-00	• . Panel 1
05	51Y-21639-00-00	• . Damper 2
06	97707-50510-00	• . Screw, Tapping
07	4KG-21746-00-00	• . Damper
08	4KG-Y2172-10-0X	Cover, Side 2
08	4KG-Y2171-10-1X	Cover, Side 1
09	4KG-21782-00-00	• . Emblem 2
10	4KG-21717-00-00	• . Damper
11	4KG-2172F-00-00	• . Panel 2
12	51Y-21639-00-00	• . Damper 2
13	97707-50510-00	• . Screw, Tapping
14	4KG-21746-00-00	• . Damper
15	90159-06059-00	Screw, With Washer
16	90149-06298-00	Screw
17	90202-06113-00	Washer, Plate
18	90480-01558-00	Grommet
19	4KG-21732-00-00	Seal 1
20	90465-13355-00	Clamp
21	90338-06233-00	Plug

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

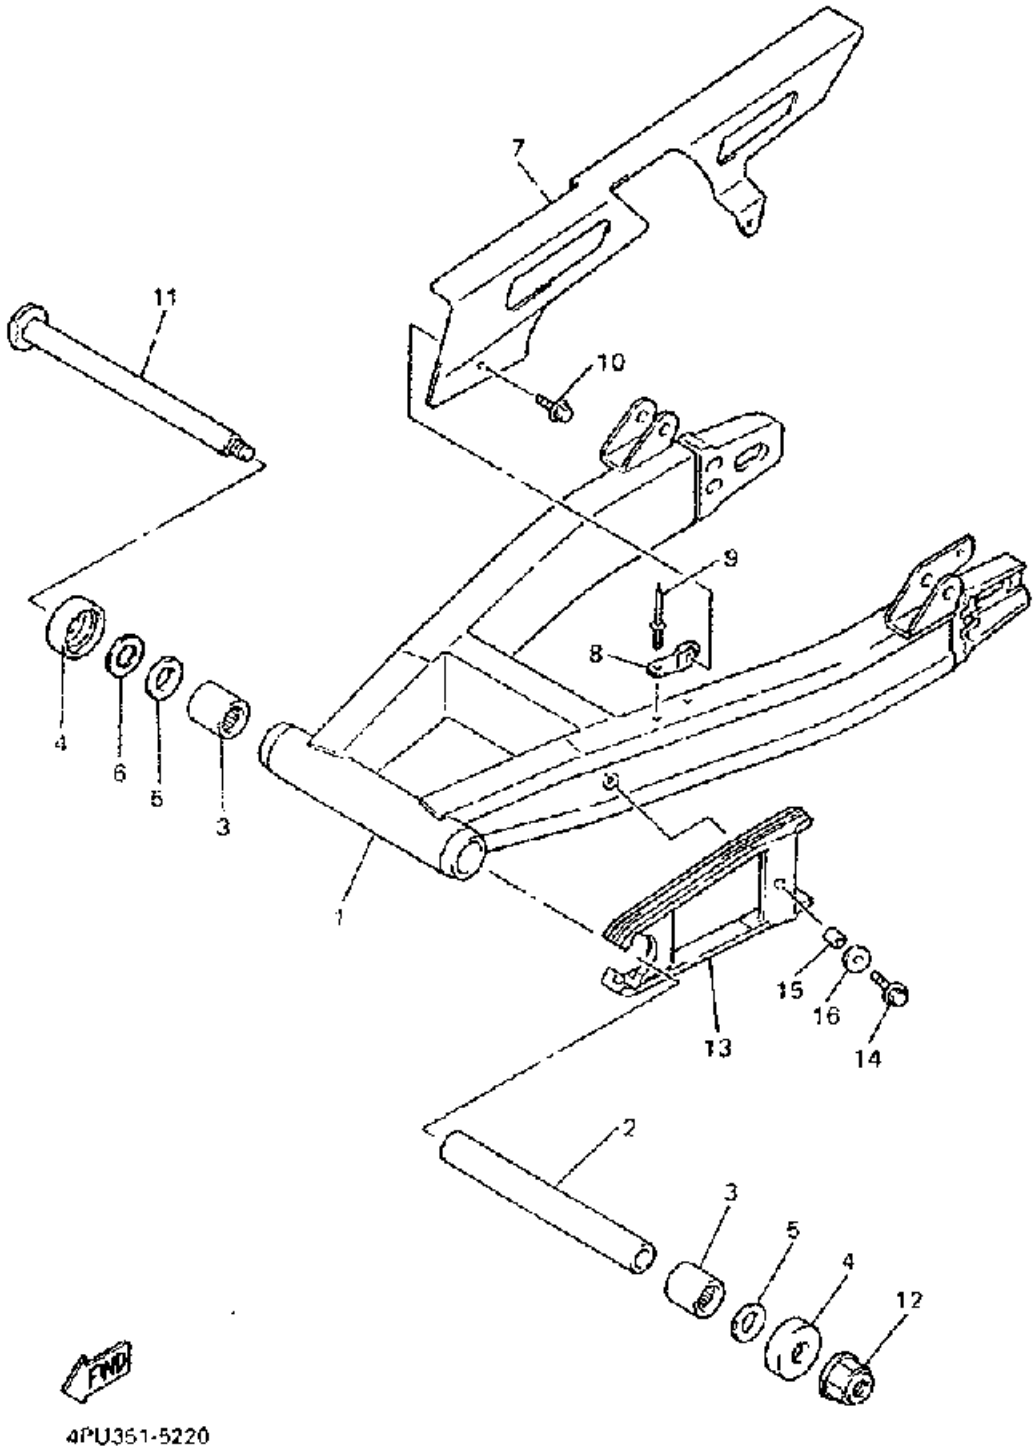

Ref No	Part No	Description
01	4KG-22110-00-00	Rear Arm Comp.
02	3FV-22184-00-00	Bush
03	93315-42523-00	Bearing
04	3FV-22128-00-00	Cover, Thrust 1
05	3XV-22127-00-00	Shim
06	90201-203F0-00	Washer, Plate
07	4KG-22311-00-00	Case, Chain
08	4KG-22321-00-00	Stay, Chain Case 1
09	90267-40090-00	Rivet, Blind
10	95024-06010-00	Bolt, Flange
11	3GM-22141-00-00	Shaft, Pivot
12	95607-18200-00	Nut, Self-locking
13	4KG-22151-00-00	Seal, Guard
14	95027-06025-00	Bolt, Flange
15	90387-06022-00	Collar
16	90201-060A3-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

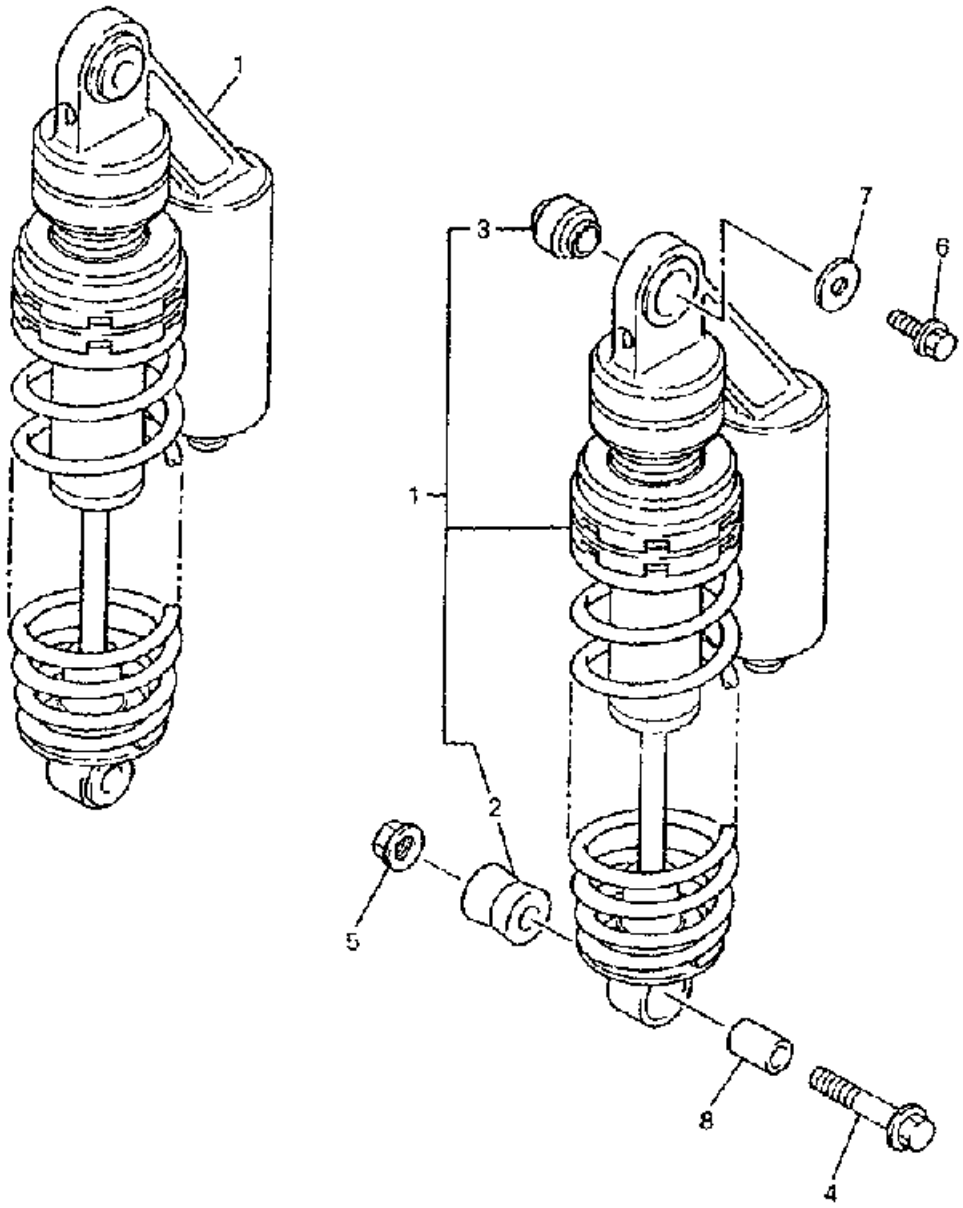


Ref No	Part No	Description
01	4PU-22210-00-00	Shock Absorber Assy, Rear
02	4KG-22216-00-00	• . Bush, Rear Shock Absorber
03	1UF-22216-00-00	• . Bush, Rear Shock Absorber
04	95024-10045-00	Bolt, Flange
05	95617-10200-00	Nut, Self-locking
06	95024-08012-00	Bolt, Flange
07	1UJ-22243-00-00	Washer 1
08	5M0-22253-00-00	Collar, Distance

FWD


4PU351-5230

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

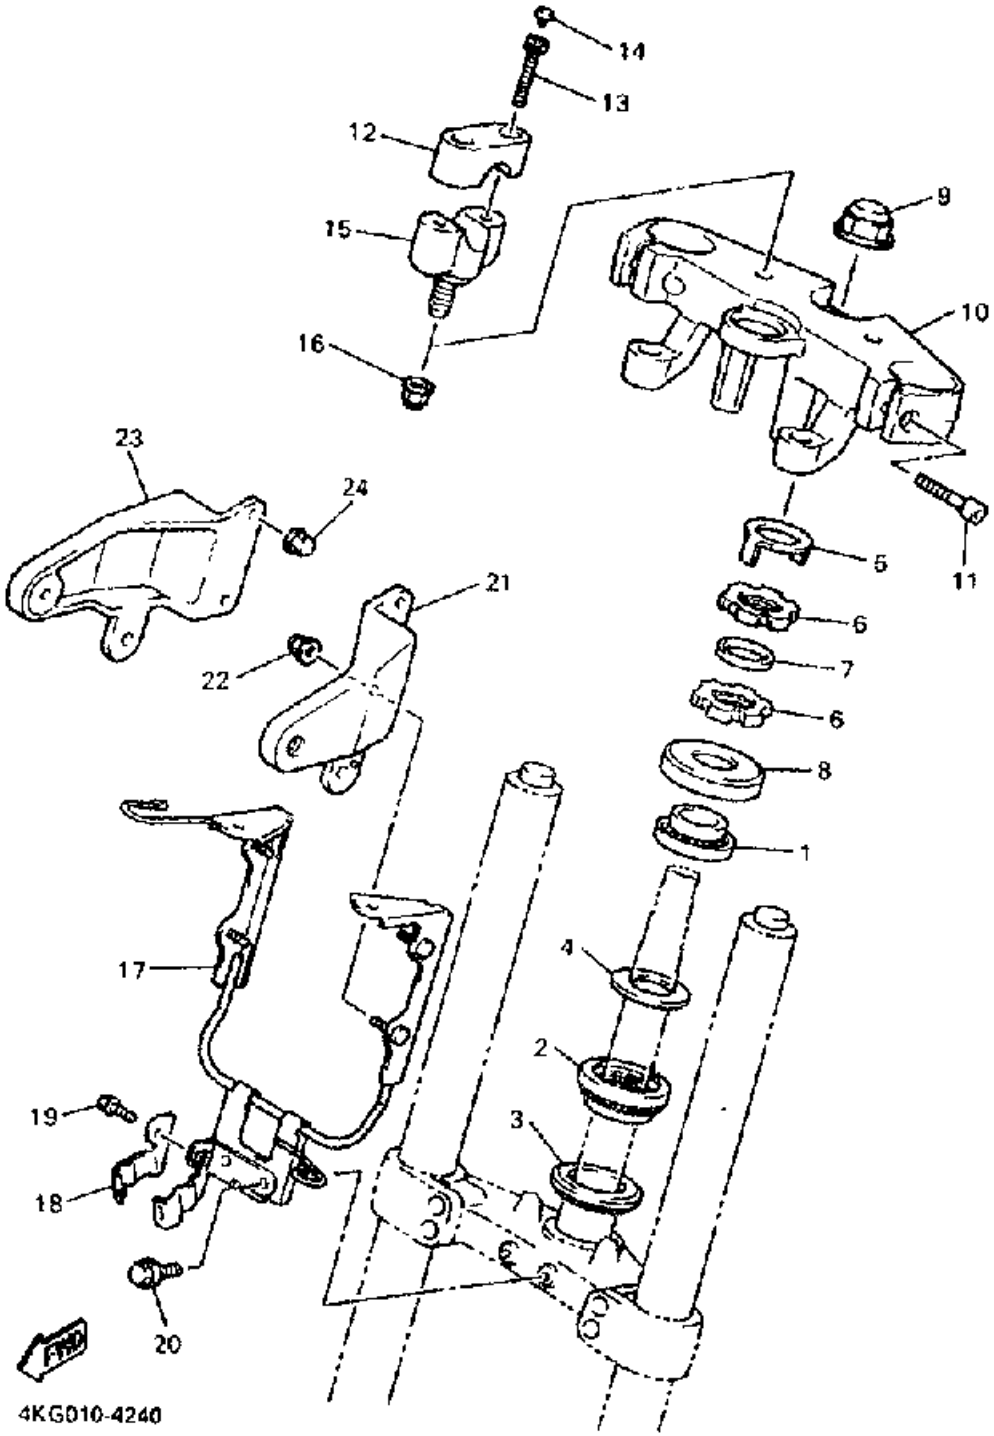


Ref No	Part No	Description
01	93399-99931-00	Bearing
02	93399-99932-00	Bearing
03	3FV-23462-00-00	Seal, Steering
04	90202-24190-00	Washer, Plate
05	26H-23418-01-00	Washer, Special
06	90179-25033-00	Nut
07	90202-26142-00	Washer, Plate
08	3HE-23416-00-00	Cover, Ball Race 2
09	90176-22050-00	Nut, Crown
10	4KG-23435-00-00	Crown, Handle
12	4H7-23441-00-38	Holder, Handle Upper
13	91314-08030-00	Bolt
14	90338-08163-00	Plug
15	5H0-23442-01-38	Holder, Handle Lower
16	95617-10200-00	Nut, Self-locking
17	4KG-23174-00-00	Stay, Headlight
18	3GM-23378-00-00	Bracket, Horn
19	95027-06012-00	Bolt, Flange
20	95027-06020-00	Bolt, Flange
21	4KG-23121-00-00	Cover, Upper 1
22	90176-06055-00	Nut, Crown
23	4KG-23131-00-00	Cover, Upper 2
24	90176-06055-00	Nut, Crown

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

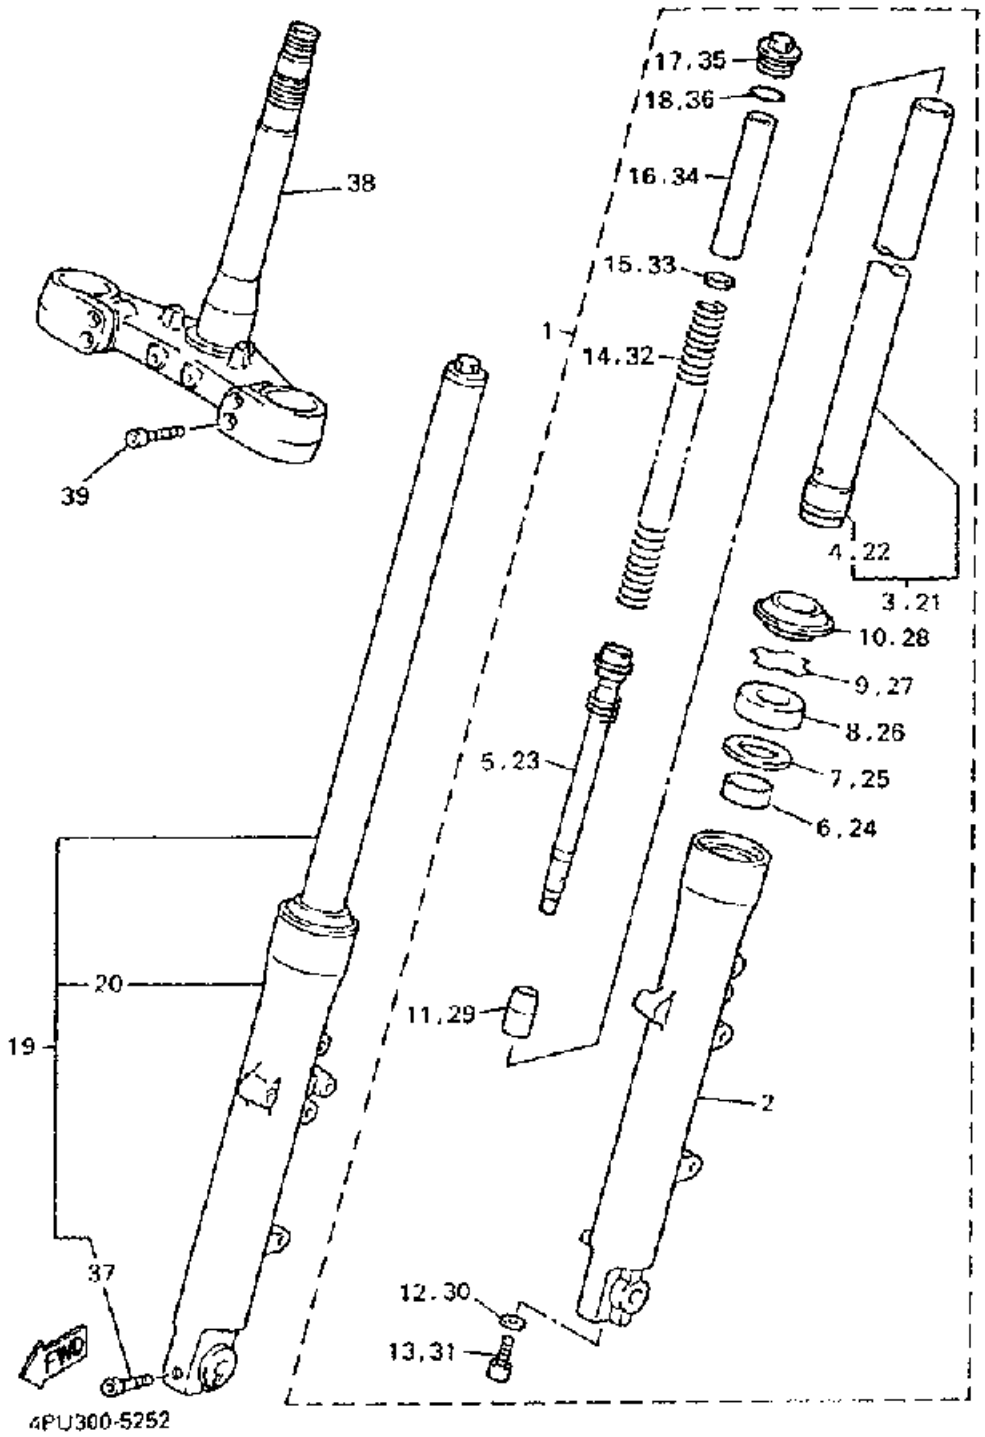


Ref No	Part No	Description
01	4PU-23102-00-00	Front Fork Assy (l.h)
02	4KG-23126-00-00	• . Tube, Outer (left)
03	4PU-23110-00-00	• . Inner Tube Comp.1
04	3XJ-23171-L0-00	•• .. Piston, Front Fork
05	4PU-23170-00-00	• . Cylinder Comp., Front Fork
06	3XJ-23125-L0-00	• . Metal, Slide 1
07	4V4-23146-L0-00	• . Washer, Oil Seal
08	4KG-23145-00-00	• . Oil Seal
09	4V4-23153-L0-00	Ring, Snap
10	4KG-23144-00-00	• . Seal, Dust
11	3GM-23173-00-00	• . Spindle, Taper
12	509-23158-L0-00	• . Gasket
13	278-23181-50-00	• . Bolt, Hexagon Socket Head
14	4PU-23141-00-00	• . Spring, Front Fork
15	3LR-23149-00-00	• . Washer, Spring Upper
16	4KG-23118-00-00	• . Spacer
17	3TJ-23111-00-00	• . Bolt, Cap
18	4V4-23188-L0-00	• . O-ring
19	4PU-23103-00-00	Front Fork Assy (r.h)
20	4KG-23136-00-00	• . Tube, Outer (right)
21	4PU-23110-00-00	• . Inner Tube Comp.1
22	3XJ-23171-L0-00	•• .. Piston, Front Fork
23	4PU-23170-00-00	• . Cylinder Comp., Front Fork
24	3XJ-23125-L0-00	• . Metal, Slide 1
25	4V4-23146-L0-00	• . Washer, Oil Seal
26	4KG-23145-00-00	• . Oil Seal
27	4V4-23153-L0-00	• . Ring, Snap
28	4KG-23144-00-00	• . Seal, Dust
29	3GM-23173-00-00	• . Spindle, Taper
30	509-23158-L0-00	• . Gasket
31	278-23181-50-00	• . Bolt, Hexagon Socket Head
32	4PU-23141-00-00	• . Spring, Front Fork
33	3LR-23149-00-00	• . Washer, Spring Upper
34	4KG-23118-00-00	• . Spacer
35	3TJ-23111-00-00	• . Bolt, Cap
36	4V4-23188-L0-00	• . O-ring
37	91311-08045-00	• . Bolt
38	4PU-23340-00-00	Under Bracket Comp.
39	91317-08025-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

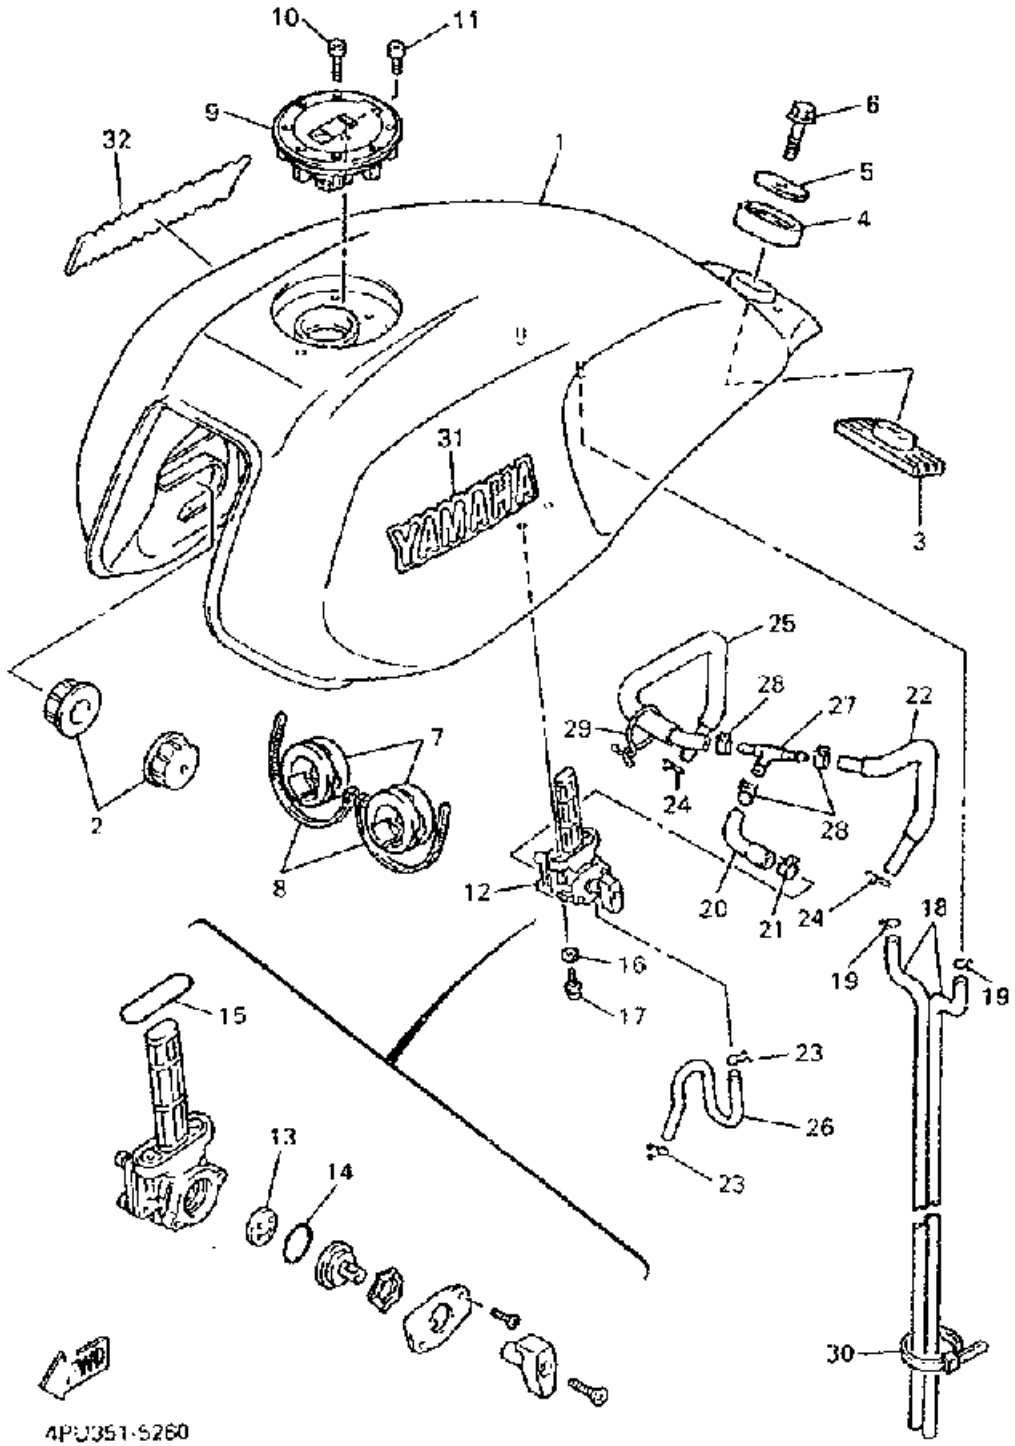


Ref No	Part No	Description
01	4KG-24110-G0-P0	Fuel Tank Comp.
01	4KG-24110-G0-4B	Fuel Tank Comp.
02	4H7-24181-00-00	Damper, Locating 1
03	2GH-24184-00-00	Damper, Locating 4
04	3Y6-24183-00-00	Damper, Locating 3
05	12R-24186-00-00	Washer, Special
06	97007-08030-00	Bolt
07	4HM-24183-00-00	Damper, Locating 3
08	90464-14117-00	Clamp
09	4HN-24602-00-00	Cap Assy
10	90110-05112-00	Bolt, Hexagon Socket Head
11	91317-05010-00	Bolt
12	4KG-24500-00-00	Fuel Cock Assy 1
13	3XV-24523-00-00	• . Valve
14	3XV-24534-00-00	• . Seal, Cock
15	4X8-24512-00-00	• . Gasket
16	90202-05187-00	Washer, Plate
17	90149-06008-00	Screw
18	90445-104H3-00	Hose
19	90467-09006-00	Clip
20	4KG-24311-00-00	Pipe, Fuel 1
21	90467-14057-00	Clip
22	4KG-24312-00-00	Pipe 2
23	90467-08021-00	Clip
24	90467-12052-00	Clip
25	4KG-24313-00-00	Pipe 3
26	4KG-24314-00-00	Pipe 4
27	90413-11025-00	Way 3
28	90467-13064-00	Clip
29	90464-30040-00	Clamp
30	90464-13073-00	Clamp
31	4KG-24161-00-00	Emblem 1
32	4KG-24162-00-00	Emblem 2

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

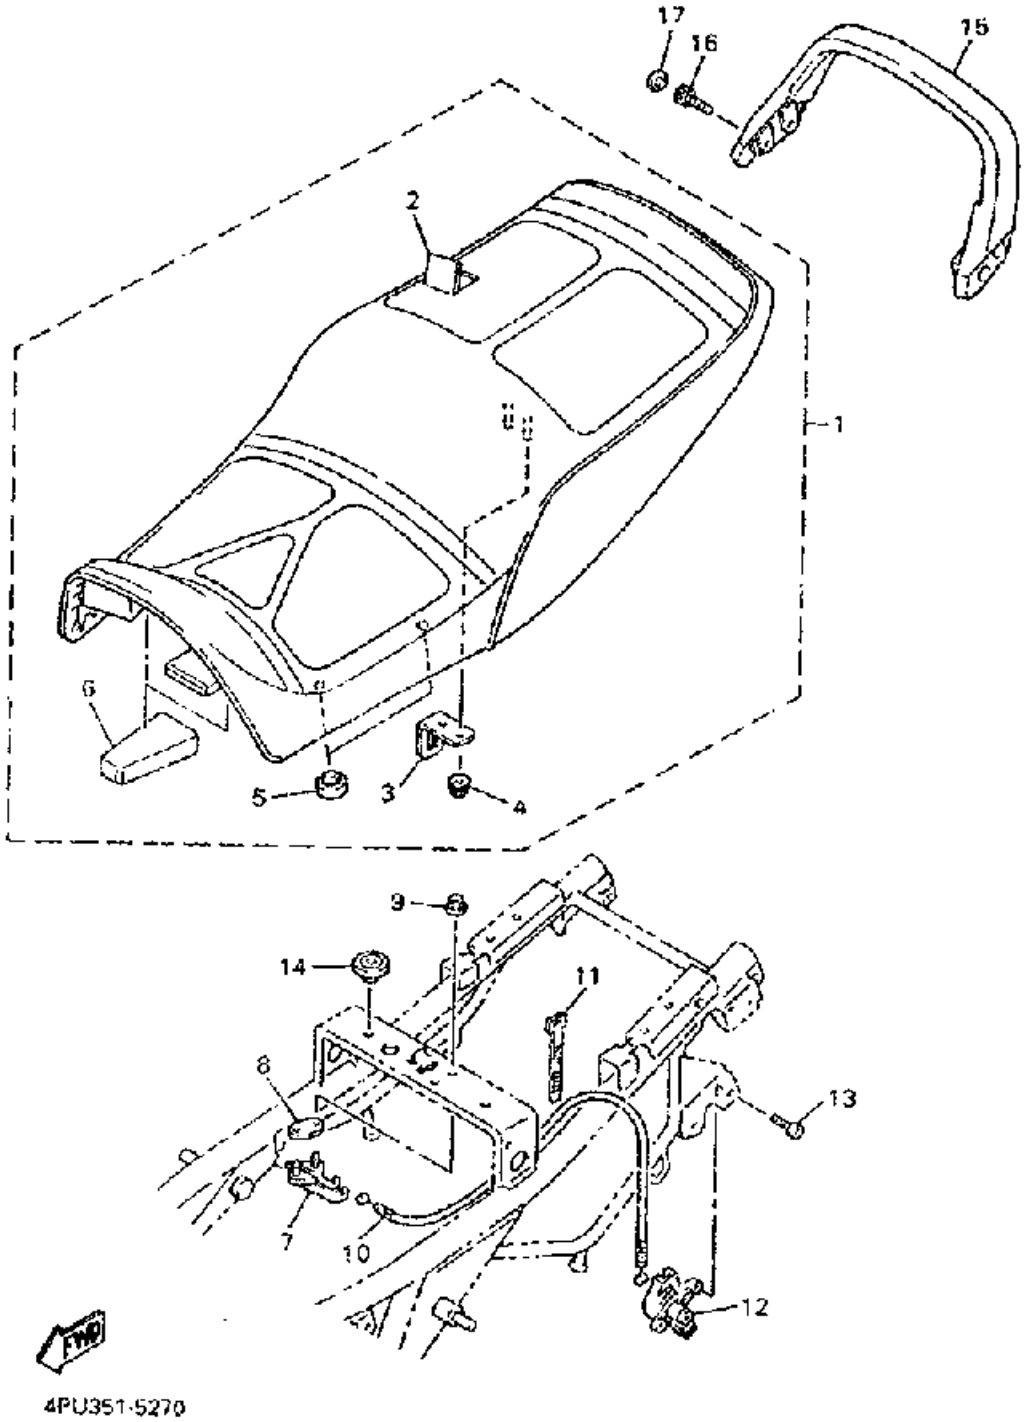

Ref No	Part No	Description
01	4PU-24730-00-00	Double Seat Assy
02	4PU-2470F-00-00	• . Cover, Seat
03	4HM-24728-00-00	• . Bracket, Seat
04	95701-06500-00	Nut, Flange
05	22W-24741-00-00	• . Pad, Seat
06	4KG-24737-00-00	• . Damper, Seat
07	4BP-24780-00-00	Seat Lock Assy
08	4BP-24792-00-00	Plate
09	95707-06500-00	Nut, Flange
10	4KG-2478E-00-00	Cable, Seat Lock
11	12R-82591-00-00	Band
12	3YX-21308-00-00	Helmet Hanger Assy
13	90149-06308-00	Screw
14	22W-24741-00-00	Pad, Seat
15	4KG-24773-00-P0	Handle, Seat
15	4KG-24773-00-4B	Handle, Seat
16	91317-08025-00	Bolt
17	90338-08163-00	Plug


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

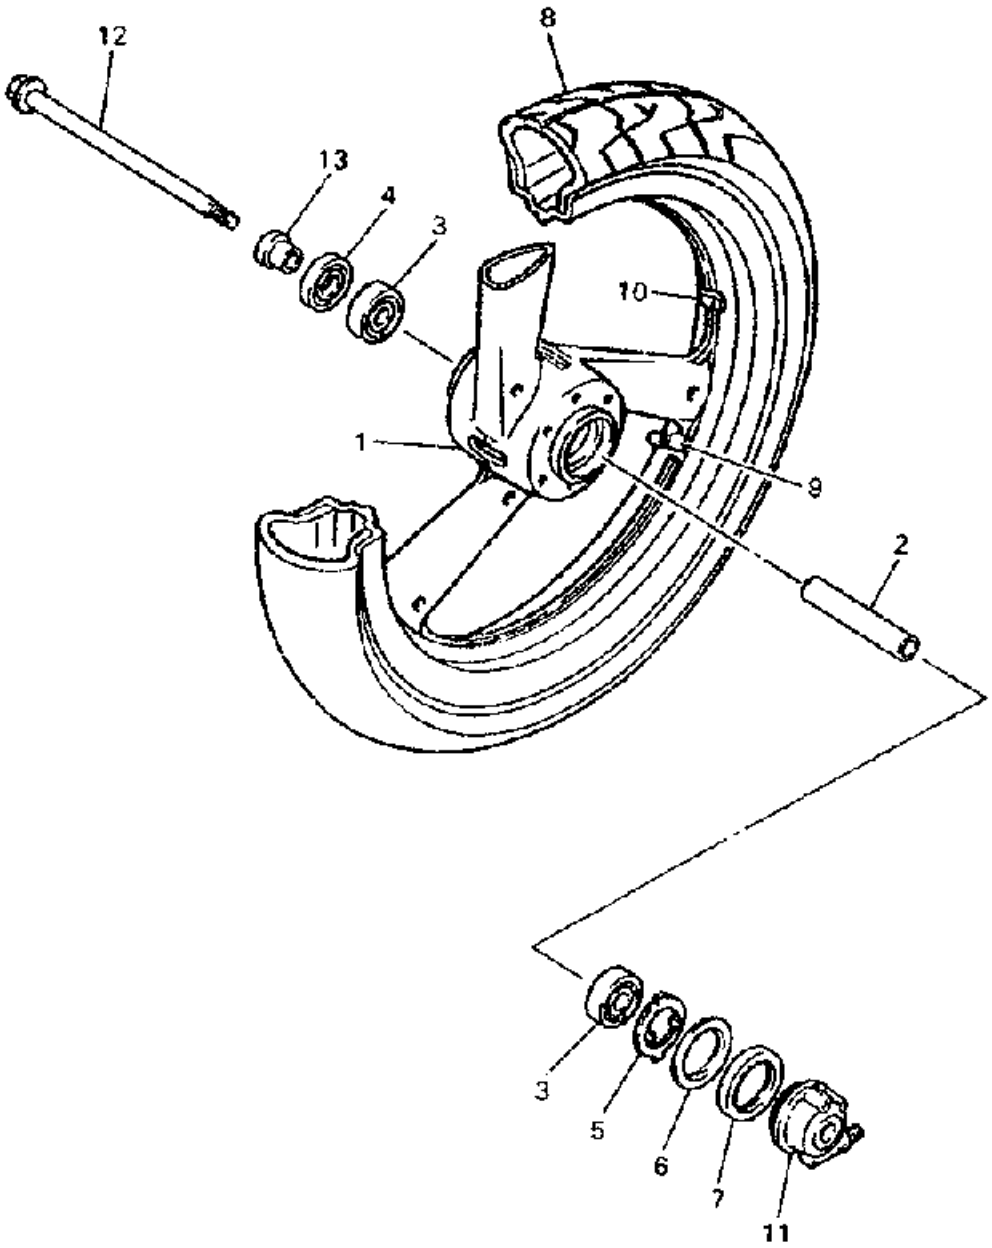

4KG010-4280


Ref No	Part No	Description
01	4KG-25168-00-7B	Cast Wheel, Front
02	90560-17356-00	Spacer
03	93306-20314-00	Bearing
04	93102-25017-00	Oil Seal
05	341-25149-00-00	Clutch, Meter
06	341-25846-00-00	Retainer, Clutch
07	93105-45017-00	Oil Seal
08	94113-1704W-00	Tire (130/70zr17 D202f T/l)
08	94113-1705M-00	Tire (130/70zr17 Bt-54f)
09	93900-00030-00	Valve, Rim
10	29L-25398-00-00	Balancer, Wheel (10g)
10	29L-25398-10-00	Balancer, Wheel (20g)
10	29L-25398-20-00	Balancer, Wheel (30g)
11	4KG-25190-00-00	Gear Unit Assy
12	5Y1-25381-01-00	Axle, Wheel
13	90387-17530-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

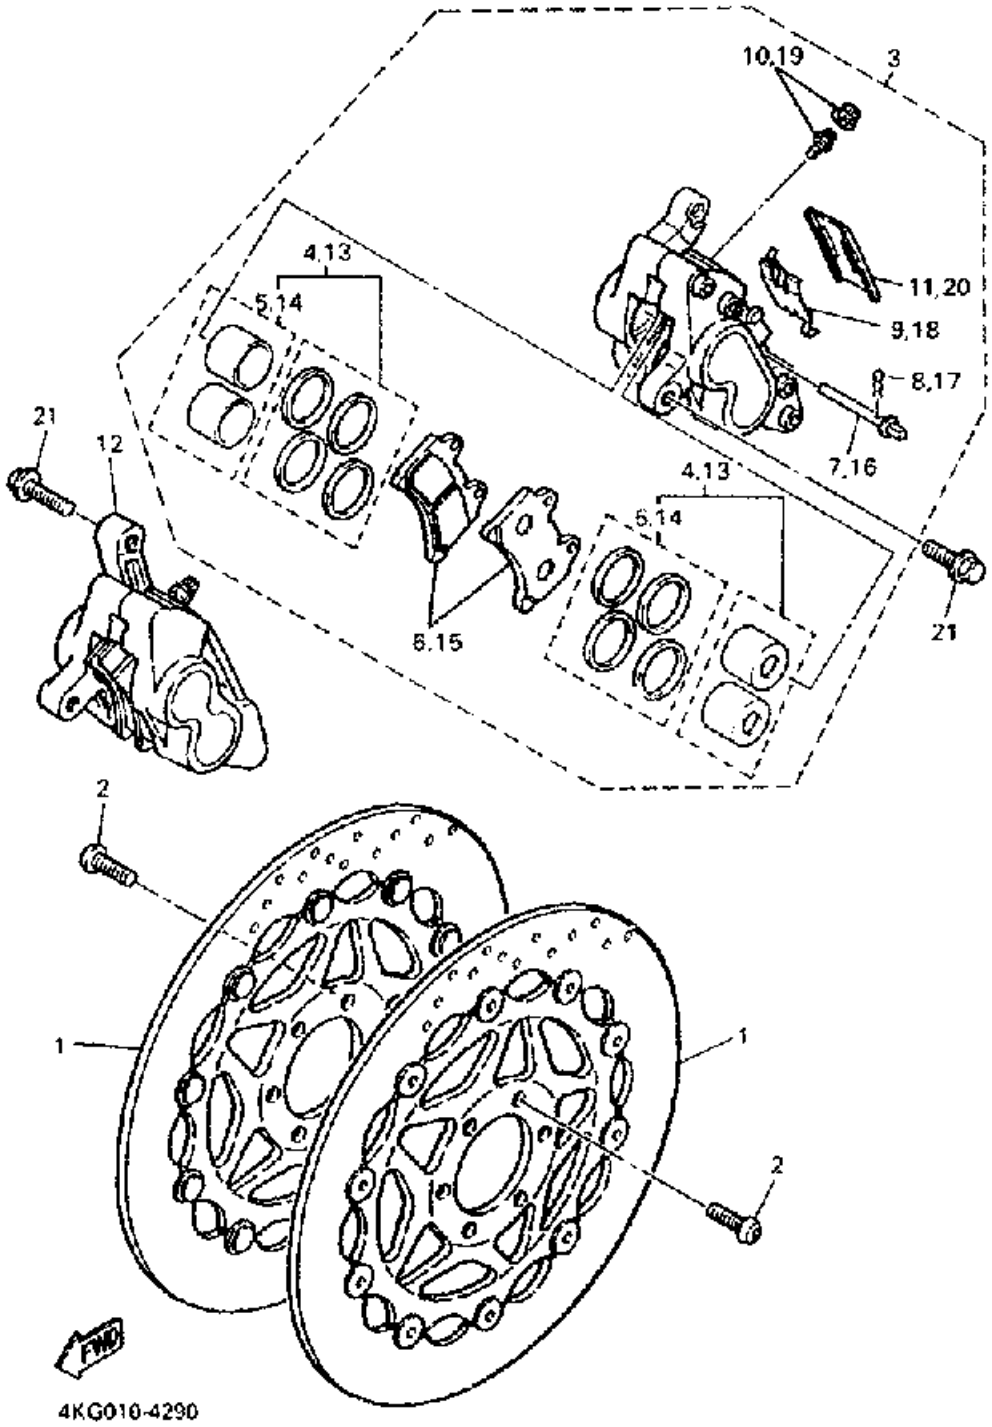


Ref No	Part No	Description
01	4KG-2581T-10-00	Disc Brake Assy
02	90109-08718-00	Bolt
03	4KG-2580T-00-00	Caliper Assy (left)
04	1NL-W0057-00-00	• . Piston Assy, Caliper
05	1NL-W0047-00-00	•• .. Caliper Seal Kit
06	4KG-W0045-00-00	• . Brake Pad Kit
07	3HE-25924-00-00	• . Pin, Pad
08	3GM-25925-00-00	• . Clip
09	2GH-25919-00-00	• . Support, Pad
10	1J3-W0048-00-00	• . Bleed Screw Kit
11	1KT-25836-00-00	• . Cover, Dust
12	4KG-2580U-00-00	Caliper Assy (right)
13	1NL-W0057-00-00	• . Piston Assy, Caliper
14	1NL-W0047-00-00	•• .. Caliper Seal Kit
15	4KG-W0045-00-00	• . Brake Pad Kit
16	3HE-25924-00-00	• . Pin, Pad
17	3GM-25925-00-00	• . Clip
18	2GH-25919-00-00	• . Support, Pad
19	1J3-W0048-00-00	• . Bleed Screw Kit
20	2KT-25836-00-00	• . Cover, Dust
21	90105-10638-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

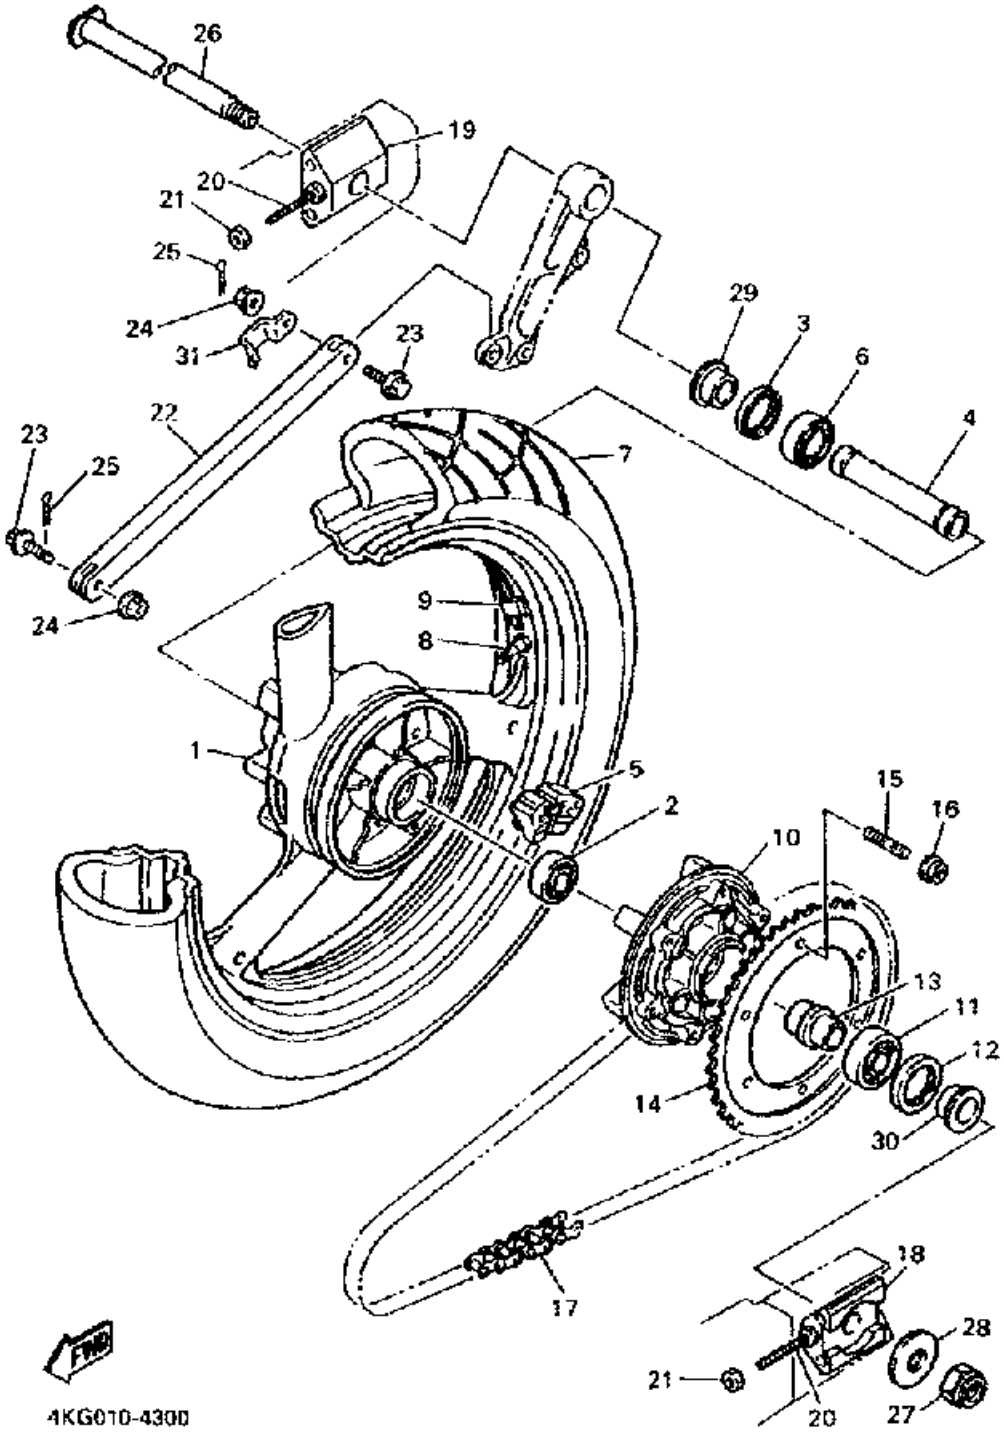


Ref No	Part No	Description
01	3GM-25338-01-7B	Cast Wheel, Rear
02	93306-30416-00	Bearing (b6304)
03	93106-30029-00	Oil Seal
04	90560-20357-00	Spacer
05	4KG-25364-00-00	Damper
06	93306-30437-00	Bearing
07	94117-1704X-00	Tire (170/60zr17 D202l T/l)))
07	94117-1705N-00	Tire (170/60zr17 Bt-54r)
08	93900-00030-00	Valve, Rim
09	29L-25398-00-00	Balancer, Wheel (10g)
09	29L-25398-10-00	Balancer, Wheel (20g)
09	29L-25398-20-00	Balancer, Wheel (30g)
10	36Y-25366-01-00	Clutch, Hub
11	93306-30562-00	Bearing
12	93106-35030-00	Oil Seal
13	36Y-25377-00-00	Collar, Wheel
14	4KG-25438-20-00	Sprocket, Driven (38z)
15	90116-10485-00	Bolt, Stud
16	95617-10200-00	Nut, Self-locking
17	94581-57110-00	Chain (did5332zlka1-110l)
18	3GM-25388-00-00	Puller, Chain 1
19	3GM-25389-00-00	Puller, Chain 2
20	90101-08766-00	Bolt
21	95317-08600-00	Nut
22	4FM-25371-00-00	Bar, Tension
23	90105-08321-00	Bolt, Washer Based
24	95707-08500-00	Nut, Flange
25	91490-20025-00	Pin, Cotter
26	3GM-25381-A0-00	Axle, Wheel
27	95604-18200-00	Nut, Self-locking
28	90201-18264-00	Washer, Plate
29	90387-202X9-00	Collar
30	90387-203X0-00	Collar
31	4FM-25887-00-00	Holder, Brake Hose

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

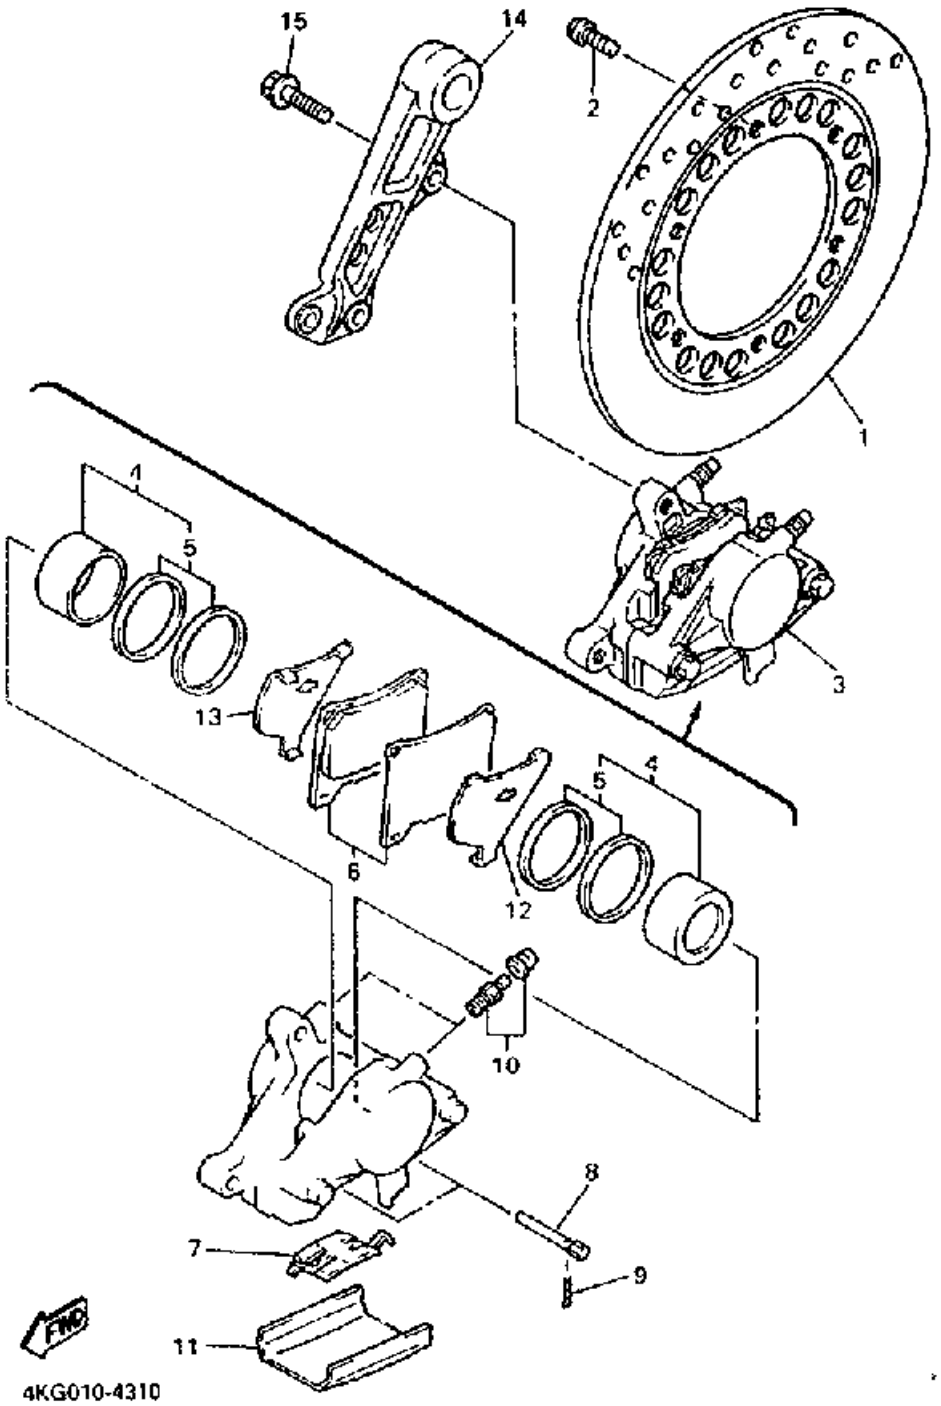


Ref No	Part No	Description
01	3GM-2582W-A0-00	Disc, Rear Brake 2
02	90109-08718-00	Bolt
03	4KG-2580W-00-00	Caliper Assy, Rear 2
04	31A-W0057-00-00	• . Piston Assy, Caliper
05	31A-W0047-00-00	•• .. Caliper Seal Kit
06	1FK-W0046-02-00	• . Brake Pad Kit 2
07	29L-25919-A0-00	• . Support, Pad
08	3HE-25924-00-00	• . Pin, Pad
09	3GM-25925-00-00	• . Clip
10	1J3-W0048-00-00	• . Bleed Screw Kit
11	51J-25836-00-00	• . Cover, Dust
12	1FK-25827-00-00	• . Shim, Caliper
13	1FK-25828-00-00	• . Shim, Caliper
14	4KG-25819-00-00	Bracket, Caliper
15	90105-10638-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

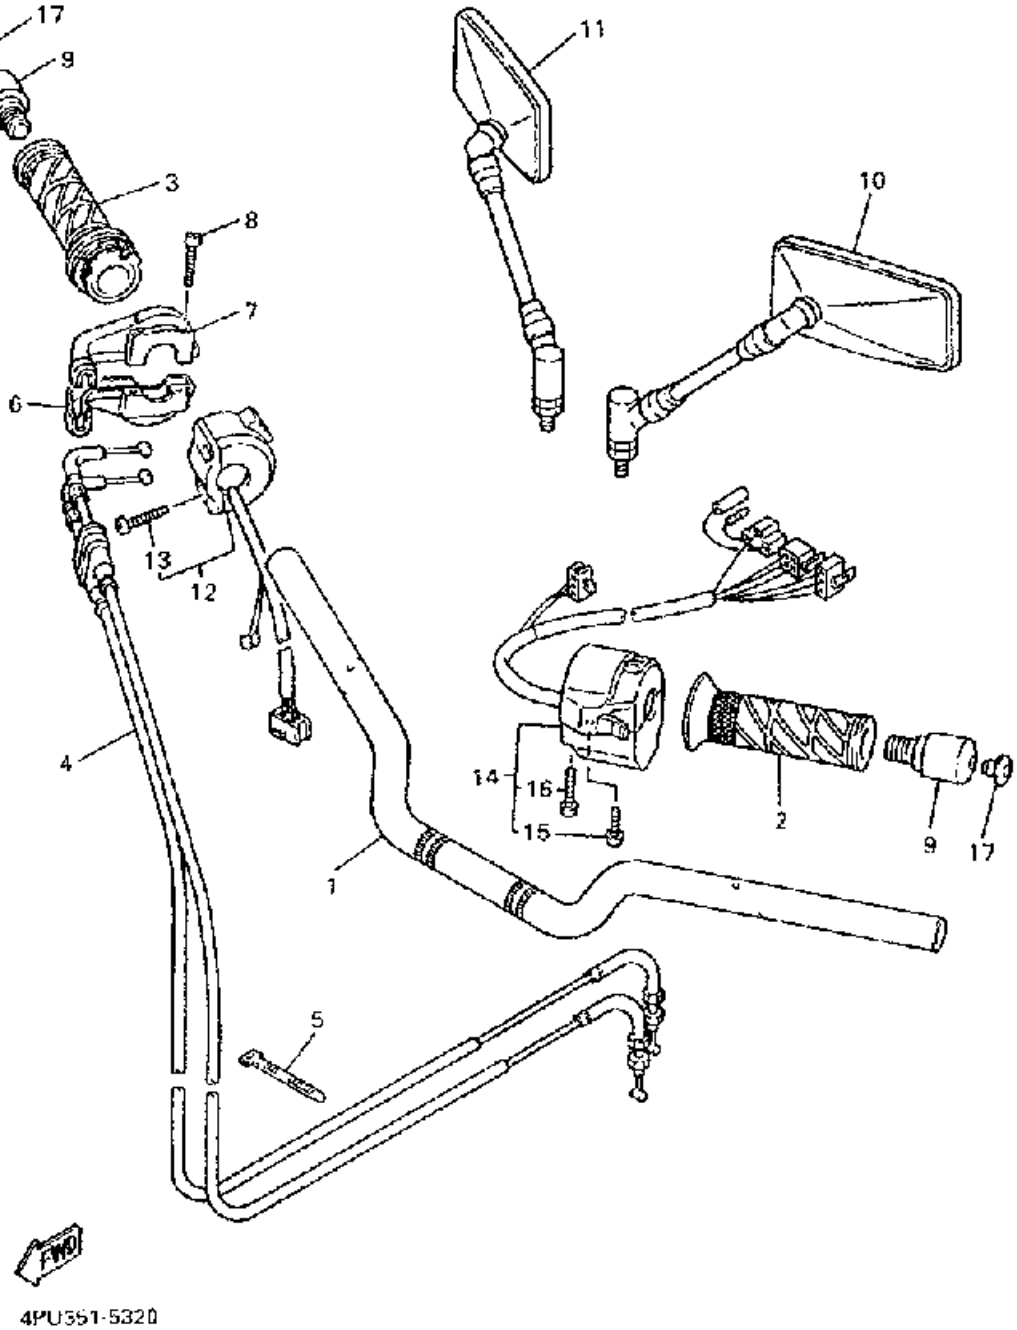


Ref No	Part No	Description
01	4KG-26111-00-00	Handlebar
02	4FM-26241-00-00	Grip (left)
03	4FM-26240-00-00	Grip Assy
04	4KG-26302-00-00	Throttle Cable Assy
05	12R-82591-00-00	Band
06	4KG-26281-00-00	Cap, Grip Upper
07	3XW-26282-01-00	Cap, Grip Lower
08	91317-05035-00	Bolt
09	3HX-26246-00-00	End, Grip
10	4H7-26290-A0-00	Rear View Mirror Assy(right)
11	4H7-26290-E0-00	Rear View Mirror Assy(right)
12	4HM-83975-10-00	Switch, Handle 2
13	90157-05027-00	• . Screw, Pan Head
14	4PU-83969-00-00	Switch, Handle 5
15	98507-05030-00	• . Screw, Pan Head
16	98507-05040-00	• . Screw, Pan Head
17	4X7-23469-10-00	Cap, Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

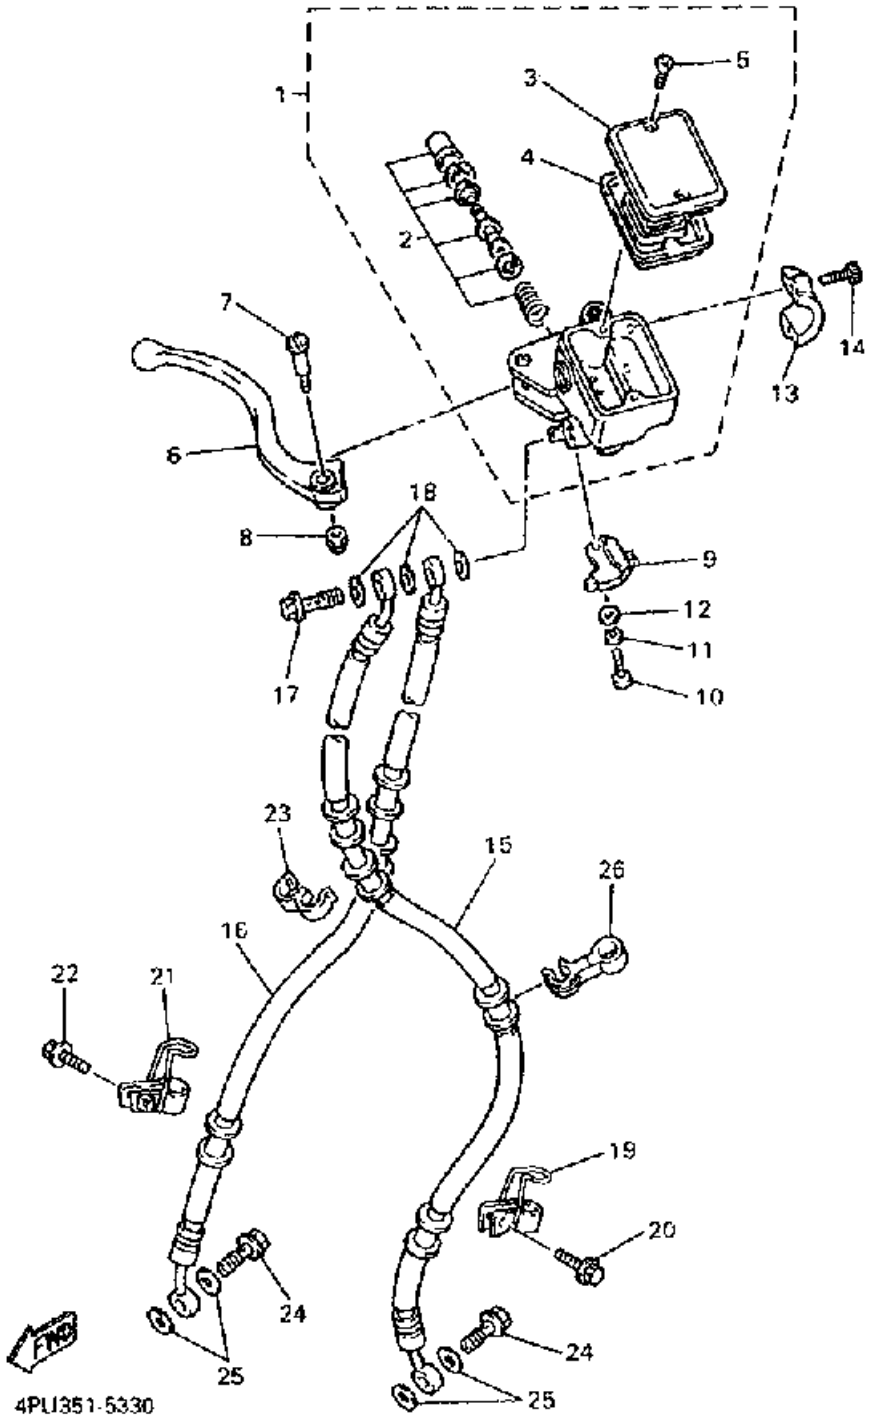


Ref No	Part No	Description
01	4KG-W2587-00-00	Master Cylinder Sub Assy
02	4K0-W0041-50-00	• . Cylinder Kit, Master
03	4HM-W2585-00-00	• . Reservoir Cap Set
04	4HM-25854-00-00	• . Diaphragm, Reservoir
05	98707-04012-00	• . Screw, Flat Head
06	4PU-83922-00-00	Lever 2
07	3FV-2589F-00-00	Bolt, Lever
08	95617-06100-00	Nut, U
09	3FV-83980-00-00	Front Stop Switch Assy
10	98517-04012-00	Screw, Pan Head
11	92990-04100-00	Washer, Spring
12	92901-04600-00	Washer, Plate
13	4HM-25867-00-00	Bracket, Master Cylinder
14	91317-06020-00	Bolt
15	4KG-25872-00-00	Hose, Brake 1
16	4KG-25873-00-00	Hose, Brake 2
17	90401-10160-00	Bolt, Union
18	90201-10118-00	Washer, Plate
19	4KG-25887-00-00	Holder, Brake Hose
20	95027-06025-00	Bolt, Flange
21	4KG-25876-00-00	Holder, Brake Hose 2
22	95027-06025-00	Bolt, Flange
23	90464-13194-00	Clamp
24	90401-10159-00	Bolt, Union
25	90201-10118-00	Washer, Plate
26	3MA-26279-00-00	Guide, Cable

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

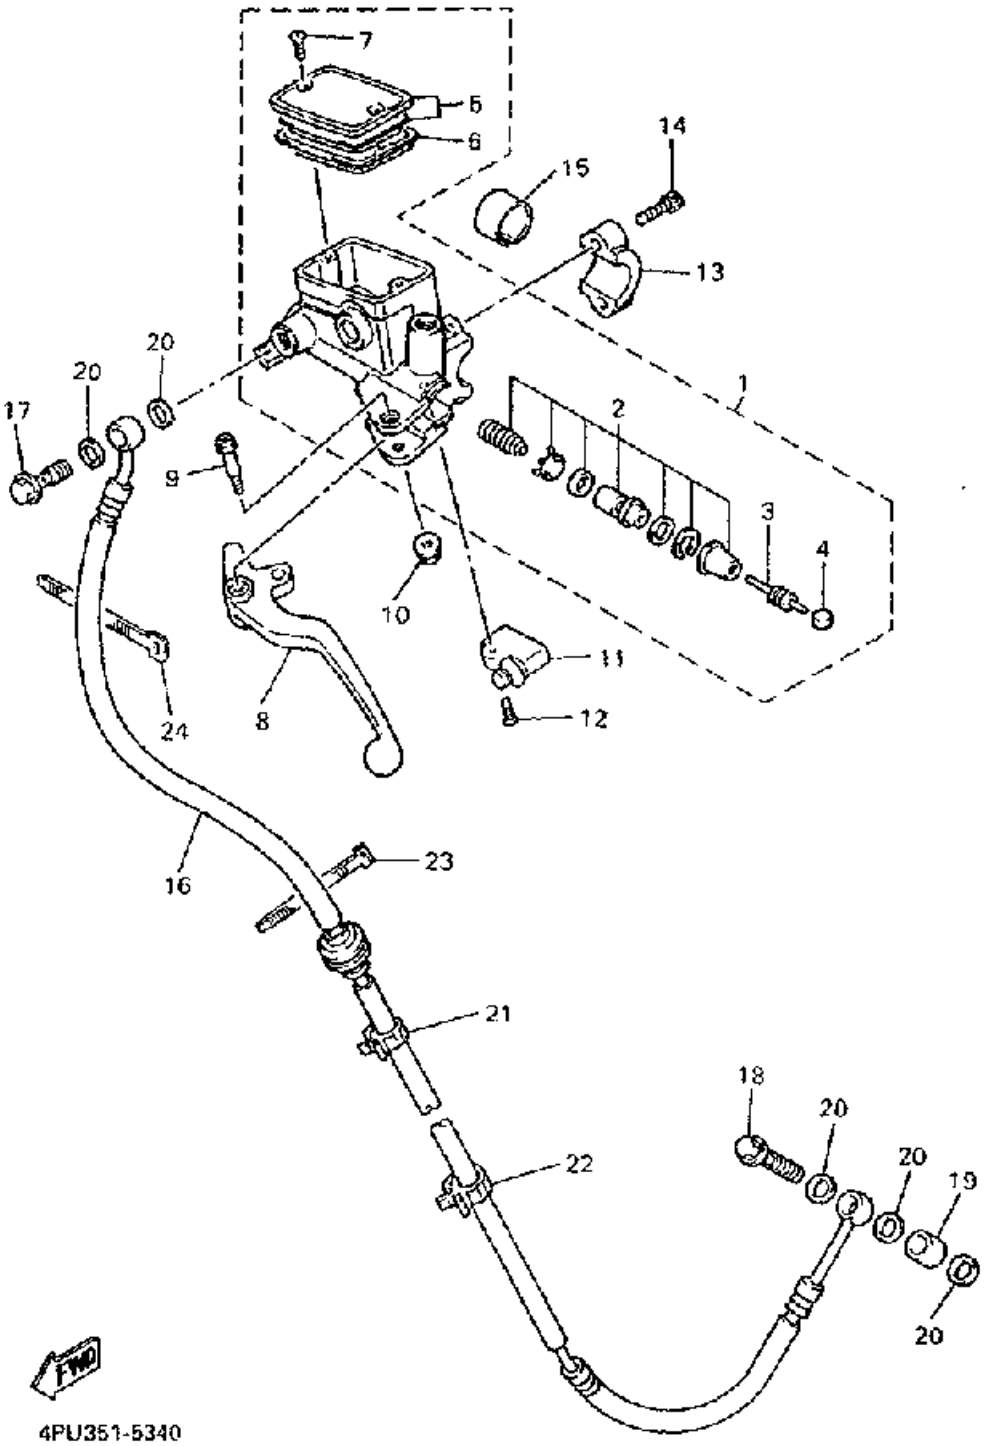


Ref No	Part No	Description
01	4KG-W2645-00-00	Master Cylinder Sub Assy
02	3GM-W0099-00-00	• . Cylinder Kit, Master (clutch)
03	3GM-26464-00-00	• . Rod, Push
04	3GM-26455-00-00	• . Bush
05	4HM-W2585-00-00	• . Reservoir Cap Set
06	4HM-25854-00-00	• . Diaphragm, Reservoir
07	98707-04012-00	• . Screw, Flat Head
08	4PU-83912-00-00	Lever 1
09	3FV-2589F-00-00	Bolt, Lever
10	95706-06500-00	Nut, Flange
11	3GM-83980-00-00	Front Stop Switch Assy
13	4KG-25867-00-00	Bracket, Master Cylinder
14	91317-06020-00	Bolt
15	90387-22591-00	Collar
16	4KG-26470-00-00	Hose, Clutch
17	90401-10159-00	Bolt, Union
18	90401-10160-00	Bolt, Union
19	90387-1005B-00	Collar
20	90201-10118-00	Washer, Plate
21	90464-10190-00	Clamp
22	90464-15192-00	Clamp
23	12R-82591-00-00	Band
24	437-83936-01-00	Band, Switch Cord

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

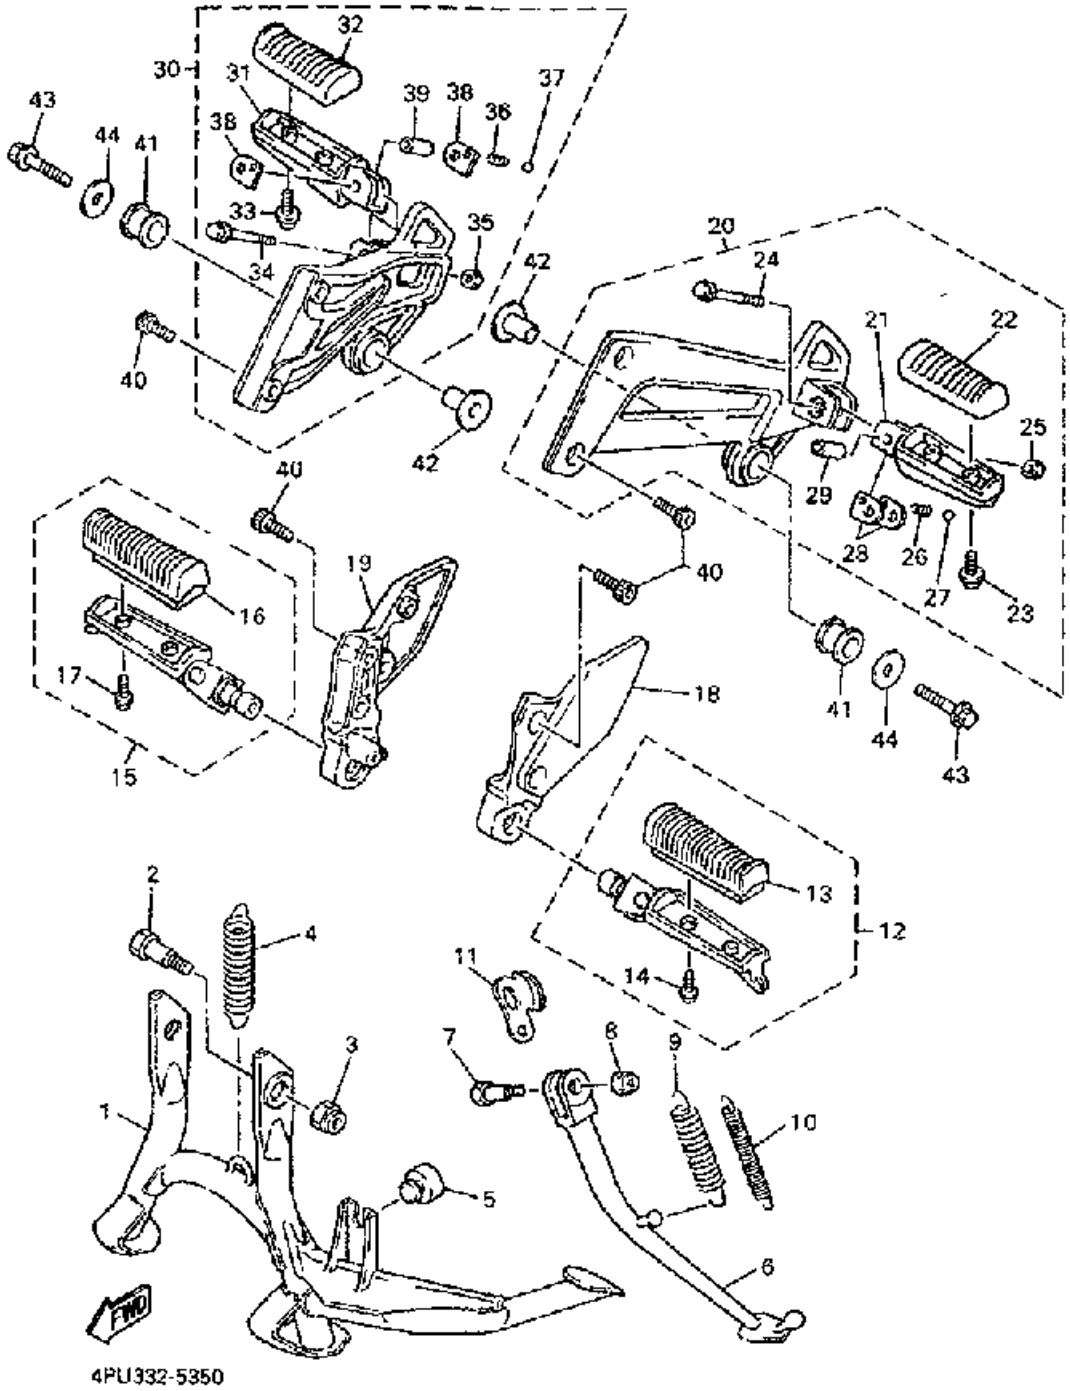

Ref No	Part No	Description
01	4KG-27111-00-00	Stand, Main
02	90109-101E6-00	Bolt
03	90185-10091-00	Nut, Self-locking
04	90506-45278-00	Spring, Tension
05	116-27114-00-00	Stopper, Main Stand
06	4KG-27311-01-00	Stand, Side
07	90109-104E6-00	Bolt
08	90185-10037-00	Nut, Self-locking
09	90506-26225-00	Spring, Tension
10	90506-18168-00	Spring, Tension
11	4FM-27315-00-00	Link, Side Stand
12	4KG-27410-00-00	Front Footrest Assy (left)
13	4BP-27413-00-00	• . Cover, Footrest
14	90159-05122-00	• . Screw, With Washer
15	4KG-27420-00-00	Front Footrest Assy (right)
16	4BP-27413-00-00	• . Cover, Footrest
17	90159-05122-00	• . Screw, With Washer
18	4KG-27442-01-00	Bracket 2
19	4KG-27443-01-00	Bracket 3
20	4KG-27430-01-00	Rear Footrest Assy 1
21	4DN-27431-00-00	• . Footrest, Rear 1
22	4BP-27413-00-00	• . Cover, Footrest
23	90159-05122-00	• . Screw, With Washer
24	91317-06045-00	• . Bolt
25	95617-06100-00	• . Nut, U
26	90501-12743-00	• . Spring, Compression
27	93501-04011-00	• . Ball
28	1HX-27437-00-00	• . Washer, Special
29	90387-064H8-00	• . Collar
30	4KG-27440-01-00	Rear Footrest Assy 2
31	4DN-27441-00-00	• . Footrest, Rear 2
32	4BP-27413-00-00	• . Cover, Footrest
33	90159-05122-00	• . Screw, With Washer
34	91317-06045-00	• . Bolt
35	95617-06100-00	• . Nut, U
36	90501-12743-00	• . Spring, Compression
37	93501-04011-00	• . Ball
38	1HX-27437-00-00	• . Washer, Special
39	90387-064H8-00	• . Collar
40	90109-081G0-00	Bolt
41	36Y-27424-00-00	Damper, Footrest 2
42	90387-10636-00	Collar
43	90109-100G0-00	Bolt
44	90201-10669-00	Washer, Plate


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

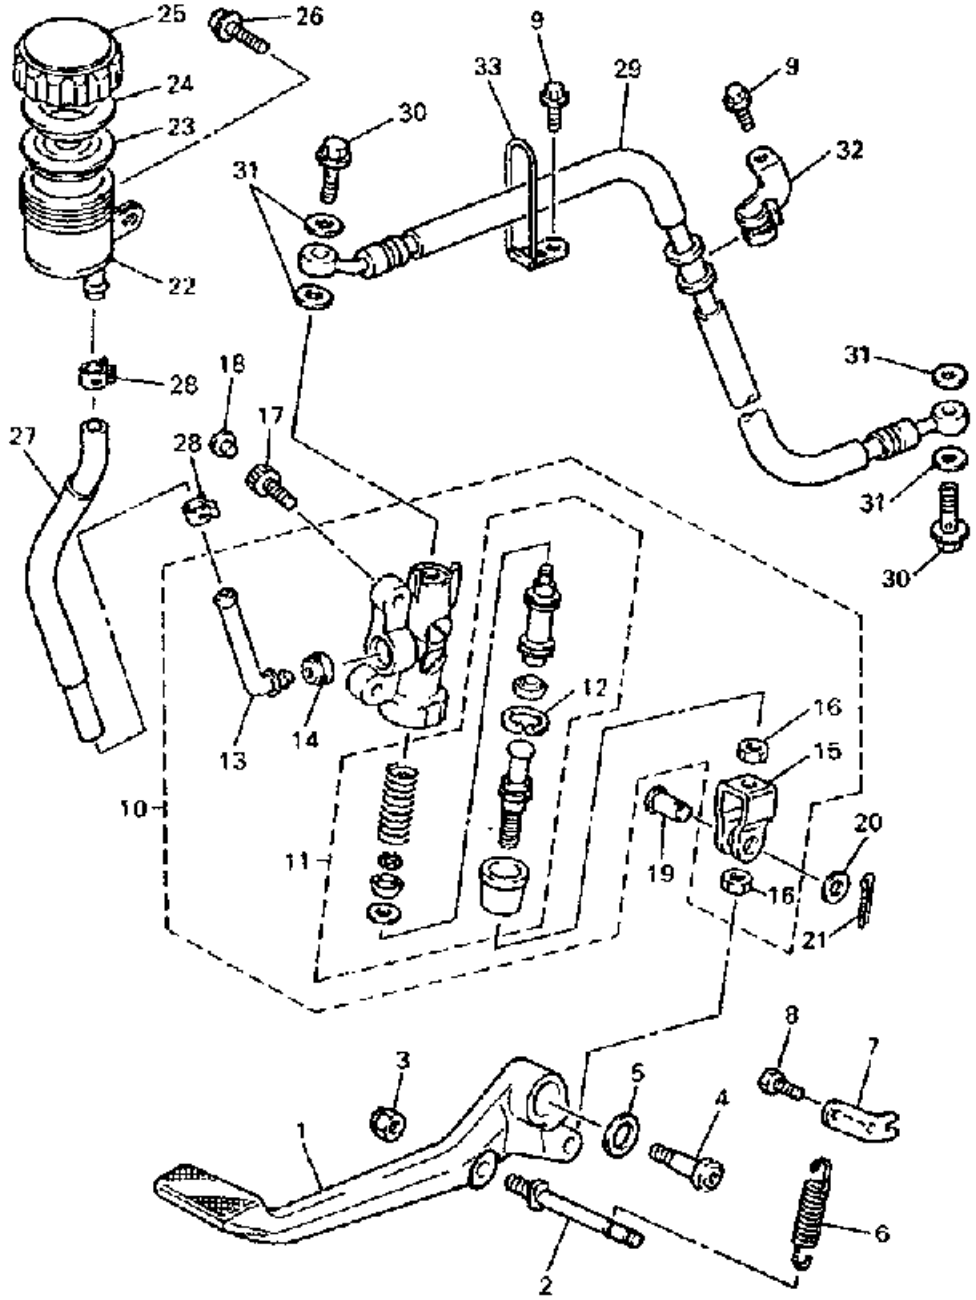

4KG010-4360


Ref No	Part No	Description
01	4KG-27211-00-00	Pedal, Brake
02	4KG-27813-00-00	Pin, Pedal Crank
03	95607-08100-00	Nut, U
04	90109-103A9-00	Bolt
05	90206-17084-00	Washer, Wave
06	90508-20737-00	Spring, Torsion
07	4KG-27432-00-00	Bracket 1
08	97007-06012-00	Bolt
09	95027-06010-00	Bolt, Flange
10	4BP-2583V-00-00	Rr. Master Cylinder Assy.
11	4BP-W0042-50-00	• . Cylinder Kit, Master
12	3LN-2585G-00-00	•• .. Circlip
13	4BP-2582A-00-00	• . Joint
14	4BP-2585F-00-00	• . O-ring
15	4BP-27222-00-00	• . Joint
16	95303-08700-00	• . Nut
17	91314-08020-00	Bolt
18	90338-08163-00	Plug
19	90240-08124-00	Pin, Clevis
20	90201-08083-00	Washer, Plate
21	91490-20025-00	Pin, Cotter
22	31A-25894-01-00	Tank, Reservoir
23	360-25854-00-00	Diaphragm, Reservoir
24	2GU-25855-00-00	Bush,diaphragm
25	2KF-25852-50-00	Cap, Reservoir
26	90159-06056-00	Screw, With Washer
27	4KG-25895-00-00	Hose, Reservoir
28	90467-14057-00	Clip
29	4KG-2581K-00-00	Hose, Brake 5
30	90401-10159-00	Bolt, Union
31	90201-10118-00	Washer, Plate
32	4FM-25876-00-00	Holder, Brake Hose 2
33	4BH-25886-00-00	Holder, Brake Hose

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

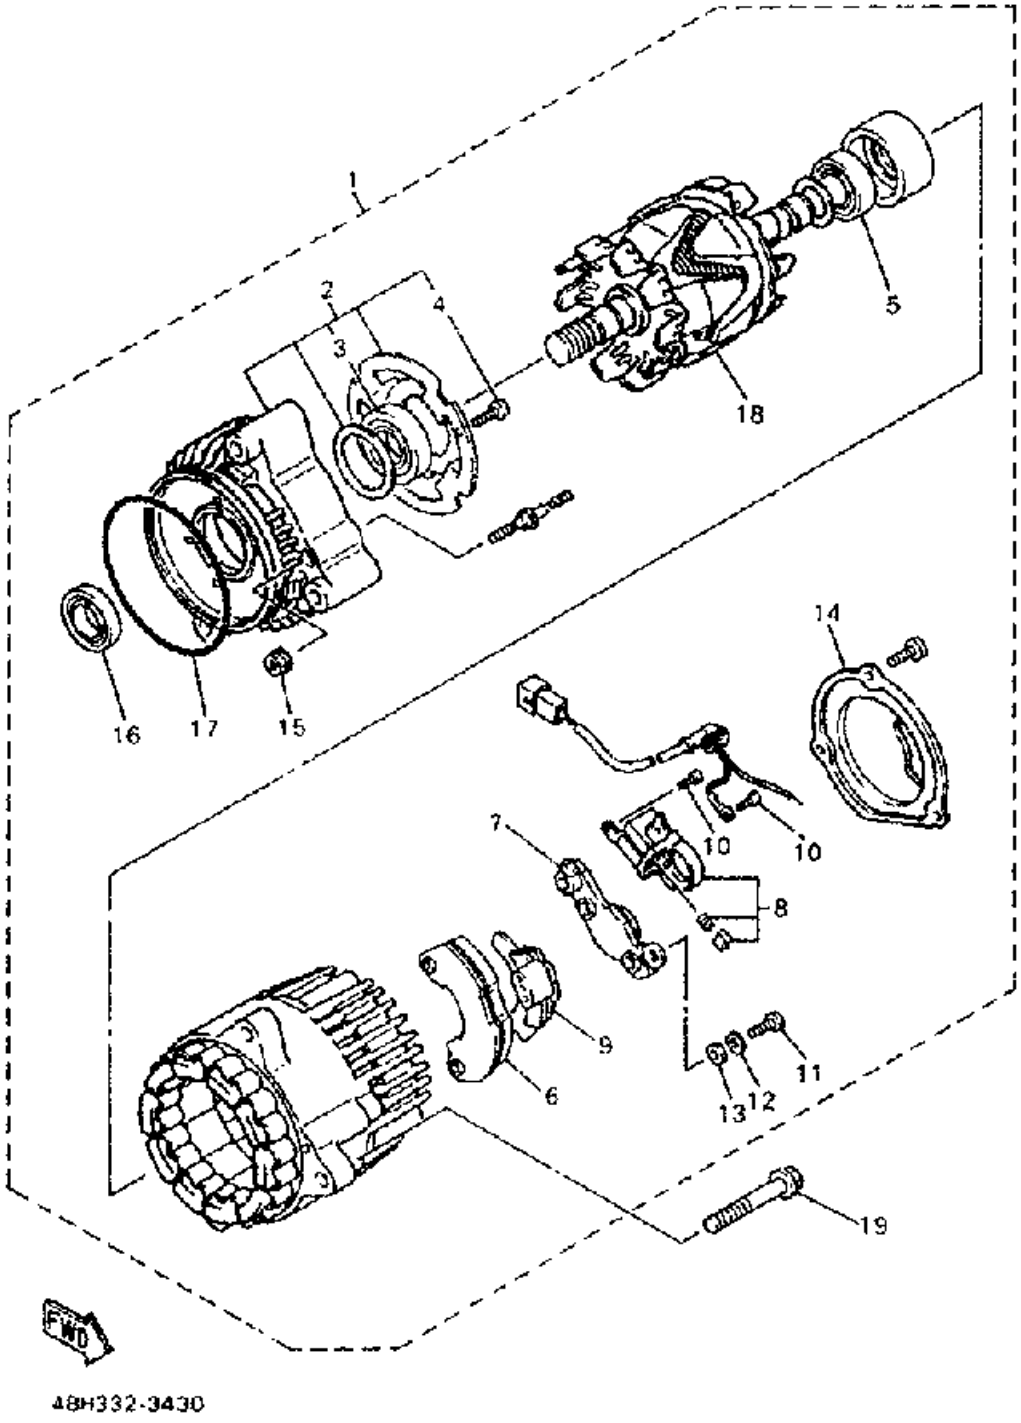

Ref No	Part No	Description
01	4KG-81600-00-00	A.c. Generator Assy
02	4KG-81634-00-00	• . Head Wire Assy
03	4BH-81643-00-00	•• .. Bearing
04	4BH-81645-00-00	•• .. Screw
05	4BH-81643-10-00	• . Bearing
06	4BH-81970-00-00	• . Rectifier Assy
07	36Y-81910-50-00	• . Voltage Regulator Assy
08	3FV-81619-00-00	• . Brush Holder Assy
09	4BH-81972-00-00	• . Cover, Rectifier
10	3FV-81645-00-00	• . Screw
11	98507-05018-00	• . Screw, Pan Head
12	92901-05100-00	• . Washer, Spring
13	92990-05600-00	• . Washer, Plate
14	4BH-81604-00-00	• . Cover Assy
15	95707-05500-00	• . Nut, Flange
16	36Y-81648-50-00	• . Screw 4
17	2KT-81642-50-00	• . O-ring
18	4BH-81660-00-00	• . Field Coil Assy
19	95817-08065-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

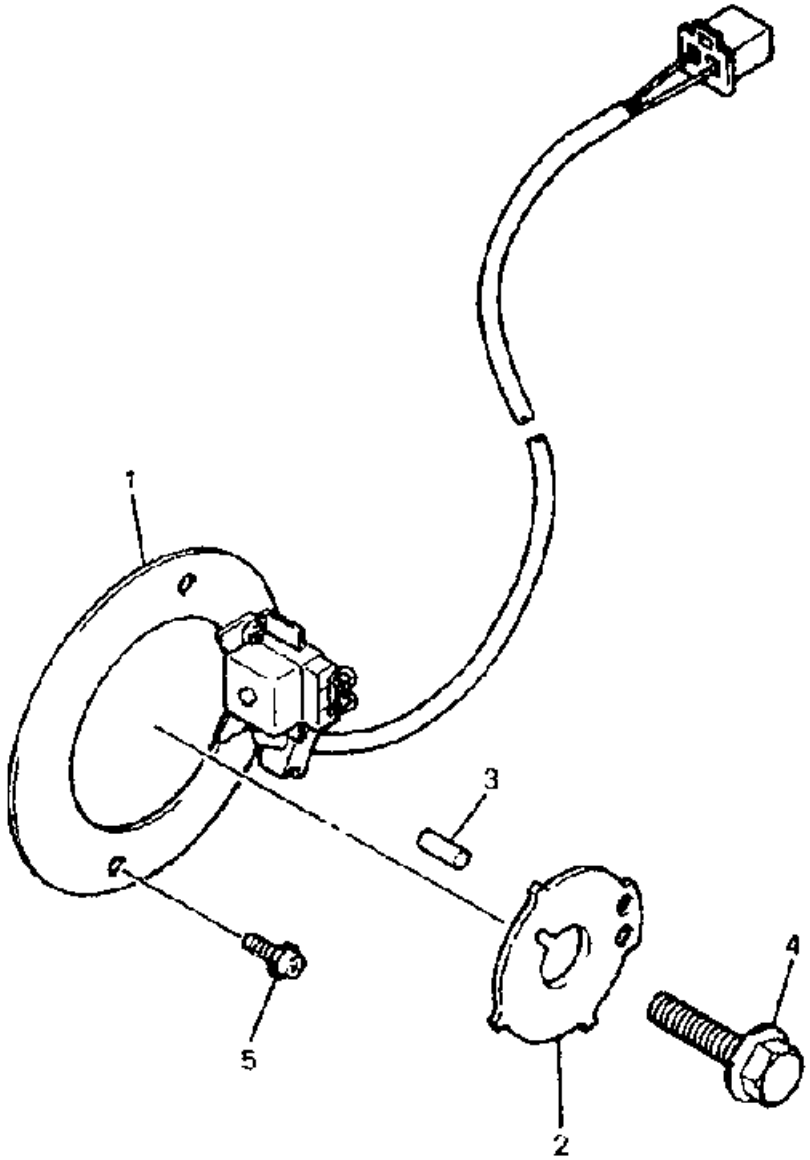


Ref No	Part No	Description
01	4KG-81671-00-00	Base, Pickup
02	4KG-81673-00-00	Rotor
03	93604-08071-00	Pin, Dowel
04	90105-10445-00	Bolt, Washer Based
05	90159-06107-00	Screw, With Washer

FWD


4KG010-4380


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

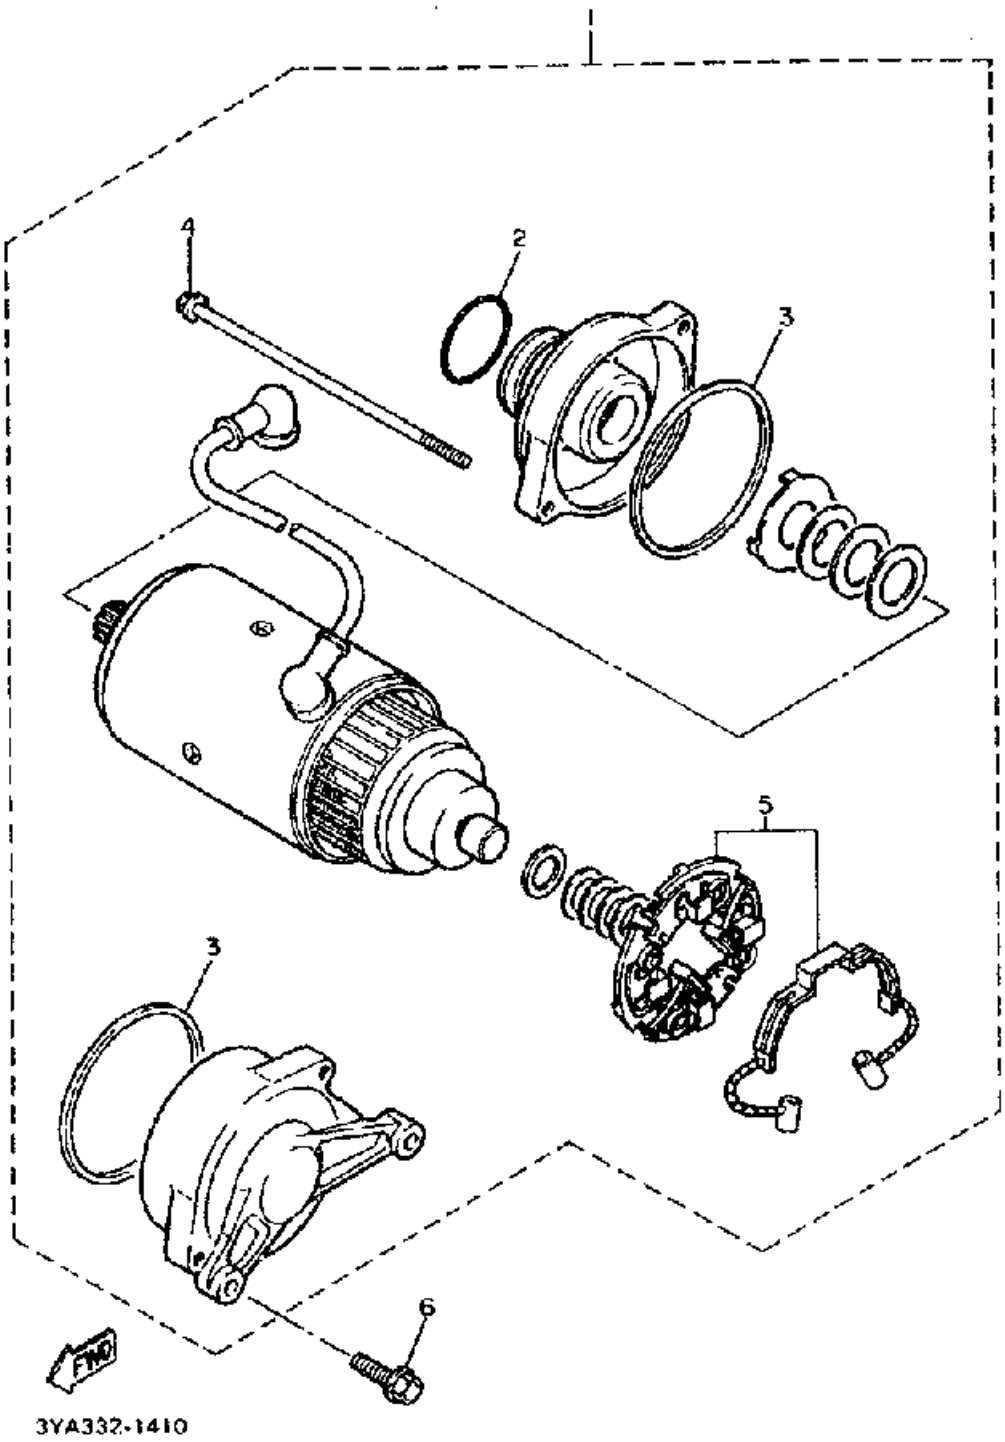

Ref No	Part No	Description
01	4KG-81800-00-00	Starting Motor Assy
02	26H-81847-00-00	• . O-ring
03	11H-81844-00-00	• . Gasket
04	3AJ-81826-00-00	• . Bolt
05	3AJ-81801-00-00	• . Brush Set
06	95027-06025-00	Bolt, Flange


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

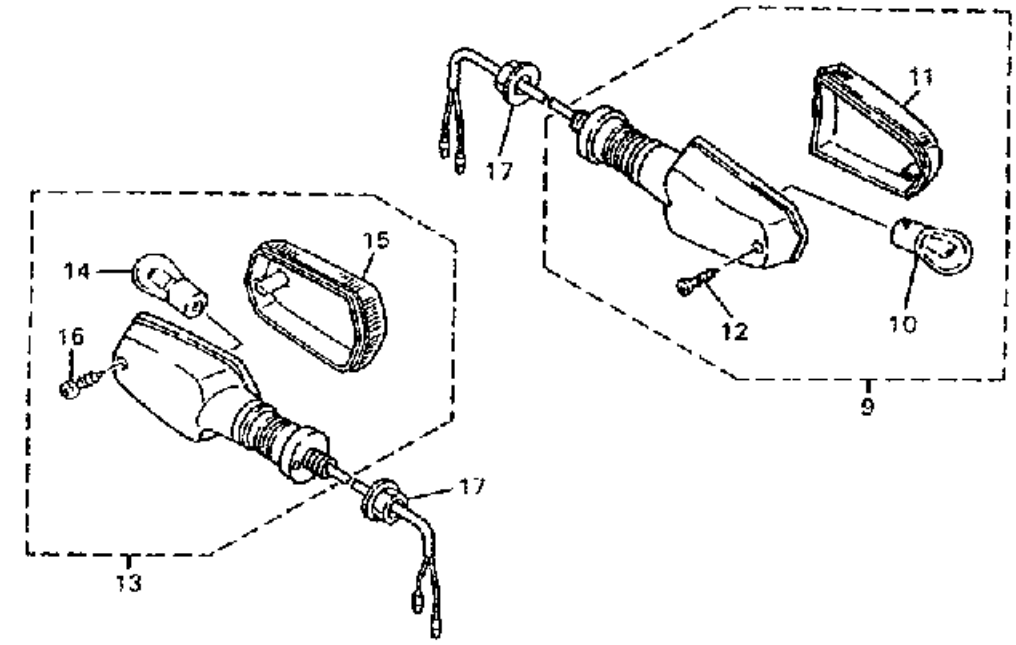

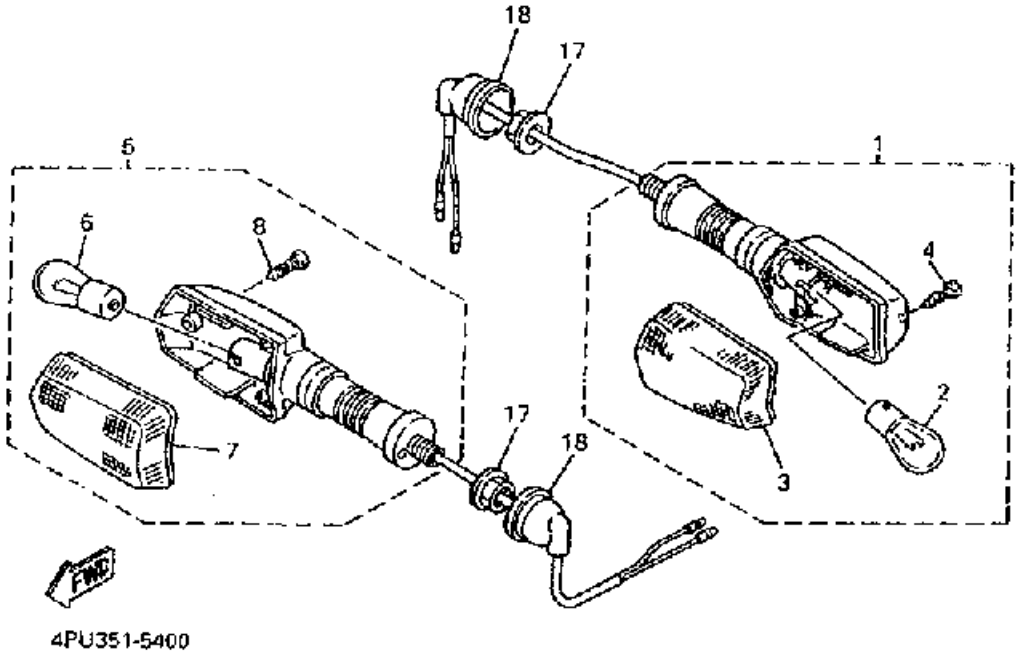


Ref No	Part No	Description
01	4PU-83310-00-00	Front Flasher Light Assy 1
02	306-83311-40-00	• . Bulb, Flasher (12v-21w)
03	51L-83332-01-00	• . Lens, Flasher
04	97780-40120-00	• . Screw, Tapping
05	4PU-83320-00-00	Front Flasher Light Assy 2
06	306-83311-40-00	• . Bulb, Flasher (12v-21w)
07	51L-83342-01-00	• . Lens, Flasher 2
08	97780-40120-00	• . Screw, Tapping
09	4PU-83330-00-00	Rear Flasher Light Assy 1
10	306-83311-40-00	• . Bulb, Flasher (12v-21w)
11	1VU-83332-00-00	• . Lens, Flasher
12	97780-40120-00	• . Screw, Tapping
13	4PU-83340-00-00	Flasher Light Assy 2
14	306-83311-40-00	• . Bulb, Flasher (12v-21w)
15	1VU-83342-00-00	• . Lens, Flasher 2
16	97780-40120-00	• . Screw, Tapping
17	95707-12500-00	Nut, Flange
18	18G-83365-00-00	Cap

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

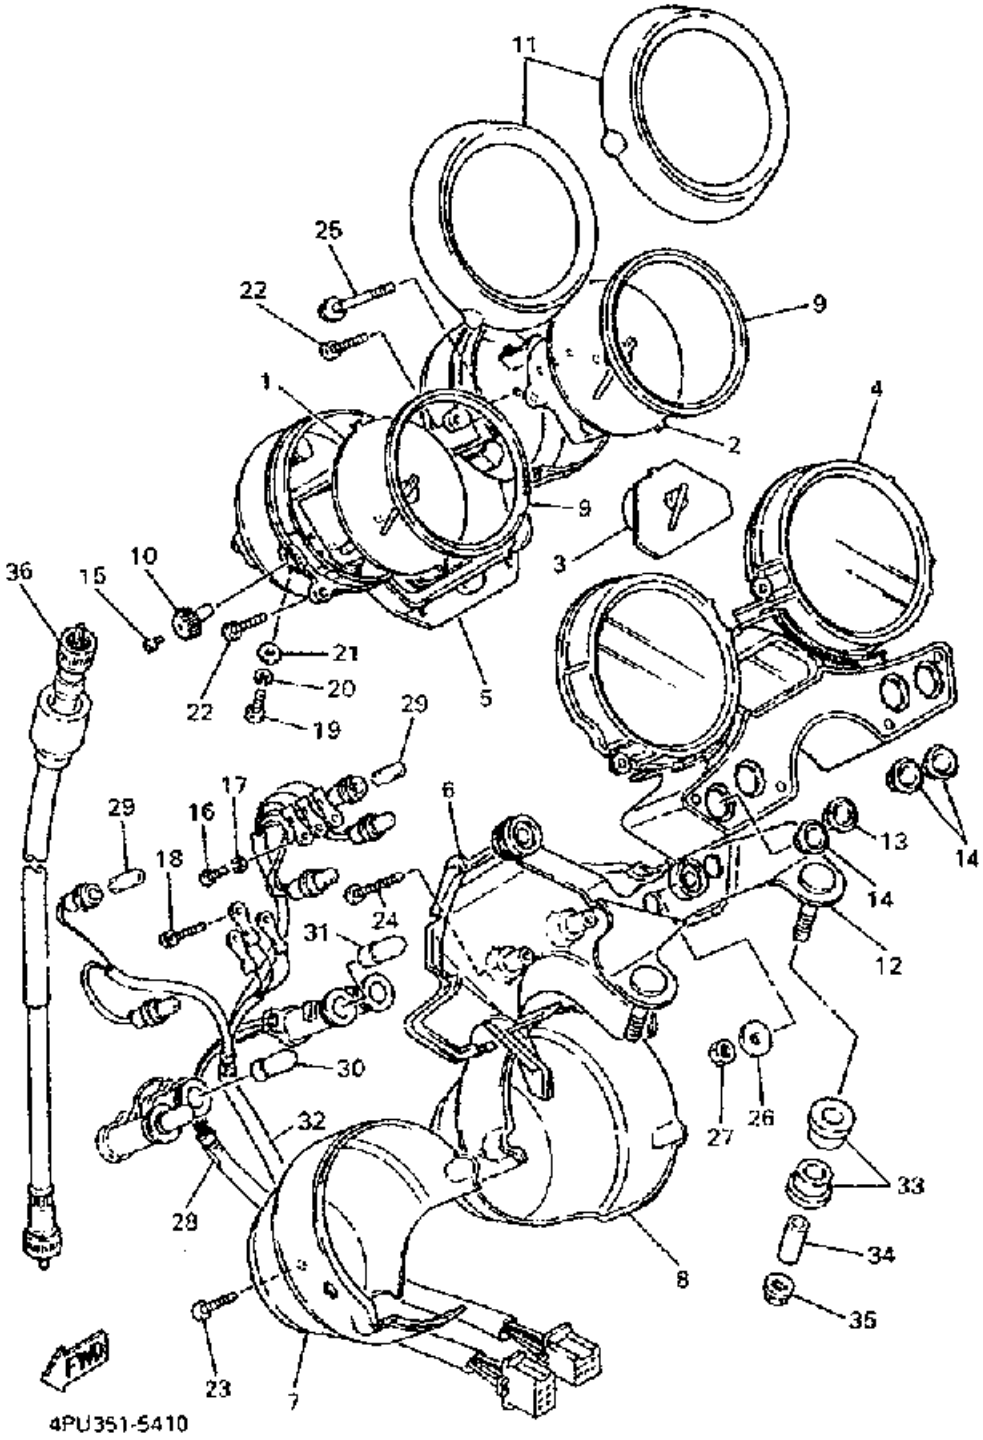


Ref No	Part No	Description
01	4PU-83570-00-00	Speedometer Assy
02	4KG-83540-00-00	Tachometer Assy
03	4HM-85750-00-00	Fuel Meter Assy
04	4KG-8353E-00-00	Case, Meter Upper
05	4PU-8353F-00-00	Case, Meter Lower
06	4HM-83559-00-00	Cover, Meter
07	4HM-83507-00-00	Cover, Speedometer
08	4HM-83508-00-00	Cover, Tachometer
09	4HM-8353L-00-00	Reflector
10	1AE-83578-00-00	Knob, Trip Meter
11	4HM-83506-00-00	Ring, Meter Cover
12	4KG-83519-00-00	Bracket, Meter
13	4HM-83532-20-00	Lens, Pilot
14	4HM-83532-30-00	Lens, Pilot
15	90157-02031-00	Screw, Pan Head
16	98507-03010-00	Screw, Pan Head
17	92990-03100-00	Washer, Spring
18	90159-03102-00	Screw, With Washer
19	98507-04030-00	Screw, Pan Head
20	92907-04100-00	Washer, Spring
21	92907-04600-00	Washer
22	97707-40516-00	Screw, Tapping
23	97707-40014-00	Screw, Tapping
24	97707-40030-00	Screw, Tapping
25	90167-04057-00	Screw, Tapping
26	90201-052E2-00	Washer, Plate
27	95307-05600-00	Nut
28	4KG-83509-00-00	Socket Cord Assy
29	2GV-83517-00-00	Bulb (12v-1.7w, T6.5)
30	4G1-84744-00-00	Bulb (12v-3.4w)
31	3GM-83517-00-00	Bulb (12v-1.7w)
32	4PU-83520-00-00	Socket Cord Assy
33	1JK-83541-00-00	Damper
34	90387-06676-00	Collar
35	95707-06500-00	Nut, Flange
36	4KG-83550-00-00	Speedometer Cable Assy


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

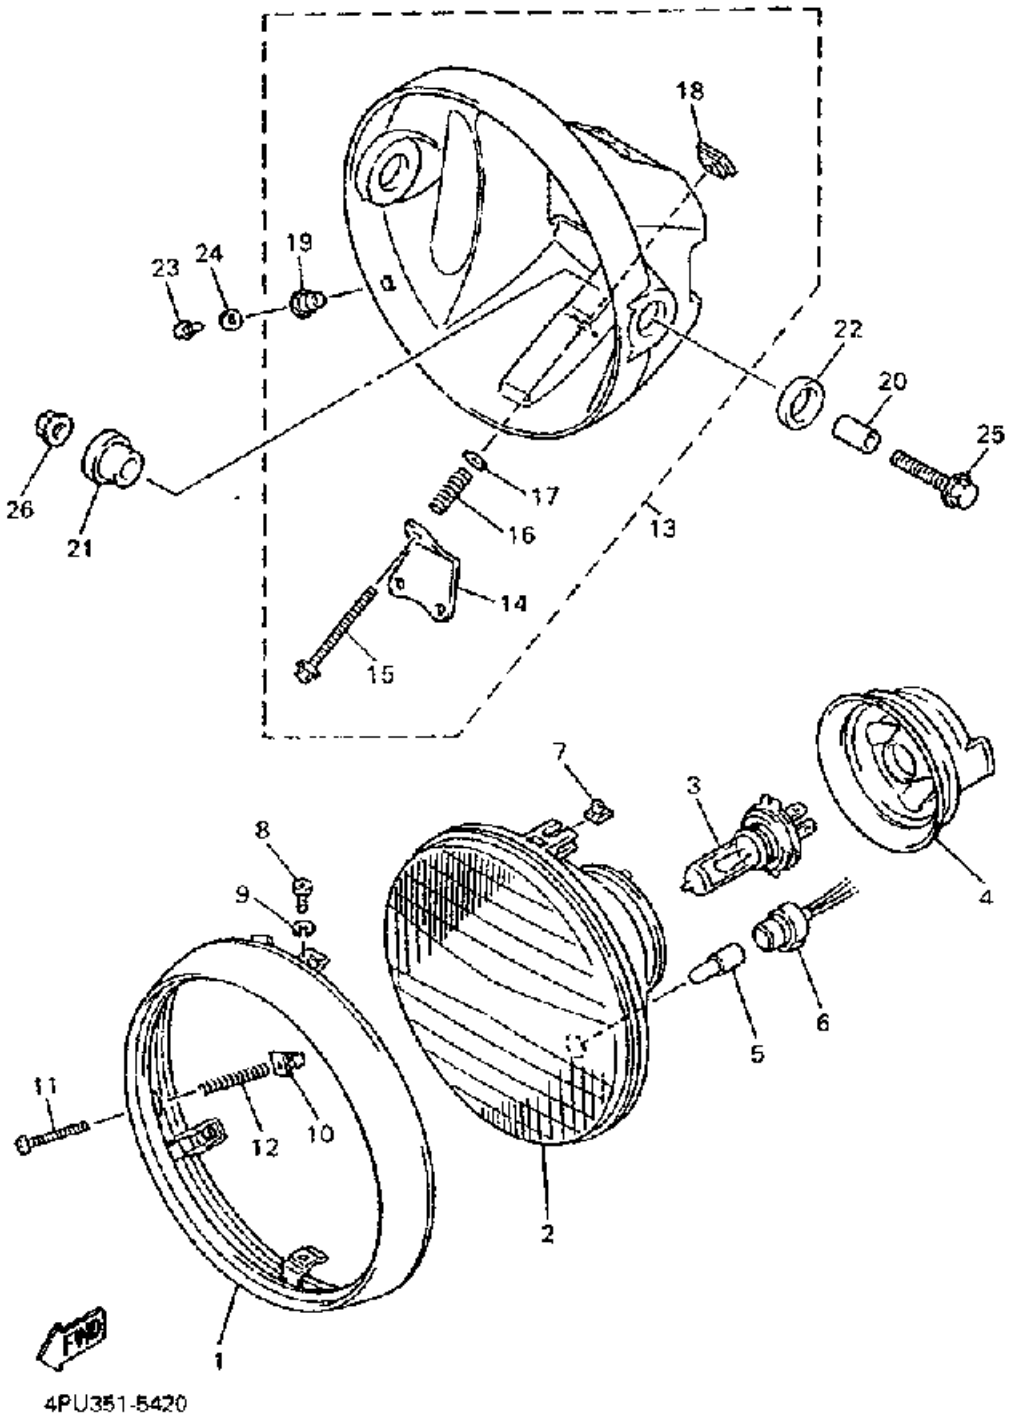

Ref No	Part No	Description
01	4KG-84315-00-00	Rim, Headlight
02	4PU-84320-00-00	Lens Assy
03	2F9-84314-00-00	Bulb, Headlight (12v-60/55w)
04	4KG-84397-00-00	Cover, Socket
05	4E2-84347-00-00	Bulb (12v-4w)
06	4PU-84346-00-00	Socket, Pilot Light
07	4KG-84334-00-00	Nut, Adjusting
08	4KG-84365-00-00	Screw
09	92995-06100-00	Washer, Spring
10	47J-84334-00-00	Nut, Adjusting
11	4KG-84331-00-00	Screw, Rim Adjusting
12	4KG-84332-00-00	Spring, Screw
13	4KG-84330-00-00	Body Assy
14	4KG-84318-00-00	• . Stay, Headlight 1
15	4KG-8433E-00-00	• . Screw, Adjusting
16	4KG-84335-00-00	• . Spring
17	4KG-84344-00-00	• . Washer, Plain
18	4KG-84326-00-00	• . Nut
19	5G2-84333-00-00	• . Screw
20	90387-0804N-00	Collar
21	4KG-84366-00-00	Damper, Headlight 1
22	4KG-84367-00-00	Damper, Headlight 2
23	98507-05016-00	Screw, Pan Head
24	92907-05600-00	Washer, Plate
25	95024-08040-00	Bolt, Flange
26	95707-08500-00	Nut, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

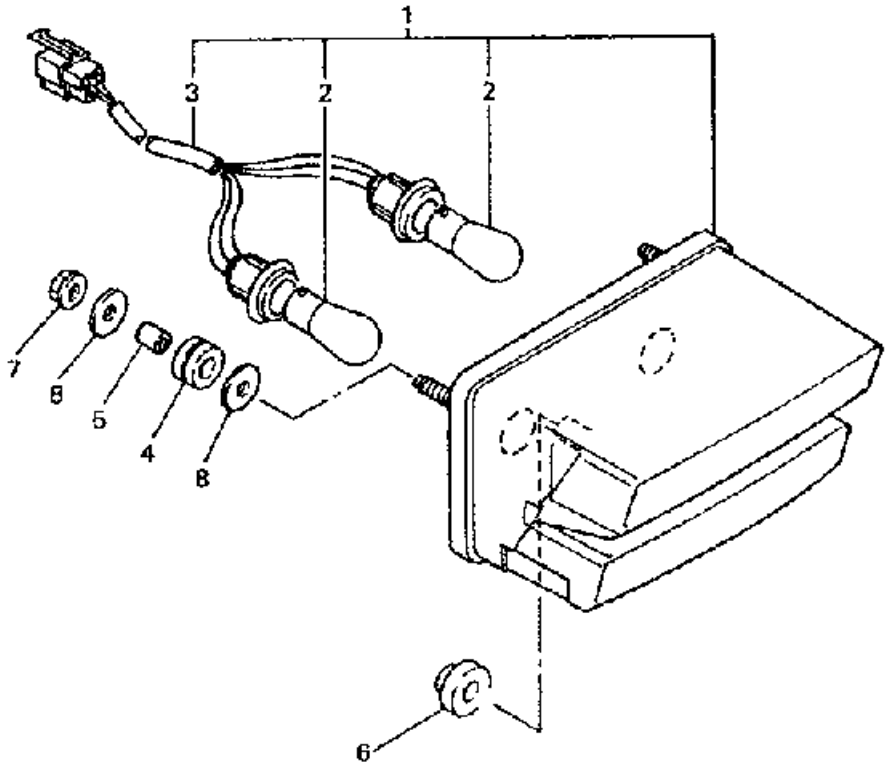

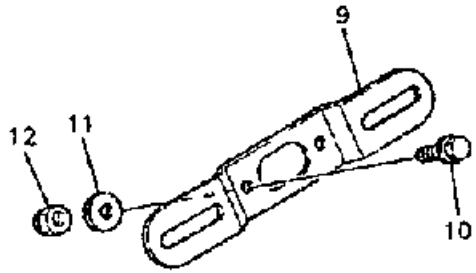


FWD

4KG010-4430

Ref No	Part No	Description
01	4PU-84710-00-00	Taillight Unit Assy
02	31L-84714-00-00	• . Bulb (12v-21/5w)
03	4HM-84735-00-00	• . Cord Assy
04	90480-18276-00	Grommet
05	90387-0600V-00	Collar
06	90480-10509-00	Grommet
07	95707-06500-00	Nut, Flange
08	90201-063J2-00	Washer, Plate
09	3Y7-84751-00-00	Bracket, License
10	95027-06016-00	Bolt, Flange
11	90201-06059-00	Washer, Plate
12	95617-06100-00	Nut, U


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

ELEKTRISCHE AUSRUSTUNG 1

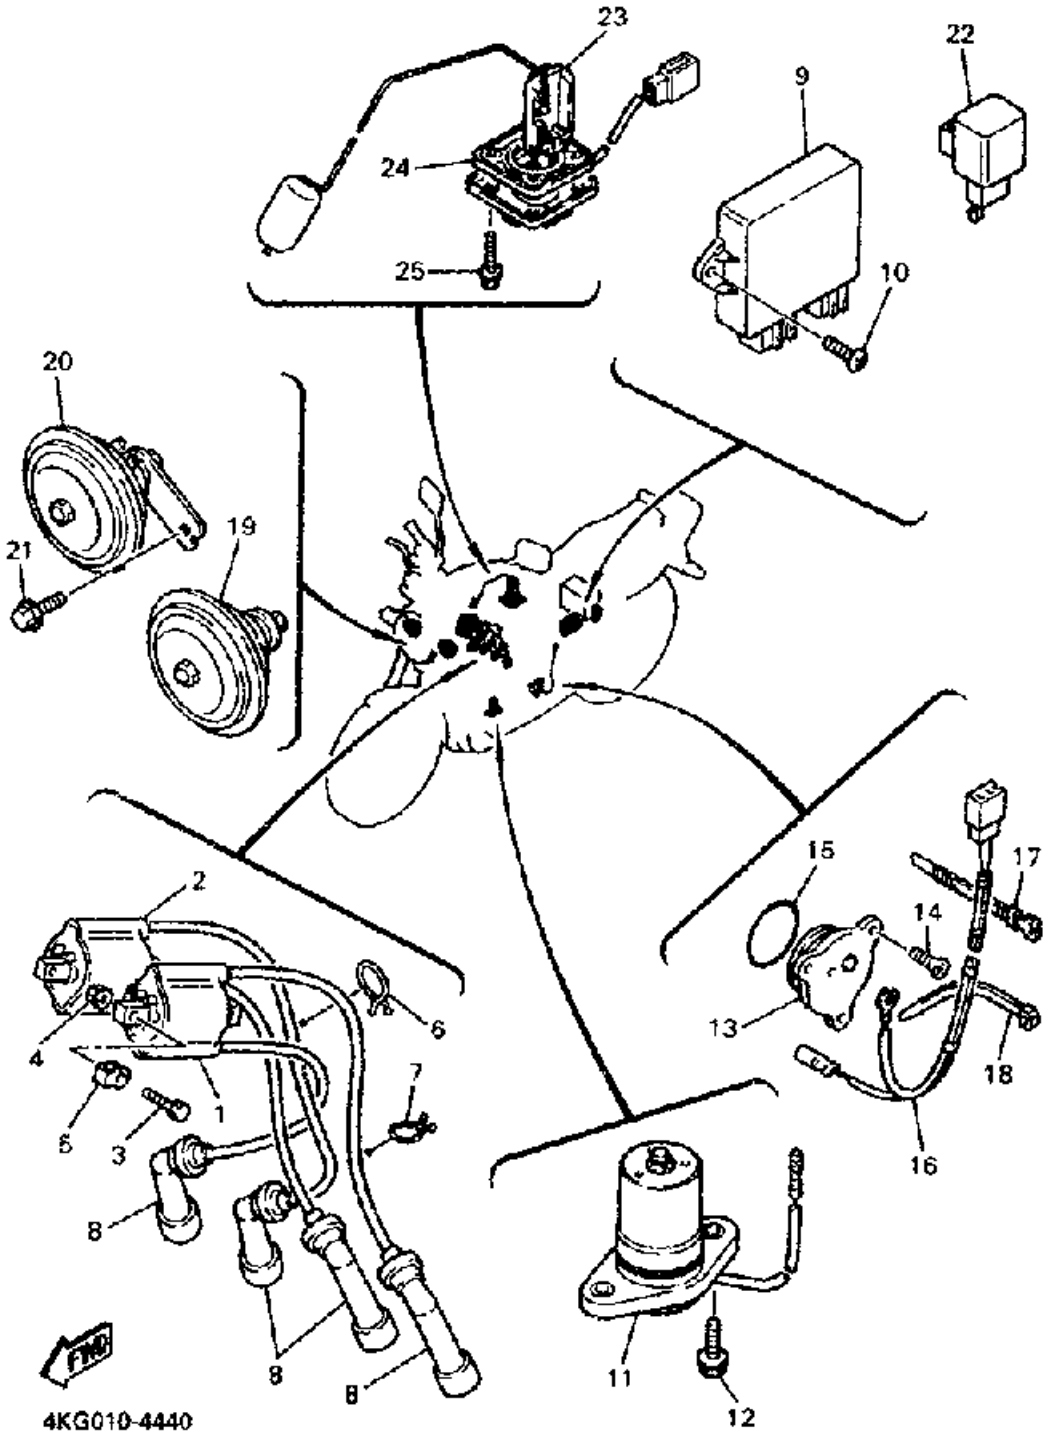

Ref No	Part No	Description
01	4KG-82310-00-00	Ignition Coil Assy
02	4KG-82320-00-00	Ignition Coil Assy
03	97080-06070-00	Bolt
04	95707-06500-00	Nut, Flange
05	4BR-82317-00-00	Damper, Ignition Coil
06	90464-30040-00	Clamp
07	90464-16039-00	Clamp
08	1UY-82370-20-00	Plug Cap Assy
09	4PU-82305-00-00	Ignitor Unit Assy
10	98907-06016-00	Screw, Bind
11	5G2-85720-00-00	Oil Level Gauge Assy
12	95027-06016-00	Bolt, Flange
13	1L9-82540-00-00	Neutral Switch Assy
14	98707-05012-00	Screw, Flat Head
15	93210-29196-00	O-ring
16	4KG-82509-00-00	Wire, Sub Lead
17	80L-26397-00-00	Band
18	90464-13073-00	Clamp
19	4KG-83371-01-00	Horn
20	4KG-83371-11-00	Horn
21	95817-06012-00	Bolt, Flange
22	3GM-83350-00-00	Flasher Relay Assy
23	4KG-85752-00-00	Sender Unit Assy, Fuel Meter
24	5G3-85753-00-00	Gasket, Sender Unit
25	90119-05071-00	Bolt, With Washer

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

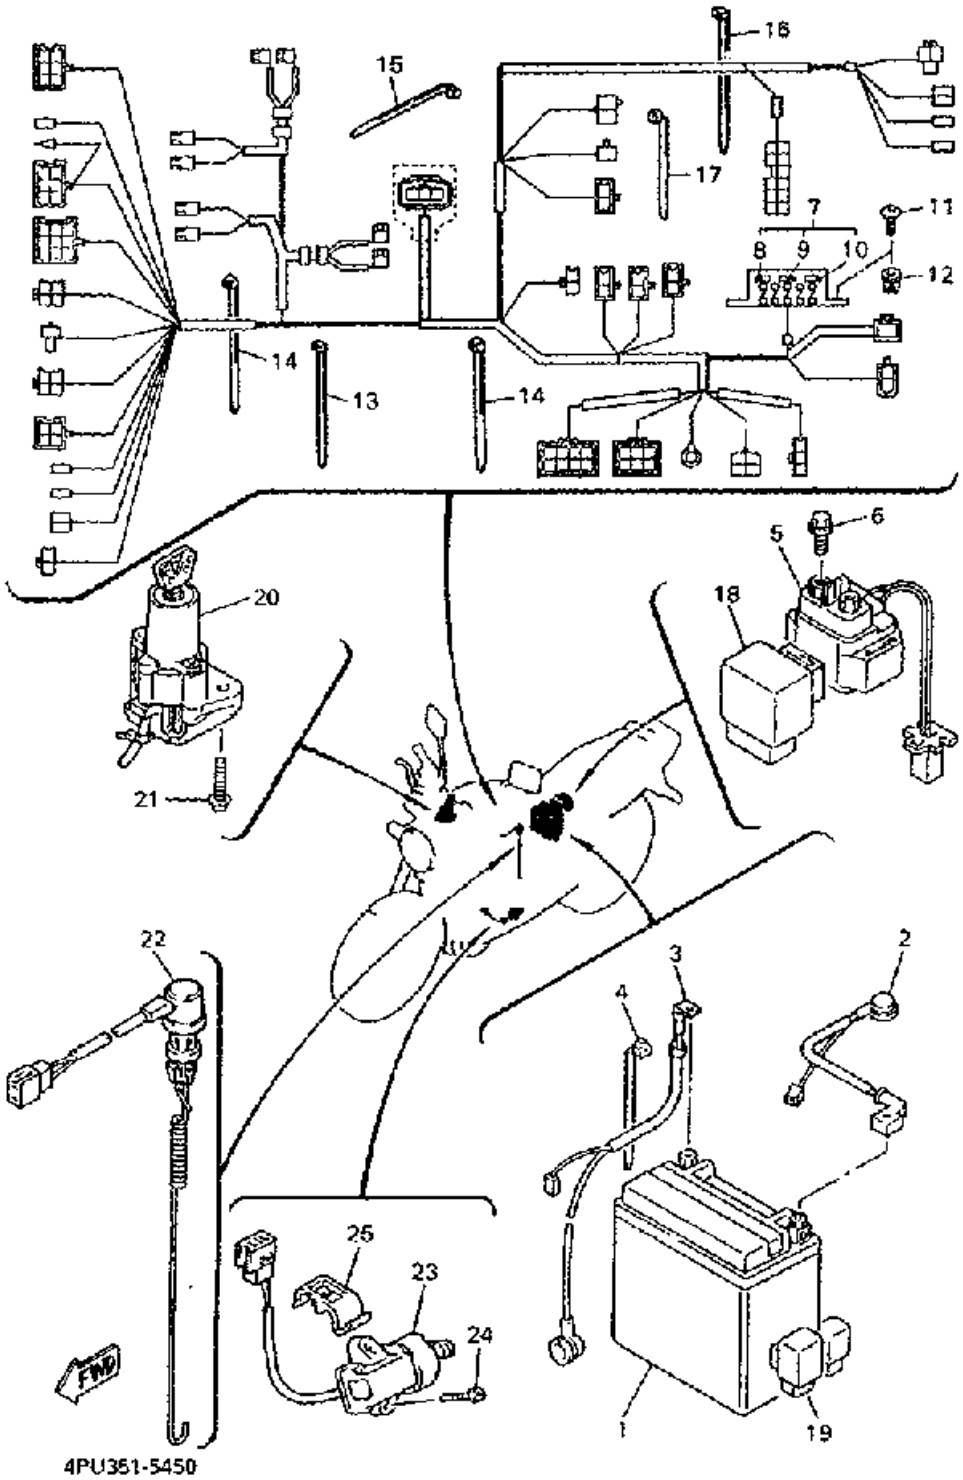

Ref No	Part No	Description
01	3XW-82100-00-00	Battery Assy (ytx14-bs)
02	4KG-82115-00-00	Wire, Plus Lead
03	4KG-82116-00-00	Wire, Minus Lead
04	90464-10373-00	Clamp
05	4KG-81940-00-00	Starter Relay Assy
06	95027-06008-00	Bolt, Flange
07	4PU-82590-00-00	Wire Harness Assy
08	1AE-82151-00-00	• . Fuse (30a-bl)
09	36Y-82151-00-00	• . Fuse (15a-bl)
10	2KW-82151-00-00	• . Fuse (7.5a-bl)
11	97707-60016-00	Screw, Tapping
12	90338-08226-00	Plug
13	12R-82591-00-00	Band
14	90465-13355-00	Clamp
15	90464-13073-00	Clamp
16	90464-13080-00	Clamp
17	90464-13073-00	Clamp
18	4EP-81950-00-00	Relay Assy
19	4BH-8195A-00-00	Relay Assy
20	4PU-82501-00-00	Main Switch Steering Lock
21	90109-080G5-00	Bolt
22	3YF-82530-01-00	Stop Switch Assy
23	3LD-82566-90-00	Switch, Side Stand
24	90157-05079-00	Screw, Pan Head
25	90464-05187-00	Clamp

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.