
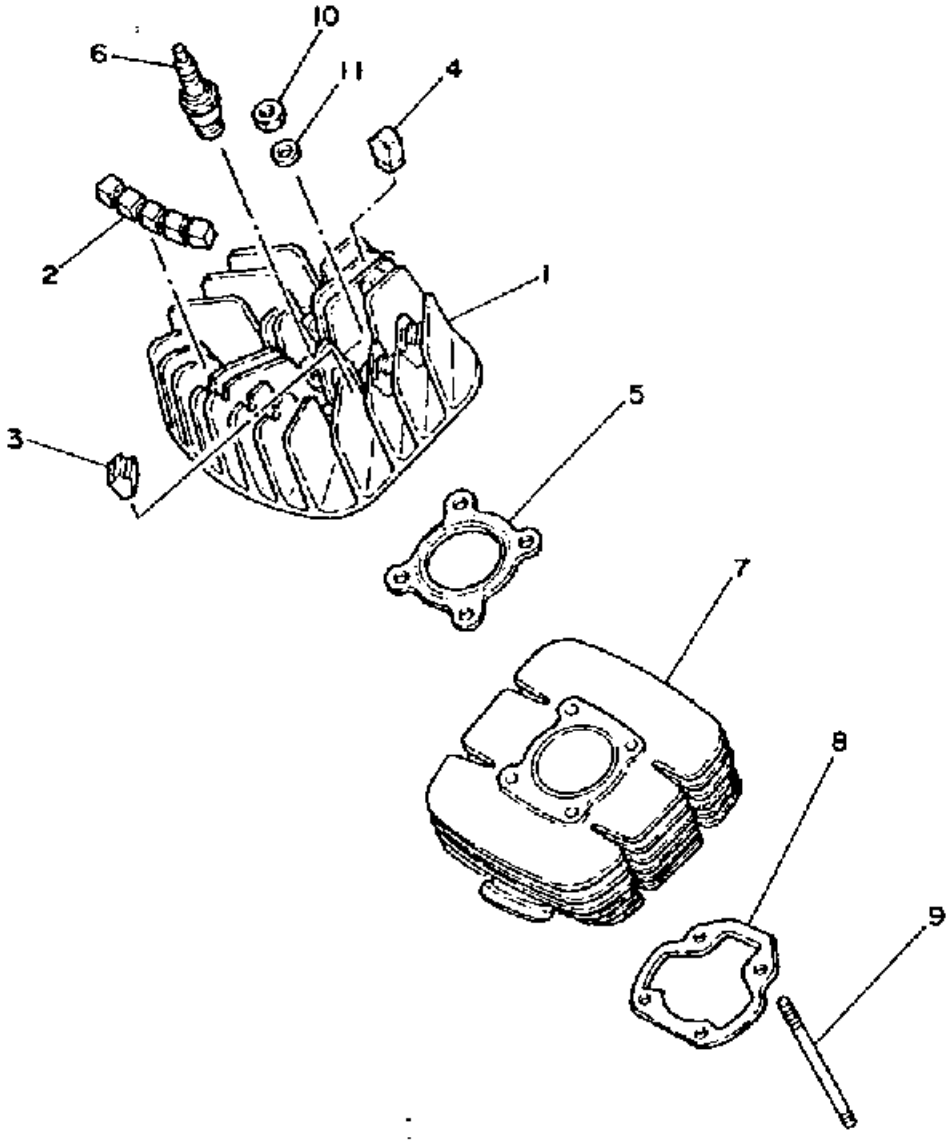



Ref No	Part No	Description
01	3HL-11111-00-00	Head, Cylinder 1
02	5G1-11161-00-00	Absorber 1
03	427-11161-00-00	Absorber 1
04	1T9-11161-00-00	Absorber 1
05	13N-11181-01-00	Gasket, Cylinder Head 1
06	94701-00110-00	Plug, Spark
07	3MN-11311-00-00	Cylinder 1
08	353-11351-00-00	Gasket, Cylinder
09	90116-06026-00	Bolt, Stud
10	95303-06600-00	Nut
11	92901-06200-00	Washer, Plain
12	353-17221-00-00	Gear, 2nd Wheel
13	353-17231-00-00	Gear, 3rd Wheel
14	353-17241-70-00	Gear, 4th Wheel
15	353-17251-70-00	Gear, 5th Wheel
16	93440-16089-00	Circlip
17	99009-13400-00	Circlip
18	93306-30301-00	Bearing
19	93102-17187-00	Oil Seal
20	90209-13817-00	Washer
21	1NN-E7461-00-00	Sprocket, Drive
22	1NN-E7461-00-00	Sprocket, Drive
23	90209-13185-00	Washer
24	99999-01529-00	
25	257-17219-00-00	Shim
26	90338-16029-00	Plug
27	97011-06010-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

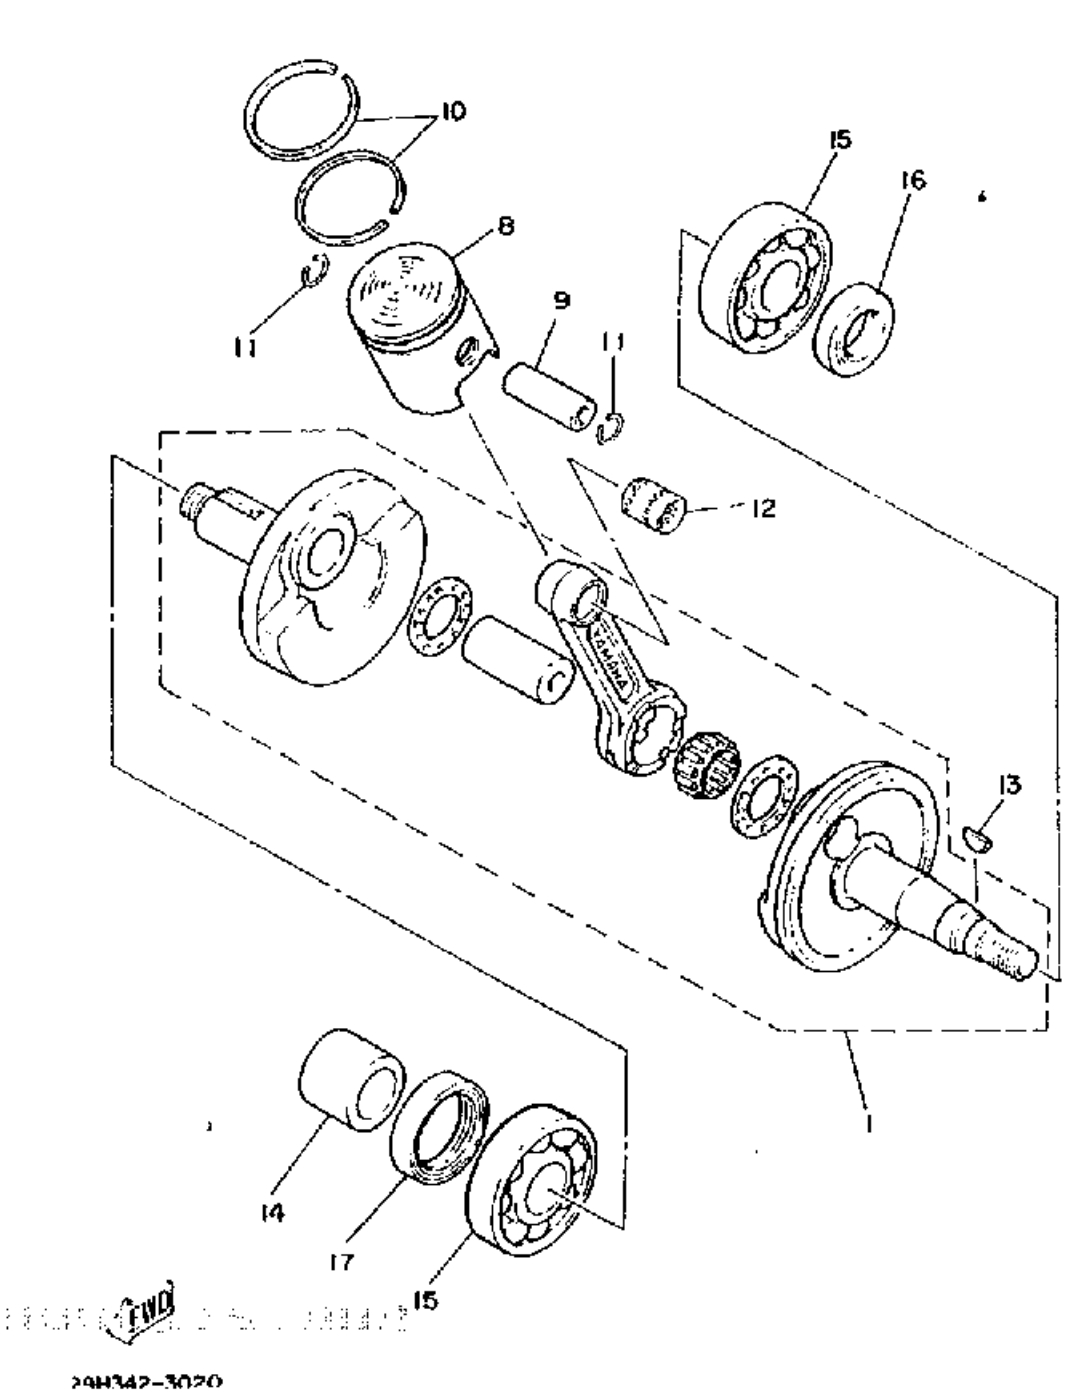


Ref No	Part No	Description
01	4U5-11400-00-00	Crankshaft Assy
02	2U2-11412-00-00	Crank 1
03	2U2-11422-00-00	Crank 2
04	3R1-11651-01-00	Rod, Connecting
05	93310-418TO-00	Bearing
06	257-11681-00-00	Pin, Crank 1
07	90209-18112-00	Washer
08	3T2-11631-01-97	Piston (std)
08	3T2-11635-01-00	Piston (0.25mm O/s)
08	3T2-11633-00-00	Pin, Piston
09	517-11633-00-00	Pin, Piston
10	12Y-11610-00-00	Piston Ring Set
10	12Y-11610-10-00	Piston Ring Set
10	12Y-11610-20-00	Piston Ring Set
11	93450-13022-00	Circlip
12	93310-11268-00	Bearing
13	90280-03017-00	Key, Woodruff
14	90387-205E9-00	Collar
15	93306-20465-00	Bearing
16	93102-20009-00	Oil Seal
17	93103-28011-00	Oil Seal
17	93103-28126-00	Oil Seal

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

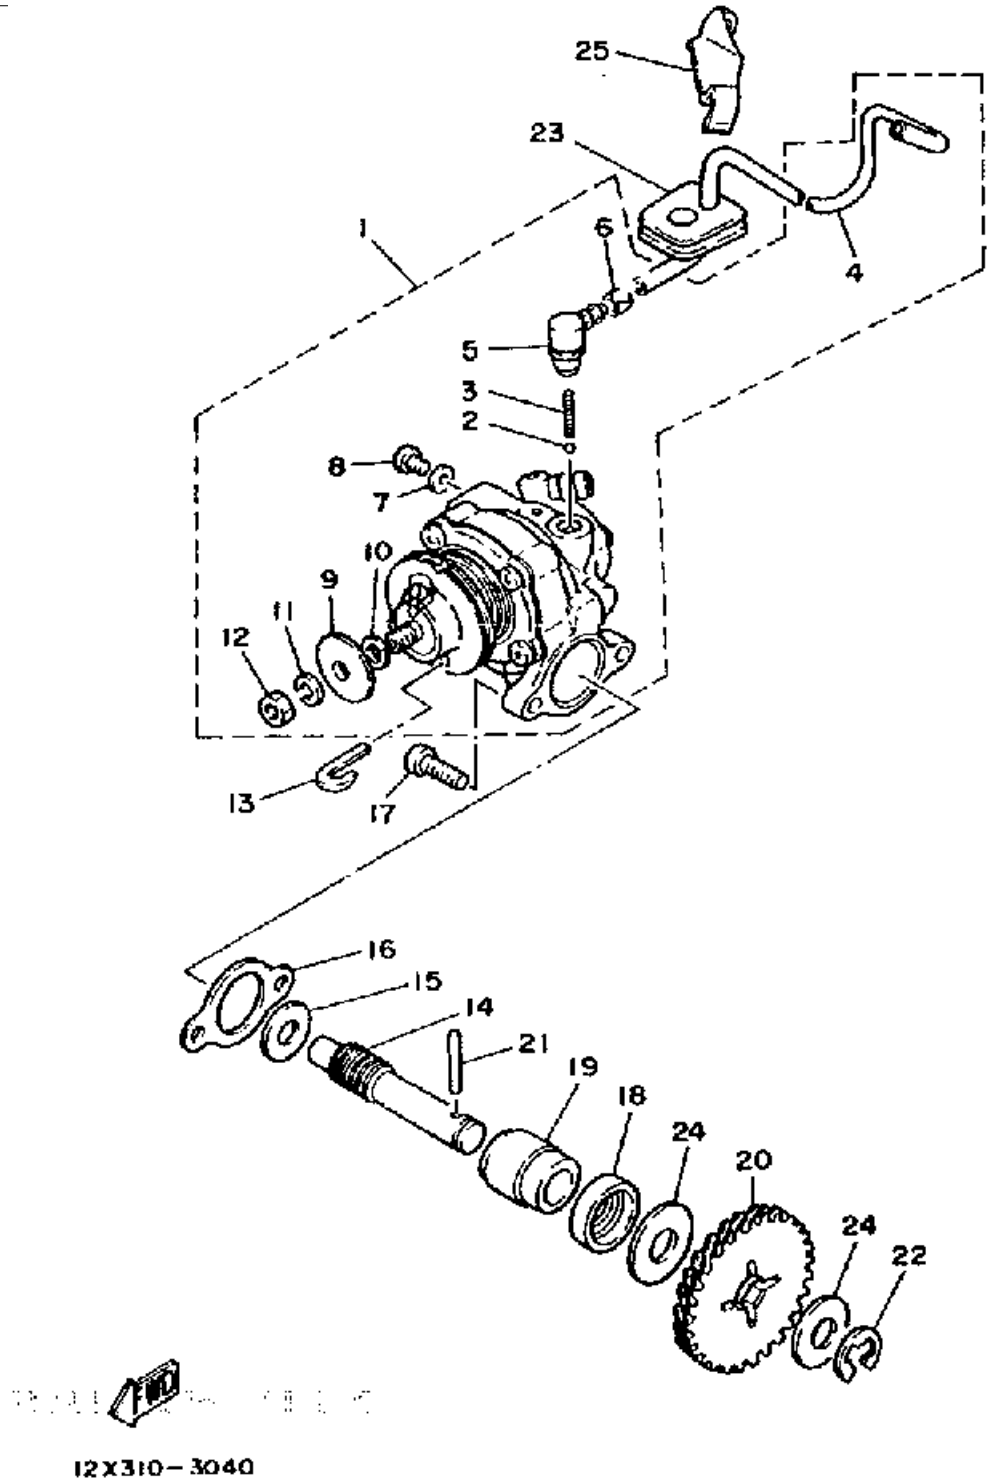


Ref No	Part No	Description
01	4U1-13101-01-00	Oil Pump Assy
02	93305-32002-00	Bearing
03	90501-02217-00	Spring, Compression
04	90445-05278-00	Hose
05	353-13552-01-00	Nozzle
06	90468-02033-00	Clip
07	90430-04004-00	Gasket
08	98901-04008-00	Screw, Bind
09	137-13138-01-00	Plate, Adjusting
10	137-13137-00-10	Shim, Plunger
11	92901-05100-00	Washer, Spring
12	95303-05600-00	Nut
13	367-13146-01-00	Cover,adjust Pulley
14	2A3-13175-00-00	Shaft, Worm
15	90201-08624-00	Washer, Plate
16	8YO-13116-01-00	Gasket, Pump Case
17	98501-05016-00	Screw, Pan Head
18	93101-10090-00	Oil Seal
19	1E7-13176-00-00	Metal, Worm Shaft Outer
20	353-13178-00-00	Gear, Pump Drive
21	93603-22028-00	Pin, Dowel
22	99001-08600-00	Circlip
23	24B-13174-00-00	Holder, Oil Pipe
24	90201-105J4-00	Washer, Plate
25	367-13174-00-00	Holder, Oil Pipe

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

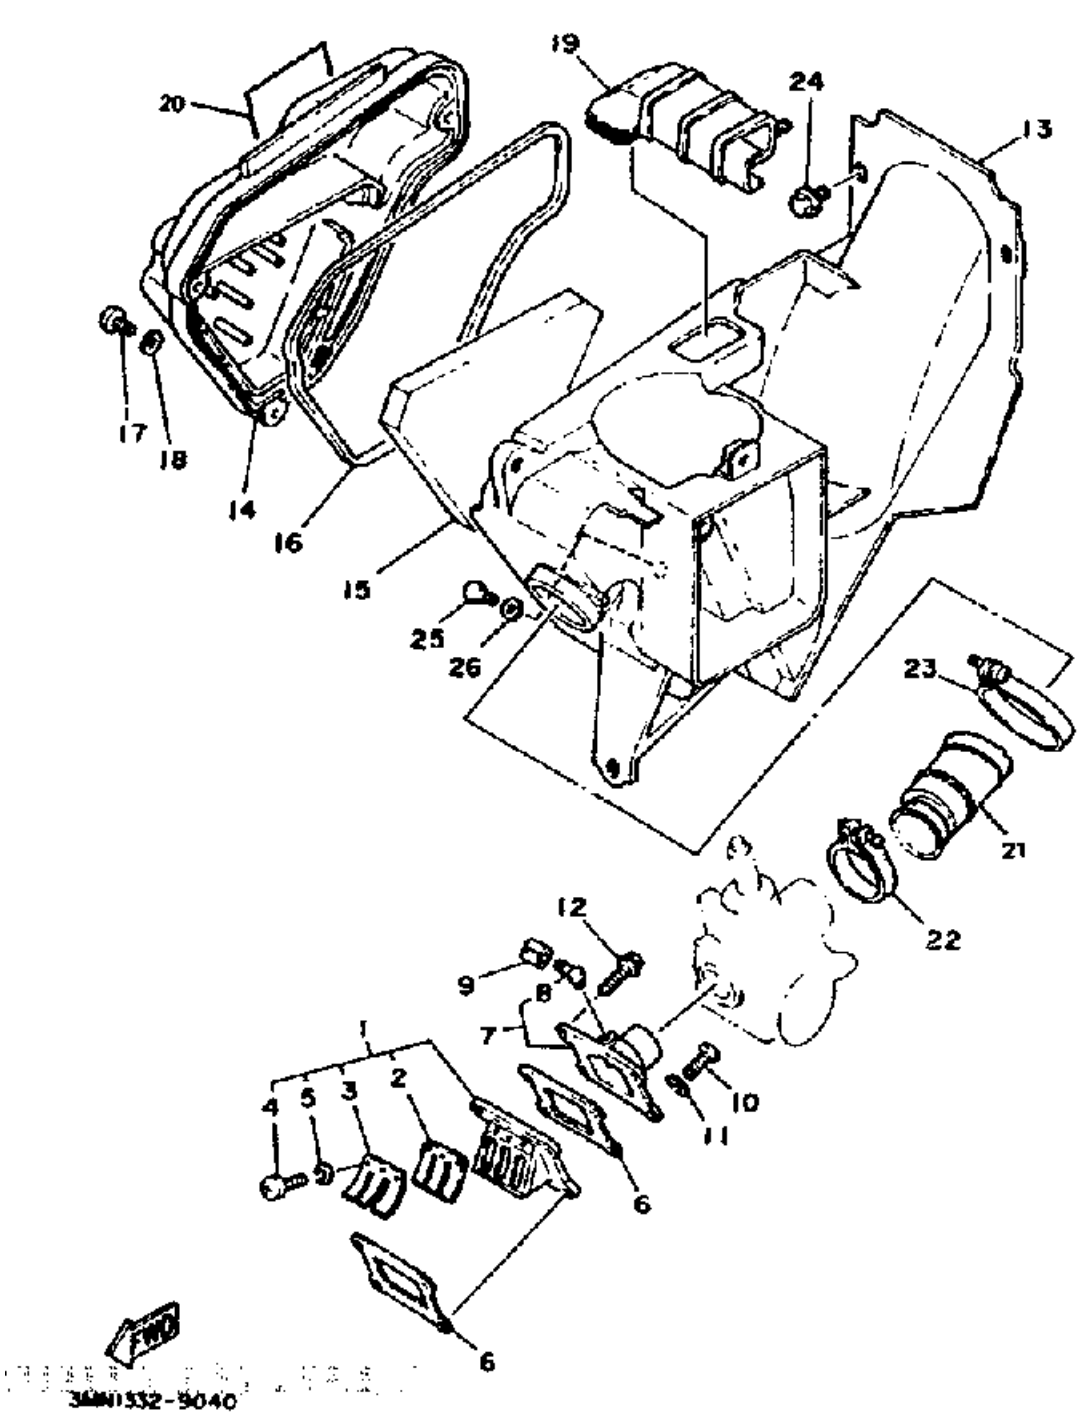


Ref No	Part No	Description
01	5G1-13610-00-00	Reed Valve Assy
02	2A3-13613-00-00	Reed, Valve
03	5G1-13616-00-00	Stopper, Reed Valve
04	98501-03008-00	Screw, Pan Head
05	92990-03100-00	Washer, Spring
06	353-13621-00-00	Gasket, Valve Seat
07	3MN-13565-00-00	Joint, Carburetor
08	278-13552-02-00	Nozzle
09	90468-02033-00	Clip
10	92501-02025-00	Screw, Pan Head
11	92990-06100-00	Washer, Spring
12	90109-06614-00	Bolt
13	3HL-14420-00-00	Air Cleaner Assy 2
14	3MP-14412-00-00	Cap, Cleaner Case 1
15	3T2-14451-00-00	Element, Air Cleaner
16	3T2-14451-00-00	Element, Air Cleaner
17	92506-06016-00	Screw, Pan Head
18	92906-06600-00	Washer, Plate
19	3T2-14437-00-00	Duct
20	3MN-E441K-00-00	Emblem
21	3MP-E4453-00-00	Joint, Air Cleaner 1
22	90460-33087-00	Clamp, Hose
23	90460-51590-00	Clamp, Hose
24	97313-08016-00	Bolt
25	97313-08016-00	Bolt
26	92901-06600-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

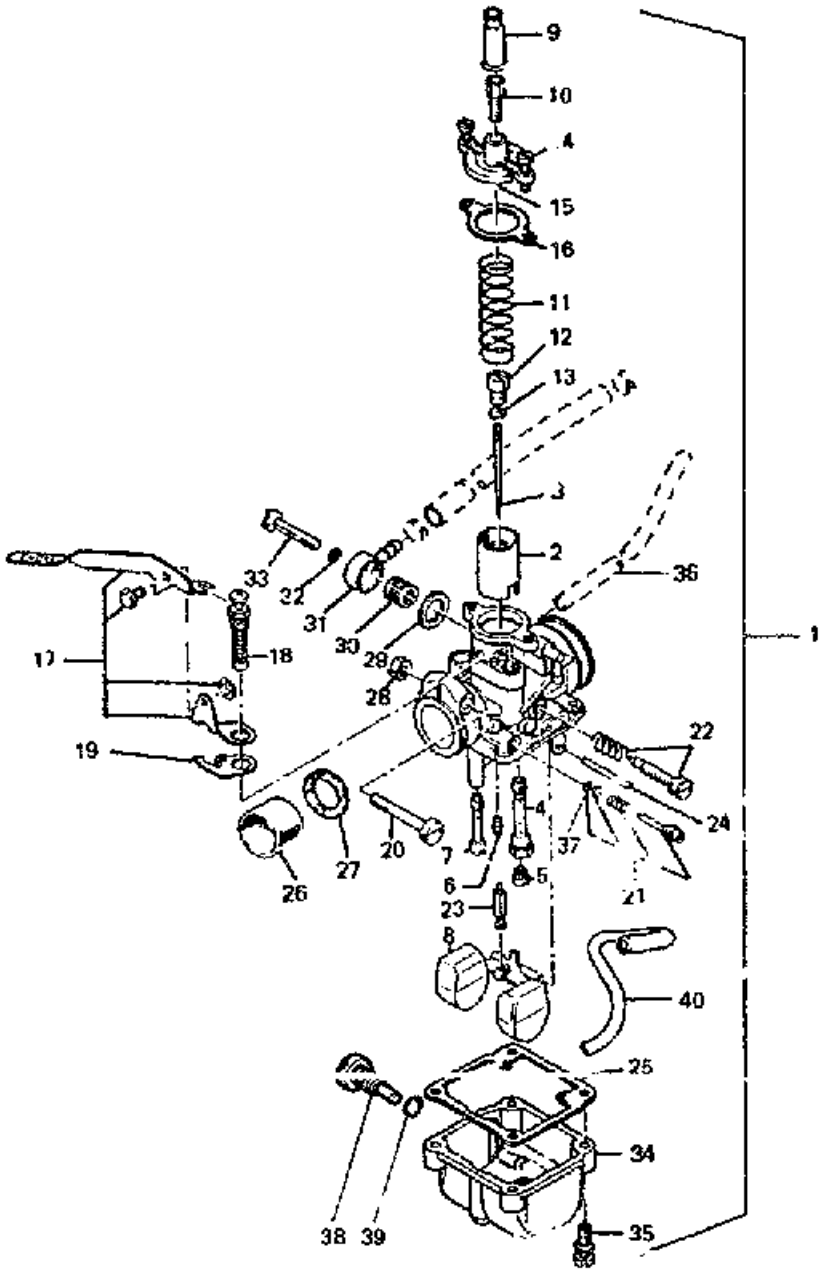


Ref No	Part No	Description
01	3MN-E4301-01-00	Carburetor Assy 1
02	3HL-E4112-00-00	Valve, Throttle 1
03	3MR-E4116-10-00	Needle
04	3MR-E4341-00-00	Nozzle, Main
05	3MN-E4343-00-00	Jet, Main
06	3MN-E4142-00-00	Jet, Pilot
07	3HL-E4312-00-00	Valve, Throttle 1
08	3HL-E4385-00-00	Float
09	3HL-E4169-00-00	Cap
10	3HL-E4106-00-00	Cable Adjust Screw Set
11	3HL-E4331-00-00	Spring, Throttle Valve
12	3HL-E4136-00-00	Seat, Spring
13	3HL-E4137-00-00	Clip
14	3HL-E4444-00-00	Collar, Distance
15	3HL-E4168-00-00	Cap, Mixing Chamber
16	3HL-E4126-00-00	Gasket
17	3HL-E4375-00-00	Lever, Starter
18	3HL-E4371-00-00	Plunger, Starter
19	3HL-E4377-00-00	Stopper
20	3HL-E4125-00-00	Screw
21	3MP-E4103-00-00	Throttle Screw Set
22	3HL-E4103-00-00	Throttle Screw Set
23	3HL-E4392-00-00	Valve, Needle
24	3HL-E4386-00-00	Pin, Float
25	3HL-E4384-00-00	Gasket, Float Chamber
26	3HL-E4156-00-00	Gasket, Insulating
27	3HL-E4126-00-00	Gasket
28	95701-06500-00	Nut, Flange
29	3HL-F4348-00-00	Gasket, Banjo 2
30	3HL-F4501-00-00	Filter, Fuel
31	3HL-F4341-00-00	Banjo, Connection 1
32	3HL-F4345-00-00	Bolt, Banjo 2
33	3HL-F4146-00-00	Nut, Fuel Tank 1
34	3MN-E4181-10-00	Body, Float Chamber 1
35	98580-04016-00	Screw, Pan Head
36	3HL-E4349-00-00	Pipe
37	3HL-F4345-00-00	Bolt, Banjo 2
38	3MN-E4383-00-00	Screw, Drain
39	3MN-E4198-00-00	Gasket
40	3MN-E443E-00-00	Pipe, Drain
40	3HL-W0005-00-00	0-ring Set

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

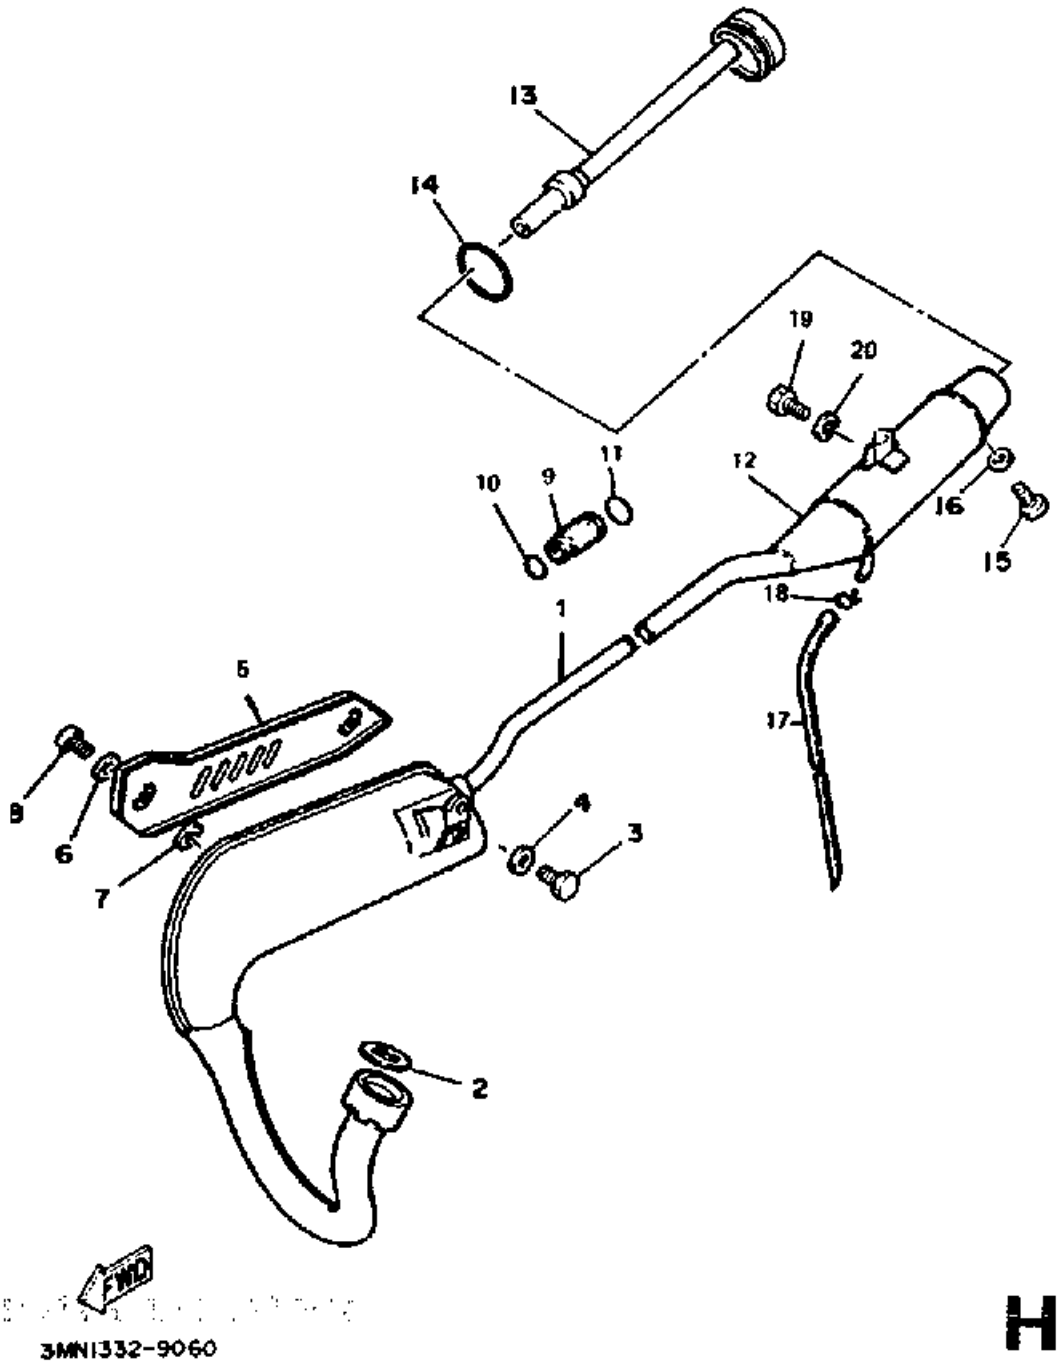


Ref No	Part No	Description
01	3MN-E4610-00-11	Exhaust Pipe Assy 1
02	132-14613-00-00	Gasket, Exhaust Pipe
03	97006-08020-00	Bolt
04	92906-08600-00	Washer, Plate
05	3HL-E4718-00-11	Protector, Muffler 1
06	90202-06010-00	Washer, Plate
07	90202-05005-00	Washer, Plate
08	98906-06010-00	Screw, Bind
09	3MP-E4615-00-00	Joint, Exhaust 1
10	3MP-E4683-00-00	Spring, Hook
11	3MP-E4683-10-00	Spring, Hook
12	3MN-E4753-00-11	Silencer, Exhaust
13	1NN-14752-00-00	Pipe, Outlet
14	93210-40407-00	O-ring
15	92506-06010-00	Screw, Pan Head
16	92906-06600-00	Washer, Plate
17	90445-117EO-00	Hose
18	90467-10008-00	Clip
20	97313-08016-00	Bolt
21	92990-08100-00	Washer, Spring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

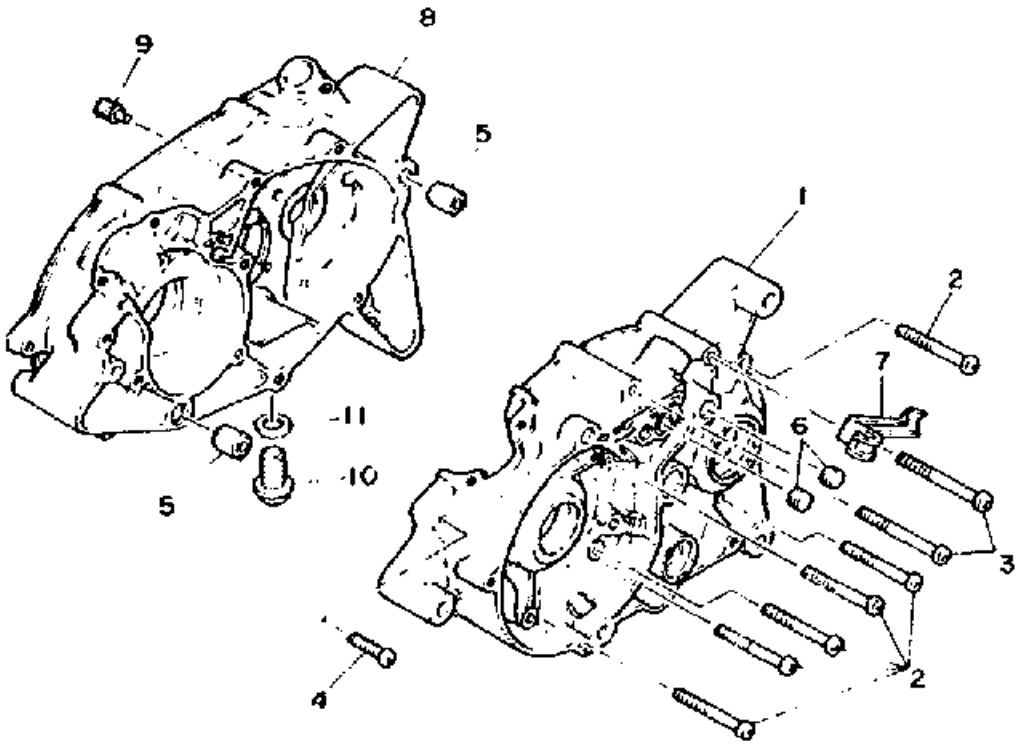


Ref No	Part No	Description
01	353-13111-01-00	Case, Pump
02	92501-06050-00	Screw, Pan Head
03	92501-06055-00	Screw, Pan Head
04	92501-06025-00	Screw, Pan Head
05	99510-12016-00	Pin, Dowel
06	90334-12009-00	Plug, Straight
07	3T2-15484-01-00	Clamp 2
08	353-15121-03-00	Crankcase 2
09	492-14387-00-00	Arm, Diaphragm
10	90340-12005-00	Plug, Straight Screw
11	90430-12038-00	Gasket

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

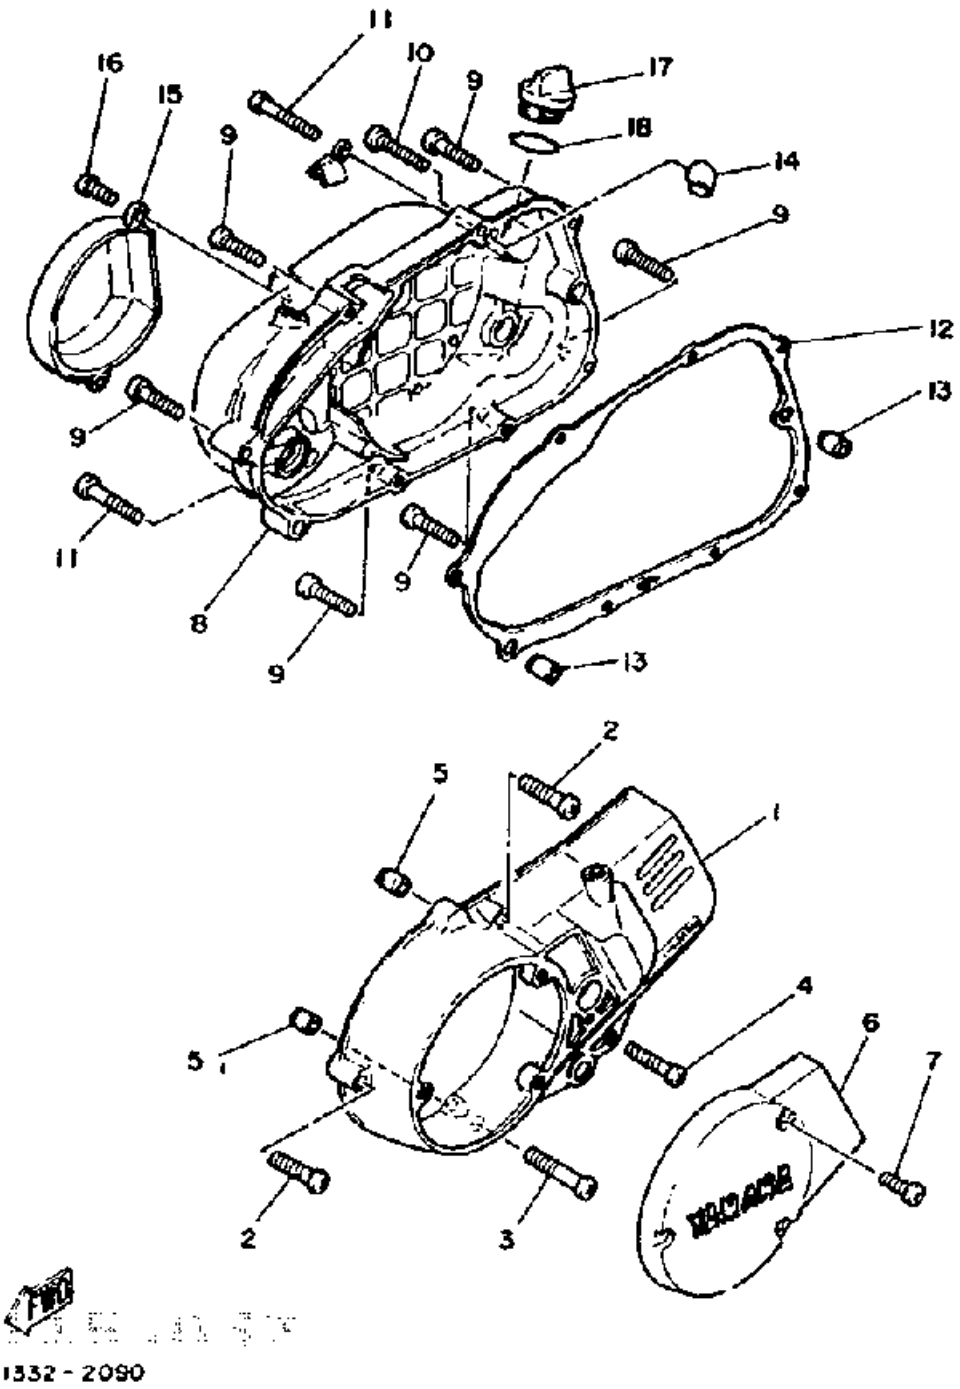


Ref No	Part No	Description
01	5TB-E5411-01-00	Cover, Crankcase 1
02	92516-06030-00	Screw, Pan Head
03	92506-06040-00	Screw, Pan Head
04	92506-06045-00	Screw, Pan Head
05	99530-10014-00	Pin, Dowel
06	5TB-E3415-00-00	Seal, Oil Strainer
07	92506-06020-00	Screw, Pan Head
08	4U7-15421-00-00	Cover, Crankcase 2
09	92516-06030-00	Screw, Pan Head
10	92506-06035-00	Screw, Pan Head
11	92506-06040-00	Screw, Pan Head
12	353-15451-00-00	Gasket, Crankcase Cover 1
13	99530-10014-00	Pin, Dowel
14	353-15437-02-00	Scraper, Oil
15	4Y7-15416-00-00	Cover, Oil Pump
16	92506-06016-00	Screw, Pan Head
17	353-15362-00-00	Plug, Oil Level
18	93210-21190-00	O-ring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

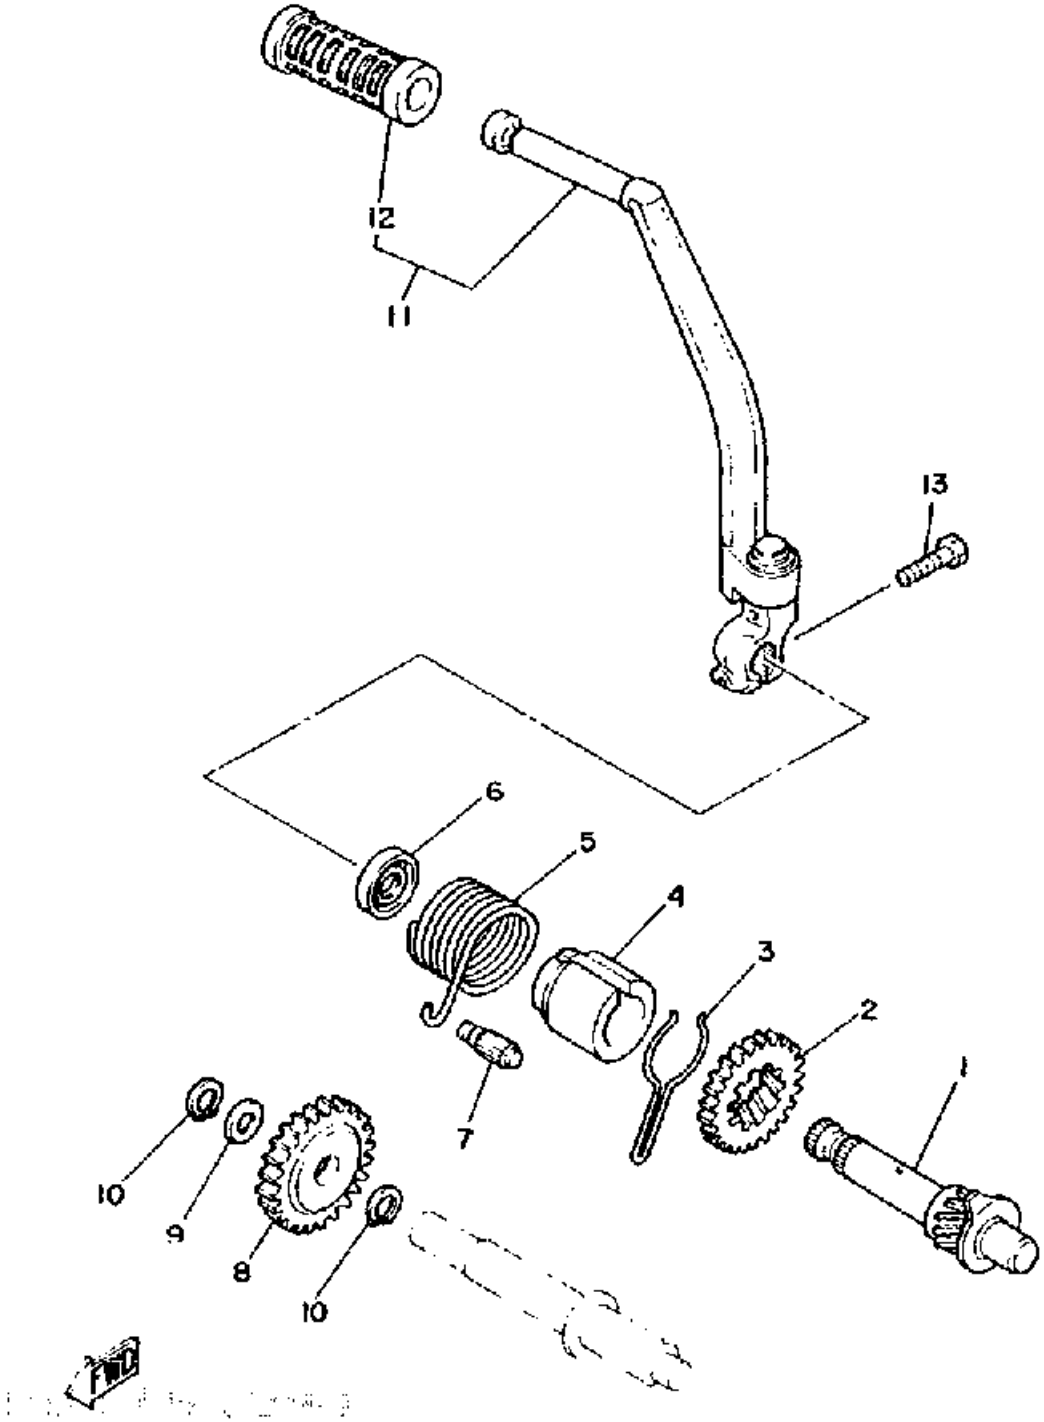


Ref No	Part No	Description
01	2AL-15660-00-00	Kick Axle Assy
02	353-15641-00-00	Gear, Kick
03	90468-26038-00	Clip
04	4U1-15664-00-00	Guide, Spring
05	90508-26136-00	Spring, Torsion
06	93109-15001-00	Oil Seal
07	248-15668-00-00	Stopper
08	353-15651-00-00	Gear, Kick Idle
09	90201-12166-00	Washer, Plate
10	99009-12400-00	Circlip
11	2UM-E5620-00-00	Kick Crank Assy
12	5T8-E5618-00-00	Cover, Kick Lever
13	97016-06025-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

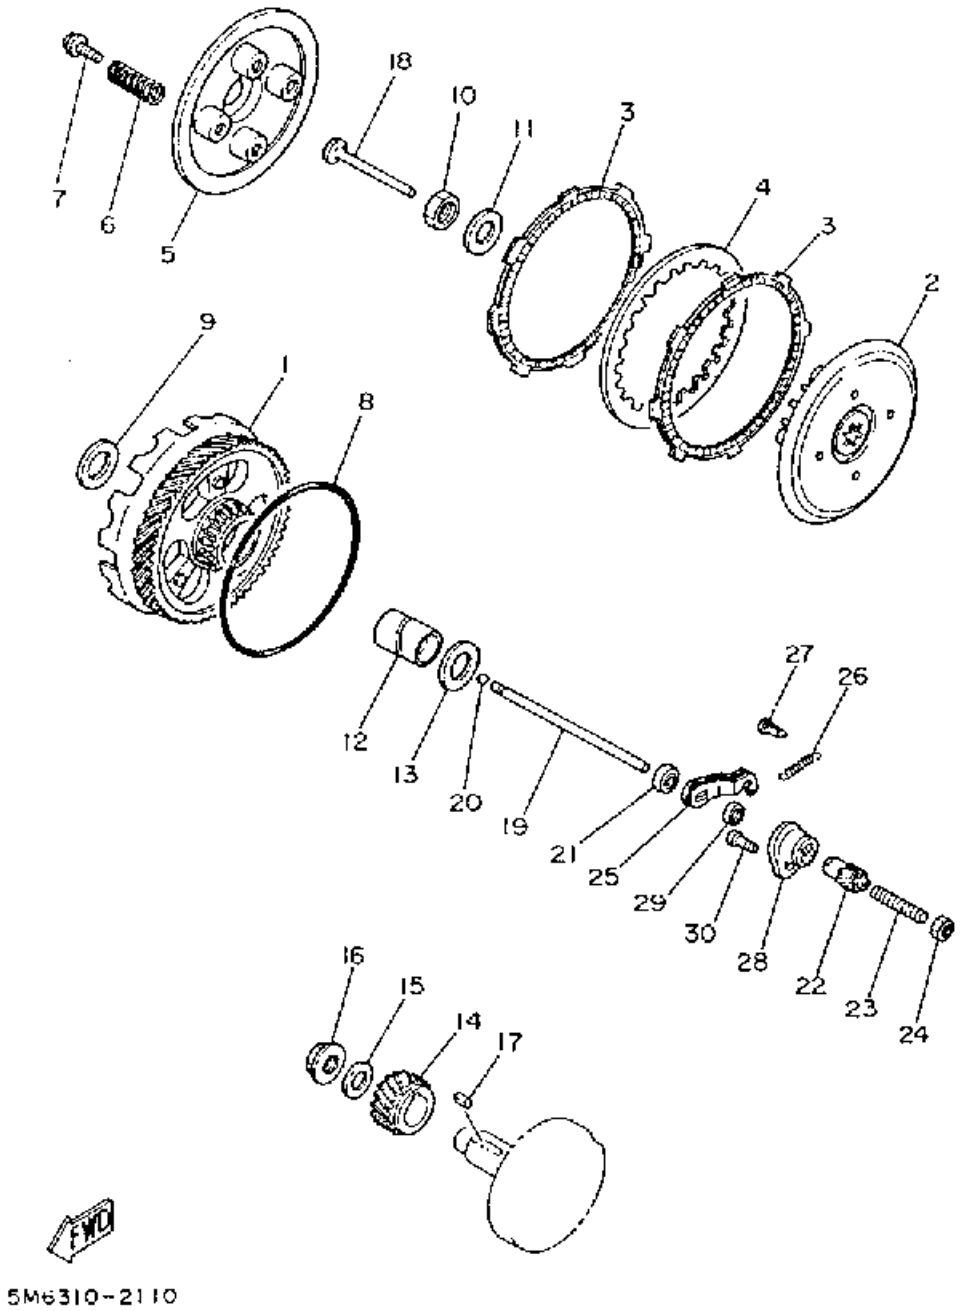


Ref No	Part No	Description
01	5L3-16150-00-00	Primary Driven Gear Comp.
02	257-16371-01-00	Boss, Clutch
03	131-16321-00-00	Plate, Friction
04	131-16324-00-00	Plate, Clutch 1
05	257-16351-00-00	Plate, Pressure 1
06	90501-20122-00	Spring, Compression
07	90119-05001-00	Bolt, With Washer
08	93210-99103-00	O-ring
09	122-16164-00-00	Plate, Thrust 2
10	90170-12060-00	Nut
11	90203-12015-00	
12	90560-17123-00	Spacer
13	122-16164-00-00	Plate, Thrust 2
14	353-16111-01-00	Gear, Primary Drive
15	90208-12015-00	Washer, Conical Spring
16	90179-12244-00	Nut
17	90282-05005-00	Key, Straight
18	137-16356-00-00	Rod, Push 1
19	353-16357-00-00	Rod, Push 2
20	93503-16010-00	Ball
21	93102-04382-00	Oil Seal
22	241-16341-01-00	Screw, Push
23	90113-06013-00	Bolt, Set
24	95303-06700-00	Nut
25	451-16342-00-00	Lever, Push
26	90506-07066-00	Spring, Tension
27	132-16346-00-00	Hook, Spring
28	353-16396-00-00	Housing, Push Screw
29	93104-10005-00	Oil Seal
30	92501-06014-00	Screw, Pan Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

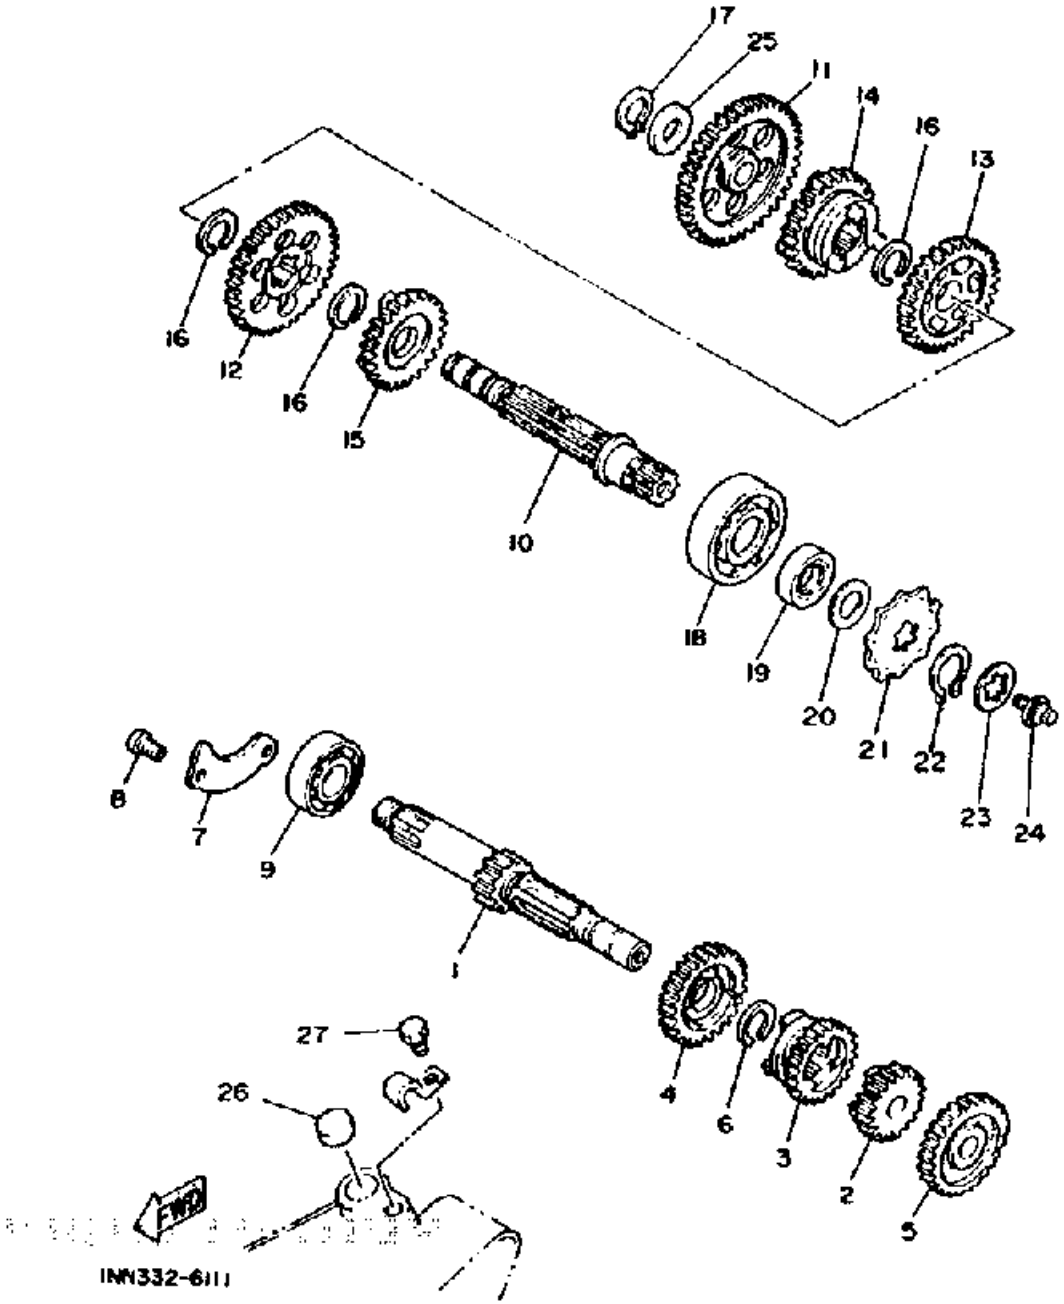


Ref No	Part No	Description
01	353-17411-10-00	Axle, Main
02	353-17121-11-00	Gear, 2nd Pinion
03	353-17131-10-00	Gear, 3rd Pinion
04	353-17141-72-00	Gear, 4th Pinion
05	353-17151-70-00	Gear, 5th Pinion
06	93440-16089-00	Circlip
07	353-17471-00-00	Plate, Cover
08	92501-06012-00	Screw, Pan Head
09	93306-20333-00	Bearing
10	20M-17421-00-00	Axle, Drive
11	353-17211-01-00	Gear, 1st Wheel
12	353-17221-00-00	Gear, 2nd Wheel
13	353-17231-00-00	Gear, 3rd Wheel
14	353-17241-70-00	Gear, 4th Wheel
15	353-17251-70-00	Gear, 5th Wheel
16	93440-16089-00	Circlip
17	99009-13400-00	Circlip
18	93306-30301-00	Bearing
19	93102-17187-00	Oil Seal
20	90209-13817-00	Washer
21	1NN-E7461-00-00	Sprocket, Drive
23	90209-13185-00	Washer
24	99999-01529-00	
25	257-17219-00-00	Shim
26	90338-16029-00	Plug
27	97011-06010-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

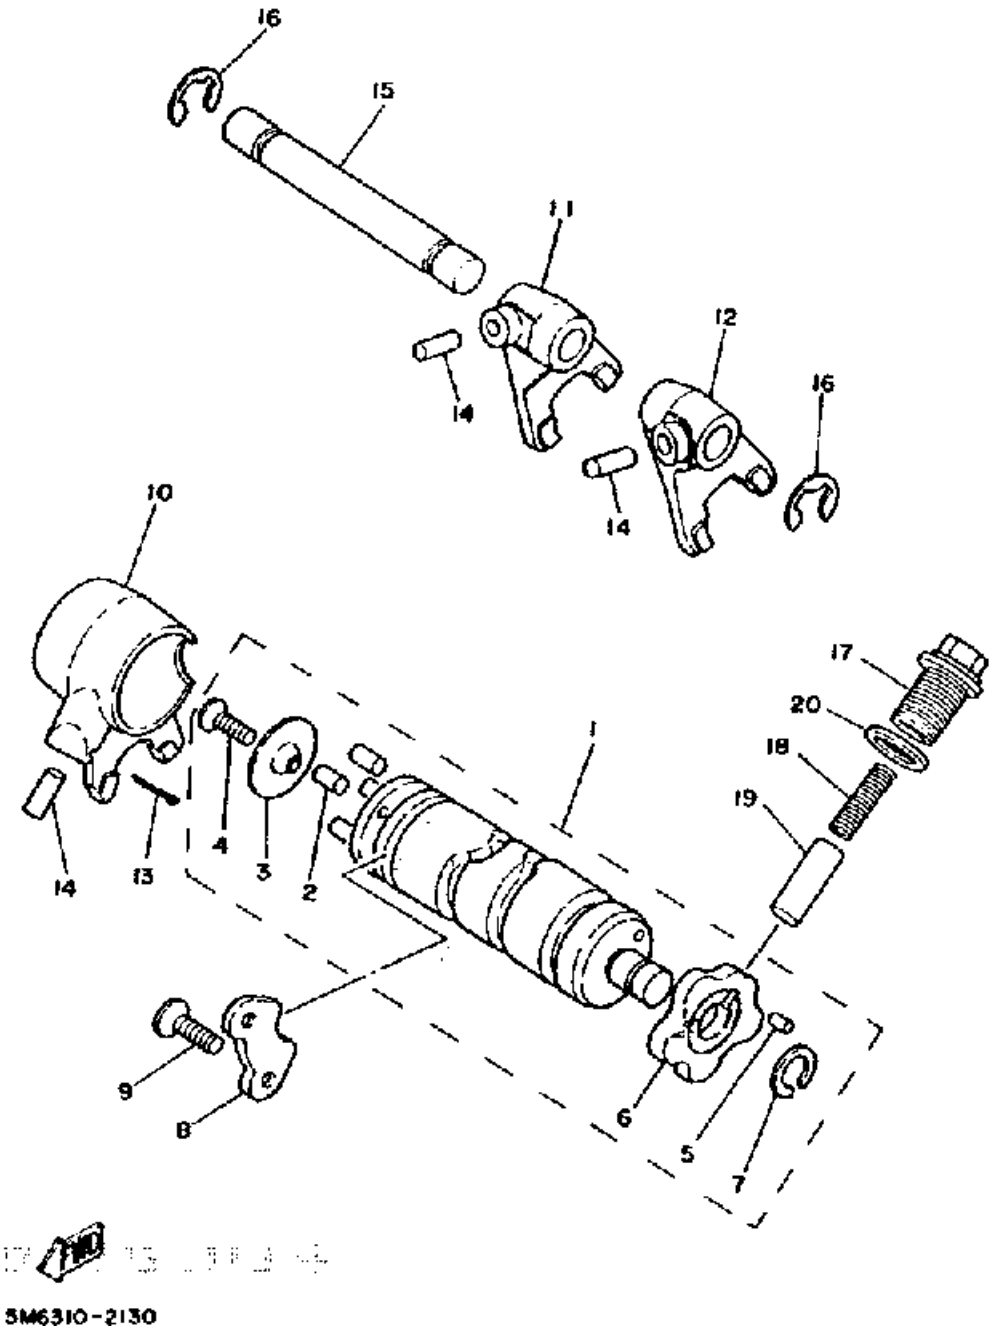

Ref No	Part No	Description
01	4U5-18540-00-00	Shift Cam Assy
02	93604-10011-00	Pin, Dowel
03	214-18561-00-00	Plate, Side 1
04	98701-05012-00	Screw, Flat Head
05	93604-08071-00	Pin, Dowel
06	353-18141-01-00	Plate, Stopper
07	93440-12026-00	Circlip
08	353-18562-00-00	Plate, Stopper 2
09	92701-06012-00	Screw, Flat Head
10	353-18511-01-00	Fork, Shift 1
11	353-18512-01-00	Fork, Shift 2
12	353-18513-01-00	Fork, Shift 3
13	91401-25020-00	Pin, Cotter
14	93606-14081-00	Pin, Dowel
15	214-18531-00-00	Bar, Shift Fork Guide 1
16	99001-10600-00	Circlip
17	90109-14485-00	Bolt
18	90501-09292-00	Spring, Compression
19	353-18547-00-00	Stopper, Cam
20	137-15353-00-00	Gasket, Drain


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

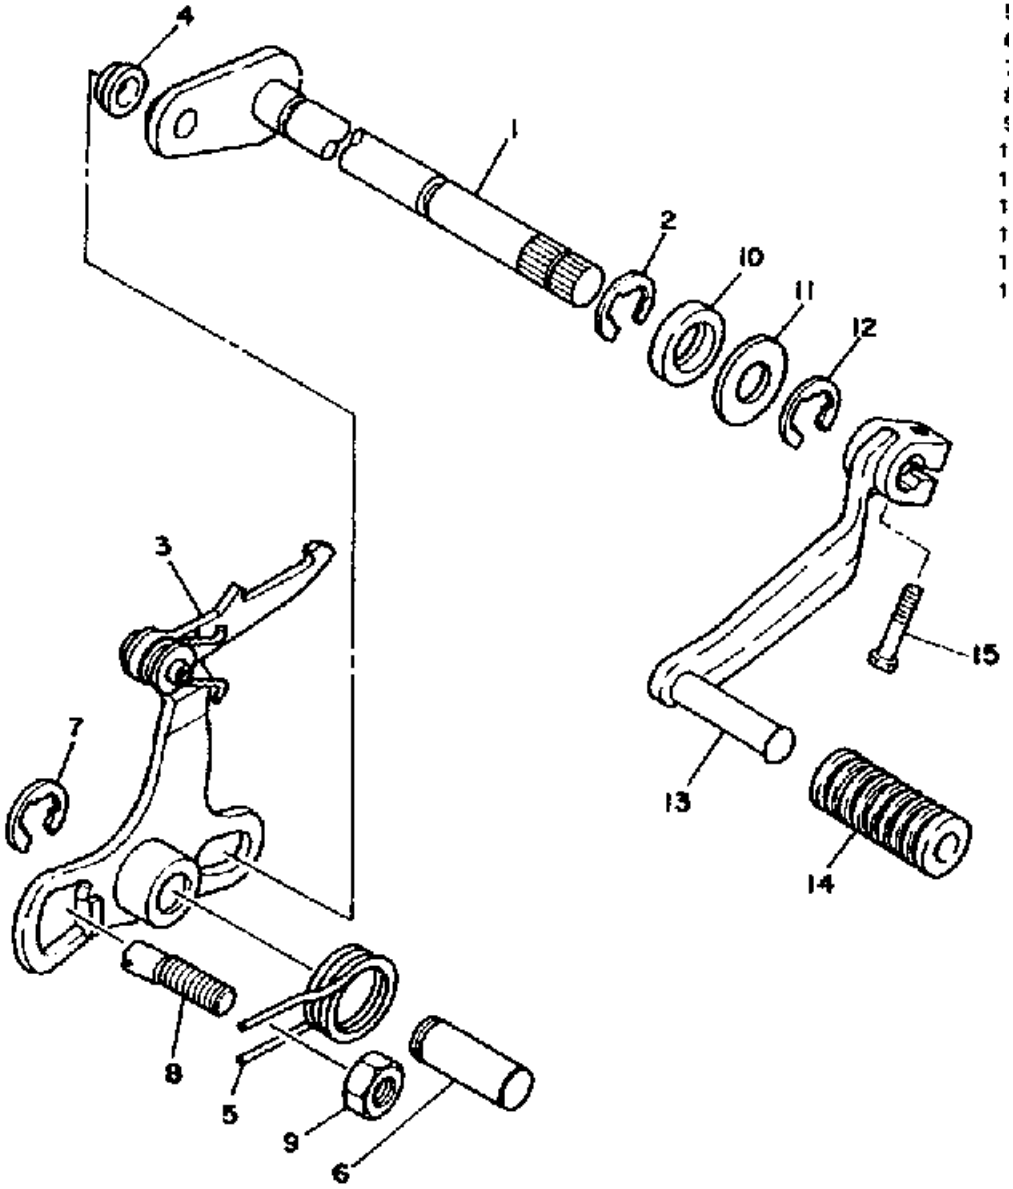

45R511-4130


Ref No	Part No	Description
01	2AL-18101-00-00	Shift Shaft Assy
02	99001-10600-00	Circlip
03	353-18121-00-00	Lever, Shift 1
04	214-18178-00-00	Roller, Shift Lever
05	90508-32054-00	Spring, Torsion
06	367-18197-00-00	Shaft
07	99001-10600-00	Circlip
08	90149-08094-00	Screw
09	95303-08600-00	Nut
10	93102-12106-00	Oil Seal
11	90201-12575-00	Washer, Plate
12	99001-10600-00	Circlip
13	5T8-E8111-00-00	Pedal, Shift
14	5T8-E8113-00-00	Cover, Shift Pedal
15	97016-06020-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

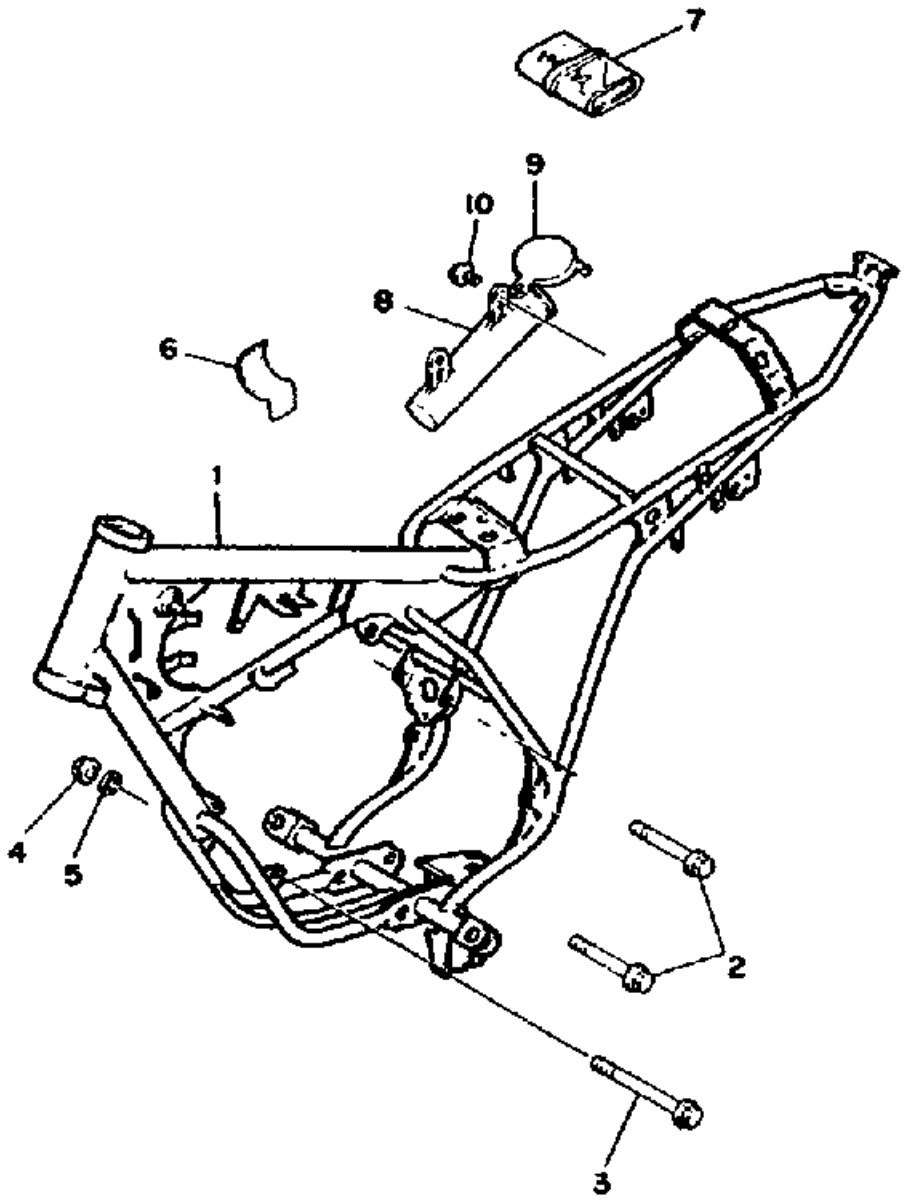


Ref No	Part No	Description
01	3MP-F1110-00-13	Frame Comp.
01	3MP-F1110-00-14	Frame Comp.
01	3MP-F1110-00-12	Frame Comp.
02	95811-08090-00	Bolt, Flange
03	95811-08020-00	Bolt, Flange
04	95701-08500-00	Nut, Flange
05	92901-08600-00	Washer, Plate
06	90465-05052-00	Clamp
07	54Y-F8100-00-00	Tool Kit
08	17W-28173-00-00	Box, Tool
09	17W-28173-00-00	Box, Tool
10	90119-06056-00	Bolt, With Washer

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

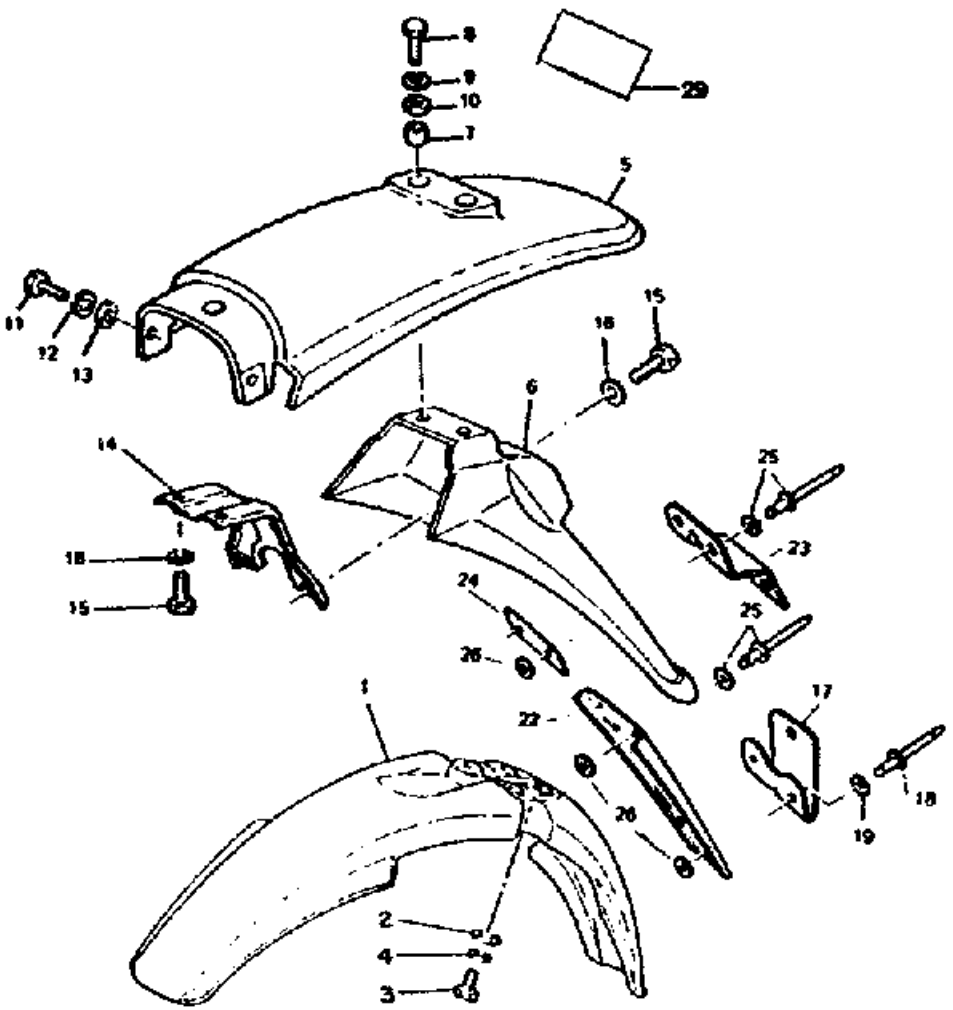

Ref No	Part No	Description
01	5T8-F1511-60-00	Fender, Front
01	5T8-F1511-30-00	Fender, Front
01	5T8-F1511-70-00	Fender, Front
02	90201-06067-00	Washer, Plate
03	97001-06020-00	Bolt
04	92990-06100-00	Washer, Spring
05	3HL-F1611-40-00	Fender, Rear
05	3HL-F1611-10-00	Fender, Rear
05	3HL-F1611-50-00	Fender, Rear
06	3MP-F1621-00-00	Flap
07	90387-064T3-00	Collar
08	97026-06014-00	Bolt
09	92906-06100-00	Washer, Spring
10	92906-06600-00	Washer, Plate
11	92506-06014-00	Screw, Pan Head
12	92906-06100-00	Washer, Spring
13	92906-06600-00	Washer, Plate
14	3HL-F1623-00-11	Plate, Flap Fitting 1
15	97001-06012-00	Bolt
16	92990-06100-00	Washer, Spring
17	33G-85132-00-00	Bracket, Reflector 1
18	90267-40076-00	Rivet, Blind
19	90201-047A2-00	Washer, Plate
22	3MR-21521-00-00	Flap, Front Fender
23	3MN-F1685-00-11	Bracket, License
24	3MR-F1624-00-00	Plate, Flap Fitting 2
25	90267-48014-00	Rivet, Blind
26	90201-04325-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

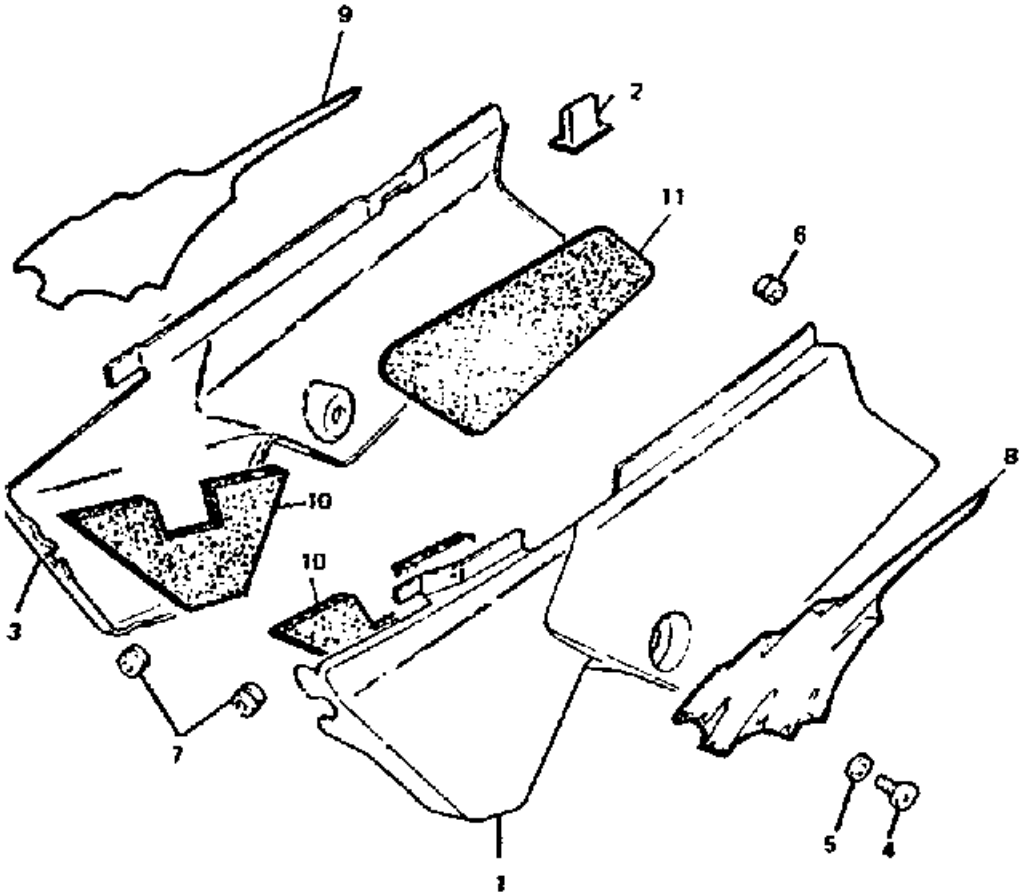


Ref No	Part No	Description
01	3HL-F1711-50-00	Cover, Side 1
01	3HL-F1711-10-12	Cover, Side 1
01	3HL-F1711-60-00	Cover, Side 1
02	43F-21773-00-00	Grommet
03	3HL-F1721-50-00	Cover, Side 2
03	3HL-F1721-10-12	Cover, Side 2
03	3HL-F1721-60-00	Cover, Side 2
04	90149-06223-00	Screw
05	90201-062A8-00	Washer, Plate
06	90480-01401-00	Grommet
07	43F-21773-00-00	Grommet
08	3HL-F179J-00-00	Graphic,7
08	3HL-F179J-10-00	Graphic,7
08	3HL-F179K-20-00	Graphic,8
09	3HL-F179K-00-00	Graphic,8
09	3HL-F179K-10-00	Graphic,8
09	3HL-F179K-20-00	Graphic,8
10	3HL-F1778-00-00	Damper, Locating 1
11	3HL-F174T-00-00	Insulator, Side Cover 2

END

3MR1321-9160


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

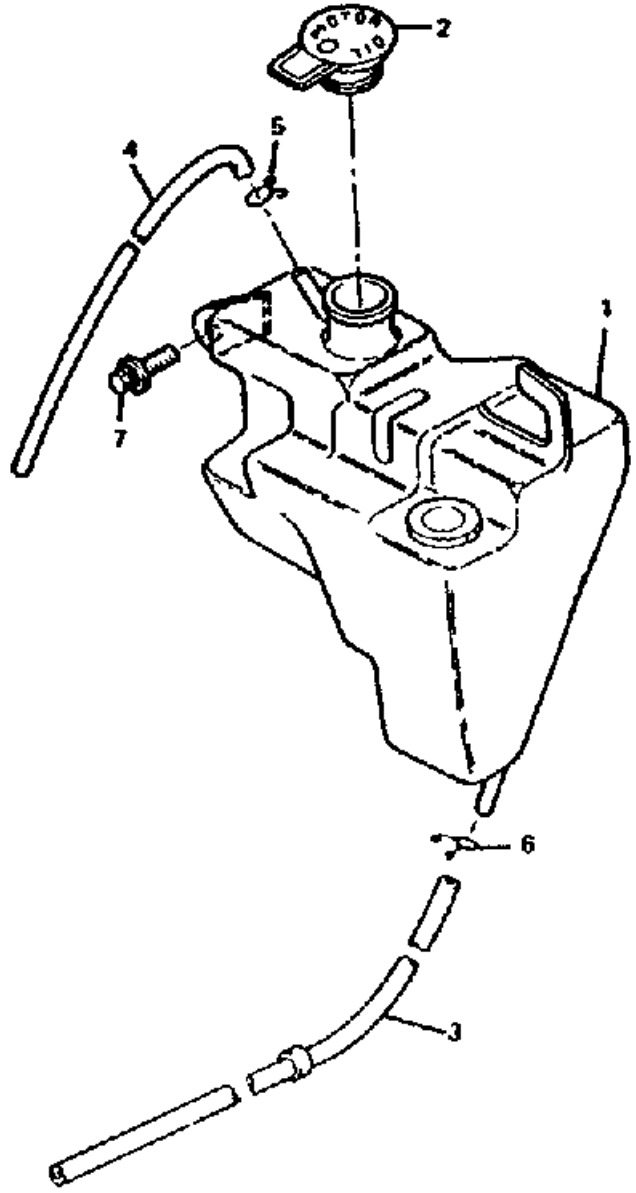

Ref No	Part No	Description
01	3HL-F1751-00-00	Tank, Oil
02	5T8-F1771-00-00	Body, Cap
03	90445-09353-00	Hose
04	5T8-F1745-01-00	Pipe, Oil Tank Breather
05	90467-08003-00	Clip
06	90467-08003-00	Clip
07	90119-06043-00	Bolt, With Washer


3HL1351-8150

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

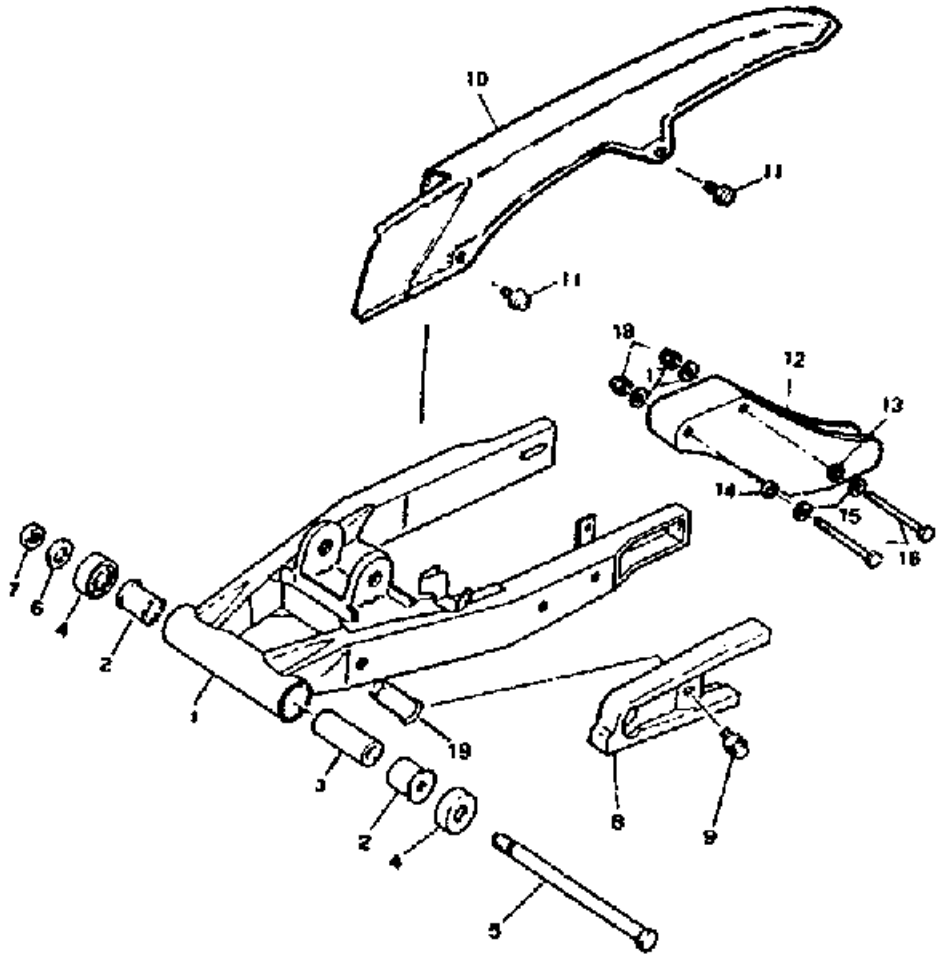

Ref No	Part No	Description
01	3MP-F2110-01-11	Rear Arm Comp.
01	3MP-F2110-01-12	Rear Arm Comp.
02	90386-18099-00	Bush
03	3HL-F2126-00-00	Collar, Distance
04	401-22128-01-00	Cover, Thrust 1
05	5T8-F2141-00-00	Shaft, Pivot
06	92990-10600-00	Washer, Plate
07	95601-10100-00	Nut, U
08	34X-22151-01-00	Seal, Guard
09	90159-06059-00	Screw, With Washer
10	3MP-F2311-00-00	Case, Chain
11	90159-06058-00	Screw, With Washer
12	3HL-F2153-00-00	Guard, Chain
13	3HL-F2243-00-00	Washer 1
14	3HL-F2246-00-00	Washer 4
15	3HL-F2245-00-00	Washer 3
16	3HL-F2241-00-00	Bolt 1
17	3HL-F2244-00-00	Washer 2
18	3HL-F2251-00-00	Nut 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

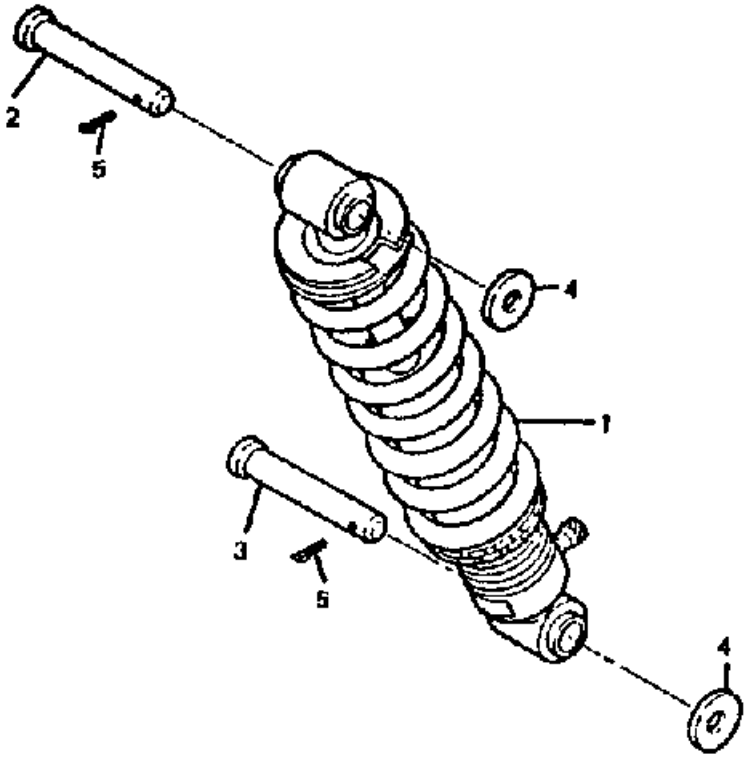


Ref No	Part No	Description
01	3HL-F2210-00-00	Shock Absorber Assy, Rear
02	90240-10072-00	Pin, Clevis
03	90240-10069-00	Pin, Clevis
04	92990-10600-00	Washer, Plate
05	91401-25020-00	Pin, Cotter

FWD


3HL1351-8170

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

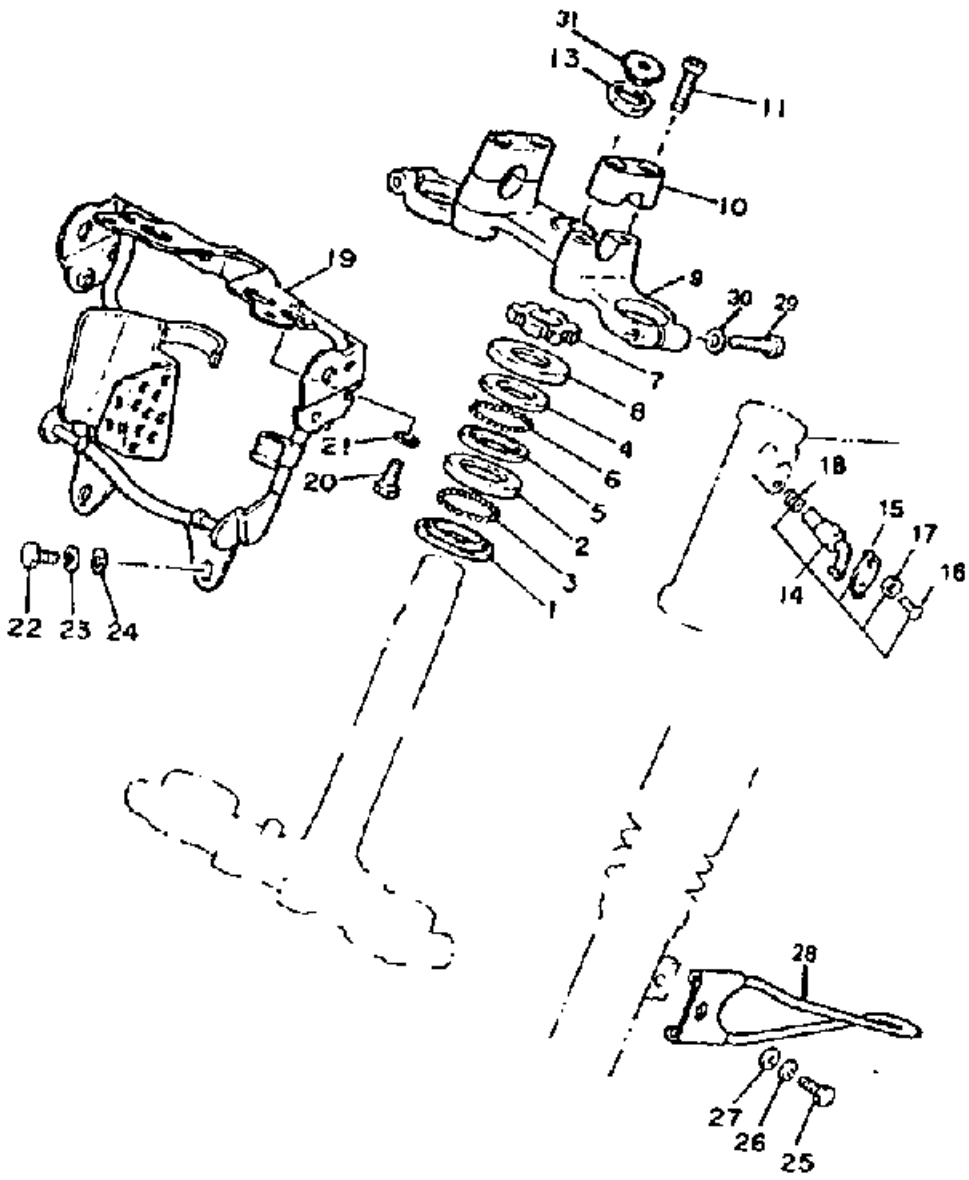


Ref No	Part No	Description
01	156-23411-00-00	Race, Ball 1
02	156-23412-00-00	Race, Ball 2
03	93501-04011-00	Ball
04	122-23411-00-00	Race, Ball 1
05	122-23412-00-00	Race, Ball 2
06	93503-16010-00	Ball
07	3HL-F3453-10-00	Nut, Fitting 1
08	5T8-F3416-00-00	Cover, Ball Race 2
09	3HL-F3435-10-00	Crown, Handle
10	3HL-F3441-10-00	Holder, Handle Upper
11	97026-08030-00	Bolt
12	92906-08600-00	Washer, Plate
13	3HL-F3454-10-00	Nut, Fitting 2
14	3HL-F3482-00-00	Body & Key, Steering Lock
19	1NN-F3174-00-11	Stay, Headlight
20	97313-08016-00	Bolt
21	92990-08100-00	Washer, Spring
22	97016-06016-00	Bolt
23	92906-06100-00	Washer, Spring
24	92906-06600-00	Washer, Plate
25	97016-06025-00	Bolt
26	92906-06100-00	Washer, Spring
27	92906-06600-00	Washer, Plate
28	3HL-F3318-00-00	Holder, Cable 1
29	3HL-F3452-10-00	Bolt, Fitting 2
30	3HL-F3457-10-00	Washer
31	3HL-F3469-00-00	Cap, Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

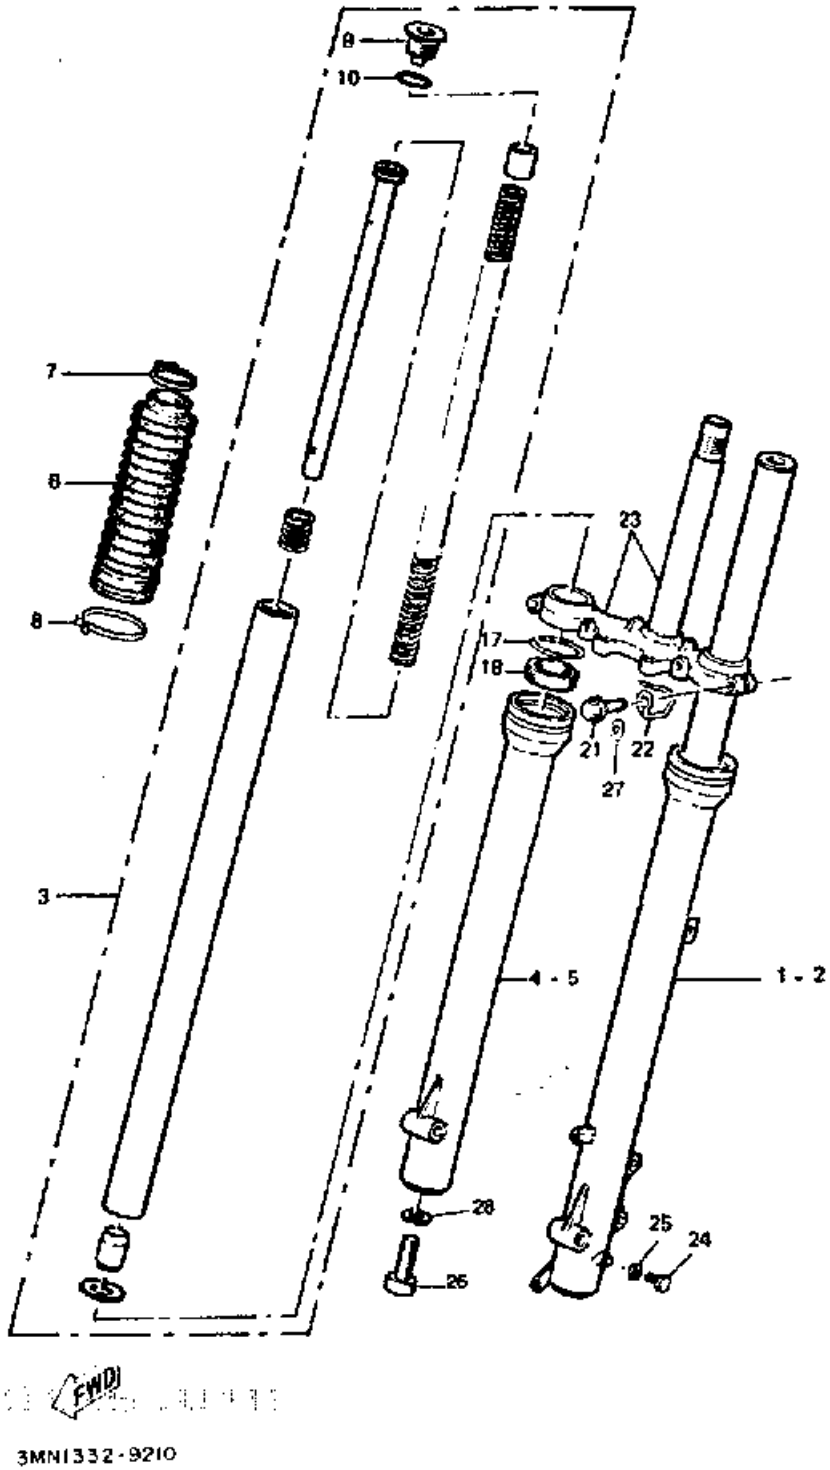

Ref No	Part No	Description
01	3HL-F3102-20-00	Front Fork Assy (l.h)
02	3HL-F3103-00-00	Front Fork Assy (r.h)
03	3HL-F3110-00-00	Inner Tube Comp.1
04	3HL-F3126-10-00	Tube, Outer (left)
05	3HL-F3136-00-00	Tube, Outer (right)
06	3HL-F3191-40-00	Boot
06	3HL-F3191-30-00	Boot
07	3HL-F3192-10-00	Band
08	3HL-F3192-10-00	Band
09	3HL-F3111-00-00	Bolt, Cap
10	3HL-F3114-00-00	Gasket
17	3HL-F3156-00-00	Clip, Oil Seal
18	3HL-F3145-00-00	Oil Seal
21	3HL-F3451-10-00	Bolt, Fitting 1
22	5JO-23317-00-00	Holder, Cable
23	3HL-F3340-10-00	Under Bracket Comp.
24	3HL-F3119-00-00	Plug, Drain
25	3HL-F3129-00-00	Gasket, Drain Plug


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

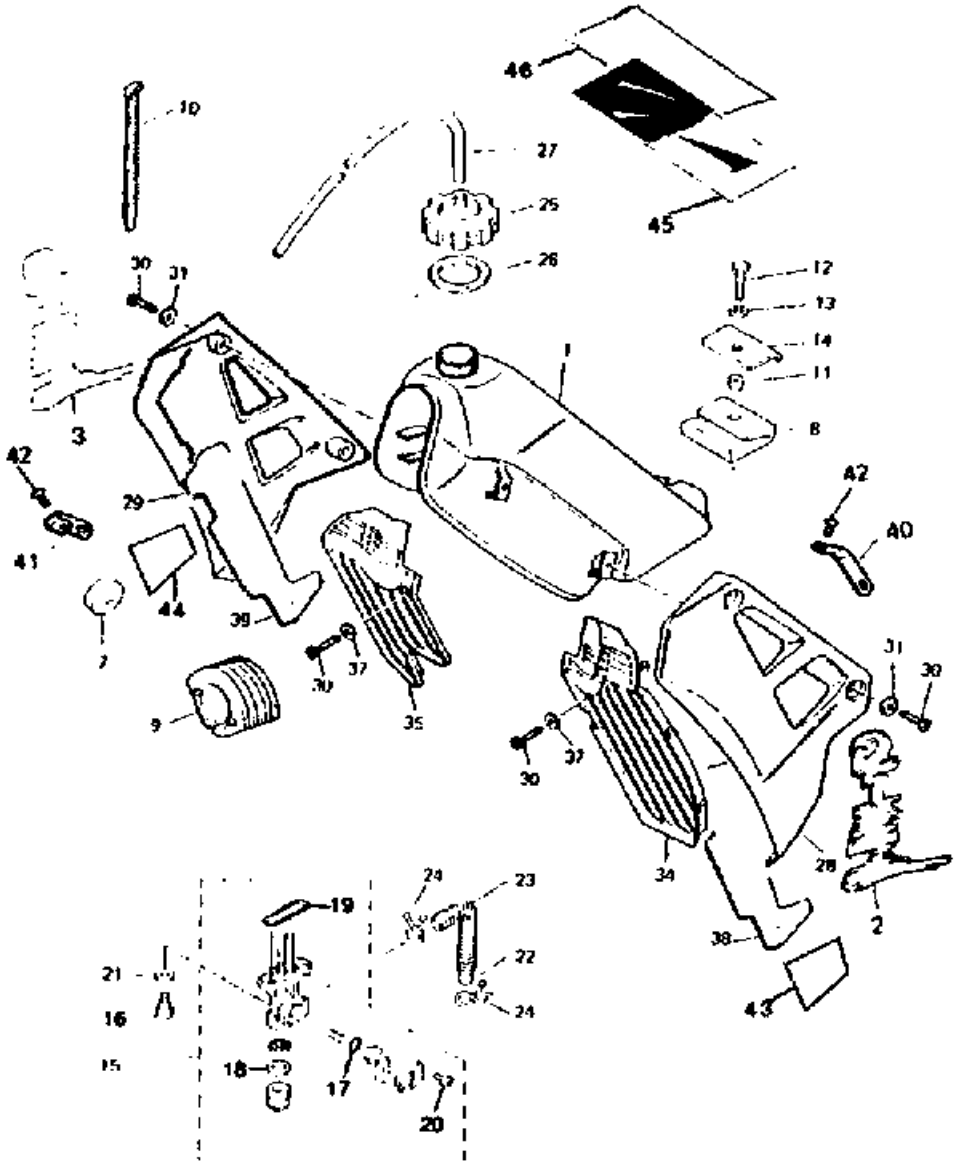

3MN1332-9220

Ref No	Part No	Description
01	3MN-F4110-00-15	Fuel Tank Comp.
01	3MN-F4110-00-11	Fuel Tank Comp.
01	3MN-F4110-00-14	Fuel Tank Comp.
02	3HL-F179L-00-00	Graphic 9
02	3HL-F179L-10-00	Graphic 9
02	3HL-F179L-20-00	Graphic 9
03	3HL-F179M-00-00	Graphic 10
03	3HL-F179M-10-00	Graphic 10
03	3HL-F179M-20-00	Graphic 10
07	26H-F1481-00-00	Bolt, Engine Mounting 1
08	5T8-F4182-01-00	Damper, Locating 2
09	34L-24184-00-00	Damper, Locating 4
10	90465-13154-00	Clamp
11	90387-06825-00	Collar
12	97001-06030-00	Bolt
13	92990-06100-00	Washer, Spring
14	5T8-F4186-00-00	Washer, Special
15	5T8-F4500-01-00	Fuel Cock Assy 1
20	90149-06011-00	Screw
21	90202-06010-00	Washer, Plate
22	3HL-24311-00-00	Pipe, Fuel 1
23	90501-08410-00	Spring, Compression
24	90467-08003-00	Clip
25	5T8-F4611-00-00	Body, Cap
26	5T8-F4612-00-00	Gasket, Cap
27	90445-09100-00	Hose
28	3MN-F172A-30-00	Panel 1
28	3MN-F172A-10-00	Panel 1
28	3MN-F172A-40-00	Panel 1
29	3MN-F172G-30-00	Panel 3
29	3MN-F172G-10-00	Panel 3
29	3MN-F172G-40-00	Panel 3
30	92506-06012-00	Screw, Pan Head
31	90201-06059-00	Washer, Plate
34	3HL-F172F-00-00	Panel 2
35	3HL-F172H-00-00	Panel 4
36	3HL-F4164-00-00	Emblem 4
37	90201-062A8-00	Washer, Plate
38	3HL-F414H-00-00	Damper, Plate 1
39	3HL-F414J-00-00	Damper, Plate 2
40	3HL-F172K-00-00	Bracket 1
41	3HL-F172L-00-00	Bracket 2
42	3HL-F1728-00-00	Rivet
42	3MN-F171L-00-00	Mole, Side Cover 1
42	3MN-F171M-00-00	Mole, Side Cover 2


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

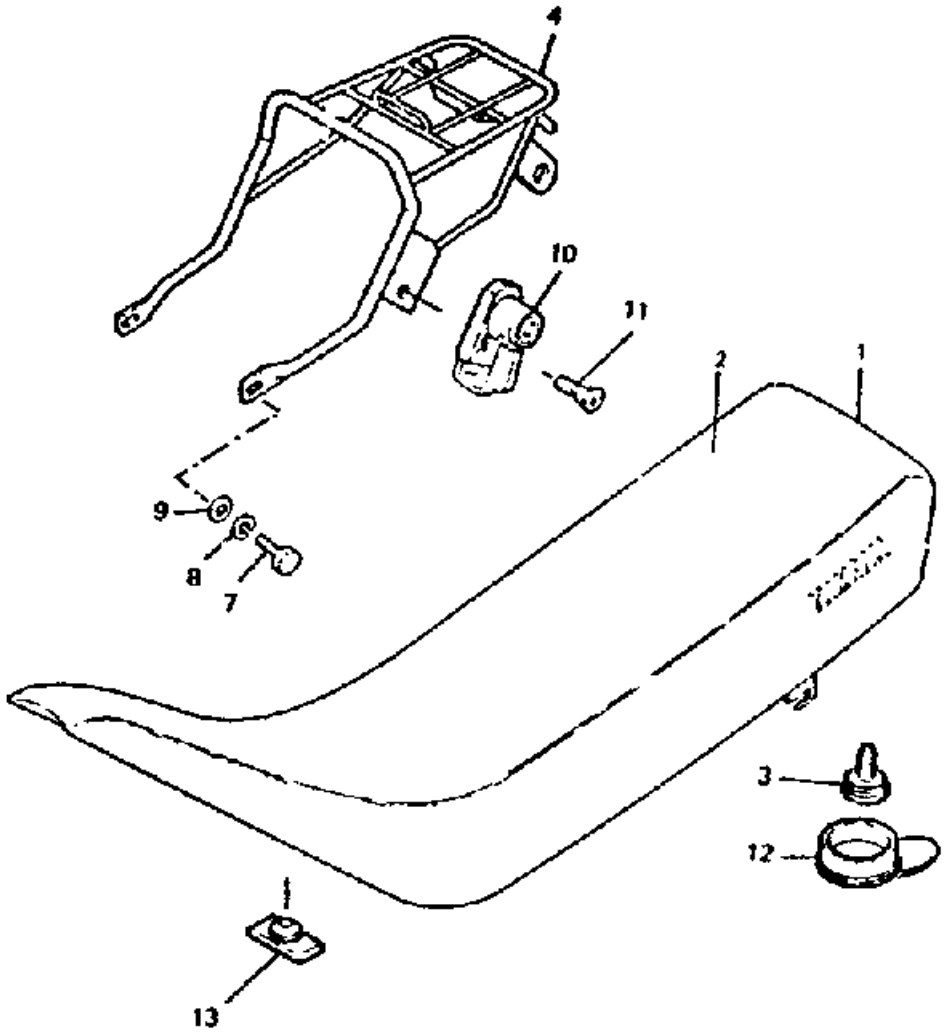

Ref No	Part No	Description
01	3HL-F4730-70-00	Double Seat Assy
01	3HL-F4730-80-00	Double Seat Assy
01	3HL-F4730-90-00	Double Seat Assy
02	3HL-F4731-70-00	Cover, Seat
02	3HL-F4731-80-00	Cover, Seat
02	3HL-F4731-90-00	Cover, Seat
03	3HL-F4739-00-00	Bolt, Seat Fitting
04	3MP-F4380-00-11	Pipe Joint Assy
07	97016-06020-00	Bolt
08	92906-08600-00	Washer, Plate
09	92906-08600-00	Washer, Plate
10	5T8-F1398-00-00	Hanger, Helmet
11	92701-06018-00	Screw, Flat Head
12	3HL-F4742-10-00	Grommet
13	509-24724-00-00	Damper, Seat


3MN1332 - 9230

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

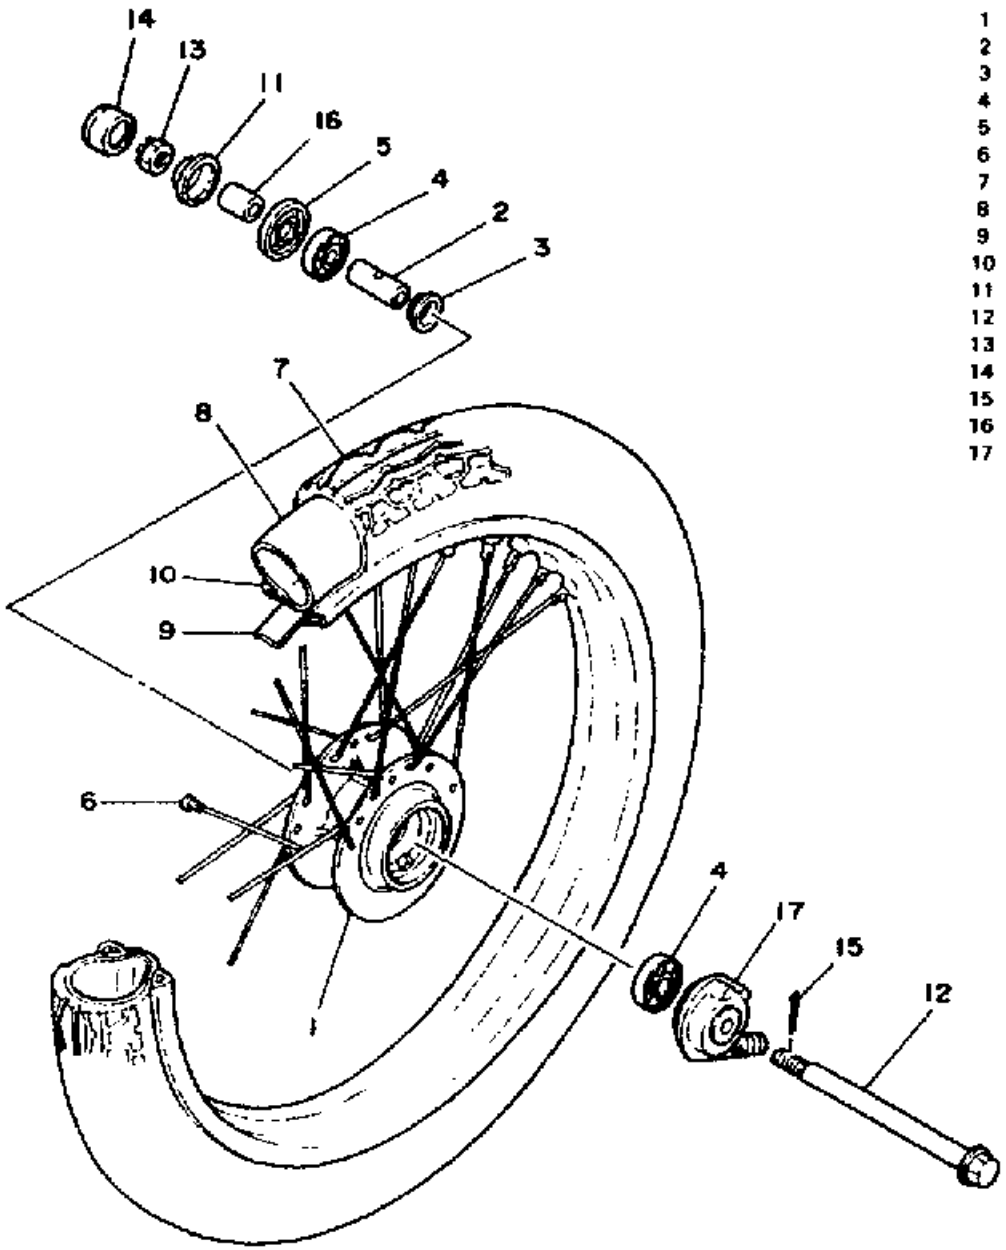


	Ref No	Part No	Description
1	01	3HL-F5111-00-12	Hub, Front
2	02	90560-12208-00	Spacer
3	03	5T8-F5315-00-00	Flange, Spacer
4	04	93306-301Y2-00	Bearing
5	05	93102-18008-00	Oil Seal
6	06	3HL-25104-10-00	Spoke Set, Front
7	07	94701-218A1-00	Plug, Spark
8	08	94225-21812-00	Tube
9	09	94330-21814-00	Band, Rim
10	10	94416-21471-00	Rim
11	11	5T8-F5118-00-00	Cover, Hub Dust
12	12	5T8-F5181-00-00	Axle, Wheel
13	13	90171-12015-00	Nut, Castle
14	14	5T8-F5188-00-00	Cap
15	15	91401-30025-00	Pin, Cotter
16	16	90387-12283-00	Collar
17	17	3HL-25190-10-00	Gear Unit Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

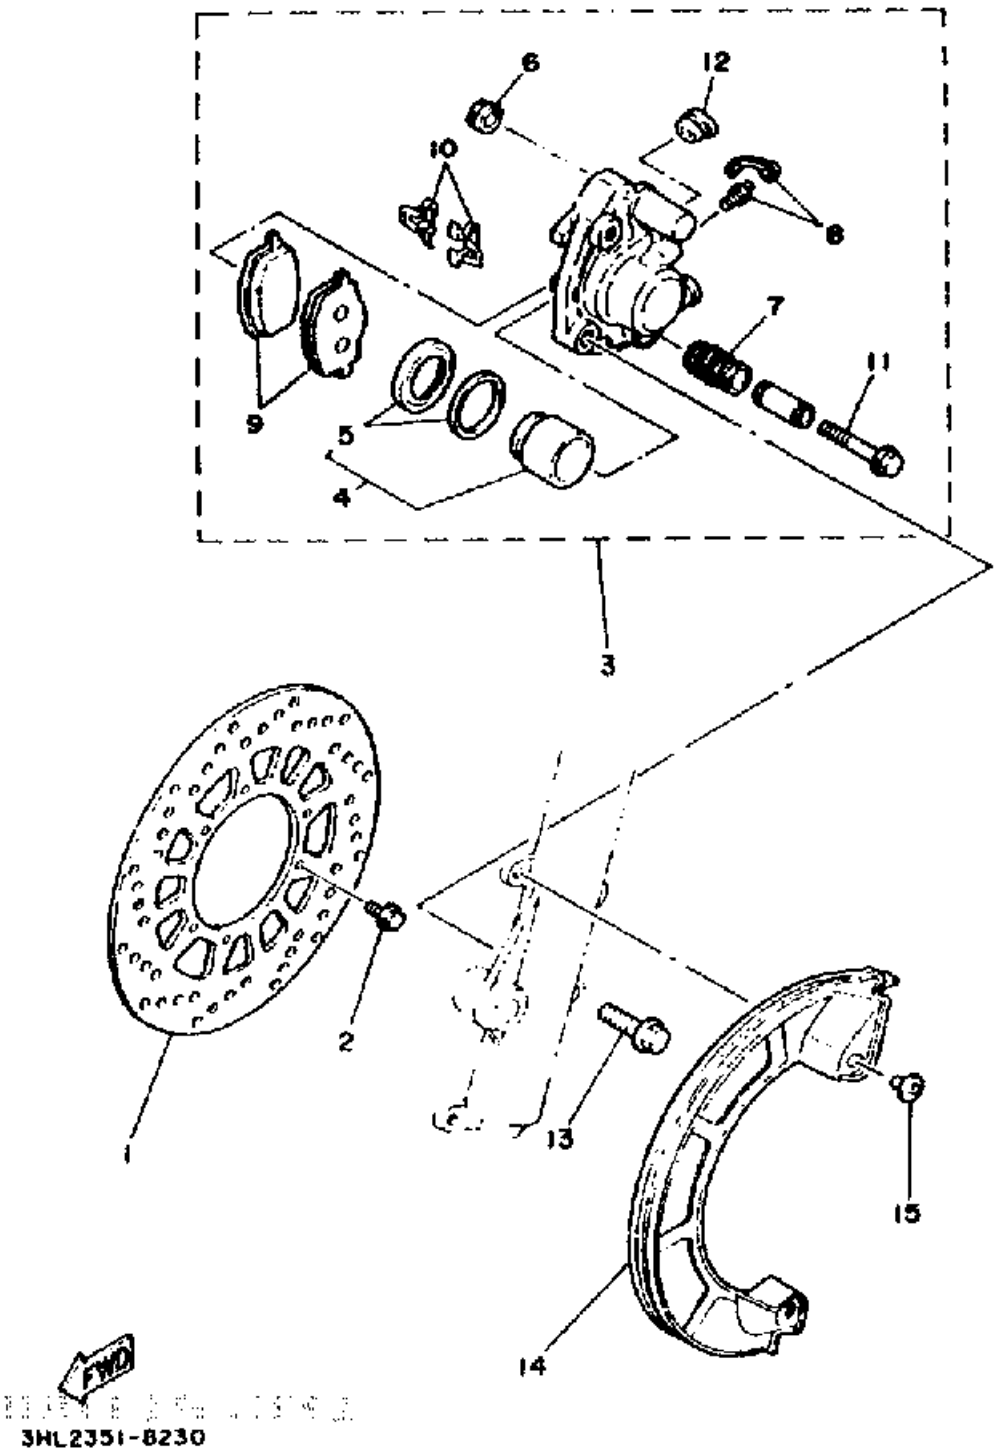


Ref No	Part No	Description
01	34X-25831-00-00	Disc, Brake
02	90109-06757-00	Bolt
03	34X-2580T-00-00	Caliper Assy (left)
04	34X-W0057-00-00	Piston Assy, Caliper
05	34X-W0047-00-00	Caliper Seal Kit
06	5R2-25917-00-00	Boot, Caliper
07	34X-25937-00-00	Boot 2
08	51L-W0048-00-00	Bleed Screw Kit
09	34X-W0046-01-00	Brake Pad Kit 2
10	34X-25919-00-00	Support, Pad
11	34X-25926-00-00	Bolt
12	34X-25845-00-00	Cap, Indicator
13	90105-10308-00	Bolt, Washer Based
14	3HL-25715-40-00	Cover 1
14	3HL-25715-50-00	Cover 1
14	3HL-25715-60-00	Cover 1
15	90149-06194-00	Screw

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

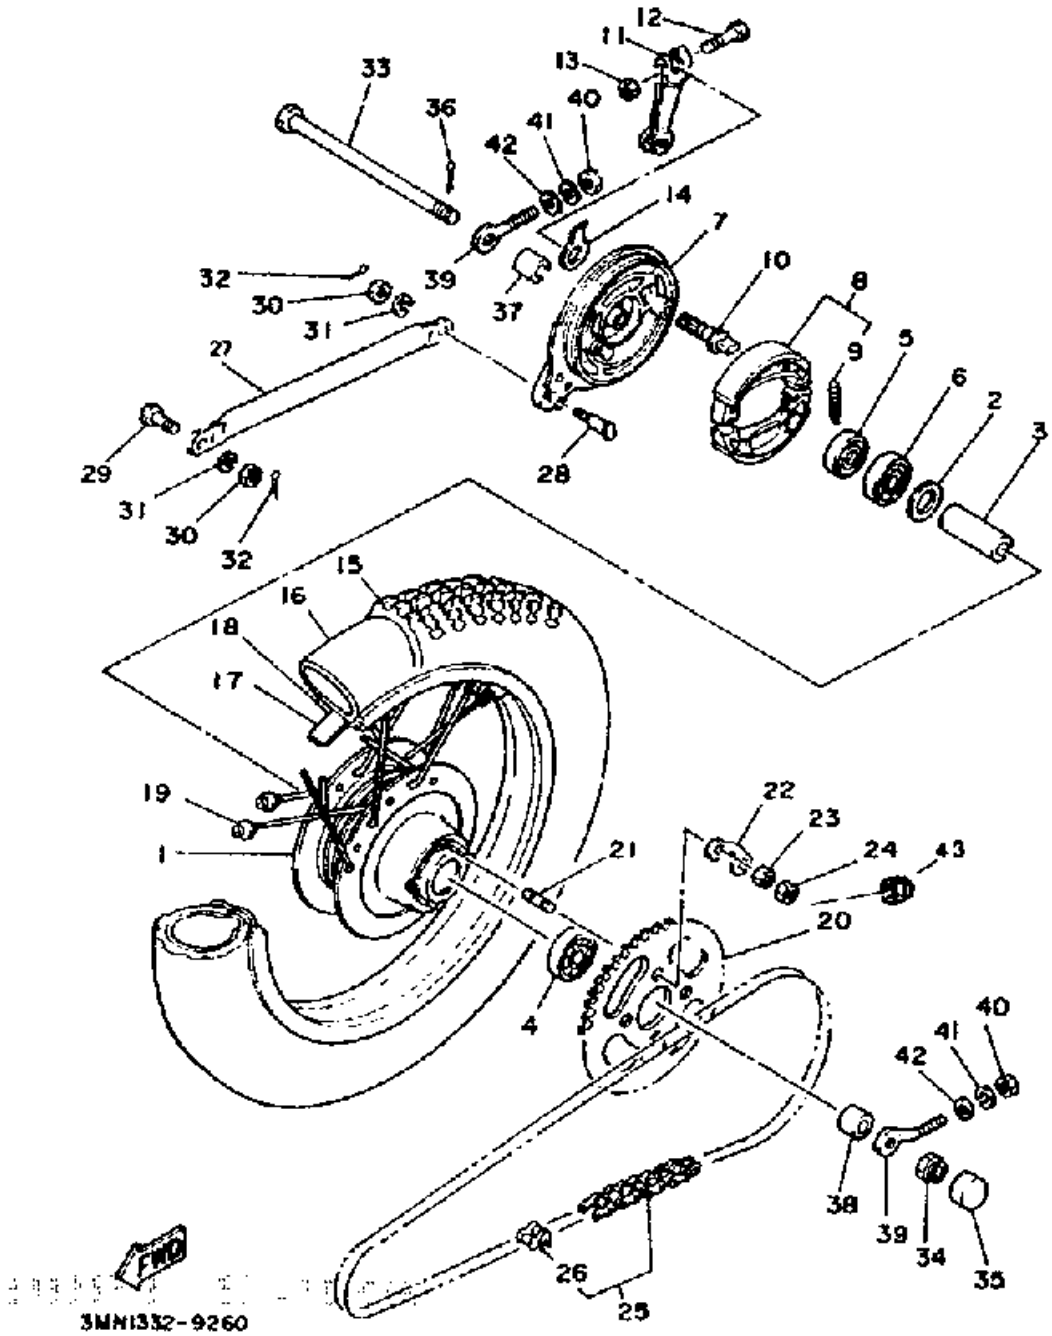


Ref No	Part No	Description
01	5T8-F5311-10-12	Hub, Rear
02	5T8-F5315-00-00	Flange, Spacer
03	90560-12207-00	Spacer
04	93306-301Y1-00	Bearing
05	93106-20002-00	Oil Seal
06	93306-301YO-00	Bearing
07	5T8-F5321-03-00	Plate, Brake Shoe
08	18A-W2534-00-00	Brake Shoe Kit 2
09	90506-18288-00	Spring, Tension
10	3Y6-25351-00-00	Camshaft
11	5RO-25344-00-00	Rim
12	90101-06278-00	Bolt
13	95601-06100-00	Nut, U
14	5T8-F533A-00-00	Plate, Indicator
15	94190-188A2-00	Tire
16	94232-18838-00	Tube
17	94332-18833-00	Band, Rim
18	94418-18171-00	Rim
19	5JO-25304-00-00	Spoke Set, Rear
20	17W-25448-10-00	Sprocket, Driven
21	90116-08804-00	Bolt, Stud
22	5T8-F5412-01-00	Washer
23	90170-08258-00	Nut
24	90179-08842-00	Nut
25	94580-52122-00	Chain
26	94680-52001-00	Joint, Chain
27	3HL-F5371-00-11	Bar, Tension
28	90109-08183-00	Bolt
29	90109-08368-00	Bolt
30	95303-08700-00	Nut
31	92990-08100-00	Washer, Spring
32	91401-20015-00	Pin, Cotter
33	5T8-F5381-00-00	Axle, Wheel
34	90171-12015-00	Nut, Castle
35	5T8-F5188-00-00	Cap
36	91401-30025-00	Pin, Cotter
37	90387-12819-00	Collar
38	90387-12820-00	Collar
39	1MK-F5389-00-00	Puller, Chain 2
40	95303-06600-00	Nut
41	92990-06100-00	Washer, Spring
42	92901-06600-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

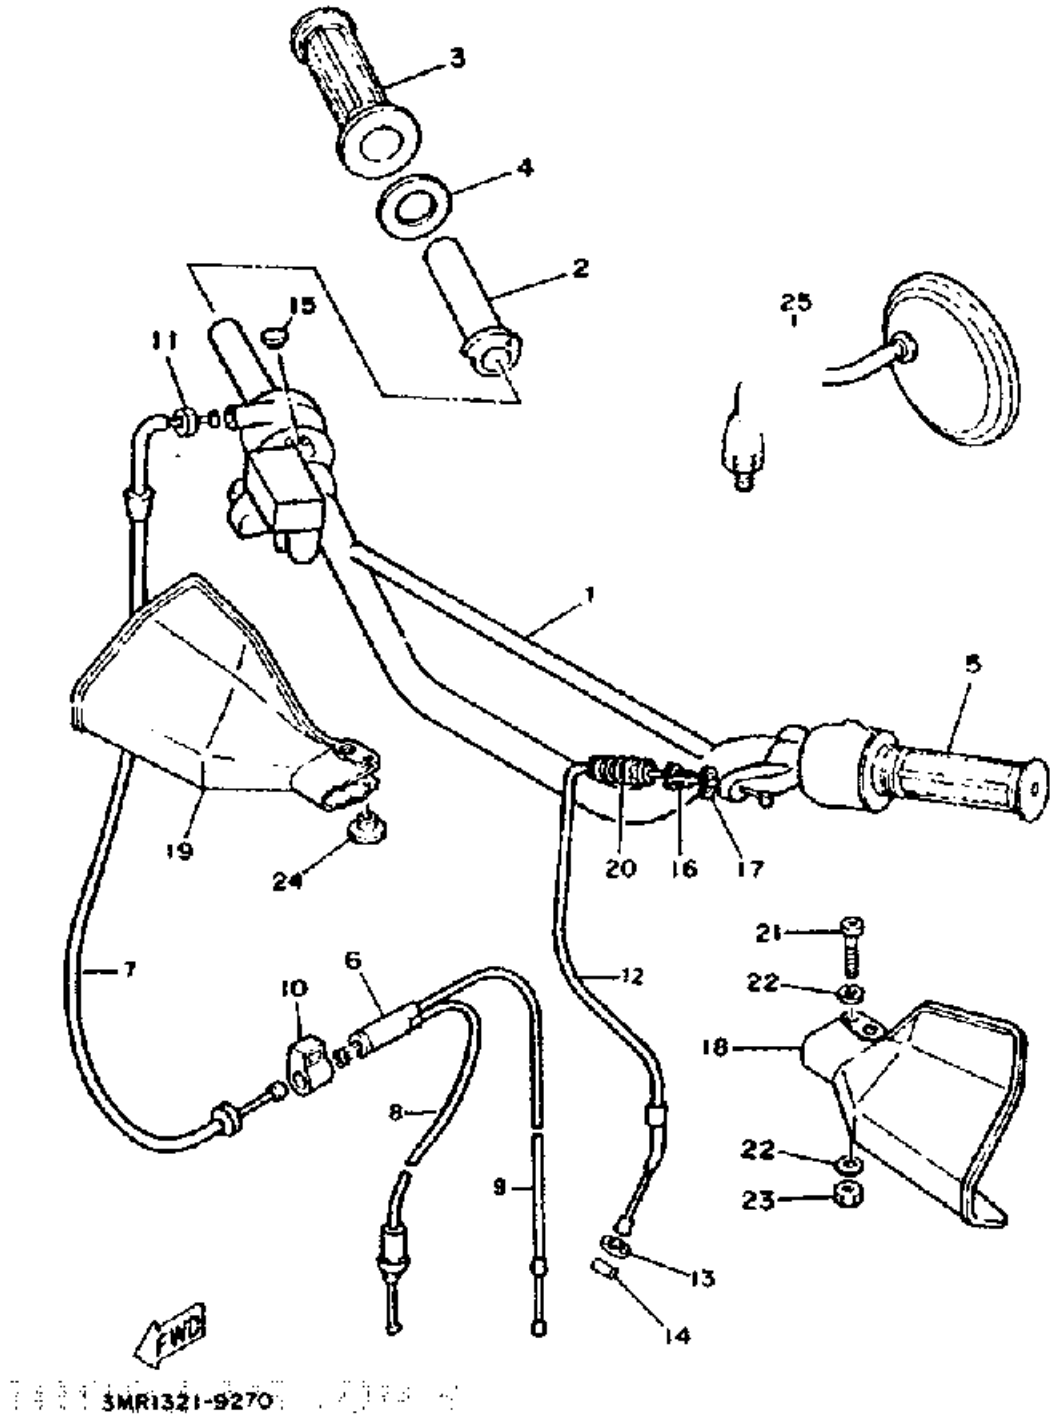


Ref No	Part No	Description
01	3HL-F6111-00-13	Handlebar
02	434-26243-00-00	Tube, Throttle Guide
03	5T8-F6242-00-00	Grip (right)
04	1M1-26249-01-00	Ring, Leaf
05	5T8-F6241-00-00	Grip
06	5T8-F6261-00-00	Connector, Cable
07	3HL-F6311-10-00	Cable, Throttle 1
08	3HL-F6312-00-00	Cable, Throttle 2
09	3MP-F6321-00-00	Cable, Pump
10	5T8-F6393-01-00	Holder
11	90170-10038-00	Nut
12	3MR-F6335-00-00	Cable, Clutch
13	92901-06600-00	Washer, Plate
14	5T8-F6363-00-00	End, Cable
15	90338-09012-00	Plug
16	90123-08046-00	Bolt
17	90179-08148-00	Nut
18	3BN-26141-20-00	Guard, Brush 1
18	2KF-26141-50-00	Guard, Brush 1
18	2TB-26141-50-00	Guard, Brush 1
19	3BN-26142-20-00	Guard, Brush 2
19	2KF-26142-00-00	Guard, Brush 2
19	3BN-26142-30-00	Guard, Brush 2
20	1E6-26342-00-00	Boot, Cable
21	92501-06035-00	Screw, Pan Head
22	92901-06600-00	Washer, Plate
23	95303-06700-00	Nut
24	90387-06500-00	Collar
25	55V-26280-00-00	Rear View Mirror Assy(left)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

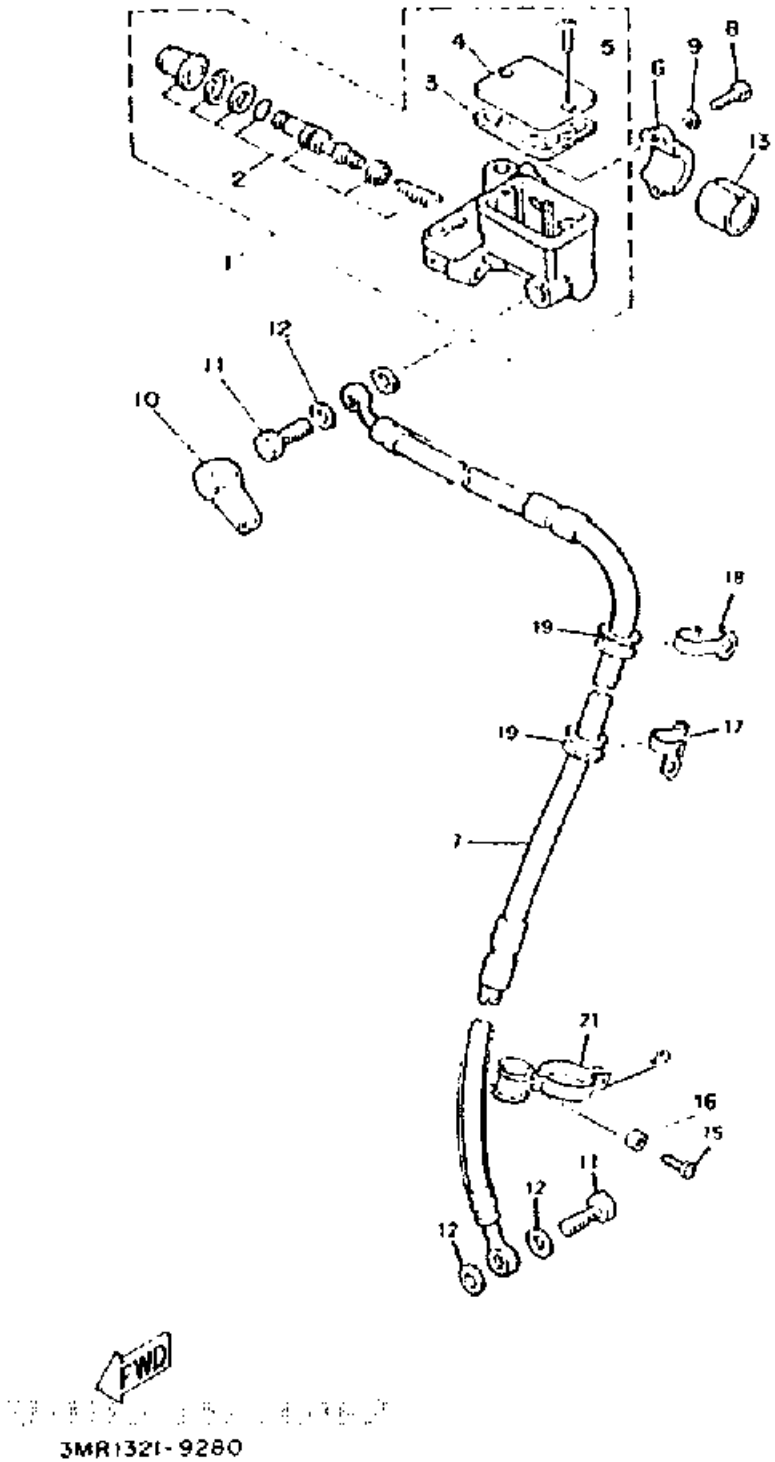


Ref No	Part No	Description
01	2KF-25850-00-00	Master Cylinder Assy
02	59X-W0041-00-00	Cylinder Kit, Master
03	55U-25854-00-00	Diaphragm, Reservoir
04	2KF-25852-01-00	Cap, Reservoir
05	98506-04012-00	Screw, Pan Head
06	56A-25867-00-00	Bracket, Master Cylinder
07	3HL-25872-12-00	Hose, Brake 1
08	97016-06025-00	Bolt
09	92906-06100-00	Washer, Spring
10	4LO-25862-00-00	Boot, Master Cylinder
11	90401-10034-00	Bolt, Union
12	90201-10118-00	Washer, Plate
13	90387-225N2-00	Collar
14	97506-06618-00	Bolt, With Washer
15	97506-06618-00	Bolt, With Washer
17	3HL-F3319-30-00	Holder, Cable 2
18	3HL-F3319-20-00	Holder, Cable 2
19	3HL-F3389-00-00	Guide, Cable
20	3HL-F3318-20-00	Holder, Cable 1
21	3HL-F3318-10-00	Holder, Cable 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

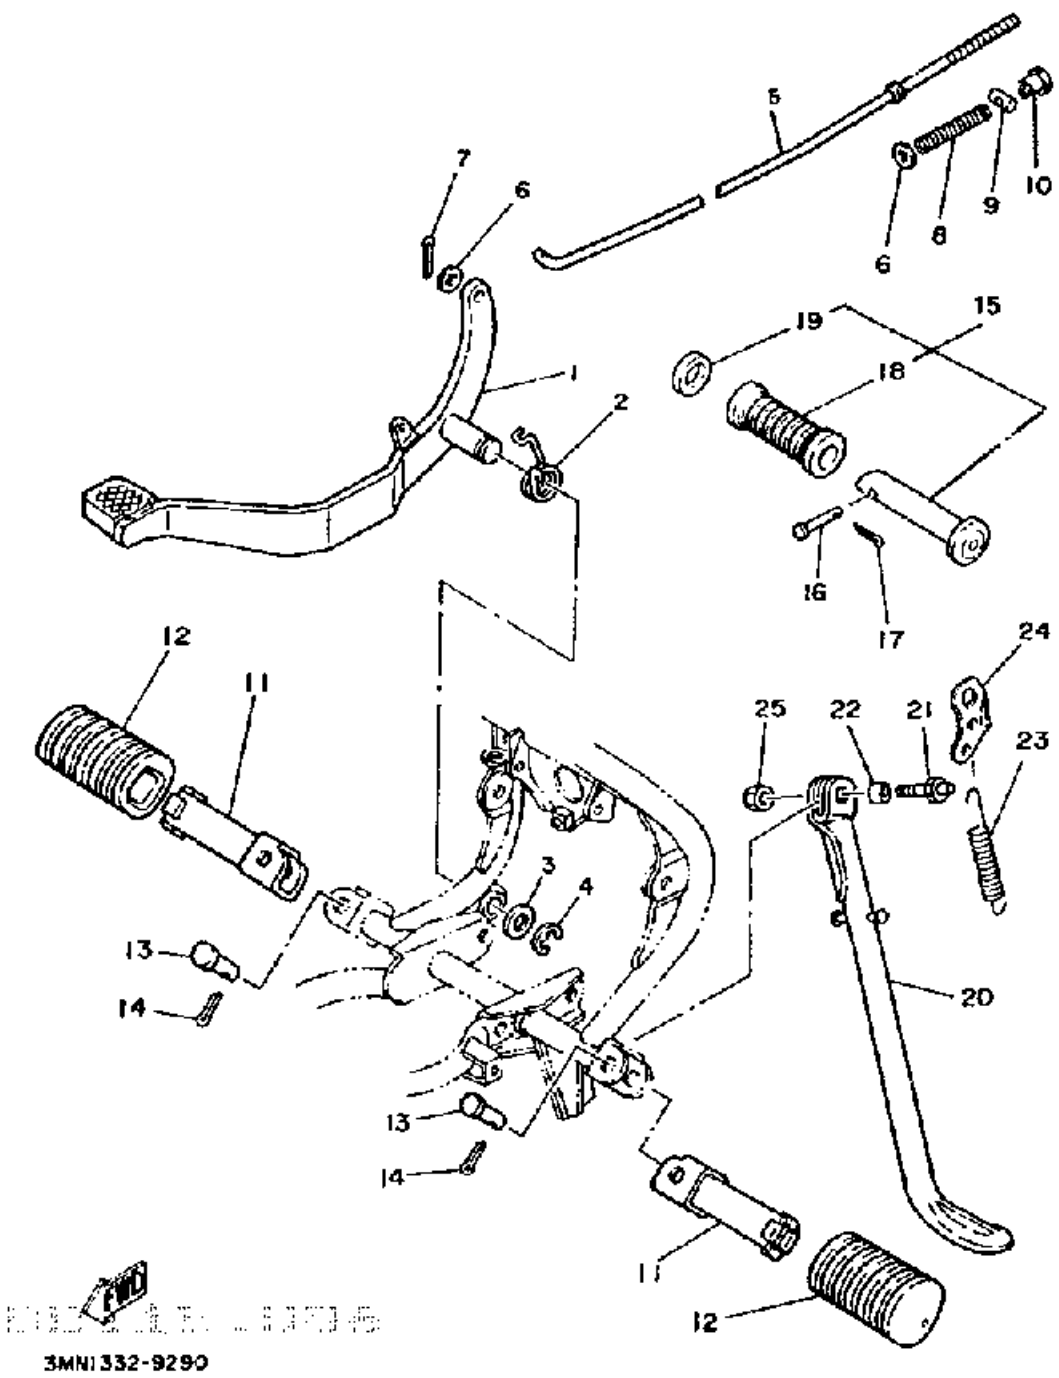

Ref No	Part No	Description
01	5T8-F7211-00-00	Pedal, Brake
02	90508-32354-00	Spring, Torsion
03	90201-14813-00	Washer, Plate
04	93430-10803-00	Circlip
05	3MP-F7231-00-00	Rod, Brake
06	92901-06600-00	Washer, Plate
07	91401-20015-00	Pin, Cotter
08	90501-10245-00	Spring, Compression
09	90249-12008-00	Pin
10	90179-06176-00	Nut
11	5T8-F7421-00-00	Footrest 2
12	5T8-F7413-00-00	Cover, Footrest
13	91701-08038-00	Pin, Clevis
14	91401-20015-00	Pin, Cotter
15	5T8-F7431-00-00	Footrest, Rear 1
16	91701-06032-00	Pin, Clevis
17	91401-16012-00	Pin, Cotter
18	5T8-F7433-00-00	Cover, Rear Footrest
19	90201-20279-00	Washer, Plate
20	1NN-F7311-00-11	Stand, Side
21	90387-08829-00	Collar
22	90387-08884-00	Collar
23	90506-20041-00	Spring, Tension
24	5T8-F7315-00-00	Link, Side Stand
25	95303-08700-00	Nut


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

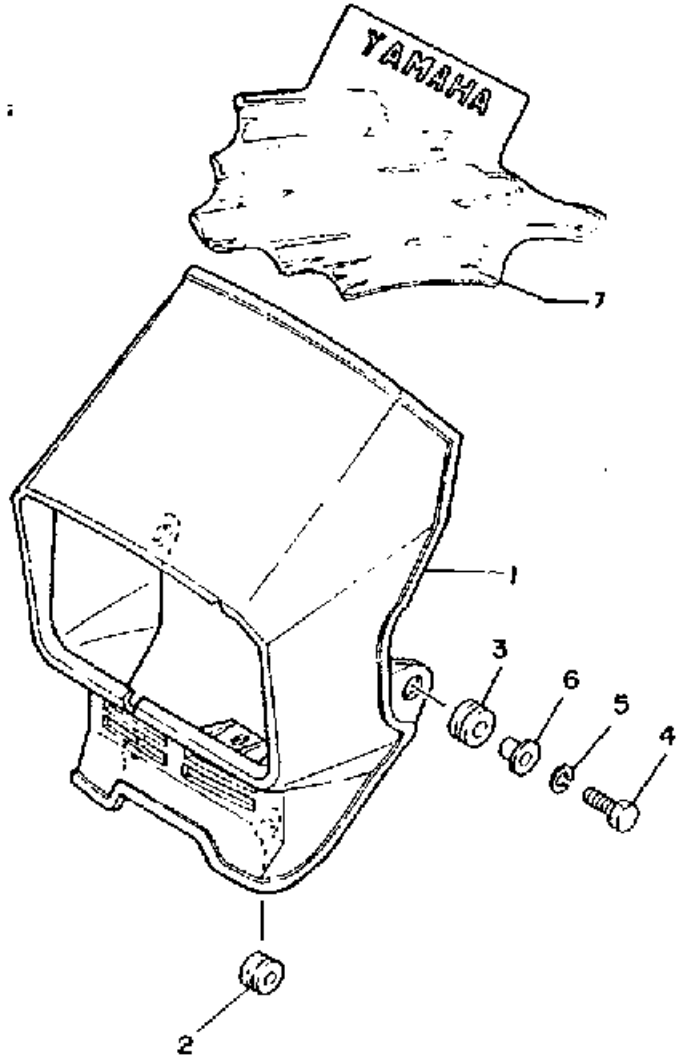

Ref No	Part No	Description
01	1NN-F8351-00-1(	Body, Cowling
01	1NN-F8351-00-1:	Body, Cowling
01	1NN-F8351-00-1!	Body, Cowling
02	90480-12053-00	Grommet
03	90480-14023-00	Grommet
04	97001-06025-00	Bolt
05	92906-06100-00	Washer, Spring
06	90387-07391-00	Collar
07	3HL-F8368-AO-0	Emblem
07	3HL-F8368-80-0(	Emblem
07	3HL-F8368-90-0(	Emblem




Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

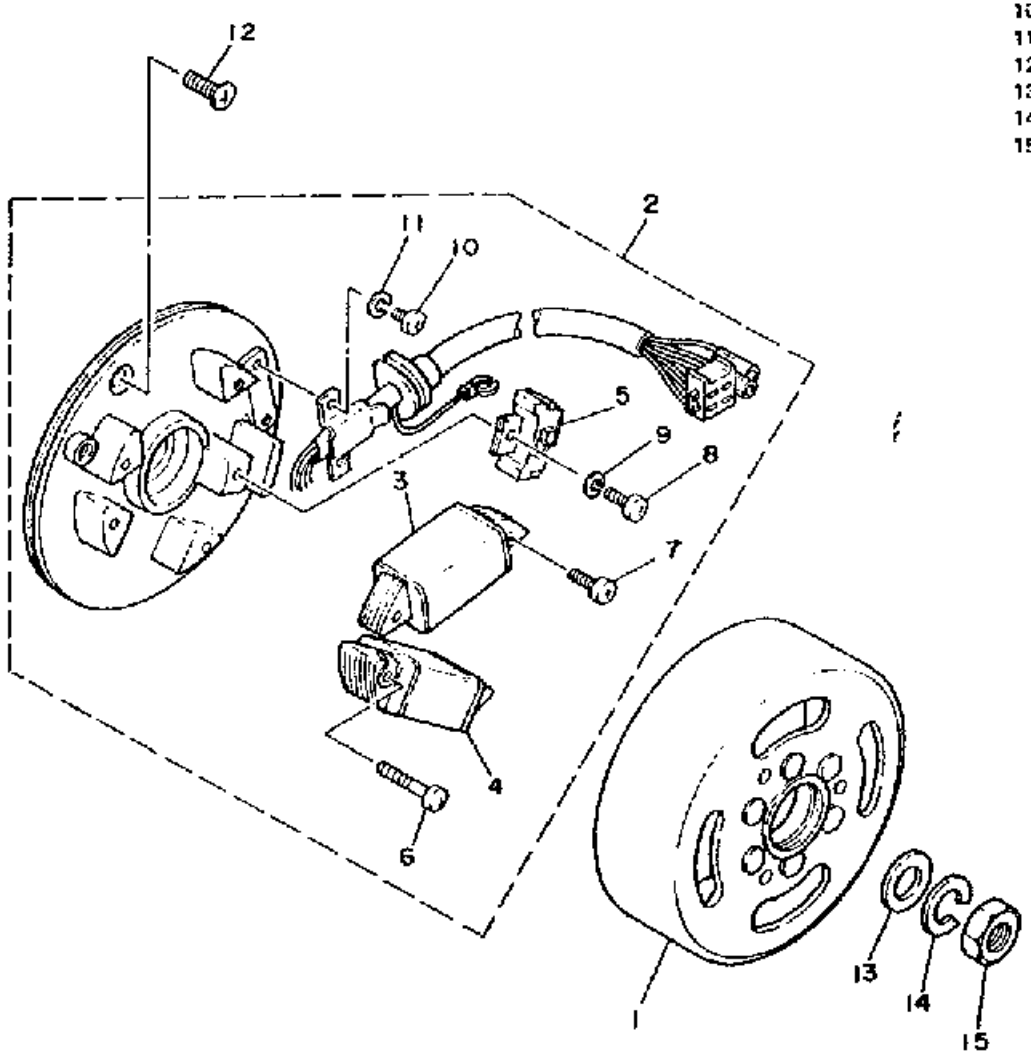

Ref No	Part No	Description
01	3MR-85550-00-00	Rotor Assy
02	3MP-85560-00-00	Base Assy
03	5G3-85520-M1-00	Coil, Charge
04	2AL-81313-MO-00	Coil, Lighting 1
05	3HL-85580-00-00	Coil, Pulser
06	98511-04025-00	Screw, Pan Head
07	98511-04012-00	Screw, Pan Head
08	98580-04010-00	Screw, Pan Head
09	92901-04100-00	Washer, Spring
10	98501-04006-00	Screw, Pan Head
11	92901-04100-00	Washer, Spring
12	98701-05016-00	Screw, Flat Head
13	90201-12535-00	Washer, Plate
14	92901-12100-00	Washer, Spring
15	90170-12175-00	Nut


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

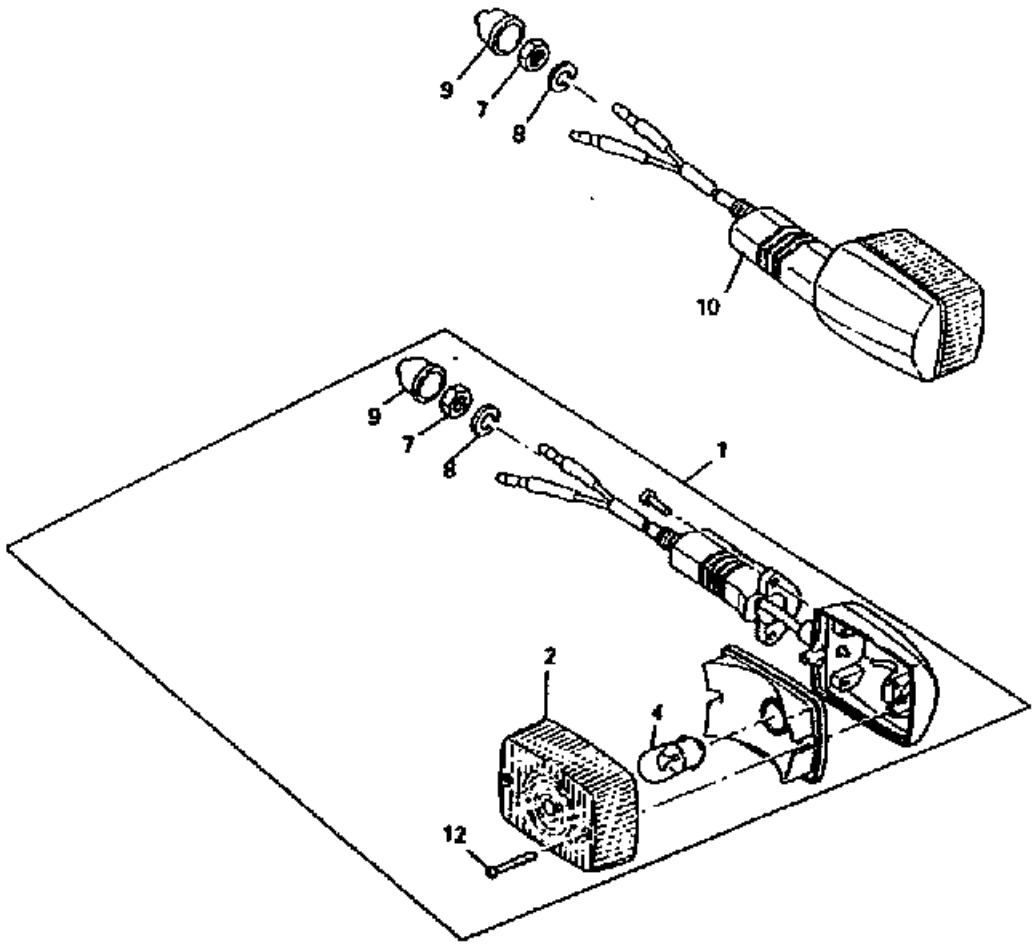

E5


Ref No	Part No	Description
01	3HL-H3310-00-00	Front Flasher Light Assy 1
02	5T8-H3312-10-00	Lens, Flasher
03	5T8-H3313-10-00	Gasket, Flasher Lens
04	3HL-H3331-00-00	Bulb, Flasher
05	98580-04010-00	Screw, Pan Head
06	97701-40530-00	Screw, Tapping
07	95303-12600-00	Nut
08	92901-12100-00	Washer, Spring
09	10V-83365-00-00	Cap
10	3HL-H3330-00-00	Rear Flasher Light Assy 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

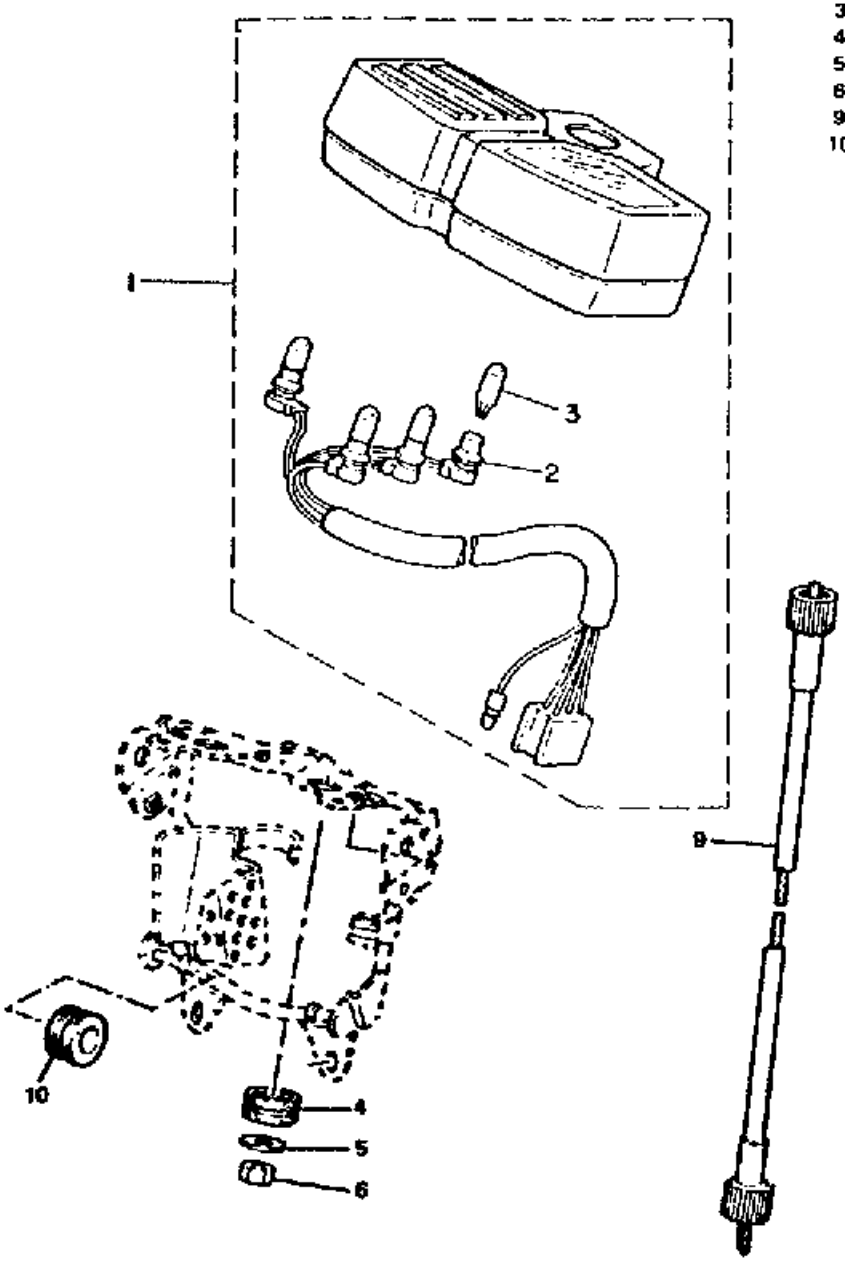


Ref No	Part No	Description
01	3MP-83510-00-00	Speedometer Assy
02	3MP-83520-00-00	Socket Cord Assy
03	4G1-84744-00-00	Bulb
04	5T8-H3513-00-00	Damper
05	5T8-H3513-00-00	Damper
06	95303-06600-00	Nut
09	3HL-H3550-10-00	Speedometer Cable Assy
10	90480-12053-00	Grommet

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

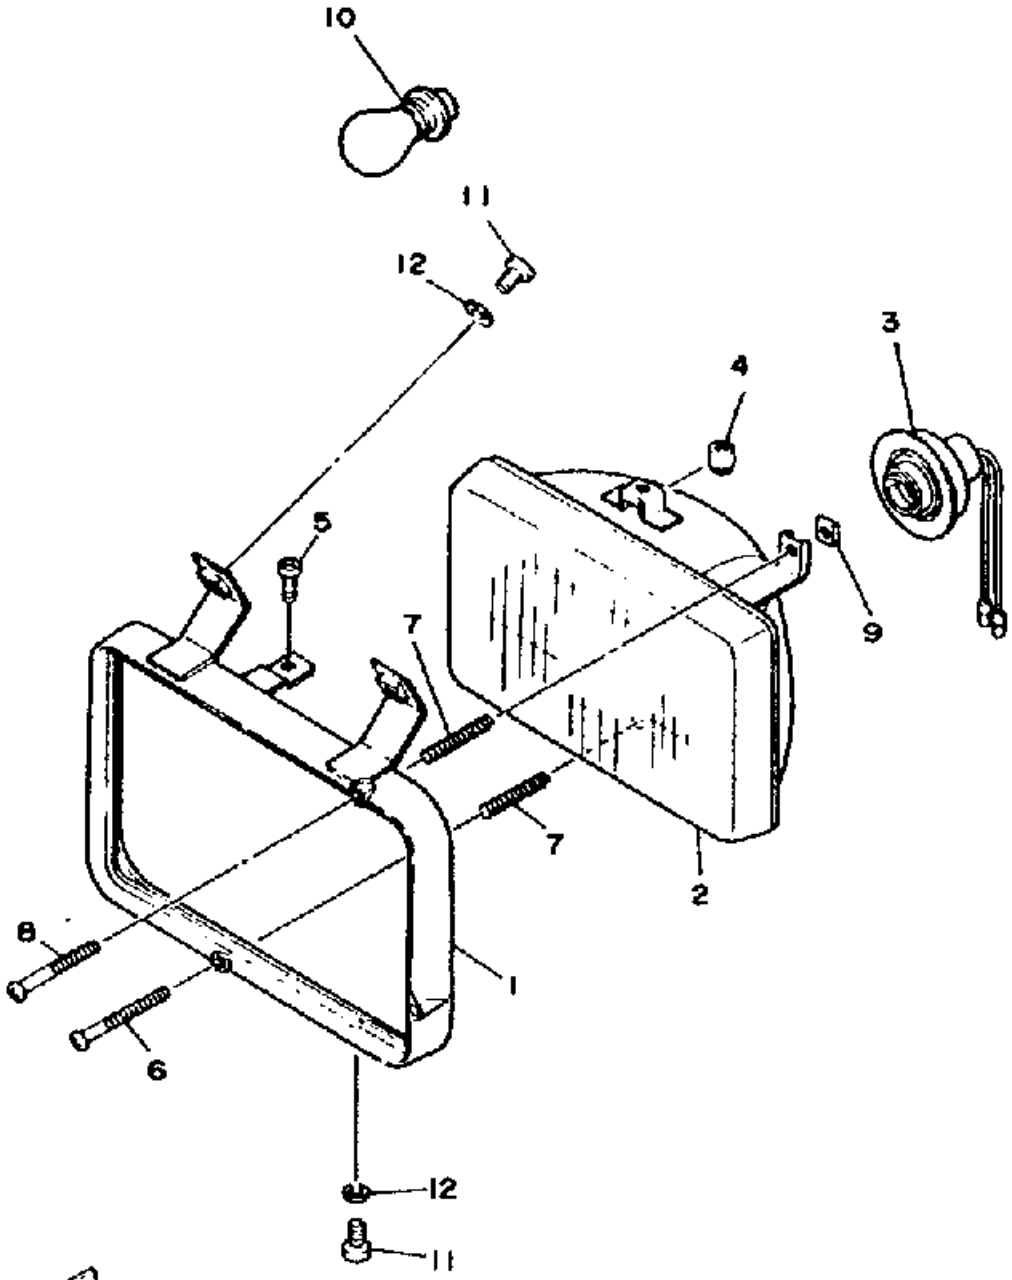


Ref No	Part No	Description
01	1NN-84315-00-00	Rim, Headlight
02	3MP-84320-00-00	Lens Assy
03	1NN-84140-00-00	Socket Cord Assy
04	25G-84326-HO-00	Nut
05	98501-05010-00	Screw, Pan Head
06	1NN-84131-10-00	Screw, Rim Adjuster
07	1NN-84332-00-00	Spring, Screw
08	1NN-84131-10-00	Screw, Rim Adjuster
09	1L9-84334-60-00	Nut, Adjusting
10	3MP-84314-00-00	Bulb, Headlight
11	92506-06016-00	Screw, Pan Head
12	90201-062A8-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

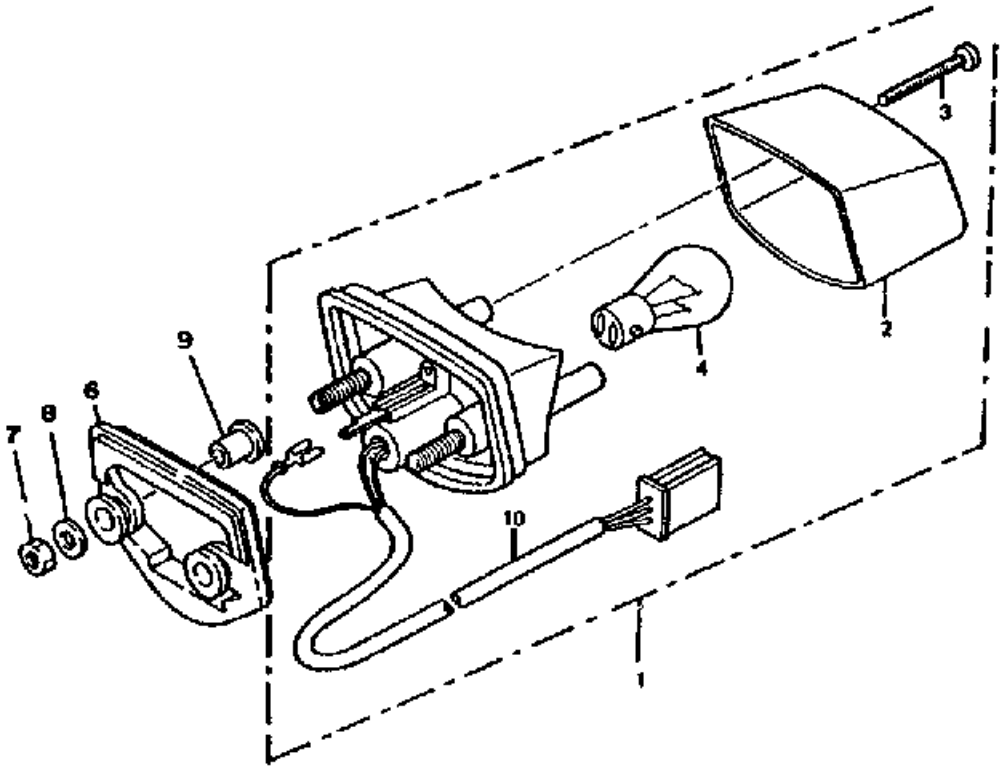

Ref No	Part No	Description
01	3HL-H4710-00-00	Taillight Unit Assy
02	3HL-H4520-00-00	Taillight Base Assy
03	3HL-H4524-00-00	Screw, Lens Fitting
04	3HL-H4535-00-00	Bulb
06	5T8-H4736-00-00	Damper, Tail 1
07	95303-06600-00	Nut
08	90201-06812-00	Washer, Plate
09	90387-07391-00	Collar
10	3HL-H4517-00-00	Cord, Taillight

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

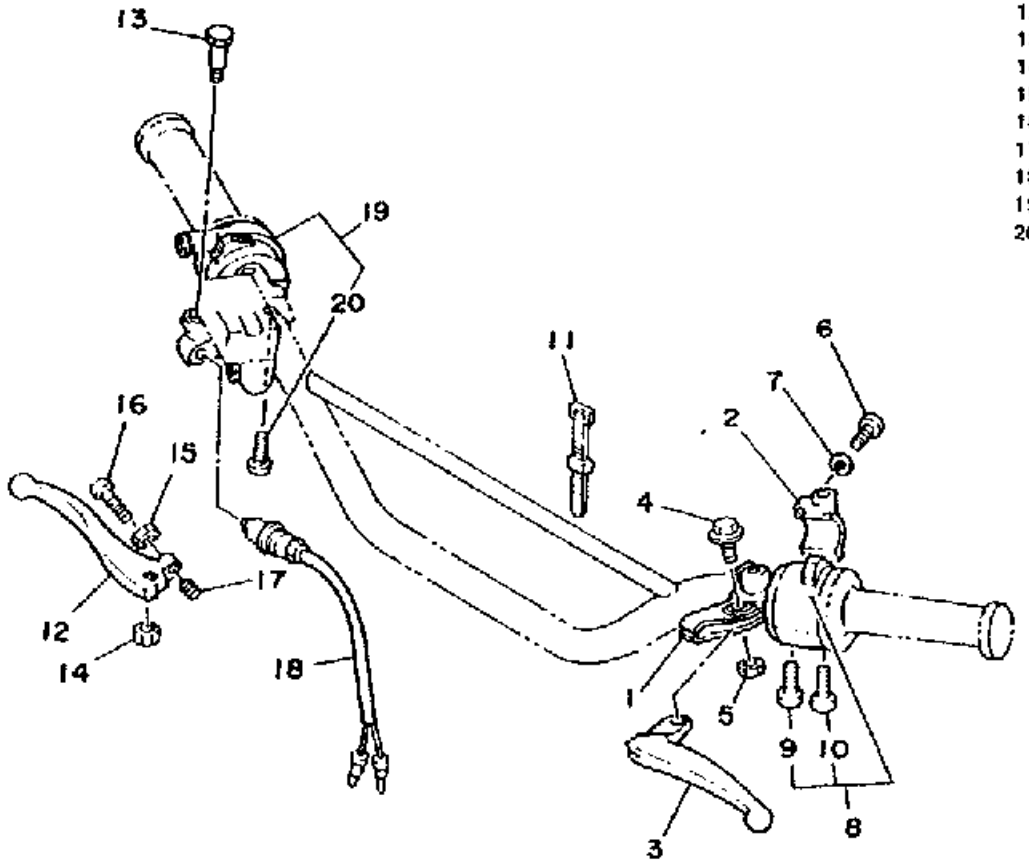


Ref No	Part No	Description
01	1LN-82911-00-00	Holder, Lever 1
02	33G-82913-00-00	Holder, Lever Lower 1
03	5Y1-83912-00-00	Lever 1
04	90109-06799-00	Bolt
05	95616-06100-00	Nut, U
06	98506-05020-00	Screw, Pan Head
07	92906-05100-00	Washer, Spring
08	3HL-83973-00-00	Switch, Handle 3
09	98506-05030-00	Screw, Pan Head
10	98506-05022-00	Screw, Pan Head
11	5T8-H3936-00-00	Band, Switch Cord
12	43F-83922-00-00	Lever 2
13	90109-062A8-00	Bolt
14	95616-06100-00	Nut, U
15	90170-06010-00	Nut
16	90149-06289-00	Screw
17	90501-10312-00	Spring, Compression
18	1AO-83980-30-00	Front Stop Switch Assy
19	1R6-83976-01-00	Switch, Handle 1
20	90167-05027-00	Screw, Tapping
21	5T8-H3936-00-00	Band, Switch Cord

FWD

3MS1342-9360

15

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

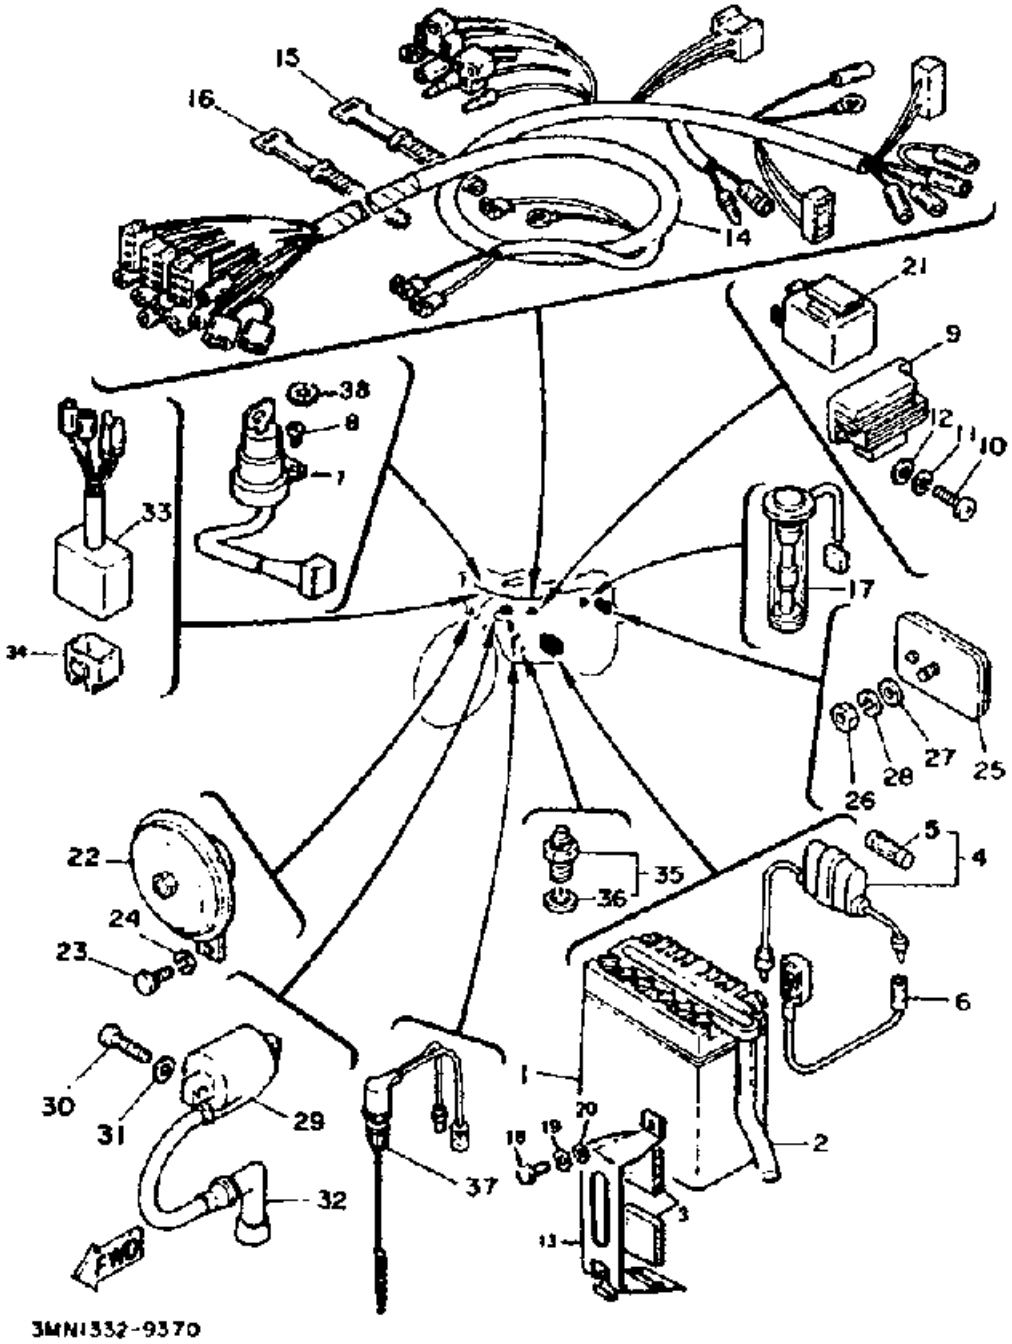

Ref No	Part No	Description
01	3HL-82110-00-00	Battery Assy
02	90445-08171-00	Hose
03	3HL-H2121-00-00	Pad, Battery
04	5T8-H2150-00-00	Fuse Holder Assy
05	116-82151-00-00	Fuse
06	10W-82115-00-00	Wire, Plus Lead
07	3HL-H2510-10-00	Main Switch Assy
08	98901-04010-00	Screw, Bind
09	22J-81960-92-00	Rectifier & Regulator Assy
10	98501-05016-00	Screw, Pan Head
11	92901-05100-00	Washer, Spring
12	92901-05600-00	Washer, Plate
13	3HL-H2128-00-00	Bracket, Battery
14	3MN-82590-00-00	Wire Harness Assy
15	5T8-H3936-00-00	Band, Switch Cord
16	5T8-H3936-00-00	Band, Switch Cord
17	3HL-85720-00-00	Oil Level Gauge Assy
18	97001-06012-00	Bolt
19	92990-06100-00	Washer, Spring
20	92990-06600-00	Washer, Plate
21	53V-83350-40-00	Flasher Relay Assy
22	35R-83371-20-00	Horn
23	97001-06012-00	Bolt
24	92990-06100-00	Washer, Spring
25	3G1-85130-01-00	Rear Reflector Assy
26	95303-05600-00	Nut
27	92990-05200-00	Washer, Plain
28	92901-05100-00	Washer, Spring
29	2JN-82310-MO-00	Ignition Coil Assy
30	92501-06020-00	Screw, Pan Head
31	92990-06100-00	Washer, Spring
32	1J7-82370-00-00	Plug Cap Assy
33	3MP-85540-00-00	C.d.i. Unit Assy
34	3MP-H5546-00-00	Band
35	2H7-82543-00-00	Gasket
36	431-82543-00-00	Gasket
37	1MK-H2530-VO-00	Stop Switch Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.