YAMAHA

PARTS LIST

MODEL FS1 ('77)

(TYPE 2G0)

MODEL FS1-DX ('77)

(TYPE 2G0)

WITHOUT PEDAL

FOR ENGLAND

YAMAHA MOTOR CO., LTD.

COPY RIGHT: ALL RIGHTS RESERVED


NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT PERMISSION.

FOREWORD

This Parts List relates to the parts in use for the YAMAHA FS1/FS1-DX. When you are ordering replacement parts for the YAMAHA FS1/FS1-DX, refer to this Parts List and quote both part numbers and part names correctly.

1. Structure of Part No.

Yamaha parts are divided largely into two categories; general parts and standard parts, and each part No. has the following structure:

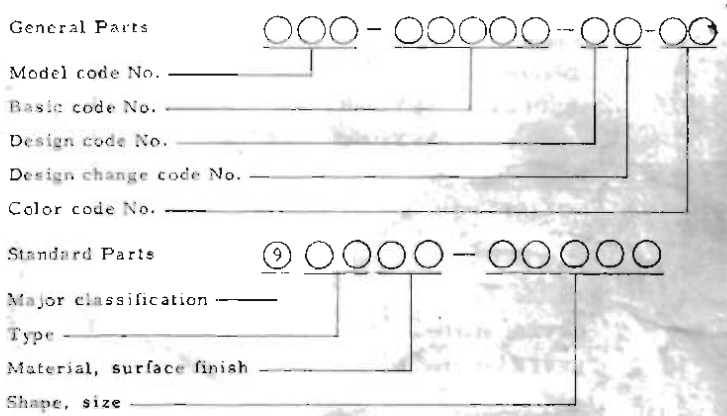

Note: Every standard No. begins with 9.

2. How to Use this Parts List

(1) Except for steel balls (whose size is indicated in inches), the size of all parts is indicated in millimeters in the following manner.

Hose (rubber or vinyl) .... Inside diameter - length

O-ring ..... Section area - inside diameter

Washer, shim, collar ..... Inside diameter - outside diameter-thickness (length)

(2) Parts, which are to be supplied in the form of assemblies, are listed with an indention of one letter's space, and a dot (.) is put

against the name of each part. If any two different assemblies (e.g., right and left side components) consist of almost the same type components, these two assemblies are listed in two lines, and then the names of component parts are listed in the subsequent lines with an indention as mentioned earlier. The quantity of parts is given in the following manner; that is, in the case of parts being the same in type between the right and left, a total quantity of parts is given. On the other hand, if the right and left side parts are different in type, the quantity of part(s) on each side is given.

Example

Description	Q'ty
CARBURETOR ASS'Y, left	1
CARBURETOR ASS'Y, right	1
. JET, pilot	2
. NOZZLE, main	2
⋮	
. LEVER, starter, left	1
. LEVER, starter, right	1

(3) Key to Symbols

U.R.	Use size (thickness) and/or number as required
U.N.	Use as many as you need
T	Number of teeth in a gear
V	Voltage for light bulbs
S	"S" type oil seal or "S" type circlip
SD	"SD" type oil seal
SO	"SO" type oil seal
SW	"SW" type oil seal
E	"E" type circlip
R	"R" type circlip
F/No.	Frame No. (Applicable machine No.)

(4) The right and left in relation to parts are determined on the basis of the rider facing toward the front.

(5) This Parts List is based on the model in the production line on Apr., 30, 1977. Accordingly, if any modifications which have been made to parts will be announced in the Yamaha Parts News. It is advisable that according to the Yamaha Parts News, You will make necessary corrections to the Parts List on hand to keep it up-to dated.

CONTENTS

ENGINE

Fig. 1	Crankcase · Cylinder	1
Fig. 2	Crankcase Cover	3
Fig. 3	Crank · Piston	5
Fig. 4	Clutch	9
Fig. 5	Transmission	11
Fig. 6	Shifter 1	15
Fig. 7	Shifter 2	17
Fig. 8	Kick Starter	19
Fig. 9	Intake	21
Fig. 10	Carburetor	23
Fig. 11	Exhaust	27
Fig. 12	Oil Pump	29
Fig. 13	Flywheel Magneto	31

CHASSIS

Fig. 14	Frame · Side Cover	35
Fig. 15	Rear Arm · Rear Cushion · Chain Case	39
Fig. 16	Stand · Footrest · Brake Pedal	41
Fig. 17	Front Fender · Rear Fender	43
Fig. 18	Front Fork (FS1)	45
Fig. 19	Front Fork (FS1-DX)	47
Fig. 20	Steering	49
Fig. 21	Handle · Wire (FS1)	51
Fig. 22	Handle · Wire (FS1-DX)	55
Fig. 23	Master Cylinder · Brake Hose (FS1-DX)	59
Fig. 24	Fuel Tank	61
Fig. 25	Oil Tank	63
Fig. 26	Seat	65

Fig. 27 Front Wheel (FS1) 67
Fig. 28 Front Wheel (FS1-DX) 71
Fig. 29 Disk Brake · Caliper (FS1-DX) 73
Fig. 30 Rear Wheel 75
Fig. 31 Head Lamp 79
Fig. 32 Speedometer 81
Fig. 33 Tail Lamp 83
Fig. 34 Flasher Lamp 85
Fig. 35 Electrical 87

REPAIR KIT


Fig. 36 Repair Kit 93

NUMERICAL INDEX

ENGINE




Fig. 1 CRANKCASE · CYLINDER

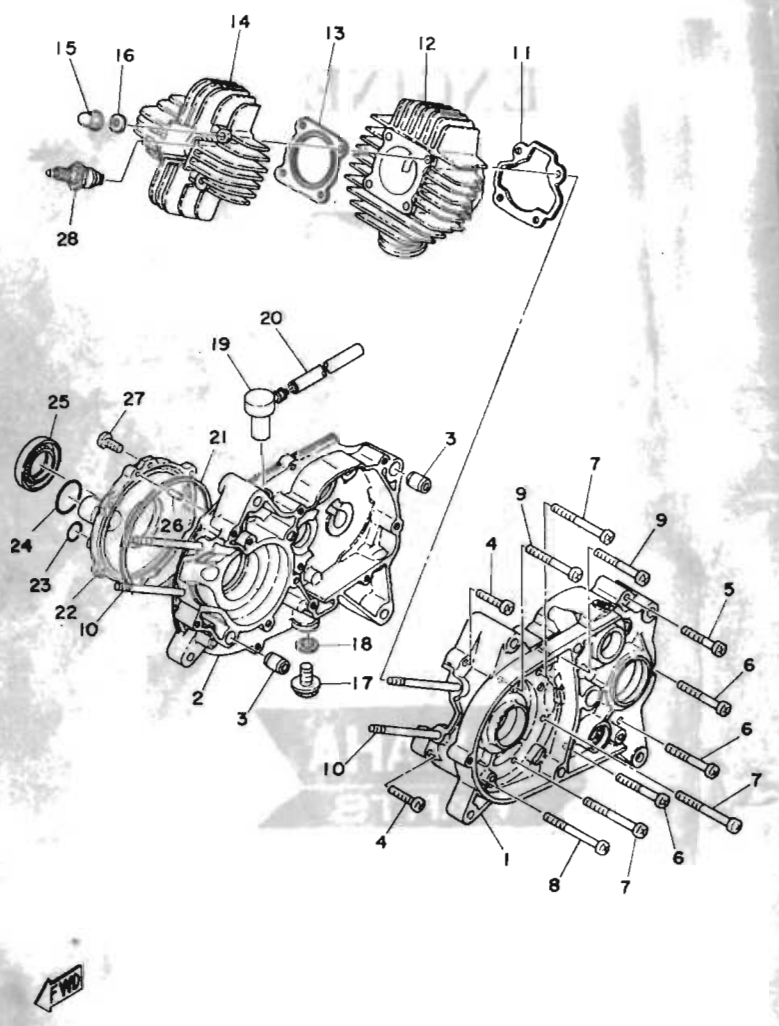

Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No. FS1 FS1DX	Remarks
1- 1	257-15111-01	CASE, crank left	1	1	
1- 2	257-15121-01	CASE, crank right	1	1	
1- 3	91830-22016	PIN, dowel (8.4-12-16)	2	2	
1- 4	92501-06030	SCREW, panhead	2	2	
1- 5	92501-06045	SCREW, panhead	1	1	
1- 6	92501-06050	SCREW, panhead	3	3	
1- 7	92501-06060	SCREW, panhead	3	3	
1- 8	92501-06065	SCREW, panhead	1	1	
1- 9	92501-06055	SCREW, panhead	2	2	
1-10	90116-06026	BOLT, stud (109-11361-00)	4	4	
1-11	109-11351-00	GASKET, cylinder	1	1	
1-12	257-11311-00	CYLINDER	1	1	
1-13	517-11181-00	GASKET, cylinder head	1	1	
1-14	257-11111-01-94	HEAD, cylinder	1	1	
1-15	90176-06002	NUT, cap (126-11171-60)	4	4	
1-16	92901-06200	WASHER, plain	4	4	
1-17	90340-12005	PLUG (132-15351-00)	1	1	
1-18	90430-12038	GASKET (132-15353-00)	1	1	
1-19	498-15371-00	BREATHER	1	1	
1-20	90446-07009	HOSE (304-15373-00 5-200)	1	1	
1-21	180-13554-00	RING, rubber	1	1	
1-22	257-13551-00	COVER, valve	1	1	
1-23	93210-12014	O-RING (2.62-10.77)	1	1	
1-24	93210-23029	O-RING (3.53-21.82)	1	1	
1-25	93103-28012	OIL SEAL (SW-28-47-8)	1	1	
1-26	93604-14012	PIN, dowel (4-13.8)	2	2	
1-27	92501-06015	SCREW, panhead	6	6	
1-28	94701-00040	PLUG, spark (B-7HS)	1	1	


Fig. 2 CRANKCASE COVER

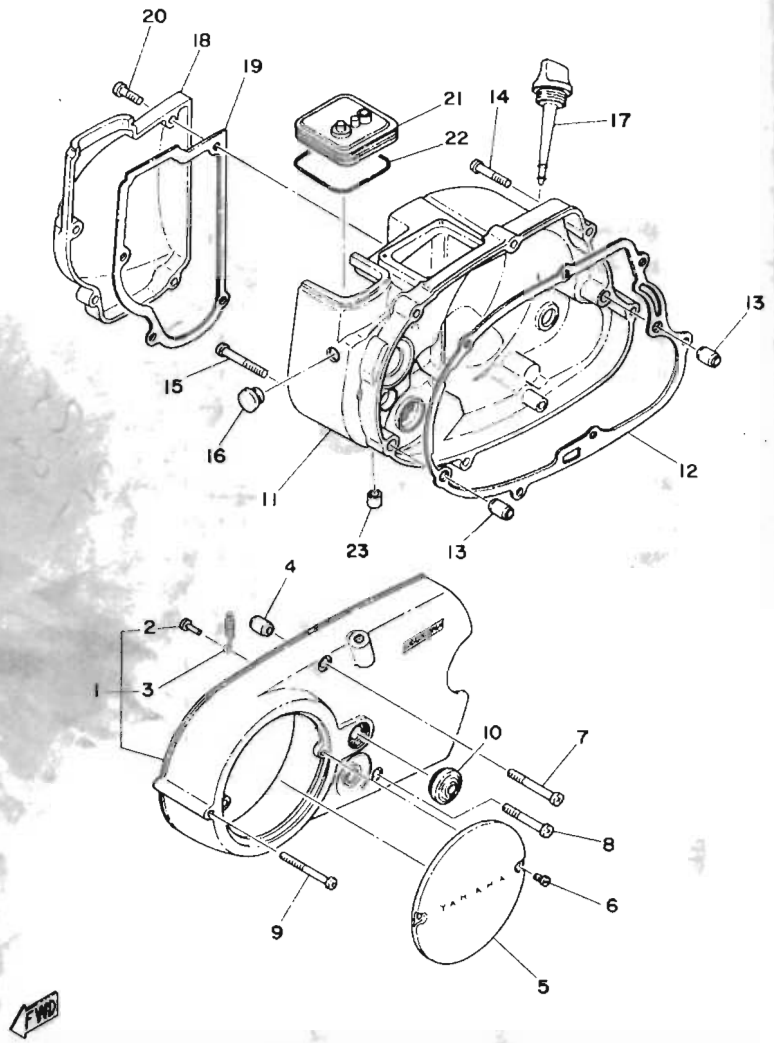

Ref. No.	Parts No.	Description	Q'ty FS1	Q'ty FS1DX	Applicable Machine No.	Remarks
2- 1	257-15410-01	CRANKCASE COVER ASS'Y, left	1	1		
2- 2	132-16346-00	. HOOK, spring	1	1		
2- 3	90506-07066	. SPRING, tension (257-16345-00)	1	1		
2- 4	91830-21014	PIN, dowel (6.4-10-14)	2	2		
2- 5	164-15415-00	COVER, generator	1	1		
2- 6	92501-04006	SCREW, panhead	2	2		
2- 7	92501-06045	SCREW, panhead	2	2		
2- 8	92501-06040	SCREW, panhead	1	1		
2- 9	92501-06050	SCREW, panhead	1	1		
2-10	257-15417-01	COVER, cap	1	1		
2-11	257-15421-01	COVER, crankcase right	1	1		
2-12	257-15451-00	GASKET, crankcase cover	1	1		
2-13	91830-21014	PIN, dowel (6.4-10-14)	2	2		
2-14	92501-06030	SCREW, panhead	6	6		
2-15	92501-06040	SCREW, panhead	1	1		
2-16	90480-12012	GROMMET (122-15486-00)	1	1		
2-17	315-15362-01	PLUG, oil level	1	1		
2-18	257-15413-00	COVER, carburetor	1	1		
2-19	257-15463-00	GASKET, carburetor cover	1	1		
2-20	92501-06018	SCREW, panhead	4	4		
2-21	288-14481-01	CAP, carburetor	1	1		
2-22	90506-06095	SPRING, tension (288-14455-00)	1	1		
2-23	257-15435-00	CLEANER, drain	1	1		


257-15451-00

Fig. 3 CRANK · PISTON

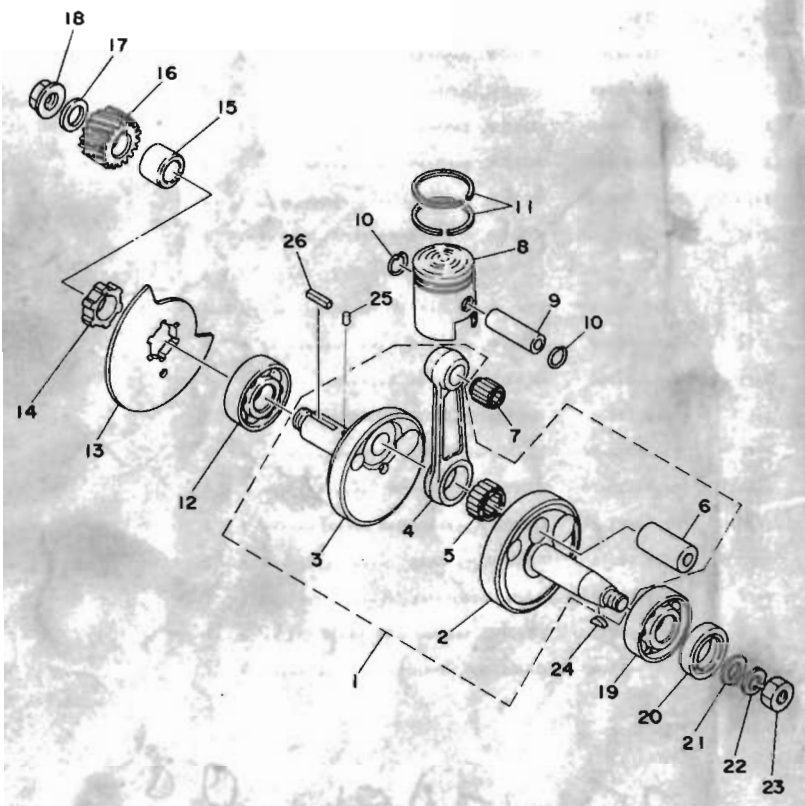


Ref. No.	Parts No.	Description	Q'ty PSI	Q'ty FSIDX	Applicable Machine No.	Remarks
3- 1	355-11400-01	CRANK ASS'Y	1	1		
3- 2	257-11412-01	. CRANK, left	1	1		
3- 3	257-11422-01	. CRANK, right	1	1		
3- 4	517-11651-00	. ROD, connecting	1	1		
3- 5	93310-41810	. BEARING, big end	1	1		
3- 6	257-11681-00	. PIN, crank	1	1		
3- 7	93310-11268	BEARING, small end	1	1		
3- 8	109-11631-02-96	PISTON (39.96mm STD)	U.R 1	U.R 1		
	109-11631-02-98	PISTON (39.98mm STD)				
	109-11635-02	PISTON (40.25mm 1st O.S)	1	1		Alternate Parts
	109-11636-02	PISTON (40.50mm 2nd O.S)	1	1		Alternate Parts
	109-11637-02	PISTON (40.75mm 3rd O.S)	1	1		Alternate Parts
	109-11638-02	PISTON (41.00mm 4th O.S)	1	1		Alternate Parts
3- 9	102-11633-02	PIN, piston	1	1		
3-10	93450-13022	CIRCLIP (132-11634-00)	2	2		
3-11	260-11601-00	PISTON RING SET (STD)	1s	1s		
	260-11601-10	PISTON RING SET (1st O.S)	1s	1s		Alternate Parts
	260-11601-20	PISTON RING SET (2nd O.S)	1s	1s		Alternate Parts
	260-11601-30	PISTON RING SET (3rd O.S)	1s	1s		Alternate Parts
	260-11601-40	PISTON RING SET (4th O.S)	1s	1s		Alternate Parts
3-12	93306-30302	BEARING (B6303C3)	1	1		
3-13	257-13512-00	VALVE	1	1		
3-14	257-13515-00	COLLAR, valve	1	1		
3-15	90387-17135	COLLAR (257-16136-60)	1	1		
3-16	257-16111-01	GEAR, primary drive (19T)	1	1		
3-17	90208-12015	WASHER (164-16119-00)	1	1		
3-18	90179-12044	NUT (353-16144-00)	1	1		
3-19	93306-20418	BEARING (B6204)	1	1		
3-20	93102-20009	OIL SEAL (SD-20-35-7)	1	1		

Fig. 3 CRANK · PISTON

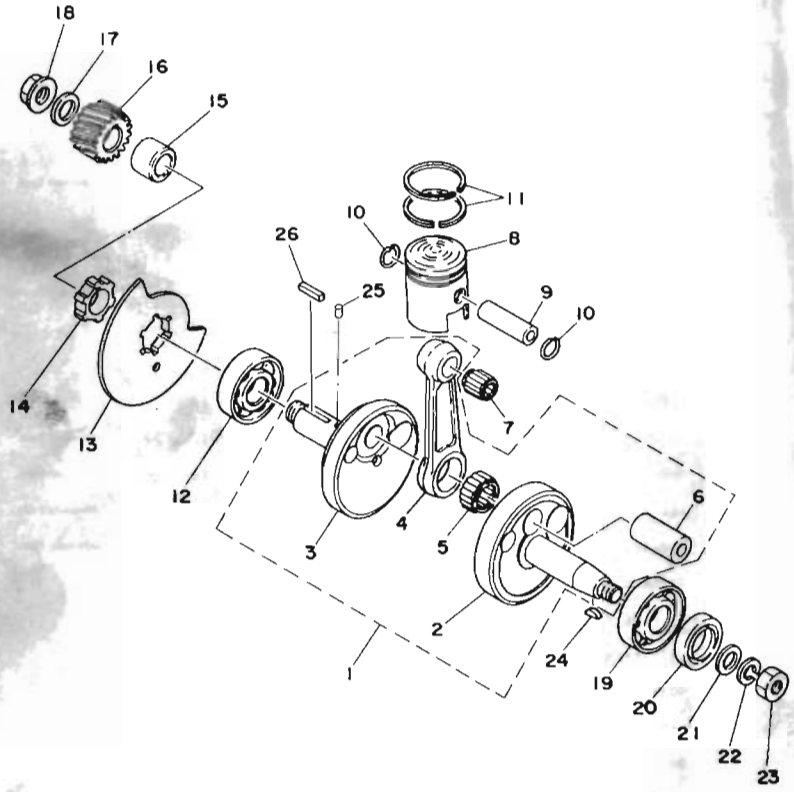


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
			FS1	FS1A	
3-21	90201-12535	WASHER, plate	1	1	
3-22	92901-12100	WASHER, spring	1	1	
3-23	90170-12175	NUT, hexagon	1	1	
3-24	90280-03017	KEY, woodruff (146-U515-00)	1	1	
3-25	93603-08067	PIN, dowel	1	1	
3-26	90282-06028	KEY, straight	1	1	

Fig. 4 CLUTCH

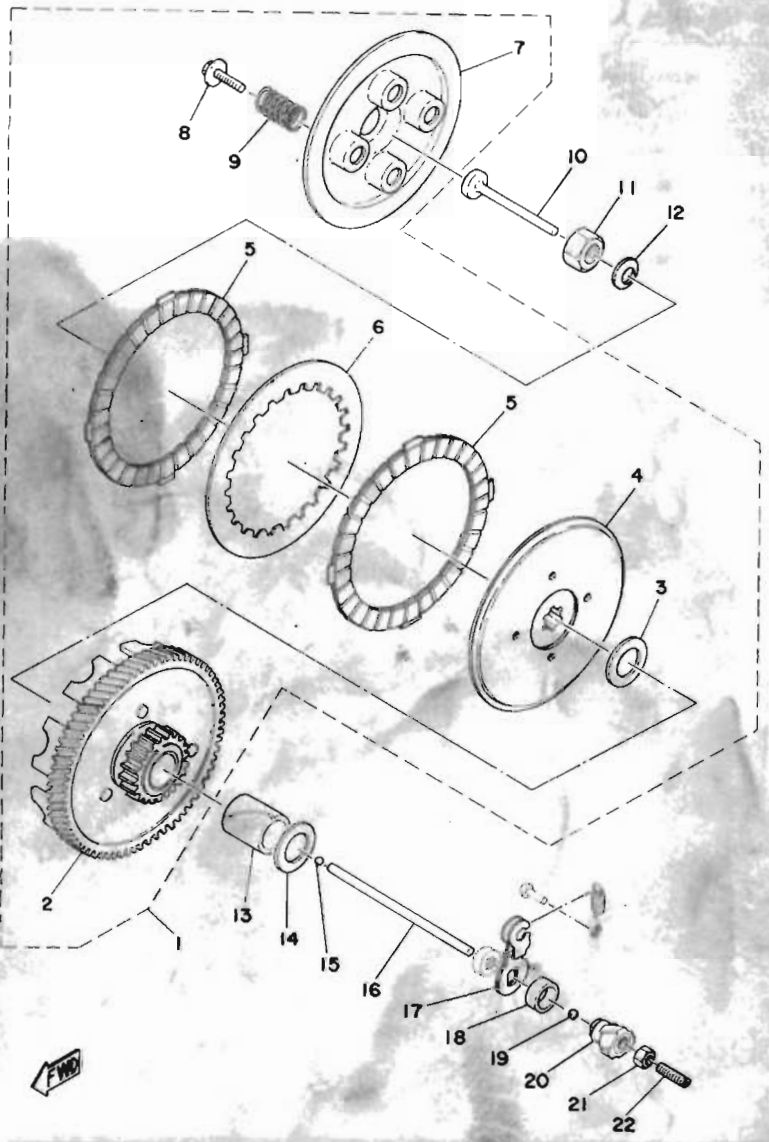


Ref. No.	Parts No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
4- 1	257-16301-03	CLUTCH ASS'Y	1	1		
4- 2	257-16150-03	. PRIMARY DRIVEN GEAR COMP. (74T)	1	1		
4- 3	122-16164-00	. PLATE, thrust (17.2-30-2)	1	1		
4- 4	257-16371-01	. BOSS, clutch	1	1		
4- 5	131-16321-00	. PLATE, friction	2	2		
4- 6	257-16324-00	. PLATE, clutch	1	1		
4- 7	257-16351-00	. PLATE, pressure	1	1		
4- 8	90119-05001	. BOLT	4	4		
4- 9	90501-20122	. SPRING (137-16333-00)	4	4		
4-10	137-16356-00	ROD, push 1	1	1		
4-11	90170-12060	NUT, hexagon (137-16377-00)	1	1		
4-12	90208-12015	WASHER (164-16119-00)	1	1		
4-13	90560-17150	SPACER	1	1		
4-14	122-16164-00	PLATE, thrust (17.2-30-2)	1	1		
4-15	93503-16010	BALL (3/16 inch)	8	1		
4-16	257-16337-00	ROD, push 2	1	1		
4-17	257-16342-00	LEVER, push	1	1		
4-18	93102-15001	OIL SEAL (OSO-15.3-22-7)	1	1		
4-19	93501-04011	BALL (1/4 inch)	1	1		
4-20	257-16341-00	SCREW, push	1	1		
4-21	95301-06700	NUT, hexagon	1	1		
4-22	90113-06009	BOLT, set (257-16343-00)	1	1		

Fig. 5 TRANSMISSION

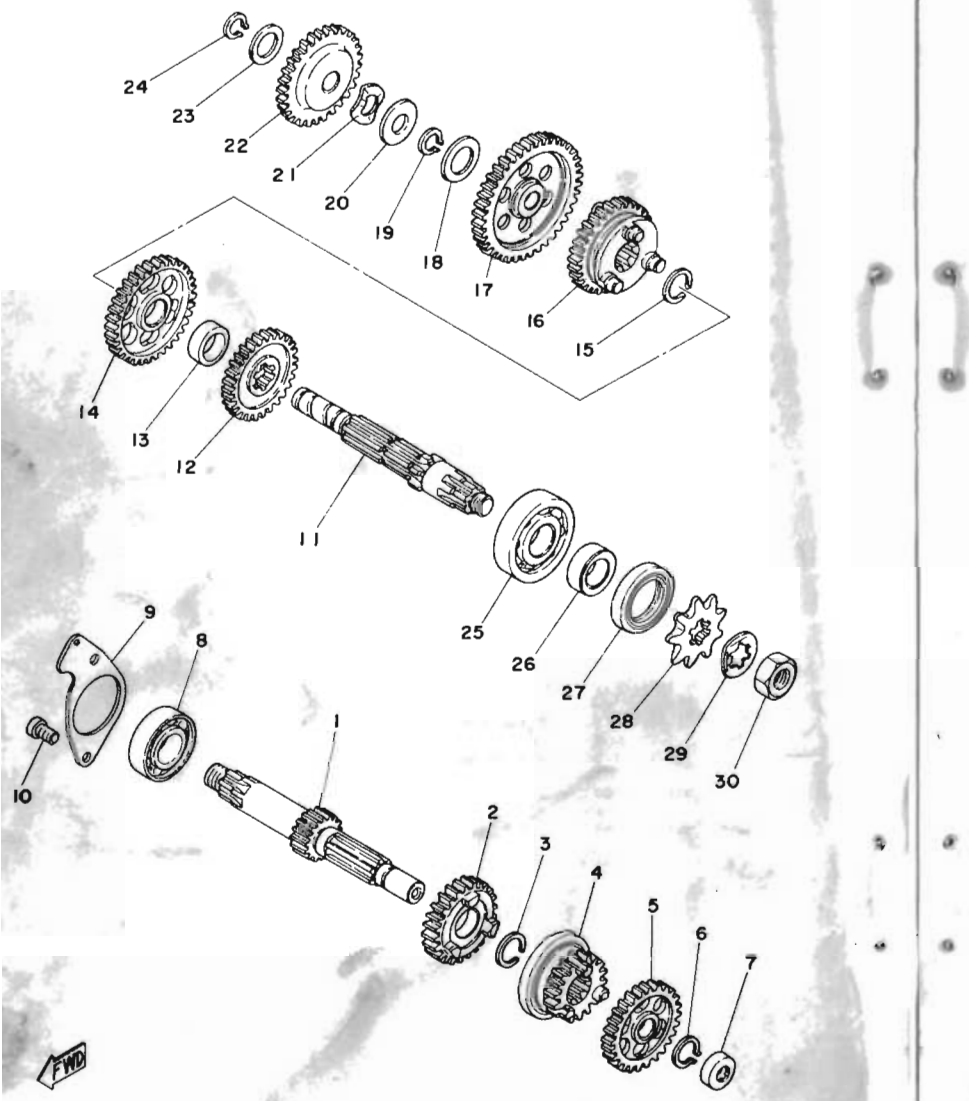


Ref. No.	Parts No.	Description	Q'ty FSL	Q'ty FSIDX	Applicable Machine No.	Remarks
5- 1	257-17411-01	AXLE, main (13T)	1	1		
5- 2	257-17131-01	GEAR, 3rd pinion (23T)	1	1		
5- 3	93440-16030	CIRCLIP (257-17414-00)	1	1		
5- 4	257-17121-00	GEAR, 2nd pinion (18T)	1	1		
5- 5	257-17141-00	GEAR, 4th pinion (26T)	1	1		
5- 6	93410-13004	CIRCLIP (S-13)	1	1		
5- 7	257-15384-00	SEAL, push rod	1	1		
5- 8	93306-20303	BEARING (B6203Z)	1	1		
5- 9	257-17471-01	PLATE, bearing cover	1	1		
5-10	92501-06012	SCREW, panhead	2	2		
5-11	257-17421-01	AXLE, drive	1	1		
5-12	257-17241-00	GEAR, 4th wheel (27T)	1	1		
5-13	90387-16127	COLLAR (257-17258-00)	1	1		
5-14	257-17221-01	GEAR, 2nd wheel (34T)	1	1		
5-15	93440-16030	CIRCLIP (257-17414-00)	1	1		
5-16	257-17231-00	GEAR, 3rd wheel (30T)	1	1		
5-17	257-17211-00	GEAR, 1st wheel (40T)	1	1		
5-18	257-17219-00	SHIM	1	1		
5-19	93410-13004	CIRCLIP (S-13)	1	1		
5-20	132-15653-00-10	SHIM (13.3-22-1.0)	U.R 1	U.R 1		
	132-15653-00-12	SHIM (13.3-22-1.2)				
	132-15653-00-14	SHIM (13.3-22-1.4)				
5-21	90206-15021	WASHER, wave (137-15643-00)	1	1		
5-22	257-15651-01	GEAR, kick idle (26T)	1	1		
5-23	90201-13202	WASHER, plate (201-15653-00)	1	1		
5-24	93410-13004	CIRCLIP (S-13)	1	1		
5-25	93306-30305	BEARING (B6303)	1	1		
5-26	90387-17137	COLLAR (257-17462-00)	1	1		
5-27	93102-25017	OIL SEAL (SD-25-40-5)	1	1		

Fig. 5 TRANSMISSION

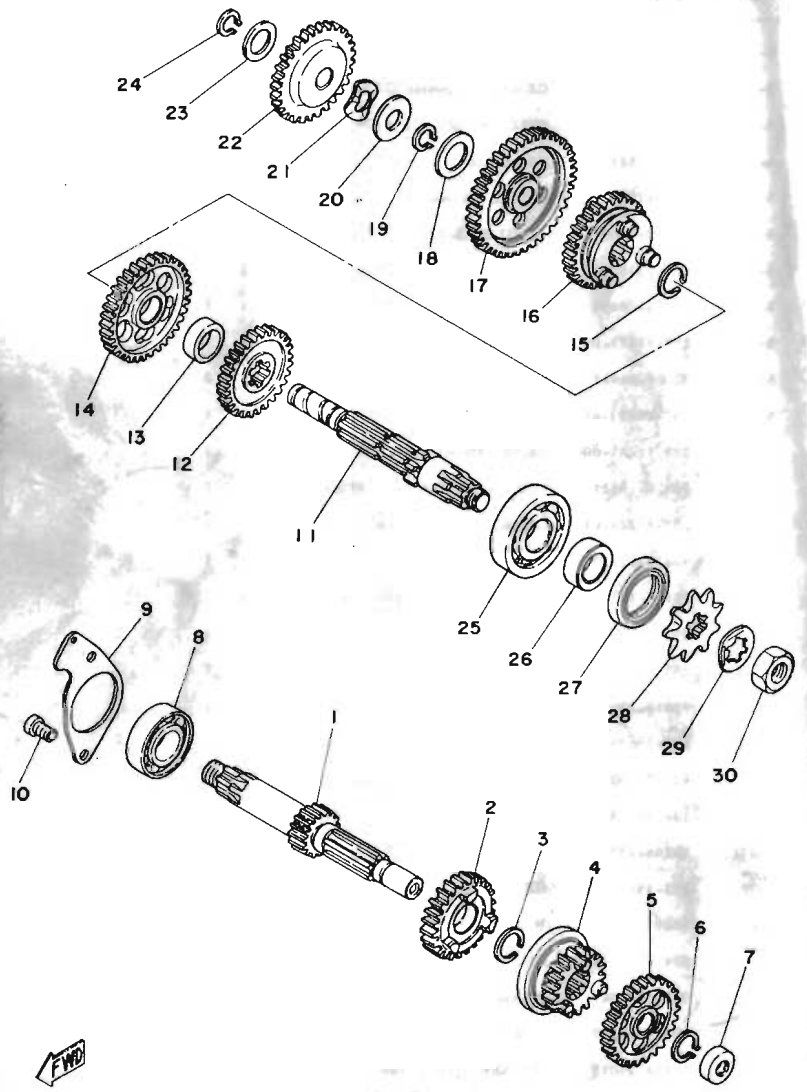


Ref. No.	Parts No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
5-28	257-17461-31	SPROCKET, drive (13T)	U.R	U.R		STD
	257-17461-41	SPROCKET, drive (14T)	1	1		
	257-17461-51	SPROCKET, drive (15T)				
5-29	90215-13019	WASHER, lock	1	1		
5-30	90179-12181	NUT	1	1		

Fig. 6 SHIFTER 1

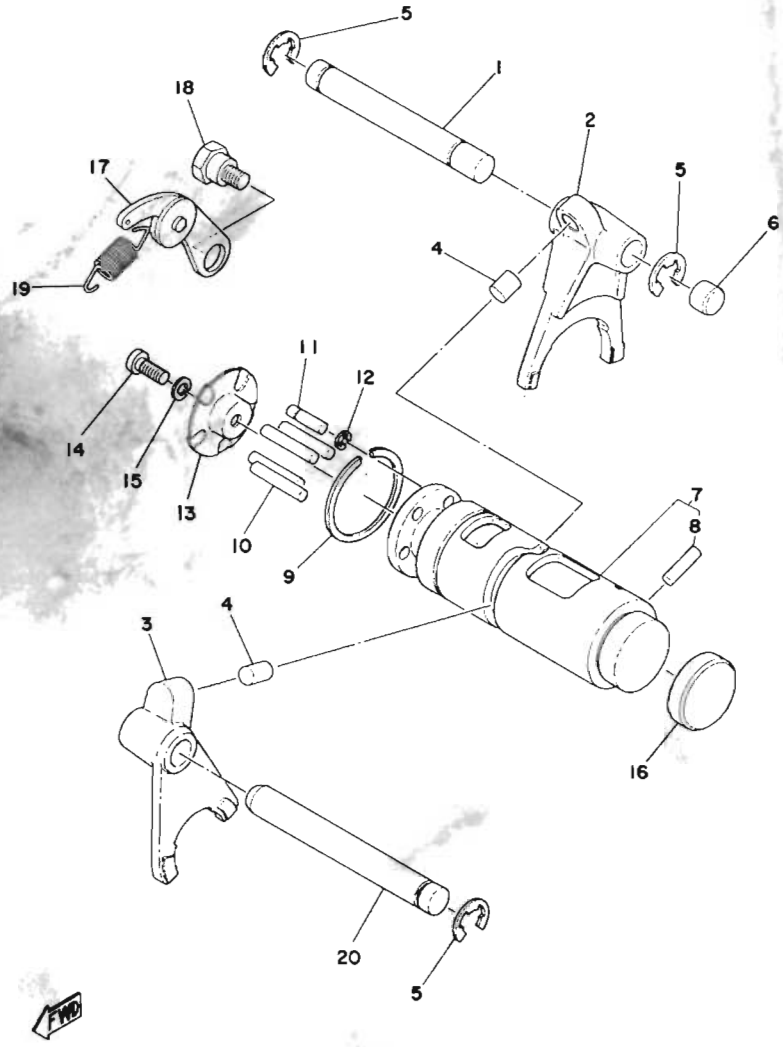


Ref. No.	Parts No.	Description	Q'ty	Applicable Machine No.	Remarks
6- 1	257-18534-00	BAR, shift fork guide	1	1	
6- 2	259-18511-01	FORK, shift 1	1	1	
6- 3	257-18512-01	FORK, shift 2	1	1	
6- 4	90250-06013	PIN, straight (257-18552-00)	2	2	
6- 5	93430-08006	CIRCLIP (E-8)	3	3	
6- 6	90334-10006	PLUG, straight (150-18328-00) ...	1	1	
6- 7	257-18541-61	CAM, shift	1	1	
6- 8	93605-20043	PIN, dowel (5-19.8)	1	1	
6- 9	93440-32017	CIRCLIP (32φ special)	1	1	
6-10	93604-22050	PIN, dowel (4-21.8)	4	4	
6-11	90249-04039	PIN (174-18544-00)	1	1	
6-12	93430-03014	CIRCLIP (E-2.5)	1	1	
6-13	164-18561-00	PLATE, side	1	1	
6-14	98501-05012	SCREW, panhead	1	1	
6-15	92901-05100	WASHER, spring	1	1	
6-16	90338-26008	PLUG (257-18569-00)	1	1	
6-17	132-18140-01	STOPPER LEVER ASS'Y	1	1	
6-18	90109-06001	BOLT (132-18177-00)	1	1	
6-19	90506-09112	SPRING, tension	1	1	
6-20	257-18531-00	BAR, shift fork guide	1	1	

Fig. 7 SHIFTER 2

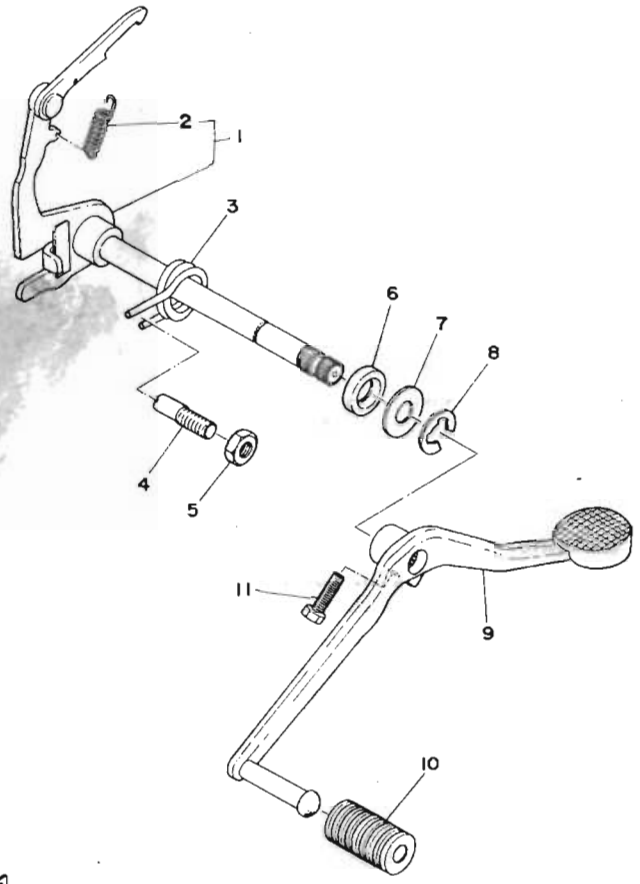


Ref. No.	Parts No.	Description	Q'ty FS1FS1DX	Applicable Machine No.	Remarks
7- 1	257-18101-01	CHANGE SHAFT ASS'Y	1	1	
7- 2	90506-09009	. SPRING, tension (132-18123-00)	1	1	
7- 3	90508-32207	SPRING, torsion (132-18124-00)...	1	1	
7- 4	90149-08094	SCREW	1	1	
7- 5	95301-08600	NUT, hexagon	1	1	
7- 6	93101-12004	OIL SEAL (S-12-22-5)	1	1	
7- 7	90201-12575	WASHER, plate (12.1-26-1.6)	1	1	
7- 8	93430-10016	CIRCLIP (E-10)	1	1	
7- 9	257-18111-00-91	PEDAL, change	1	1	
7-10	132-18113-01	COVER, change pedal	1	1	
7-11	97321-06020	BOLT, hexagon	1	1	

Fig. 8 KICK STARTER

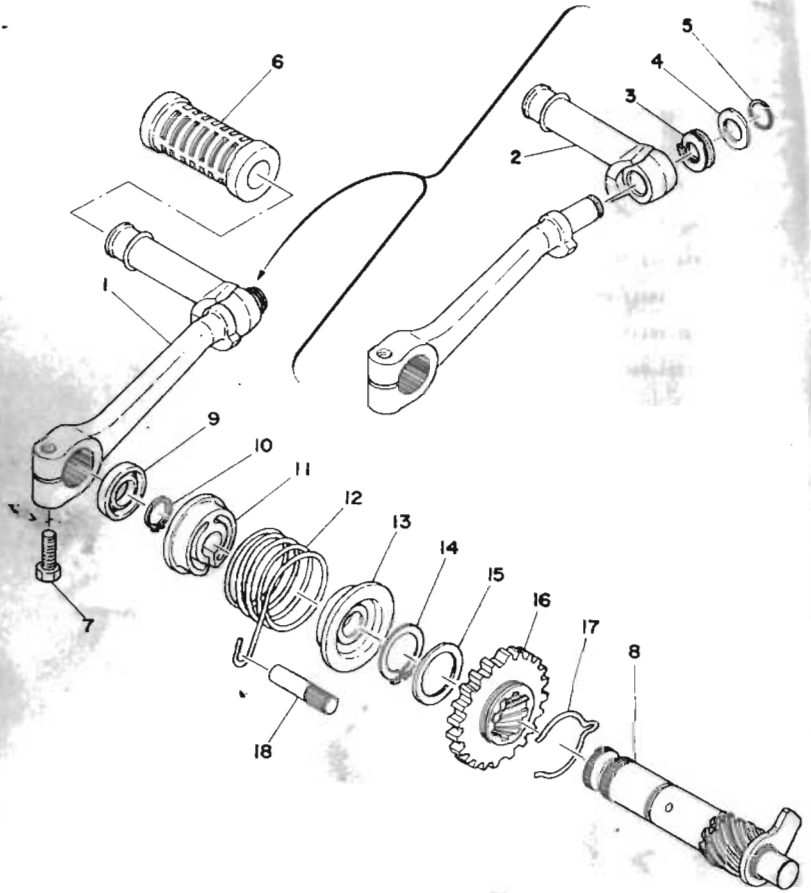


Ref. No.	Parts No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
8- 1	257-15610-02-91	KICK CRANK ASS'Y	1	1		
8- 2	122-15612-02	. LEVER, kick	1	1		
8- 3	90504-18005	. SPRING, compression (132-15625-01)	1	1		
8- 4	90209-10108	. WASHER (132-15616-01)	1	1		
8- 5	93440-10028	. CIRCLIP (132-15617-00)	1	1		
8- 6	156-15618-01	COVER, kick lever	1	1		
8- 7	97311-06025	BOLT, hexagon	1	1		
8- 8	305-15660-02	KICK AXLE ASS'Y	1	1		
8- 9	93109-15001	OIL SEAL (SDO-15-26-6)	1	1		
8-10	93410-15005	CIRCLIP (S-15)	1	1		
8-11	132-15676-01	COVER, kick spring	1	1		
8-12	90508-26136	SPRING, torsion (304-15665-00) ..	1	1		
8-13	132-15664-01	GUIDE, kick spring	1	1		
8-14	93410-25017	CIRCLIP (S-25)	1	1		
8-15	117-15644-00	SHIM (25.1-32-1)	1	1		
8-16	305-15641-00	GEAR, kick (26T)	1	1		
8-17	90468-26048	CLIP (315-15687-00)	1	1		
8-18	257-15668-00	STOPPER, kick spring	1	1		

Fig. 9 INTAKE

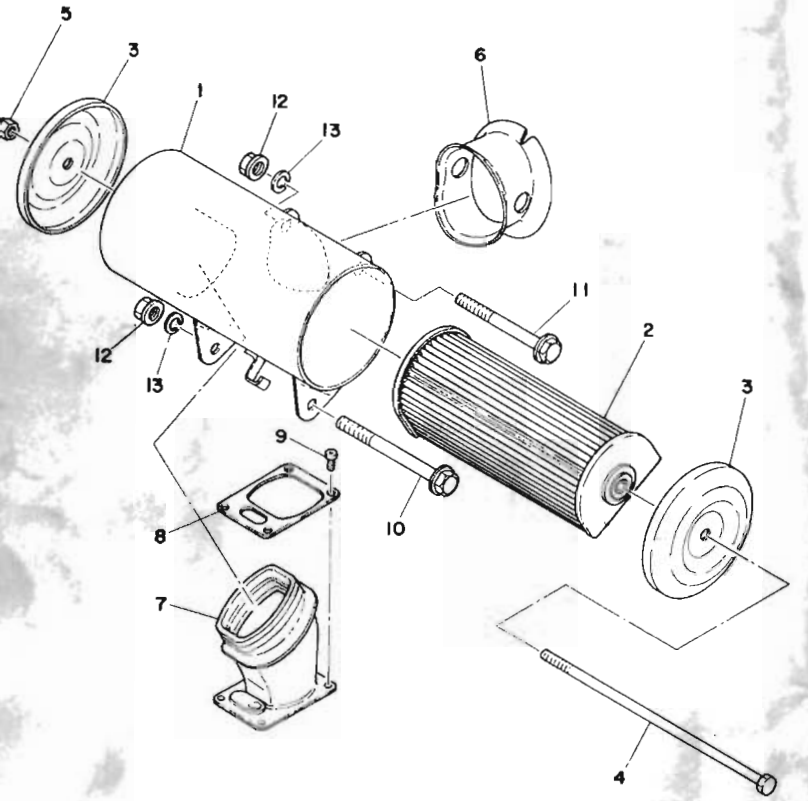


Ref. No.	Parts No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
9- 1	257-14401-00-35	AIR CLEANER CASE ASS'Y	1	1		Silver
9- 2	257-14451-00	ELEMENT, air cleaner	1	1		
9- 3	122-14412-00	CAP, cleaner case	2	2		
9- 4	97301-06185	BOLT, hexagon	1	1		
9- 5	95303-06800	NUT, crown	1	1		
9- 6	257-14454-00	JOINT, suction pipe	1	1		
9- 7	257-14453-00	JOINT, air cleaner	1	1		
9- 8	257-14417-00	COVER, joint	1	1		
9- 9	98501-04008	SCREW, panhead	4	4		
9-10	95821-08100	BOLT, flange	1	1		
9-11	95821-08080	BOLT, flange	1	1		
9-12	95701-08100	NUT, flange	2	2		
9-13	92901-08100	WASHER, spring	2	2		

Fig. 10 CARBURETOR

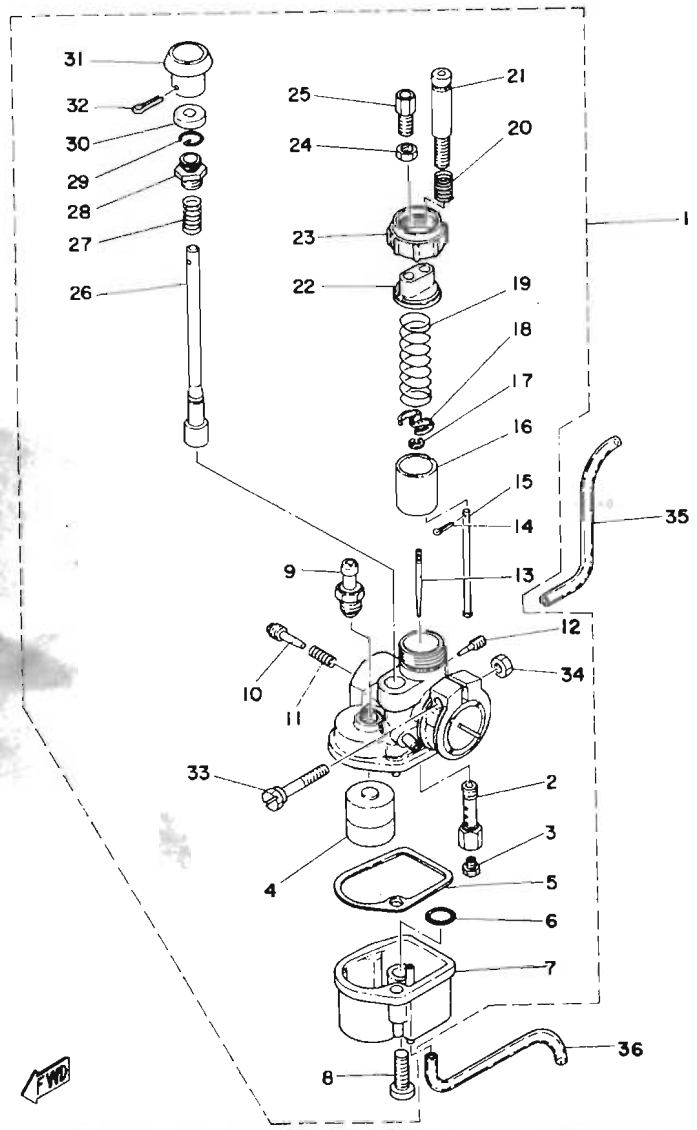


Ref. No.	Parts No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
10- 1	596-14101-00	CARBURETOR ASS'Y	1	1		
10- 2	127-14141-14	. NOZZLE, main (E-4)	1	1		
10- 3	127-14143-28	. JET, main (#140)	U.R 1	U.R 1		STD
	127-14143-30	. JET, main (150)				
	127-14143-32	. JET, main (#160)				
10- 4	355-14185-00	. FLOAT	1	1		
10- 5	260-14184-00	. GASKET, float chamber	1	1		
10- 6	93220-08002	. O-RING	1	1		
10- 7	260-14181-10	. BODY, float chamber	1	1		
10- 8	92501-06018	. SCREW, panhead	1	1		
10- 9	260-14190-12	. VALVE SEAT ASS'Y (1.2)	1	1		
10-10	127-14123-00	. SCREW, air adjusting	1	1		
10-11	127-14154-00	. SPRING, air adjusting	1	1		
10-12	260-14142-25	. JET, pilot (#25)	1	1		
10-13	127-14116-09	. NEEDLE (3G9-3)	1	1		
10-14	91401-12010	. PIN, cotter	1	1		
10-15	405-14114-00	. BAR, throttle	1	1		
10-16	257-14112-15	. VALVE, throttle (1.5)	1	1		
10-17	127-14137-00	. CLIP	1	1		
10-18	287-14136-00	. SEAT, spring	1	1		
10-19	127-14131-00	. SPRING, throttle valve	1	1		
10-20	127-14133-00	. SPRING, throttle stop	1	1		
10-21	395-14121-00	. SCREW, throttle	1	1		
10-22	180-14158-01	. TOP, mixing chamber	1	1		
10-23	180-14168-00	. CAP, mixing chamber	1	1		
10-24	127-14161-00	. NUT, wire adjusting	1	1		
10-25	127-14124-23	. SCREW, wire adjusting	1	1		
10-26	395-14171-00	. PLUNGER, starter	1	1		
10-27	156-14135-00	. SPRING, plunger	1	1		

Fig. 10 CARBURETOR

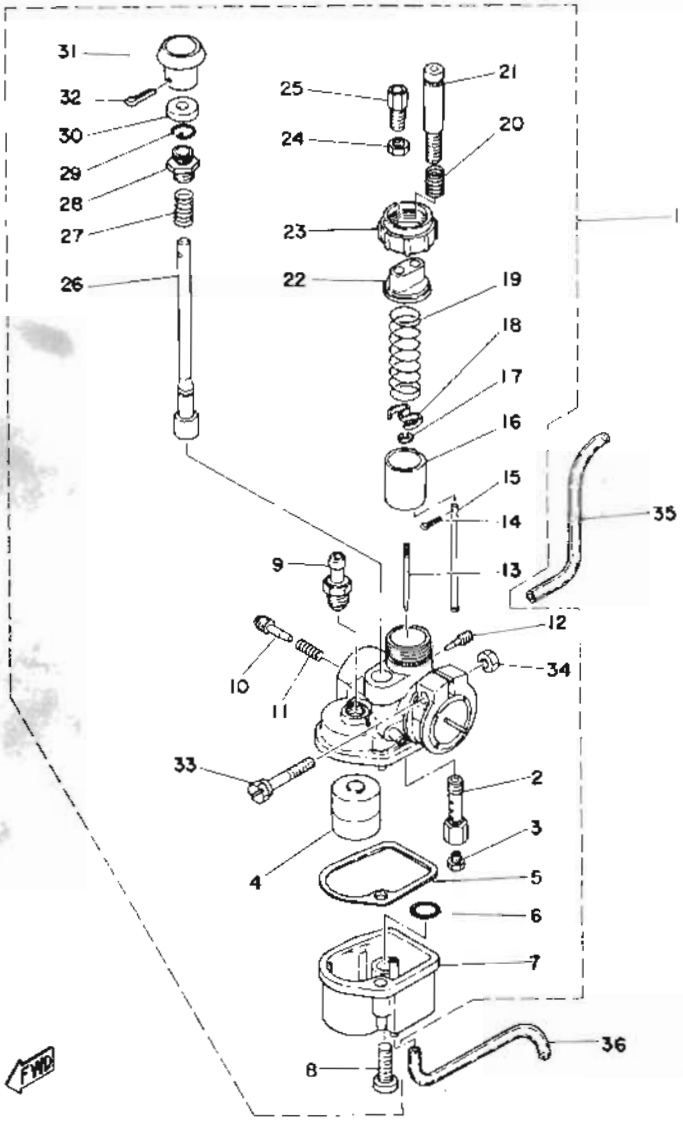


Ref. No.	Parts No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
10-28	152-14174-00	. CAP, plunger	1	1		
10-29	353-14138-00	. CLIP, plunger	1	1		
10-30	637-14173-00	. COVER, plunger cap	1	1		
10-31	304-14261-00	. HOLDER	1	1		
10-32	91401-16015	. PIN, cotter	1	1		
10-33	127-14125-01	. SCREW, body fitting	1	1		
10-34	95302-05600	. NUT, hexagon	1	1		
10-35	90445-05015	HOSE (257-14197-00 2.5-200)	1	1		
10-36	90445-05013	HOSE (137-14197-00 2.5-150)	1	1		

Fig. 11 EXHAUST

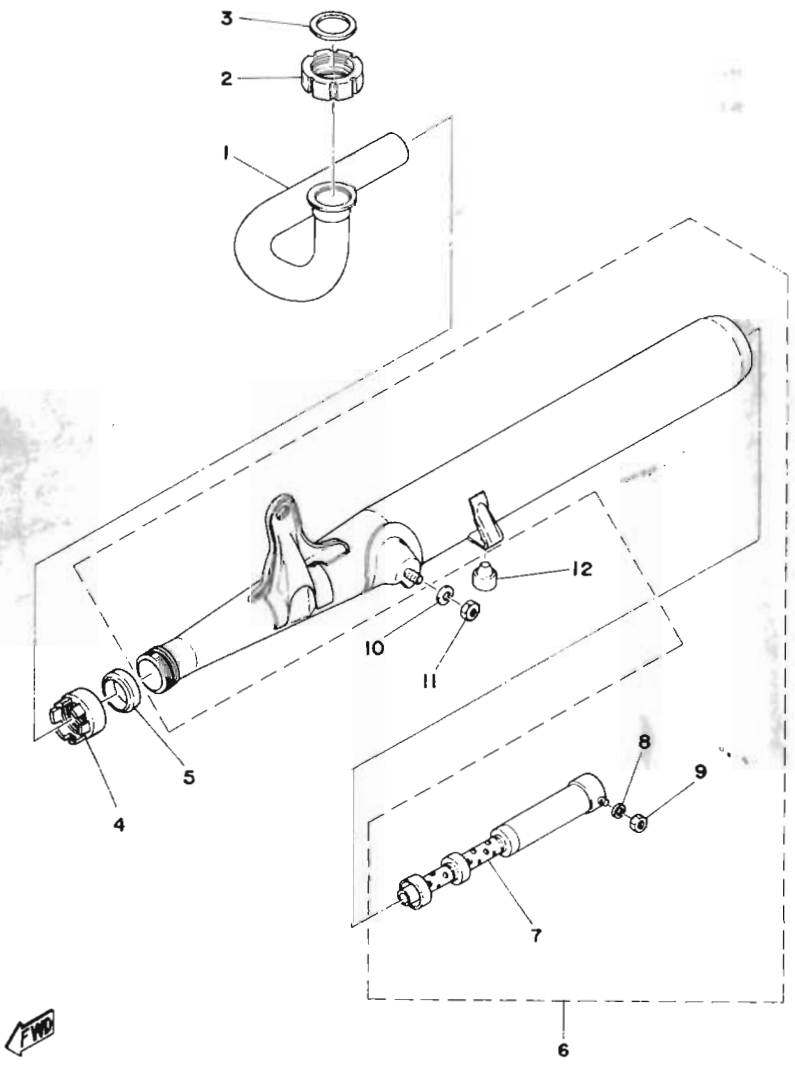


Ref. No.	Parts No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
11- 1	348-14611-00	PIPE, exhaust	1	1		
11- 2	122-14612-02	NUT, ring	1	1		
11- 3	132-11613-00	GASKET, exhaust	1	1		
11- 4	1J5-14713-00	NUT, muffler joint	1	1		
11- 5	1J5-14714-00	GASKET, muffler joint	1	1		
11- 6	1Y1-14710-00	MUFFLER ASS'Y	1	1		
11- 7	348-14753-00	. SILENCER	1	1		
11- 8	92901-05100	. WASHER, spring	1	1		
11- 9	95301-05600	. NUT, hexagon	1	1		
11-10	92901-08100	WASHER, spring	1	1		
11-11	95301-08600	NUT, hexagon	1	1		
11-12	1M3-27114-00	STOPPER, main stand	1	1		

Fig. 12 OIL PUMP

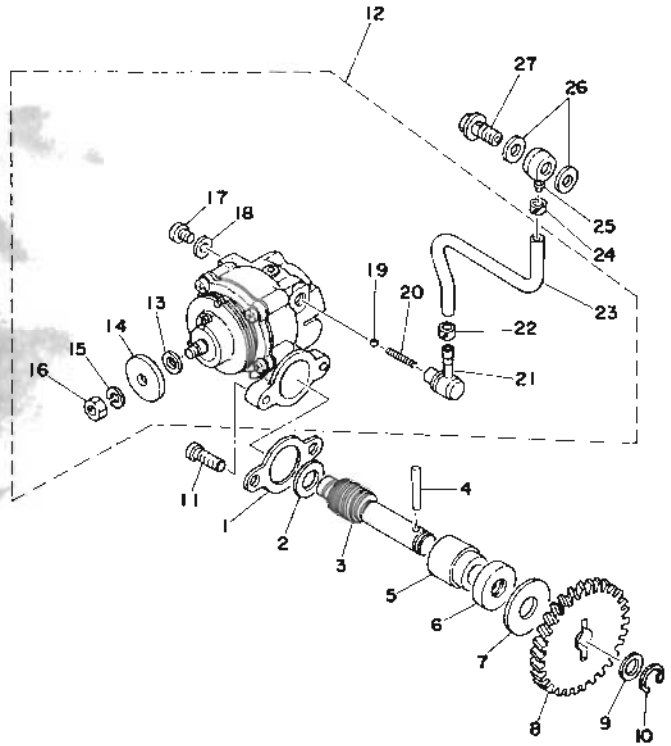

Ref. No.	Parts No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
12- 1	126-13116-00	GASKET, pump case	1	1		
12- 2	90201-08624	WASHER, plate	1	1		
12- 3	257-13175-00	SHAFT, worm	1	1		
12- 4	93603-22028	PIN, dowel	1	1		
12- 5	1E7-13176-00	METAL, worm shaft outer	1	1		
12- 6	93101-10001	OIL SEAL (S-10-24-5)	1	1		
12- 7	90201-10138	WASHER, plate (257-13177-00) ...	1	1		
12- 8	257-13178-00	GEAR, drive (30T)	1	1		
12- 9	90201-10135	WASHER, plate (102-18138-00) ...	1	1		
12-10	93430-08006	CIRCLIP (8ø special)	1	1		
12-11	98501-05016	SCREW, panhead	2	2		
12-12	257-13101-04	OIL PUMP ASS'Y	1	1		
12-13	137-13137-00-03	. SHIM, plunger (5.8-10-0.3) ..	1	1	U.R	U.R
	137-13137-00-05	. SHIM, plunger (5.8-10-0.5) ..				
	137-13137-00-10	. SHIM, plunger (5.8-10-1.0) ..				
12-14	137-13138-01	. PLATE, adjusting	1	1		
12-15	92901-05100	. WASHER, spring	1	1		
12-16	95301-05600	. NUT, hexagon	1	1		
12-17	98901-04008	. SCREW, bind	1	1		
12-18	90430-04004	. GASKET (137-13187-00)	1	1		
12-19	93505-32002	. BALL (5/32 inch)	1	1		
12-20	90501-02217	. SPRING, check ball	1	1		
12-21	353-13552-01	. NOZZLE	1	1		
12-22	90468-02033	. CLIP (214-13164-00)	1	1		
12-23	90445-05018	. HOSE (257-13161-00 3-65)	1	1		
12-24	90468-02033	CLIP (214-13164-00)	1	1		
12-25	214-13162-01	BANJO, delivery pipe	1	1		
12-26	90430-06011	GASKET (137-13167-00)	2	2		
12-27	90401-06001	BOLT, union (137-13165-00)	1	1		

Fig. 13 FLYWHEEL MAGNETO

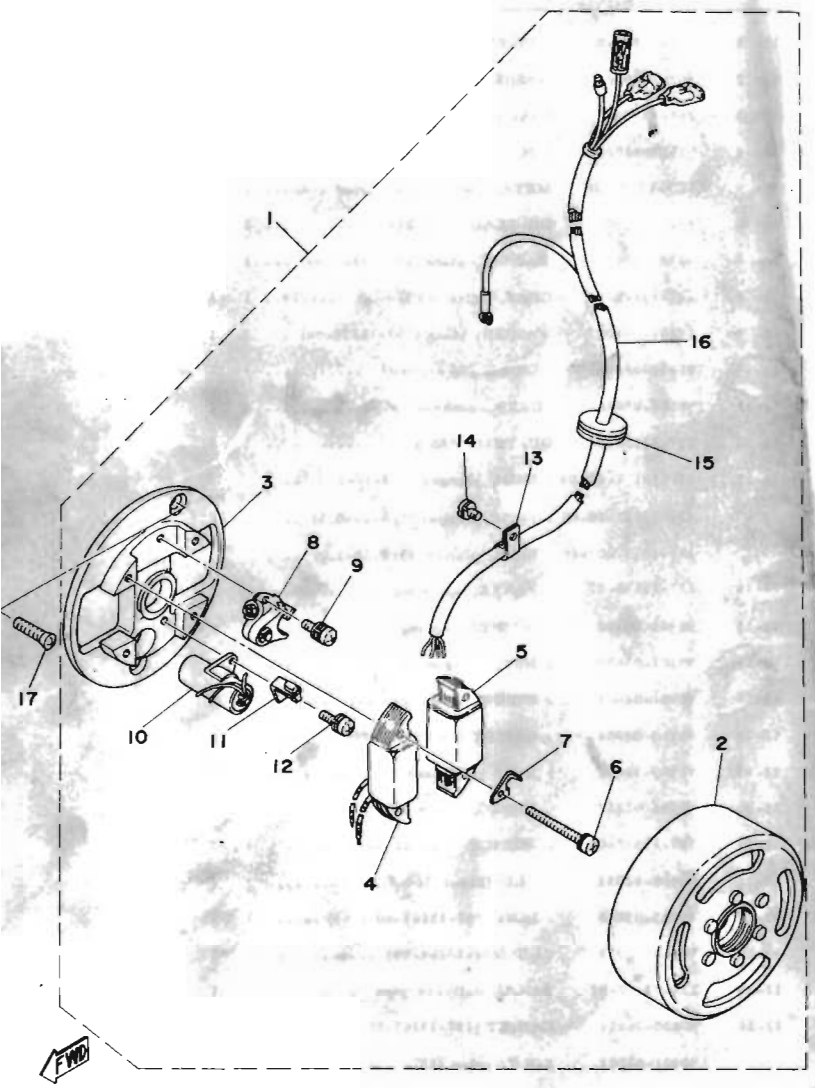


Ref. No.	Parts No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
13- 1	257-81300-23	FLYWHEEL MAGNETO ASS'Y	1	1		
13- 2	257-81350-22	. ROTOR ASS'Y	1	1		
13- 3	257-81309-21	. BASE, magneto	1	1		
13- 4	207-81312-21	. COIL, source	1	1		
13- 5	207-81313-21	. COIL, lighting	1	1		
13- 6	110-81348-21	. SCREW (4-25)	4	4		
13- 7	353-81332-20	. PLATE, timing	1	1		
13- 8	437-81321-20 OR 120-81321-20.	. CONTACT BREAKER ASS'Y	1	1		
13- 9	110-81346-21	. SCREW (4-10)	1	1		
13-10	1K8-81325-20	. CONDENSER	1	1		
13-11	114-81331-20	. LUBRICATOR	1	1		
13-12	110-81347-21	. SCREW (4-10)	1	1		
13-13	104-81328-20	. CLAMP, lead	1	1		
13-14	110-81345-21	. SCREW (4-6)	1	1		
13-15	90480-16110	. GROMMET (164-82597-00)	1	1		
13-16	257-81315-20	. LEAD WIRE ASS'Y	1	1		
13-17	98701-05075	SCREW, flathead	2	2		

CHASSIS




Fig. 14 FRAME · SIDE COVER

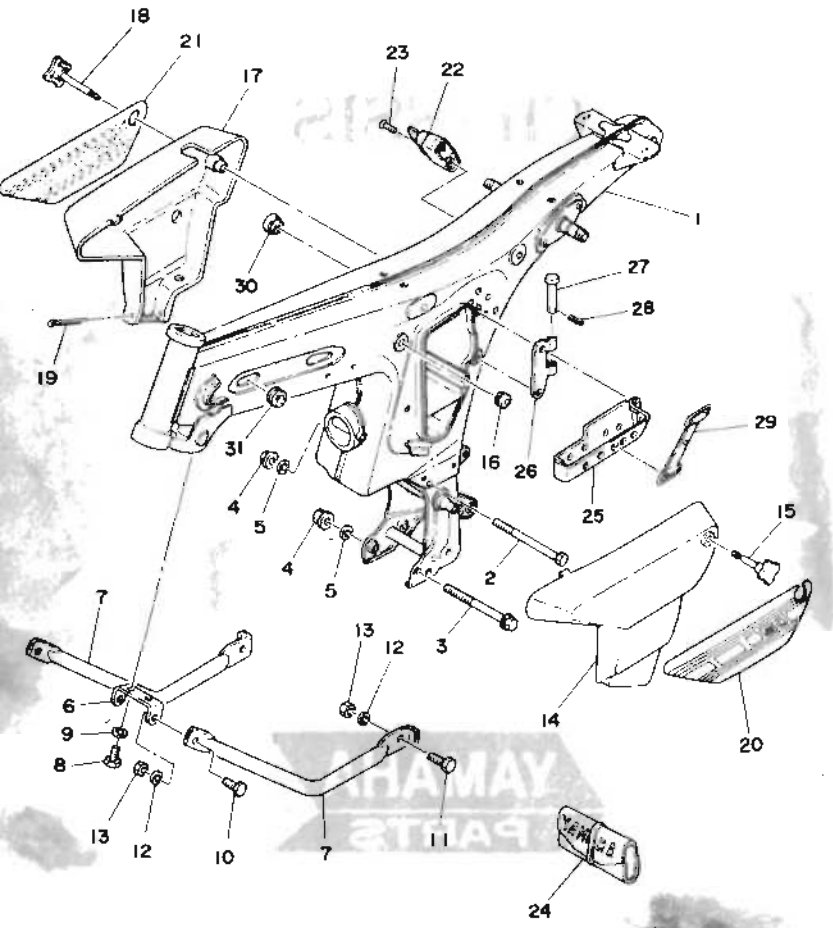


Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
14- 1	355-21110-03-33	FRAME COMP.	1	1		Yamaha Black
14- 2	90101-08285	BOLT, hexagon	1	1		
14- 3	95823-08120	BOLT, flange	1	1		
14- 4	95701-08100	NUT, flange	2	2		
14- 5	92901-08100	WASHER, spring	2	2		
14- 6	596-21158-00-33	BRACKET, down tube		1		Yamaha Black
14- 7	596-21191-00-33	DOWN TUBE		2		Yamaha Black
14- 8	97301-06014	BOLT, hexagon		2		
14- 9	92901-06100	WASHER, spring		2		
14-10	97301-08016	BOLT, hexagon		2		
14-11	97301-08030	BOLT, hexagon		2		
14-12	92901-08100	WASHER, spring		4		
14-13	95301-08100	NUT, hexagon		4		
14-14	1Y1-21711-00	COVER, side left	1	1		
14-15	1Y1-21714-00	KNOB, side cover left	1	1		
14-16	90480-01141	DAMPER (371-21747-00)	2	2		
14-17	1Y1-21721-10	COVER, side right	1	1		
14-18	1Y1-21724-00	KNOB, side cover right	1	1		
14-19	91401-50085	PIN, cotter	1	1		
14-20	1Y1-21781-00	EMBLEM, side cover left	1	1		for Crystal Silver
	1Y1-21781-09	EMBLEM, side cover left	1	1		for Chrome Plated
	1Y1-21781-20	EMBLEM, side cover left	1	1		for Chappy Red
	1Y1-21781-30	EMBLEM, side cover left	1	1		for New Portuguese Orange
	1Y1-21781-40	EMBLEM, side cover left	1	1		for Space Blue
14-21	1Y1-21782-00	EMBLEM, side cover right	1	1		for Crystal Silver
	1Y1-21782-09	EMBLEM, side cover right	1	1		for Chrome Plated
	1Y1-21782-20	EMBLEM, side cover right	1	1		for Chappy Red
	1Y1-21782-30	EMBLEM, side cover right	1	1		for New Portuguese Orange
	1Y1-21782-40	EMBLEM, side cover right	1	1		for Space Blue

Fig. 14 FRAME · SIDE COVER

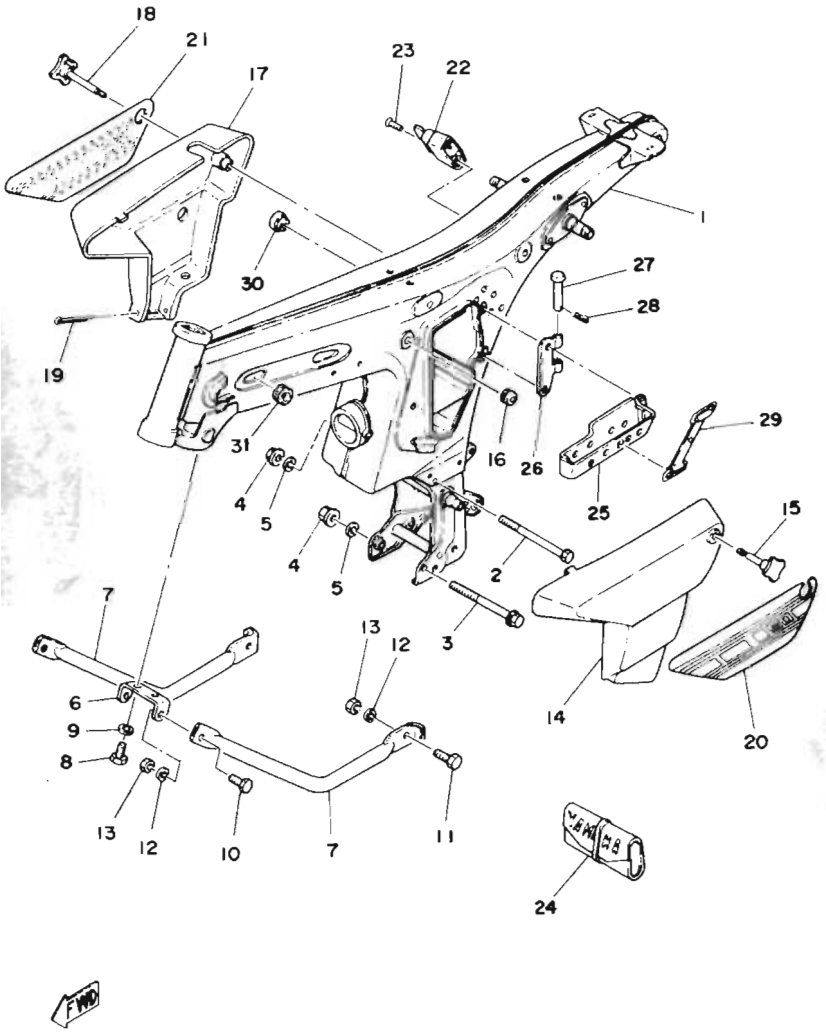


Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
14-22	1J5-21308-00	HANGER, helmet	1	1		
14-23	92701-06030	SCREW, flathead	1	1		
14-24	260-28100-10	TOOL ASS'Y	1	1		
14-25	1Y1-21245-00	BOX, tool	1	1		
14-26	1Y1-21286-00	HINGE, tool box	1	1		
14-27	91701-06065	PIN, clevis	1	1		
14-28	90468-12007	CLIP (102-25375-00)	1	1		
14-29	136-82131-00	BAND, battery	1	1		
14-30	90480-13203	GROMMET	1	1		
14-31	90480-13016	GROMMET (136-82598-00)	1	1		

Fig. 15 REAR ARM · REAR CUSHION · CHAIN CASE

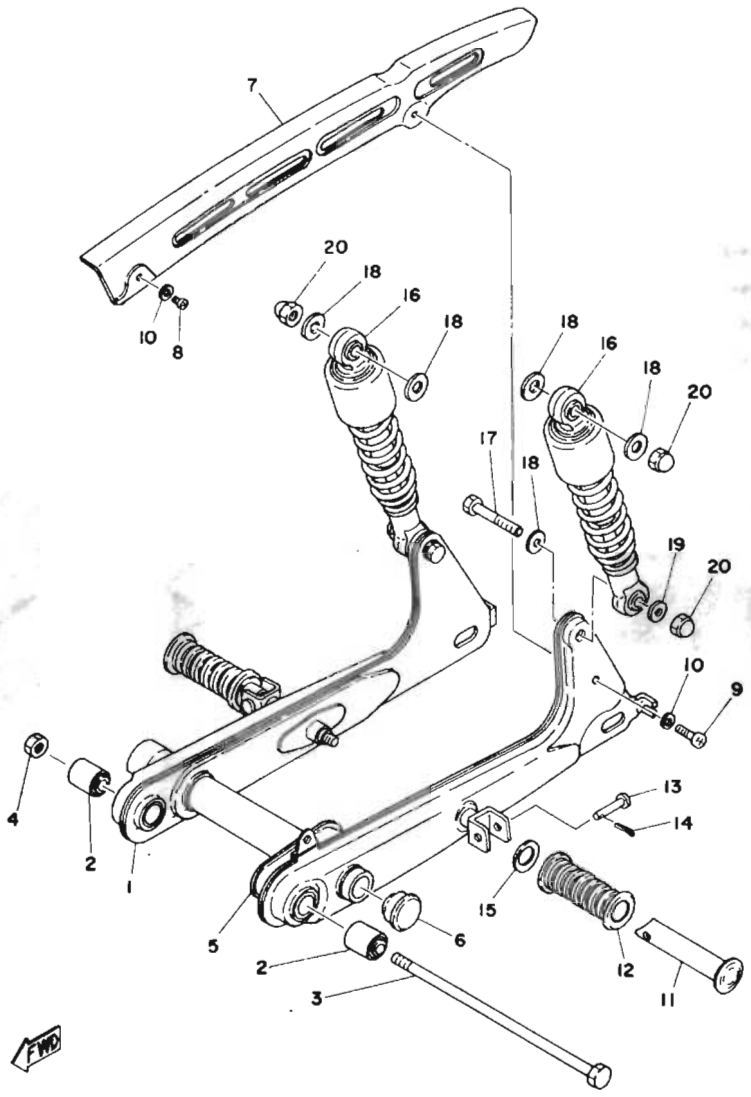


Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FS1DX	Applicable Machine No.	Remarks
15- 1	1X9-22110-00-33	REAR ARM COMP.	1	1		Yamaha Black
15- 2	102-22123-00	BUSHING, rear arm	2	2		
15- 3	109-22141-00	SHAFT, pivot	1	1		
15- 4	90170-10159	NUT, hexagon	1	1		
15- 5	122-22151-00	SEAL, guard	1	1		
15- 6	180-22117-00	CAP, rear arm	1	1		
15- 7	260-22311-00-35	CHAIN CASE, half	1	1		Silver
	260-22311-00-93	CHAIN CASE, half	1	1		Chrome Plated
15- 8	98501-05008	SCREW, panhead	1	1		
15- 9	98501-05020	SCREW, panhead	1	1		
15-10	92901-05600	WASHER, plate	2	2		
15-11	120-27431-00	ARM, rear footrest	2	2		
15-12	120-27433-00	COVER, rear footrest	2	2		
15-13	90240-06009	PIN, with hole	2	2		
15-14	91401-16015	PIN, cotter	2	2		
15-15	90201-20279	WASHER, plate	2	2		
15-16	1Y1-22210-20-93	REAR CUSHION ASS'Y	2	2		
15-17	90101-10255	BOLT	2	2		
15-18	90201-10140	WASHER, plate	6	6		
15-19	92901-10200	WASHER, plain	2	2		
15-20	90176-10013	NUT, cap	4	4		

Fig. 16 STAND · FOOTREST · BRAKE PEDAL

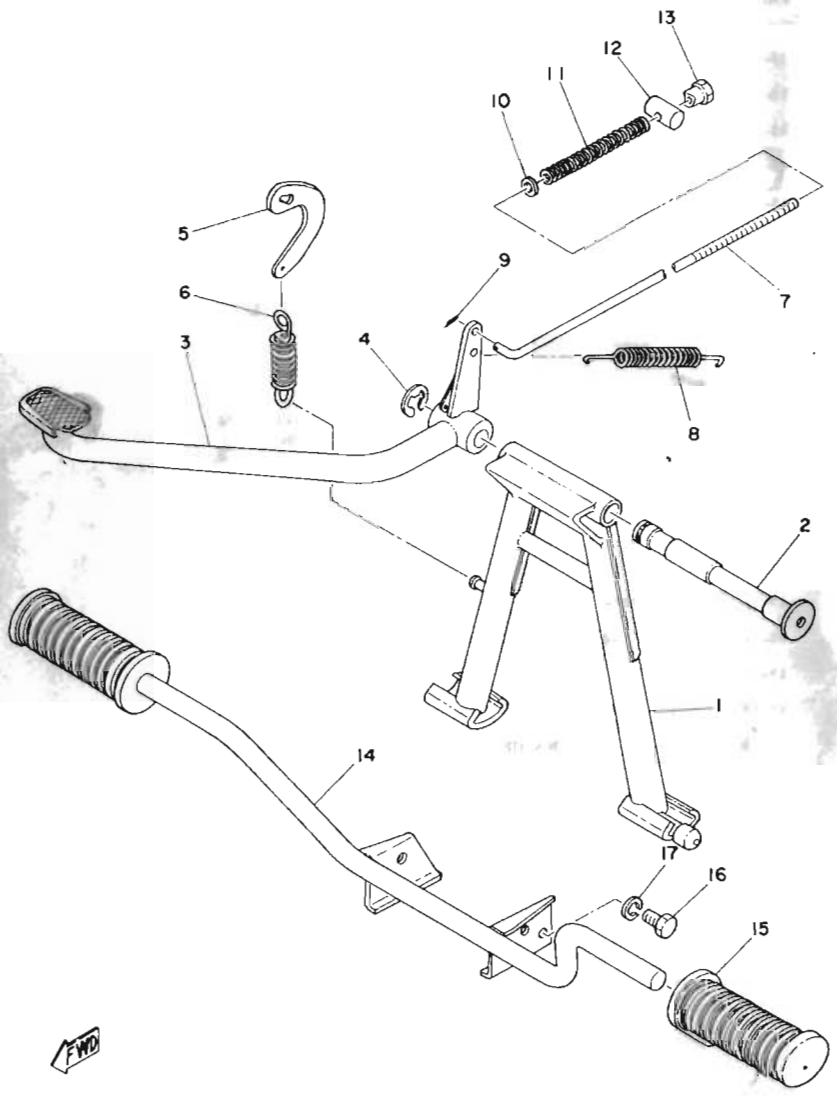


Ref. No.	Part No.	Description	Q'ty	Applicable Machine No.	Remarks
16- 1	207-27111-00	STAND, main	1	1	
16- 2	122-27112-00	SHAFT, main stand	1	1	
16- 3	257-27211-00-91	PEDAL, brake	1	1	
16- 4	93430-12008	CIRCLIP (E-12)	1	1	
16- 5	109-27115-00	LINK, main stand	1	1	
16- 6	90506-29054	SPRING, tension (122-27116-00)	1	1	
16- 7	180-27231-01	ROD, brake	1	1	
16- 8	90506-20041	SPRING, tension (109-27216-00)	1	1	
16- 9	91401-20012	PIN, cotter	1	1	
16-10	92901-06600	WASHER, plate	1	1	
16-11	90501-10245	SPRING, compression (180-27236-00)	1	1	
16-12	90249-12008	PIN (156-27237-00)	1	1	
16-13	90179-06176	NUT	1	1	
16-14	260-27411-00	FOOTREST	1	1	
16-15	122-27113-00	COVER, footrest	1	1	
16-16	90101-08246	BOLT, hexagon	1	1	
16-17	92901-08100	WASHER, spring	1	1	

Fig. 17 FRONT FENDER · REAR FENDER

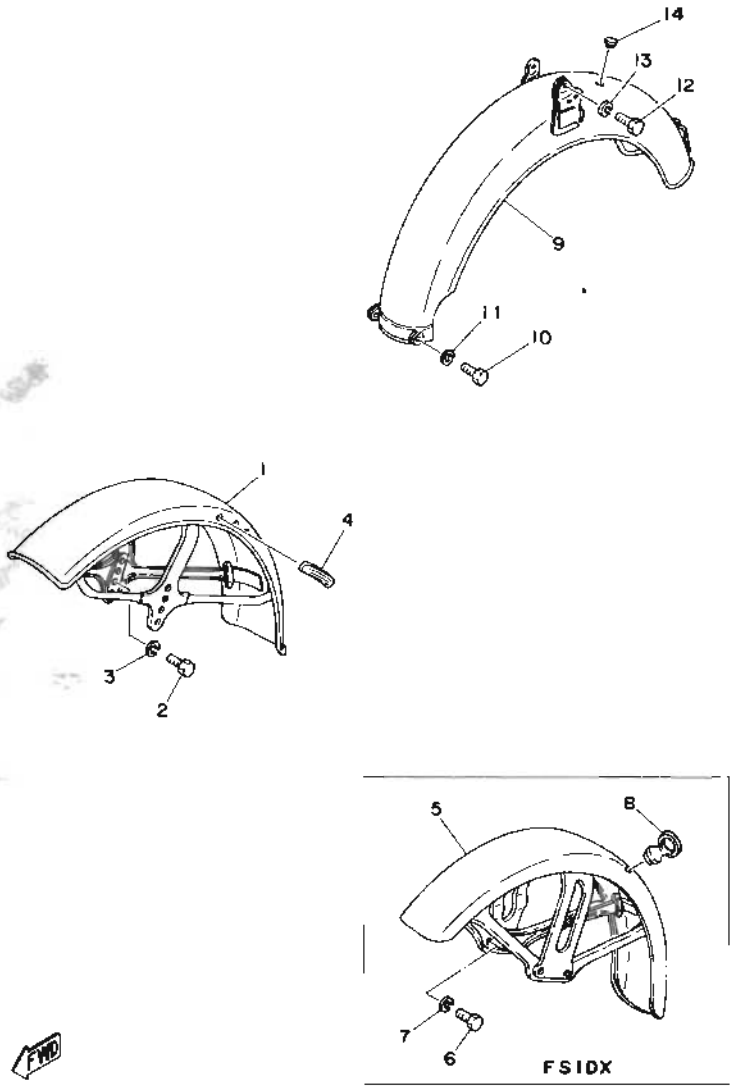


Ref. No.	Part No.	Description	Q'ty	Applicable Machine No. FS1 FS1DX	Remarks
17- 1	101-21610-01-93	FRONT FENDER COMP.	1		
17- 2	97301-08012	BOLT, hexagon	4		
17- 3	92901-08100	WASHER, spring	4		
17- 4	122-21517-00	PAD, wire	1		
17- 5	481-21510-02-93	FRONT FENDER COMP.		1	
17- 6	90101-08281	BOLT, hexagon		2	
17- 7	92901-08100	WASHER, spring		2	
17- 8	1A0-21518-00	HOLDER, wire		1	
17- 9	1Y1-21610-00-93	REAR FENDER COMP.	1	1	
17-10	97301-06016	BOLT, hexagon	2	2	
17-11	92901-06600	WASHER, plate	2	2	
17-12	97301-08016	BOLT, hexagon	2	2	
17-13	92901-08100	WASHER, spring	2	2	
17-14	90480-12013	GROMMET (152-84518-00)	2	2	

Fig. 18 FRONT FORK (FS1)

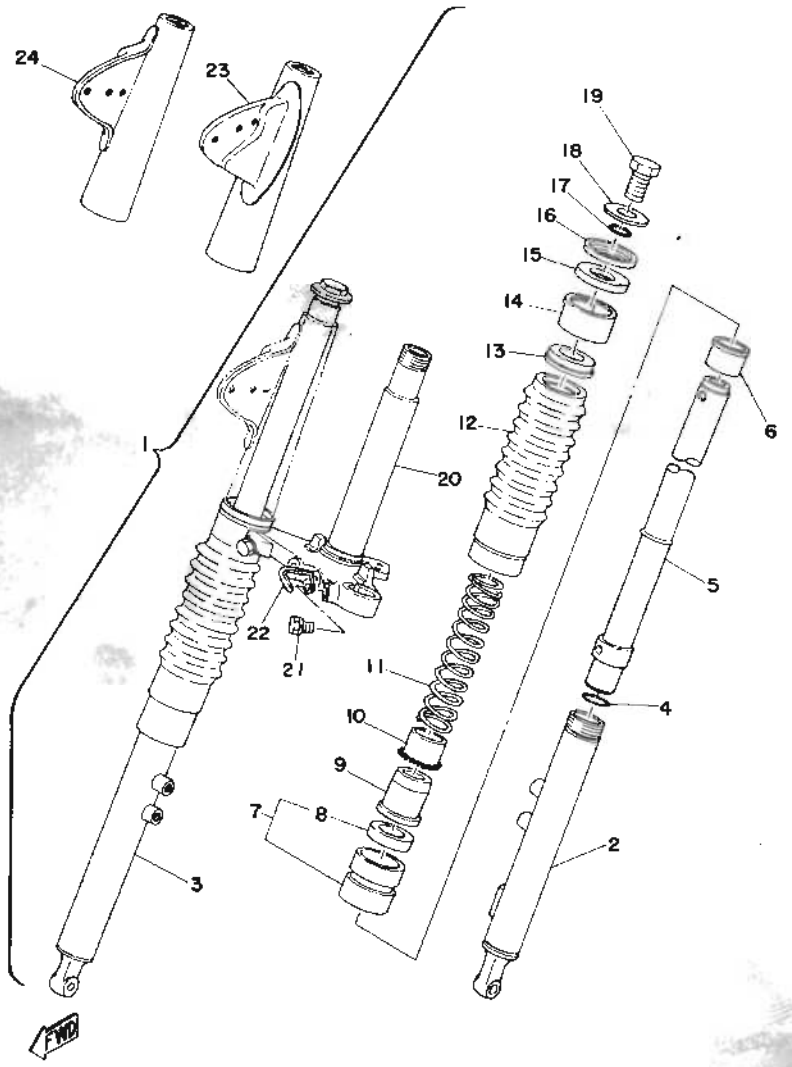


Ref. No.	Part No.	Description	Q'ty	Applicable Machine No. FS1	FS1DX	Remarks
18- 1	1U1-23101-11	FRONT FORK ASSY	1			
18- 2	1U1-23126-11-35	. TUBE, outer left	1			Silver
18- 3	1U1-23136-11-35	. TUBE, outer right	1			Silver
18- 4	207-23147-00	. O-RING	2			
18- 5	366-23124-90	. TUBE, inner left	1			
	366-23134-90	. TUBE, inner right	1			
18- 6	109-23125-00	. METAL, slide	2			
18- 7	209-23150-41	. OUTER NUT COMP.	2			
18- 8	109-23145-01	. . OIL SEAL	2			
18- 9	109-23143-00	. SEAT, spring under	2			
18-10	207-23117-00	. GUIDE, spring	2			
18-11	207-23141-10	. SPRING, fork	2			
18-12	196-23191-40	. BOOT	2			
18-13	209-23142-40	. SEAT, spring upper	2			
18-14	209-23122-40	. COVER, outer left	2			
18-15	207-23163-00	. PACKING	2			
18-16	207-23116-01	. GUIDE, cover under	2			
18-17	307-23114-00	. PACKING	2			
18-18	207-23112-30	. WASHER, cap	2			
18-19	260-23111-40	. BOLT, cap	2			
18-20	260-23340-30-35	. UNDER BRACKET COMP.	1			Yamaha Black
18-21	122-23346-01	. BOLT, under bracket	2			
18-22	260-23318-40	. HOLDER, wire	1			
18-23	260-23121-40-35	COVER, upper left	1			Yamaha Black
18-24	260-23131-40-33	COVER, upper right	1			Yamaha Black

Fig. 19 FRONT FORK (FS1-DX)

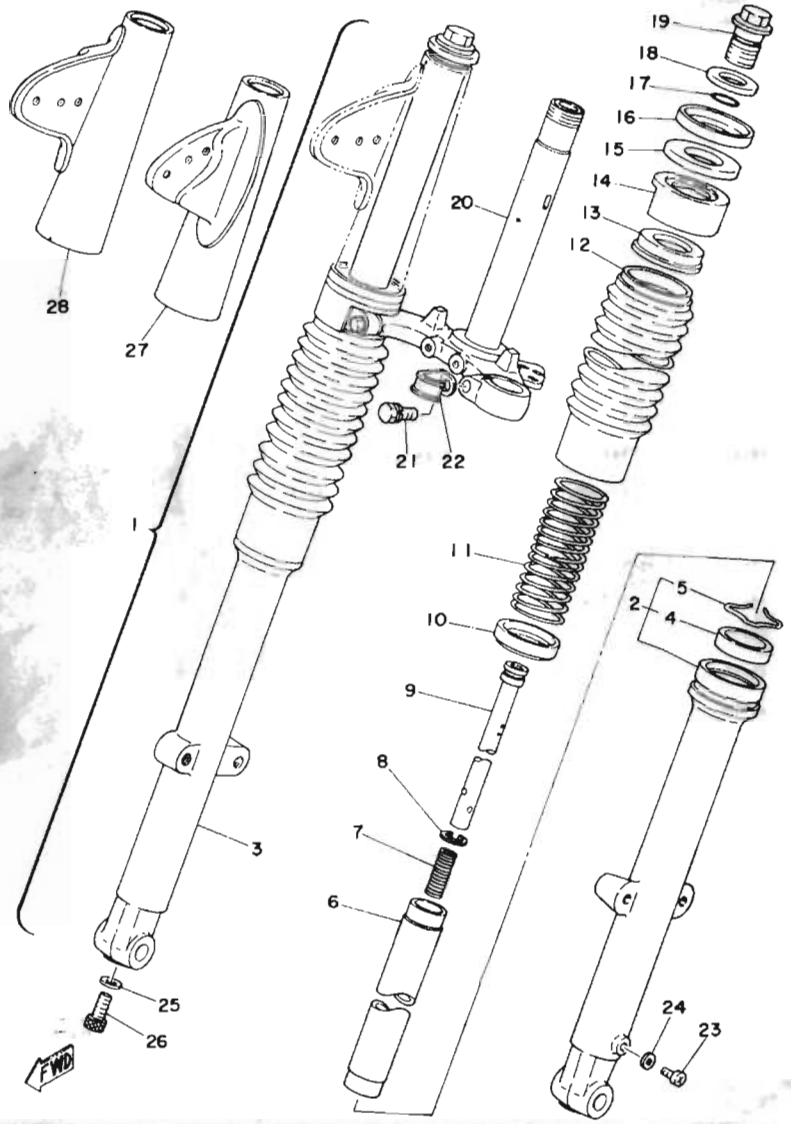


Ref. No.	Part No.	Description	Q'ty FS1	Q'ty FS1-DX	Applicable Machine No.	Remarks
19- 1	1Y1-23101-00	FRONT FORK ASS'Y	1			
19- 2	1Y1-23126-00	. TUBE, outer left	1			
19- 3	1Y1-23136-00	. TUBE, outer right	1			
19- 4	1T8-23145-00	. . OIL SEAL	2			
19- 5	1T8-23156-00	. . CLIP, oil seal	2			
19- 6	1Y1-23134-00	. INNER TUBE COMP.	2			
19- 7	1Y1-23152-00	. SPRING, front fork	2			
19- 8	1Y1-23157-00	. PISTON RING, front fork	2			
19- 9	1Y1-23170-00	. CYLINDER COMP.	2			
19-10	596-23117-00	. GUIDE, spring	2			
19-11	596-23141-00	. SPRING, fork	2			
19-12	428-23141-00	. BOOT	2			
19-13	209-23142-40	. SEAT, spring upper	2			
19-14	1Y1-23122-00	. COVER, outer	2			
19-15	207-23163-00	. PACKING	2			
19-16	207-23116-01	. GUIDE, cover under	2			
19-17	1T8-23114-00	. PACKING	2			
19-18	1T8-23112-00	. WASHER, cap	2			
19-19	1T8-23111-00	. BOLT, cap	2			
19-20	596-23340-00-33	. UNDER BRACKET COMP.	1			Yamaha Black
19-21	122-23346-01	. BOLT, under bracket	2			
19-22	260-23318-40	. HOLDER, wire	1			
19-23	122-23119-01	. PLUG, drain	2			
19-24	122-23129-00	. GASKET, drain plug	2			
19-25	1N1-23158-00	. PACKING	2			
19-26	91311-08025	. BOLT	2			
19-27	260-23121-40-33	COVER, upper left	1			Yamaha Black
19-28	260-23131-40-33	COVER, upper right	1			Yamaha Black

Fig. 20 STEERING

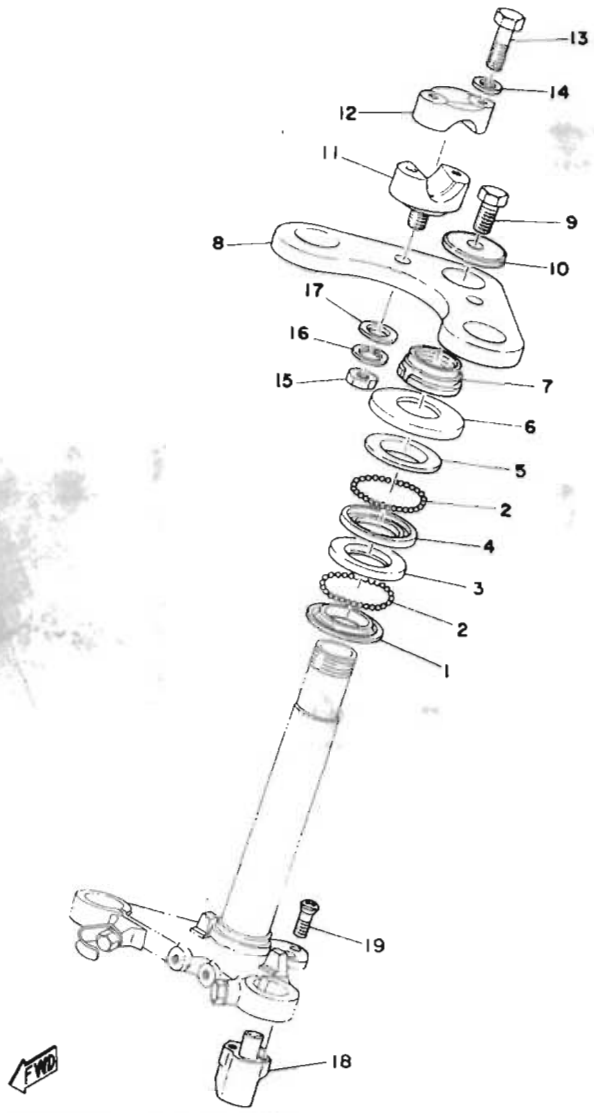


Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
20- 1	156-23411-00	RACE, ball 1	1	1		
20- 2	93501-04011	BALL (1/4 inch)	38	38		
20- 3	156-23412-00	RACE, ball 2	1	1		
20- 4	183-23412-00	RACE, ball 2	1	1		
20- 5	183-23411-00	RACE, ball 1	1	1		
20- 6	136-23415-00	COVER, ball race	1	1		
20- 7	90179-25051	NUT (122-23543-00)	1	1		
20- 8	185-23435-00-98	CROWN, handle	1	1		Low Gloss Black
20- 9	90105-10006	BOLT (122-23451-00)	1	1		
20-10	90209-10021	WASHER (122-23443-00)	1	1		
20-11	462-23442-00-98	HOLDER, handle under	2	2		Low Gloss Black
20-12	462-23441-00-98	HOLDER, handle upper	2	2		Low Gloss Black
20-13	97311-06035	BOLT, hexagon	4	4		
20-14	92901-06600	WASHER, plate	4	4		
20-15	95301-10600	NUT, hexagon	2	2		
20-16	92901-10100	WASHER, spring	2	2		
20-17	92901-10600	WASHER, plate	2	2		
20-18	1J5-23480-00	STEERING LOCK ASS'Y	1	1		
20-19	98601-05012	SCREW, ovalhead	2	2		

Fig. 21 HANDLE · WIRE (FS1)

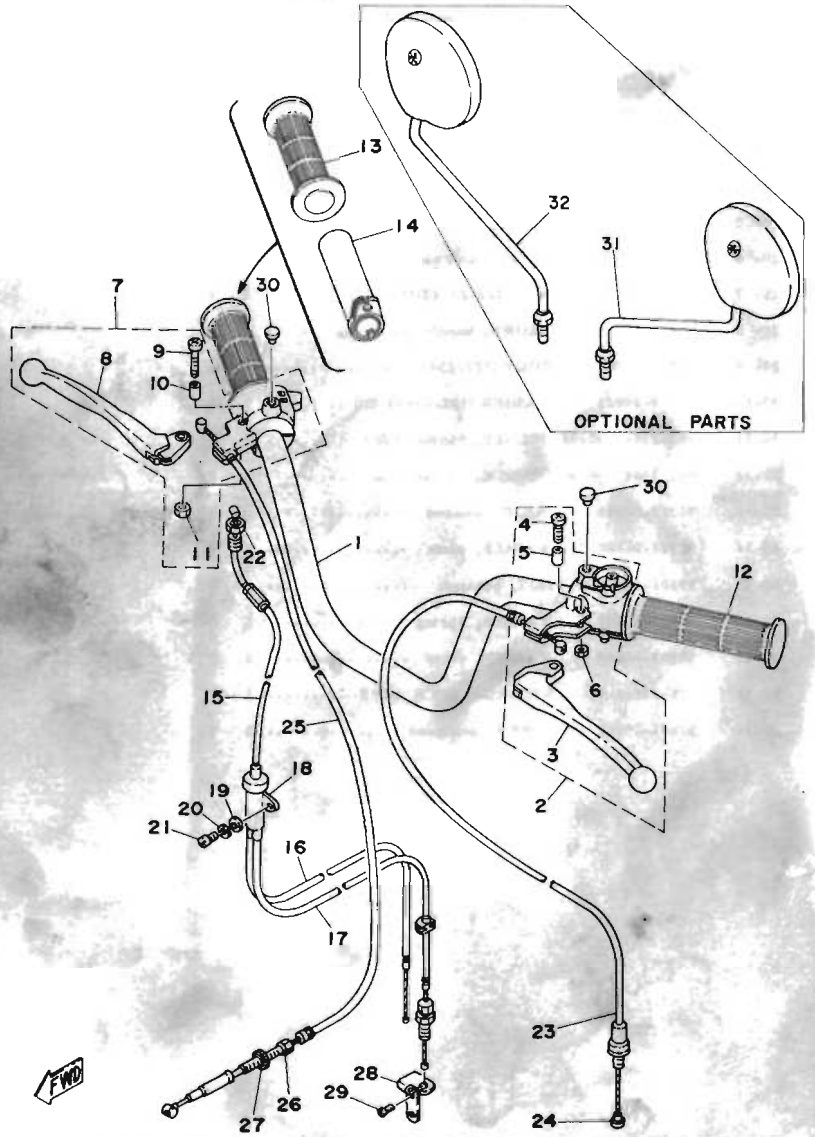

Ref. No.	Part No.	Description	Q'ty FS1	Q'ty FS1DX	Applicable Machine No.	Remarks
21- 1	1Y0-26111-00	HANDLE	1			STD Semi up
	183-26111-20	HANDLE	1			Bar Alternate Parts
	283-26111-00	HANDLE	1			Bridge Alternate Parts
21- 2	363-82910-01	LEVER HOLDER ASS'Y, left	1			STD Semi up Bridge Alternate Parts
	448-82910-21	LEVER HOLDER ASS'Y, left	1			Bar Alternate Parts
21- 3	137-83912-02-38	. LEVER, left	1			
21- 4	98501-05020	. SCREW, panhead	1			
21- 5	137-83913-01	. COLLAR, lever	1			
21- 6	95601-05100	. NUT U	1			
21- 7	109-82820-12-94	LEVER HOLDER ASS'Y, right	1			
21- 8	232-83922-31-38	. LEVER, right	1			
21- 9	98501-05025	. SCREW, panhead	1			
21-10	137-83913-01	. COLLAR, lever	1			
21-11	95601-05100	. NUT U	1			
21-12	363-26241-00	GRIP, left	1			
21-13	363-26242-00	GRIP, right	1			
21-14	1Y1-26243-00	TUBE, guide	1			
21-15	1Y0-26311-00	WIRE, throttle 1 (520mm)	1			STD Semi up
	260-26311-20	WIRE, throttle 1 (395mm)	1			Bar Alternate Parts
	212-26311-00	WIRE, throttle 1 (545mm)	1			Bridge Alternate Parts
21-16	207-26312-00	WIRE, throttle 2 (305mm)	1			
21-17	260-26321-00	WIRE, pump (350mm)	1			
21-18	137-26261-01	CYLINDER, wire	1			
21-19	92901-06600	WASHER, plate	1			
21-20	92901-06100	WASHER, spring	1			
21-21	92501-06012	SCREW, panhead	1			
21-22	90170-10038	NUT	1			
21-23	1Y0-26335-09	WIRE, clutch (1010mm)	1			STD Semi up
	260-26335-20	WIRE, clutch (860mm)	1			Bar Alternate Parts
	260-26335-10	WIRE, clutch (1030mm)	1			Bridge Alternate Parts

Fig. 21 HANDLE · WIRE (FS1)

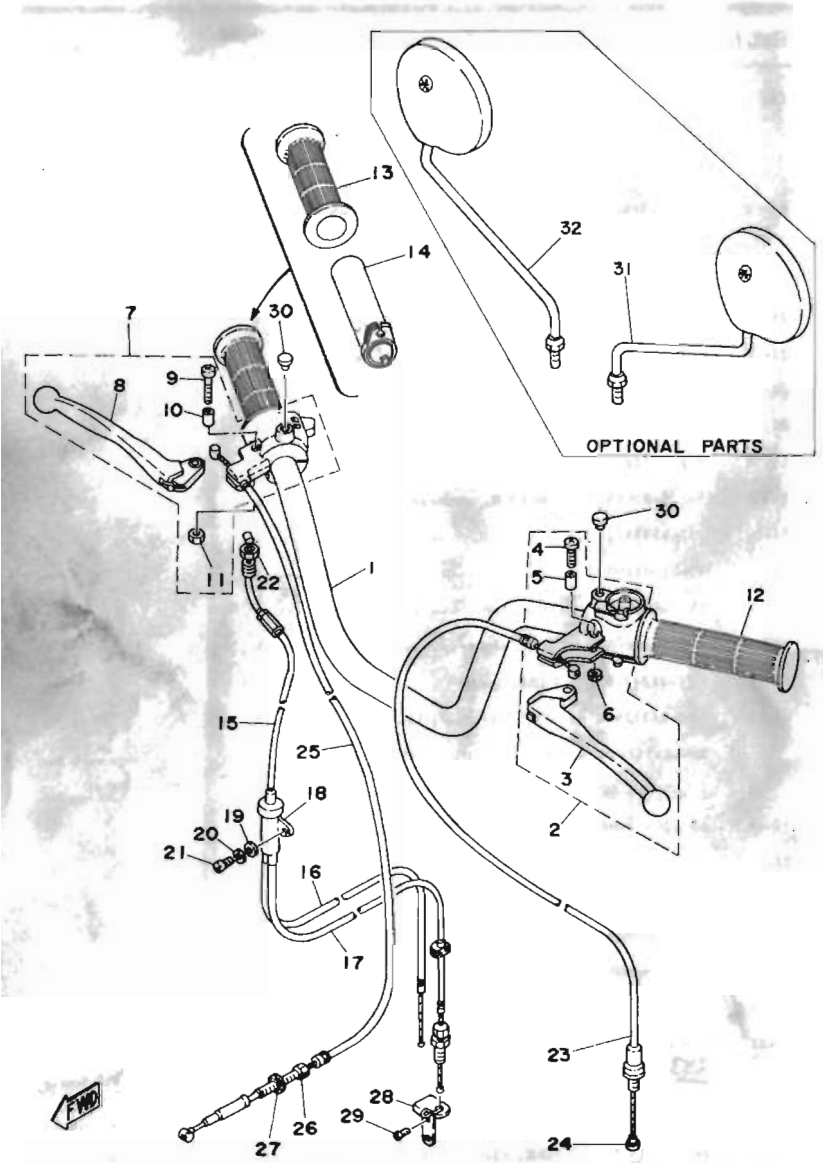


Ref. No.	Part No.	Description	Q'ty FS1	Q'ty FS1DX	Applicable Machine No.	Remarks
21-24	164-26363-00	END, wire	1			
21-25	1Y0-26341-00	WIRE, brake (1010mm)	1			STD
	109-26341-20	WIRE, brake (885mm)	1			Bar Alternate Parts
	132-26341-10	WIRE, brake (1020mm)	1			Bridge Alternate Parts
21-26	90123-06011	BOLT (109-26344-00)	1			
21-27	90179-06143	NUT (109-26344-00)	1			
21-28	257-13151-01	STAY	1			
21-29	98501-05010	SCREW, panhead	2			
21-30	90338-07011	PLUG (116-83931-00)	2			

OPTIONAL PARTS


21-31	1Y0-26290-10	BACK MIRROR ASS'Y, left	1			
21-32	1Y0-26290-00	BACK MIRROR ASS'Y, right	1			

Fig. 22 HANDLE · WIRE (FS1-DX)

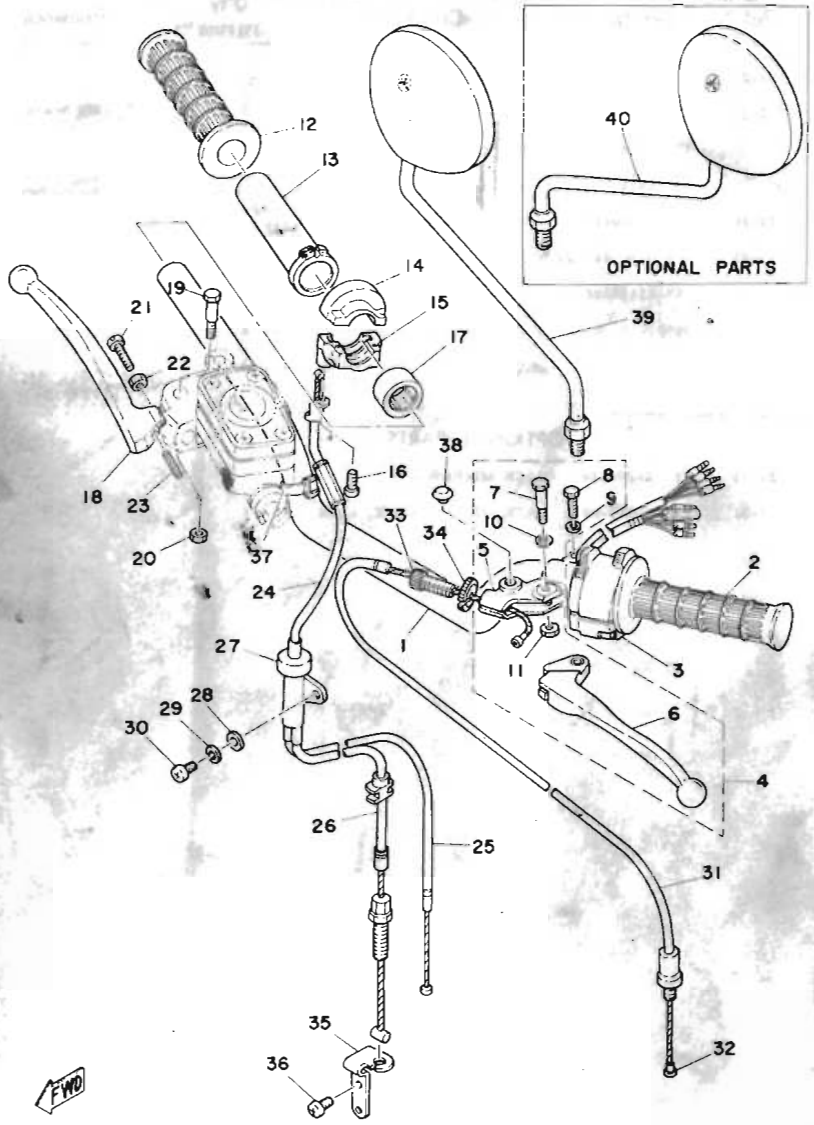

Ref. No.	Part No.	Description	Q'ty FS1 FS1DX	Applicable Machine No.	Remarks
22- 1	463-26111-00	HANDLE	1		STD Semi up
	463-26111-21	HANDLE	1		Bar Alternate Parts
22- 2	235-26241-10	GRIP, left	1		
22- 3	3[illegible]-83973-02	SWITCH, handle 3	1		
22- 4	360-82910-02	LEVER HOLDER ASS'Y, left	1		
22- 5	341-82911-00	. HOLDER, lever left	1		
22- 6	214-83912-00	. LEVER, left	1		
22- 7	90109-06410	. BOLT	1		
22- 8	97301-06022	. BOLT, hexagon	1		
22- 9	92901-06100	. WASHER, spring	1		
22-10	90201-08083	. WASHER, plate	1		
22-11	95601-06100	. NUT U	1		
22-12	306-26242-10	GRIP, right	1		
22-13	1V1-26243-00	TUBE, guide	1		
22-14	307-26281-00	CAP, grip upper	1		
22-15	307-26282-00	CAP, grip under	1		
22-16	98501-05016	SCREW, panhead	2		
22-17	90387-22585	COLLAR (22-28.5-15)	1		
22-18	1A0-83922-00	LEVER, right	1		
22-19	90109-06465	BOLT	1		
22-20	95601-06100	NUT U	1		
22-21	90146-06008	SCREW	1		
22-22	90170-06010	NUT, hexagon (306-83927-00)	1		
22-23	90501-10312	SPRING, compression (306-83924-00)	1		
22-24	1Y1-26311-00	WIRE, throttle 1 (520mm)	1		STD Semi up
	1Y1-26311-20	WIRE, throttle 1 (470mm)	1		Bar Alternate Parts
22-25	207-26312-00	WIRE, throttle 2 (305mm)	1		
22-26	260-26321-00	WIRE, pump (850mm)	1		
22-27	137-26261-01	CYLINDER, wire	1		

Fig. 22 HANDLE · WIRE (FS1-DX)

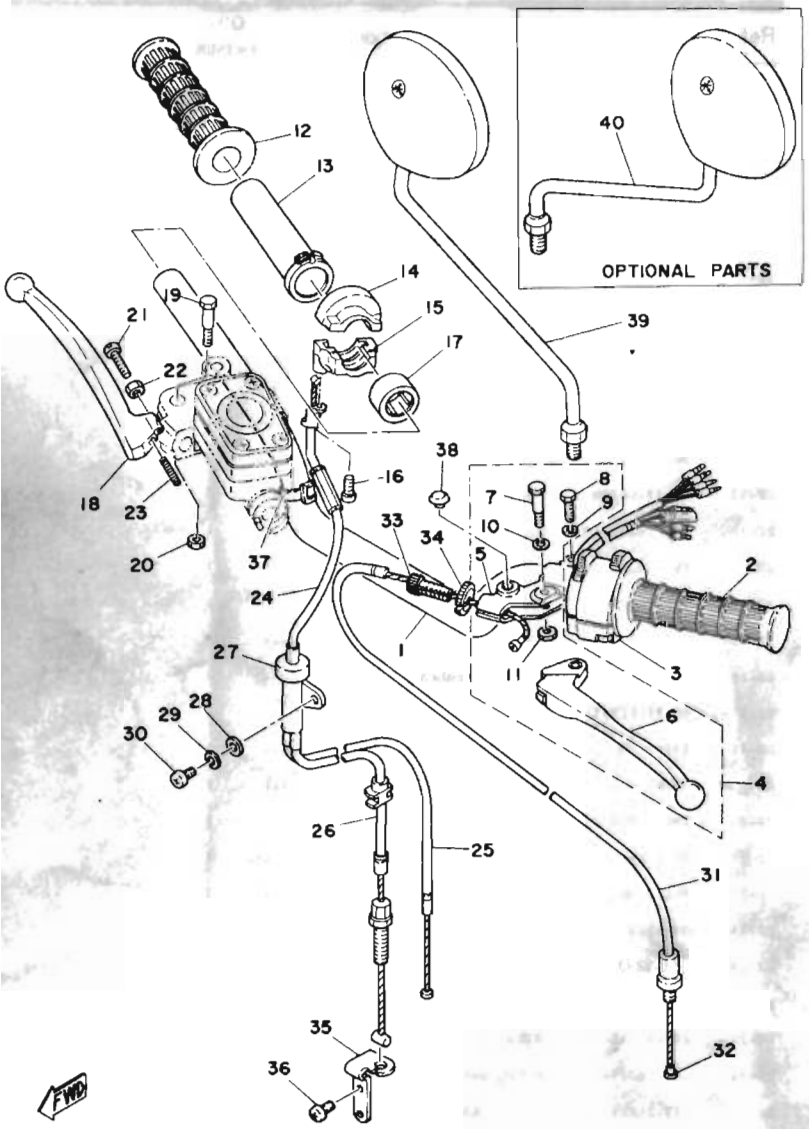


Ref. No.	Part No.	Description	Q'ty FS1 FS1DX	Applicable Machine No.	Remarks
22-28	92901-06600	WASHER, plate	1		
22-29	92901-06100	WASHER, spring	1		
22-30	92501-06012	SCREW, panhead	1		
22-31	1Y1-26335-00	WIRE, clutch (1000mm)	1		STD Section Bar
	1Y1-26335-20	WIRE, clutch (910mm)	1		Alternate Parts
22-32	164-26363-00	END, wire	1		
22-33	90123-08013	BOLT (156-26346-00)	1		
22-34	90179-08148	NUT (168-26344-00)	1		
22-35	257-13151-01	STAY	1		
22-36	98501-05010	SCREW, panhead	2		
22-37	168-83936-01	BAND, switch cord	1		
22-38	90338-09046	PLUG, blind	1		
22-39	1Y1-26290-00	BACK MIRROR ASS'Y, right	1		

OPTIONAL PARTS


22-40	1Y1-26290-10	BACK MIRROR ASS'Y, left	1		

Fig. 23 MASTER CYLINDER · BRAKE HOSE (FS1-DX)

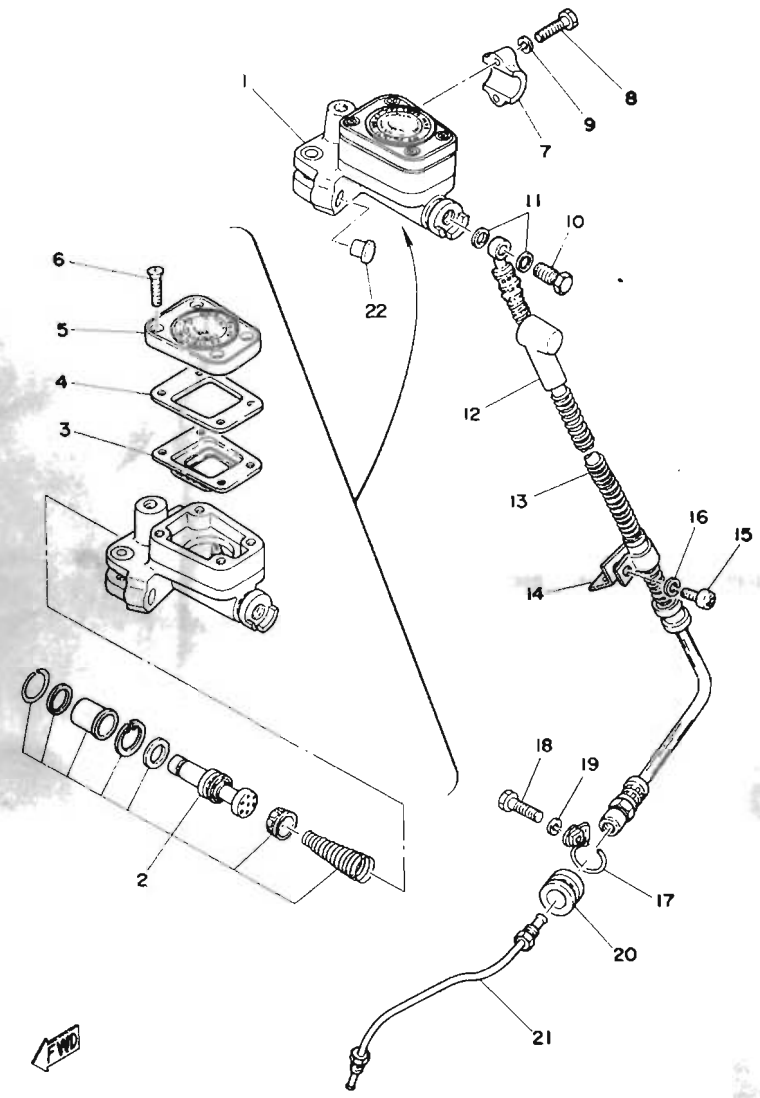


Ref. No.	Part No.	Description	Q'ty FS1	Q'ty FS1DX	Applicable Machine No.	Remarks
23- 1	1A0-25850-02	MASTER CYLINDER ASS'Y	1			ASCO
	1Y1-25850-00	MASTER CYLINDER ASS'Y	1			NISSIN
23- 2	1A0-20000-10	. CYLINDER KIT, master	1			ASCO
	1Y1-W0041-00	. CYLINDER KIT, master	1			NISSIN
23- 3	1A0-25854-01	. DIAPHRAGM, reservoir	1			ASCO
	1J3-25854-01	. DIAPHRAGM, reservoir	1			NISSIN
23- 4	1A0-25855-01	. GASKET, reservoir	1			ASCO
	1J3-25855-01	. GASKET, reservoir	1			NISSIN
23- 5	1A0-25893-01	. RESERVOIR CAP ASS'Y	1			ASCO
	1J3-25852-01	. RESERVOIR CAP ASS'Y	1			NISSIN
23- 6	1A0-25824-01	. SCREW	4			ASCO
	90151-05008	. SCREW	4			NISSIN
23- 7	1J3-25867-00	BRACKET, master	1			
23- 8	97321-06025	BOLT, hexagon	2			
23- 9	92901-06100	WASHER, spring	2			
23-10	90401-10034	BOLT, union	1			
23-11	90201-10118	WASHER, plate	2			
23-12	360-25862-00	BOOT, master cylinder	1			STD Semi up
	306-25862-00	BOOT, master cylinder	1			For Alternate Parts
23-13	1K0-25872-03	HOSE, brake	1			STD Semi up
	4Y1-25872-00	HOSE, brake	1			For Alternate Parts
23-14	1K0-25875-01	HOLDER, brake hose	1			
23-15	92501-06012	SCREW, panhead	1			
23-16	92901-06100	WASHER, spring	1			
23-17	404-25876-00	HOLDER, brake hose 2	1			
23-18	97301-06025	BOLT, hexagon	1			
23-19	92901-06100	WASHER, spring	1			
23-20	341-25881-00	RUBBER, brake hose	1			
23-21	404-25871-01	PIPE, brake	1			
23-22	90338-12081	PLUG	1			

Fig. 24 FUEL TANK

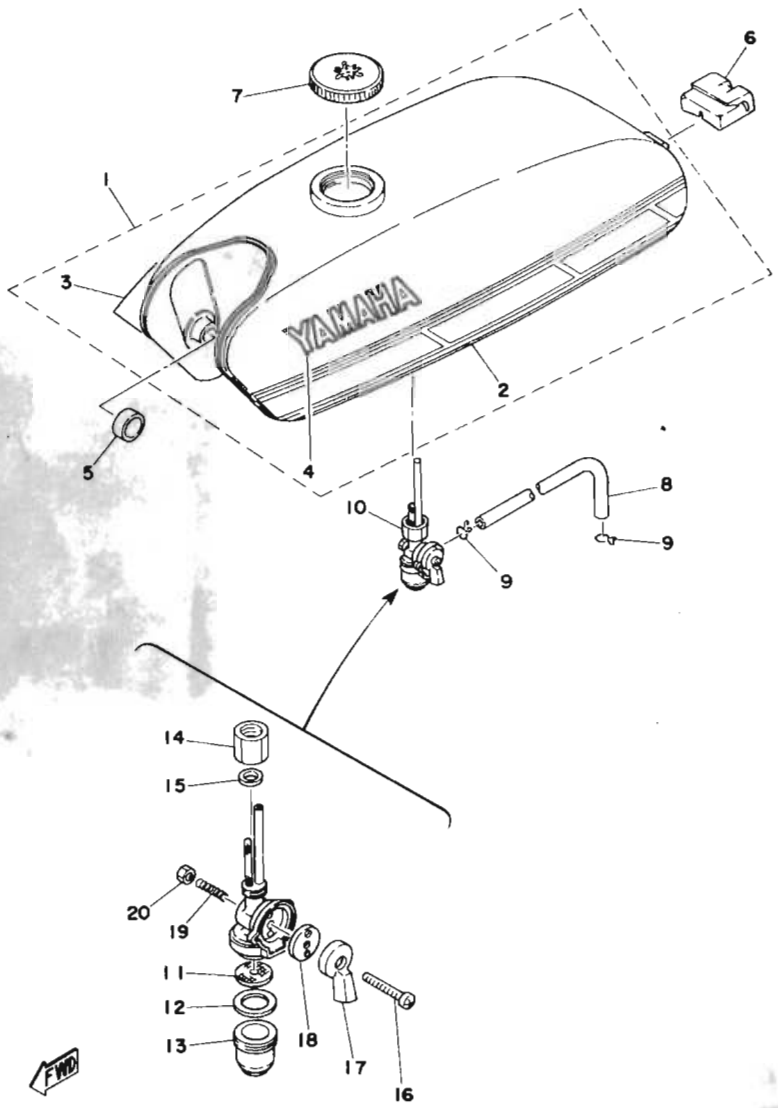


Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FS1DX	Applicable Machine No.	Remarks
24- 1	1J5-24110-01-07	FUEL TANK COMP.	1	1		Crystal Silver
	1J5-24110-01-08	FUEL TANK COMP.	1	1		Chrome Plated
	1J5-24110-01-X0	FUEL TANK COMP.	1	1		Chappy Red
	1J5-24110-01-X1	FUEL TANK COMP.	1	1		New Portuguese Orange
	1J5-24110-01-X2	FUEL TANK COMP.	1	1		Space Blue
24- 2	1Y1-24244-00	. GRAPHIC, fuel tank left	1	1		
24- 3	1Y1-24245-00	. GRAPHIC, fuel tank right	1	1		
24- 4	1A0-24161-00	. EMBLEM, fuel tank	2	2		
24- 5	122-24181-00	DAMPER, locating 1	2	2		
24- 6	467-24184-00	DAMPER, locating	1	1		
24- 7	122-24610-01	CAP ASS'Y	1	1		
24- 8	90445-09353	HOSE (5-520)	1	1		
24- 9	90467-08003	CLIP (101-24356-00)	2	2		
24-10	367-24500-04	FUEL COCK ASS'Y	1	1		
24-11	355-24515-00	. NET, filter	1	1		
24-12	102-24522-01	. GASKET, filter	1	1		
24-13	122-24521-00	. CUP, filter	1	1		
24-14	603-24531-01	. NUT	1	1		
24-15	122-24532-00	. GASKET	1	1		
24-16	98501-05030	. SCREW, panhead	1	1		
24-17	355-24524-01	. LEVER, cock	1	1		
24-18	355-24523-00	. VALVE	1	1		
24-19	355-24518-01	. SPRING, lever	1	1		
24-20	95301-05600	. NUT, hexagon	1	1		

Fig. 25 OIL TANK

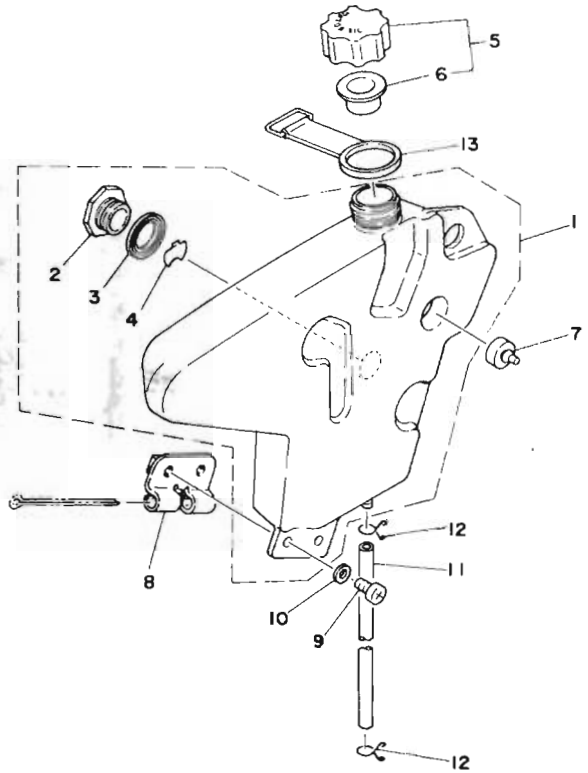


Ref. No.	Part No.	Description	Q'ty FSI FSIDX	Applicable Machine No.	Remarks
25- 1	1Y1-21750-00	OIL TANK ASS'Y	1	1	
25- 2	1Y1-21764-00	. LENS, level gauge	1	1	
25- 3	1Y1-21763-00	. GASKET, level gauge	1	1	
25- 4	1Y1-2176A-00	. REFLECTOR, level gauge	1	1	
25- 5	1Y1-21770-00	OIL TANK CAP ASS'Y	1	1	
25- 6	1Y1-21772-00	. GASKET, cap	1	1	
25- 7	164-21778-00	DAMPER, locating	2	2	
25- 8	1Y1-21796-00	HINGE	1	1	
25- 9	92501-06012	SCREW, panhead	2	2	
25-10	92901-06600	WASHER, plate	2	2	
25-11	126-24319-01	HOSE, oil	1	1	
25-12	90467-06003	CLIP (101-24356-00)	2	2	
25-13	1Y1-21776-00	BAND, tank fitting	1	1	

Fig. 26 SEAT

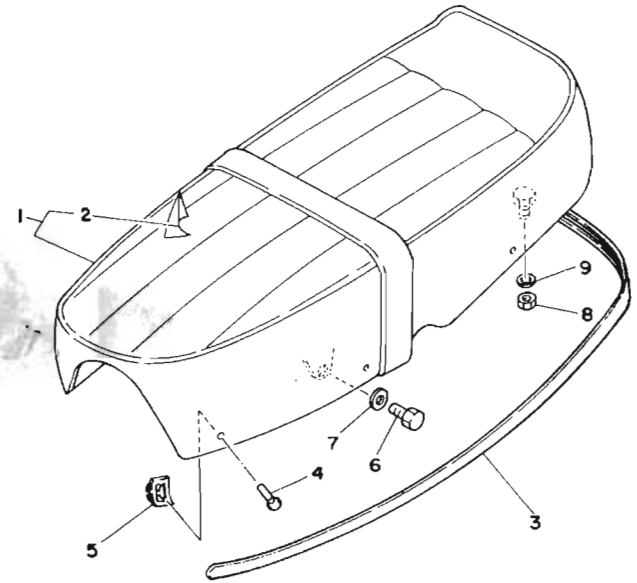


Ref. No.	Parts No.	Description	Q'ty FS1	Q'ty FS1DX	Applicable Machine No.	Remarks
26- 1	1Y1-24730-90	DOUBLE SEAT ASS'Y	1	1		
26- 2	260-24731-00	. COVER, double seat	1	1		
26- 3	1Y1-24785-00-20	MOLD, double seat	1	1		Crystal Silver
	1Y1-24785-10	MOLD, double seat	1	1		(Chrome Plated)
	1Y1-24785-00-E1	MOLD, double seat	1	1		Chappy Red
	1Y1-24785-00-U2	MOLD, double seat	1	1		New Portuguese Orange
	1Y1-24785-00-J5	MOLD, double seat	1	1		Space Blue
26- 4	1L9-24784-00	RIVET	6	6		
26- 5	90183-04012	NUT, speed	6	6		
26- 6	97301-08018	BOLT, hexagon	2	2		
26- 7	92901-08200	WASHER, plain	2	2		
26- 8	95301-08600	NUT, hexagon	2	2		
26- 9	92901-08600	WASHER, plate	2	2		

Fig. 27 FRONT WHEEL (FS1)

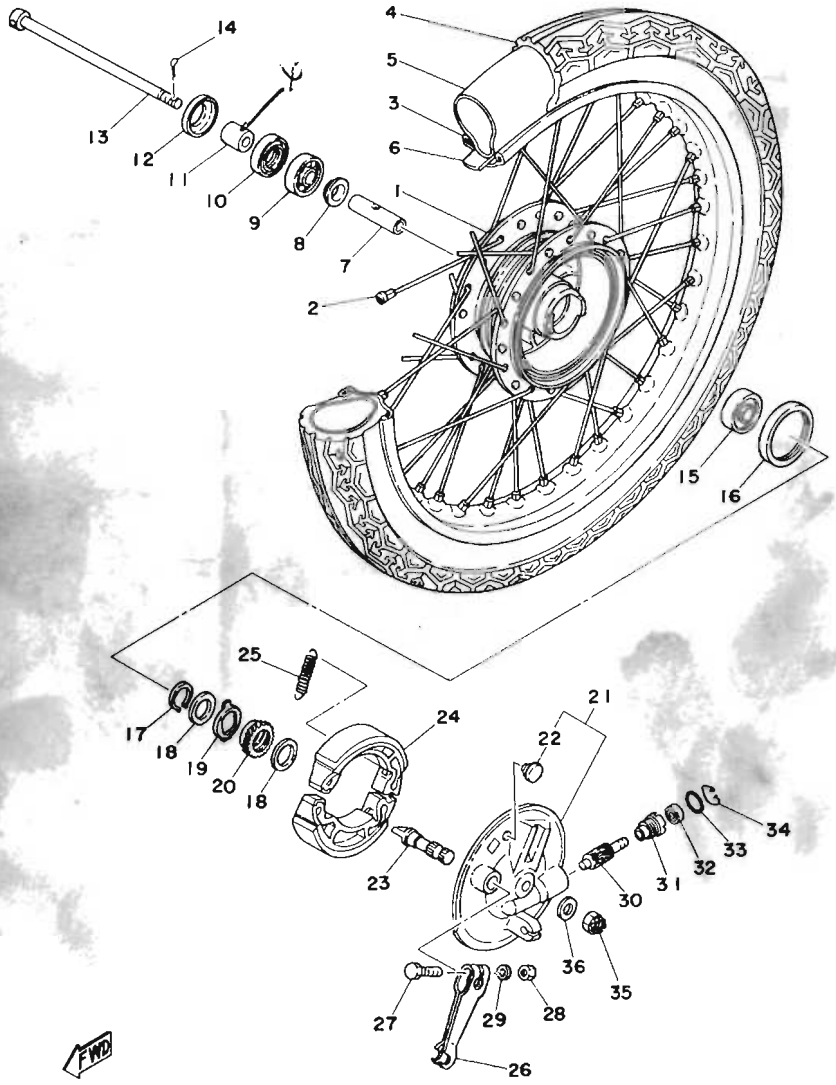


Ref. No.	Part No.	Description	Q'ty	Applicable Machine No. FS1 FS1DX	Remarks
27- 1	517-25111-00-35	HUB, front	1		Silver
27- 2	109-25104-00	SPOKE SET	1s		
27- 3	94412-17002	RIM (1.20A-17)	1		
27- 4	94125-17259	TIRE, front (2.50-17-4PR)	1		
27- 5	94226-17005	TUBE (2.50-17)	1		
27- 6	94330-17023	BAND, rim (2.50-17)	1		
27- 7	195-25117-00	SPACER, bearing	1		
27- 8	195-25115-00	FLANGE, spacer	1		
27- 9	93306-30003	BEARING (B6300Z)	1		
27-10	93106-20001	OIL SEAL (DD-20-35-7)	1		
27-11	90387-10277	COLLAR (10-20-20)	1		
27-12	322-25118-00	COVER, hub dust	1		
27-13	353-25181-03	SHAFT, wheel	1		
27-14	91401-20020	PIN, cotter	1		
27-15	93306-30003	BEARING (B6300Z)	1		
27-16	93105-47007	OIL SEAL (SDD-47-58-7)	1		
27-17	93410-20009	CIRCLIP (S-20)	1		
27-18	90201-20269	WASHER, plate (183-25147-00)	2		
27-19	183-25149-00	CLUTCH, meter	1		
27-20	296-25135-00	GEAR, drive (27T)	1		
27-21	1K8-25120-00-35	BRAKE SHOE PLATE ASS'Y	1		Silver
27-22	90480-10068	GROMMET	1		
27-23	538-25351-01	CAMSHAFT	1		
27-24	296-25330-00	BRAKE SHOE COMP.	2		
27-25	90506-16034	SPRING, tension (102-25333-00)	2		
27-26	538-25155-00	LEVER, camshaft	1		
27-27	90101-06278	BOLT, hexagon	1		
27-28	93301-06600	NUT, hexagon	1		
27-29	90201-07076	WASHER, plate (183-25146-00)	1		

Fig. 27 FRONT WHEEL (FS1)

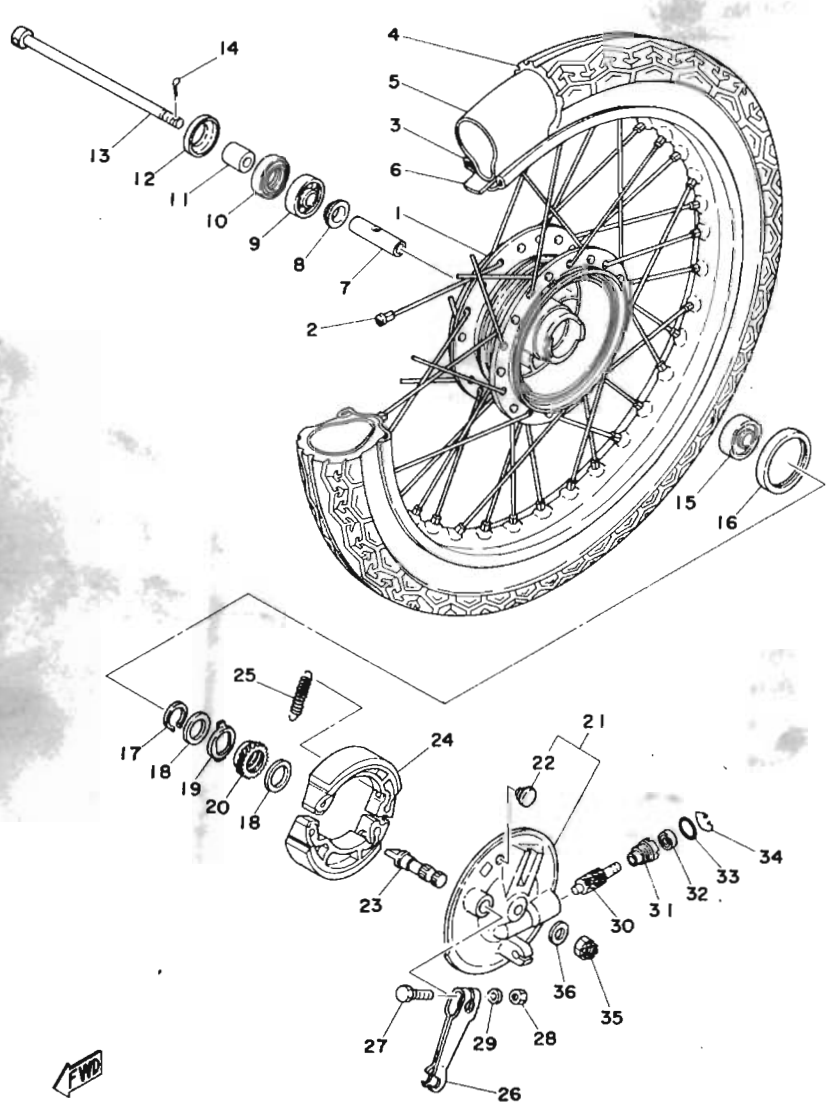


Ref. No.	Part No.	Description	Q'ty FS1	Q'ty FS1DX	Applicable Machine No.	Remarks
27-30	296-25138-00	GEAR, meter (11T)	1			
27-31	109-25136-00	BUSHING	1			
27-32	93104-07003	OIL SEAL (SO-7-14-4)	1			
27-33	93210-14104	O-RING (2.4-13.8)	1			
27-34	102-25137-00	RING, stop	1			
27-35	90171-10004	NUT, castle (353-25182-00)	1			
27-36	90201-10123	WASHER, plate	1			

Fig. 28 FRONT WHEEL (FS1-DX)

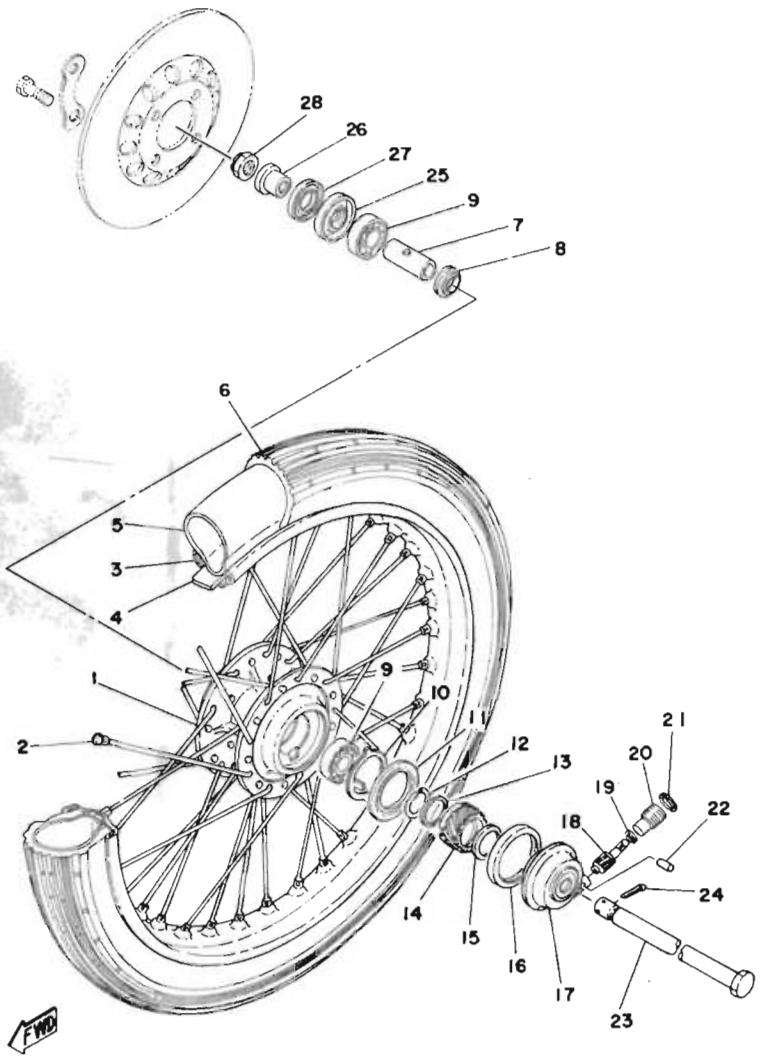


Ref. No.	Part No.	Description	Q'ty	Applicable Machine No. FS1 FS1DX	Remarks
28- 1	390-25111-00	HUB, front	1		
28- 2	481-25104-00	SPOKE SET	1		
28- 3	94414-17090	RIM, front (1.40-17)	1		
28- 4	94330-17023	BAND, rim (2.50-17)	1		
28- 5	94225-17005	TUBE, front (2.50-17)	1		
28- 6	94125-17259	TIRE, front (2.50-17-4PR)	1		
28- 7	90560-12138	SPACER, bearing (183-25117-00)	1		
28- 8	109-25315-00	FLANGE, spacer	1		
28- 9	93306-30103	BEARING (B6301Z)	2		
28-10	341-25149-00	CLUTCH, meter	1		
28-11	341-25846-00	RETAINER, clutch meter	1		
28-12	341-25137-00	RING, stop	1		
28-13	90201-25286	WASHER, plate (341-25147-00)	1		
28-14	481-25135-00	GEAR, drive (27T)	1		
28-15	90201-25490	WASHER, plate (152-17226-00)	1		
28-16	93105-45017	OIL SEAL (SDD-45-56-6)	1		
28-17	390-25191-01	HOUSING, gear unit	1		
28-18	481-25138-00	GEAR, meter (11T)	1		
28-19	102-18416-00	WASHER (6.2-9.5-0.8)	1		
28-20	306-25136-00	BUSHING	1		
28-21	92901-12600	WASHER, plate	2		
28-22	91609-20014	PIN, spring	1		
28-23	367-25381-00	SHAFT, wheel	1		
28-24	91401-30025	PIN, cotter	1		
28-25	93106-20002	OIL SEAL (DD20-37-8)	1		
28-26	90387-12272	COLLAR	1		
28-27	481-25118-01	COVER, hub dust	1		
28-28	90171-12005	NUT, castle	1		

Fig. 29 DISC BRAKE · CALIPER (FS1-DX)

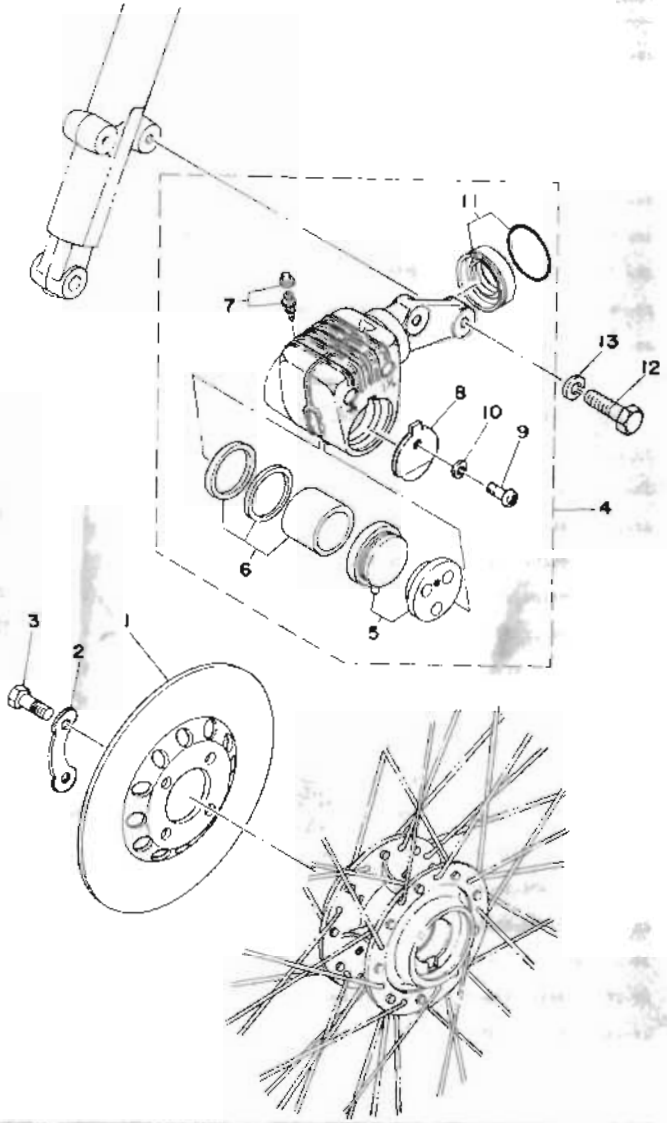


Ref. No.	Part No.	Description	Q'ty	Applicable Machine No. FS1 FS1DX	Remarks
29- 1	390-25711-00	DISK, brake	1		
29- 2	390-25412-00	WASHER, lock	2		
29- 3	90109-08367	BOLT	4		
29- 4	526-25810-00	CALIPER ASS'Y	1		
29- 5	464-20000-11	. PAD LINING ASS'Y	1s		
29- 6	404-W0057-00	. PISTON SET, caliper	1s		
29- 7	404-20000-50	. SCREW BREED ASS'Y	1s		
29- 8	404-25919-00	. SUPPORT, pad	1		
29- 9	98501-05012	. SCREW, panhead	1		
29-10	92901-05100	. WASHER, spring	1		
29-11	404-20000-41	. BOOT ASS'Y	1s		
29-12	90101-08244	BOLT, hexagon	2		
29-13	92901-08100	WASHER, spring	2		

Fig. 30 REAR WHEEL

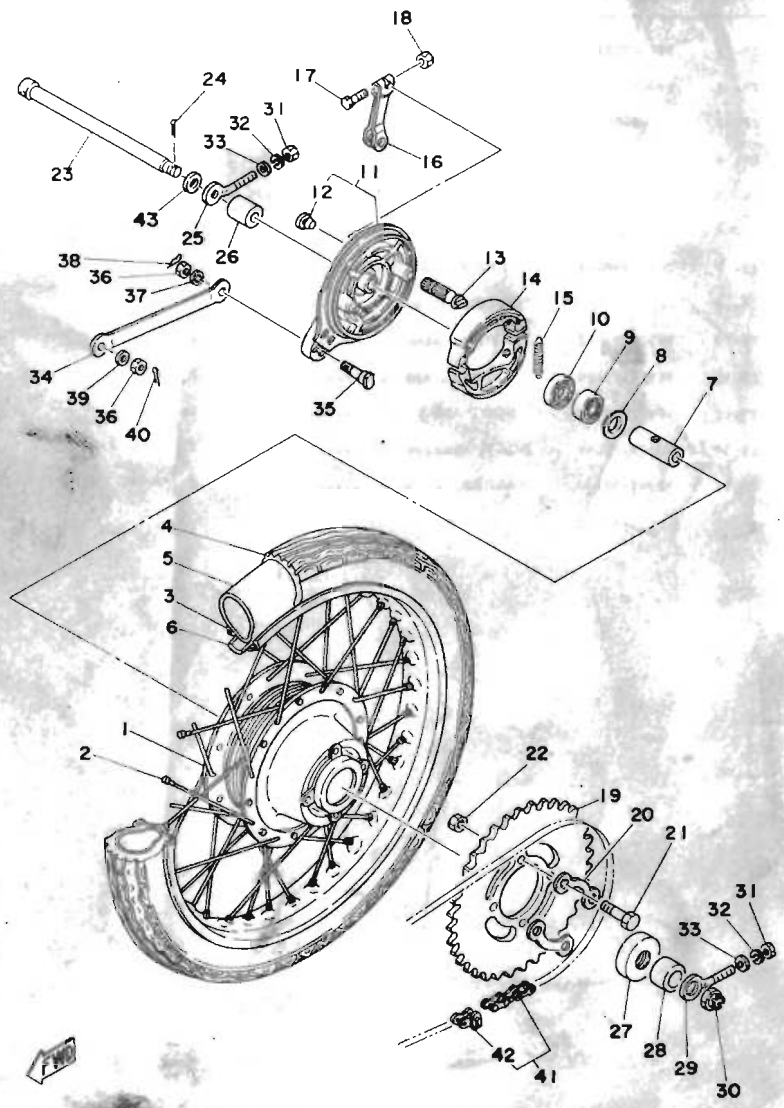


Ref. No.	Part No.	Description	Q'ty FS1	Q'ty FS1DX	Applicable Machine No.	Remarks
30- 1	462-25311-01-35	HUB, rear	1	1		Silver
30- 2	296-25304-00	SPOKE SET	1s	1s		
30- 3	94414-17003	RIM (1.40-17)	1	1		
30- 4	94125-17259	TIRE, rear (2.50-17-4PR)	1	1		
30- 5	94225-17005	TUBE (2.50-17)	1	1		
30- 6	94330-17023	BAND, rim (2.50-17)	1	1		
30- 7	90560-12170	SPACER	1	1		
30- 8	102-25315-00	FLANGE, spacer	1	1		
30- 9	93306-30101	BEARING (B6301)	2	2		
30-10	93104-21016	OIL SEAL (SO-21-37-7)	1	1		
30-11	355-25320-00-35	BRAKE SHOE PLATE ASS'Y	1	1		Silver
30-12	90480-10068	GROMMET	1	1		
30-13	538-25351-01	CAMSHAFT	1	1		
30-14	296-25330-00	BRAKE SHOE COMP.	2	2		
30-15	90506-16034	SPRING, tension (102-25333-00)	2	2		
30-16	538-25355-00	LEVER, camshaft	1	1		
30-17	90101-06278	BOLT, hexagon	1	1		
30-18	95301-06600	NUT, hexagon	1	1		
30-19	288-25439-10-33	GEAR, sprocket wheel (39T)	1	1		
30-20	101-25412-00	WASHER, lock	2	2		
30-21	90109-08319	BOLT (109-25411-00)	4	4		
30-22	90170-08158	NUT, hexagon	4	4		
30-23	353-25381-00	SHAFT, wheel	1	1		
30-24	91401-20020	PIN, cotter	1	1		
30-25	102-25389-00	PULLER, chain right	1	1		
30-26	90387-12412	COLLAR (102-25383-00)	1	1		
30-27	93106-20002	OIL SEAL (DD-20-37-8)	1	1		
30-28	90387-12096	COLLAR (109-25377-01)	1	1		
30-29	1U0-25388-00	PULLER, chain left	1	1		

Fig. 30 REAR WHEEL

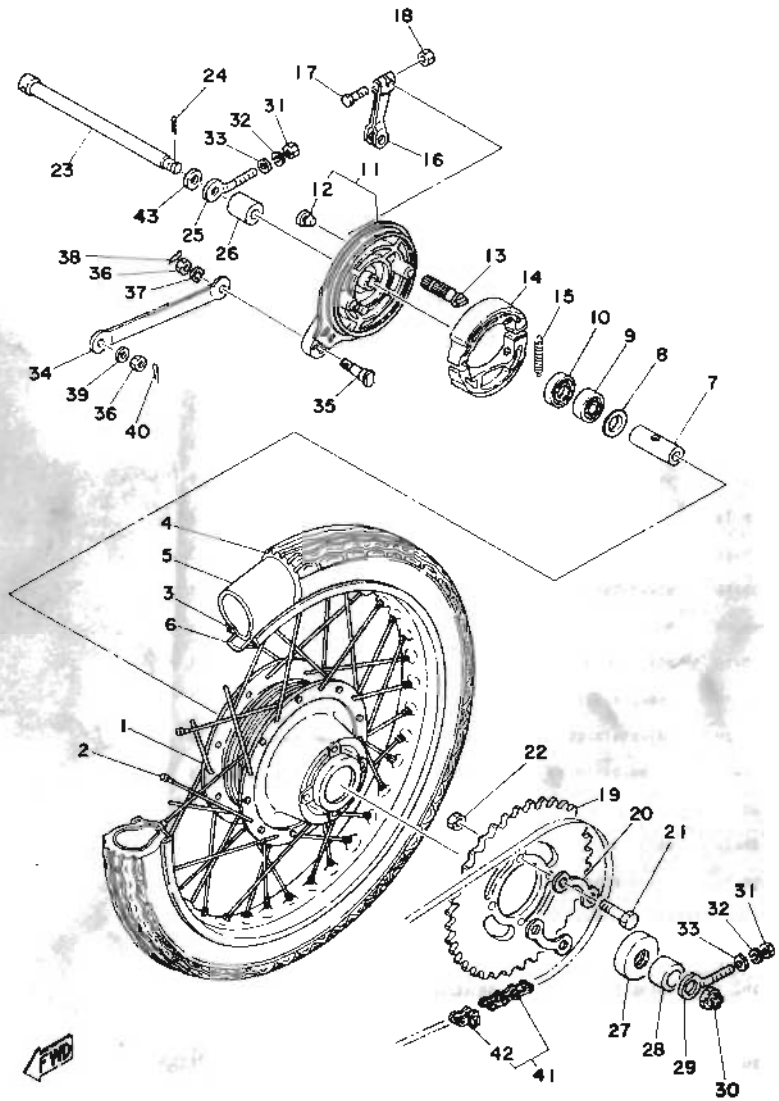


Ref. No.	Part No.	Description	Q'ty	Applicable Machine No. FS1 FS1DX	Remarks
30-30	90178-10004	NUT, castle (353-25182-00)	1	1	
30-31	95301-06600	NUT, hexagon	2	2	
30-32	92901-06100	WASHER, spring	2	2	
30-33	92901-06600	WASHER, plate	2	2	
30-34	102-25371-00	BAR, tension	1	1	
30-35	90109-08183	BOLT (102-25373-00)	1	1	
30-36	95301-08700	NUT, hexagon	2	2	
30-37	92901-08100	WASHER, spring	1	1	
30-38	90468-12007	CLIP (102-25375-00)	1	1	
30-39	92901-08600	WASHER, plate	1	1	
30-40	91401-20012	PIN, cotter	1	1	
30-41	94504-20096	CHAIN (DK420-96L)	1	1	
30-42	94604-20001	JOINT, chain	1	1	
30-43	90201-12174	WASHER, plate	1	1	

Fig. 31 HEAD LAMP

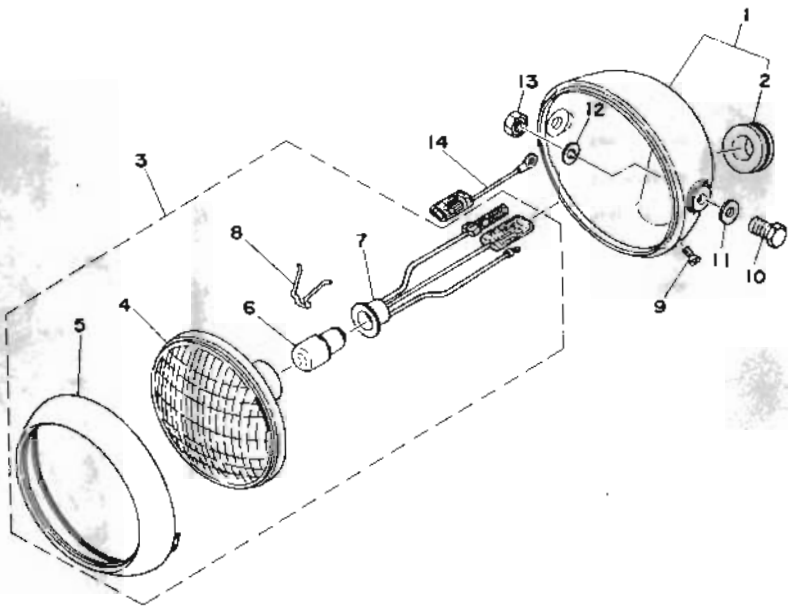


Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
31- 1	241-84330-00-33	HEAD LAMP BODY ASS'Y	1	1		Yamaha Black
31- 2	150-84153-00	. GROMMET	2	2		
31- 3	394-84110-30	HEAD LAMP UNIT ASS'Y	1	1		
31- 4	127-84120-30	. LENS ASS'Y	1	1		
31- 5	195-84315-01	. RIM, head lamp	1	1		
31- 6	296-84114-30	. BULB, head lamp (6V 18/18W)..	1	1		
31- 7	241-84312-00	. SOCKET CORD ASS'Y	1	1		
31- 8	195-84324-00	. SPRING, reflector set	3	3		
31- 9	90152-05005	SCREW, ovalhead	1	1		
31-10	97301-08018	BOLT, hexagon	2	2		
31-11	92901-08200	WASHER, plain	2	2		
31-12	92901-08100	WASHER, spring	2	2		
31-13	95301-08700	NUT, hexagon	2	2		
31-14	393-84313-00	WIRE, earth	1	1		

Fig. 32 SPEEDOMETER

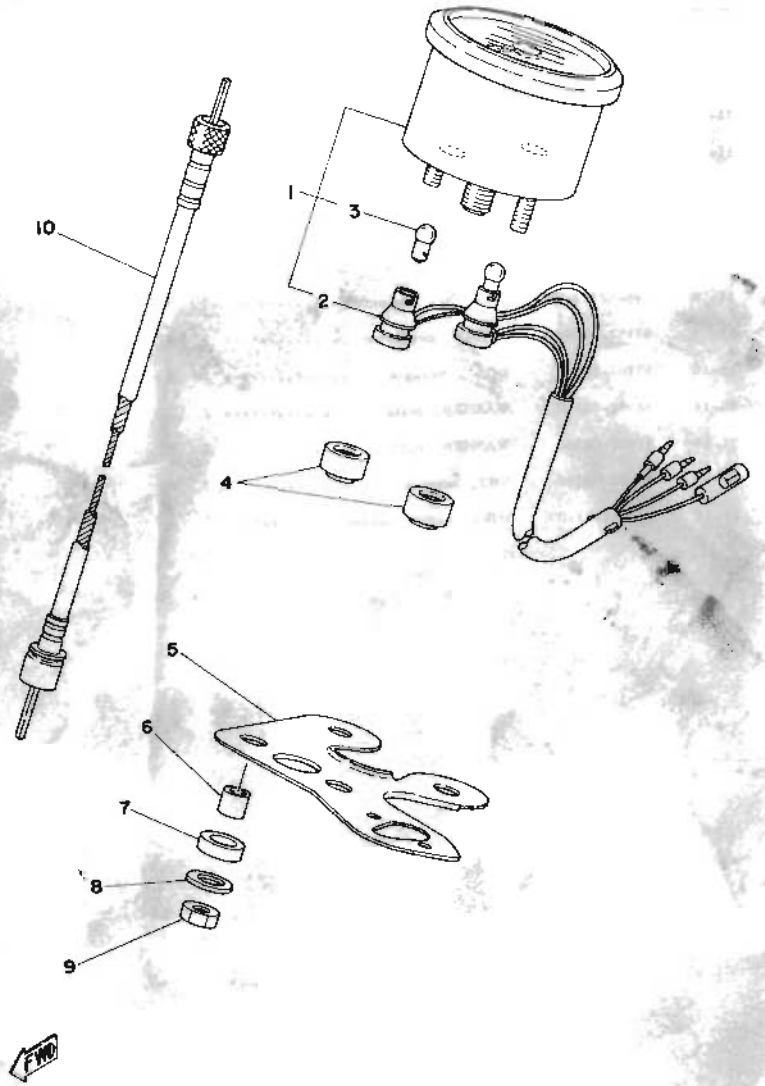

Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
32- 1	582-83910-30	SPEEDOMETER ASS'Y	1	1		
32- 2	552-83520-00	. SOCKET CORD ASS'Y	1	1		
32- 3	122-83516-10	. BULB (6V-3W)	2	2		
32- 4	1M3-83513-00	DAMPER 1	2	2		
32- 5	1U0-83519-00-98	BRACKET, speedometer	1	1		
32- 6	355-83522-00	COLLAR	2	2		
32- 7	355-83526-00	DAMPER 2	2	2		
32- 8	355-83524-00	WASHER, special	2	2		
32- 9	95301-06600	NUT, hexagon	2	2		
32-10	260-83550-00	SPEEDOMETER CABLE ASS'Y ...	1			
	481-83550-00	SPEEDOMETER CABLE ASS'Y ...		1		


Fig. 33 TAIL LAMP

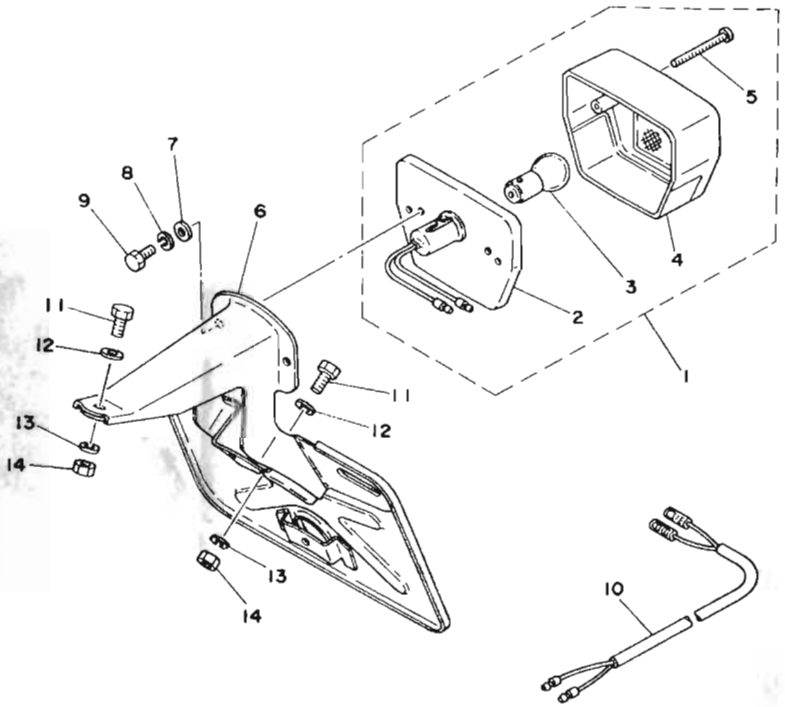

Ref. No.	Part No.	Description	Q'ty	Applicable Machine No.	Remarks
			FSI	FSIDX	
33- 1	1Y1-84510-30	TAIL LAMP UNIT ASS'Y	1	1	
33- 2	1Y1-84511-30	. BASE, tail lamp	1	1	
33- 3		. BULB, tail lamp (6V-21/5W) ...	1	1	
33- 4	1Y1-84521-30	. LENS, tail lamp	1	1	
33- 5	98511-03045	. SCREW, panhead	2	2	
33- 6	1Y1-84551-30-35	BRACKET, licence	1	1	
33- 7	92901-05600	WASHER, plate	2	2	
33- 8	92901-05100	WASHER, spring	2	2	
33- 9	97301-05010	BOLT, hexagon	2	2	
33-10	1X1-84517-00	CORD, tail lamp	1	1	
33-11	97301-06012	BOLT, hexagon	3	3	
33-12	92901-06600	WASHER, plate	3	3	
33-13	92901-06100	WASHER, spring	3	3	
33-14	95301-06600	NUT, hexagon	3	3	


* : The parts marked with * in the parts No. column are not supplied with by Yamaha, those have to be found locally.

Fig. 34 FLASHER LAMP

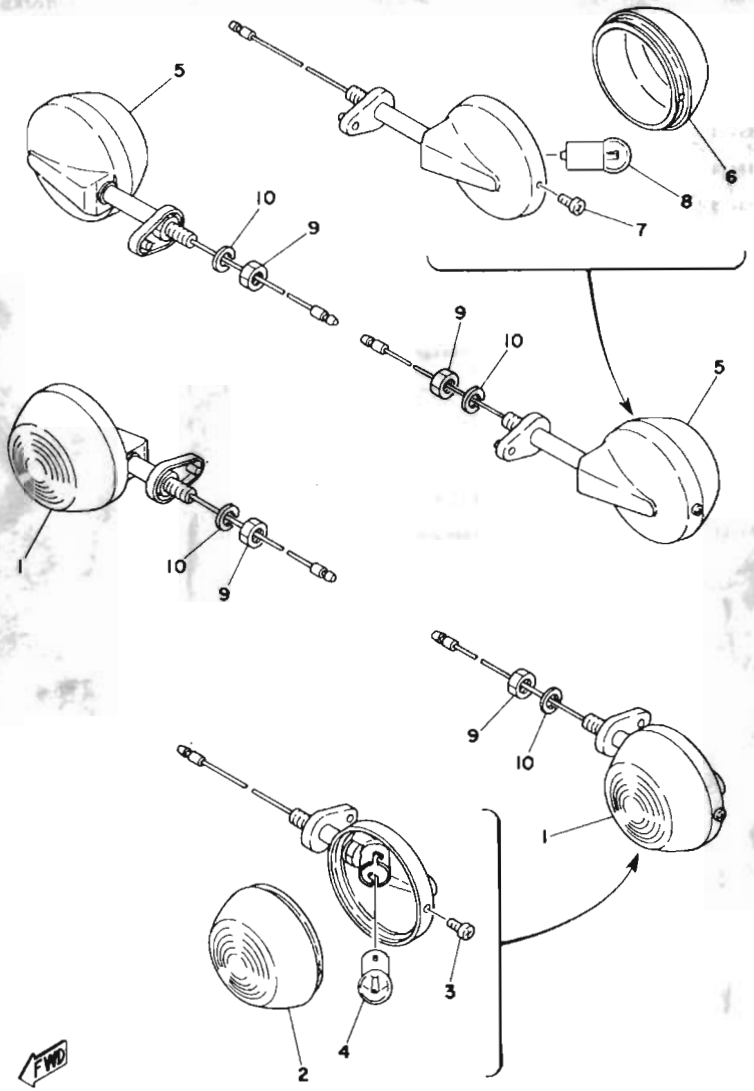


Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
34- 1	1Y1-83310-N0-93	FRONT FLASHER LAMP ASS'Y ..	2	2		
34- 2	1Y1-83312-00	. LENS, flasher	2	2		
34- 3	98501-03006	. SCREW, panhead	2	2		
34- 4	152-83311-10	. BULB, flasher (6V-10W)	2	2		
34- 5	1Y1-83330-N0-93	REAR FLASHER LAMP ASS'Y	2	2		
34- 6	1Y1-83312-00	. LENS, flasher	2	2		
34- 7	98501-03006	. SCREW, panhead	2	2		
34- 8	152-83311-10	. BULB, flasher (6V-10W)	2	2		
34- 9	95301-08700	NUT, hexagon	4	4		
34-10	92901-08100	WASHER, spring	4	4		

Fig. 35 ELECTRICAL

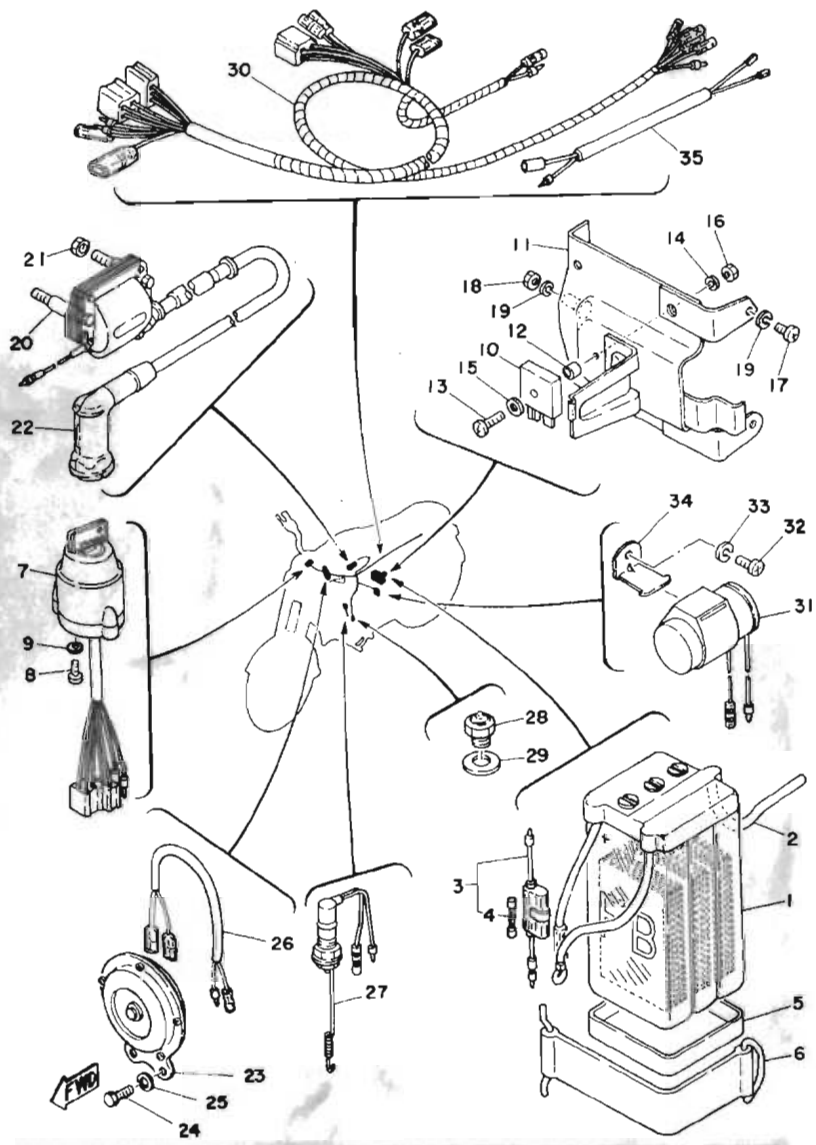

Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
35- 1	104-82110-10	BATTERY ASS'Y (6N4A-4D)	U.R	U.R		GS
	104-82110-21	BATTERY ASS'Y (6N4A-4D)	1	1		FURUKAWA
35- 2	90445-08171	HOSE (123-82112-00 5-375)	1	1		
35- 3	116-82150-00	FUSE HOLDER ASS'Y	1	1		
35- 4	116-82151-00	. FUSE (6V-10A)	2	2		
35- 5	104-82122-00	SEAT, battery	1	1		
35- 6	1Y1-82131-00	BAND, battery	1	1		
35- 7	1J5-82508-20	MAIN SWITCH ASS'Y	1	1		
35- 8	98501-05012	SCREW, panhead	2	2		
35- 9	92901-05100	WASHER, spring	2	2		
35-10	353-81970-50	RECTIFIER ASS'Y	U.R	U.R		
	353-81970-63	RECTIFIER ASS'Y	1	1		
35-11	1Y1-81975-00	PLATE, rectifier fitting	1	1		
35-12	355-81973-00	COLLAR, rectifier (5.3-9-6.5) ...	1	1		
35-13	98501-05025	SCREW, panhead	1	1		
35-14	92901-05100	WASHER, spring	1	1		
35-15	92901-05200	WASHER, plain	1	1		
35-16	95301-05600	NUT, hexagon	1	1		
35-17	92501-06012	SCREW, panhead	2	2		
35-18	95301-06600	NUT, hexagon	1	1		
35-19	92901-06100	WASHER, spring	3	3		
35-20	355-82310-40	IGNITION COIL ASS'Y	1	1		
35-21	95301-06600	NUT, hexagon	2	2		
35-22	808-82370-10	PLUG CAP ASS'Y	1	1		
35-23	260-83371-12	HORN	1	1		
35-24	97301-06010	BOLT, hexagon	2	2		
35-25	92901-06100	WASHER, spring	2	2		
35-26	260-83373-00	LEAD, horn	1	1		
35-27	122-82530-00	STOP SWITCH ASS'Y	1	1		

Fig. 35 ELECTRICAL

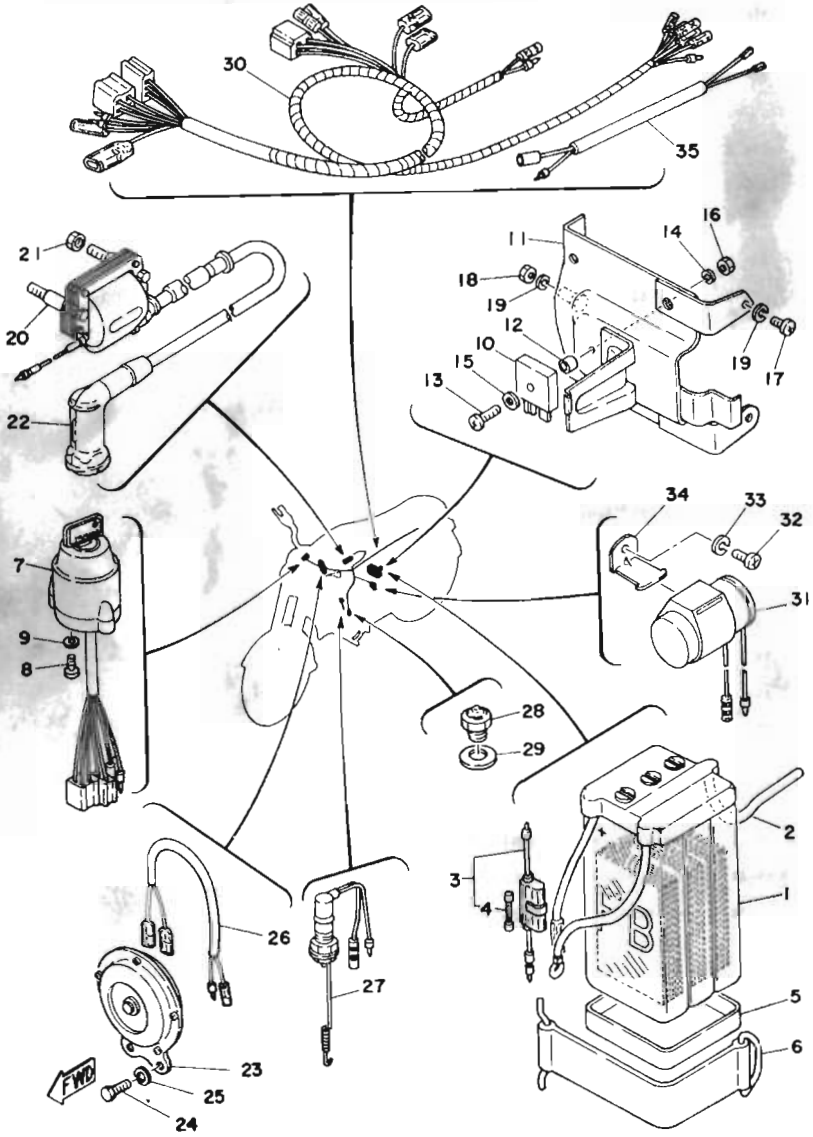

Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
35-28	136-82540-00	NEUTRAL SWITCH ASS'Y	1	1		
35-29	90430-11034	GASKET	1	1		
35-30	1U1-82590-20	WIRE HARNESS ASS'Y	1	1		
35-31	1K1-83350-11	FLASHER RELAY ASS'Y	1	1		
35-32	92501-06012	SCREW, panhead	1	1		
35-33	92901-06100	WASHER, spring	1	1		
35-34	474-83352-00	BRACKET, flasher relay	1	1		
35-35	471-82531-00	WIRE, lead	1	1		

REPAIR KIT

YAMAHA
PARTS

Fig. 36 REPAIR KIT

Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
36- 1	260-11630-00	PISTON ASS'Y (STD)	1s	1s		
	260-11630-10	PISTON ASS'Y (1st O.S)	1s	1s		
	260-11630-20	PISTON ASS'Y (2nd O.S)	1s	1s		
	260-11630-30	PISTON ASS'Y (3rd O.S)	1s	1s		
	260-11630-40	PISTON ASS'Y (4th O.S)	1s	1s		
36- 2	109-11631-02-96	. PISTON (39.96mm STD)	U.R	U.R		
	109-11631-02-98	. PISTON (39.98mm STD)	1	1		
	109-11635-02	. PISTON (40.25mm 1st O.S)	1	1		Ref. No. 3-8
	109-11636-02	. PISTON (40.50mm 2nd O.S)	1	1		
	109-11637-02	. PISTON (40.75mm 3rd O.S)	1	1		
	109-11638-02	. PISTON (41.00mm 4th O.S)	1	1		
36- 3	260-11601-00	. PISTON RING SET (STD)	1s	1s		
	260-11601-10	. PISTON RING SET (1st O.S)	1s	1s		
	260-11601-20	. PISTON RING SET (2nd O.S)	1s	1s		3-11
	260-11601-30	. PISTON RING SET (3rd O.S)	1s	1s		
	260-11601-40	. PISTON RING SET (4th O.S)	1s	1s		
36- 4	102-11633-02	. PIN, piston	1	1		3-9
36- 5	93450-13027	. CIRCLIP	2	2		3-10
36- 6	517-11650-00	CONNECTING ROD ASS'Y	1s	1s		
36- 7	517-11651-00	. ROD, connecting	1	1		3-3
36- 8	257-11681-00	. PIN, crank	1	1		3-6
36- 9	93310-41810	. BEARING, big end	1	1		3-5
36-10	93310-11268	. BEARING, small end	1	1		3-7
36-11	1Y0-W0001-00	GASKET KIT	1s	1s		
36-12	109-11351-00	. GASKET, cylinder	1	1		1-11
36-13	517-11181-00	. GASKET, cylinder head	1	1		1-13
36-14	90430-12038	. GASKET (132-15353-00)	1	1		1-18
36-15	93210-12014	. O-RING (2.62-10.77)	1	1		1-23
36-16	93210-23029	. O-RING (3.53-21.82)	1	1		1-24

Ref. No.	Part No.	Description	Q'ty FSI	Q'ty FSIDX	Applicable Machine No.	Remarks
36-17	257-15451-00	. GASKET, crankcase cover	1	1		Ref. No. 2-12
36-18	257-15463-00	. GASKET, carburetor cover	1	1		2-19
36-19	260-14184-00	. GASKET, float chamber	1	1		10-3
36-20	132-14613-00	. GASKET, exhaust	1	1		11-5
36-21	115-14744-00	. GASKET, muffler joint	1	1		11-3
36-22	126-13116-00	. GASKET, pump case	1	1		12-1
36-23	90430-04004	. GASKET (137-13187-00)	1	1		12-18
36-24	90430-06011	. GASKET (137-13167-00)	2	2		12-26
36-25	1Y0-W0C03-00	OIL SEAL KIT	1s	1s		
36-26	93103-28012	. OIL SEAL (SW-28-47-8)	1	1		1-25
36-27	93102-20009	. OIL SEAL (SD-20-35-7)	1	1		3-20
36-28	93108-15001	. OIL SEAL (OSO-15.3-22-7)	1	1		4-18
36-29	257-15389-00	. SEAL, push rod	1	1		5-7
36-30	93102-25017	. OIL SEAL (SD-25-40-5)	1	1		5-27
36-31	93101-12001	. OIL SEAL (S-12-22-5)	1	1		7-6
36-32	93109-15001	. OIL SEAL (SDO-15-26-6)	1	1		8-9
36-33	93101-10001	. OIL SEAL (S-10-21-5)	1	1		13-6

NUMERICAL INDEX



NUMERICAL INDEX

Ref No.	Parts No.
23- 2	1A0-20000-10
17- 8	1A0-21518-00
24- 4	1A0-24161-00
23- 6	1A0-25824-01
23- 7	1A0-25850-02
23- 3	1A0-25854-01
23- 4	1A0-25855-01
23- 5	1A0-25893-01
22-18	1A0-83922-00
12- 5	1E7-13176-00
23- 8	1J3-25852-01
23- 3	1J3-25854-01
23- 4	1J3-25855-01
23- 7	1J3-25867-00
11- 4	1J5-14713-00
11- 5	1J5-14714-00
36-21	1J5-14714-00
14-22	1J5-21308-00
20-18	1J5-23480-00
24- 1	1J5-24110-01-X0
24- 1	1J5-24110-01-X1
24- 1	1J5-24110-01-X2
24- 1	1J5-24110-01-07
24- 1	1J5-24110-01-08
35- 7	1J5-82508-20
23-13	1K0-25872-03
23-14	1K0-25875-01
35-31	1K1-83350-11
27-21	1K8-25120-00-35
13-10	1K8-81325-20
26- 4	1L0-24789-00
11 12	1M3-27114-00
32- 4	1M3-83513-10
19-16	1N1-23138-00
19-19	1T8-23111-00
19-18	1T8-23112-00
19-17	1T8-23114-00
19- 4	1T8-23145-00
19- 5	1T8-23156-00
30-29	1U0-25388-00
32- 5	1U0-83519-00-98
17- 1	1U1-21510-01-93
18- 1	1U1-23101-11
18- 2	1U1-23126-11-35
18- 3	1U1-23136-11-35
35-30	1U1-82590-20
21-14	1V1-26242-00
22-13	1V1-26243-00
33-10	1X4-84517-00
15- 1	1X9-22110-00-33
36-11	1Y0-W0001-00
36-26	1Y0-W0003-00
21- 1	1Y0-26111-00
21-32	1Y0-26290-00
21-31	1Y0-26290-10
21-15	1Y0-26311-00
21-23	1Y0-26335-00
21-25	1Y0-26341-00
23- 2	1Y1-W0041-00
14-25	1Y1-21245-00
14-26	1Y1-21286-00
17- 9	1Y1-21610-00-93
11-14	1Y1-21711-00
14-15	1Y1-21714-00
14-17	1Y1-21721-10
14-18	1Y1-21724-00
25- 1	1Y1-21750-00
25- 4	1Y1-2176A-00
25- 3	1Y1-21763-00
25- 2	1Y1-21764-00
25- 5	1Y1-21770-00
25- 6	1Y1-21772-00
25-13	1Y1-21776-00
14-20	1Y1-21781-00
14-20	1Y1-21781-09
14-20	1Y1-21781-20
14-20	1Y1-21781-30
14-20	1Y1-21781-40
14-21	1Y1-21782-00
14-21	1Y1-21782-09
14-21	1Y1-21782-20
14-21	1Y1-21782-30
14-21	1Y1-21782-40
25- 8	1Y1-21796-00
15-16	1Y1-22210-20-93
19- 1	1Y1-23101-00
19-14	1Y1-23122-00
19- 2	1Y1-23126-00
19- 6	1Y1-23134-00
19- 3	1Y1-23136-00
19- 7	1Y1-23152-00
19- 8	1Y1-23157-00
19- 9	1Y1-23170-00
24- 2	1Y1-24244-00
24- 3	1Y1-24245-00
26- 1	1Y1-24750-90
26- 3	1Y1-24785-00-E1
26- 3	1Y1-24785-00-J5
26- 3	1Y1-24785-00-U2
26- 3	1Y1-24785-00-20
26- 3	1Y1-24785-10
23- 1	1Y1-25850-00
23-13	1Y1-25872-00
22-39	1Y1-26290-00
22-40	1Y1-26290-10
22-24	1Y1-26311-00
22-24	1Y1-26311-20
22-31	1Y1-26335-00
22-31	1Y1-26335-20
35-11	1Y1-81975-00
35- 6	1Y1-82131-00
34- 1	1Y1-83310-N0-93
34- 2	1Y1-83312-00
34- 6	1Y1-83312-00
34- 5	1Y1-83330-N0-93
33- 1	1Y1-84510-30
33- 2	1Y1-84511-30
33- 4	1Y1-84521-30
33- 6	1Y1-84551-30-35
11- 6	1Y4-14710-00
30-20	101-25412-00
3- 9	102-11633-02
36- 4	102-11633-02
28-19	102-18416-00

Ref No.	Parts No.
15- 2	102-22123-00
24-12	102-24322-01
27-31	102-25137-00
30- 8	102-25315-00
30-34	102-25371-00
30-25	102-25389-00
13-13	104-81328-20
35- 1	104-82110-10
35- 1	104-82110-21
35- 5	104-82122-00
1-13	109-11351-00
36-12	109-11351-00
3- 8	109-11631-02-96
36- 2	109-11631-02-96
3- 8	109-11631-02-98
36- 2	109-11631-02-98
3- 8	109-11635-02
36- 2	109-11635-02
3- 8	109-11636-02
36- 2	109-11636-02
3- 8	109-11637-02
36- 2	109-11637-02
3- 8	109-11638-02
36- 2	109-11638-02
15- 3	109-22141-00
18- 6	109-23125-00
18- 9	109-23143-00
18- 8	109-23145-01
27- 2	109-25104-00
27-31	109-25136-00
28- 8	109-25315-00
21-25	109-26341-20
16- 5	109-27115-00
21- 7	109-82820-12-94
13-14	110-81345-21
13- 9	110-81346-21
13-12	110-81347-21
13- 6	110-81348-21
13-11	116-81331-20
35- 3	116-82150-00
35- 4	116-82151-00
8-15	111-15644-00
15-11	120-27431-00
15-12	120-27433-00
9- 3	122-14412-00
11- 2	122-14612-02
8- 2	122-15612-02
4- 3	122-16164-00
4-14	122-16164-00
17- 1	122-21517-00
15- 5	122-22131-00
19-23	122-23119-01
19-24	122-23129-00
18-21	122-23146-01
19-21	122-23346-01
24- 5	122-24181-00
24-13	122-24321-00
21-15	122-24332-00
24- 7	122-24610-01
16- 2	122-27112-00
16-15	122-27413-00
25-27	122-82310-00
32- 3	122-83516-10
12- 1	126-14116-00
26-22	126-13116-00
25-11	126-24319-01
10-13	127-14116-09
10-10	127-14123-00
10-25	127-14124-23
10-33	127-14125-01
10-19	127-14131-00
10-20	127-14133-00
10-11	127-14134-00
10-17	127-14137-00
10- 2	127-14141-14
10- 3	127-14143-28
10- 3	127-14143-30
10- 3	127-14143-32
10-24	127-14161-00
31- 4	127-84120-30
4- 5	131-16321-00
11- 3	132-14613-00
36-20	132-14614-00
5-20	132-15653-00-10
5-20	132-15653-00-12
5-20	132-15653-00-14
8-13	132-15664-01
8-11	132-15676-01
2- 4	132-16346-00
7-10	132-18113-01
6-17	132-18140-01
21-25	132-26341-10
14-29	133-82131-00
20- 6	136-23415-00
35-28	136-82549-00
12-13	137-13137-00-03
12-13	137-13137-00-05
12-13	137-13137-00-10
14-14	137-13138-01
4-10	137-16356-00
21-18	137-26261-01
22-27	137-26261-01
21- 3	137-83912-02-38
21- 5	137-83913-01
21-10	137-83913-01
31- 2	150-84153-00
10-28	152-14174-00
34- 1	152-83311-10
34- 8	152-83311-10
10-27	156-14135-00
8- 6	156-15618-01
20- 1	156-23411-00
20- 3	156-24312-00
2- 5	164-15415-00
6-13	164-18561-00
25- 7	164-21778-00
21-24	164-26363-00
22-32	164-26363-00

NUMERICAL INDEX

Ref No.	Parts No.
22-37	168-83936-01
1-21	180-13554-00
10-22	180-14168-01
10-23	180-14168-00
15- 6	180-22117-00
16- 7	180-27231-01
20- 5	183-23411-00
20- 4	183-23412-00
27-19	183-25149-00
21- 1	183-26111-20
20- 8	185-23435-00-98
27- 6	185-25115-00
27- 7	185-25117-00
31- 5	185-84315-01
31- 8	185-84324-00
18-12	186-23191-40
18-18	207-23113-00
18-16	207-23116-01
19-16	207-23116-01
18-10	207-23117-00
18-11	207-23141-10
18- 4	207-23147-00
18-15	207-23163-00
19-15	207-23163-00
21-16	207-26312-00
22-25	207-26312-00
16- 1	207-27111-00
13- 4	207-81312-21
13- 5	207-81313-21
18-14	209-23122-40
18-13	209-23142-10
19-13	209-23142-40
18- 7	209-23150-41
21-15	212-26311-00
12-25	214-13162-01
22- 6	214-83912-00
21- 8	214-83922-31-38
22- 2	214-26241-10
31- 7	241-84312-00
31- 1	241-84339-00-33
1-13	257-11111-01-94
1-12	257-11311-00
3- 2	257-11412-01
3- 3	257-11422-01
3- 6	257-11681-00
36- 8	257-11681-00
12-12	257-13101-04
21-28	257-13151-01
22-35	257-13151-01
12- 3	257-13175-00
12- 8	257-13178-00
3-13	257-13512-00
3-14	257-13515-00
1-22	257-13551-00
13-16	257-14112-15
9- 1	257-14401-00-35
9- 8	257-14417-00
9- 2	257-14451-00
9- 7	257-14453-00
9- 6	257-14454-00
1- 1	257-15111-01
1- 2	257-15121-01
3- 7	257-15389-00
36-29	257-15389-00
2- 1	257-15410-01
2-18	257-15413-00
2-10	257-15417-01
2-11	257-15421-01
2-23	257-15433-00
2-12	257-15451-00
36-17	257-15451-00
2-19	257-15463-00
36-18	257-15463-00
8- 1	257-15610-02-91
5-22	257-15651-01
8-18	257-15668-00
3-16	257-16111-91
4- 2	257-16130-03
4- 1	257-16301-03
4- 6	257-16324-00
4-20	257-16341-00
4-17	257-16342-00
4- 7	257-16351-00
4-16	257-16357-00
4- 9	257-16371-01
5- 9	257-17121-00
5- 2	257-17131-01
5- 5	257-17141-00
5-17	257-17211-00
5-18	257-17219-00
5-14	257-17221-01
5-16	257-17281-00
5-12	257-17241-00
5- 1	257-17411-01
5-11	257-17421-01
5-29	257-17461-31
5-28	257-17461-41
5-28	257-17461-51
5- 9	257-17471-01
7- 3	257-18101-01
7- 9	257-18111-00-91
6- 3	257-18512-01
6-20	257-18531-00
6- 1	257-18534-00
6- 7	257-18541-61
16- 3	257-27211-00-91
13- 1	257-81309-23
13- 3	257-81309-21
13-16	257-81315-29
13- 2	257-81350-22
6- 2	259-18511-01
3-11	260-11601-00
36- 3	260-11601-00
3-11	260-11601-10
36- 3	260-11601-10
3-11	260-11601-20
36- 3	260-11601-20
3-11	260-11601-30
36- 3	260-11601-30

NUMERICAL INDEX

Ref No.	Parts No.
3-11	260-11601-40
36- 3	260-11601-40
36- 1	260-11630-00
36- 1	260-11630-10
36- 1	260-11630-20
36- 1	260-11630-30
36- 1	260-11630-40
10-12	260-14142-25
10- 7	260-14181-10
10- 5	260-14184-00
36-19	260-14184-00
10- 9	260-14190-12
15- 7	260-22311-00-35
15- 7	260-22311-00-93
18-19	260-23111-40
18-23	260-23121-40-33
19-27	260-23121-40-33
18-24	260-23131-40-33
19-28	260-23131-40-33
18-22	260-23318-40
19-22	260-23318-40
18-20	260-23340-00-33
26- 2	260-24731-00
21-15	260-26311-20
21-17	260-26321-00
22-26	260-26321-00
21-23	260-26335-10
21-23	260-26335-20
16-14	260-27411-00
14-24	260-28100-10
35-23	260-83371-12
35-26	260-83373-00
32-10	260-83550-00
21- 1	283-26111-00
10-18	287-14136-00
2-21	288-14481-01
30-19	288-25439-10-33
27-20	296-25135-00
27-30	296-25138-00
30- 2	296-25304-00
27-24	296-25330-00
30-14	296-25330-00
31- 6	296-84114-30
10-31	304-14261-00
8-16	305-15641-00
8- 8	305-15660-02
28-20	306-25136-00
23-12	306-25862-00
22-12	306-26242-10
18-17	307-23114-00
22-14	307-26281-00
22-15	307-26282-00
2-17	315-15362-01
27-12	322-25118-00
28-12	341-25137-00
28-10	341-25149-00
28-11	341-25846-00
23-20	341-25881-00
22- 5	341-82911-00
11- 1	348-14611-00
11- 7	348-14753-00
12-21	353-13552-01
10-29	353-14138-00
27-13	353-25181-03
30-23	353-25381-00
21-12	353-26241-00
21-13	353-26242-00
13- 7	353-81332-20
35-10	353-81970-50
35-10	353-81970-63
21- 2	353-82910-01
3- 1	355-11400-01
10- 4	355-14185-00
14- 1	355-21110-03-33
18- 5	355-23124-90
18- 5	355-23134-90
24-11	355-24515-00
24-19	355-24518-01
24-18	355-24523-00
24-17	355-24524-01
30-11	355-25320-00-35
35-12	355-81973-00
35-20	355-82310-40
32- 6	355-83522-00
32- 8	355-83524-00
32- 7	355-83526-00
23-12	360-25862-00
22- 4	360-82910-02
19-30	363-14137-00
24-10	367-24500-04
28-23	367-25381-00
28- 1	390-25111-00
28-17	390-25191-01
29- 2	390-25412-00
29- 1	390-25711-00
22- 3	393-83973-02
31-14	393-84313-00
31- 3	394-84110-30
10-21	395-14121-00
10-26	395-14171-00
29- 6	404-W0057-00
29- 7	404-20000-30
29-11	404-20000-41
23-21	404-25871-01
23-17	404-25876-00
29- 8	404-25919-00
10-15	405-14114-00
19-12	428-23191-00
13- 8	437-81321-20
21- 2	448-82910-21
20-12	462-23441-00-98
20-11	462-23442-00-98
30- 1	462-25311-01-35
22- 1	463-26111-00
22- 1	463-26111-21
29- 5	464-20000-11
24- 6	467-24184-00
35-35	471-82531-00
35-34	474-83352-00

NUMERICAL INDEX

Ref No.	Parts No.
17- 5	481-21510-02-93
28- 2	481-25104-00
28-27	481-25118-01
28-11	481-25135-00
28-18	481-25138-00
32-10	481-83550-00
1-19	498-15371-00
1-13	517-11181-00
36-13	517-11181-00
36- 6	517-11650-00
3- 4	517-11651-00
36- 7	517-11651-00
27- 1	517-25111-00-35
29- 4	526-25810-00
27-26	538-25155-00
27-23	538-25351-01
30-13	538-25351-01
30-16	538-25355-00
32- 2	582-83520-00
32- 1	582-83510-30
10- 1	596-14101-00
14- 6	596-21158-00-33
14- 7	596-21191-00-33
19-10	596-23117-00
19-11	596-23141-00
19-20	596-23340-00-33
24-14	603-24561-01
35-22	808-82370-10
27-27	90101-06278
30-17	90101-06278
29-12	90101-08244
16-16	90101-08246
17- 6	90101-08281
14- 2	90101-08285
15-17	90101-10255
20- 9	90105-10006
6-18	90109-06001
22- 7	90109-06410
22-19	90109-06465
30-35	90109-08183
30-21	90109-08319
29- 3	90109-08367
4-22	90113-06009
1-10	90116-06026
1- 8	90119-05001
21-26	90123-06011
22-33	90123-08013
22-21	90146-06008
7- 1	90149-08094
23- 6	90151-05008
31- 9	90152-05005
22-22	90170-06010
30-22	90170-08158
21-22	90170-10018
15- 4	90170-10159
1-11	90170-12060
3-23	90170-12175
27-35	90171-10004
30-30	90171-10004
28-28	90171-12005
1-15	90176-06002
15-20	90176-10013
21-27	90179-06143
16-13	90179-06176
22-34	90179-08148
3-18	90179-12044
5-30	90179-12181
20- 7	90179-25051
26- 5	90183-04012
27-29	90201-07076
22-10	90201-08083
12- 2	90201-08624
23-11	90201-10118
27-36	90201-10123
12- 9	90201-10135
12- 7	90201-10138
15-18	90201-10140
30-33	90201-12174
3-21	90201-12535
7- 7	90201-12575
5-23	90201-13202
27-18	90201-20269
15-15	90201-20279
28-13	90201-25266
28-15	90201-25490
3-21	90206-15021
3-17	90208-12015
4-12	90208-12016
20-10	90209-10021
8- 1	90209-10108
5-29	90215-13019
15-13	90240-06009
6-11	90249-04039
16-12	90249-12008
6- 4	90250-06013
3-24	90250-03017
3-26	90282-05028
6- 6	90334-10006
21-30	90338-07011
22-38	90338-09046
23-32	90338-12081
6-16	90338-26008
1-17	90340-12005
27-11	90387-10277
30-28	90387-12096
28-26	90387-12272
30-26	90387-12412
5-13	90387-16127
3-15	90387-17135
5-26	90387-17137
22-17	90387-22585
12-27	90401-06001
23-10	90401-10034
12-18	90430-04004
36-23	90430-04004
12-26	90430-06011
36-24	90430-06011

Ref No.	Parts No.
35-29	90430-11034
1-18	90430-12038
36-14	90430-12038
10-36	90445-05013
10-35	90445-05015
12-23	90445-05018
35- 2	90445-08171
24- 8	90445-09353
1-20	90446-07009
24- 9	90467-08003
25-12	90467-08003
12-22	90468-02033
12-24	90468-02033
14-28	90468-12007
30-38	90468-12007
8-17	90468-26048
14-16	90480-01141
27-22	90480-10068
30-12	90480-10068
2-16	90480-12012
17-14	90480-12013
14-31	90480-13016
14-30	90480-13203
13-15	90480-16110
12-20	90501-02217
16-11	90501-10245
22-23	90501-10312
4- 9	90501-20122
8- 3	90504-18005
2-22	90506-06095
2- 3	90506-07066
7- 2	90506-09009
6-19	90506-09112
27-25	90506-16034
30-15	90506-16034
16- 8	90506-20041
16- 6	90506-29054
8-12	90508-26136
7- 3	90508-32207

Ref No.	Parts No.
28- 7	90560-12138
30- 7	90560-12170
4-13	90560-17150
19-26	91311-08025
10-14	91401-12010
10-32	91401-16015
15-14	91401-16015
16- 9	91401-20012
30-40	91401-20012
27-14	91401-20020
30-24	91401-20020
28-24	91401-30025
14-19	91401-50085
28-22	91609-20014
14-27	91701-06065
2- 4	91830-21014
2-13	91830-21014
1- 3	91830-22016
5-10	92501-06012
21-21	92501-06012
22-30	92501-06012
23-15	92501-06012
25- 9	92501-06012
35-17	92501-06012
35-32	92501-06012
1-27	92501-06015
2-20	92501-06018
10- 8	92501-06018
1- 4	92501-06030
2-14	92501-06030
2- 8	92501-06040
2-15	92501-06040
1- 5	92501-06045
2- 7	92501-06045
1- 6	92501-06050
2- 9	92501-06050
1- 9	92501-06055
1- 7	92501-06060

Ref No.	Parts No.
1- 8	92501-06065
14-23	92701-06030
6-14	92901-05100
11- 8	92901-05100
12-15	92901-05100
29-10	92901-05100
33- 8	92901-05100
35- 9	92901-05100
35-14	92901-05100
35-15	92901-05200
15-10	92901-05600
33- 7	92901-05600
14- 9	92901-06100
21-20	92901-06100
22- 9	92901-06100
22-29	92901-06100
23- 9	92901-06100
23-16	92901-06100
23-19	92901-06100
30-32	92901-06100
33-13	92901-06100
35-19	92901-06100
35-25	92901-06100
35-33	92901-06100
1-16	92901-06200
16-10	92901-06600
17-11	92901-06600
20-14	92901-06600
21-19	92901-06600
22-28	92901-06600
25-10	92901-06600
30-33	92901-06600
33-12	92901-06600
9-15	92901-08100
11-10	92901-08100
14- 5	92901-08100
14-12	92901-08100
16-17	92901-08100
17- 3	92901-08100
17- 7	92901-08100

Ref No.	Parts No.
17-13	92901-08100
29-13	92901-08100
30-37	92901-08100
31-12	92901-08100
34-10	92901-08100
26- 7	92901-08200
31-11	92901-08200
26- 9	92901-08600
30-39	92901-08600
20-16	92901-10100
15-19	92901-10200
20-17	92901-10600
3-22	92901-12100
28-21	92901-12600
12- 6	93101-10001
36-33	93101-10001
7- 6	93101-12004
36-31	93101-12004
3-20	93102-20009
36-27	93102-20009
5-27	93102-25017
36-30	93102-25017
1-25	93103-28012
36-26	93103-28012
27-32	93104-07003
30-10	93104-21016
28-16	93105-45017
27-16	93105-47007
27-10	93106-20001
28-25	93106-20002
30-27	93106-20002
4-18	93108-15001
36-28	93108-15001
8- 9	93109-15001
36-32	93109-15001
1-23	93210-12014
36-15	93210-12014
27-33	93210-14104
1-24	93210-23029

Ref No.	Parts No.
36-16	93210-23029
10- 6	93220-08002
5- 8	93306-20303
3-19	93306-20418
27- 9	93306-30003
27-15	93306-30003
30- 9	93306-30101
28- 9	93306-30103
3-12	93306-30302
5-25	93306-30305
3- 7	93310-11268
36-10	93310-11268
3- 5	93310-41810
36- 9	93310-41810
5- 6	93410-13004
5-19	93410-13004
5-24	93410-13004
8-10	93410-15005
27-17	93410-20009
8-14	93410-25017
6-12	93430-03014
6- 5	93430-08006
12-10	93430-08006
7- 8	93430-10016
16- 4	93430-12008
8- 5	93440-10028
5- 3	93440-16030
5-15	93440-16030
6- 9	93440-32017
5-10	93450-13022
36- 5	93450-13022
4-19	93501-04011
20- 2	93501-04011
4-15	93503-16010
12-19	93505-32002
3-25	93603-08067
12- 4	93603-22028
1-26	93604-14012
6-10	93604-22050

Ref No.	Parts No.
6- 8	93605-20043
27- 4	94125-17259
28- 6	94125-17259
30- 4	94125-17259
27- 5	94225-17005
28- 5	94225-17005
30- 5	94225-17005
27- 6	94330-17023
28- 4	94330-17023
30- 6	94330-17023
27- 3	94412-17002
30- 3	94414-17003
28- 3	94414-17090
30-41	94504-20096
30-42	94604-20001
1-28	94701-00040
11- 9	95301-05600
12-16	95301-05600
24-20	95301-05600
35-16	95301-05600
27-28	95301-06600
30-18	95301-06600
30-31	95301-06600
32- 9	95301-06600
33-14	95301-06600
35-18	95301-06600
35-21	95301-06600
4-21	95301-06700
7- 5	95301-08600
11-11	95301-08600
14-13	95301-08600
26- 8	95301-08600
30-36	95301-08700
31-13	95301-08700
34- 9	95301-08700
20-15	95301-10600
10-34	95302-05600
9- 5	95303-06800
21- 6	95601-05100

NUMERICAL INDEX

Ref No.	Parts No.
21-11	95601-05100
22-11	95601-06100
22-20	95601-06100
9-12	95701-08100
14- 4	95701-08100
9-11	95821-08090
9-10	95821-08100
14- 3	95821-08120
33- 9	97301-05010
35-24	97301-06010
33-11	97301-06012
14- 8	97301-06014
17-10	97301-06016
22- 8	97301-06022
23-18	97301-06025
9- 4	97301-06185
17- 2	97301-08012
14-10	97301-08016
17-12	97301-08016
26- 6	97301-08018
31-10	97301-08018
14-11	97301-08030
8- 7	97311-06025
20-13	97311-06035
7-11	97321-06020
23- 8	97321-06025
34- 3	98501-03006
34- 7	98501-03006
2- 6	98501-04006
9- 9	98501-04008
15- 8	98501-05008
21-29	98501-05010
22-36	98501-05010
6-14	98501-05012
29- 9	98501-05012
35- 8	98501-05012
12-11	98501-05016
22-16	98501-05016
15- 9	98501-05020
21- 4	98501-05020

Ref No.	Parts No.
21- 9	98501-05025
35-13	98501-05025
24-16	98501-05030
33- 5	98511-03045
20-19	98601-05012
13-17	98701-05015
12-17	98901-04008

Ref No.	Parts No.