
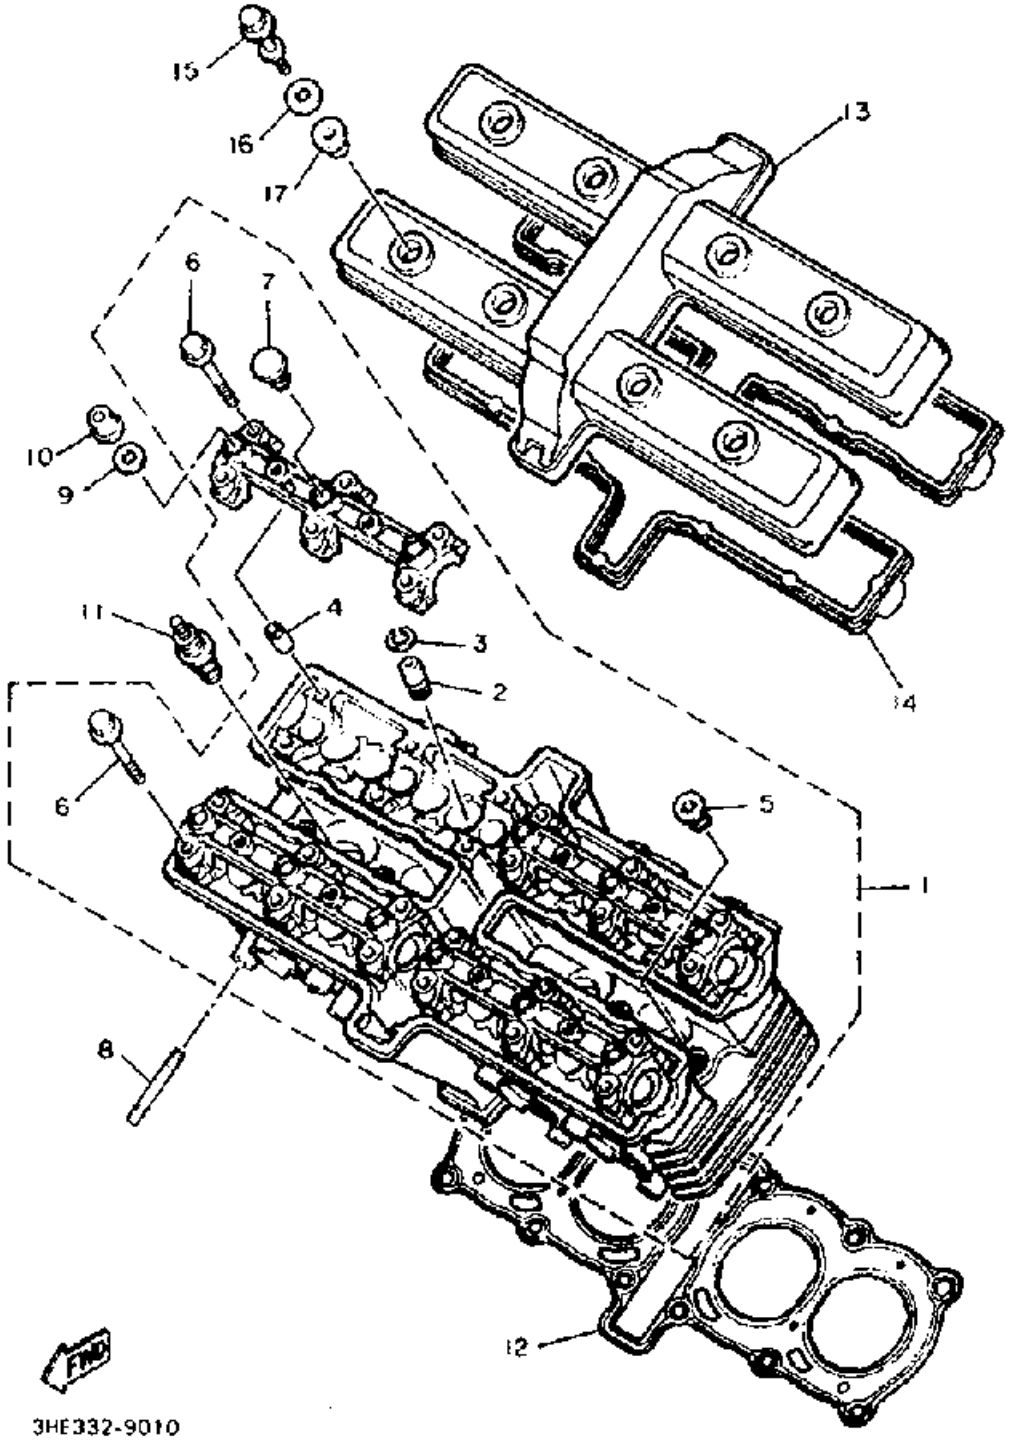



Ref No	Part No	Description
01	3HE-11101-00-00	Cylinder Head Assy
02	1WG-11133-10-00	• . Guide, Intake Valve
03	93440-10153-00	• . Circlip
04	99510-08016-00	• . Pin, Dowel
05	90340-12112-00	• . Plug, Straight Screw
06	90105-06384-00	• . Bolt, Washer Based
07	90338-08174-00	• . Plug
08	90116-06437-00	Bolt, Stud
09	90201-087K2-00	Washer, Plate
10	90179-08530-00	Nut
11	94701-00318-00	Plug, Spark (ngk R Cr9e)
11	94701-00330-00	Plug, Spark (ngk R Cr8e)
11	94701-00319-00	Plug, Spark (nd U27esr-n)
11	94701-00329-00	Plug, Spark (nd W24esr-n)
12	3HE-11181-00-00	Gasket, Cylinder Head 1
13	2TK-11191-00-00	Cover, Cylinder Head 1
14	1WG-11193-00-00	Gasket, Head Cover 1
15	90109-064F0-00	Bolt
16	90209-11262-00	Washer
17	2GH-1111G-00-00	Rubber, Mount 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

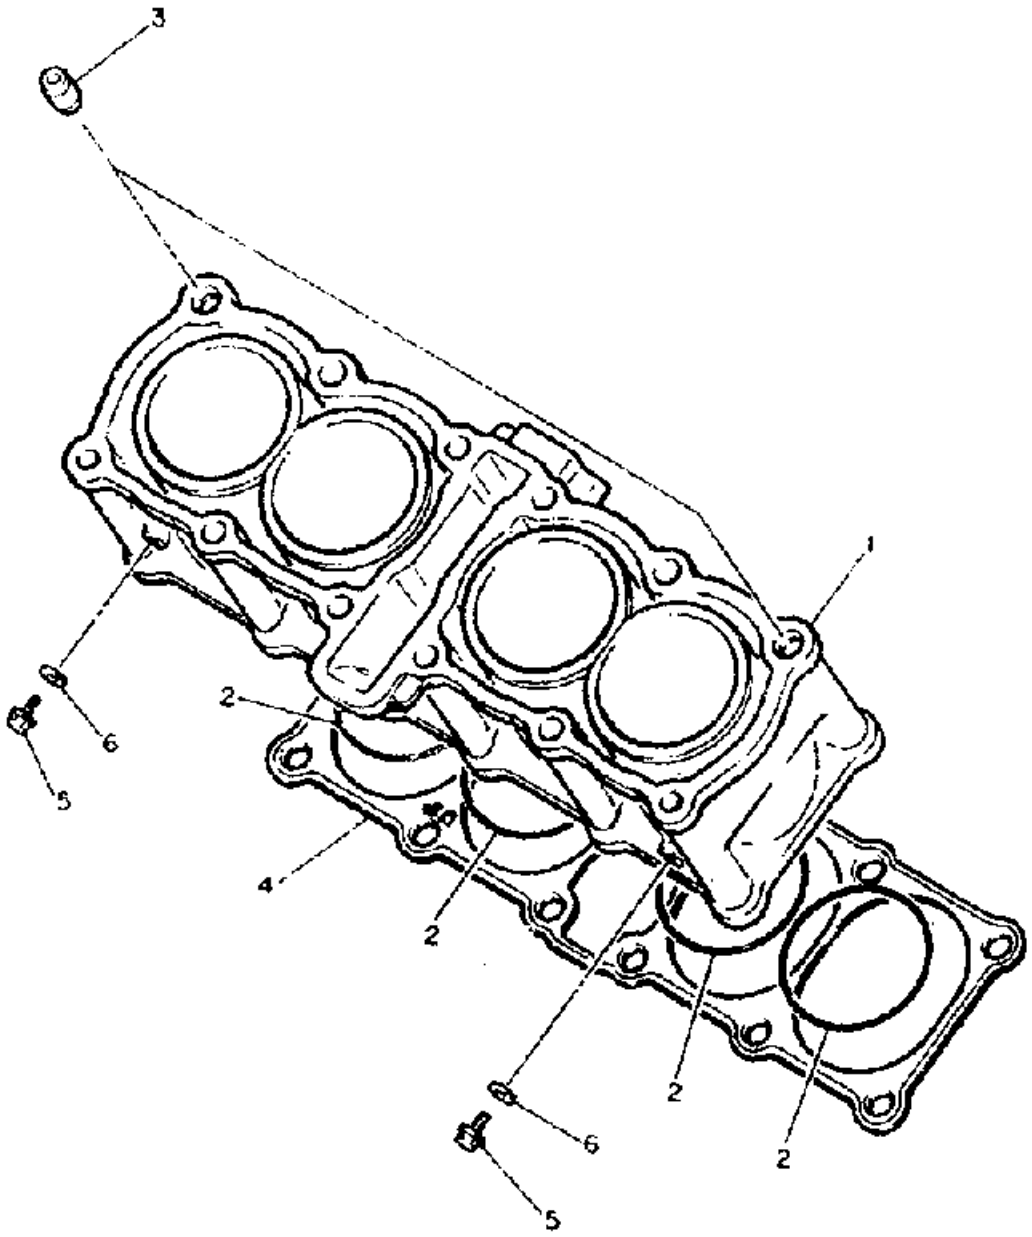


Ref No	Part No	Description
01	3HE-11310-00-00	Cylinder
02	93210-63442-00	O-ring
03	99510-12016-00	Pin, Dowel
04	3HE-11351-00-00	Gasket, Cylinder
05	90153-06045-00	Screw, Hexagon
06	90430-06014-00	Gasket

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

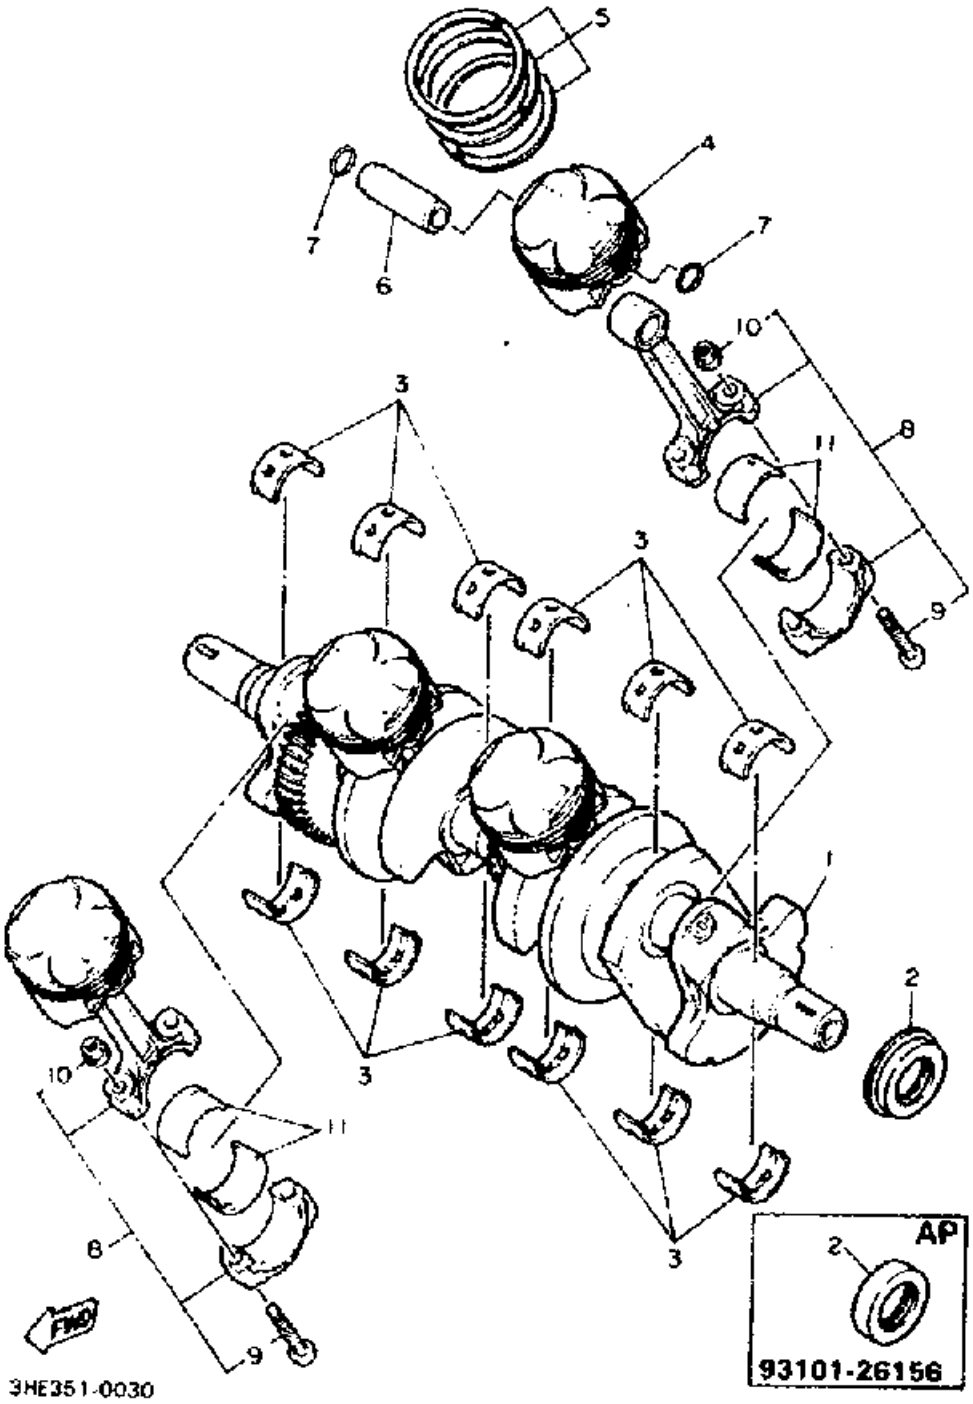


Ref No	Part No	Description
01	3HE-11411-00-00	Crankshaft
02	93101-26154-00	Oil Seal
02	93101-26156-00	Oil Seal
03	1WG-11416-00-00	Plane Bearing, Crankshaft 1
03	1WG-11416-10-00	Plane Bearing, Crankshaft 1
03	1WG-11416-20-00	Plane Bearing, Crankshaft 1
03	1WG-11416-30-00	Plane Bearing, Crankshaft 1
03	1WG-11416-40-00	Plane Bearing, Crankshaft 1
04	3HE-11631-00-00	Piston (std)
04	3HE-11636-00-00	Piston (0.50mm O/s)
04	3HE-11638-00-00	Piston (1.00mm O/s)
05	3HE-11610-00-00	Piston Ring Set (std)
05	3HE-11610-20-00	Piston Ring Set (0.50 Mm Ug)
05	3HE-11610-40-00	Piston Ring Set (1.00 Mm Ug)
06	3HE-11633-00-00	Pin, Piston
07	93450-17044-00	Circlip
08	3HE-11650-01-00	Connecting Rod Assy
09	1WG-11654-00-00	• . Bolt, Connecting Rod
10	90179-07531-00	• . Nut
11	1WG-11656-00-00	Plane Bearing, Connecting Rod
11	1WG-11656-10-00	Plane Bearing, Connecting Rod
11	1WG-11656-20-00	Plane Bearing, Connecting Rod
11	1WG-11656-30-00	Plane Bearing, Connecting Rod

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

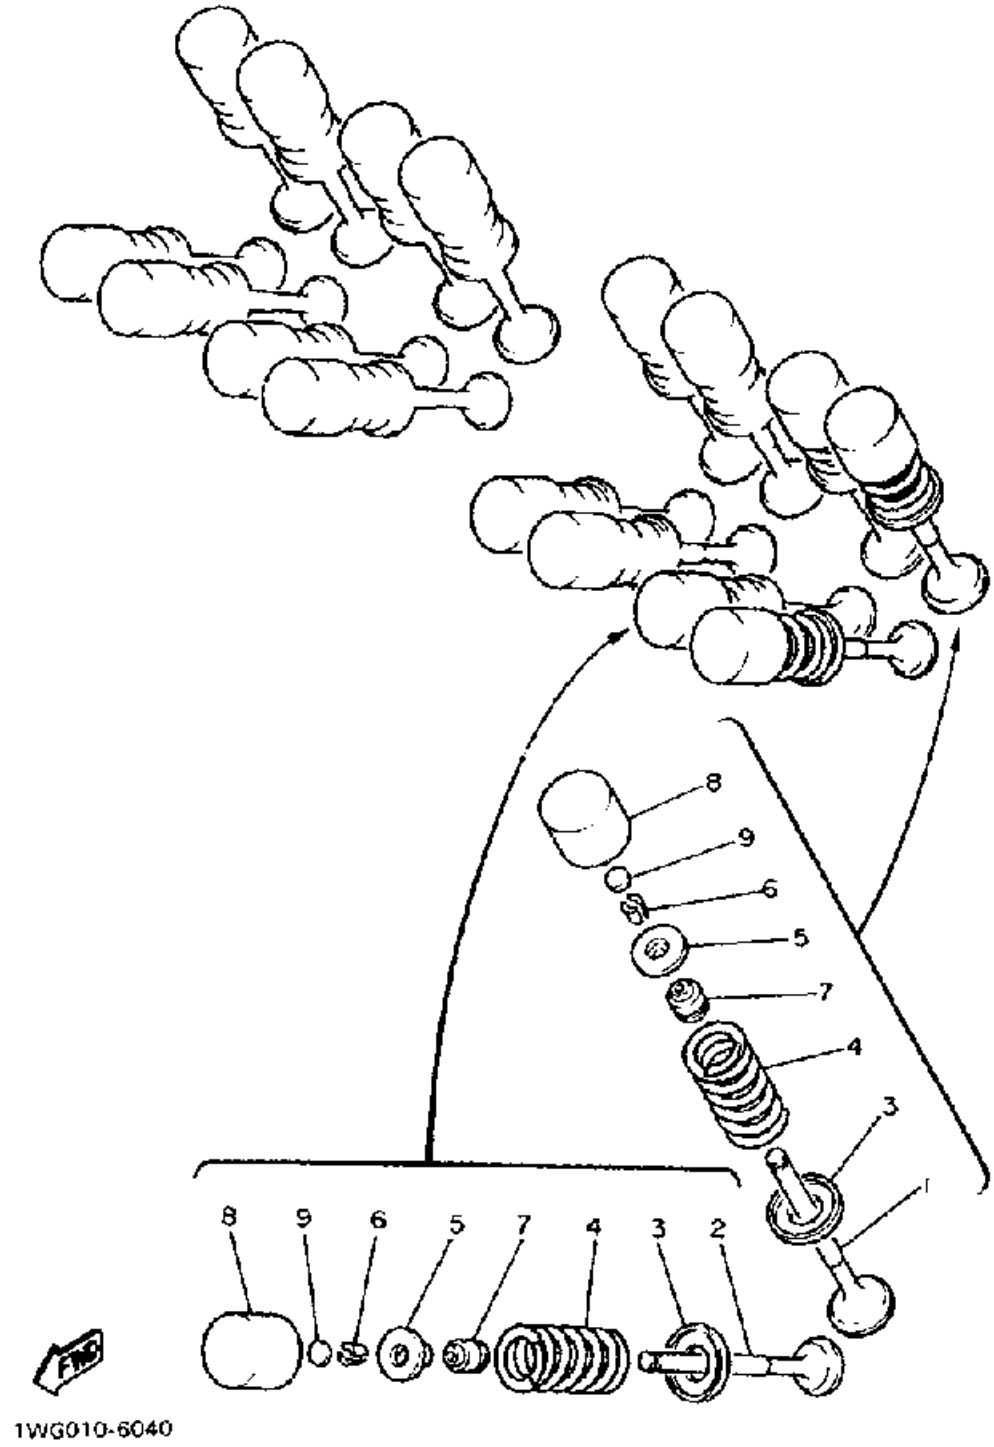


Ref No	Part No	Description
01	3HE-12111-01-00	Valve, Intake
02	3HE-12121-00-00	Valve, Exhaust
03	1WG-12116-00-00	Seat, Valve Spring
04	3HE-12113-00-00	Spring, Valve Inner
05	1WG-12117-00-00	Retainer, Valve Spring
06	1WG-12118-00-00	Cotter, Valve
07	1WG-12119-00-00	Seal, Valve Stem
08	1WG-12153-21-00	Lifter, Valve
08	1WG-12153-31-00	Lifter, Valve
08	1WG-12153-09-00	Lifter, Valve (o/s)
09	1HX-12168-00-00	Pad, Adjusting (1.20)
09	1HX-12168-M1-00	Pad, Adjusting (1.65)
09	1HX-12168-R1-00	Pad, Adjusting (1.70)
09	1HX-12168-U1-00	Pad, Adjusting (1.75)
09	1HX-12168-W1-00	Pad, Adjusting (1.80)
09	1HX-12168-Y1-00	Pad, Adjusting (1.85)
09	1HX-12169-11-00	Pad, Adjusting (1.90)
09	1HX-12169-31-00	Pad, Adjusting (1.95)
09	1HX-12169-50-00	Pad, Adjusting (2.00)
09	1HX-12169-70-00	Pad, Adjusting (2.05)
09	1HX-12169-90-00	Pad, Adjusting (2.10)
09	1HX-12168-20-00	Pad, Adjusting (1.25)
09	1HX-12169-E0-00	Pad, Adjusting (2.15)
09	1HX-12169-G0-00	Pad, Adjusting (2.20)
09	1HX-12169-J0-00	Pad, Adjusting (2.25)
09	1HX-12169-L0-00	Pad, Adjusting (2.30)
09	1HX-12169-N0-00	Pad, Adjusting (2.35)
09	1HX-12169-T0-00	Pad, Adjusting (2.40)
09	1HX-12168-40-00	Pad, Adjusting (1.30)
09	1HX-12168-60-00	Pad, Adjusting (1.35)
09	1HX-12168-80-00	Pad, Adjusting (1.40)
09	1HX-12168-A0-00	Pad, Adjusting (1.45)
09	1HX-12168-F0-00	Pad, Adjusting (1.50)
09	1HX-12168-H1-00	Pad, Adjusting (1.55)
09	1HX-12168-K1-00	Pad, Adjusting (1.60)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

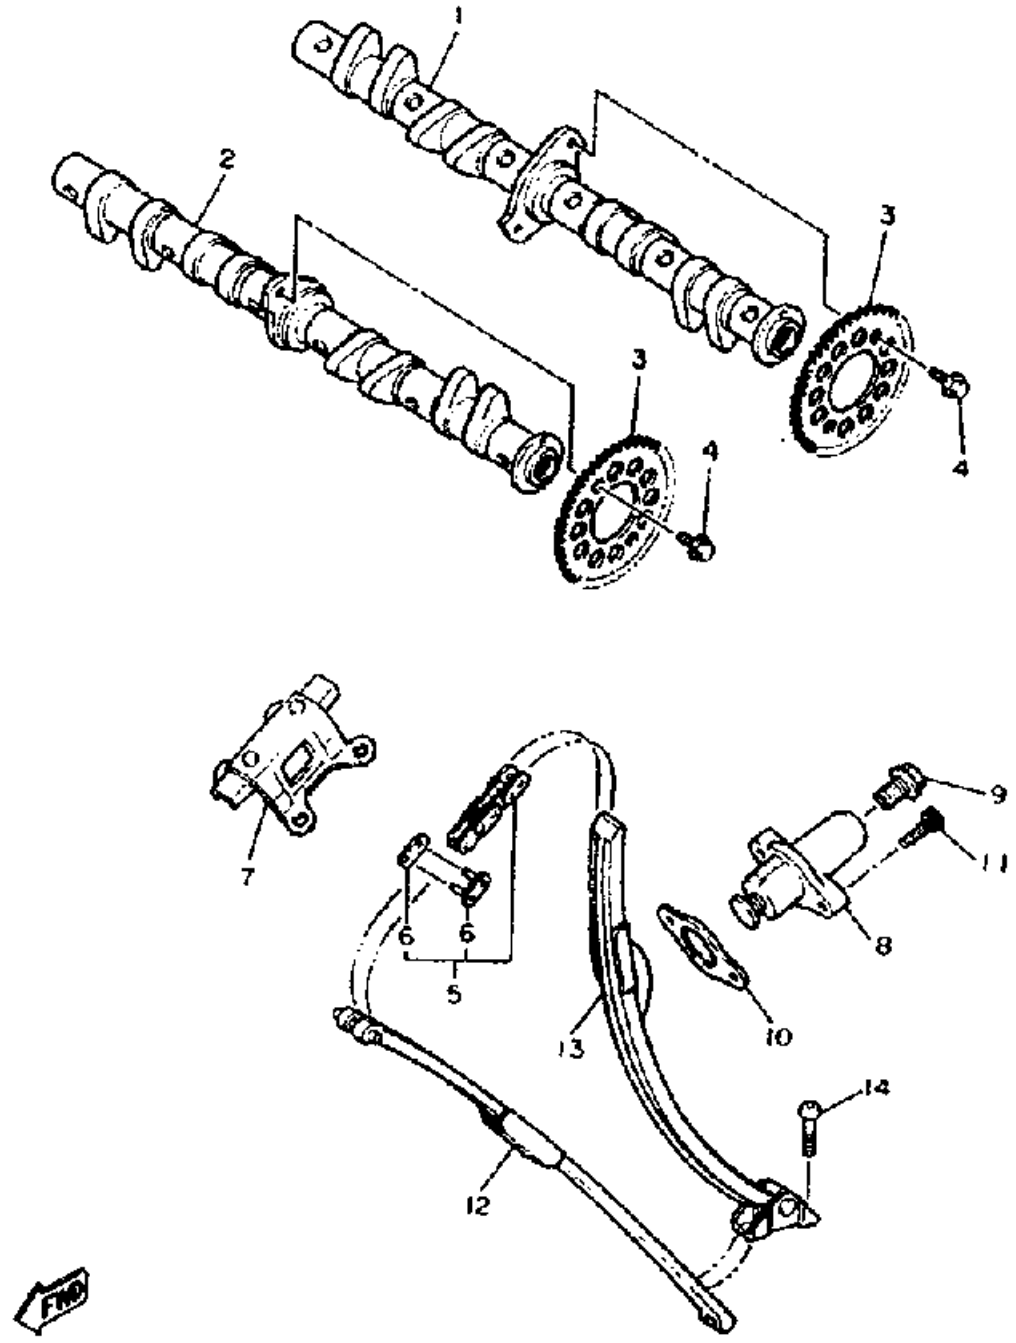


Ref No	Part No	Description
01	3HE-12171-00-00	Camshaft 1
02	3HE-12181-00-00	Camshaft 2
03	1WG-12176-00-00	Sprocket, Cam Chain
04	90105-07385-00	Bolt, Washer Based
05	94581-32118-00	Chain (d.i.d 215f Dha 118l)
06	94681-32021-00	• . Joint, Chain (d.i.d 215f-lj)
07	1WG-12241-00-00	Guide, Stopper 2
08	3GM-12210-00-00	Tensioner Assy, Cam Chain
09	90109-112F1-00	Bolt
10	4BE-12231-00-00	Guide, Stopper 1
11	91316-06025-00	Bolt
12	3HE-12251-00-00	Damper, Chain 1
13	3HE-12252-00-00	Damper, Chain 2
14	90109-065A8-00	Bolt

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

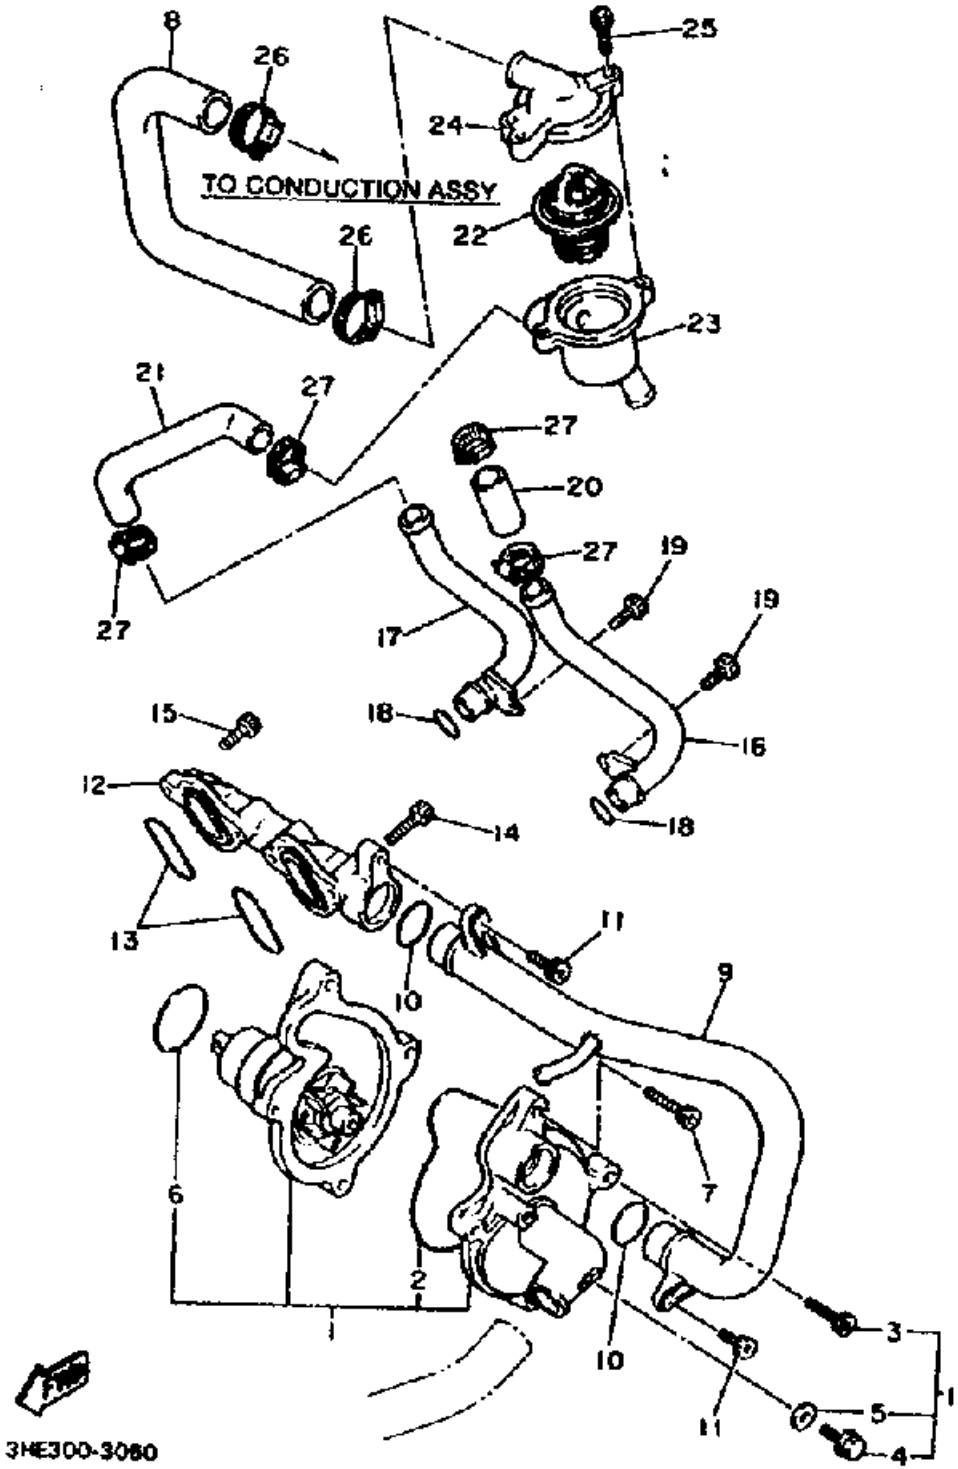


Ref No	Part No	Description
01	3TJ-Y1242-00-00	Water Pump Assy
02	1WG-12439-00-00	• . O-ring
03	91311-06025-00	• . Bolt
04	95026-06012-00	• . Bolt, Flange
05	90430-06014-00	• . Gasket
06	93210-33133-00	• . O-ring
07	91316-06035-00	Bolt
08	3HE-12579-00-00	Hose 4
09	3HE-12481-00-00	Pipe 1
10	93210-21190-00	O-ring
11	91316-06012-00	Bolt
12	1WG-12446-01-00	Joint
13	93210-17746-00	O-ring
14	91316-06040-00	Bolt
15	91316-06025-00	Bolt
16	1WG-12482-00-00	Pipe 2
17	1WG-12483-00-00	Pipe 3
18	93210-15566-00	O-ring
19	91316-06012-00	Bolt
20	3HE-12576-00-00	Hose 1
21	3HE-12577-00-00	Hose 2
22	46X-12410-00-00	Thermostat Assy
23	1WG-12417-00-00	Housing, Thermostat
24	1WG-12413-01-00	Cover, Thermostat
25	91311-06020-00	Bolt
26	90450-32051-00	Hose Clamp Assy
27	90450-28014-00	Hose Clamp Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

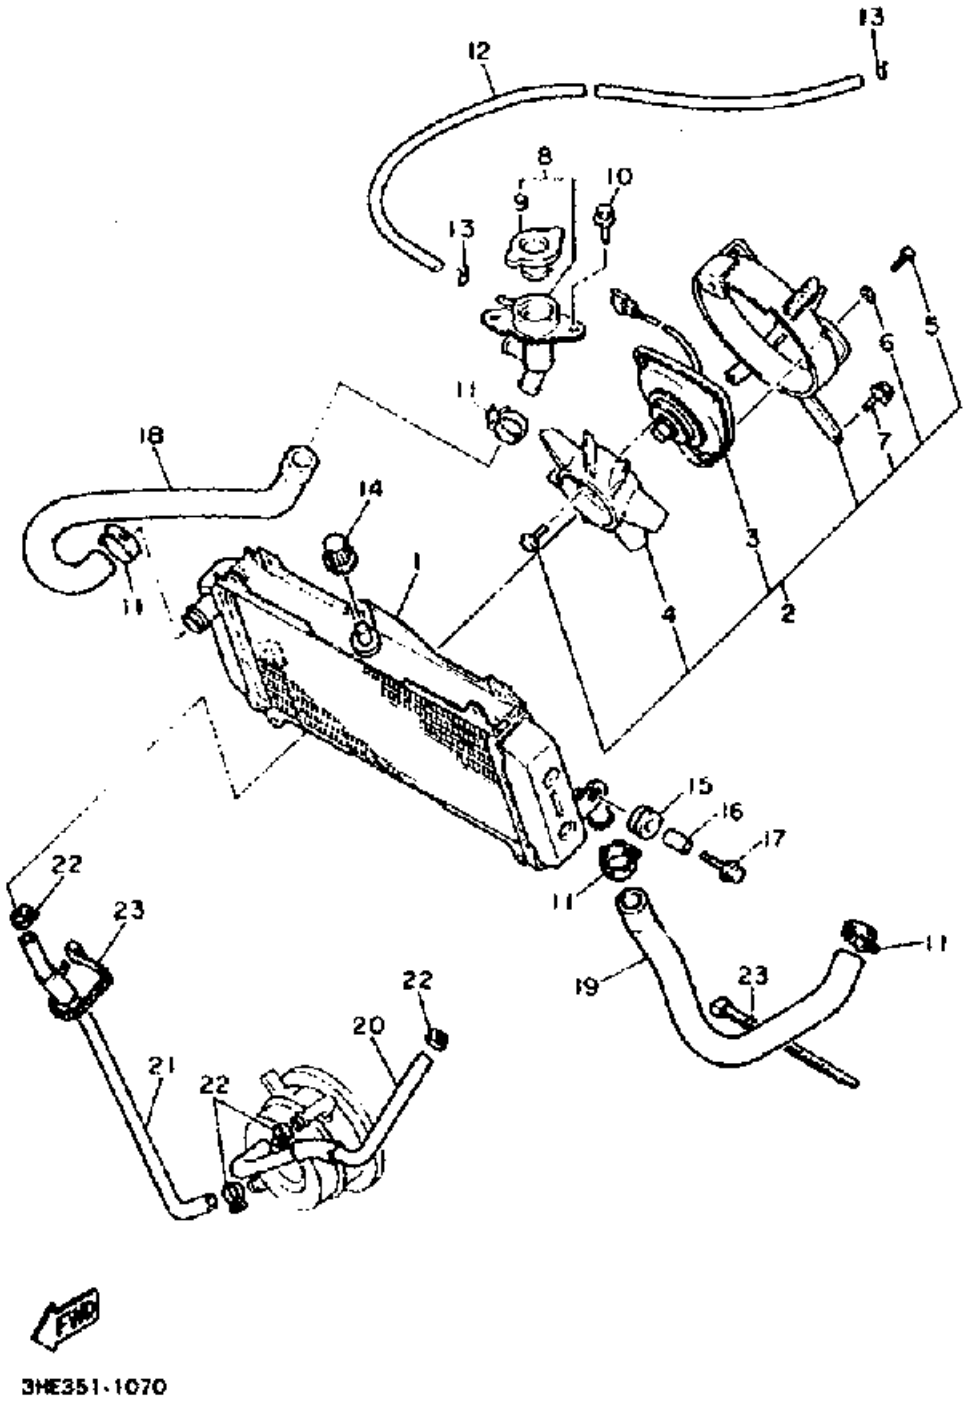


Ref No	Part No	Description
01	3HE-12461-10-00	Radiator Assy
02	3HE-12405-00-00	Blower Assy
03	1AA-12630-00-00	• . Motor Assy
04	1UF-12611-00-00	• . Fan
05	98501-05008-00	• . Screw, Pan Head
06	92901-05600-00	• . Washer, Plate
07	90119-06044-00	• . Bolt, With Washer
08	2TK-12590-00-00	Conduction Assy
09	22W-12462-00-00	• . Cap, Radiator
10	95826-06010-00	Bolt, Flange
11	90450-32051-00	Hose Clamp Assy
12	90445-096E8-00	Hose
13	90467-08003-00	Clip
14	90338-20188-00	Plug
15	90480-15483-00	Grommet
16	90387-07392-00	Collar
17	95816-06025-00	Bolt, Flange
18	3HE-12578-00-00	Hose 3
19	3HE-12588-10-00	Hose 5
20	3HE-12589-00-00	Hose 6
21	3HE-12551-00-00	Hose 7
22	90450-22017-00	Hose Clamp Assy
23	25G-83936-01-00	Band, Switch Cord

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

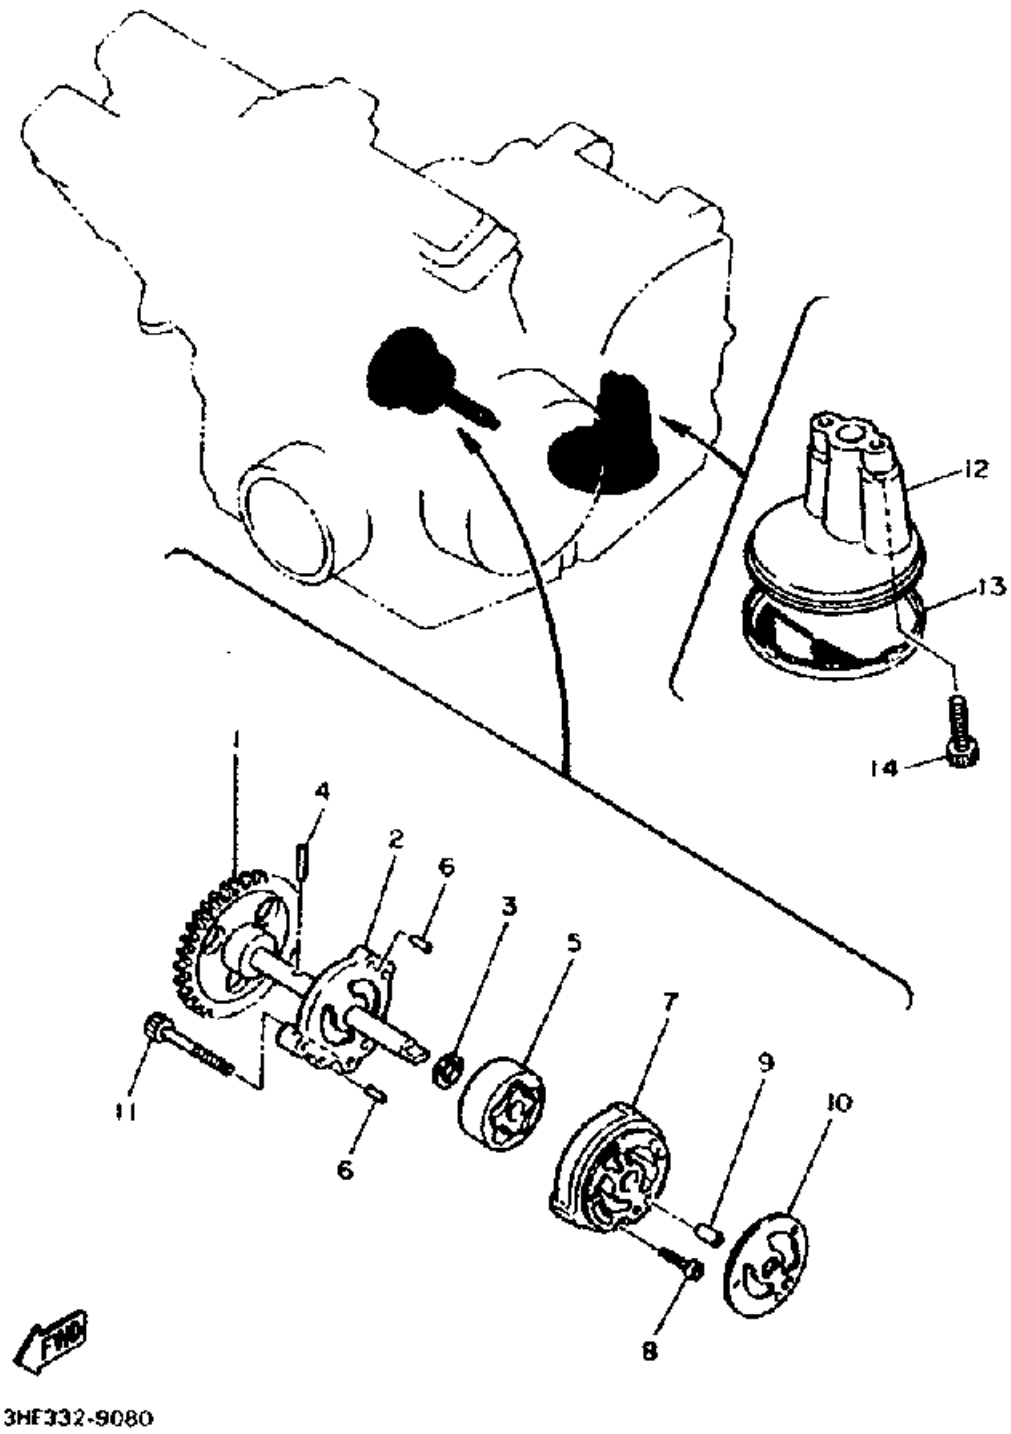


Ref No	Part No	Description
01	1WG-13330-01-00	Pump Shaft Assy
02	1WG-13316-00-00	Cover, Pump
03	90201-113K2-00	Washer, Plate
04	93603-17070-00	Pin, Dowel
05	1WG-13310-00-00	Rotor Assy 1
06	93603-09106-00	Pin, Dowel
07	1WG-13336-00-00	Housing, Rotor
08	98501-06020-00	Screw, Pan Head
09	99510-08012-00	Pin, Dowel
10	1WG-13329-00-00	Gasket, Pump Cover
11	90110-06130-00	Bolt, Hexagon Socket Head
12	1WG-13412-00-00	Housing, Strainer
13	4H7-13411-02-00	Strainer, Oil
14	90110-06099-00	Bolt, Hexagon Socket Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

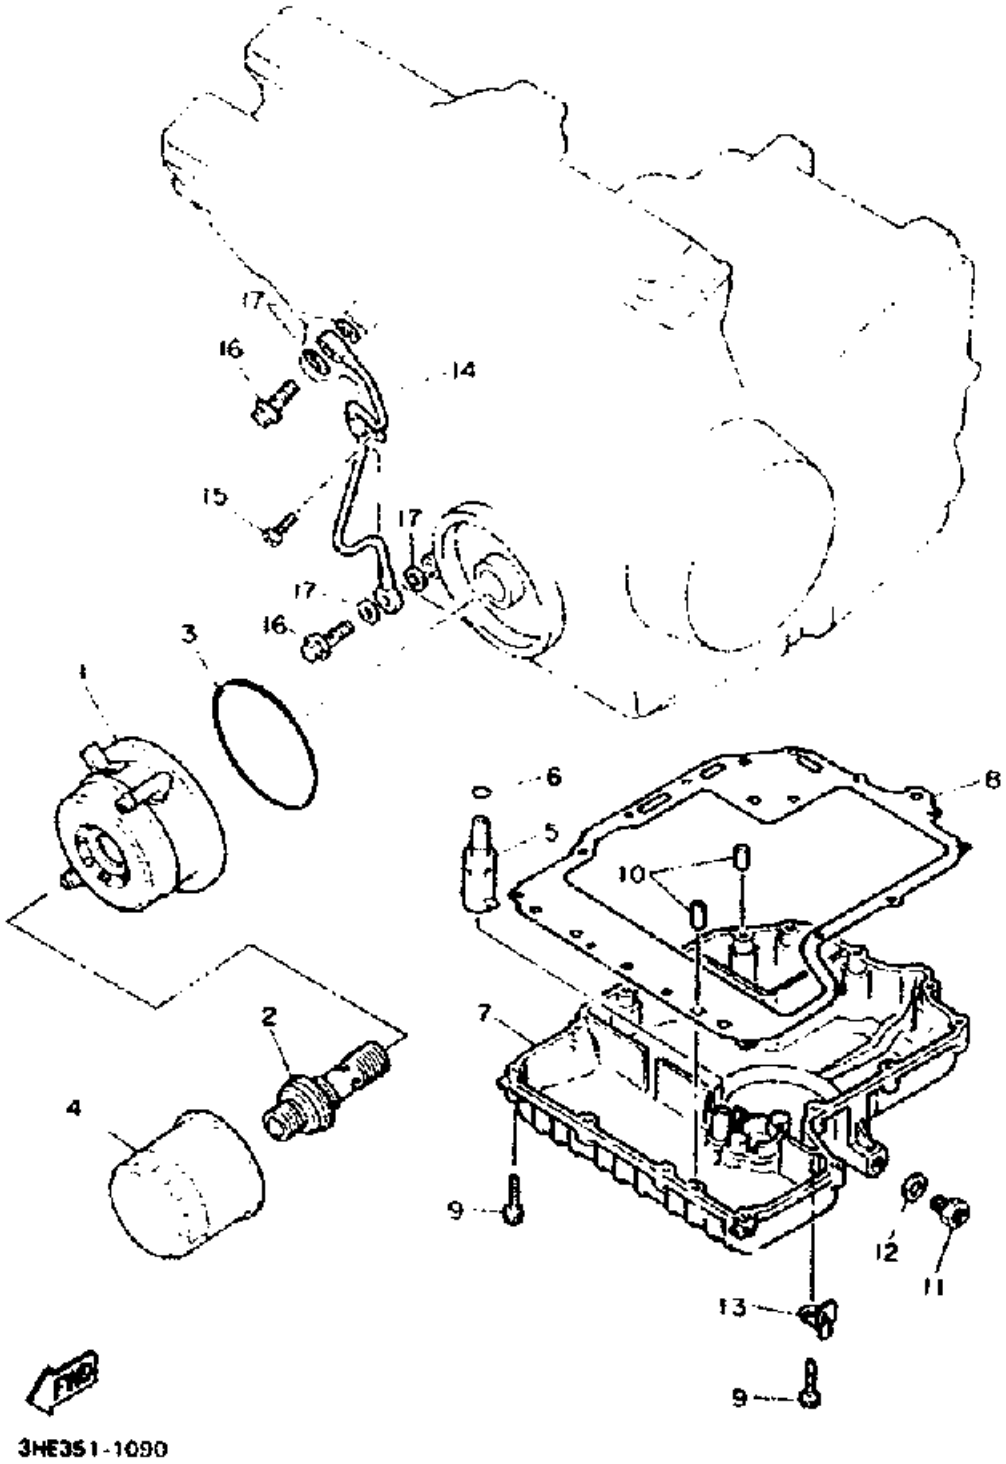


Ref No	Part No	Description
01	3TJ-13470-00-00	Oil Cooler Assy
02	3TJ-13340-00-00	By-pass Valve Assy
03	93210-87723-00	O-ring
04	3FV-13440-00-00	Element Assy, Oil Cleaner
05	11H-13490-00-00	Relief Valve Assy
06	93210-10096-00	O-ring
07	1WG-13417-00-00	Cover, Strainer
08	3HE-13414-10-00	Gasket, Strainer Cover
09	91316-06025-00	Bolt
10	99510-08016-00	Pin, Dowel
11	3VD-13455-00-00	Plug
12	214-11198-01-00	Gasket
13	90465-10306-00	Clamp
14	3HE-13161-00-00	Pipe, Delivery 1
15	91316-06012-00	Bolt
16	90401-10106-00	Bolt, Union
17	90430-10171-00	Gasket

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

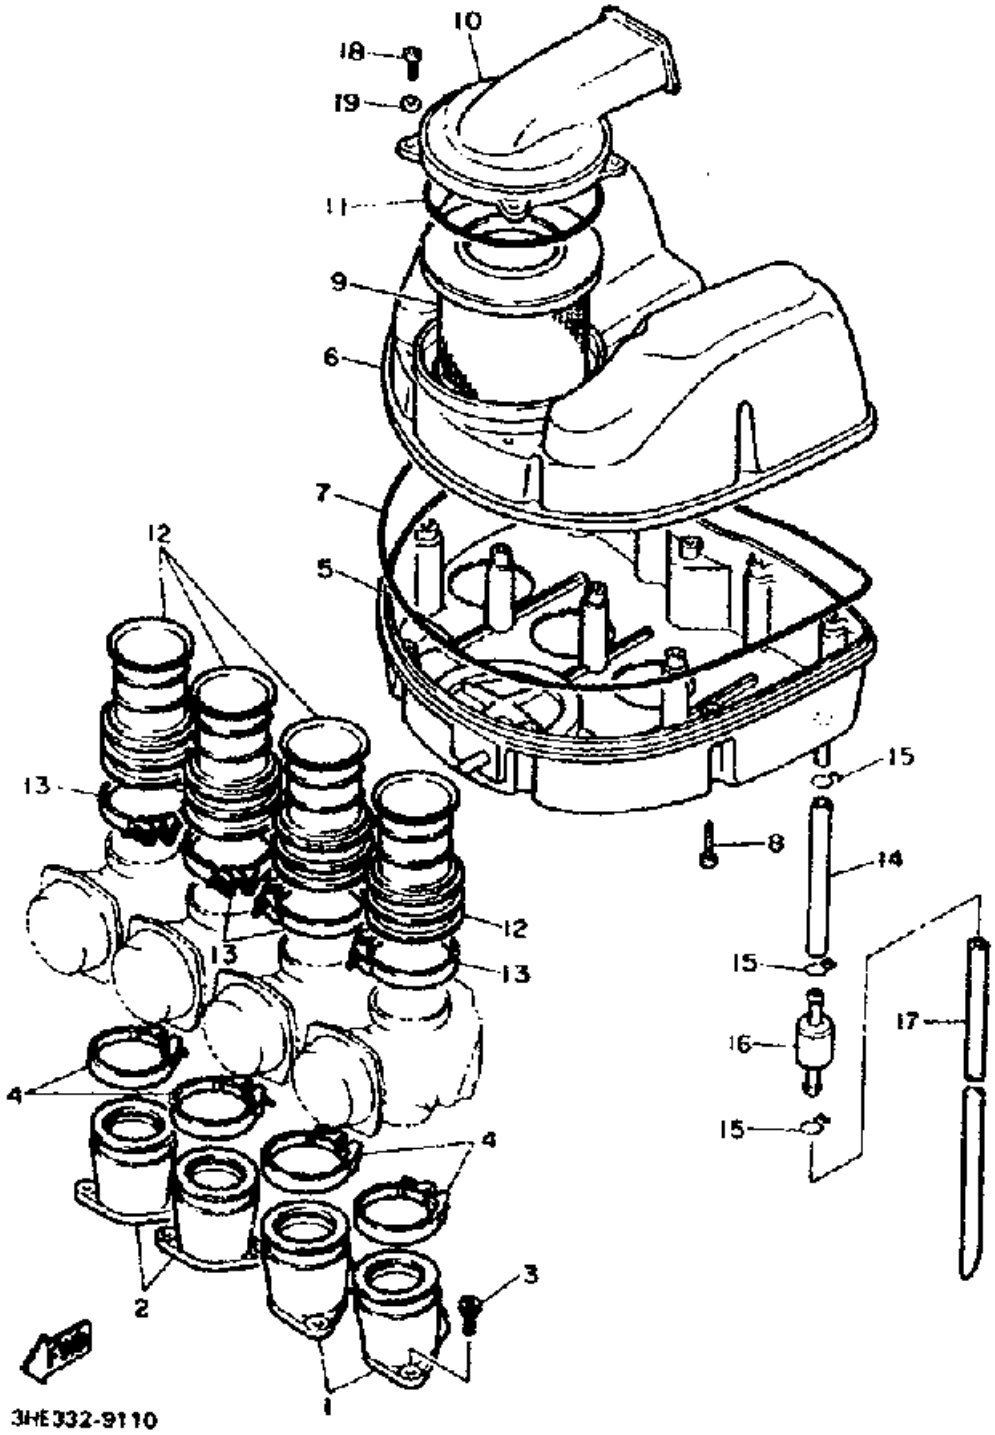


Ref No	Part No	Description
01	3HE-13586-00-00	Joint, Carburetor 1
01	3HF-13586-00-00	Joint, Carburetor 1
01	3RH-13586-00-00	Joint, Carburetor 1
02	3HE-13596-00-00	Joint, Carburetor 2
02	3HF-13596-00-00	Joint, Carburetor 2
02	3RH-13596-00-00	Joint, Carburetor 2
03	91316-06020-00	Bolt
04	90450-49020-00	Hose Clamp Assy
05	3HE-14411-00-00	Case, Air Cleaner 1
06	1WG-14421-00-00	Case, Air Cleaner 2
07	1VJ-14462-00-00	Seal
08	97780-50125-00	Screw, Tapping
09	1WG-14451-00-00	Element, Air Cleaner
10	3HE-14412-00-00	Cap, Cleaner Case 1
11	5T0-14457-00-00	Seal
12	3HE-14453-00-00	Joint, Air Cleaner 1
13	90460-58015-00	Clamp, Hose
14	90445-11452-00	Hose
15	90467-10008-00	Clip
16	4X7-2149Y-00-00	Filter Assy
17	90445-115E8-00	Hose
18	98501-05016-00	Screw, Pan Head
19	92901-05600-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

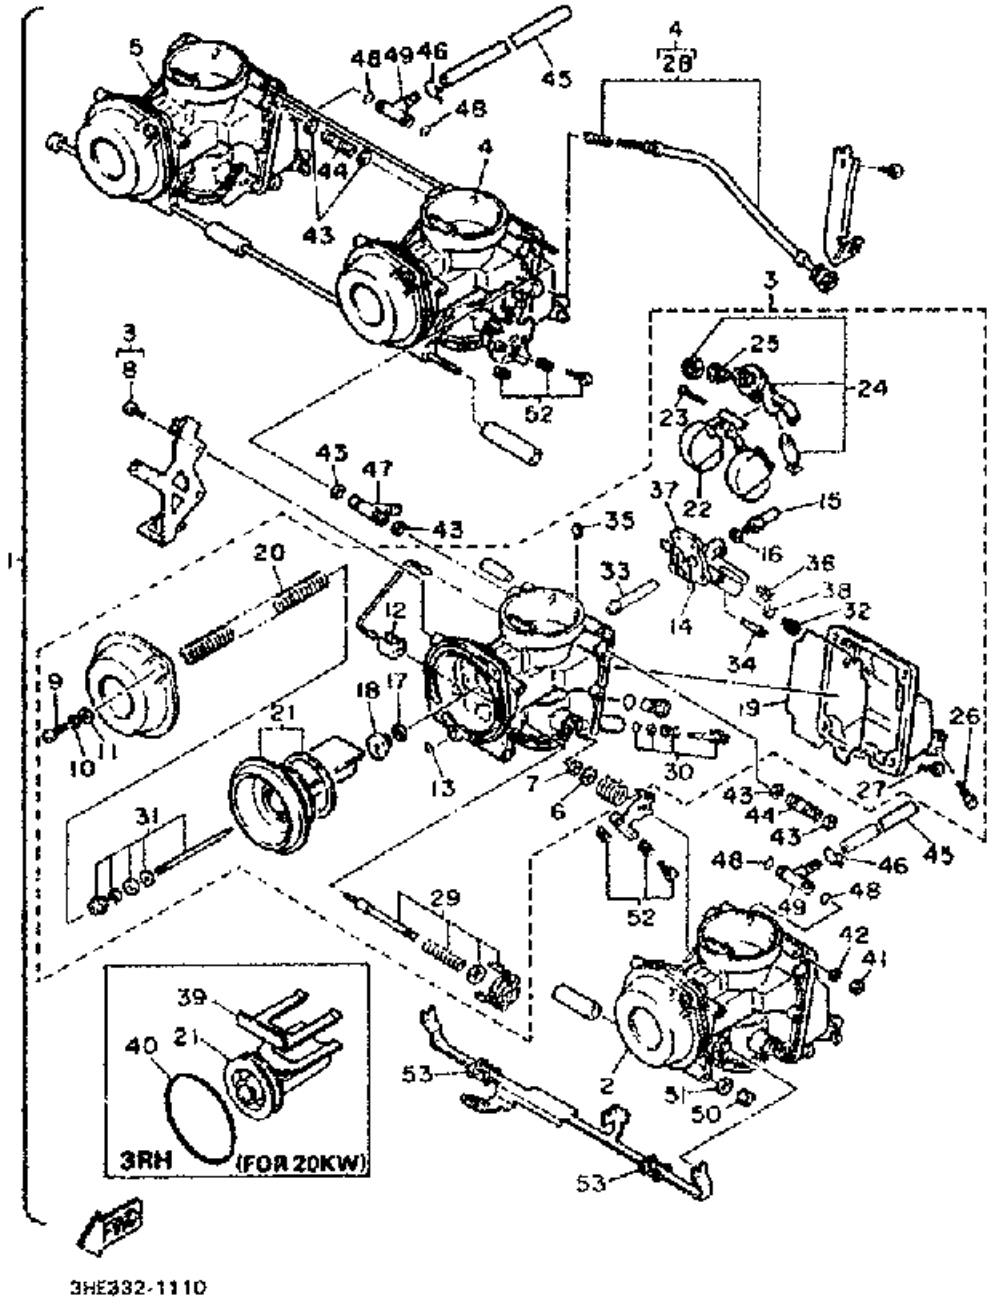


Ref No	Part No	Description
01	3HE-14900-04-00	Carburetor Assy
01	3RH-14900-04-00	Carburetor Assy
02	3HE-14901-04-00	• . Carburetor Assy 1
02	3RH-14901-04-00	• . Carburetor Assy 1
03	3HE-14902-04-00	• . Carburetor Assy 2
03	3RH-14902-04-00	• . Carburetor Assy 2
04	3HE-14903-04-00	• . Carburetor Assy 3
04	3RH-14903-04-00	• . Carburetor Assy 3
05	3HE-14904-04-00	• . Carburetor Assy 4
05	3RH-14904-04-00	• . Carburetor Assy 4
06	1A8-14953-00-00	•• .. Washer
07	256-14997-00-00	•• .. Seal
08	98580-04010-00	•• .. Screw, Pan Head
09	98506-05016-00	•• .. Screw, Pan Head
10	92906-05100-00	•• .. Washer, Spring
11	92906-05600-00	•• .. Washer, Plate
12	3EN-14243-00-00	•• .. Plate
13	3EN-14239-00-00	•• .. Seal
14	3GM-14147-00-00	•• .. O-ring
15	1AE-14565-00-00	•• .. Screw
16	137-14153-00-00	•• .. Washer, Main Jet
17	1FN-14147-00-00	•• .. O-ring
18	3EN-1411E-00-00	•• .. Block, Jet
19	3GM-14997-00-00	•• .. Seal
20	3HE-14933-00-00	•• .. Spring, Diaphragm
20	3RH-14933-00-00	•• .. Spring, Diaphragm
21	3HE-14940-00-00	•• .. Diaphragm Assy
21	3RH-14112-00-00	•• .. Valve, Throttle 1
22	3HE-14985-00-00	•• .. Float
23	353-14186-00-00	•• .. Pin, Float
24	3HH-14107-10-00	•• .. Needle Valve Set
25	3EN-14147-00-00	•• .. O-ring
27	98501-05012-00	•• .. Screw, Pan Head
28	3HE-14103-00-00	•• .. Throttle Screw Set
29	3EN-1410A-00-00	•• .. Starter Set
30	12R-14105-00-00	•• .. Pilot Screw Set
31	3HE-1490J-00-00	•• .. Needle Set
32	3G2-1423A-72-00	•• .. Jet, Main (107.5)
32	3G2-1423A-69-00	•• .. Jet, Main (92.5)
33	3EN-14141-90-00	•• .. Nozzle, Main
34	4G0-14142-30-00	•• .. Jet, Pilot (30)
35	830-1423A-73-00	•• .. Jet, Main (112.5)
36	3G2-1423A-61-00	•• .. Jet, Main (52.5)
37	3HE-1411A-00-00	•• .. Block Jet Assy
38	1AE-14227-00-00	•• .. Washer
39	3RH-14945-00-00	•• .. Jet
40	3RH-14147-00-00	•• .. O-ring
41	95303-05600-00	• . Nut
42	2GV-14953-00-00	• . Washer
43	3EN-14997-00-00	• . Seal
44	3HE-14163-00-00	• . Spacer
45	3EN-14197-00-00	• . Pipe
46	8U9-14139-00-00	• . Clip, Pipe
47	3EN-14988-00-00	• . Pipe, Starter Connecting
48	822-14147-00-00	• . O-ring

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

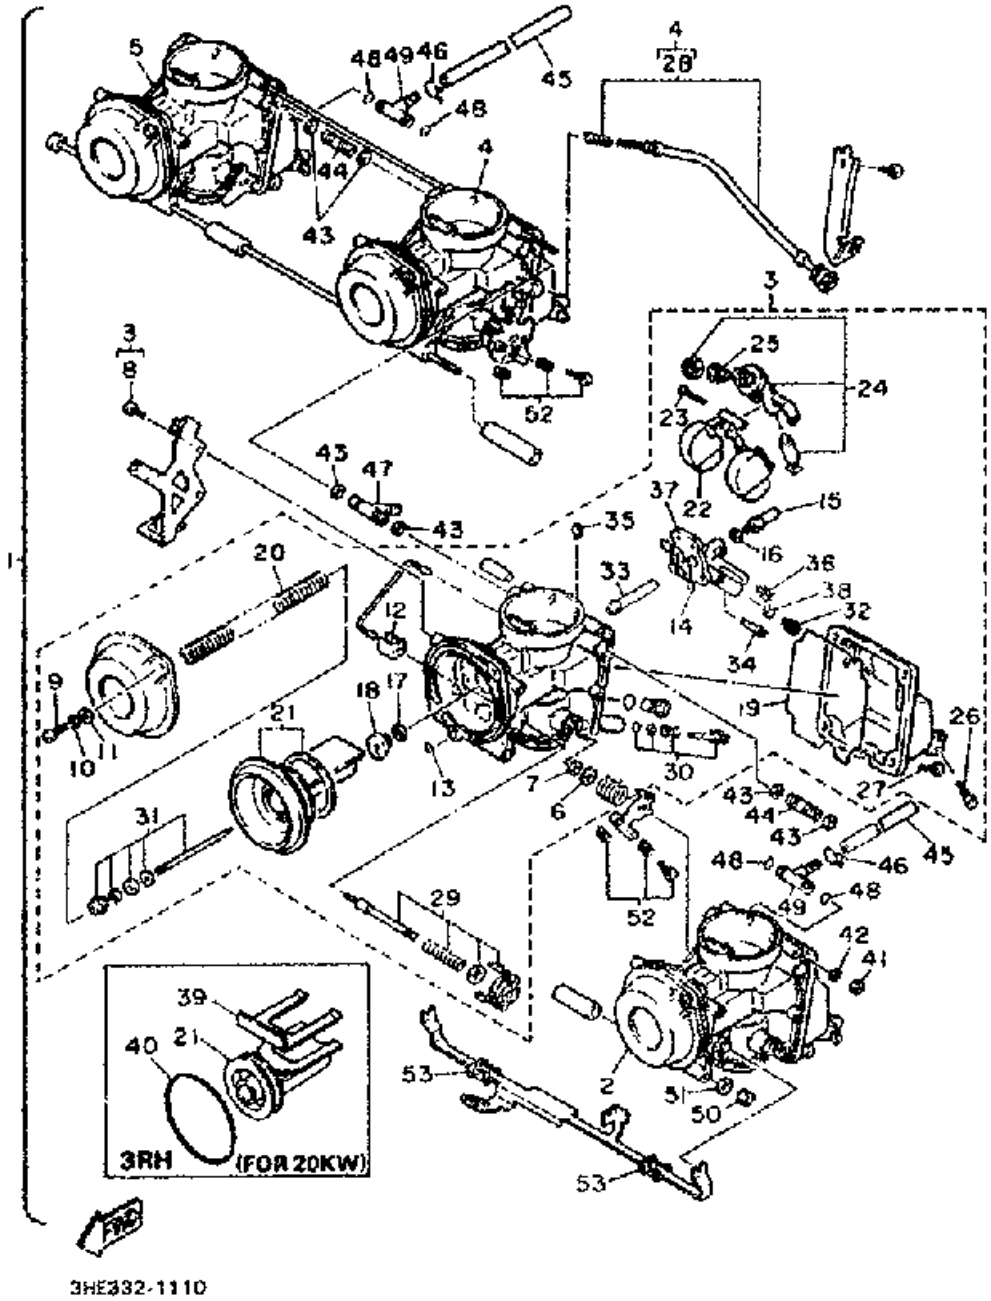


Ref No	Part No	Description
49	17A-14251-00-00	• . Nipple
50	95303-06600-00	• . Nut
51	92990-06600-00	• . Washer, Plate
52	3EN-1490K-00-00	• . Stop Screw Set
53	3EN-14261-00-00	• . Holder

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

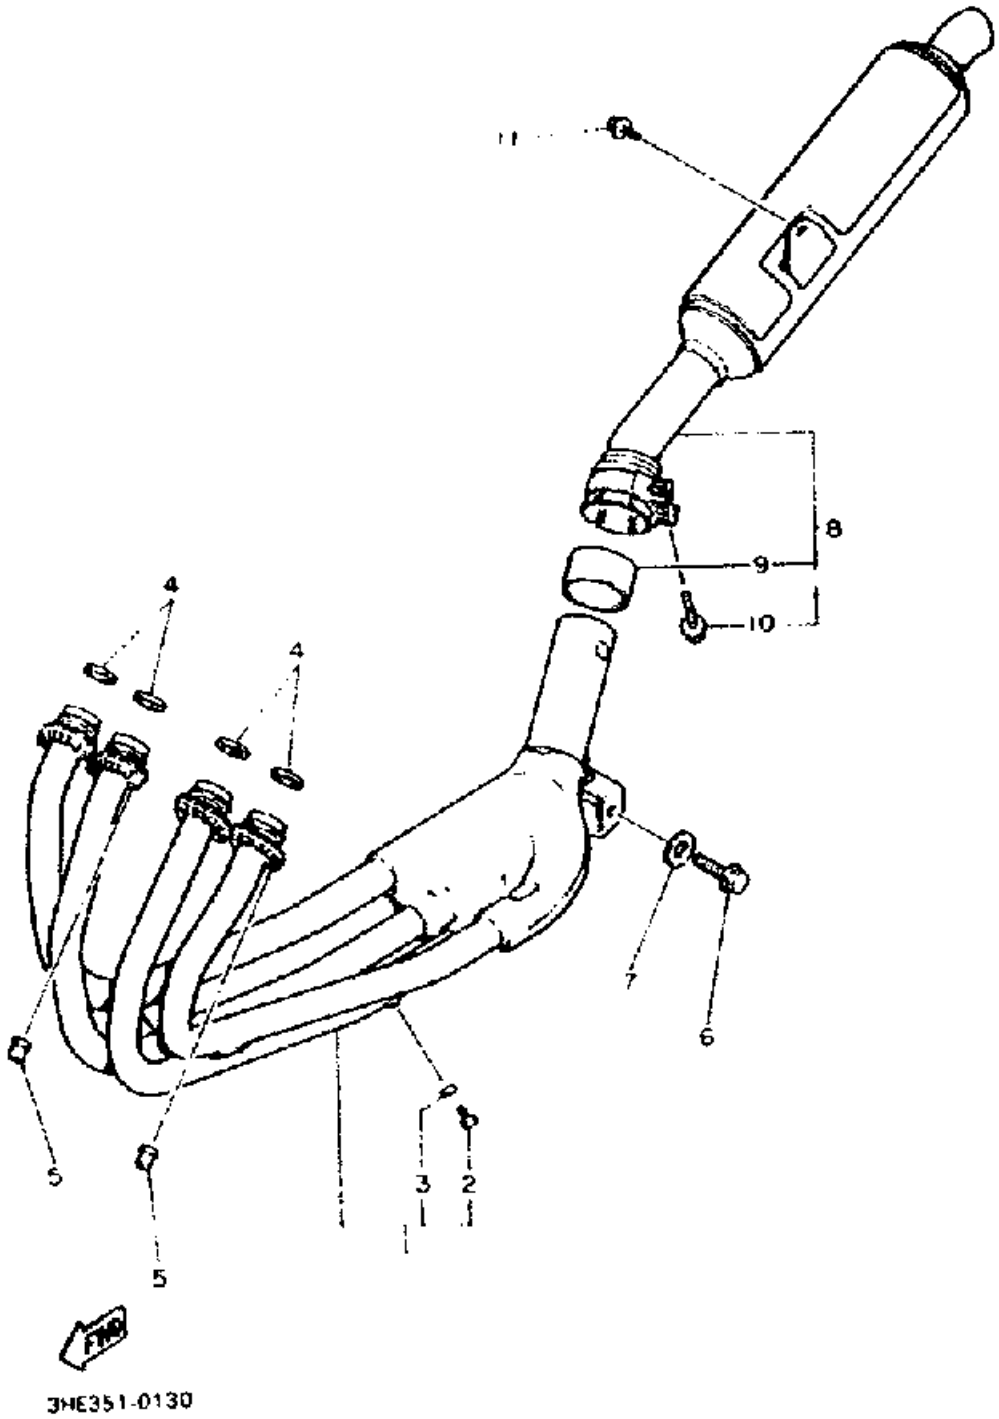


Ref No	Part No	Description
01	3HE-14602-00-00	Exhaust Pipe Comp.
02	90101-06576-00	• . Bolt
03	92906-06600-00	• . Washer, Plate
04	3YF-14613-01-00	Gasket, Exhaust Pipe
05	90179-06499-00	Nut
06	95816-08030-00	Bolt, Flange
07	90201-08730-00	Washer, Plate
08	3HE-14710-10-00	Muffler Assy 1
09	3HE-14755-00-00	• . Gasket, Silencer
10	95816-08045-00	• . Bolt, Flange
11	95816-08012-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

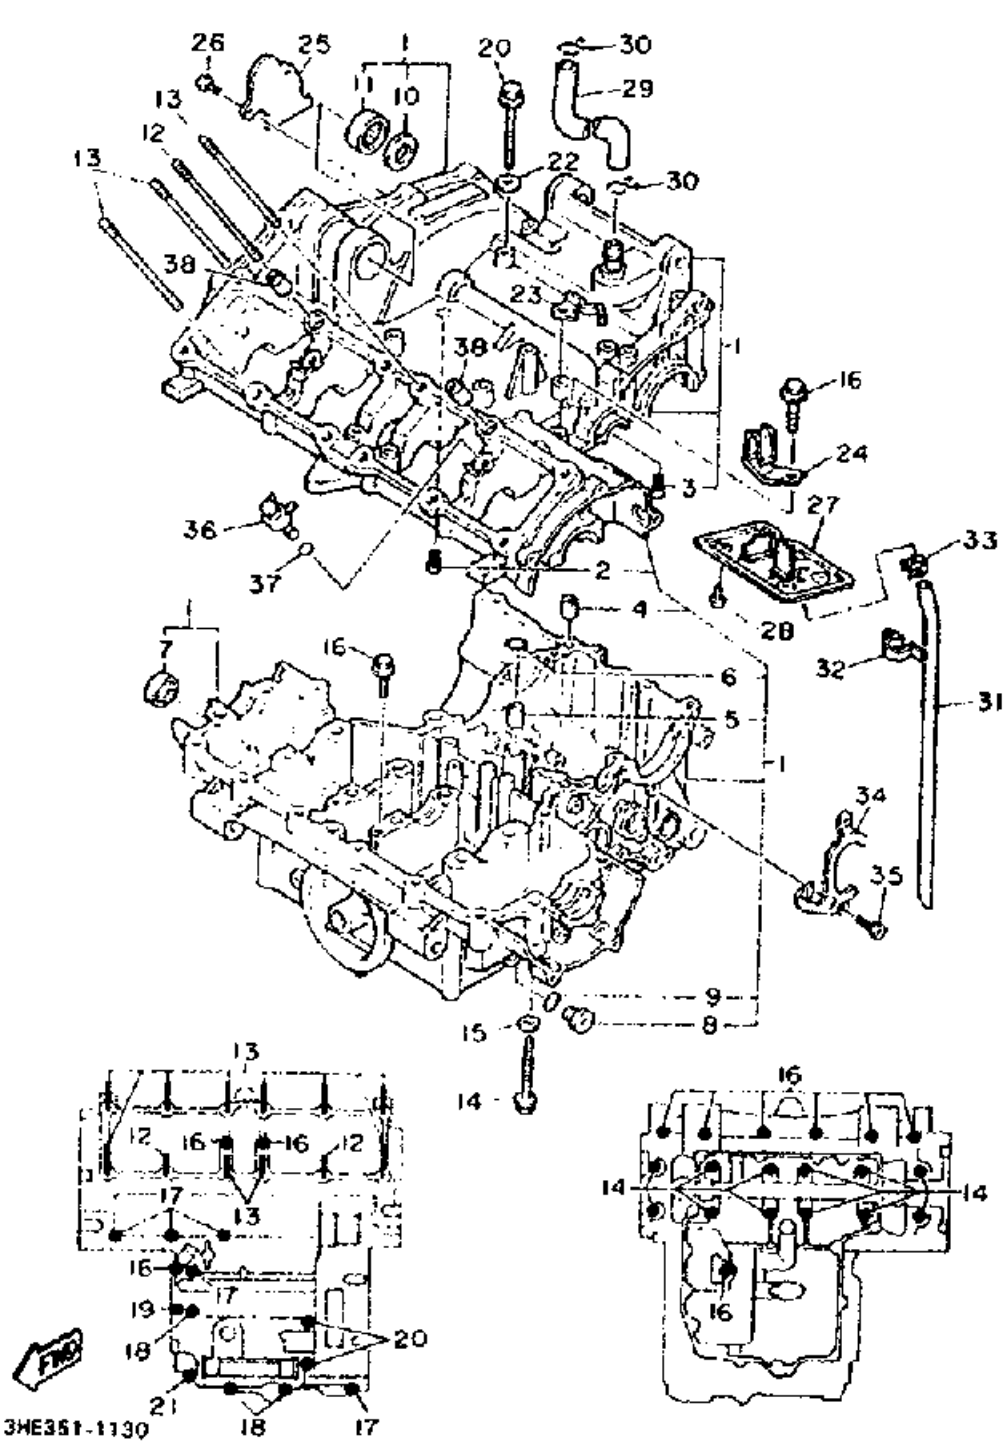


Ref No	Part No	Description
01	3HE-15100-10-00	Crankcase Assy
02	11H-15138-00-00	• . Nozzle 1
03	26H-15138-00-00	• . Nozzle 1
04	99510-12016-00	• . Pin, Dowel
05	1HX-15138-00-00	• . Nozzle 1
06	93210-12152-00	• . O-ring
07	2H7-15361-00-00	• . Gauge, Level
08	36Y-15189-00-00	• . Plug
09	93210-16629-00	• . O-ring
10	90201-237K5-00	• . Washer, Plate
12	90116-08526-00	Bolt, Stud
13	90116-08525-00	Bolt, Stud
14	90105-08630-00	Bolt, Washer Based
15	90201-087K3-00	Washer, Plate
16	95816-06040-00	Bolt, Flange
17	95816-06050-00	Bolt, Flange
18	95816-06070-00	Bolt, Flange
19	95816-06080-00	Bolt, Flange
20	95816-06090-00	Bolt, Flange
21	95816-08070-00	Bolt, Flange
22	90430-06166-00	Gasket
23	90465-10307-00	Clamp
24	90465-10308-00	Clamp
25	3HE-11165-00-00	Plate, Breather
26	98501-06012-00	Screw, Pan Head
27	3HE-11145-00-00	Plate, Breather 2
28	98501-06012-00	Screw, Pan Head
29	1WG-11166-00-00	Pipe, Breather 1
30	90467-14015-00	Clip
31	90445-116E9-00	Hose
32	90465-06289-00	Clamp
33	90467-10038-00	Clip
34	1WG-15381-00-00	Plate, Bearing Cover
35	91316-06012-00	Bolt
36	3HE-15105-00-00	Nozzle Assy
37	93210-06632-00	O-ring
38	99510-12016-00	Pin, Dowel

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

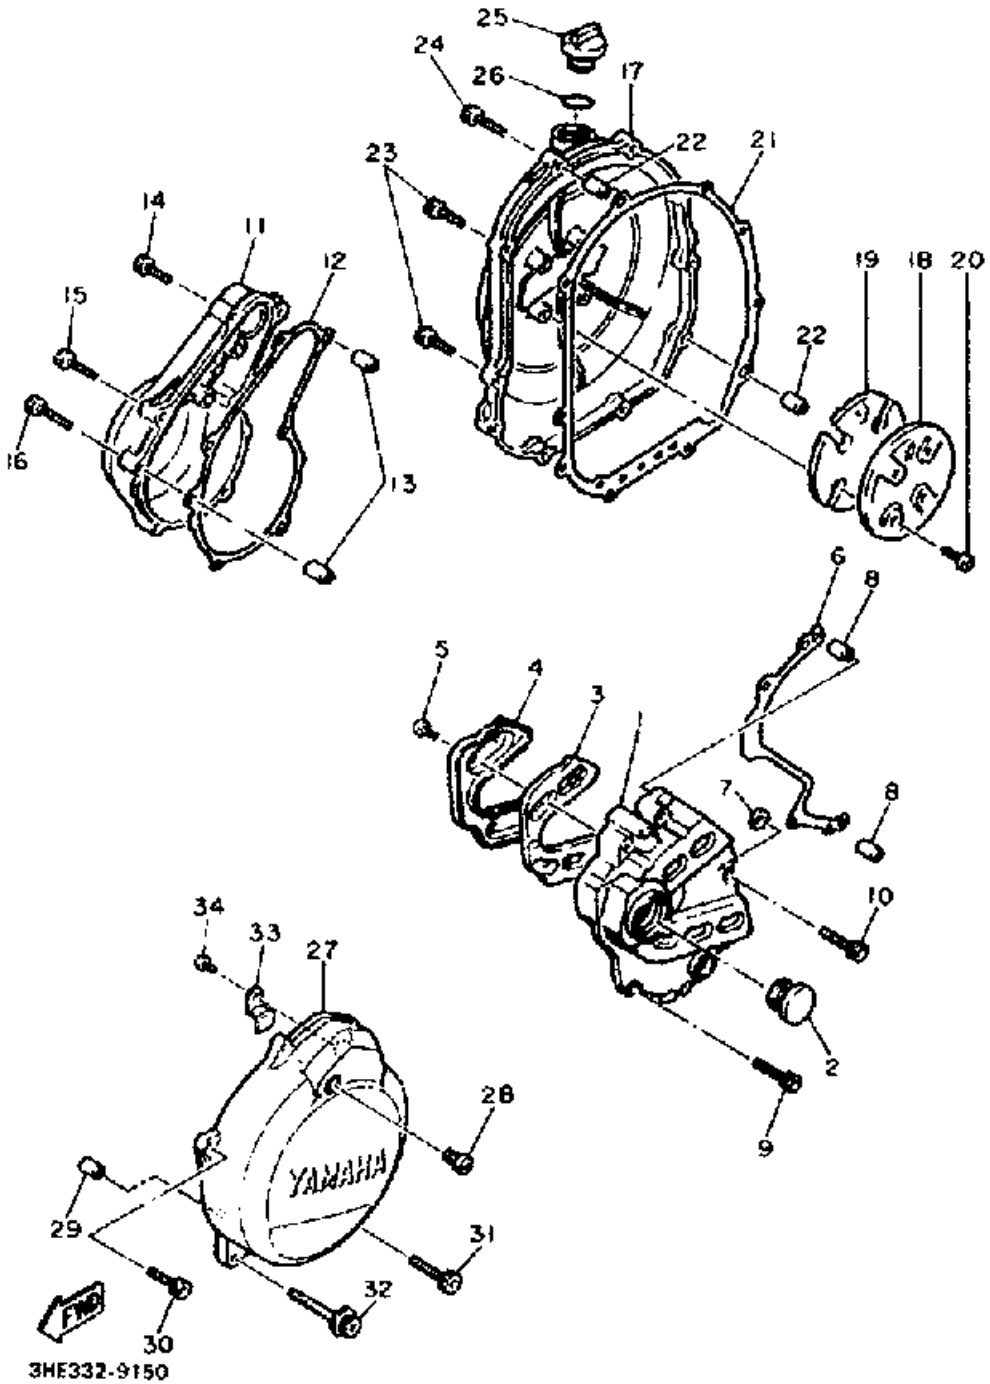


Ref No	Part No	Description
01	2TK-15411-00-00	Cover, Crankcase 1
02	1L9-15417-00-00	Cover, Cap
03	1WG-15316-00-00	Damper, Engine Mount 1
04	1WG-15427-00-00	Cover, Cap 2
05	98901-05008-00	Screw, Bind
06	3HE-15451-10-00	Gasket, Crankcase Cover 1
07	3HE-15467-10-00	Gasket
08	99510-08016-00	Pin, Dowel
09	90110-06149-00	Bolt, Hexagon Socket Head
10	90110-06148-00	Bolt, Hexagon Socket Head
11	2TK-15421-00-00	Cover, Crankcase 2
12	3HE-15461-10-00	Gasket, Crankcase Cover 2
13	99510-08016-00	Pin, Dowel
14	91311-06025-00	Bolt
15	91311-06035-00	Bolt
16	91311-06045-00	Bolt
17	2TK-15431-01-00	Cover, Crankcase 3
18	1WG-15425-00-00	Cover, Generator 2
19	1WG-15326-00-00	Damper, Engine Mount 2
20	98901-05008-00	Screw, Bind
21	3HE-15462-10-00	Gasket, Crankcase Cover 3
22	99510-08016-00	Pin, Dowel
23	91311-06025-00	Bolt
24	91311-06035-00	Bolt
25	3F9-15362-00-00	Plug, Oil Level
26	93210-27194-00	O-ring
27	3HE-15415-01-00	Cover, Generator
28	90340-08M04-00	Plug, Straight Screw
29	99510-08016-00	Pin, Dowel
30	91311-06025-00	Bolt
31	91311-06035-00	Bolt
32	91311-06035-00	Bolt
33	90462-10182-00	Clamp
34	98501-06010-00	Screw, Pan Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

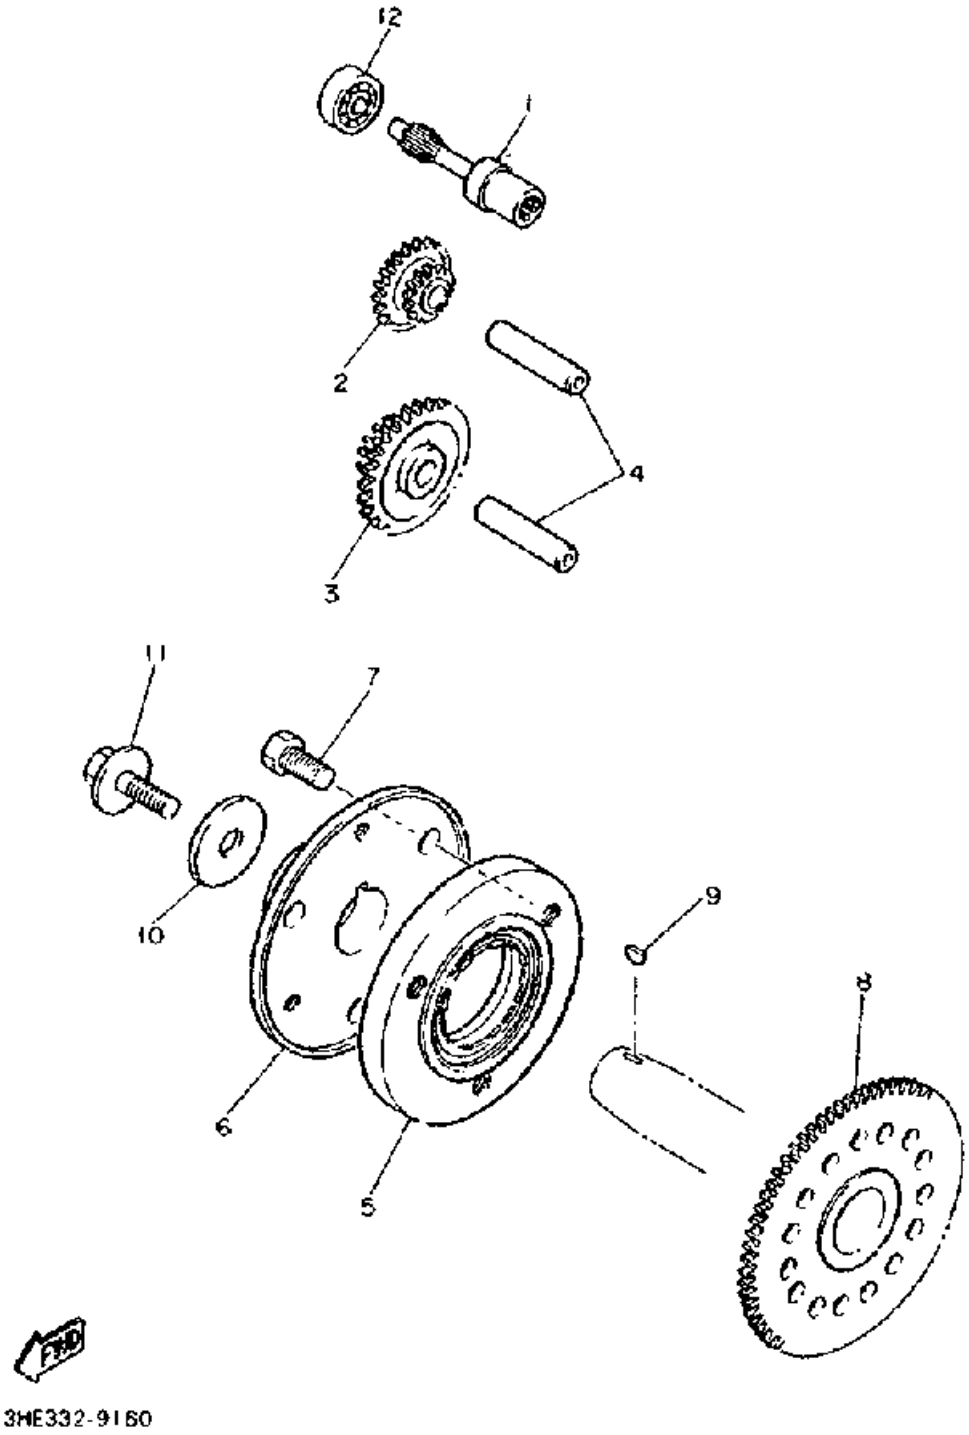


Ref No	Part No	Description
01	3HE-15521-00-00	Shaft 1
02	3HE-15512-00-00	Gear, Idler 1
03	3HE-15517-00-00	Gear, Idler 2
04	3TJ-15521-00-00	Shaft 1
05	3HE-15590-01-00	Starter One-way Assy
06	3HE-15524-00-00	Wheel, Starter
07	91316-08020-00	Bolt
08	3HE-15516-01-00	Gear 4
09	90280-16053-00	Key, Woodruff
10	90201-107K6-00	Washer, Plate
11	90105-10445-00	Bolt, Washer Based
12	93306-20006-00	Bearing (b6200)

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

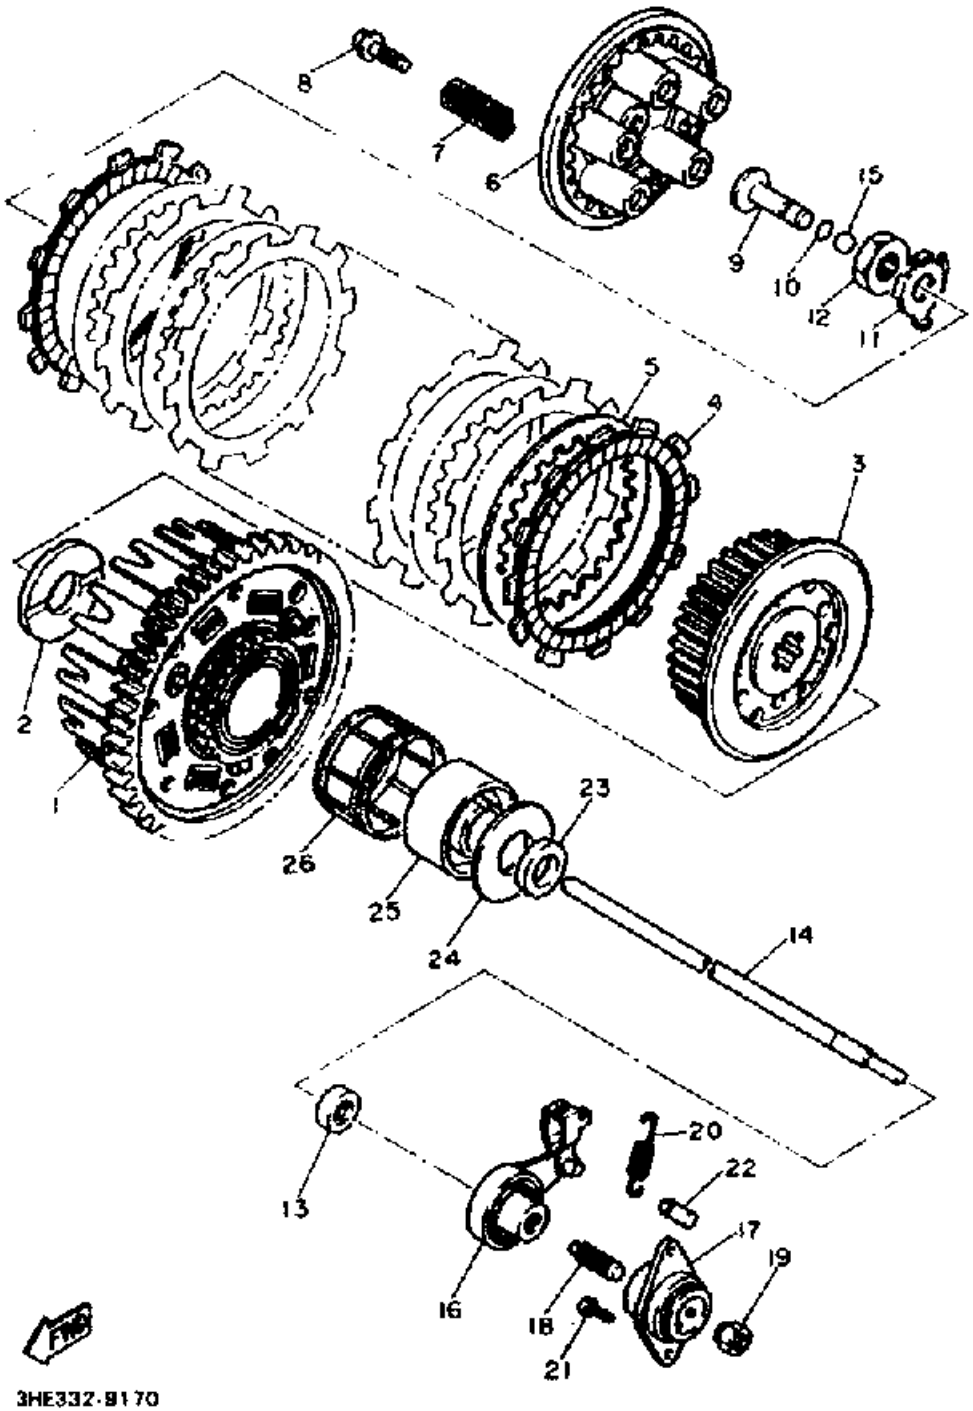


Ref No	Part No	Description
01	3HE-16150-00-00	Primary Driven Gear Comp.
02	1WG-16154-00-00	Plate, Thrust 1
03	3HE-16371-00-00	Boss, Clutch
04	21V-16321-00-00	Plate, Friction
05	131-16324-00-00	Plate, Clutch 1
06	2TK-16351-00-00	Plate, Pressure 1
07	90501-227E0-00	Spring, Compression
08	90119-05001-00	Bolt, With Washer
09	1WG-16356-00-00	Rod, Push 1
10	93210-18364-00	O-ring
11	90215-18225-00	Washer, Lock
12	90170-18221-00	Nut
13	93109-08058-00	Oil Seal (sd07 8-21-5.5hs)
14	1WG-16357-01-00	Rod, Push 2
15	93505-16006-00	Ball
16	1WG-16340-01-00	Push Lever Assy
17	1WG-16304-00-00	Ball Screw Housing Assy
18	90113-08012-00	Bolt, Set
19	90179-08179-00	Nut
20	90506-09232-00	Spring, Tension
21	90157-05065-00	Screw, Pan Head
22	132-16346-00-00	Hook, Spring
23	90387-212R3-00	Collar
24	1WG-16164-00-00	Plate, Thrust 2
25	1WG-16181-00-00	Spacer 1
26	93310-345R8-00	Bearing

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

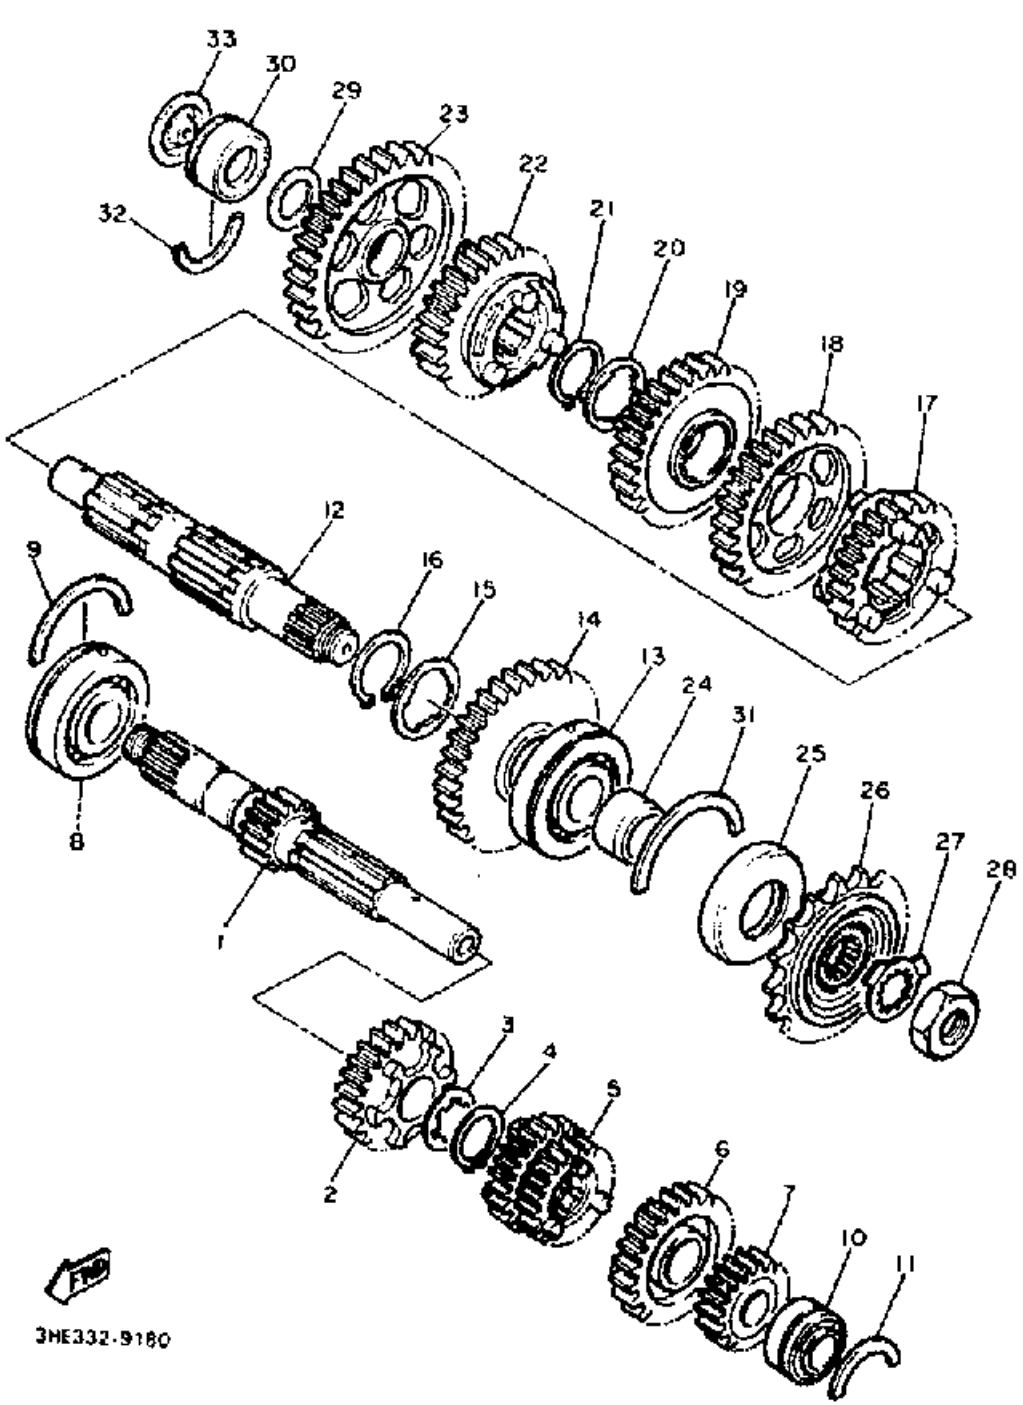


Ref No	Part No	Description
01	3HE-17411-10-00	Axle, Main (13z)
02	3HE-17151-00-00	Gear, 5th Pinion (26z)
03	90209-18208-00	Washer
04	93410-22039-00	Circlip
05	3HE-17131-00-00	Gear, 3rd Pinion (21z)
06	3HE-17161-00-00	Gear, 6th Pinion (27z)
07	3HE-17121-10-00	Gear, 2nd Pinion (22z)
08	93306-37205-00	Bearing (83b285c3)
09	93440-54152-00	Circlip
10	93399-99933-00	Bearing
11	278-17425-00-00	Circlip 2
12	3HE-17421-00-00	Axle, Drive
13	93306-30550-00	Bearing
14	3HE-17221-10-00	Gear, 2nd Wheel (37z)
15	90209-27192-00	Washer
16	93440-30077-00	Circlip
17	3HE-17261-10-00	Gear, 6th Wheel (30z)
18	3HE-17231-00-00	Gear, 3rd Wheel (31z)
19	3HE-17241-00-00	Gear, 4th Wheel (28z)
20	90209-22191-00	Washer
21	93440-25084-00	Circlip
22	3HE-17251-00-00	Gear, 5th Wheel (31z)
23	3HE-17211-10-00	Gear, 1st Wheel (42z)
24	90387-255V4-00	Collar
25	93102-35109-00	Oil Seal (sd-35-62-6 Hs)
26	3HE-17460-00-00	Sprocket, Drive (15z)
27	90215-21022-00	Washer, Lock
28	90179-18020-00	Nut
29	90201-20276-00	Washer, Plate (1.0d)
30	93311-42045-00	Bearing (20ng3315ne)
31	278-17424-01-00	Circlip 1
32	278-17425-00-00	Circlip 2
33	4G0-17433-01-00	Nozzle

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

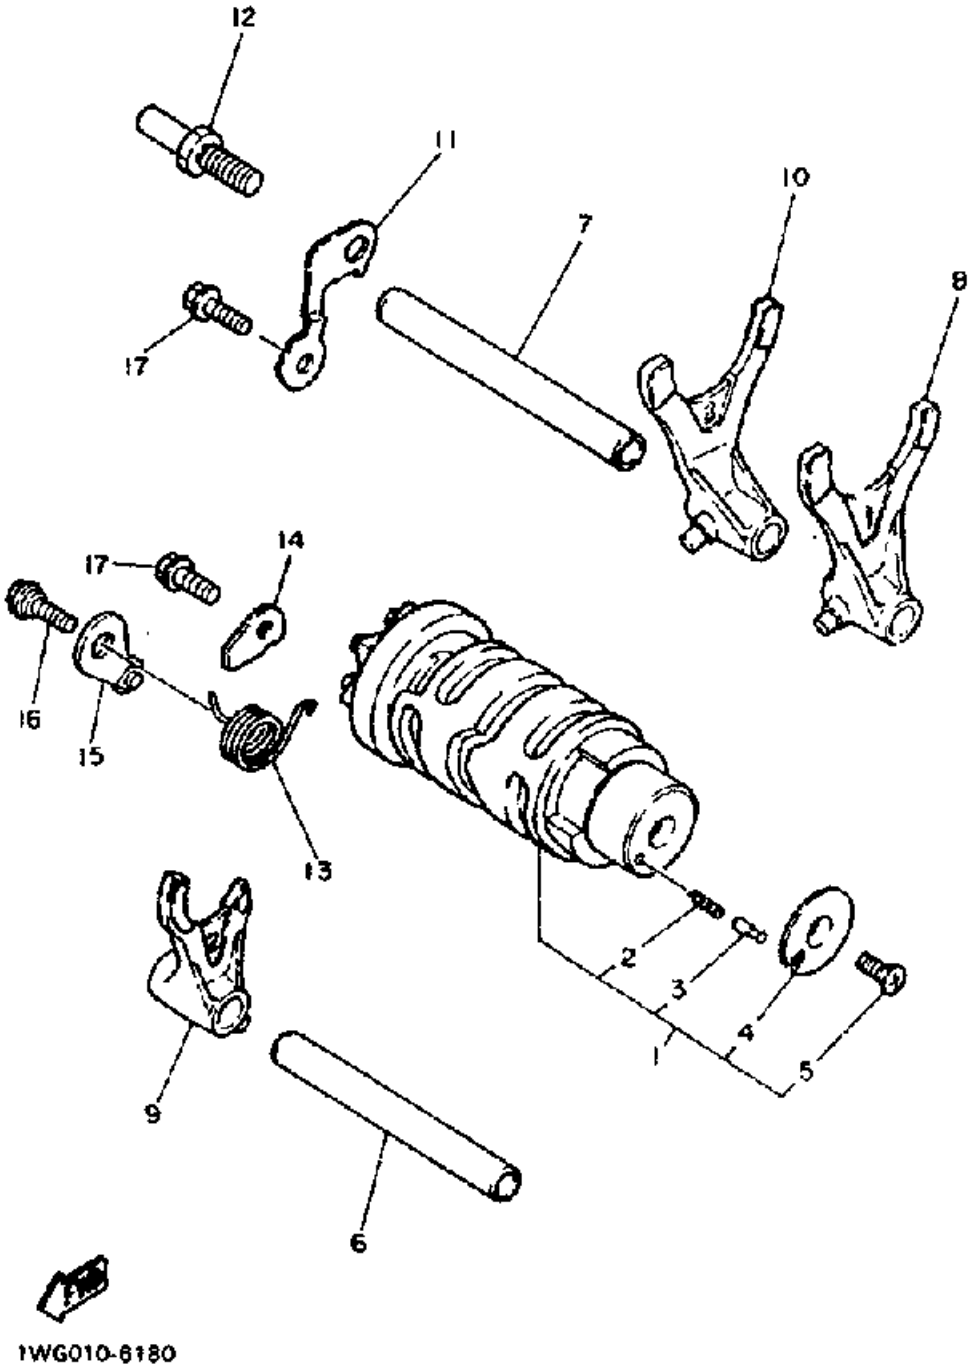


Ref No	Part No	Description
01	1WG-18540-01-00	Shift Cam Assy
02	90501-06022-00	• . Spring, Compression
03	278-18542-00-00	• . Point, Neutral
04	278-18566-00-00	• . Plate, Side 2
05	98701-05012-00	• . Screw, Flat Head
06	1WG-18531-00-00	Bar, Shift Fork Guide 1
07	1WG-18535-00-00	Bar, Shift Fork Guide 2
08	1WG-18511-00-00	Fork, Shift 1
09	1WG-18512-00-00	Fork, Shift 2
10	1WG-18513-00-00	Fork, Shift 3
11	1WG-18536-00-00	Stopper, Shift Bar
12	1HX-18127-00-00	Stopper, Screw
13	90508-23707-00	Spring, Torsion
14	1WG-18562-00-00	Plate, Stopper 2
15	36Y-18140-00-00	Stopper Lever Assy
16	90109-063F7-00	Bolt
17	95822-06016-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

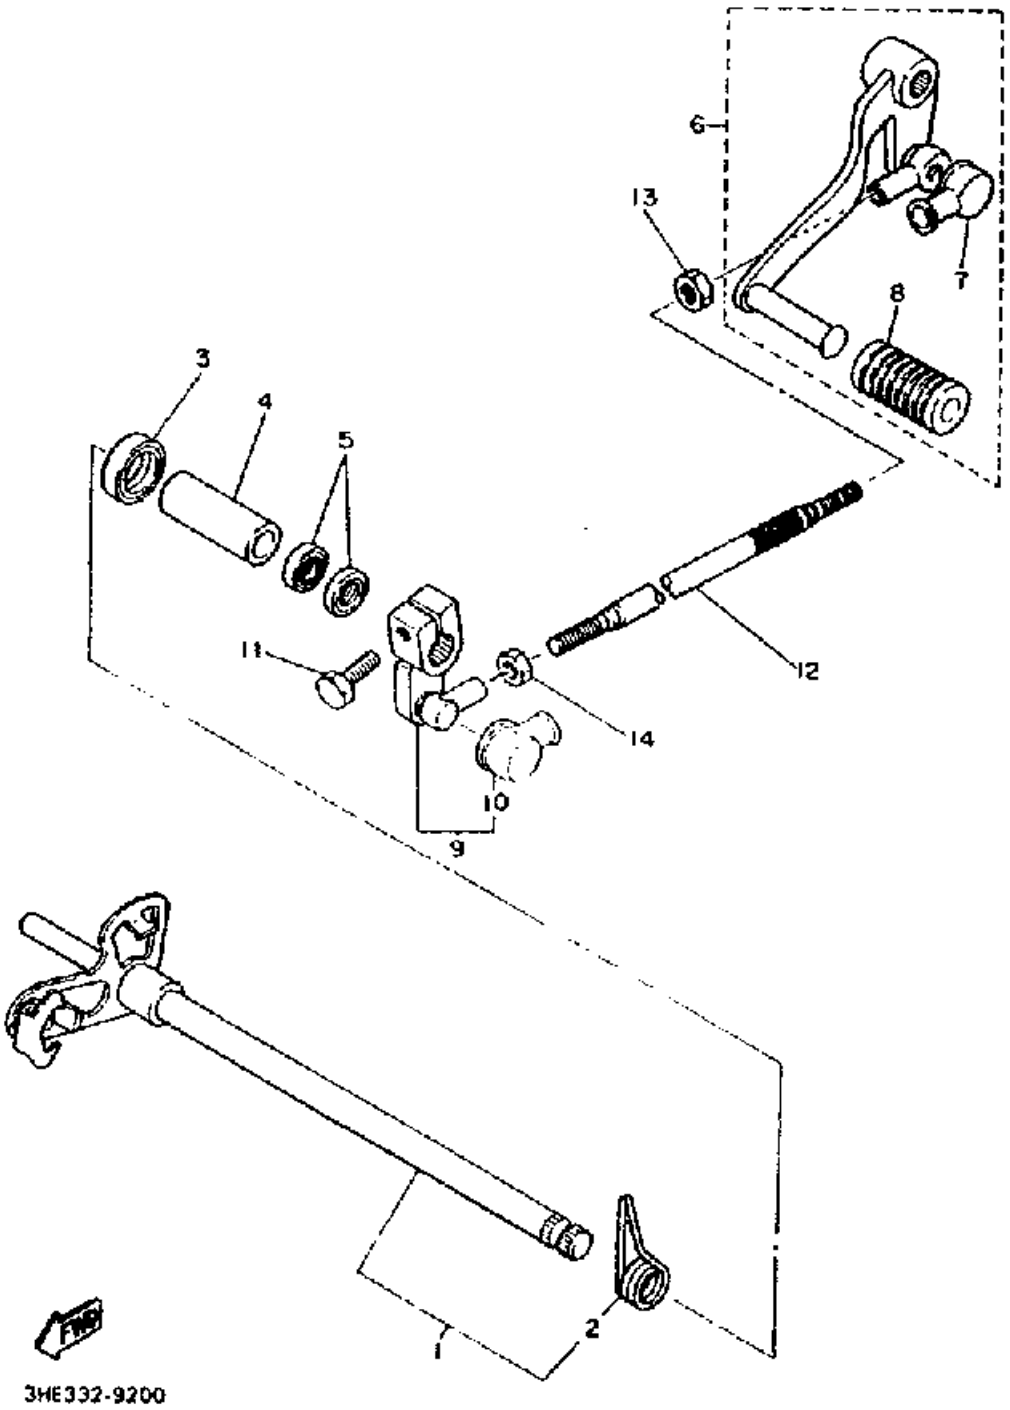


Ref No	Part No	Description
01	3EN-18101-01-00	Shift Shaft Assy
02	90508-32682-00	• . Spring, Torsion
03	93102-12106-00	Oil Seal (sd 12-22-5 Hs)
04	90560-12211-00	Spacer
05	93109-12053-00	Oil Seal
06	3HE-18110-00-00	Shift Pedal Assy
07	2H9-18154-00-00	• . Cover, Dust
08	132-18113-01-00	• . Cover, Shift Pedal
09	1WG-18112-01-00	Arm, Shift
10	2H9-18154-00-00	• . Cover, Dust
11	98021-06020-00	Bolt
12	1WG-18115-00-00	Rod, Shift
13	90170-06228-00	Nut
14	95303-06700-00	Nut

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

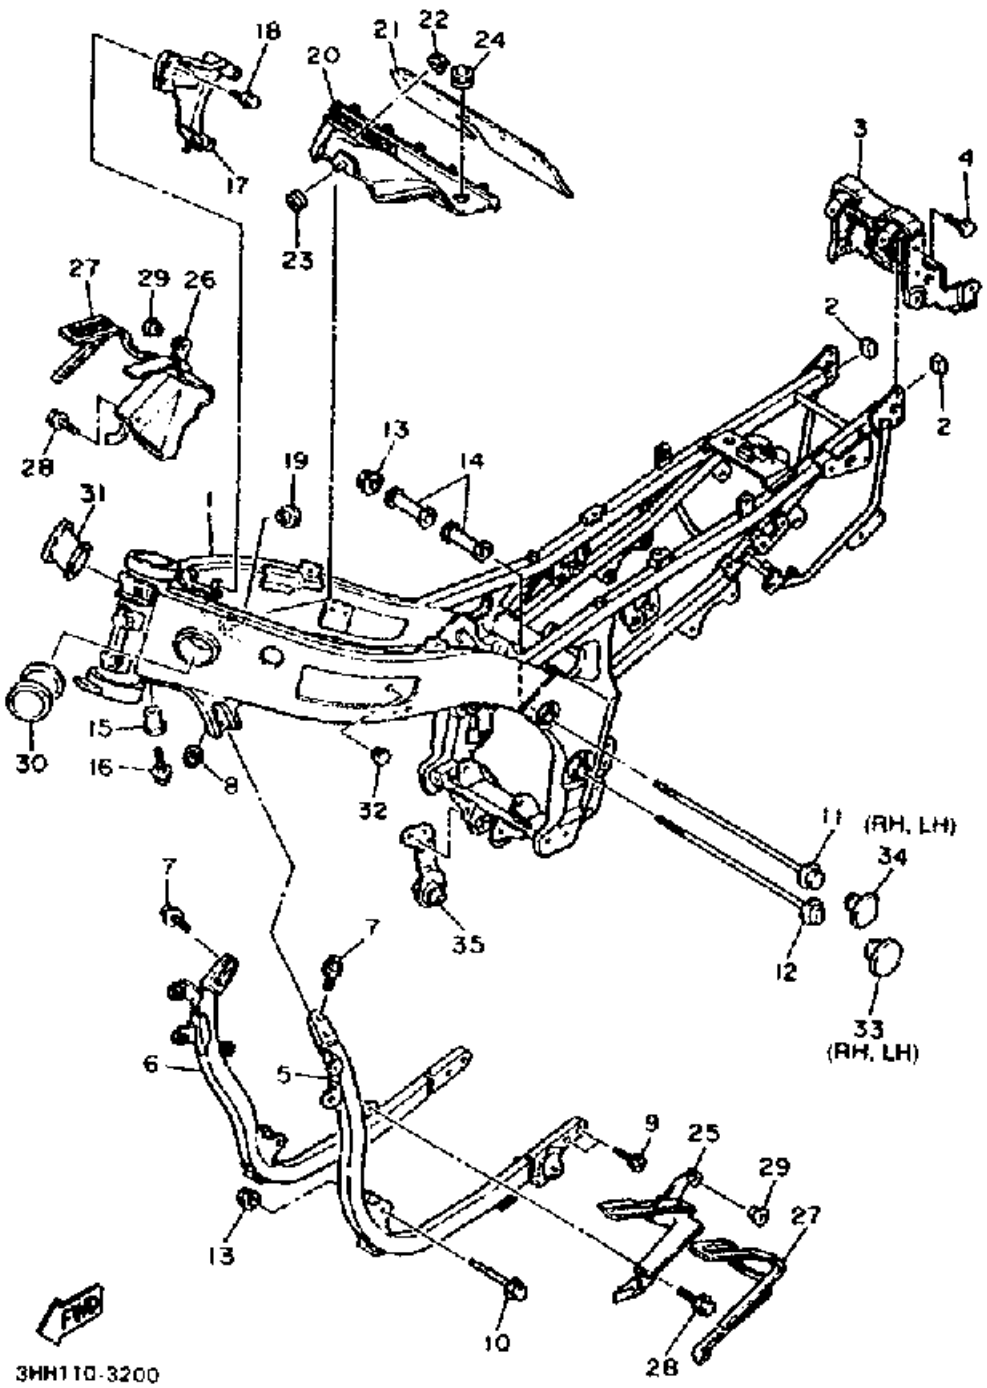


Ref No	Part No	Description
01	3HE-21110-01-T9	Frame Comp.
02	1WG-2143A-00-00	Cap
03	3HE-2117E-00-00	Bracket, Taillight
04	90109-06757-00	Bolt
05	3HH-21140-01-T9	Down Tube Comp.
06	3HH-21150-01-T9	Down Tube Comp.2
07	90105-10436-00	Bolt, Washer Based
08	95701-10500-00	Nut, Flange
09	91311-08020-00	Bolt
10	95811-10080-00	Bolt, Flange
11	91011-10296-00	Bolt, Flange
12	91011-10165-00	Bolt, Flange
13	95701-10500-00	Nut, Flange
14	1WG-21459-00-00	Spacer
15	1WG-2142M-00-00	Bracket, Radiator 3
16	91012-06016-00	Bolt, Flange
17	3HE-21238-00-00	Bracket
18	91012-06012-00	Bolt, Flange
19	90480-18171-00	Grommet
20	3HE-2137Y-00-00	Guide, Air
21	1WG-2139W-00-00	Cover
22	95702-06600-00	Nut, With Washer
23	90480-01401-00	Grommet
24	90480-13398-00	Grommet
25	3HE-2137W-00-00	Scoop, Air 1
26	3HE-2137X-00-00	Scoop, Air 2
27	3HE-2139U-00-00	Damper 2
28	90119-06093-00	Bolt, With Washer
29	90387-06681-00	Collar
30	3HE-2117M-00-00	Cover 2
31	3HE-2117N-00-00	Cover 3
32	90338-15202-00	Plug
33	3HE-2117R-00-00	Cover 4
34	3HE-2117T-00-00	Cover 5
35	3HE-21446-00-00	Stay, Muffler 2

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

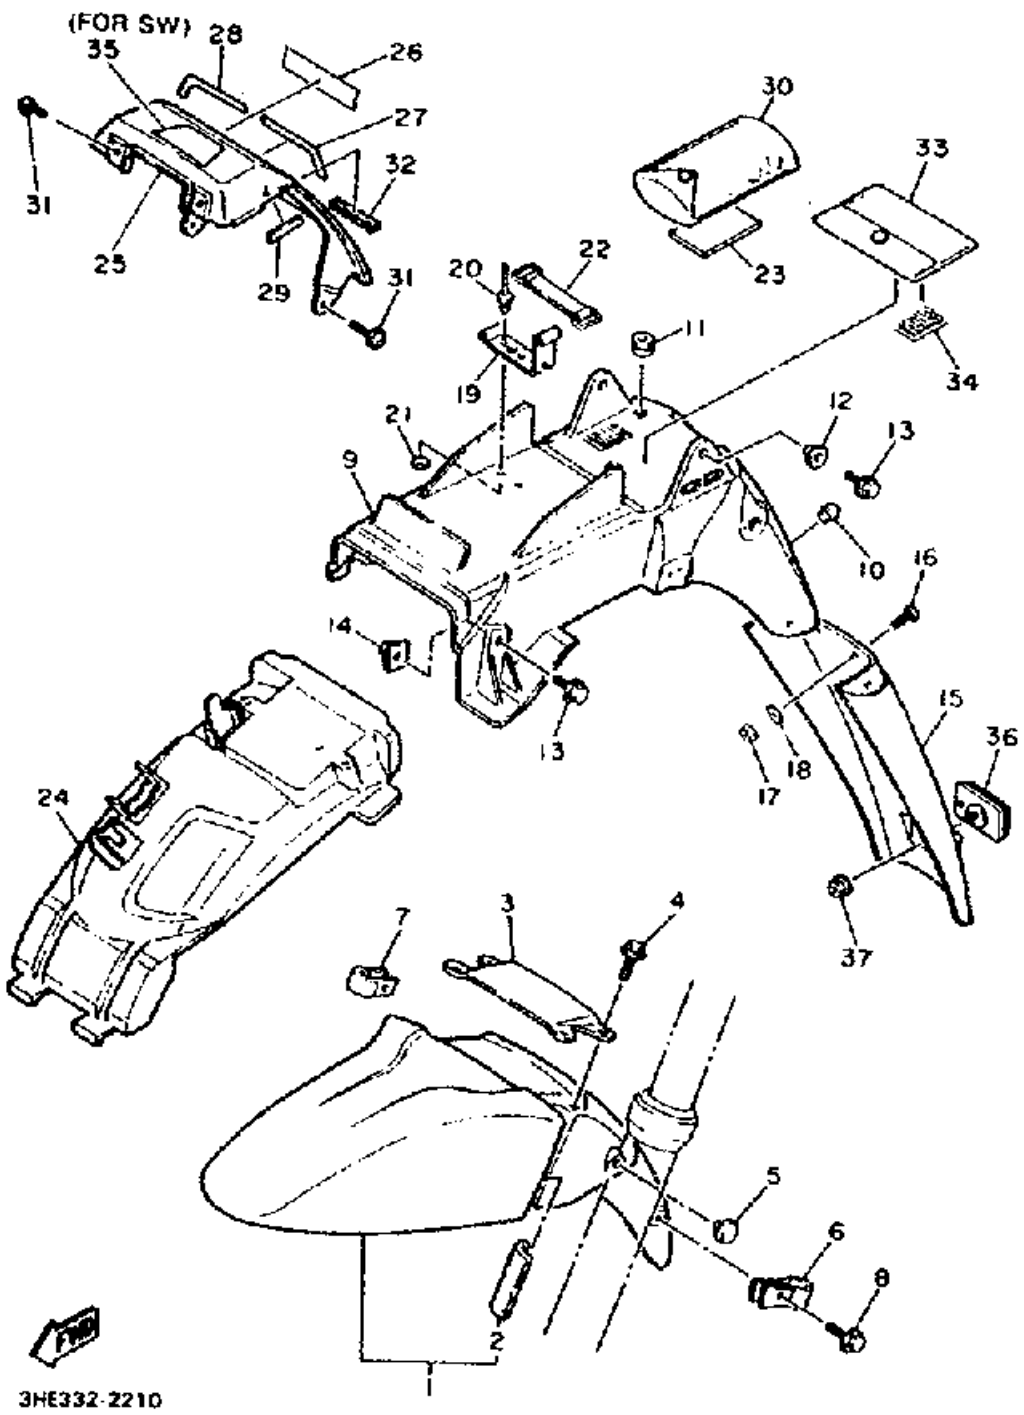


Ref No	Part No	Description
01	3FH-21510-00-0X	Front Fender Comp.
01	3FH-21510-00-9X	Front Fender Comp.
02	1KH-21717-00-00	• . Damper
03	46X-2131A-00-00	Pipe
04	90105-06456-00	Bolt, Washer Based
05	90338-12192-00	Plug
06	3EN-25876-00-00	Holder, Brake Hose 2
07	2R8-25876-00-00	Holder, Brake Hose 2
08	95023-06025-00	Bolt, Flange
09	3HE-21611-00-00	Fender, Rear
10	4G0-21639-00-00	Damper 2
11	90480-10258-00	Grommet
13	90119-06108-00	Bolt, With Washer
14	31A-14477-00-00	Plate
15	3HE-21621-00-00	Flap
16	90149-04278-00	Screw
17	95606-04100-00	Nut, U
18	90201-047A2-00	Washer, Plate
19	25G-28379-00-00	Hook
20	90267-40076-00	Rivet, Blind
21	90201-044A2-00	Washer, Plate
22	122-82131-00-00	Band, Battery
23	34M-21649-00-00	Damper
24	3HE-21629-00-00	Guard, Mud
25	3HE-21651-00-GE	Cover, Rear Fender
25	3HE-21651-00-MW	Cover, Rear Fender
26	99234-00080-00	Emblem, Yamaha
26	99236-00008-00	Emblem, Yamaha
27	2GH-21575-00-00	Seal 1
28	2GH-21576-00-00	Seal 2
29	2GH-21735-00-00	Seal 2
30	1WG-W2810-00-00	Tool Kit
31	J44-78248-00-00	Seal 4
33	4N0-28186-00-00	Pouch
34	4K5-2814E-10-00	Hook
35	3HE-21663-71-00	Graphic, Tailcover
36	3G1-85130-01-00	Rear Reflector Assy
37	95701-05500-00	Nut, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

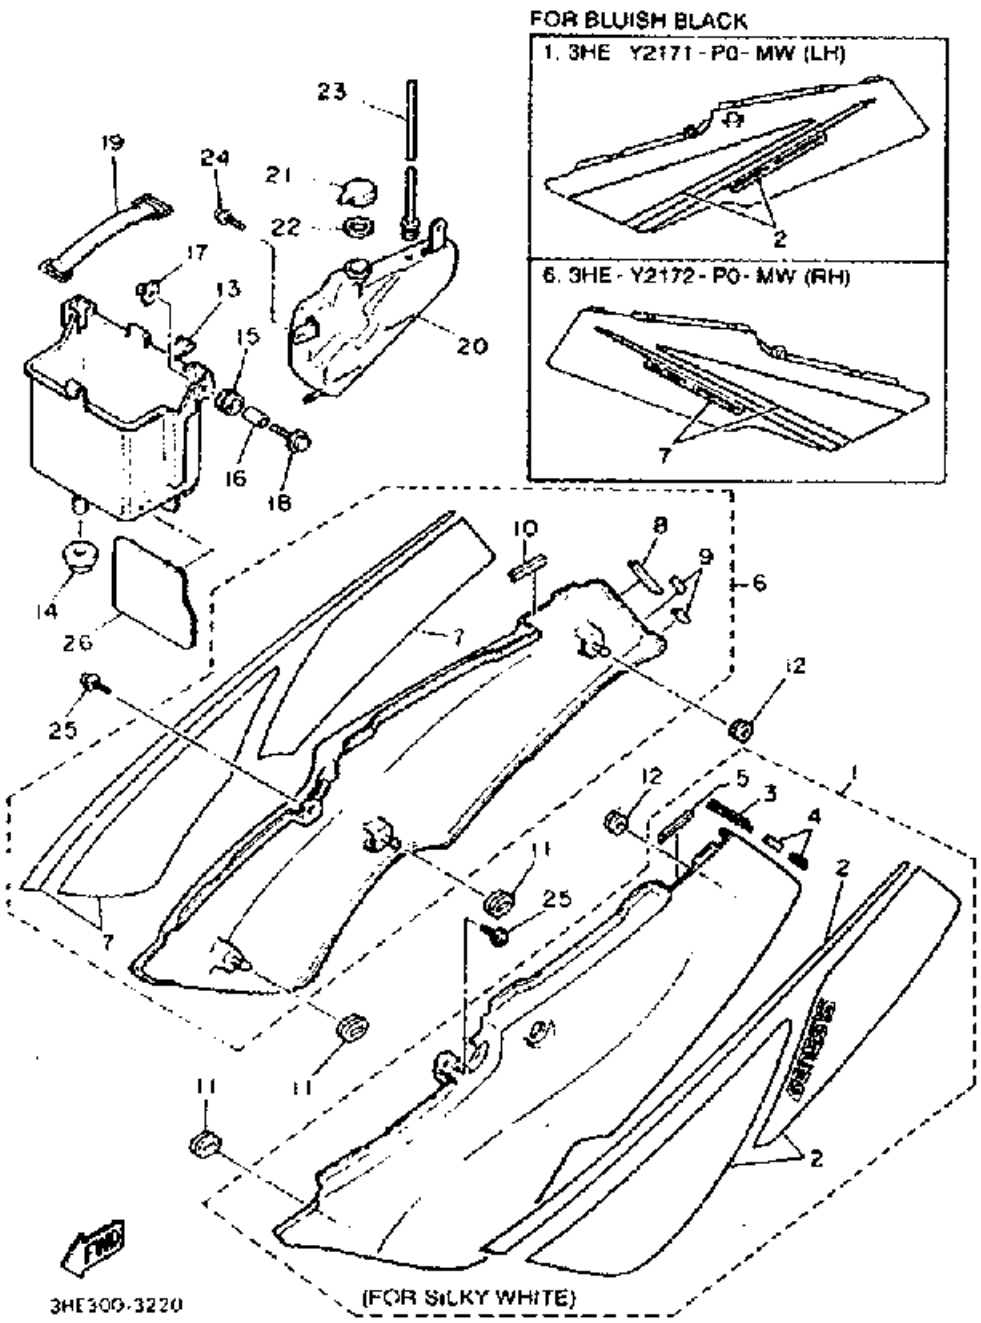


Ref No	Part No	Description
01	3HE-Y2171-N0-GE	Cover, Side 1
01	3HE-Y2171-P0-MW	Cover, Side 1
02	3HE-2173L-80-00	• . Graphic Set 1
02	3HH-2173L-50-00	• . Graphic Set 1
03	3HE-21735-00-00	• . Seal 2
04	3HE-21732-00-00	• . Seal 1
05	2GH-21735-00-00	• . Seal 2 1
06	3HE-Y2172-P0-MW	Cover, Side 2
07	3HE-2174L-80-00	• . Graphic Set 2
07	3HH-2174L-50-00	• . Graphic Set 2
08	3HE-21735-00-00	• . Seal 2
09	3HE-21732-00-00	• . Seal 1
10	2GH-21735-00-00	• . Seal 2
11	90480-01401-00	Grommet
12	90480-14052-00	Grommet
13	1WG-2177G-00-00	Box, Battery
14	90480-22362-00	Grommet
15	90480-14229-00	Grommet
16	90387-07391-00	Collar
17	31A-14477-00-00	Plate
18	90119-06097-00	Bolt, With Washer
19	120-82132-00-00	Pin, Band
20	1WG-21872-00-00	Stopper
21	4L0-21875-00-00	Cap
22	1AA-21874-00-00	Gasket
23	3GM-21816-00-00	Pipe 1
24	90159-06056-00	Screw, With Washer
25	90159-06033-00	Screw, With Washer
26	34X-21691-00-00	Flap

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

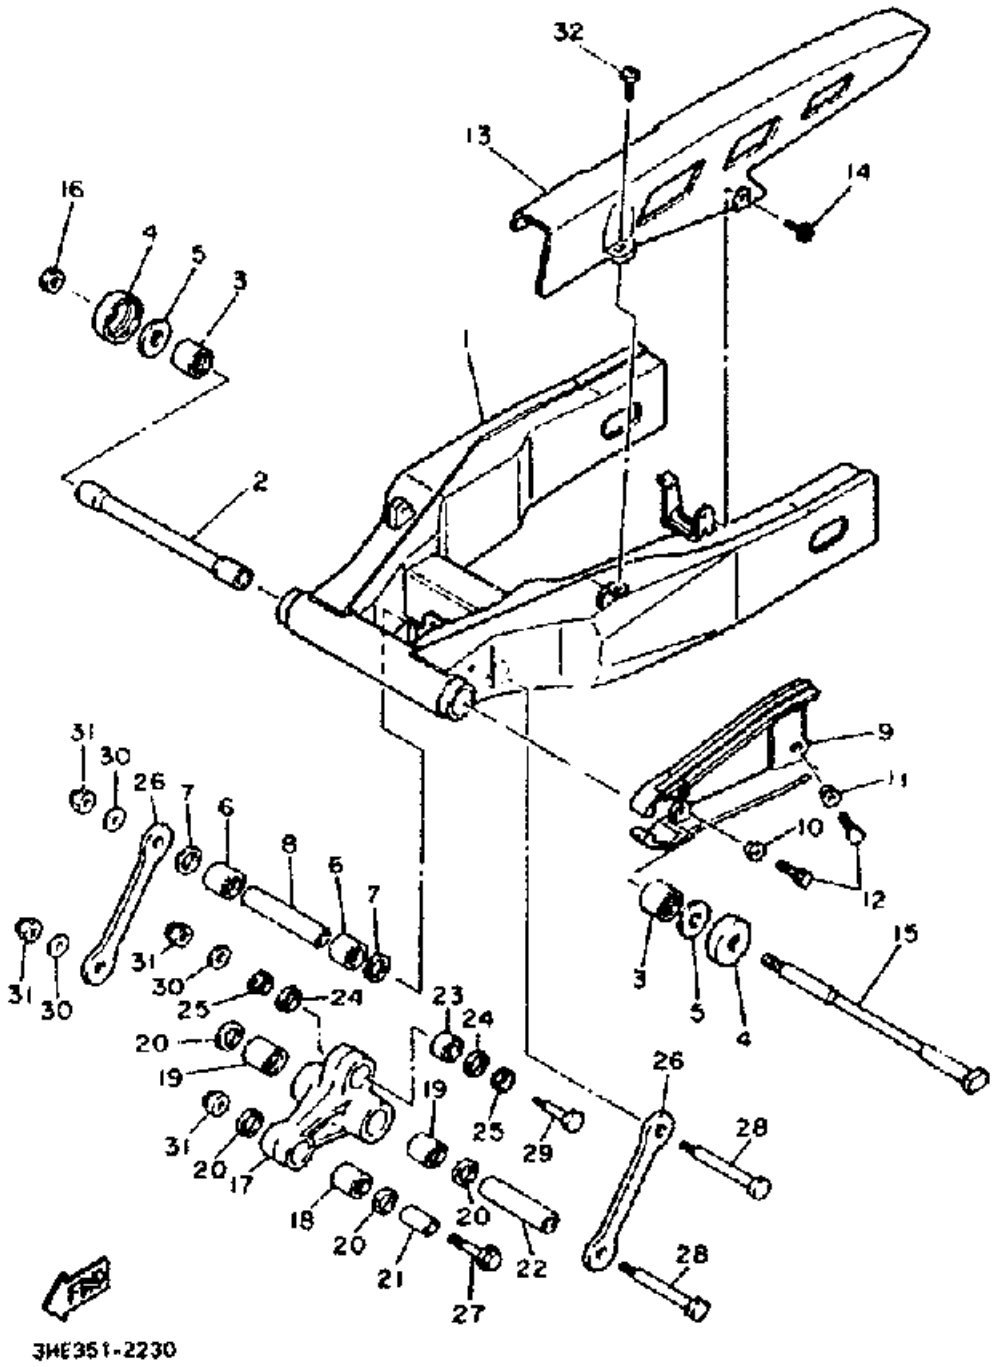

Ref No	Part No	Description
01	3HH-22110-00-T9	Rear Arm Comp.
02	33M-22184-00-00	Bush
03	93320-32403-00	Bearing
04	4X7-22129-00-00	Cover, Thrust 2
05	90201-161J3-00	Washer, Plate
06	93317-21746-00	Bearing
07	93109-17048-00	Oil Seal
08	90387-122R5-00	Collar
09	3HH-22151-00-00	Seal, Guard
10	90387-06681-00	Collar
11	90387-062M9-00	Collar
12	97313-06016-00	Bolt
13	3GM-22311-00-00	Case, Chain
14	90159-06084-00	Screw, With Washer
15	46X-22141-00-00	Shaft, Pivot
16	90185-14070-00	Nut, Self-locking
17	1WG-2217A-00-00	Arm, Relay
18	93317-31701-00	Bearing
19	93317-21746-00	Bearing
20	93109-17048-00	Oil Seal
21	90387-102R4-00	Collar
22	90387-122R5-00	Collar
23	93399-99919-00	Bearing
24	93101-16131-00	Oil Seal
25	90387-124W2-00	Collar
26	1WG-2217M-00-00	Arm 1
27	90105-10376-00	Bolt, Washer Based
28	90101-10658-00	Bolt
29	90109-10659-00	Bolt
30	90201-101J1-00	Washer, Plate
31	95611-10100-00	Nut, U
32	90159-06093-00	Screw, With Washer


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

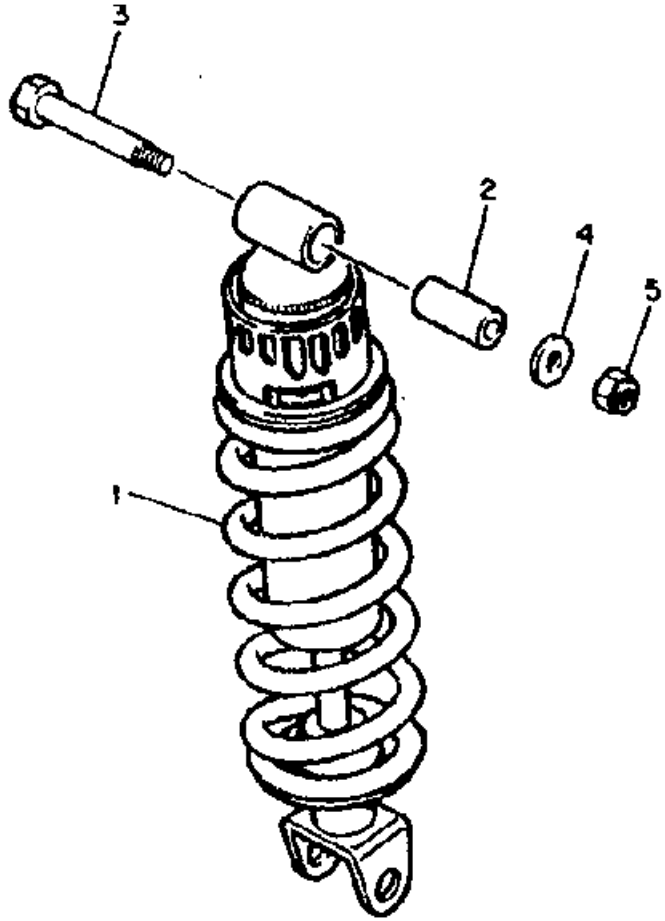

Ref No	Part No	Description
01	3HE-22210-10-00	Shock Absorber Assy, Rear
02	90387-124T2-00	Collar
03	90109-10554-00	Bolt
04	90201-101J1-00	Washer, Plate
05	95602-10100-00	Nut, U

3HE332-9250


Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

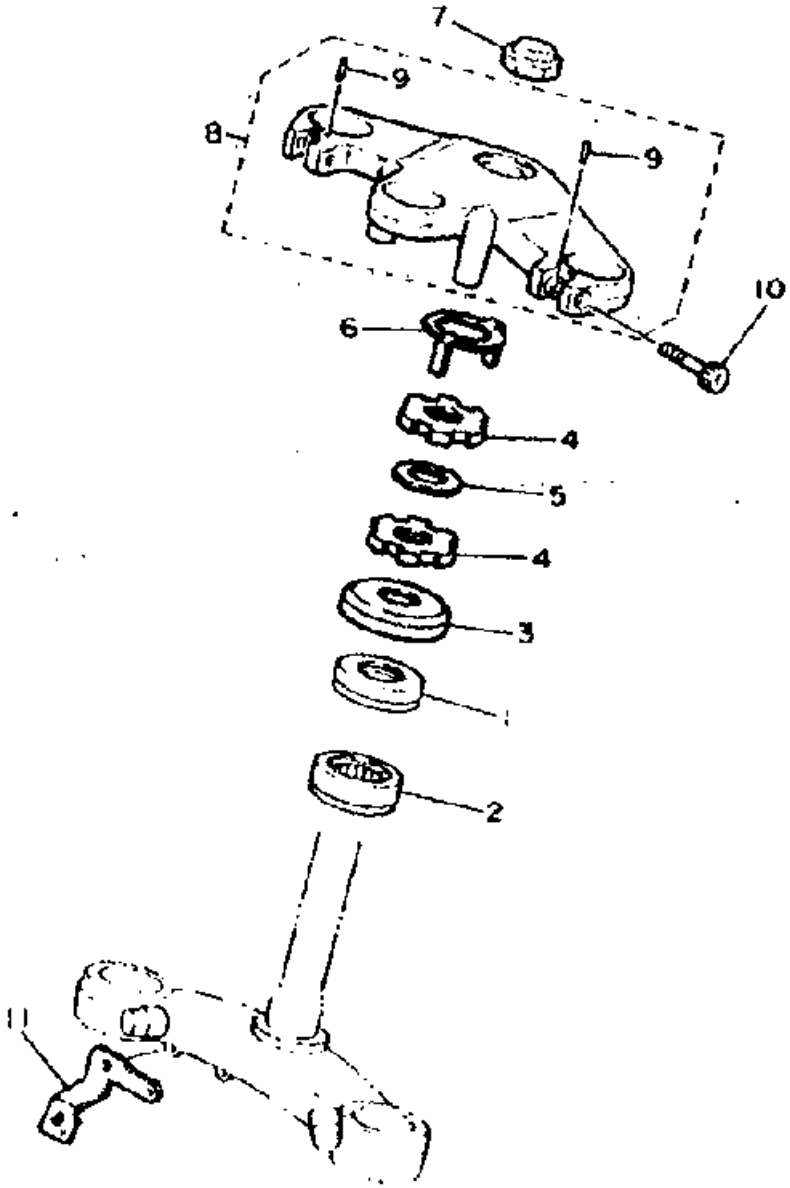

Ref No	Part No	Description
01	93332-00001-00	Bearing
02	93332-00008-00	Bearing
03	3HE-23416-00-00	Cover, Ball Race 2
04	90179-25033-00	Nut
05	90202-26142-00	Washer, Plate
06	26H-23418-01-00	Washer, Special
07	90176-22050-00	Nut, Crown
08	3HE-23435-00-00	Crown, Handle
09	91609-40210-00	• . Pin, Spring
10	91311-08030-00	Bolt
11	3HE-2317E-00-00	Stay


3HE351-1250

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

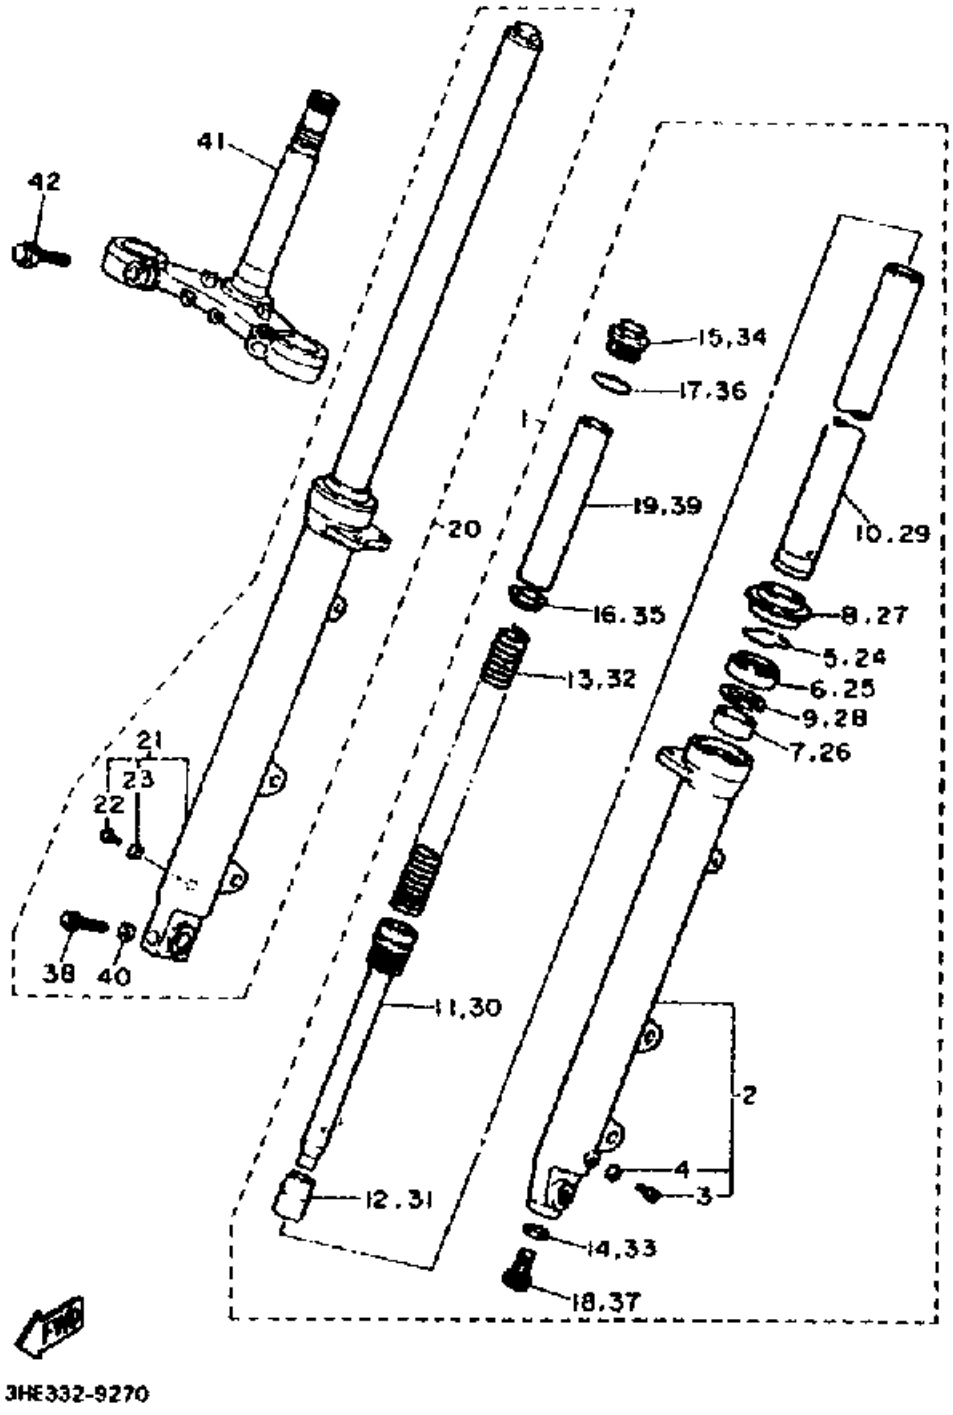


Ref No	Part No	Description
01	3HE-23102-10-00	Front Fork Assy (l.h)
02	3HE-23126-10-00	• . Tube, Outer (left)
03	4H7-23119-00-00	•• .. Plug, Drain
04	122-23129-00-00	•• .. Gasket, Drain Plug
05	3R4-23153-00-00	• . Ring, Snap
06	3EN-23145-00-00	• . Oil Seal
07	2YK-23125-00-00	• . Metal, Slide 1
08	3EN-23144-00-00	• . Seal, Dust
09	4V2-23146-L0-00	• . Washer, Oil Seal
11	3HE-23170-00-00	• . Cylinder Comp., Front Fork
12	2YK-23173-00-00	• . Spindle, Taper
13	3HE-23141-00-00	• . Spring, Front Fork
14	509-23158-L0-00	• . Gasket
15	3EN-23111-00-00	• . Bolt, Cap
16	1FK-23142-00-00	• . Seat, Spring Upper
17	1W4-23114-L0-00	• . Gasket
18	278-23181-50-00	• . Bolt, Hexagon Socket Head
19	1WG-23118-00-00	• . Spacer
20	3HE-23103-10-00	Front Fork Assy (r.h)
21	3HE-23136-10-00	• . Tube, Outer (right)
22	4H7-23119-00-00	•• .. Plug, Drain
23	122-23129-00-00	•• .. Gasket, Drain Plug
24	3R4-23153-00-00	• . Ring, Snap
25	3EN-23145-00-00	• . Oil Seal
26	2YK-23125-00-00	• . Metal, Slide 1
27	3EN-23144-00-00	• . Seal, Dust
28	4V2-23146-L0-00	• . Washer, Oil Seal
29	3HE-23110-00-00	• . Inner Tube Comp.1
30	3HE-23170-00-00	• . Cylinder Comp., Front Fork
31	2YK-23173-00-00	• . Spindle, Taper
32	3HE-23141-00-00	• . Spring, Front Fork
33	509-23158-L0-00	• . Gasket
34	3EN-23111-00-00	• . Bolt, Cap
35	1FK-23142-00-00	• . Seat, Spring Upper
36	1W4-23114-L0-00	• . Gasket
37	278-23181-50-00	• . Bolt, Hexagon Socket Head
38	1WG-23128-00-00	• . Bolt, Axle Holder
39	1WG-23118-00-00	• . Spacer
40	90201-08085-00	• . Washer, Plate
41	1WG-23340-00-00	Under Bracket Comp.
42	3Y1-23346-00-00	Bolt 1

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

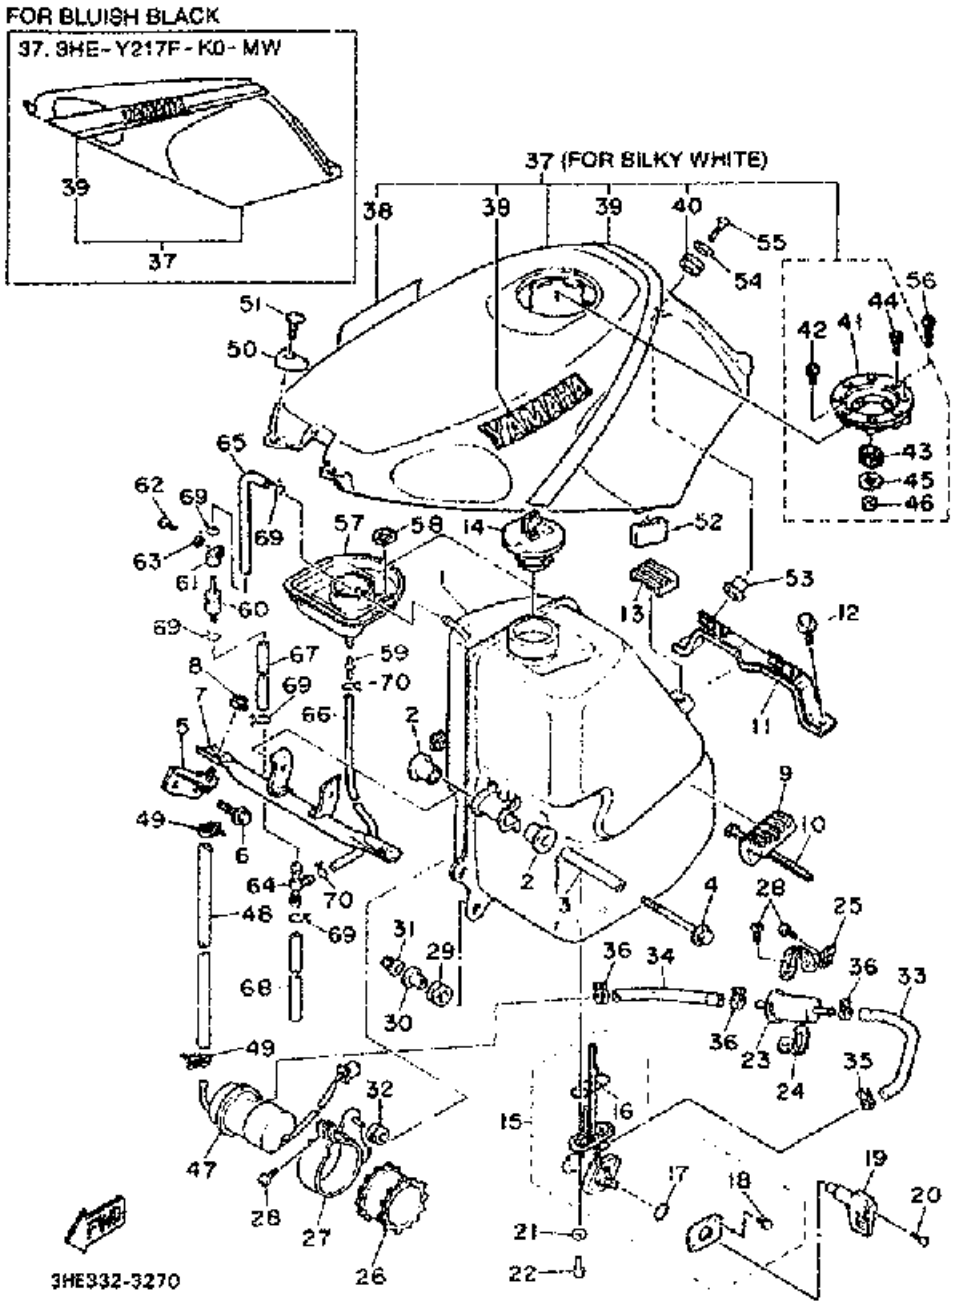


Ref No	Part No	Description
01	3HE-24110-00-00	Fuel Tank Comp.
02	1HX-24181-00-00	Damper, Locating 1
03	90387-06380-00	Collar
04	91002-06080-00	Bolt, Flange
05	3EN-21346-00-00	Bracket, Tank Fitting
06	91001-06016-00	Bolt, Flange
07	1WG-21345-00-00	Bracket, Tank Fitting
08	90179-08410-00	Nut
09	1HX-24182-00-00	Damper, Locating 2
10	90465-13169-00	Clamp
11	1WG-21348-00-00	Brackt, Tank Fitting
12	91001-06016-00	Bolt, Flange
13	1WG-24185-00-00	Damper, Locating 5
14	3HE-24602-00-00	Cap Assy
15	3HE-24500-00-00	Fuel Cock Assy 1
16	4X8-24512-00-00	• . Gasket
17	3AJ-24534-00-00	• . Seal, Cock
18	98503-03008-00	• . Screw, Pan Head
19	3HE-24524-00-00	Lever, Cock
20	98606-04016-00	Screw, Oval Head
21	90202-05193-00	Washer, Plate
22	90149-06011-00	Screw
23	1FK-24560-00-00	Filter Assy
24	26H-24568-00-00	Band, Filter
25	1WG-24566-00-00	Bracket, Filter
26	1WG-24398-01-00	Band 1
27	3HE-24491-00-00	Bracket, Fuel Pump
28	98906-05014-00	Screw, Bind
29	90480-14229-00	Grommet
30	90387-07391-00	Collar
31	95706-06500-00	Nut, Flange
32	90480-11454-00	Grommet
33	1WG-24311-00-00	Pipe, Fuel 1
34	90445-137F4-00	Hose
35	90467-10135-00	Clip
36	90467-11044-00	Clip
37	3HE-Y217F-N0-0Y	Cover, Top (fuel Tank)
37	3HE-Y217F-K0-MW	Cover, Top (fuel Tank)
38	99226-00260-00	• . Emblem, Yamaha
39	3HE-24244-90-00	• . Graphic, Fuel Tank 1
39	3HH-24244-50-00	• . Graphic, Fuel Tank 1
40	90480-18418-00	• . Grommet
41	3HE-24614-00-00	• . Plate, Cap
42	90110-06134-00	• . Bolt, Hexagon Socket Head
43	1WG-24665-00-00	• . Damper
44	90110-06133-00	• . Bolt, Hexagon Socket Head
45	90201-06067-00	• . Washer, Plate
46	95303-06600-00	• . Nut
47	3EN-13907-00-00	Fuel Pump Comp.
48	90445-146F9-00	Hose
49	90467-13123-00	Clip
50	1WG-24183-00-00	Damper, Locating 3
51	90154-06040-00	Screw, Binding
52	4X7-21719-00-00	Grommet
53	90387-112R6-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

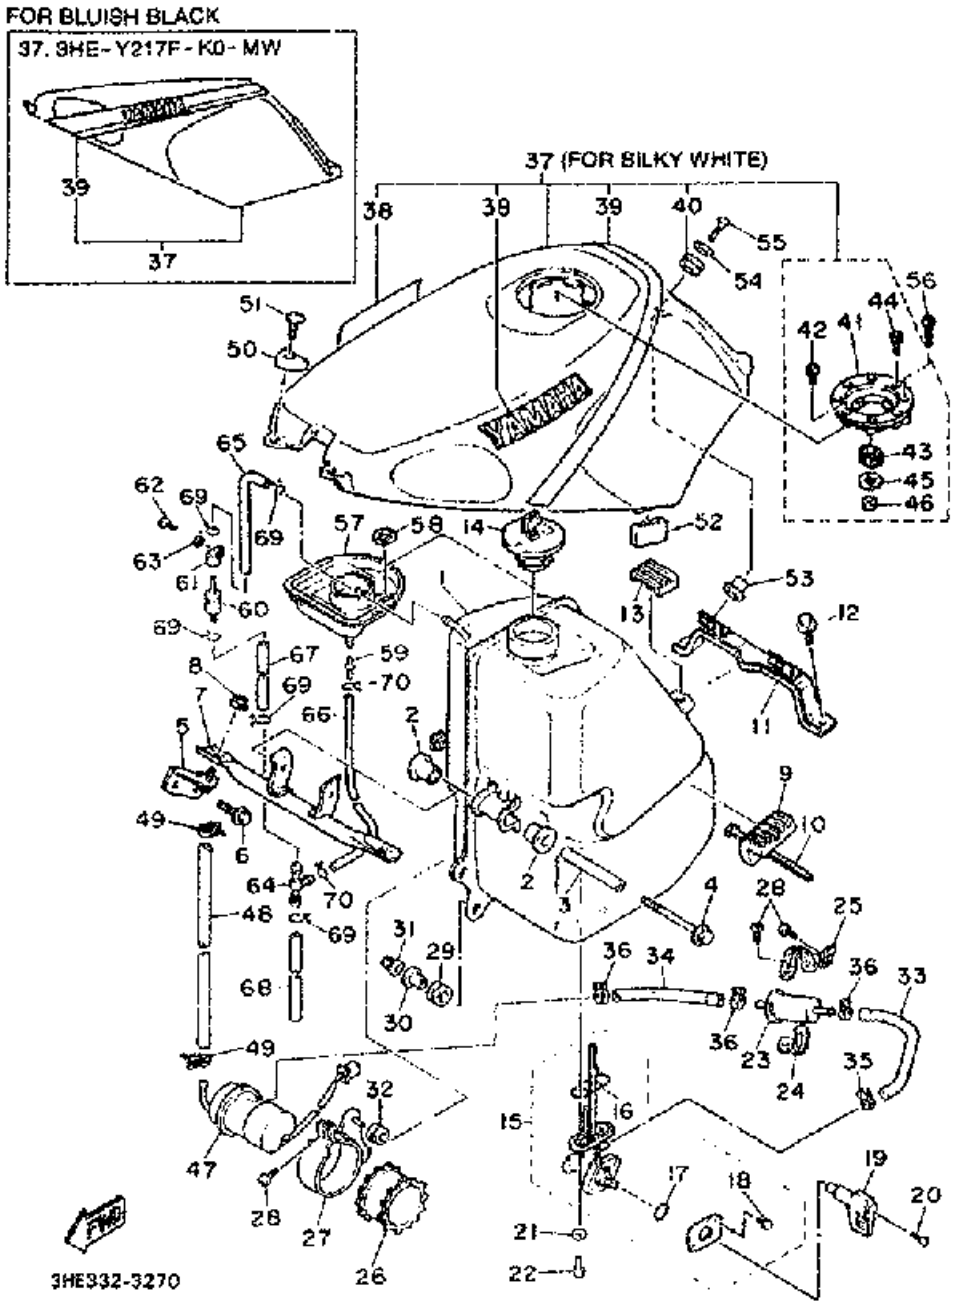


Ref No	Part No	Description
54	90201-06697-00	Washer, Plate
55	98501-06025-00	Screw, Pan Head
56	90110-06170-00	Bolt, Hexagon Socket Head
57	1WG-2414A-00-00	Cover, Filler
58	1WG-24622-00-00	Washer, Ring
59	90560-03220-00	Spacer
60	25H-24180-00-00	Roll Over Valve Assy
61	90461-15100-00	Clamp
62	98501-05010-00	Screw, Pan Head
63	92901-05600-00	Washer, Plate
64	90413-05011-00	Way 3
65	3FH-24313-00-00	Pipe 3
66	90445-084F5-00	Hose
67	90445-11626-00	Hose
68	90445-110G5-00	Hose
69	90467-10008-00	Clip
70	90467-08021-00	Clip

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

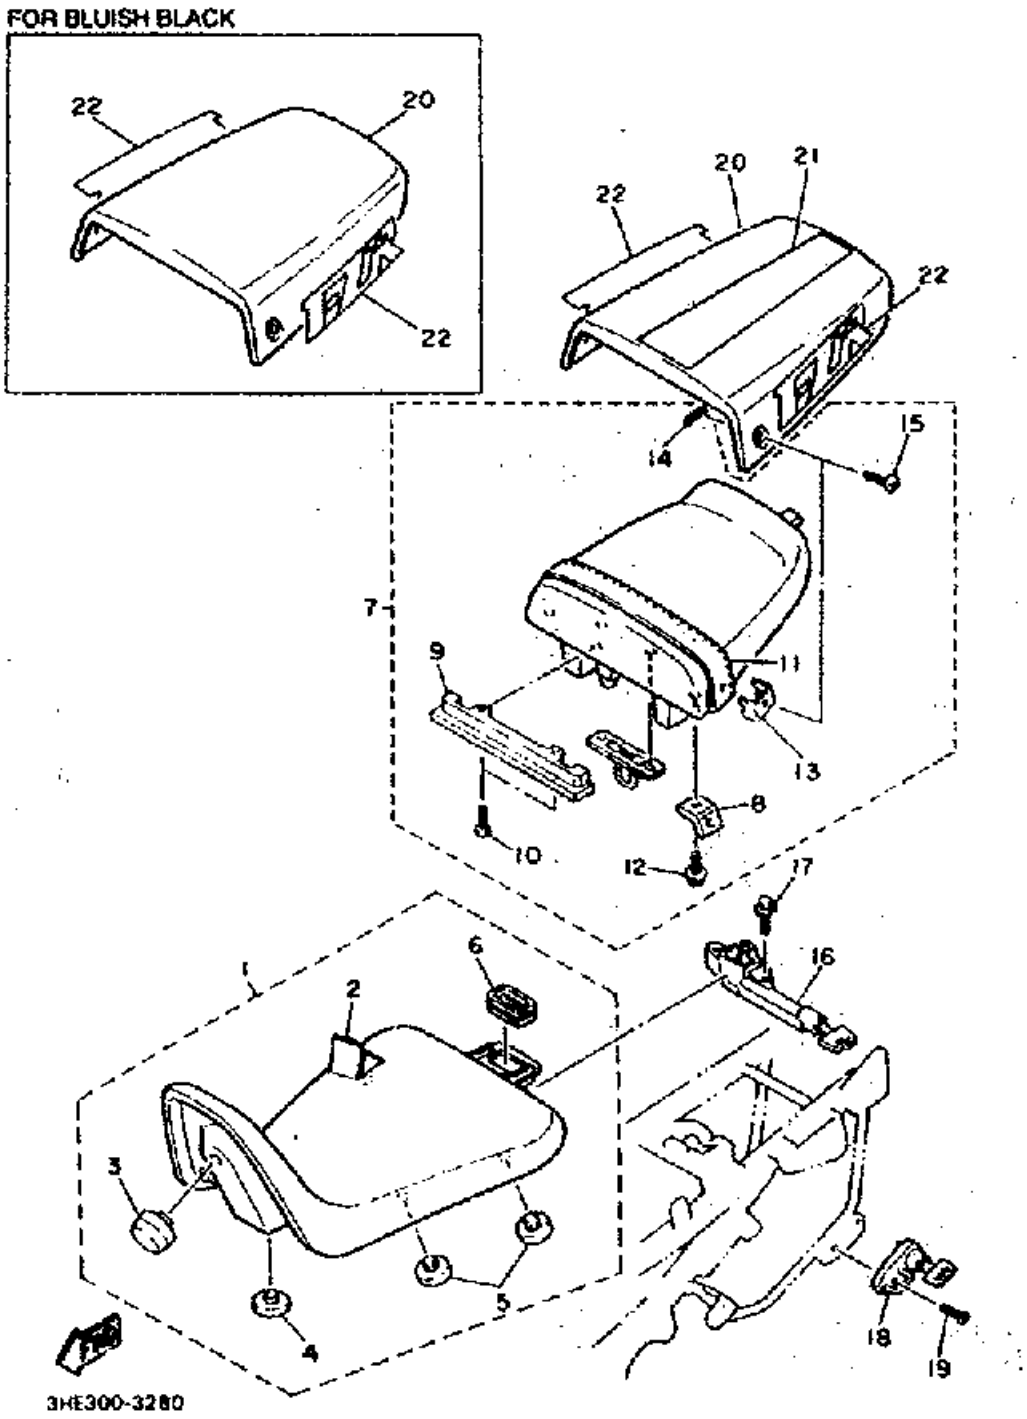


Ref No	Part No	Description
01	3HE-24710-00-00	Single Seat Assy
02	3HE-24711-00-00	• . Cover, Single Seat
03	1T4-24741-00-00	• . Pad, Seat
04	116-24741-00-00	• . Pad, Seat
05	22W-24741-00-00	• . Pad, Seat
06	3HE-24742-00-00	• . Grommet
07	3HE-24750-00-00	Tandem Seat Assy
08	4K0-24748-00-00	• . Bracket, Seat
09	3HE-24796-00-00	• . Cover
10	90154-05032-00	• . Screw, Binding
11	3HE-24734-00-00	• . Band, Seat
12	95811-06016-00	• . Bolt, Flange
13	4L0-24712-11-00	• . Plate
14	90468-10050-00	• . Clip
15	47X-24739-00-00	• . Bolt, Seat Fitting
16	3HE-24705-02-00	Seat Lock Assy
17	91002-06030-00	Bolt, Flange
18	26H-21308-00-00	Helmet Hanger Assy
19	90149-06150-00	Screw
20	3HE-24791-00-GE	Cover, Seat Back
20	3HE-24791-00-MW	Cover, Seat Back
21	3HE-2478M-71-00	Graphic, Seat
22	3HE-2467G-80-00	Emblem 2
22	3HH-24786-10-00	Emblem

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

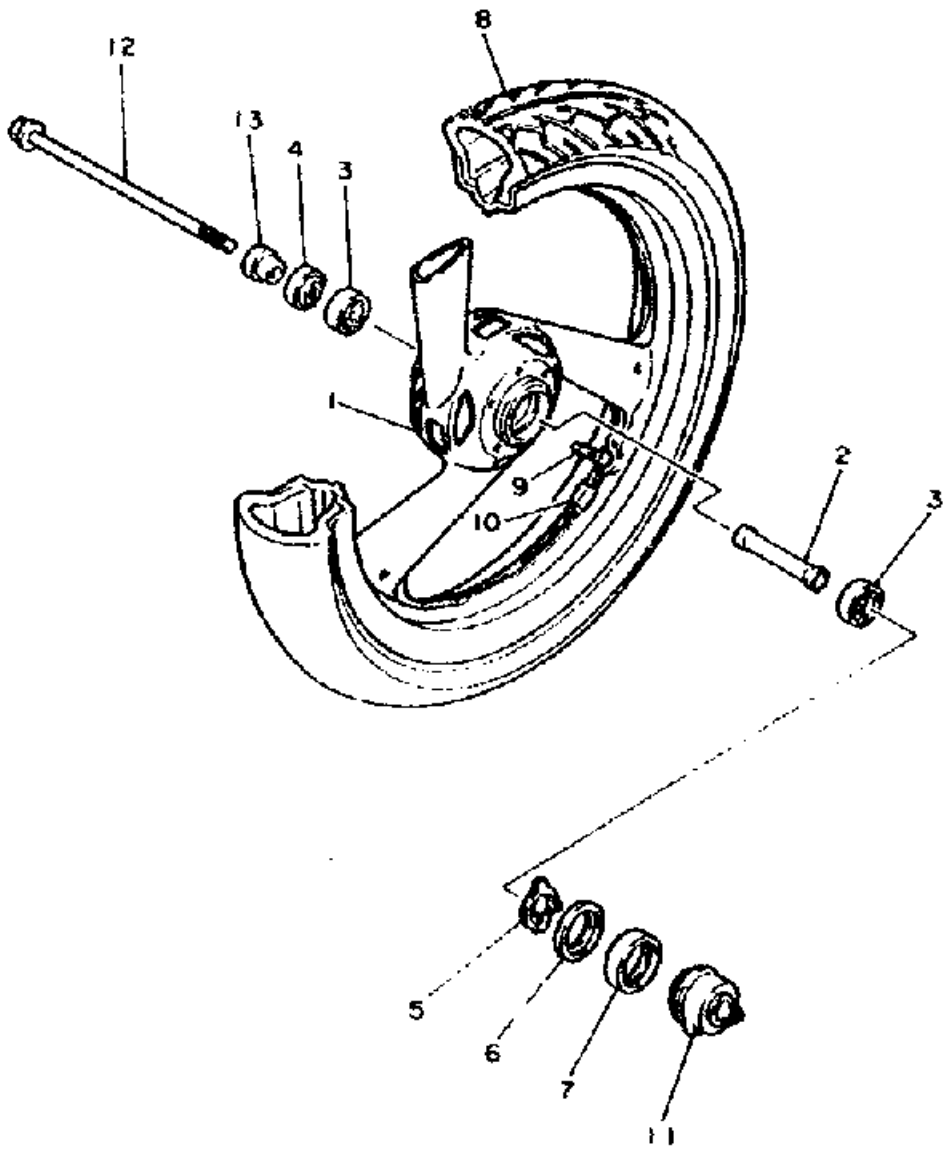


Ref No	Part No	Description
01	3HE-25168-00-P0	Cast Wheel, Front
01	3HE-25168-00-TR	Cast Wheel, Front
02	90560-15314-00	Spacer
03	93306-30203-00	Bearing (b6302z)
04	93102-22014-00	Oil Seal
05	341-25149-00-00	Clutch, Meter
06	341-25846-00-00	Retainer, Clutch
07	93106-45017-00	Oil Seal
09	93900-00030-00	Valve, Rim
10	29L-25398-00-00	Balancer, Wheel (10g)
10	29L-25398-10-00	Balancer, Wheel (20g)
10	29L-25398-20-00	Balancer, Wheel (30g)
11	1WG-25190-00-00	Gear Unit Assy
12	42X-25181-00-00	Axle, Wheel
13	90387-15550-00	Collar

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

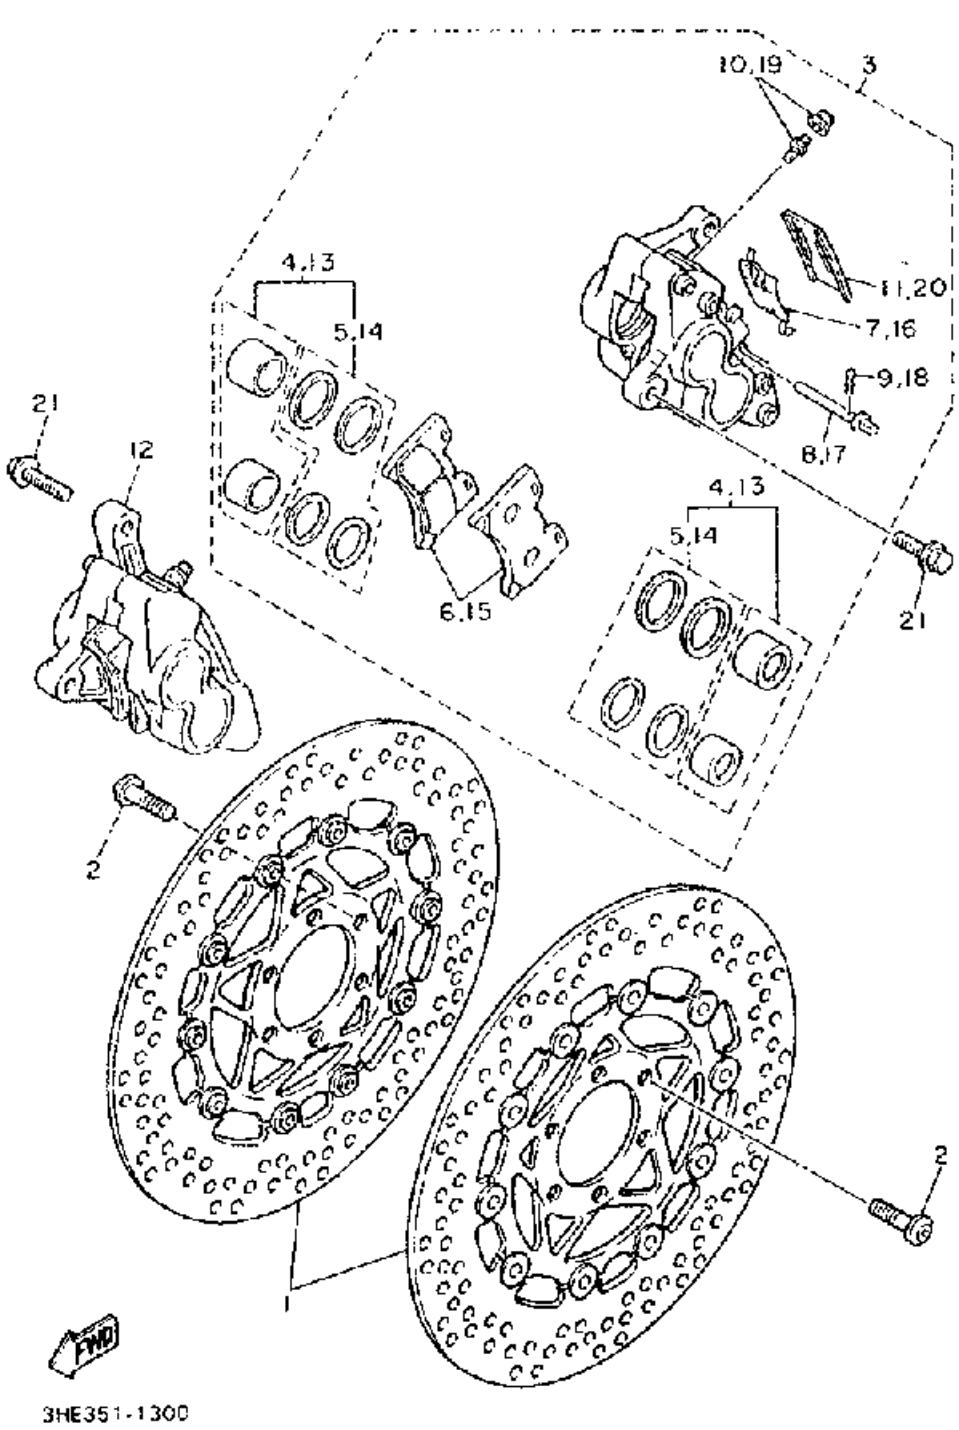


Ref No	Part No	Description
01	3RG-2581T-00-00	Disc Brake Assy (l)
02	90109-08718-00	Bolt
03	3HE-2580T-51-00	Caliper Assy (left)
04	3HE-W0057-50-00	• . Piston Assy, Caliper
05	3HE-W0047-50-00	•• .. Caliper Seal Kit
06	3GM-W0045-01-00	• . Brake Pad Kit
07	3GM-25919-00-00	• . Support, Pad
08	3HE-25924-00-00	• . Pin, Pad
09	3GM-25925-00-00	• . Clip
10	1J3-W0048-00-00	• . Bleed Screw Kit Entluftungsschraubensatz
11	1KT-25836-00-00	• . Cover, Dust
12	3HE-2580U-51-00	Caliper Assy (right)
13	3HE-W0057-50-00	• . Piston Assy, Caliper
14	3HE-W0047-50-00	•• .. Caliper Seal Kit
15	3GM-W0045-01-00	• . Brake Pad Kit
17	3HE-25924-00-00	• . Pin, Pad
18	3GM-25925-00-00	• . Clip
19	1J3-W0048-00-00	• . Bleed Screw Kit Entluftungsschraubensatz
20	1KT-25836-00-00	• . Cover, Dust
21	90105-10308-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

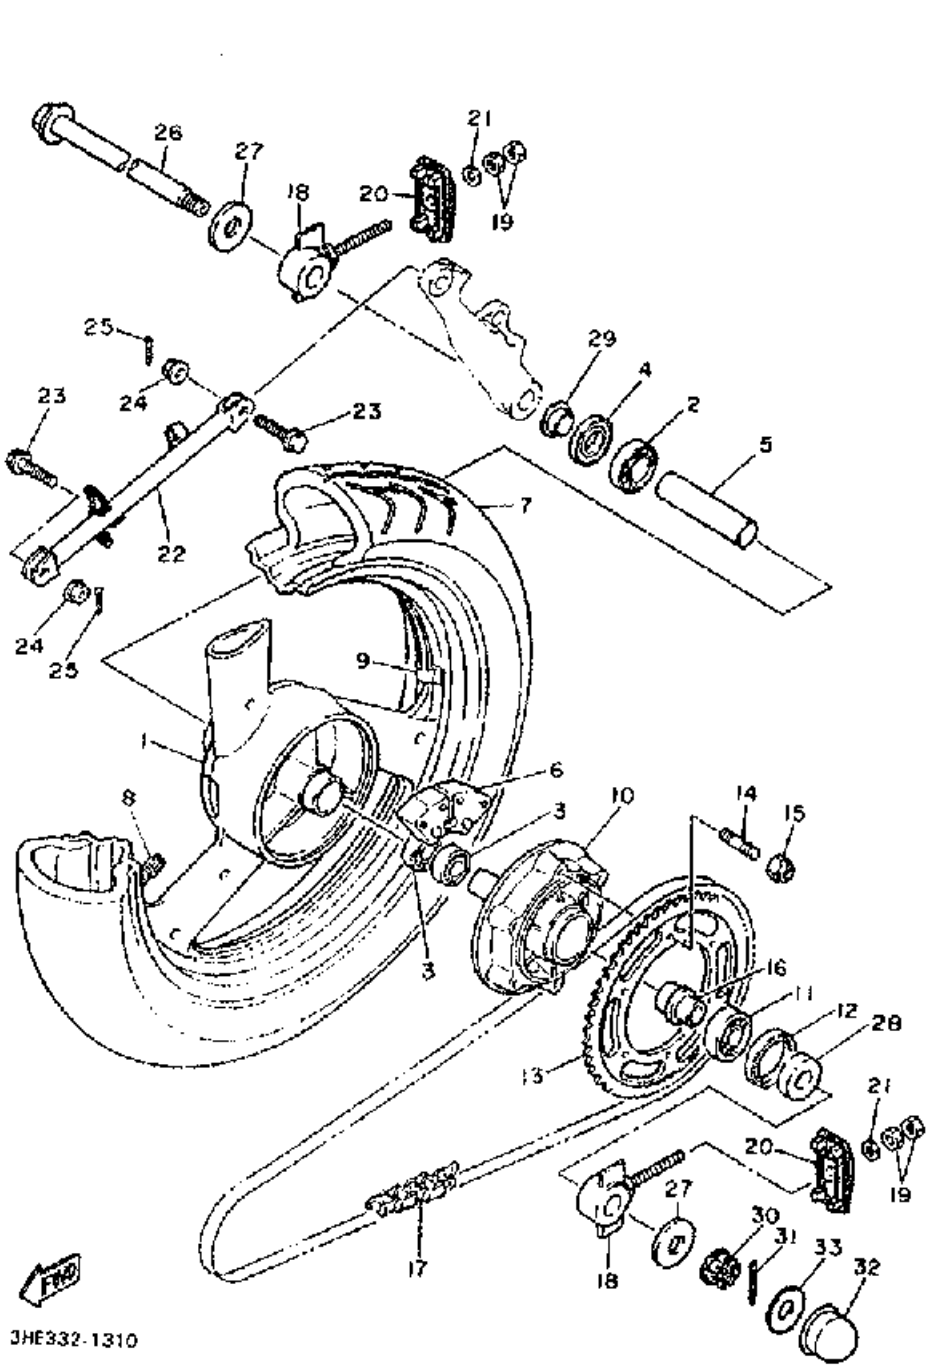


Ref No	Part No	Description
01	3HE-25338-50-P0	Cast Wheel, Rear
01	3HE-25338-50-TR	Cast Wheel, Rear
02	93306-30306-00	Bearing (b6303)
03	93306-20310-00	Bearing (b6203du)
04	93102-25044-00	Oil Seal
05	90387-174V8-00	Collar
06	1UF-25364-00-00	Damper
08	93900-00030-00	Valve, Rim
09	29L-25398-00-00	Balancer, Wheel (10g)
09	29L-25398-10-00	Balancer, Wheel (20g)
09	29L-25398-20-00	Balancer, Wheel (30g)
10	1UF-25366-00-00	Clutch, Hub
11	93306-37207-00	Bearing
12	93105-42024-00	Oil Seal
13	1AE-25445-21-00	Sprocket, Driven (45z)
14	90116-10485-00	Bolt, Stud
15	95601-10200-00	Nut, Self-locking
16	90387-177K0-00	Collar
17	94581-42106-00	Chain (d.i.d. 50 Va-6-106l)
18	3HH-25388-00-00	Puller, Chain 1
19	95303-08600-00	Nut
20	3HH-22174-00-00	End 1
21	92901-08600-00	Washer, Plate
22	3HE-25371-50-00	Bar, Tension
23	90105-08321-00	Bolt, Washer Based
24	95701-08321-00	Nut, Flange
25	91401-20015-00	Pin, Cotter
26	3HE-25381-00-00	Axle, Wheel
27	90201-177K7-00	Washer, Plate
28	90387-177Y5-00	Collar
29	90387-173L5-00	Collar
30	90171-16024-00	Nut, Castle
31	91401-30030-00	Pin, Cotter
32	521-25188-00-00	Cap
33	90209-16138-00	Washer

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

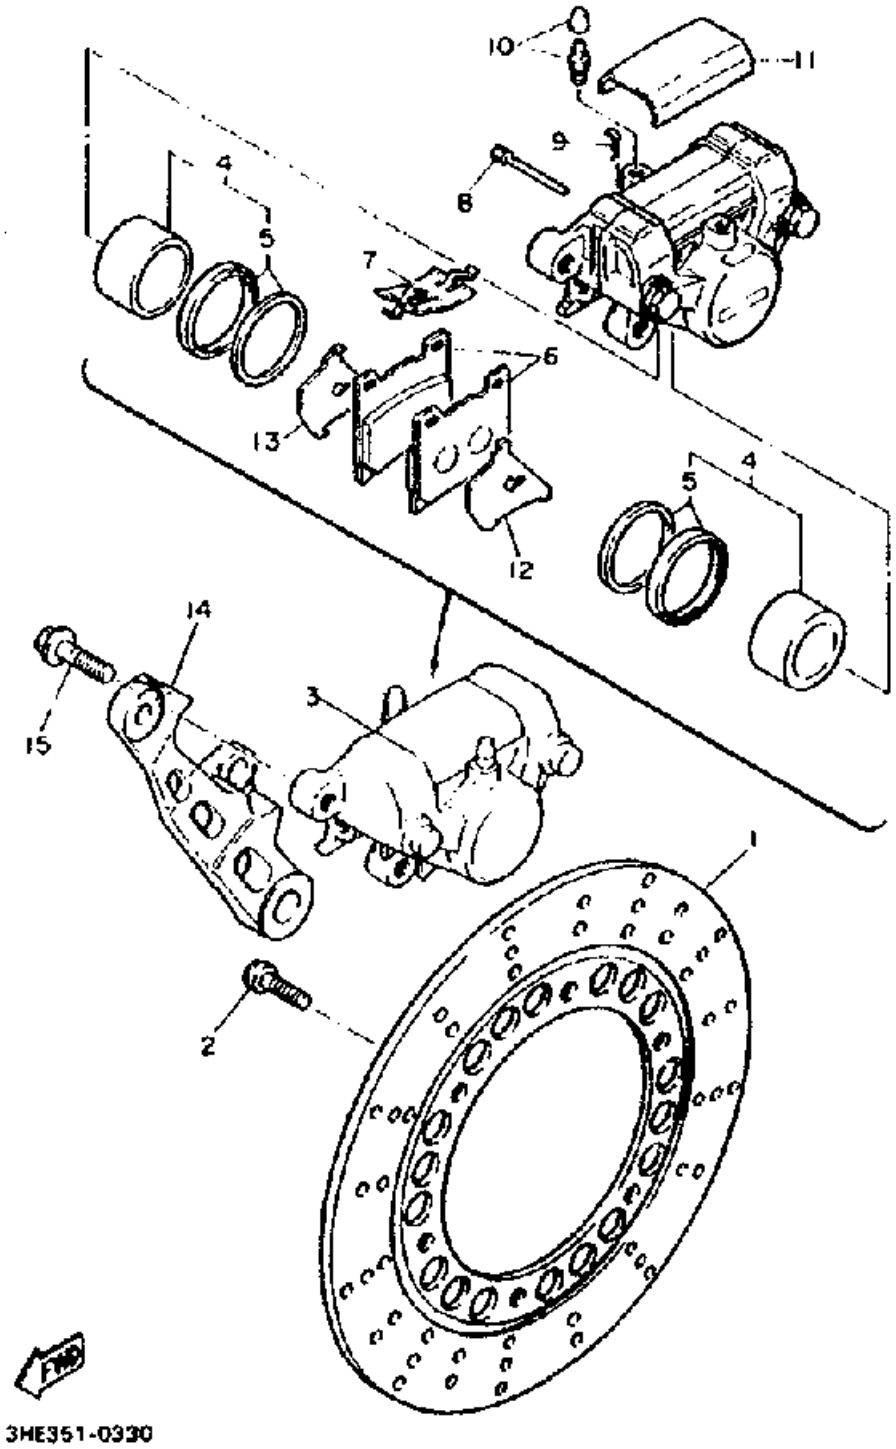


Ref No	Part No	Description
01	2NX-25831-00-00	Disc, Brake (rechts)
02	90109-08718-00	Bolt
03	3HE-2580W-00-00	Caliper Assy, Rear 2
04	31A-W0057-00-00	• . Piston Assy, Caliper
05	31A-W0047-00-00	•• .. Caliper Seal Kit
06	1FK-W0046-01-00	• . Brake Pad Kit 2
07	1WG-25919-00-00	• . Support, Pad
08	3HE-25924-00-00	• . Pin, Pad
09	3HE-25925-00-00	• . Clip
10	1J3-W0048-00-00	Bleed Screw Kit Entluftungsschraubensatz
11	51J-25836-00-00	• . Cover, Dust
12	1FK-25827-00-00	• . Shim, Caliper
13	1FK-25828-00-00	• . Shim, Caliper
14	3HE-25819-01-00	Bracket, Caliper
15	90105-10308-00	Bolt, Washer Based

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

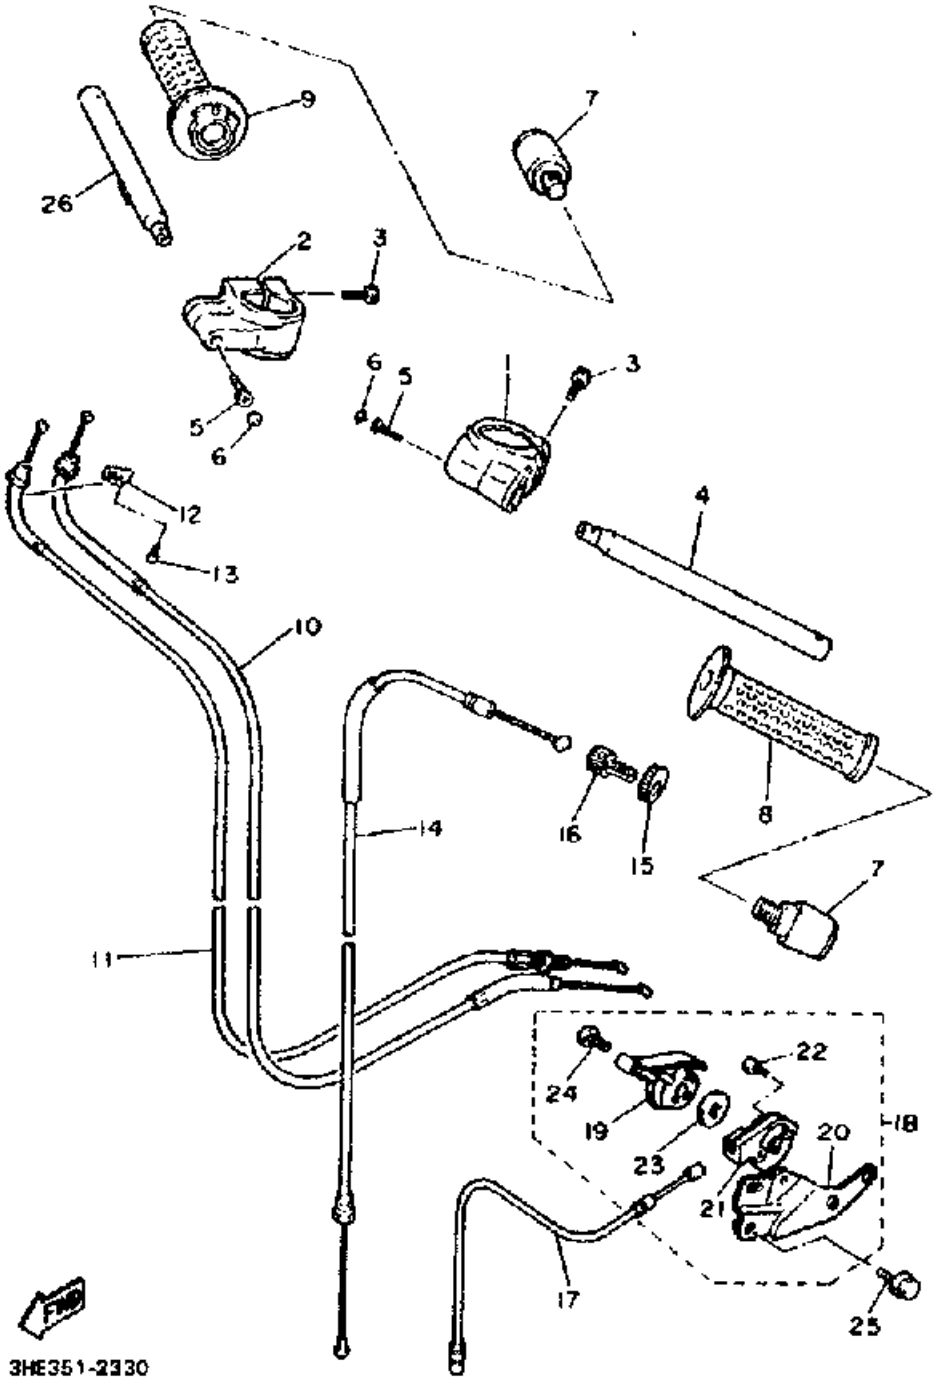


Ref No	Part No	Description
01	3HE-26121-00-00	Handlebar (left)
02	3HE-26122-00-00	Handlebar (right)
03	91311-06020-00	Bolt
04	3HE-26111-00-00	Handlebar
05	91316-08025-00	Bolt
06	341-23469-00-00	Cap, Bolt
07	51J-26246-00-00	End, Grip
08	1KG-26241-00-00	Grip (left)
09	3FH-26240-00-00	Grip Assy
10	3EN-26311-00-00	Cable, Throttle 1
11	3HE-26312-00-00	Cable, Throttle 2
12	5H0-26393-00-00	Holder
13	98506-05008-00	Screw, Pan Head
14	3HE-26335-01-00	Cable, Clutch
15	90179-08316-00	Nut
16	90123-08083-00	Bolt
17	3EN-26331-00-00	Cable, Starter 1
18	3HE-83940-00-00	Starter Assy
19	1WG-83941-00-00	• . Lever, Starter
20	3HE-28357-00-00	• . Stay 2
21	1WG-83942-00-00	• . Cover, Starter
22	98906-03006-00	• . Screw, Bind
23	90209-10131-00	• . Washer
24	98906-06008-00	• . Screw, Bind
25	95826-06020-00	Bolt, Flange
26	3HE-26112-00-00	Bar, Handle

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

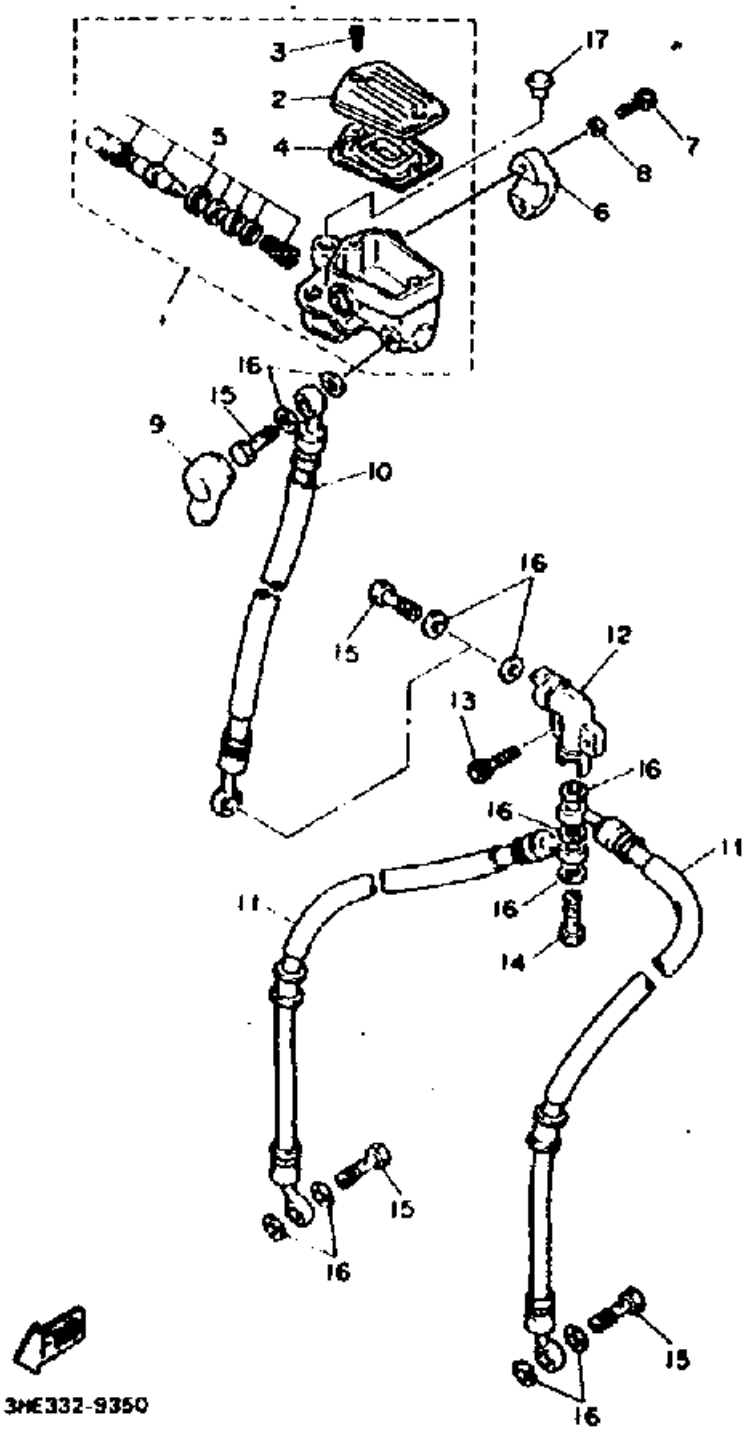


Ref No	Part No	Description
01	3HE-2583T-00-00	Master Cylinder Assy
02	3HE-25852-00-00	• . Cap, Reservoir
03	98706-04012-00	• . Screw, Flat Head
04	36Y-25854-00-00	• . Diaphragm, Reservoir
05	36Y-W0041-00-00	• . Cylinder Kit, Master
06	36Y-25867-00-00	Bracket, Master Cylinder
07	91316-06025-00	Bolt
08	92906-06100-00	Washer, Spring
09	4L0-25862-00-00	Boot, Master Cylinder
10	3HE-25872-01-00	Hose, Brake 1
11	3HE-25873-11-00	Hose, Brake 2
12	11U-25885-00-00	Joint
13	91316-06025-00	Bolt
14	90401-10044-00	Bolt, Union
15	90401-10034-00	Bolt, Union
16	90201-10018-00	Washer, Plate
17	90338-09012-00	Plug

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

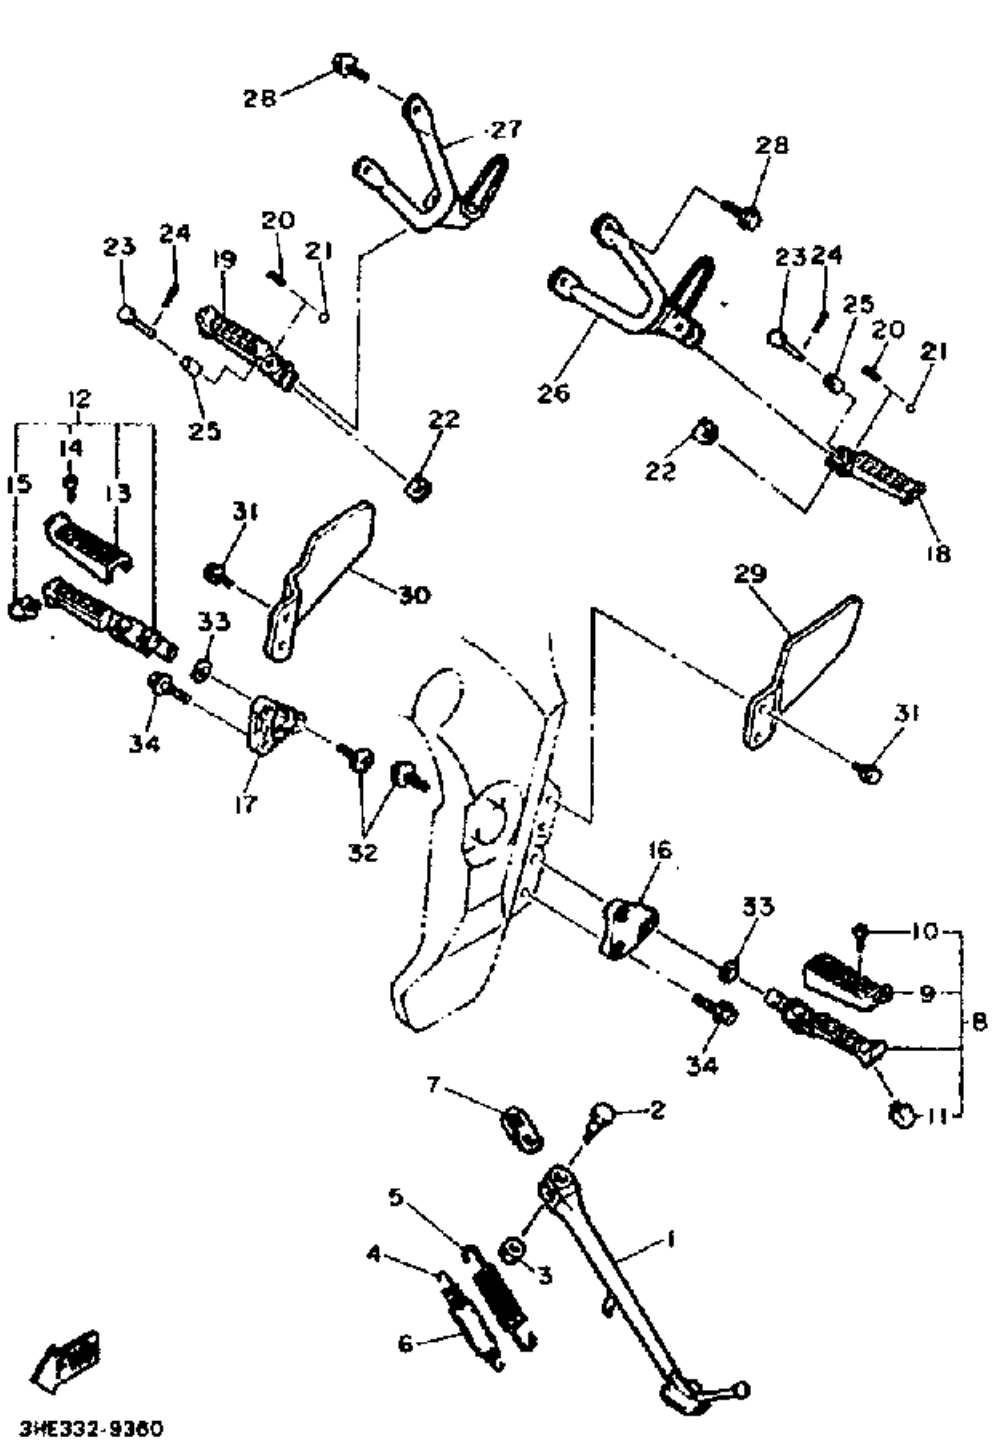


Ref No	Part No	Description
01	2KT-27311-00-00	Stand, Side
02	90109-10474-00	Bolt
03	90185-10037-00	Nut, Self-locking
04	90506-18224-00	Spring, Tension
05	90506-26225-00	Spring, Tension
06	1TX-27351-00-00	Guide, Side Stand
07	2KT-27315-00-00	Link, Side Stand
08	3HE-27410-00-00	Front Footrest Assy (left)
09	2GH-27413-00-00	• . Cover, Footrest
10	90157-05079-00	• . Screw, Pan Head
11	3HE-27435-00-00	• . Bolt
12	3HE-27420-00-00	Front Footrest Assy (right)
13	2GH-27413-00-00	• . Cover, Footrest
14	90157-05079-00	• . Screw, Pan Head
15	3HE-27435-00-00	• . Bolt
16	3HE-27442-00-00	Bracket 2
17	3HE-27443-00-00	Bracket 3
18	1HX-27431-00-00	Footrest, Rear 1
19	1HX-27441-00-00	Footrest, Rear 2
20	90501-12743-00	Spring, Compression
21	93501-04011-00	Ball
22	1HX-27437-00-00	Washer, Special
23	91701-06035-00	Pin, Clevis
24	91401-20015-00	Pin, Cotter
25	90387-064H8-00	Collar
26	3HE-2741L-00-00	Bracket 4
27	3HE-2742L-01-00	Bracket 5
28	95821-08025-00	Bolt, Flange
29	3HE-27445-01-00	Plate 1
30	3HE-27446-01-00	Plate 2
31	95023-06016-00	Bolt, Flange
32	90109-103A9-00	Bolt
33	90206-17084-00	Washer, Wave
34	95023-08025-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

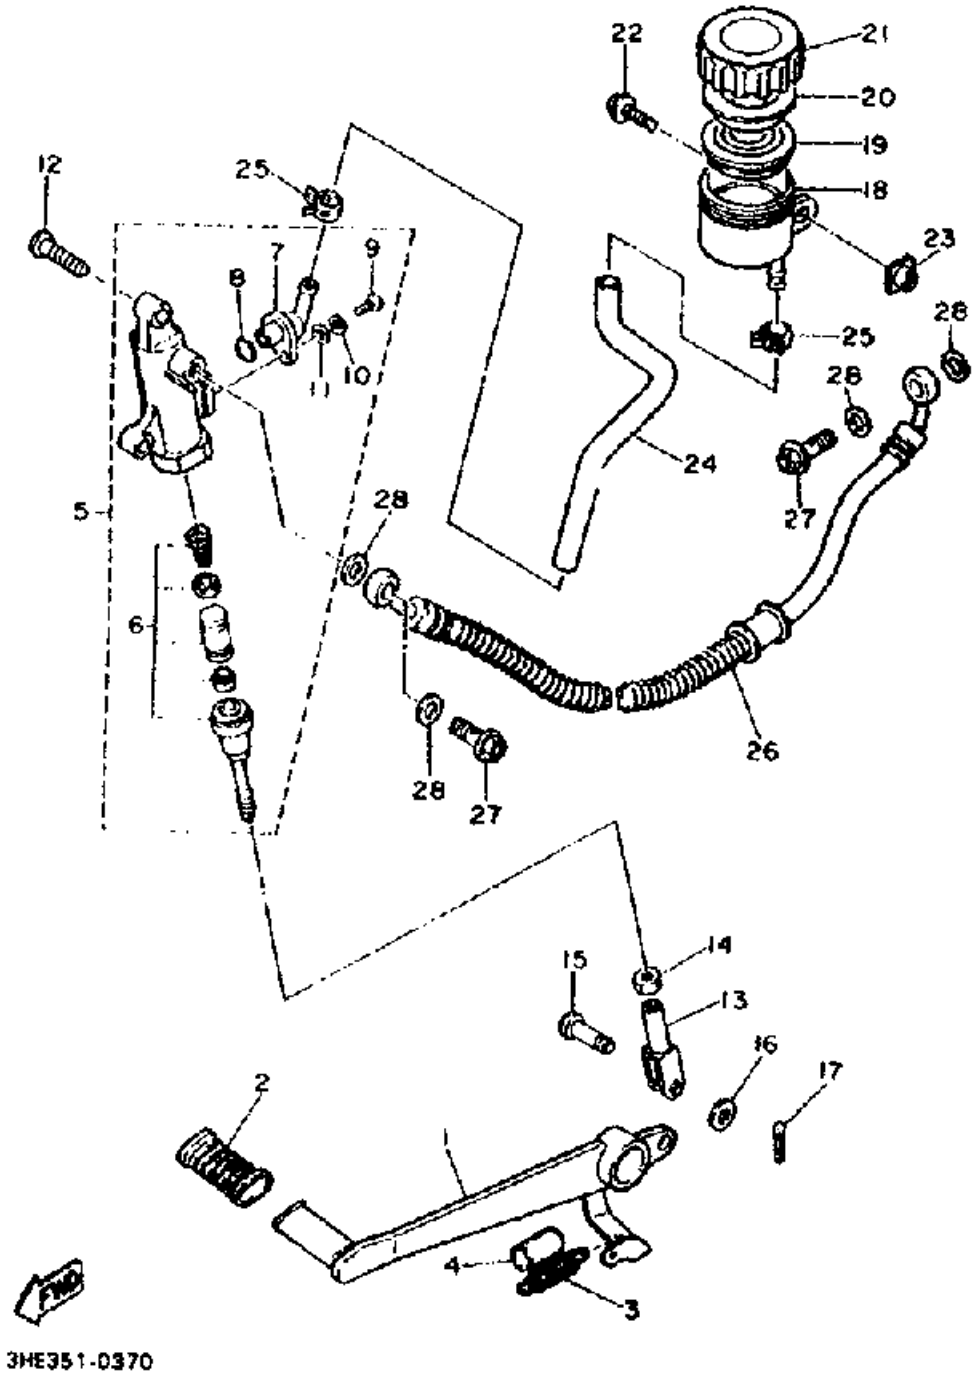


Ref No	Part No	Description
01	3HE-27211-00-00	Pedal, Brake
02	22N-18113-00-00	Cover, Shift Pedal
03	90506-20377-00	Spring, Tension
04	90446-17267-00	Hose
05	1WG-25850-50-00	Master Cylinder Assy
06	1WG-W0042-50-00	• . Cylinder Kit, Master
07	36Y-2582A-50-00	• . Joint
08	93210-15820-00	• . O-ring
09	98511-04012-00	• . Screw, Pan Head
10	92901-04100-00	• . Washer, Spring
11	92901-04600-00	• . Washer, Plate
12	92016-08025-00	Bolt, Button Head
13	31A-27222-00-00	Joint
14	95303-03700-00	Nut
15	90240-08013-00	Pin, Clevis
16	90201-08083-00	Washer, Plate
17	91401-20015-00	Pin, Cotter
18	31A-25894-01-00	Tank, Reservoir
19	360-25854-00-00	Diaphragm, Reservoir
20	2GU-25855-00-00	Bush,diaphragm
21	2KF-25852-50-00	Cap, Reservoir
22	90159-06056-00	Screw, With Washer
23	31A-14477-00-00	Plate
24	1WG-25895-00-00	Hose, Reservoir
25	90467-14057-00	Clip
26	3HE-25872-60-00	Hose, Brake 1
27	90401-10096-00	Bolt, Union
28	90201-10118-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

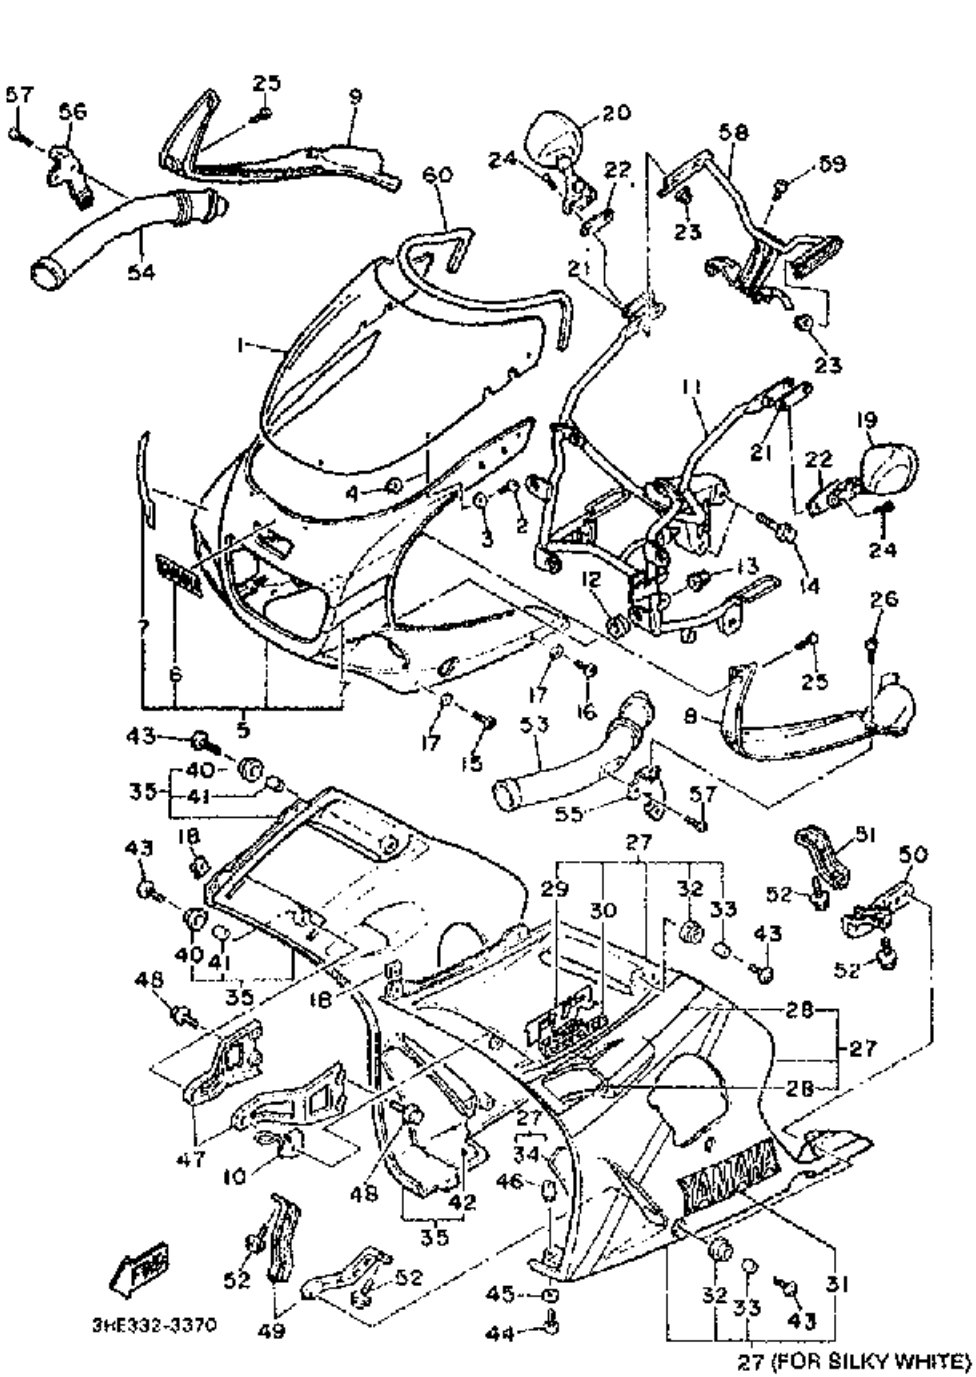


Ref No	Part No	Description
01	3HE-28381-50-00	Windshield
02	90149-05273-00	Screw
03	3HX-28215-00-00	Washer, Special
04	95706-05500-00	Nut, Flange
05	3HE-Y283G-0G-00	Body, Front Upper 1
05	3HE-Y283G-F0-0X	Body, Front Upper 1
06	99236-00080-00	• . Emblem, Yamaha
07	3HE-28390-A0-00	• . Graphic Set, Cowling
07	3HE-28390-90-00	• . Graphic Set, Cowling
08	3HE-2835U-50-00	Panel 1
09	3HE-2835V-50-00	Panel 2
10	3HE-21596-00-00	Holder
11	3HE-28356-50-00	Stay 1
12	90480-14229-00	Grommet
13	90179-06499-00	Nut
14	90105-08651-00	Bolt, Washer Based
15	90110-05210-00	Bolt, Hexagon Socket Head
16	90149-05299-00	Screw
17	90202-05180-00	Washer, Plate
18	90183-15024-00	Nut, Spring
19	3HE-26280-00-00	Rear View Mirror Assy(left)
19	3HE-26280-10-00	Rear View Mirror Assy(left)
20	3HE-26290-00-00	Rear View Mirror Assy(right)
20	3HE-26290-10-00	Rear View Mirror Assy(right)
21	3CV-26298-00-00	Plate, Mirror Fitting 1
22	3CV-26299-00-00	Plate, Mirror Fitting 2
23	90176-06055-00	Nut, Crown
24	98706-06030-00	Screw, Flat Head
25	90167-05041-00	Screw, Tapping
26	90110-05201-00	Bolt, Hexagon Socket Head
27	3EN-Y283J-V1-9X	Body, Front Lower 1
27	3EN-Y283J-U1-MW	Body, Front Lower 1
28	3HE-28301-90-00	• . Graphic Set, Lower Cover 1
28	3HH-28301-50-00	• . Graphic Set, Lower Cover 1
29	3HE-28315-90-00	• . Emblem (fzr)
29	3HH-28315-50-00	• . Emblem (fzr)
30	3LG-28328-00-00	• . Emblem (deltabox Combination)
31	99236-00240-00	• . Emblem, Yamaha
31	99236-00220-00	• . Emblem, Yamaha
32	90480-13398-00	• . Grommet
33	90387-067K6-00	• . Collar
34	3HE-2848K-00-00	• . Seat 2
35	3EN-Y283K-V0-9X	Body, Front Lower 2
35	3EN-Y283K-U0-MW	Body, Front Lower 2
36	3HE-28303-90-00	• . Graphic Set,lower Cover 2
36	3HH-28303-50-00	• . Graphic Set,lower Cover 2
37	3HE-28315-90-00	• . Emblem (fzr)
37	3HH-28315-50-00	• . Emblem (fzr)
38	3LG-28328-00-00	• . Emblem (deltabox Combination)
39	99236-00240-00	• . Emblem, Yamaha
39	99236-00220-00	• . Emblem, Yamaha
40	90480-13398-00	• . Grommet
41	90387-067K6-00	• . Collar
42	3HE-2848L-00-00	• . Seat 3
43	90110-06200-00	Bolt, Hexagon Socket Head

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

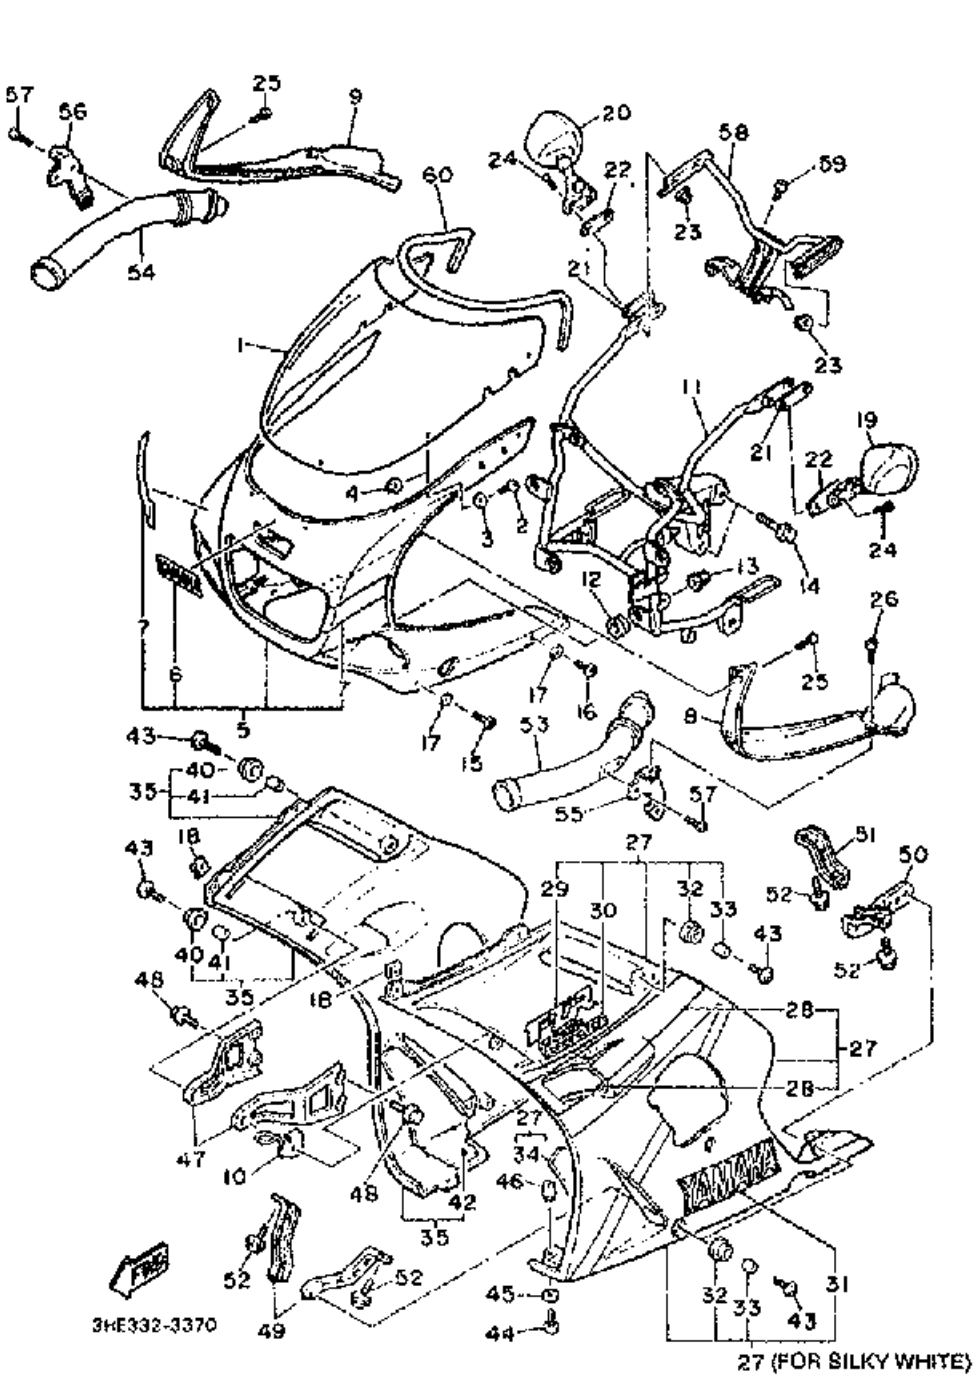


Ref No	Part No	Description
44	90149-05299-00	Screw
45	90202-05180-00	Washer, Plate
46	90179-05523-00	Nut
47	3HE-2831U-00-00	Stay, Side 1
48	91026-06012-00	Bolt, Flange
49	1WG-2836A-00-00	Bracket 1
50	3EN-2836A-01-00	Bracket 1
51	1WG-2836E-00-00	Bracket 2
52	91026-06010-00	Bolt, Flange
53	3HE-2838N-50-00	Duct 1
54	3HE-2838R-50-00	Duct 2
55	3HE-28413-50-00	Stay, Front Guard 1
56	3HE-28414-50-00	Stay, Front Guard 2
57	97706-40512-00	Screw, Tapping
58	3HE-2831W-50-00	Stay, Mirror 1
59	91316-06016-00	Bolt
60	3LE-28348-01-00	Mole 4

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

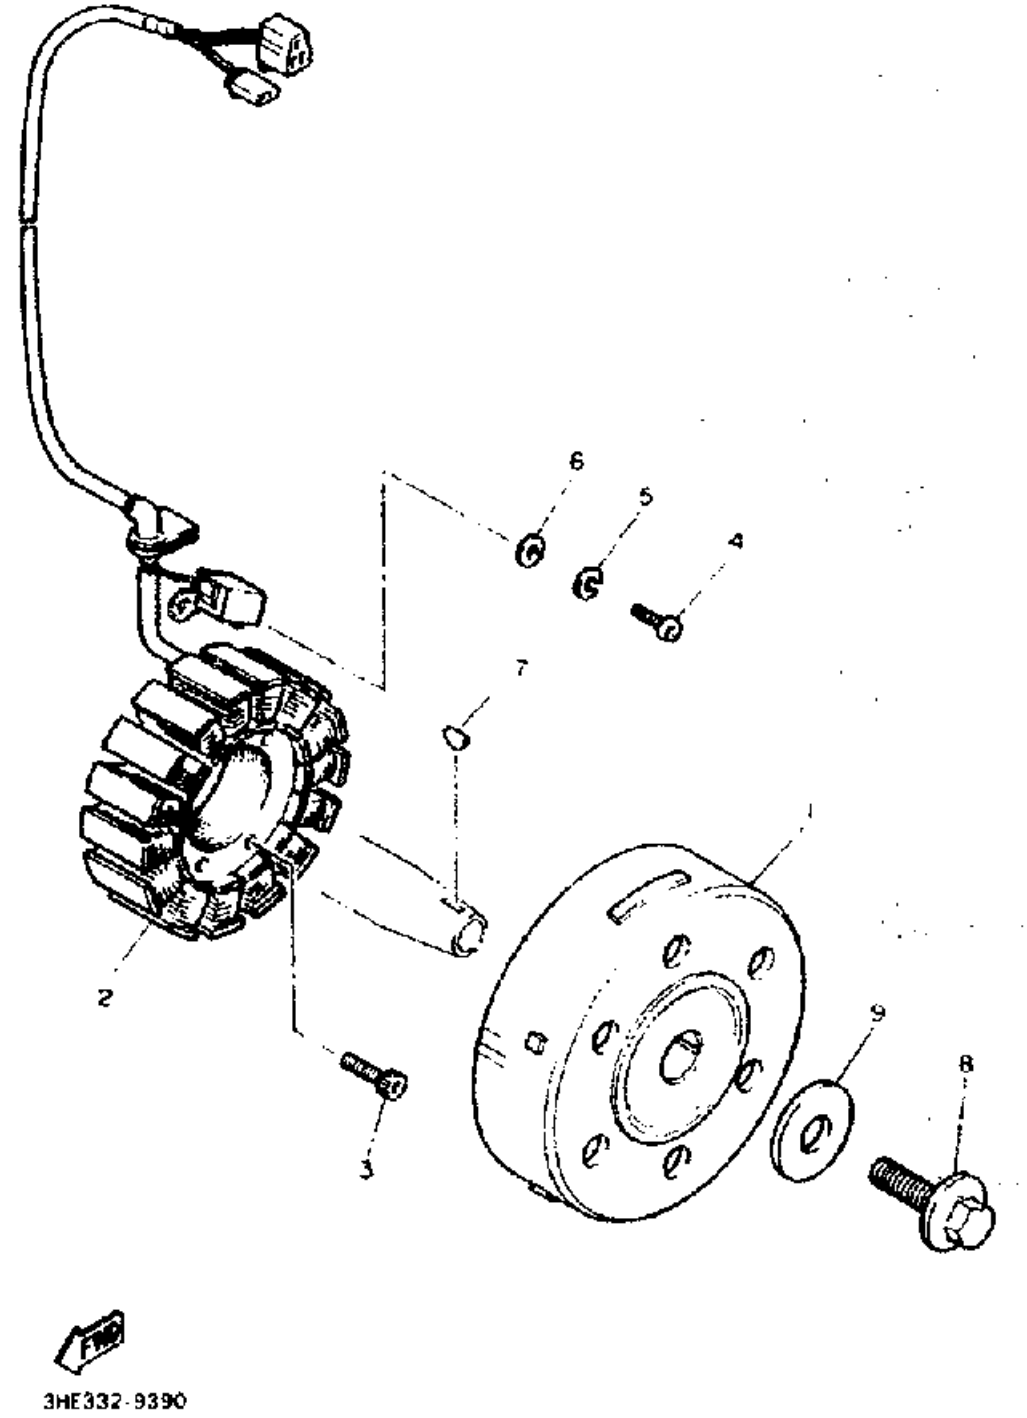


Ref No	Part No	Description
01	3HE-81450-00-00	Rotor Assy
02	3HE-81410-01-00	Stator Assy
03	91311-06035-00	Bolt
04	98501-05016-00	Screw, Pan Head
05	92901-05100-00	Washer, Spring
06	92901-05600-00	Washer, Plate
07	90280-06047-00	Key, Woodruff
08	90105-10430-00	Bolt, Washer Based
09	90201-107K6-00	Washer, Plate

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

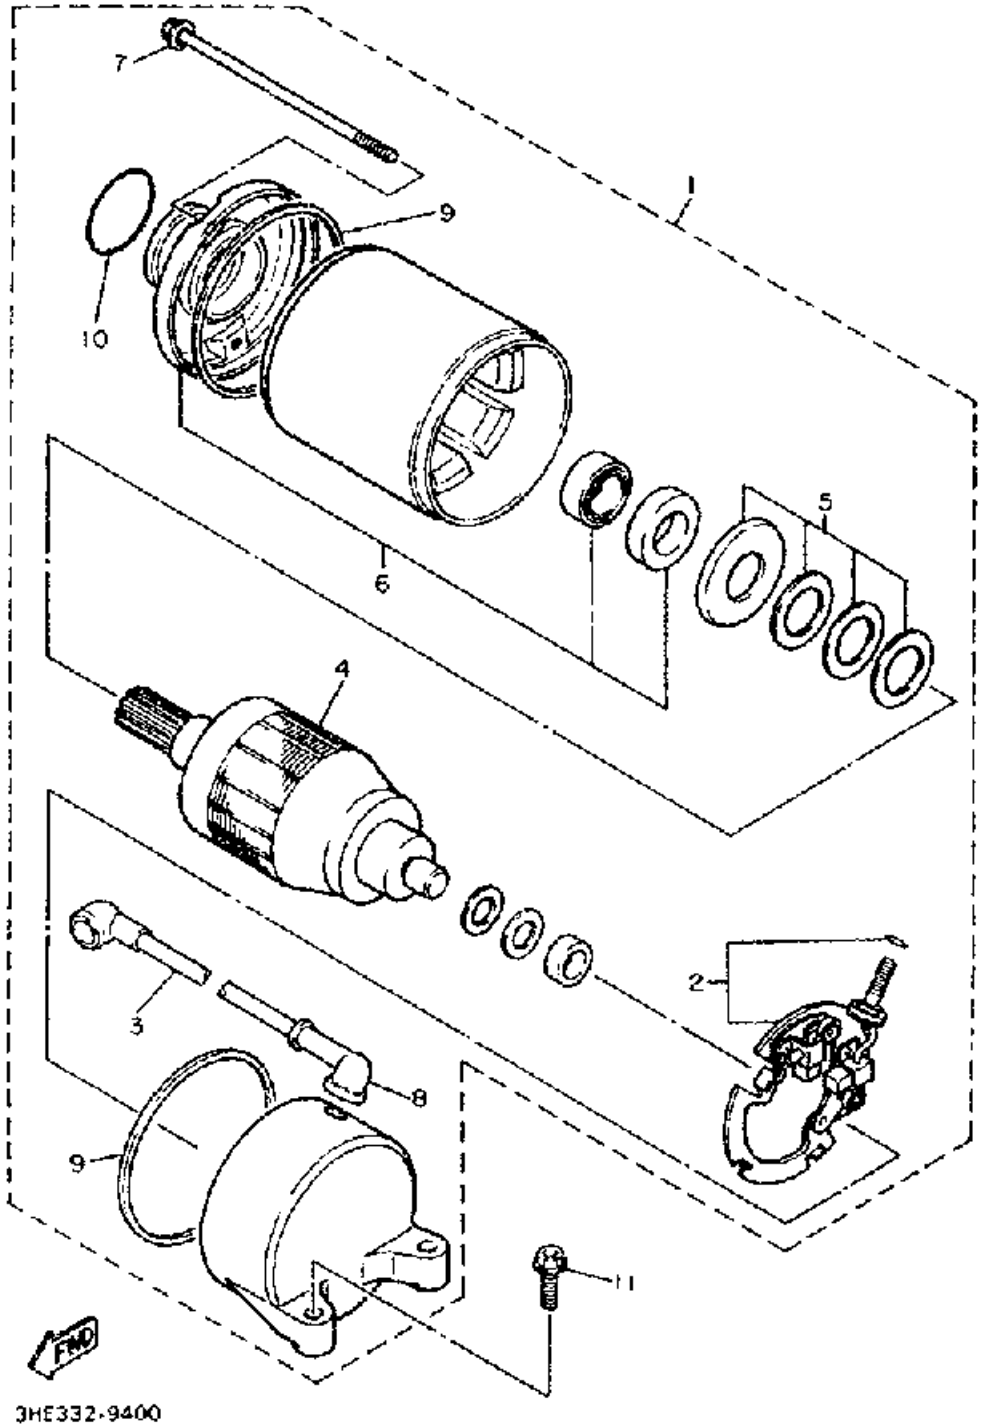


Ref No	Part No	Description
01	3HE-81800-00-00	Starting Motor Assy
02	3HE-81840-00-00	• . Brush Holder Assy
03	1HX-81815-00-00	• . Cord, Starter Motor
04	3HE-81850-00-00	• . Armature Assy
05	3AJ-81809-00-00	• . Washer Kit
06	3HE-81830-00-00	• . Front Bracket Assy
07	3HE-81826-00-00	• . Bolt
08	4G0-81871-00-00	• . Cap
09	11H-81844-00-00	• . Gasket
10	26H-81847-00-00	• . O-ring
11	95023-06025-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

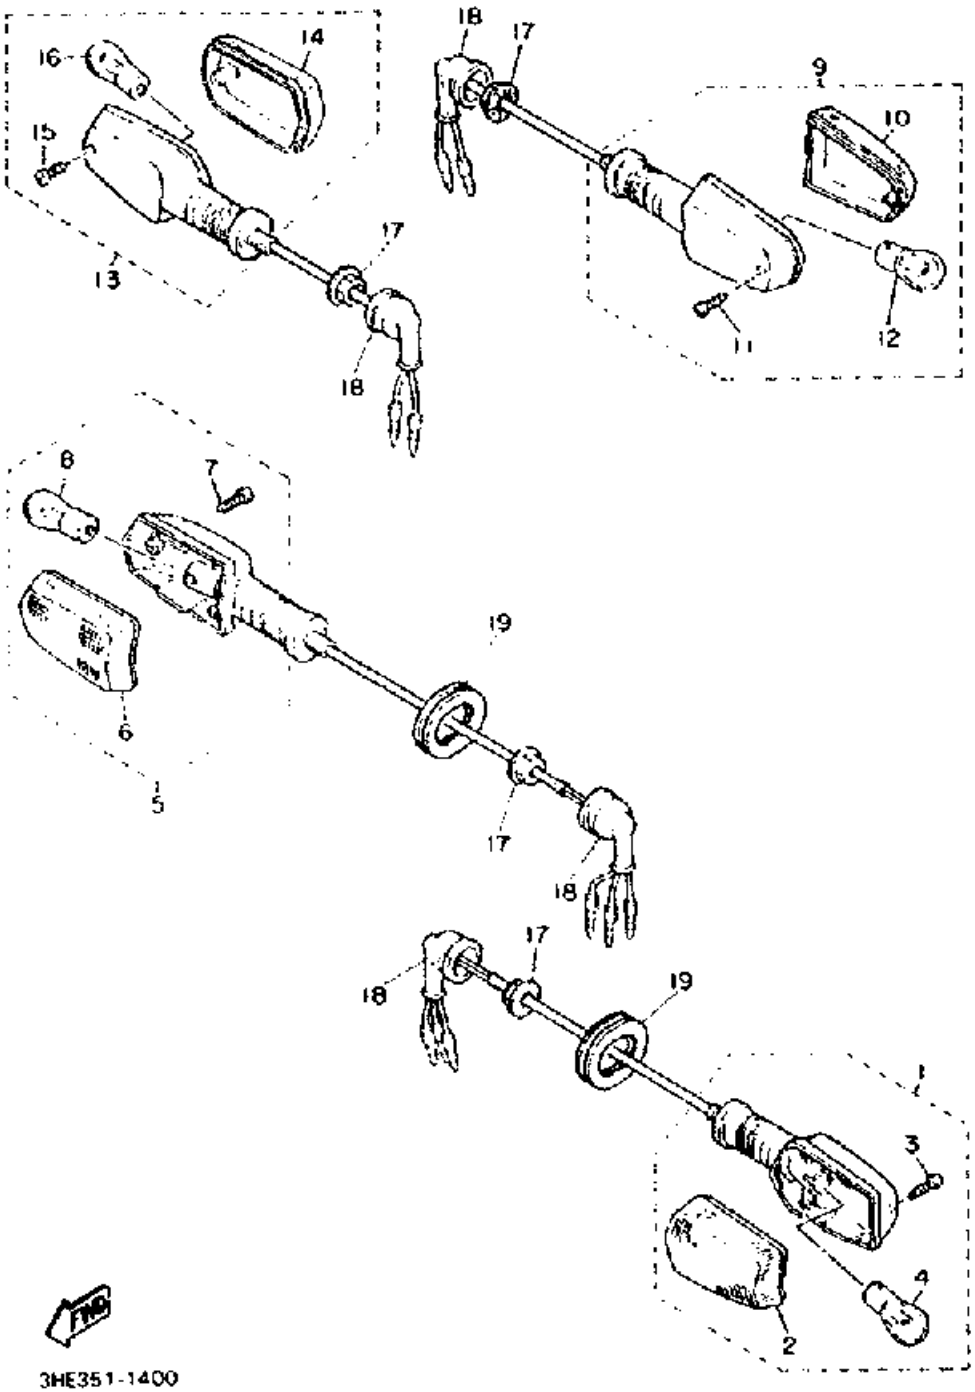


Ref No	Part No	Description
01	51J-83310-00-00	Front Flasher Light Assy 1
02	51L-83332-01-00	• . Lens, Flasher
03	97706-40620-00	• . Screw, Tapping
04	306-83311-40-00	• . Bulb, Flasher (12v-21w)
05	51J-83320-00-00	Front Flasher Light Assy 2
06	51L-83342-01-00	• . Lens, Flasher 2
07	97706-40620-00	• . Screw, Tapping
08	306-83311-40-00	• . Bulb, Flasher (12v-21w)
09	51J-83330-00-00	Rear Flasher Light Assy 1
10	1VU-83332-00-00	• . Lens, Flasher
11	97706-40620-00	• . Screw, Tapping
12	306-83311-40-00	• . Bulb, Flasher (12v-21w)
13	51J-83340-00-00	Flasher Light Assy 2
14	1VU-83342-00-00	• . Lens, Flasher 2
15	97706-40620-00	• . Screw, Tapping
16	306-83311-40-00	• . Bulb, Flasher (12v-21w)
17	95701-12500-00	Nut, Flange
18	18G-83365-00-00	Cap
19	3HE-83345-50-00	Plug, Blind

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

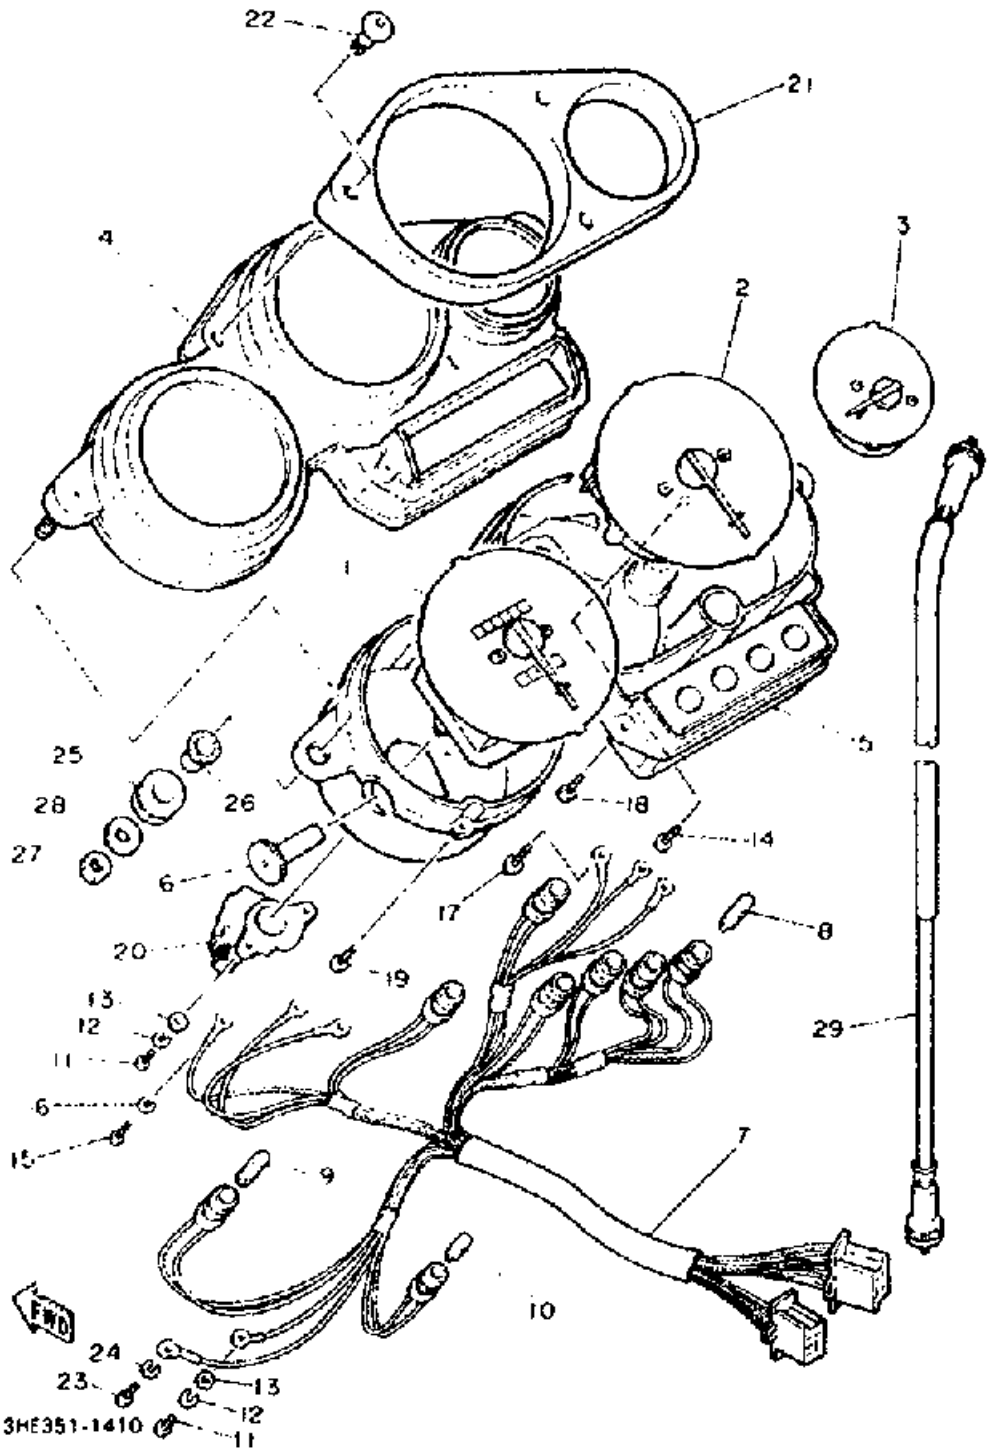


Ref No	Part No	Description
01	3HE-83570-50-00	Speedometer Assy
02	3GM-83540-00-00	Tachometer Assy
03	3EN-83590-50-00	Water Temperature Assy
04	3GM-83559-00-00	Cover, Meter
05	3LE-8353H-00-00	Case, Under
06	2GH-83578-00-00	Knob, Trip Meter
07	3HE-83509-50-00	Socket Cord Assy
08	4G1-84744-00-00	Bulb (12v-3.4w)
09	3GM-83517-00-00	Bulb (12v-1.7w)
10	2GV-83517-00-00	Bulb (12v-1.7w. T6.5)
11	98580-04010-00	Screw, Pan Head
12	92902-04100-00	Washer, Spring
13	92901-04600-00	Washer, Plate
14	90167-04057-00	Screw, Tapping
15	98580-03010-00	Screw, Pan Head
16	92990-03100-00	Washer, Spring
17	90159-03102-00	Screw, With Washer
18	90164-04008-00	Screw, Tapping
19	90167-03058-00	Screw, Tapping
20	3GM-83520-00-00	Socket Cord Assy
21	3GM-83513-00-00	Damper
22	3GM-83525-00-00	Clip
23	98501-03012-00	Screw, Pan Head
24	92990-03100-00	Washer, Spring
25	90480-14229-00	Grommet
26	90387-07391-00	Collar
27	95316-06600-00	Nut
28	90201-06059-00	Washer, Plate
29	3ET-83550-01-00	Speedometer Cable Assy

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

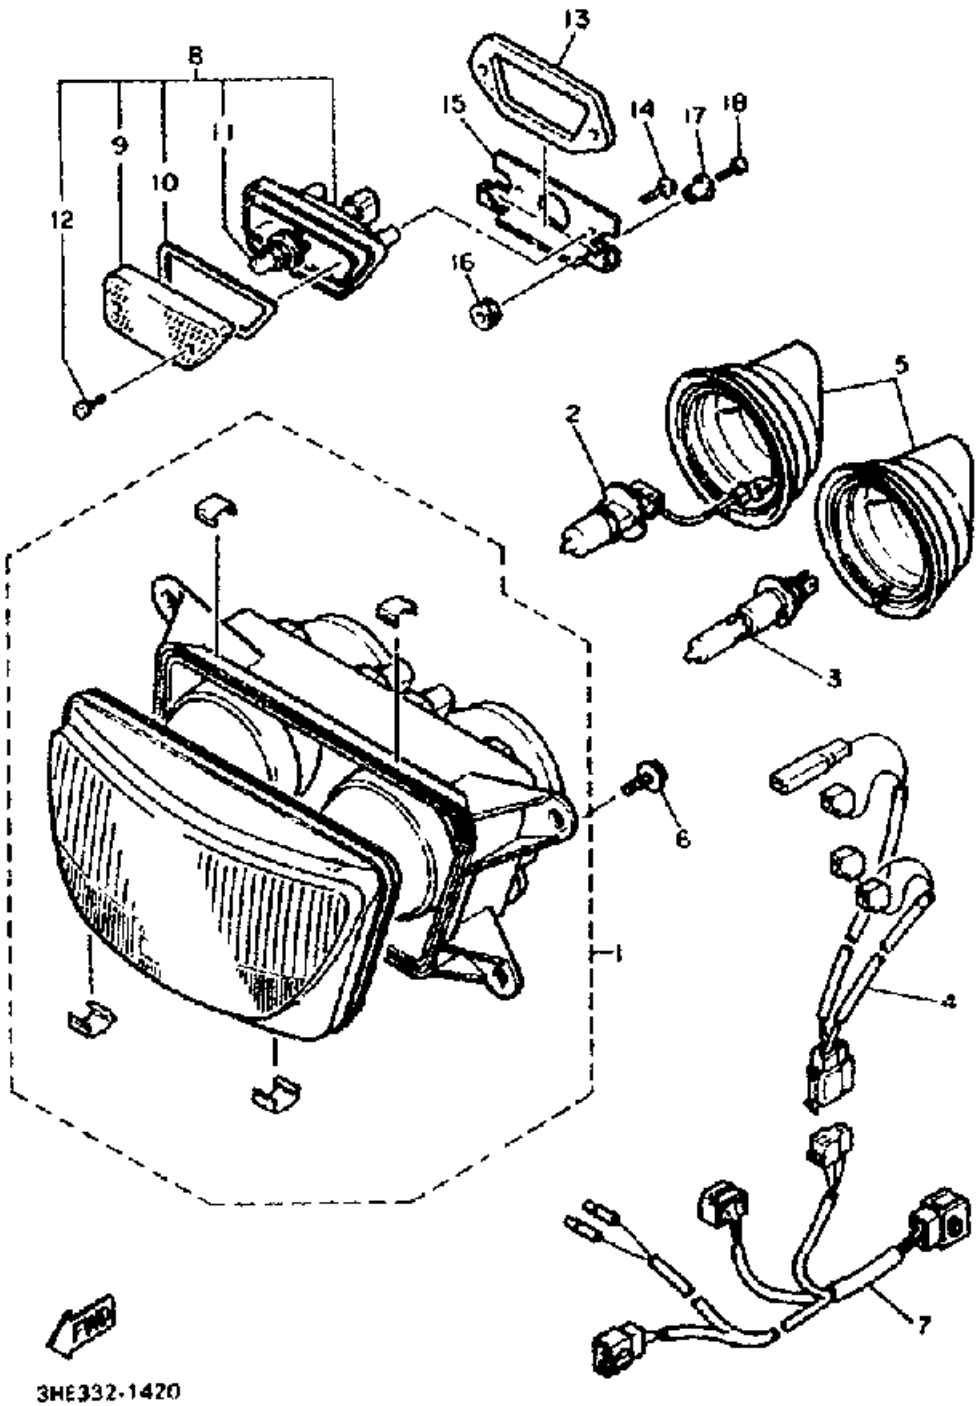


Ref No	Part No	Description
01	3GM-84320-40-00	Lens Assy
04	3GM-84340-40-00	Socket Cord Assy 1
05	3GM-84397-40-00	Cover, Socket
06	3TJ-84351-00-00	Clamp, Cord
07	3HE-84359-B0-00	Cord, Headlight
08	3GM-84301-00-00	Pilot Light Assy 1
09	3GM-84321-00-00	• . Lens Assy
10	3GM-84322-00-00	• . Gasket, Lens
11	2JE-84744-00-00	• . Bulb (12v-5w)
12	3GM-84192-00-00	• . Screw, Special (m44, L=12)
13	3GM-84367-50-00	Damper, Headlight 2
14	90167-05041-00	Screw, Tapping
15	3GM-8431R-00-00	Stay, Setting
16	90480-10517-00	Grommet
17	90387-052U5-00	Collar
18	90167-05037-00	Screw, Tapping

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

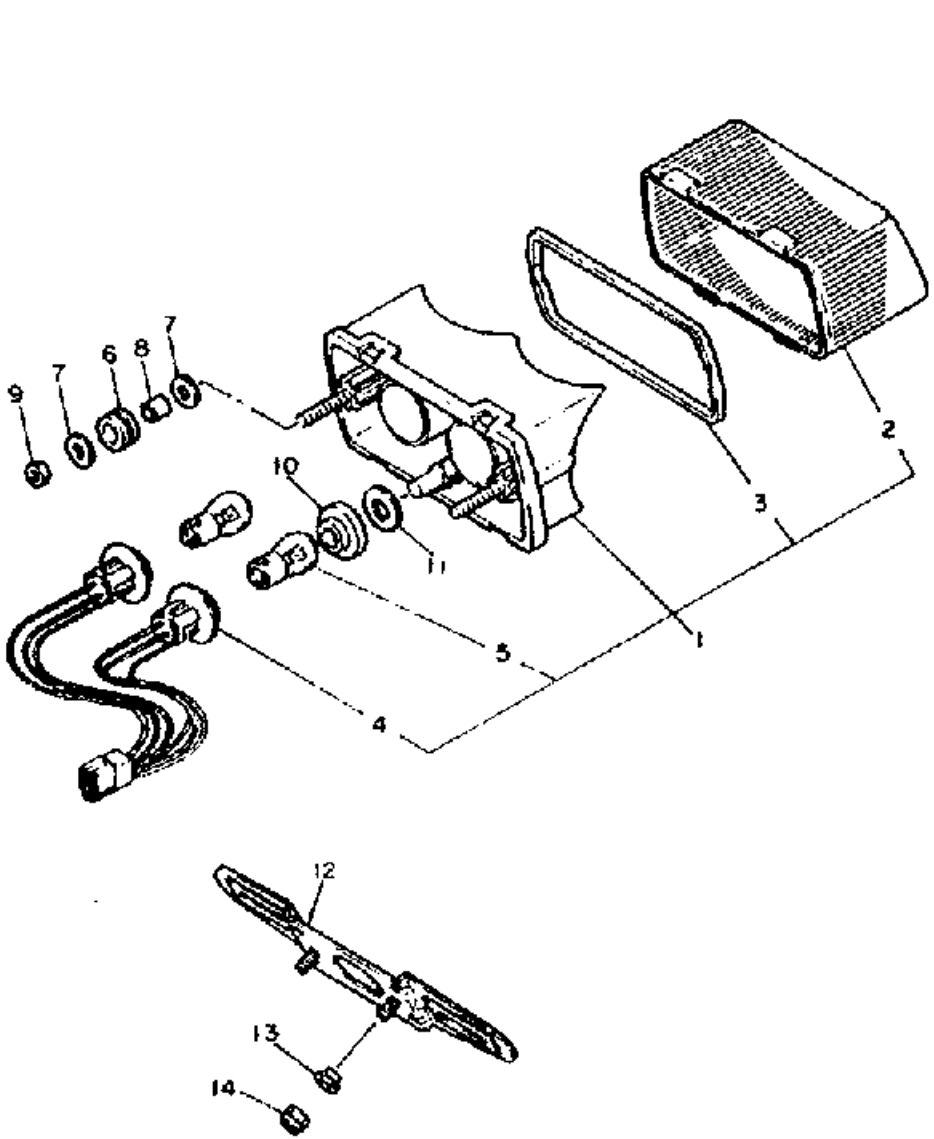


Ref No	Part No	Description
01	47X-84710-E0-00	Taillight Unit Assy
02	47X-84721-00-00	• . Lens, Taillight
03	47X-84723-00-00	• . Gasket, Tail Lens
04	47X-84735-00-00	• . Cord Assy
05	31L-84714-00-00	• . Bulb (12v-21/5w)
06	90480-18276-00	Grommet
07	90201-063J2-00	Washer, Plate
08	90387-060A7-00	Collar
09	95303-06600-00	Nut
10	90480-15259-00	Grommet
11	92906-10200-00	Washer
12	1KH-84751-00-90	Bracket, License
13	90387-061M0-00	Collar
14	95616-06100-00	Nut, U

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

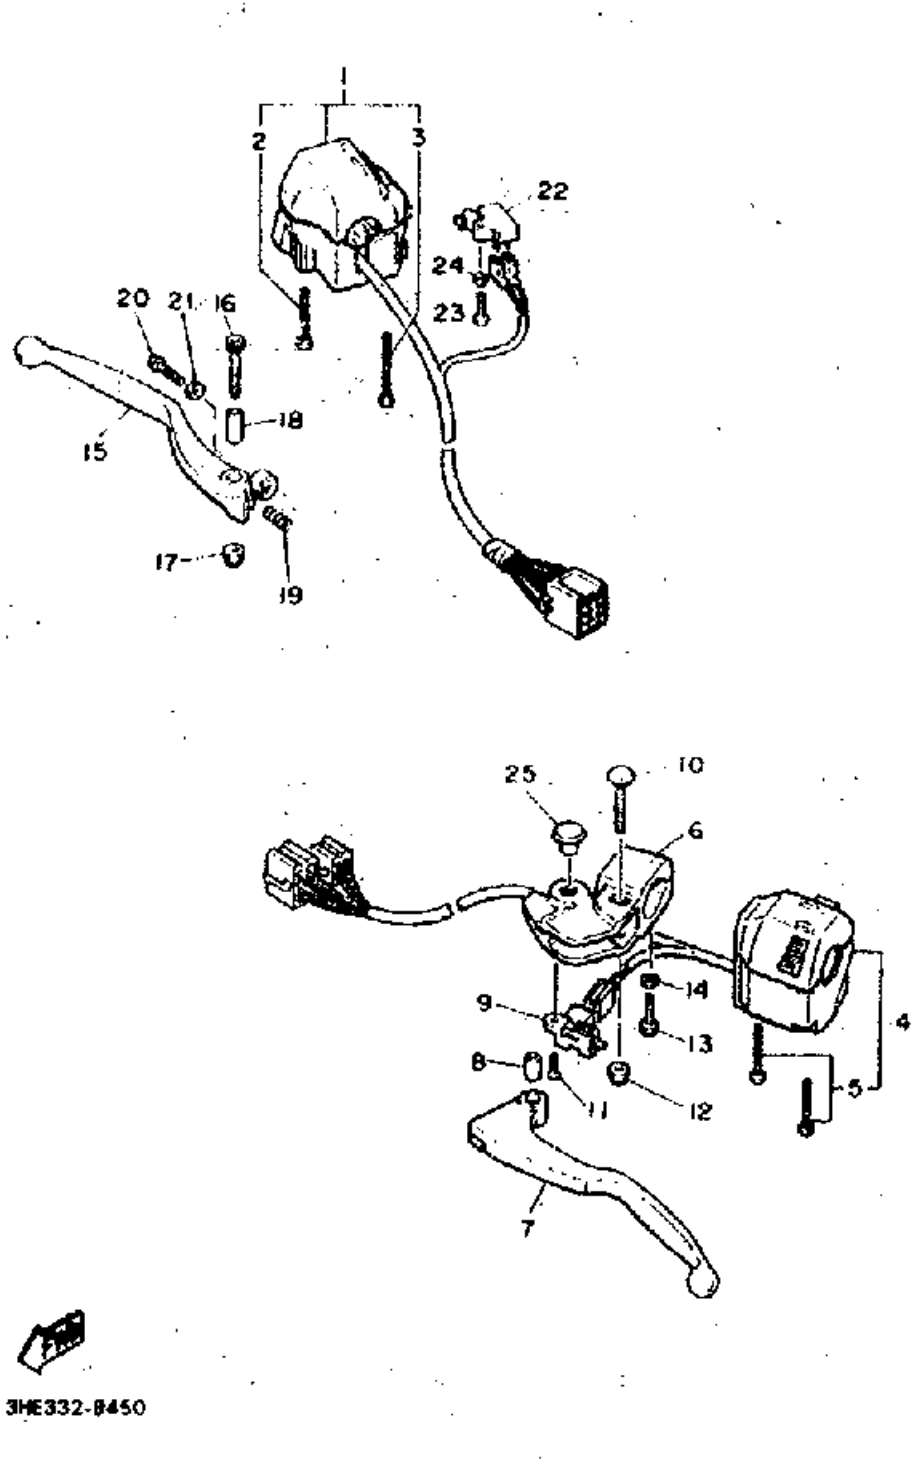


Ref No	Part No	Description
01	3HE-83963-00-00	Switch, Handle 3 (right)
02	98506-05040-00	• . Screw, Pan Head
03	98506-05045-00	• . Screw, Pan Head
04	3HE-83972-00-00	Switch, Handle 4
05	97806-05035-00	• . Screw, Pan Head
06	29L-82911-01-00	Holder, Lever 1
07	3HE-83912-00-00	Lever 1
08	31A-83913-00-00	Collar, Lever 1
09	31A-82917-00-00	Switch
10	31A-83945-00-00	Bolt, Lever
11	98702-03008-00	Screw, Flat Head
12	95616-06100-00	Nut, U
13	97001-06025-00	Bolt
14	92906-06100-00	Washer, Spring
15	1FK-83922-00-00	Lever 2
16	90110-06074-00	Bolt, Hexagon Socket Head
17	95616-06100-00	Nut, U
18	36Y-83913-01-00	Collar, Lever 1
19	90501-10312-00	Spring, Compression
20	90149-06131-00	Screw
21	90170-06355-00	Nut
22	36Y-83980-01-00	Front Stop Switch Assy
23	98506-04018-00	Screw, Pan Head
24	92906-04600-00	Washer, Plate
25	90338-09012-00	Plug

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

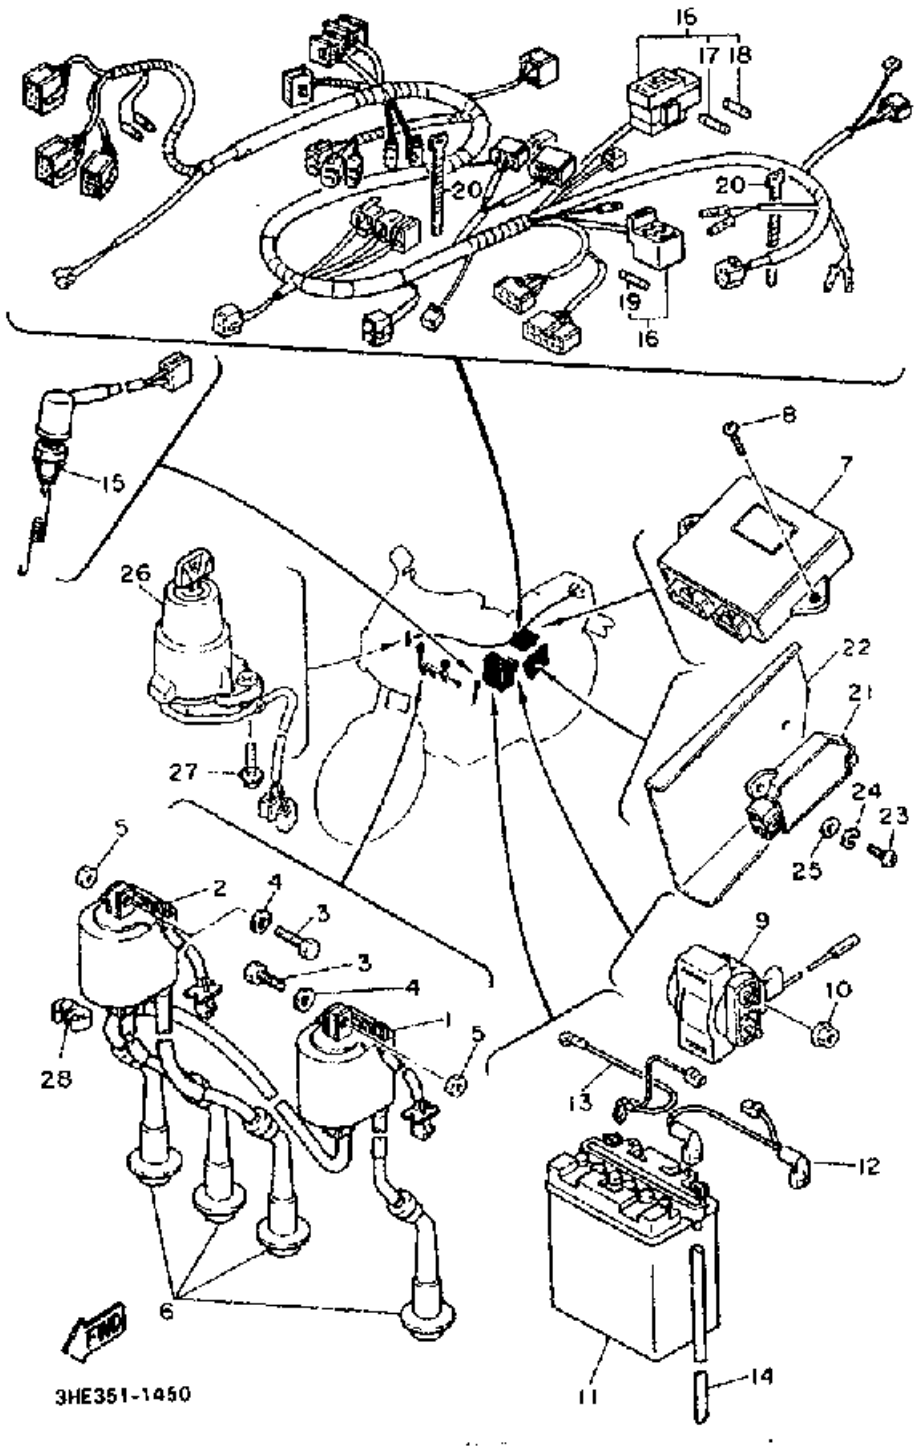

Ref No	Part No	Description
01	3HE-82310-01-00	Ignition Coil Assy
02	3HE-82320-00-00	Ignition Coil Assy
03	97006-06056-00	Bolt
04	92906-06600-00	Washer, Plate
05	95316-06600-00	Nut
06	1WG-82370-00-00	Plug Cap Assy
07	3HE-82305-00-00	Ignitor Unit Assy
07	3HF-82305-00-00	Ignitor Unit Assy
07	3RH-82305-00-00	Ignitor Unit Assy
08	97702-60520-00	Screw, Tapping
09	36Y-81940-00-00	Starter Relay Assy
10	95701-06500-00	Nut, Flange
11	1VJ-82110-60-00	Battery Assy (gm12ax-3ax-2)
12	1WG-82115-00-00	Wire, Plus Lead
13	3HE-82116-00-00	Wire, Minus Lead
14	90445-08719-00	Hose
15	1KT-82530-02-00	Stop Switch Assy
16	3HE-82590-20-00	Wire Harness Assy
17	2GH-82151-00-00	• . Fuse (20a)
18	42X-82151-00-00	• . Fuse (10a)
19	1AE-82151-00-00	• . Fuse (12v 30a)
20	90464-13073-00	Clamp
21	47X-81960-A2-00	Rectifier & Regulator Assy
22	3HE-81975-00-00	Plate, Rectifier Fitting
23	98501-06020-00	Screw, Pan Head
24	92990-06100-00	Washer, Spring
25	92990-06600-00	Washer, Plate
26	3HE-82501-00-00	Main Switch Steering Lock
27	90109-06614-00	Bolt
28	90464-10075-00	Clamp

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.

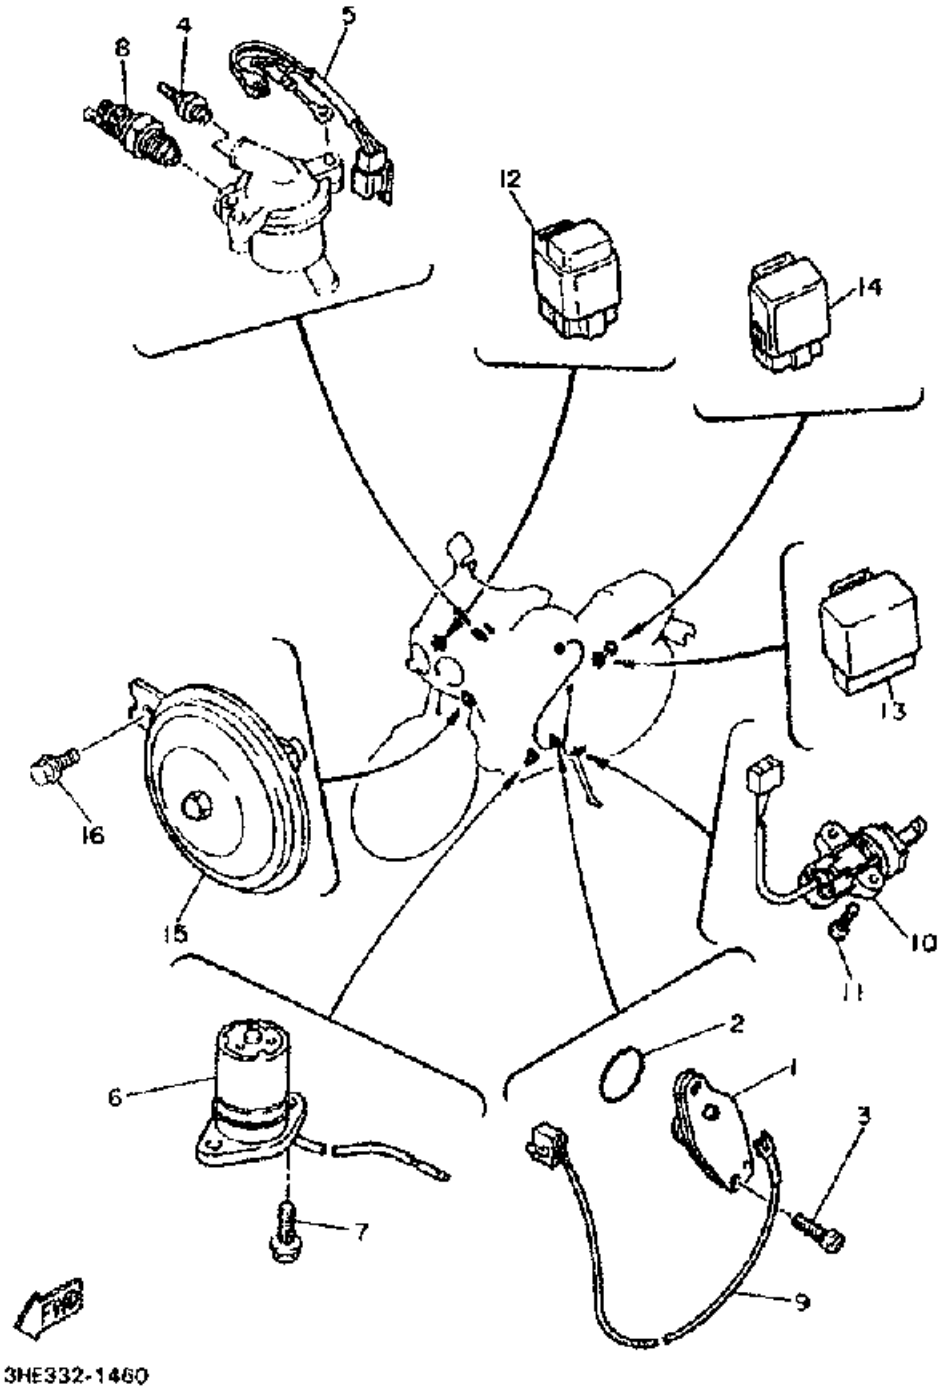

Ref No	Part No	Description
01	1AE-82540-00-00	Neutral Switch Assy
02	93210-29196-00	O-ring
03	98502-06016-00	Screw, Pan Head
04	11H-83591-00-00	Thermo Unit
05	2GH-82509-00-00	Wire, Sub Lead
06	1WG-85720-00-00	Oil Level Gauge Assy
07	95026-06016-00	Bolt, Flange
08	2EL-82560-00-00	Thermo Switch Assy
09	1WG-82541-00-00	Wire, Lead
10	3MD-82566-00-00	Switch, Side Stand
11	90157-05079-00	Screw, Pan Head
12	25G-81950-01-00	Relay Assy
13	3EN-81950-00-00	Relay Assy
14	3CW-83350-00-00	Flasher Relay Assy
15	3HE-83371-00-00	Horn
16	91026-06012-00	Bolt, Flange

Copyright © 2004 Yamaha Motor Distribution B.V. All Rights Reserved.