
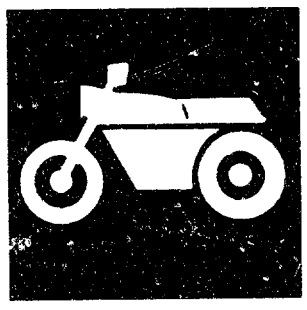


# PARTS CATALOGUE
## MODEL YEAR 1992
# XT600ED (3UY8) U49
# XT600EDC (3UY7) CALIFORNIA

| | | |
|---|---|---|
| 3UY8 | Frame Serial No. | 3UY-016101 and following |
| | Engine Serial No. | 3UY-016101 and following |
| 3UY7 | Frame Serial No. | 3UY-015101 and following |
| | Engine Serial No. | 3UY-015101 and following |

| PUBLICATION | PART NUMBER | REMARKS |
|---|---|---|
| OWNER'S MANUAL | LIT-11626-08-12 | |
| ASSEMBLY MANUAL | LIT-11666-07-43 | |
| SERVICE MANUAL | LIT-11616-07-43 | |

# CYLINDER HEAD

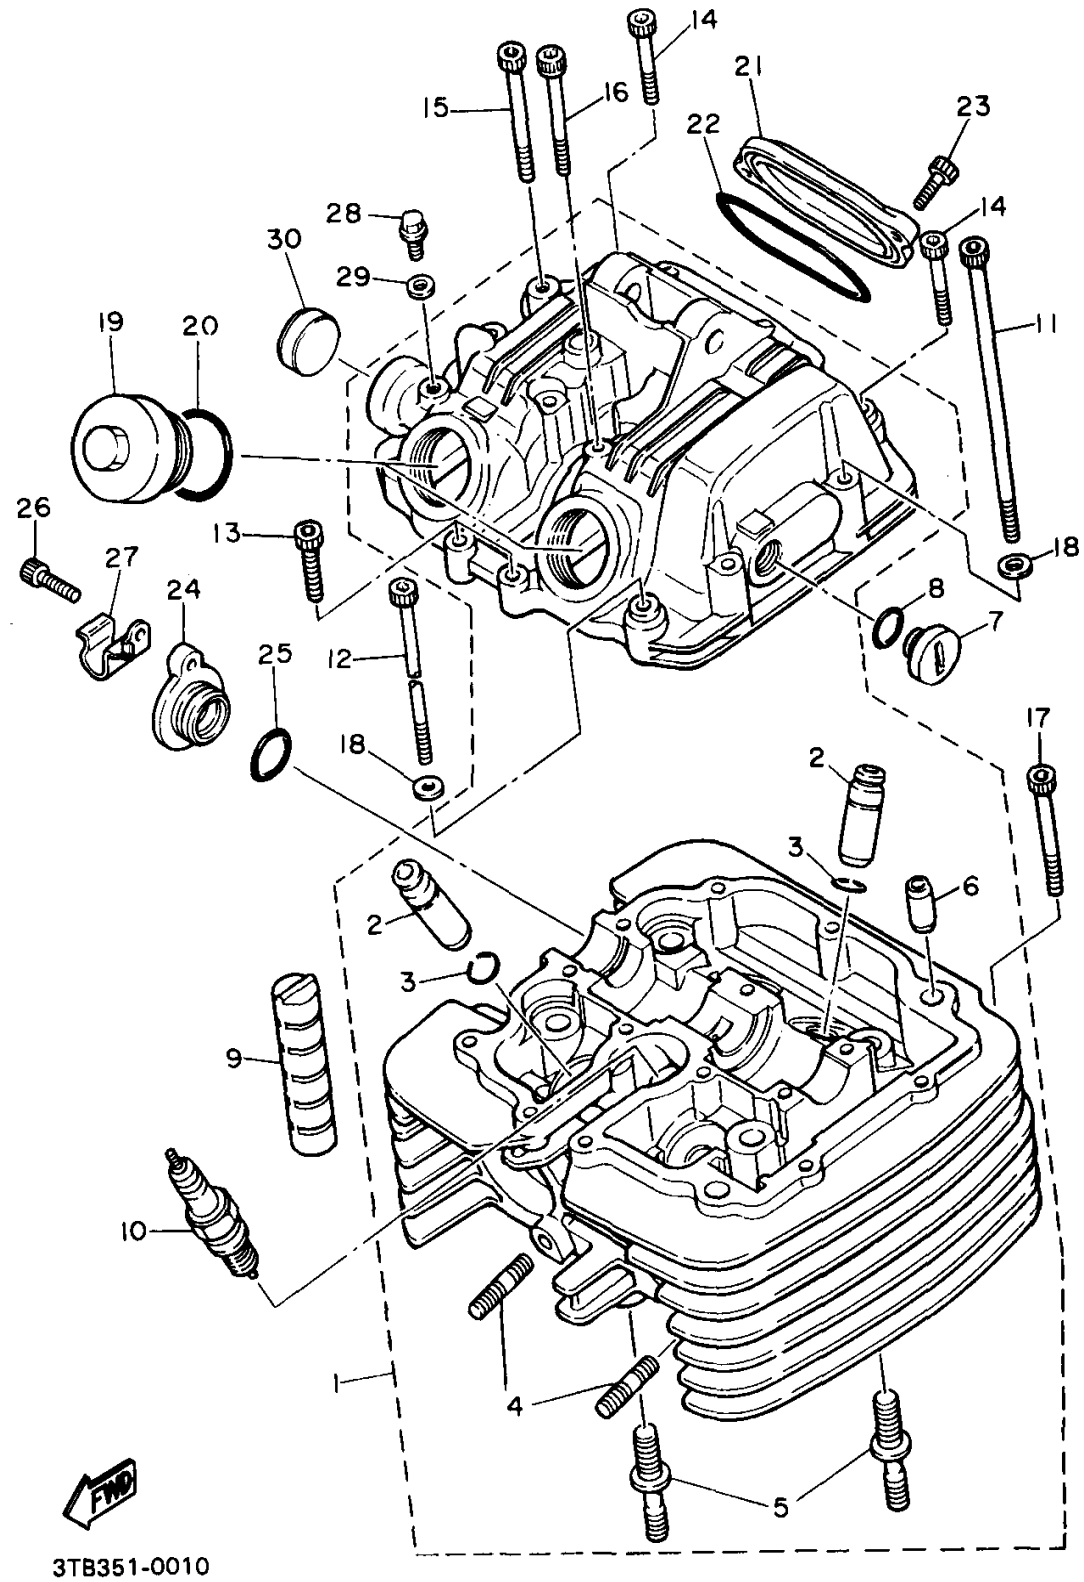



3TB351-0010

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-11101-00-00 | CYLINDER HEAD ASSEMBLY . | 1 | |
| 2 | 4H7-11133-10-00 | . GUIDE, INTAKE VALVE ..... | 4 | |
| 3 | 93440-12052-00 | . CIRCLIP ..... | 4 | |
| 4 | 90116-06475-00 | . BOLT, STUD ..... | 4 | |
| 5 | 90116-10378-00 | . BOLT, STUD ..... | 2 | |
| 6 | 99510-10114-00 | . PIN, DOWEL ..... | 2 | |
| 7 | 90340-14068-00 | PLUG, STRAIGHT SCREW .... | 1 | |
| 8 | 93210-13657-00 | O-RING ..... | 1 | |
| 9 | 583-11127-00-00 | ABSORBER 3 ..... | 2 | |
| 10 | NGK-DPR8E-A9-00 | NGK DPR8EA-9 10PK ..... | 1 | |
| 11 | 91316-06125-00 | BOLT ..... | 2 | |
| 12 | 91316-06115-00 | BOLT, SOCKET HEAD ..... | 1 | |
| 13 | 91316-06025-00 | BOLT ..... | 4 | |
| 14 | 91316-06040-00 | BOLT, SOCKET HEAD ..... | 2 | |
| 15 | 91316-06055-00 | BOLT, SOCKET HEAD ..... | 6 | |
| 16 | 90109-063E9-00 | BOLT ..... | 1 | |
| 17 | 91316-06050-00 | BOLT, SOCKET HEAD ..... | 1 | |
| 18 | 92906-06600-00 | WASHER ..... | 3 | |
| 19 | 1L9-11186-00-00 | COVER, CYLINDER HEAD SIDE 2 ..... | 2 | |
| 20 | 93210-32172-00 | O-RING ..... | 2 | |
| 21 | 5Y1-11187-00-00 | COVER, CYLINDER HEAD SIDE 3 ..... | 1 | |
| 22 | 93210-62446-00 | O-RING ..... | 1 | |
| 23 | 91316-06018-00 | BOLT, SOCKET HEAD ..... | 2 | |
| 24 | 3TB-12215-00-00 | CAP, TENSIONER CASE ..... | 1 | |
| 25 | 93210-19522-00 | O-RING ..... | 1 | |
| 26 | 91316-06020-00 | BOLT, SOCKET HEAD ..... | 1 | |
| 27 | 90462-15196-00 | CLAMP ..... | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# CYLINDER HEAD

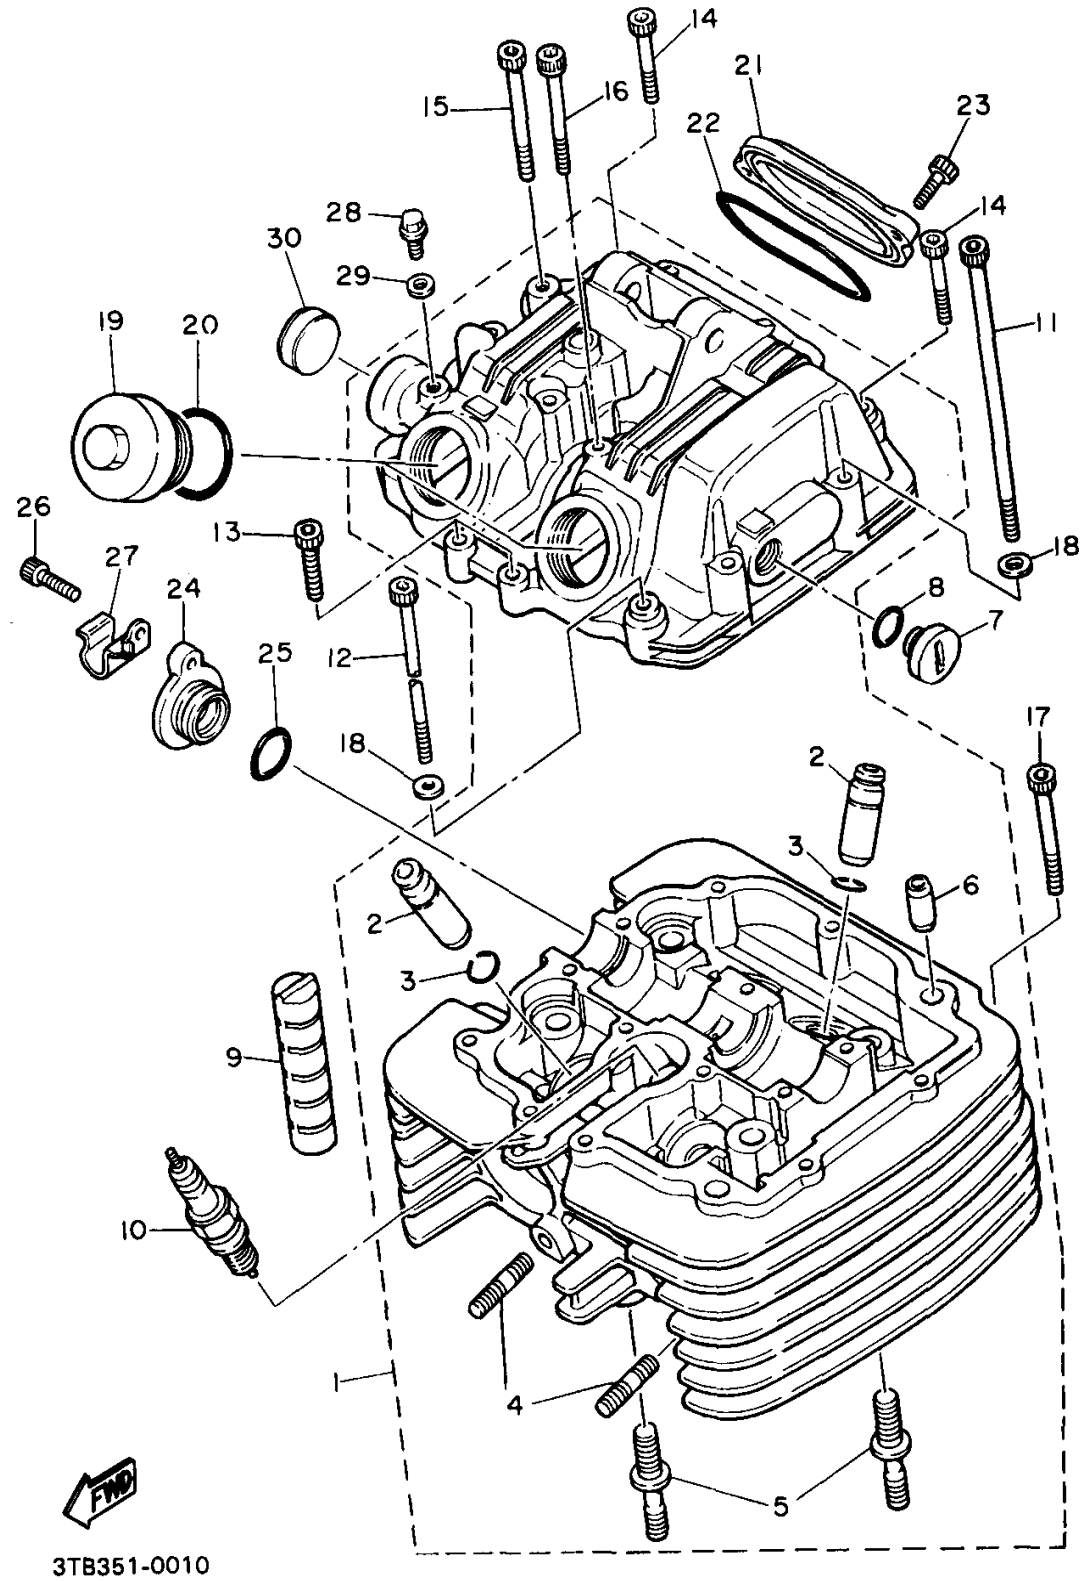


3TB351-0010

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 28 | 90109-06418-00 | BOLT | 1 | |
| 29 | 90430-06014-00 | GASKET | 1 | |
| 30 | 90338-22207-00 | PLUG | 1 | |


# CYLINDER

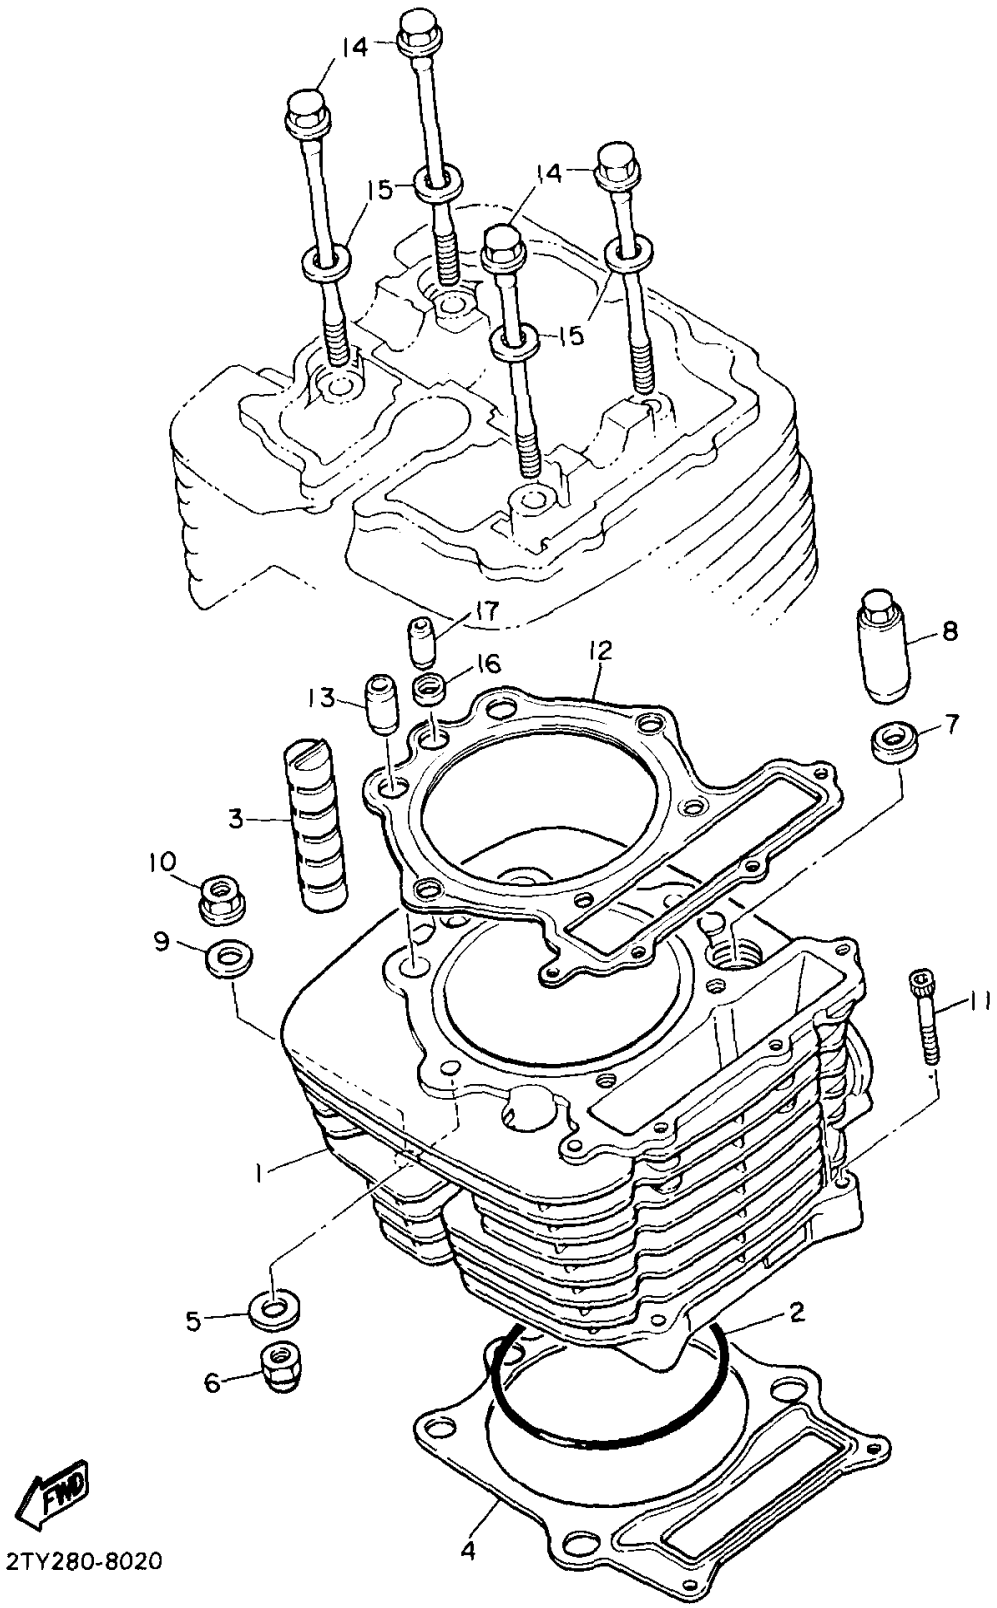


2TY280-8020

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-11310-00-00 | CYLINDER | 1 | |
| 2 | 93210-97524-00 | O-RING | 1 | |
| 3 | 583-11127-00-00 | ABSORBER 3 | 2 | |
| 4 | 1VJ-11351-00-00 | GASKET, CYLINDER | 1 | |
| 5 | 90201-080L8-00 | WASHER, PLATE | 2 | |
| 6 | 90176-08026-00 | NUT, CROWN | 2 | |
| 7 | 90201-10590-00 | WASHER, PLATE | 2 | |
| 8 | 90179-10201-00 | NUT | 2 | |
| 9 | 90201-10124-00 | WASHER, PLATE | 2 | |
| 10 | 90179-10279-00 | NUT | 2 | |
| 11 | 91316-06035-00 | BOLT | 2 | |
| 12 | 2KF-11181-01-00 | GASKET, CYLINDER HEAD 1 | 1 | |
| 13 | 91810-05018-00 | PIN, DOWEL | 2 | |
| 14 | 90105-08505-00 | BOLT, WASHER BASED | 4 | |
| 15 | 90201-085L3-00 | WASHER, PLATE | 4 | |
| 16 | 90430-08178-00 | GASKET | 1 | |
| 17 | 99510-08016-00 | PIN, DOWEL | 1 | |

# CRANKSHAFT - PISTON

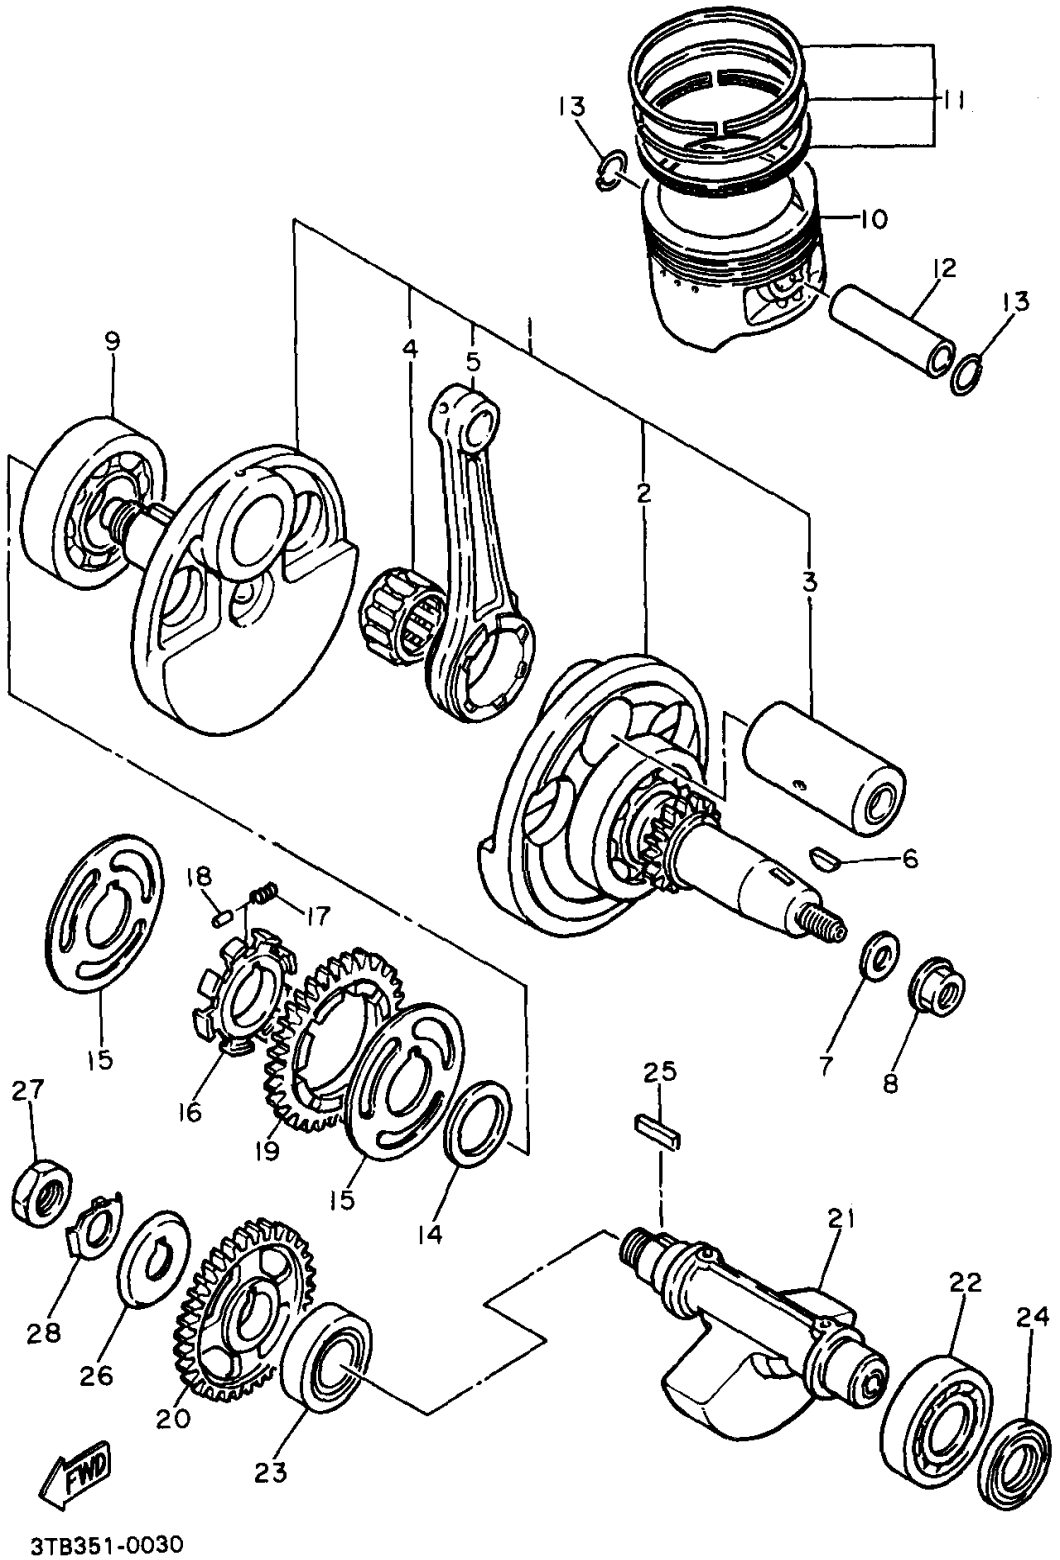



3TB351-0030

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-11400-00-00 | CRANKSHAFT ASSEMBLY ... | 1 | |
| 2 | 1VJ-W1141-00-00 | . CRANK 1 ..... | 1 | |
| 3 | 1VJ-11681-00-00 | . PIN, CRANK 1 ..... | 1 | |
| 4 | 93310-635C6-00 | . BEARING, CYLINDRICAL ... | 1 | |
| 5 | 3TB-11651-00-00 | . ROD, CONNECTING ..... | 1 | |
| 6 | 90280-16053-00 | KEY, WOODRUFF ..... | 1 | |
| 7 | 90201-140A6-00 | WASHER, PLATE ..... | 1 | |
| 8 | 90179-14317-00 | NUT, SPEC''L SHAPE ..... | 1 | |
| 9 | 93306-30702-00 | BEARING (B6307) ..... | 1 | |
| 10 | 3TB-11631-00-Y0 | PISTON (STD) ..... | 1 | |
| | 3TB-11636-00-00 | PISTON (0.50MM O/S) ..... | 1 | AP |
| | 3TB-11638-00-00 | PISTON (1.00MM O/S) ..... | 1 | AP |
| 11 | 34L-11610-00-00 | PISTON RING SET (STD) ..... | 1 | |
| | 34L-11610-20-00 | PISTON RING SET (0.50MM O/S) ..... | 1 | AP |
| | 34L-11610-40-00 | PISTON RING SET (1.00MM O/S) ..... | 1 | AP |
| 12 | 1JK-11633-01-00 | PIN, PISTON ..... | 1 | |
| 13 | 93450-24028-00 | CIRCLIP ..... | 2 | |
| 14 | 90201-301F4-00 | WASHER, PLATE ..... | 1 | |
| 15 | 34K-11565-02-00 | WASHER, BEARING COVER .. | 2 | |
| 16 | 5Y1-11496-01-00 | BOSS, BUFFER ..... | 1 | |
| 17 | 90501-22721-00 | SPRING, COMPRESSION ..... | 8 | |
| 18 | 93605-10090-00 | PIN, DOWEL ..... | 4 | |
| 19 | 2JT-11536-00-00 | GEAR, DRIVE ..... | 1 | |
| 20 | 5Y1-11531-00-00 | GEAR, BALANCE WT 44T .... | 1 | |
| 21 | 34K-11454-00-00 | WEIGHT 1 ..... | 1 | |
| 22 | 93306-30525-00 | BEARING (B6305) ..... | 1 | |
| 23 | 93306-30541-00 | BEARING ..... | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# CRANKSHAFT - PISTON

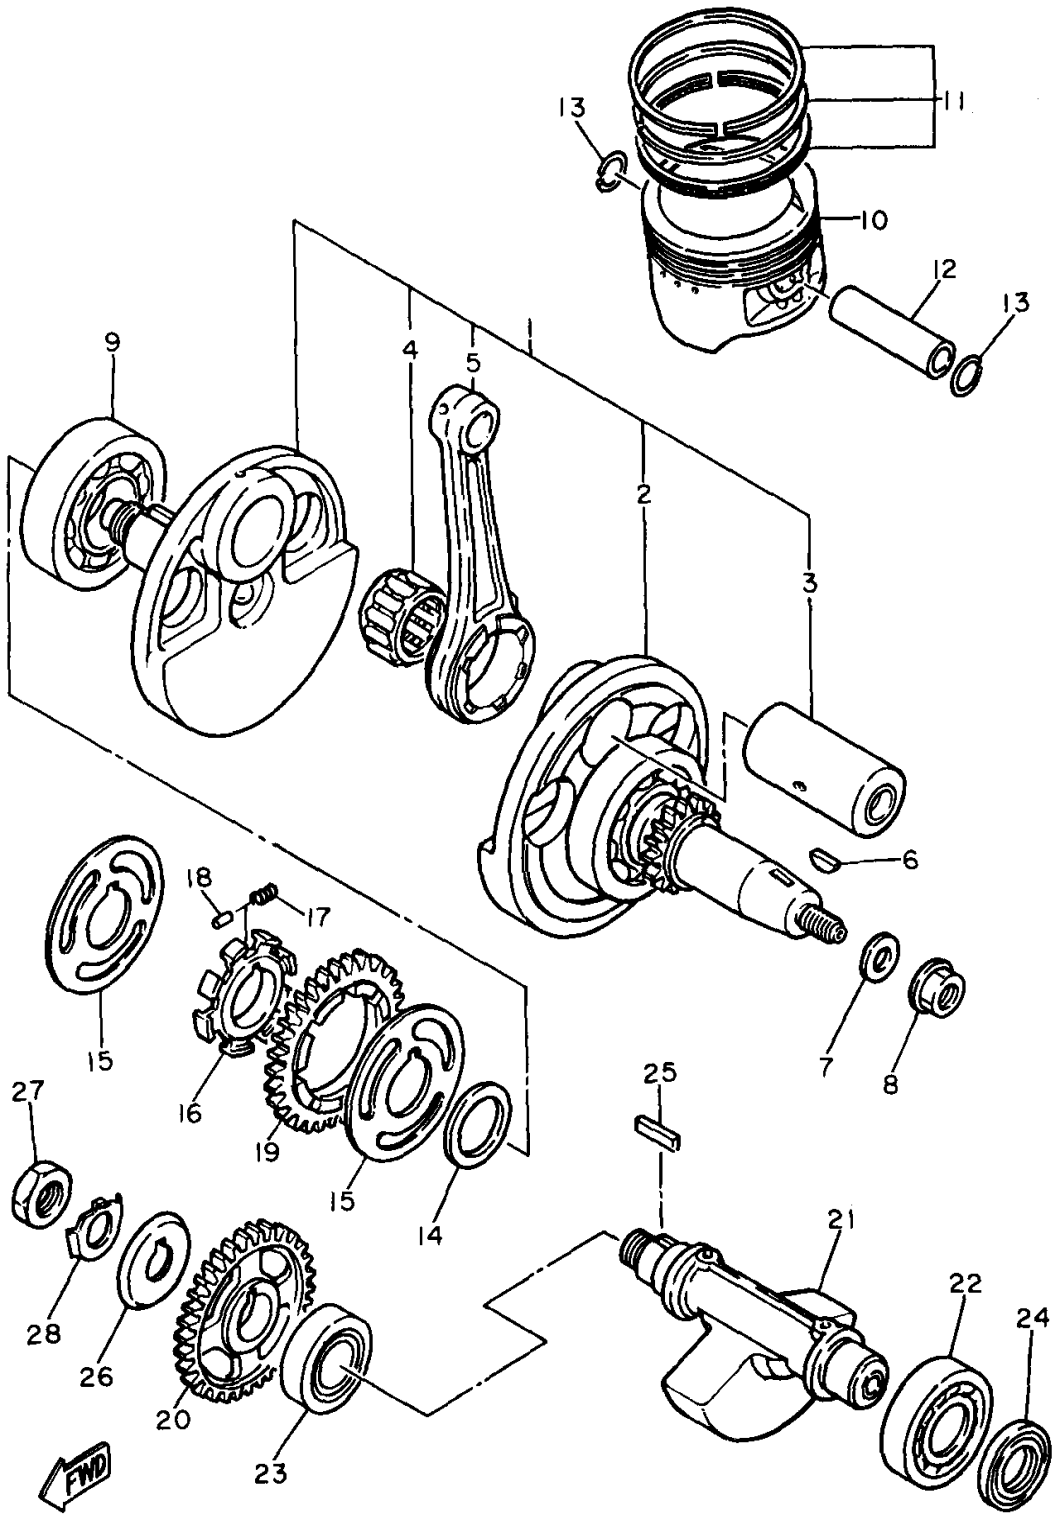

3TB351-0030

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 24 | 93101-25106-00 | OIL SEAL | 1 | |
| 25 | 90282-05013-00 | KEY, STRAIGHT | 1 | |
| 26 | 34K-11145-00-00 | PLATE, BREATHER 2 | 1 | |
| 27 | 90170-16343-00 | NUT | 1 | |
| 28 | 90215-16242-00 | WASHER, LOCK | 1 | |


# CAMSHAFT - CHAIN

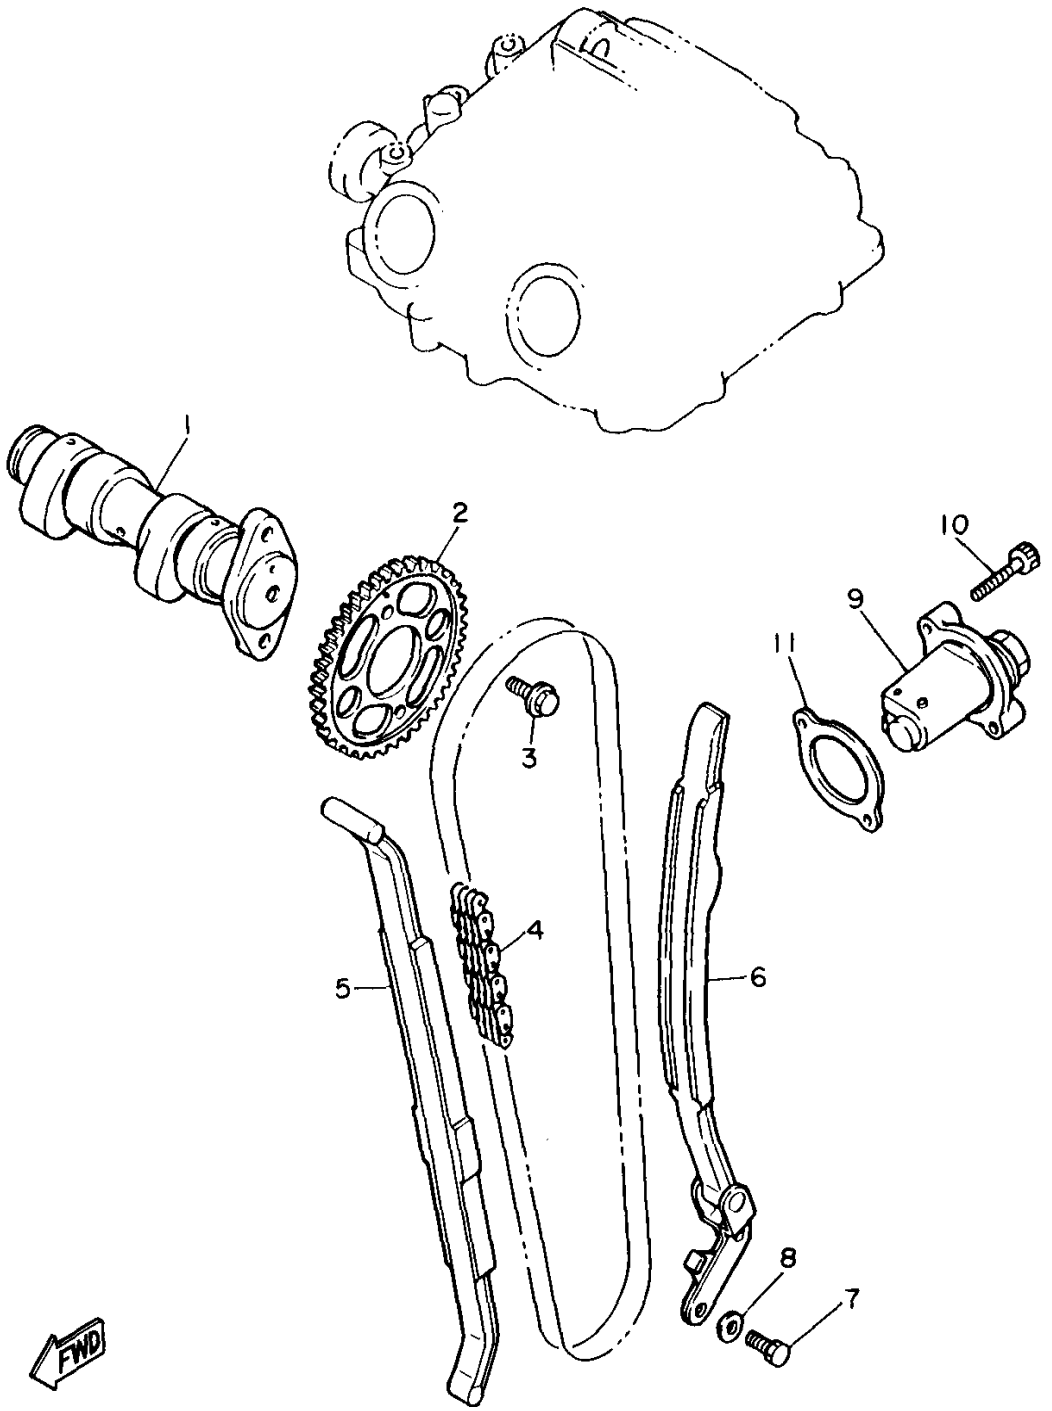


3AJ1351-8050

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 1JK-12171-00-00 | CAMSHAFT 1 | 1 | |
| 2 | 3TB-12176-00-00 | SPROCKET, CAM CHAIN | 1 | |
| 3 | 90105-07087-00 | BOLT, WASHER BASED | 2 | |
| 4 | 94590-27126-00 | CHAIN | 1 | |
| 5 | 34K-12231-00-00 | GUIDE, STOPPER 1 | 1 | |
| 6 | 34K-12241-00-00 | GUIDE, STOPPER 2 | 1 | |
| 7 | 97011-06016-00 | BOLT | 2 | |
| 8 | 92901-06600-00 | WASHER | 2 | |
| 9 | 3TB-12210-00-00 | TENSIONER ASSEMBLY, CAM CHAIN | 1 | |
| 10 | 91316-06025-00 | BOLT | 2 | |
| 11 | 4DW-12213-00-00 | GASKET, TENSIONER CASE | 1 | |


# VALVE

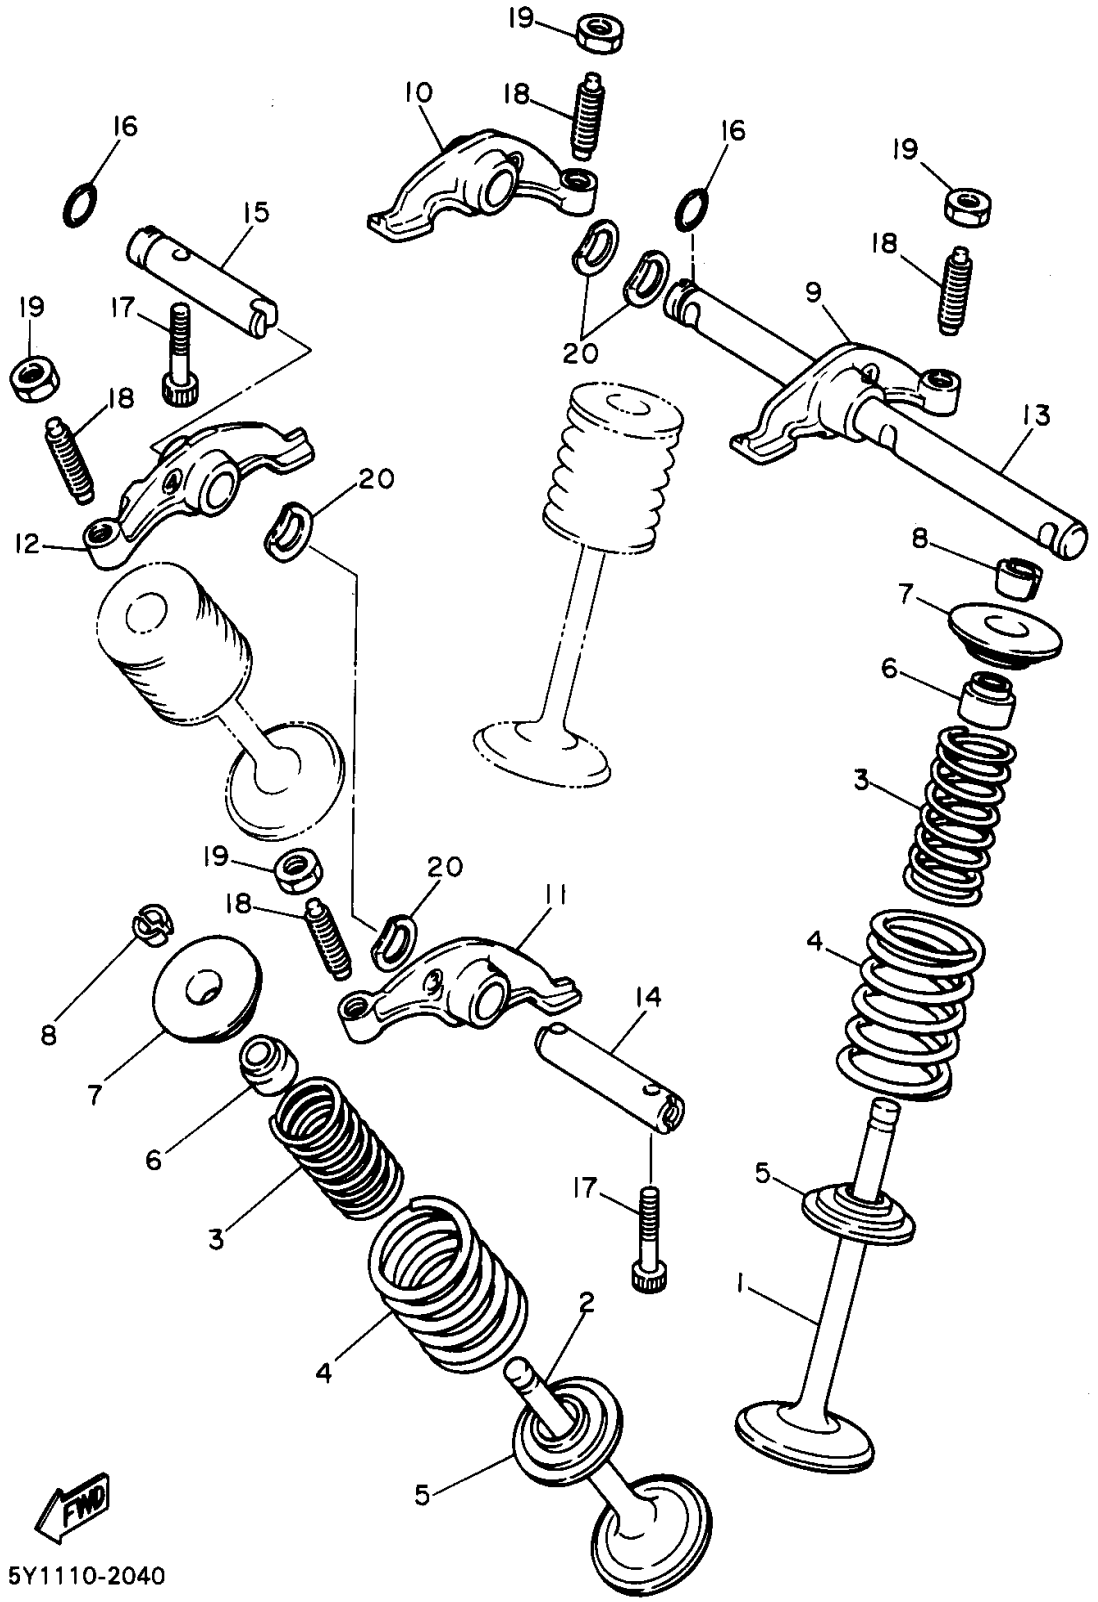

5Y1110-2040

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 1VJ-12111-00-00 | VALVE, INTAKE | 2 | |
| 2 | 1VJ-12121-00-00 | VALVE, EXHAUST | 2 | |
| 3 | 5Y1-12113-00-00 | SPRING, VALVE INNER | 4 | |
| 4 | 5Y1-12114-00-00 | SPRING, VALVE OUTER | 4 | |
| 5 | 4H7-12116-00-00 | SEAT, VALVE SPRING | 4 | |
| 6 | 1J7-12119-01-00 | SEAL, VALVE STEM | 4 | |
| 7 | 2F3-12117-00-00 | RETAINER, VALVE SPRING | 4 | |
| 8 | 1J7-12118-00-00 | COTTER, VALVE | 8 | |
| 9 | 34K-12151-00-00 | ARM, VALVE ROCKER | 1 | |
| 10 | 34K-12161-00-00 | ARM, VALVE ROCKER 2 | 1 | |
| 11 | 34K-12162-00-00 | ARM, VALVE ROCKER 3 | 1 | |
| 12 | 34K-12163-00-00 | ARM, VALVE ROCKER 4 | 1 | |
| 13 | 2NX-12146-00-00 | SHAFT, ROCKER | 1 | |
| 14 | 2NX-12156-00-00 | SHAFT, ROCKER 2 | 1 | |
| 15 | 2NX-12166-00-00 | SHAFT, ROCKER 3 | 1 | |
| 16 | 93210-08521-00 | O-RING | 2 | |
| 17 | 90109-063E8-00 | BOLT | 2 | |
| 18 | 2NX-12159-00-00 | SCREW, VALVE ADJUSTING | 4 | |
| 19 | 90170-06128-00 | NUT | 4 | |
| 20 | 90206-12074-00 | WASHER, WAVE | 4 | |

# OIL PUMP

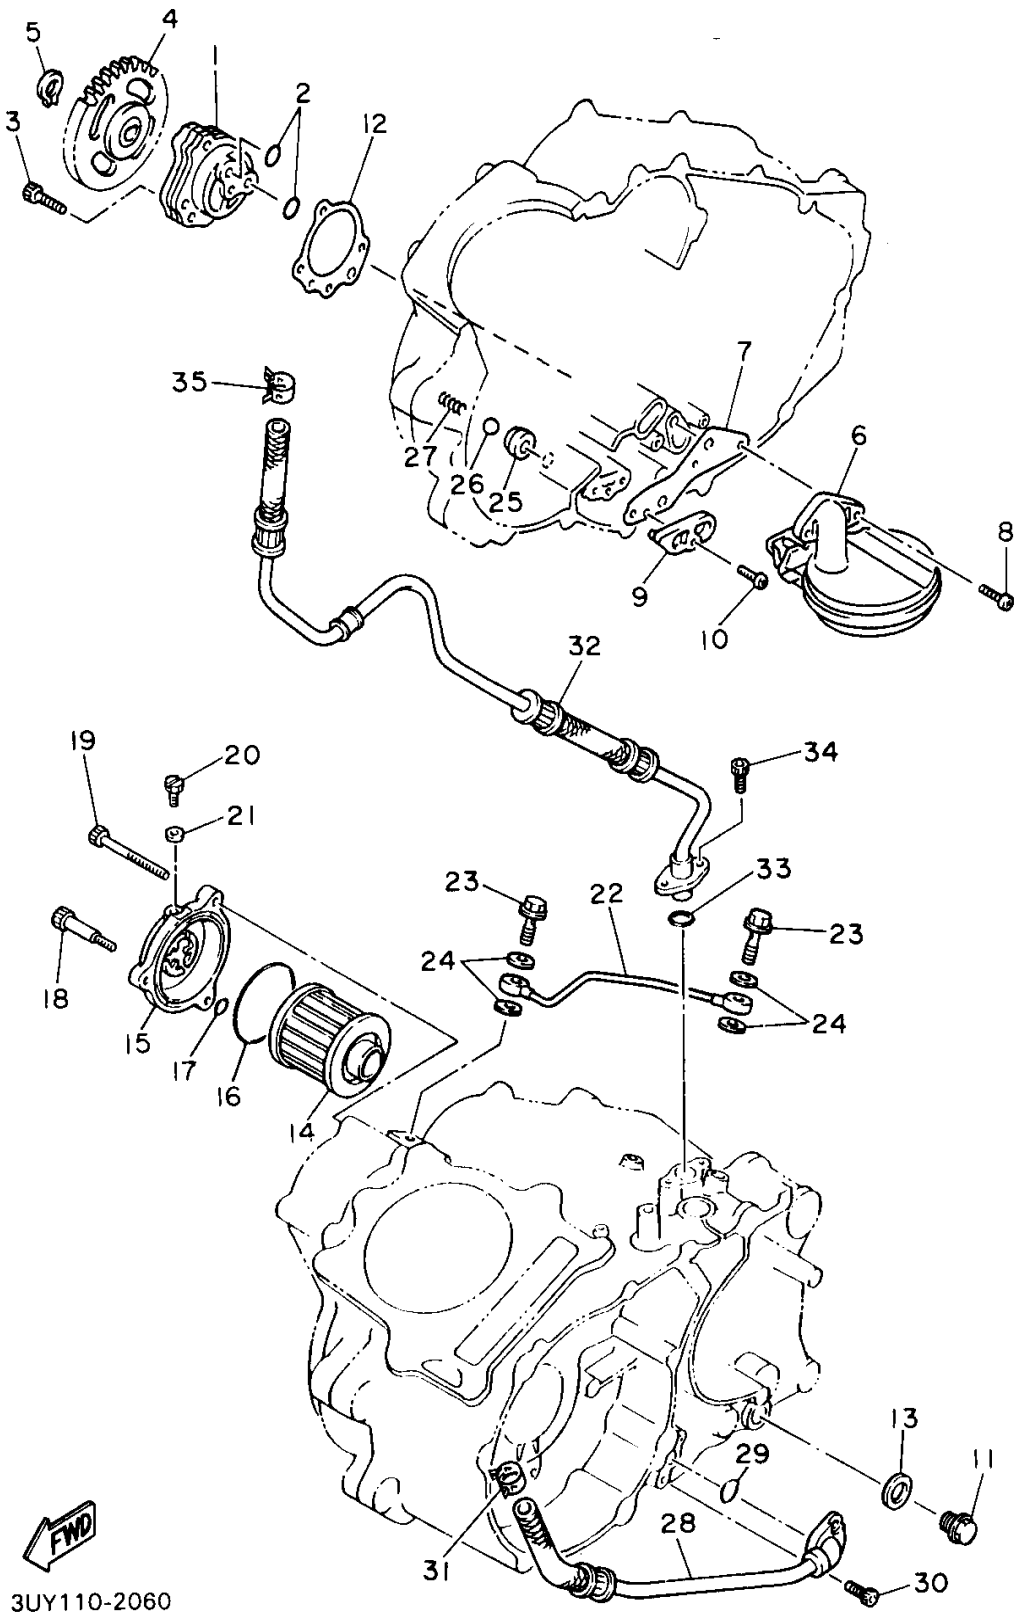


3UY110-2060

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3AJ-13300-01-00 | OIL PUMP ASSEMBLY | 1 | |
| 2 | 93210-13361-00 | O-RING | 2 | |
| 3 | 91316-06035-00 | BOLT | 3 | |
| 4 | 3AJ-13325-00-00 | GEAR, PUMP DRIVEN | 1 | |
| 5 | 99009-11400-00 | CIRCLIP | 1 | |
| 6 | 5Y1-W1343-00-00 | STRAINER COMP. | 1 | |
| 7 | 5Y1-13415-01-00 | SEAL, OIL STRAINER | 1 | |
| 8 | 98502-06016-00 | SCREW, PAN HEAD (98501-06014-00) | 2 | |
| 9 | 5Y1-15427-01-00 | COVER, CAP 2 | 1 | |
| 10 | 98502-06016-00 | SCREW, PAN HEAD (98501-06014-00) | 1 | |
| 11 | 90340-14132-00 | PLUG, STRAIGHT SCREW | 1 | |
| 12 | 3SX-13329-00-00 | GASKET, PUMP COVER | 1 | |
| 13 | 214-11198-01-00 | GASKET | 1 | |
| 14 | 4X7-13440-90-00 | ELMNT ASSEMBLY, OIL CLNR | 1 | |
| 15 | 2WK-13447-00-00 | COVER, OIL ELEMENT | 1 | |
| 16 | 93210-64297-00 | O-RING | 1 | |
| 17 | 93210-07135-00 | O-RING | 1 | |
| 18 | 90109-06419-00 | BOLT | 1 | |
| 19 | 91316-06080-00 | BOLT | 2 | |
| 20 | 90149-05110-00 | SCREW | 1 | |
| 21 | 90430-05126-00 | GASKET | 1 | |
| 22 | 3AJ-13161-00-00 | PIPE, DELIVERY 1 | 1 | |
| 23 | 90401-08133-00 | BOLT, UNION | 2 | |
| 24 | 90430-08204-00 | GASKET | 4 | |
| 25 | 583-13113-00-00 | SEAT, CHECK BALL | 1 | |
| 26 | 93503-08007-00 | BALL | 1 | |
| 27 | 90501-043E0-00 | SPRING, COMPRESSION | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# OIL PUMP

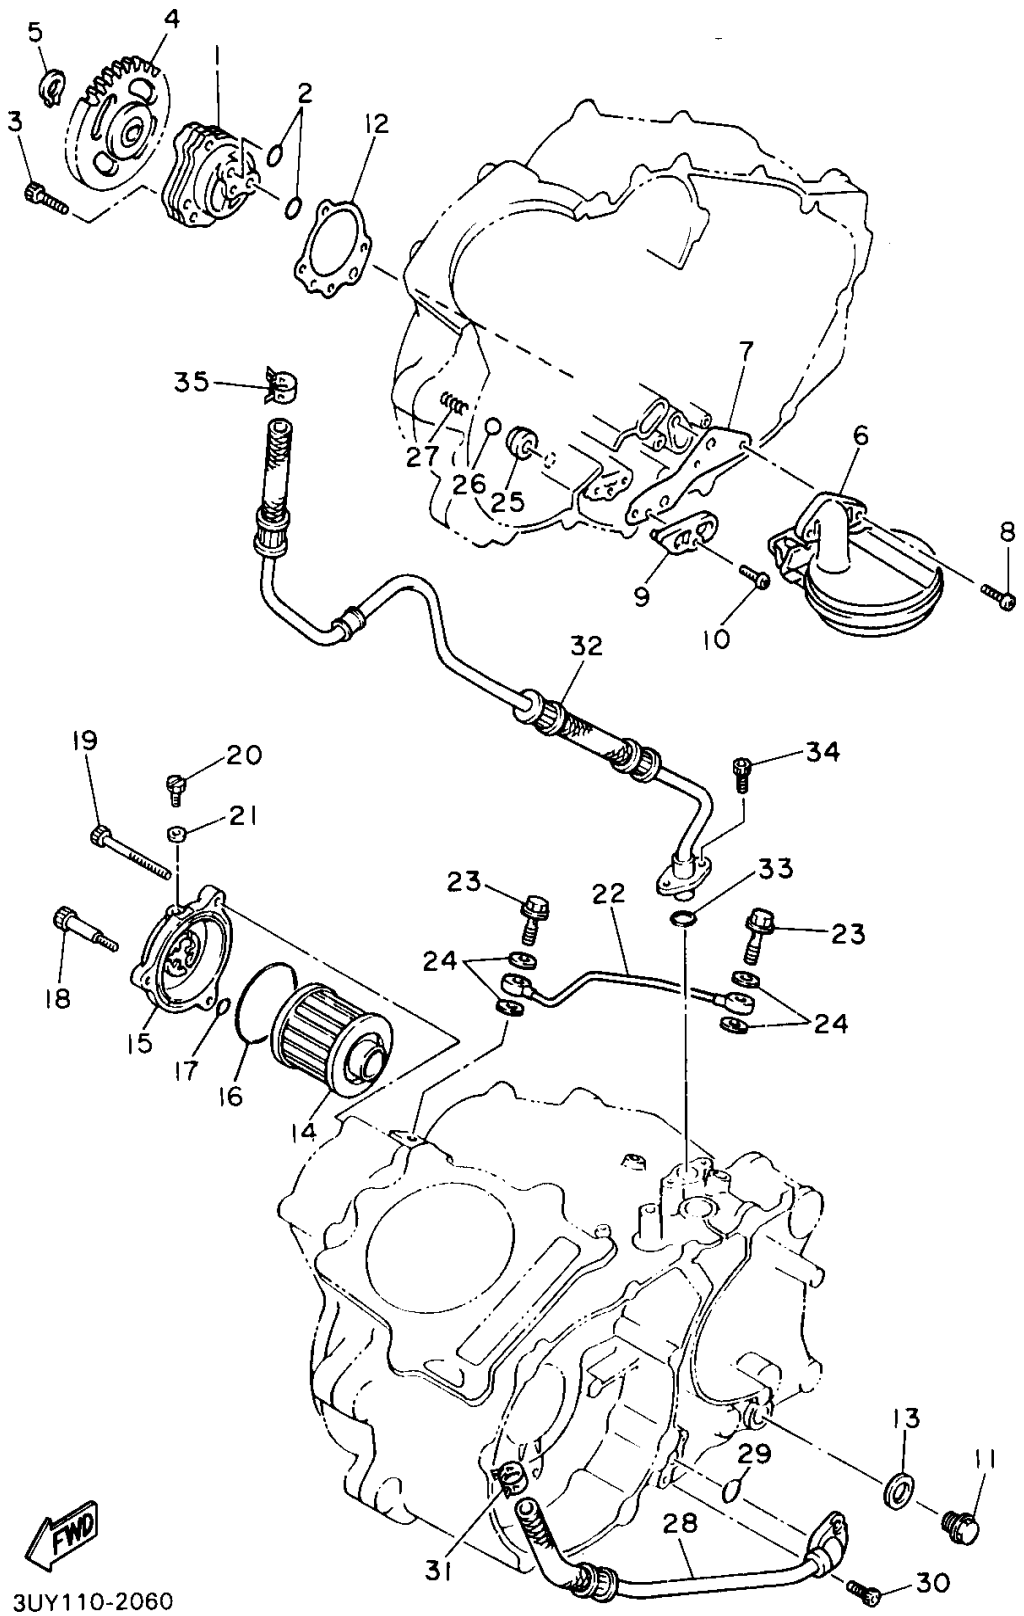

3UY110-2060

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 28 | 3TB-13464-00-00 | HOSE, OIL 1 | 1 | |
| 29 | 93210-10197-00 | O-RING | 1 | |
| 30 | 91316-06016-00 | BOLT, SOCKET HEAD | 2 | |
| 31 | 90450-22052-00 | HOSE CLAMP ASSEMBLY | 1 | |
| 32 | 3TB-13465-00-00 | HOSE, OIL 2 | 1 | |
| 33 | 93210-15171-00 | O-RING | 1 | |
| 34 | 91316-06016-00 | BOLT, SOCKET HEAD | 2 | |
| 35 | 90450-22052-00 | HOSE CLAMP ASSEMBLY | 1 | |

# INTAKE

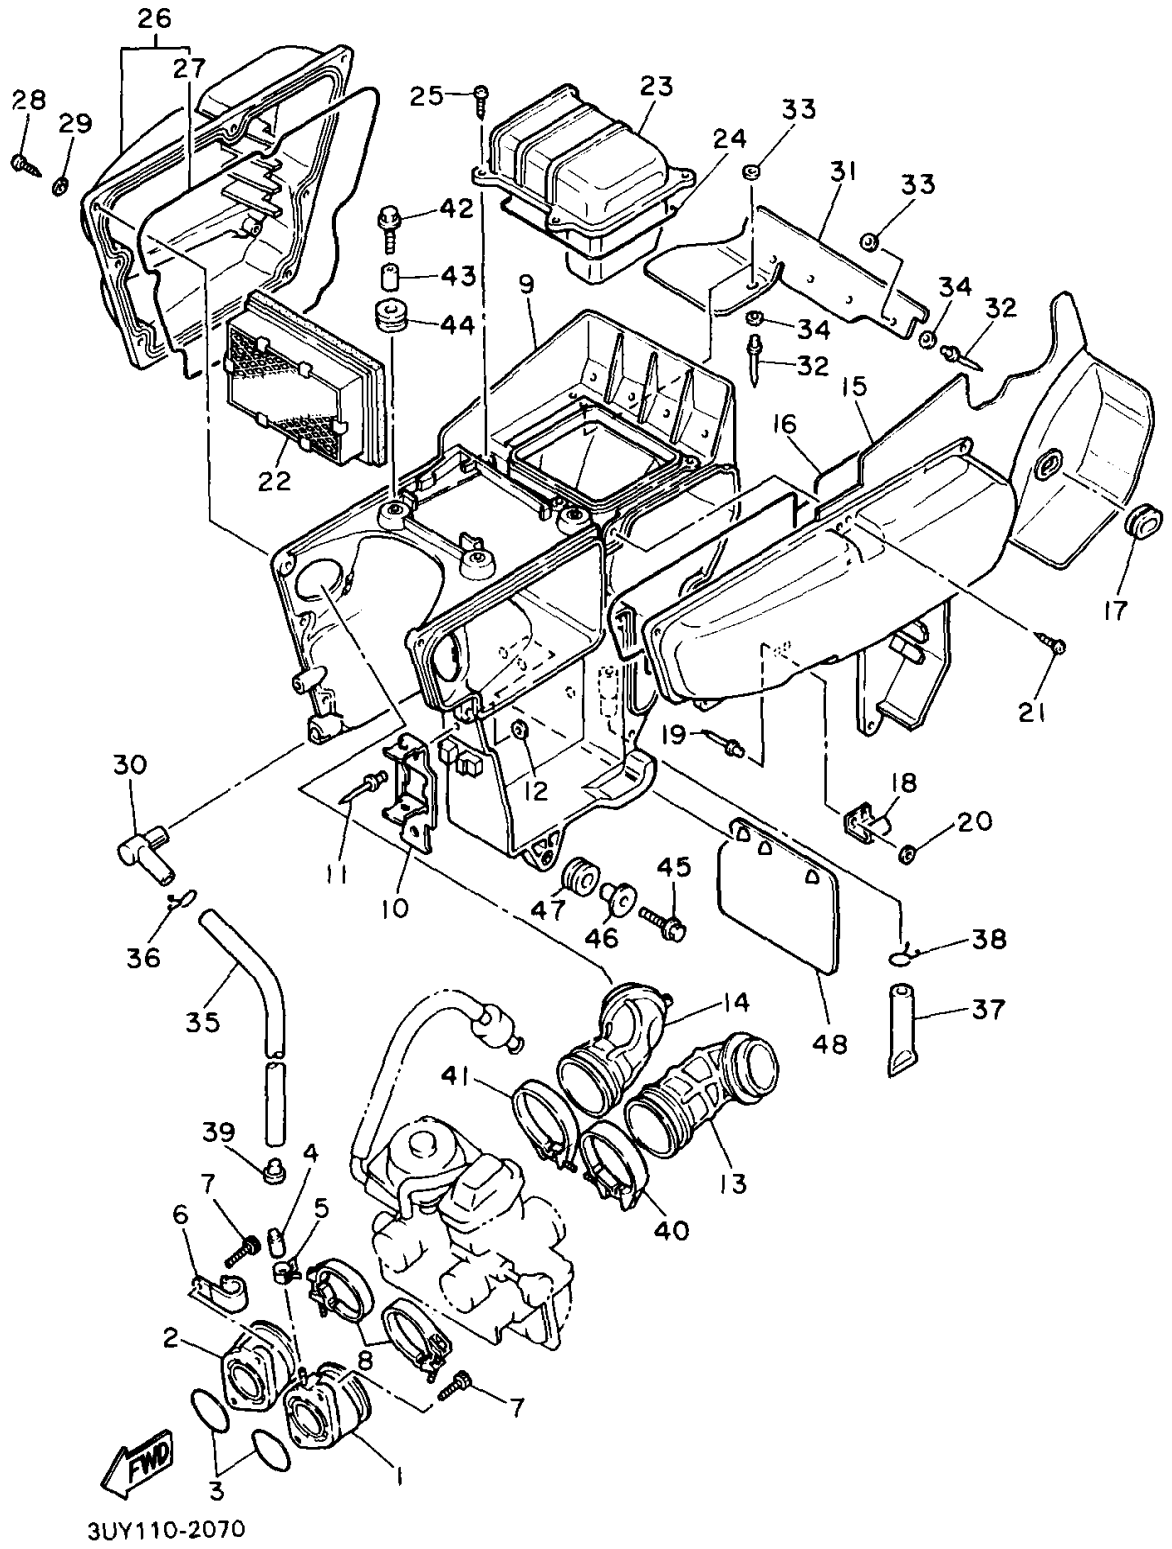



3UY110-2070

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 43F-13586-01-00 | JOINT, CARBURETOR 1 | 1 | |
| 2 | 1VJ-13596-00-00 | JOINT, CARBURETOR 2 | 1 | |
| 3 | 93210-36549-00 | O-RING | 2 | |
| 4 | 16G-13569-00-00 | PLUG, BLIND | 1 | |
| 5 | 90467-10039-00 | CLIP | 1 | |
| 6 | 90465-08028-00 | CLAMP | 1 | |
| 7 | 91316-06020-00 | BOLT, SOCKET HEAD | 4 | |
| 8 | 90460-46206-00 | CLAMP, hose | 2 | |
| 9 | 3TB-14411-00-00 | CASE, AIR CLEANER 1 | 1 | |
| 10 | 3TB-81953-00-00 | STAY, RELAY | 1 | |
| 11 | 90267-40075-00 | RIVET, BLIND | 1 | |
| 12 | 92901-04600-00 | WASHER, PLATE | 1 | |
| 13 | 3TB-14453-00-00 | JOINT, AIR CLEANER 1 | 1 | |
| 14 | 3TB-14454-00-00 | JOINT | 1 | |
| 15 | 3TB-1441A-00-00 | COVER, CLEANER CASE 1 | 1 | |
| 16 | 3TB-14452-00-00 | . SEAL | 1 | |
| 17 | 90480-12325-00 | GROMMET | 1 | |
| 18 | 43G-14436-00-00 | HOOK | 1 | |
| 19 | 90267-40075-00 | RIVET, BLIND | 2 | |
| 20 | 92901-04600-00 | WASHER, PLATE | 2 | |
| 21 | 97706-50520-00 | SCREW, TAPPING | 7 | |
| 22 | 3TB-14451-01-00 | ELEMENT, AIR CLEANER | 1 | |
| 23 | 3TB-14412-00-00 | CAP, CLEANER CASE 1 | 1 | |
| 24 | 3TB-14457-00-00 | SEAL | 1 | |
| 25 | 97706-50520-00 | SCREW, TAPPING | 4 | |
| 26 | 3TB-1441E-00-00 | COVER, CLEANER CASE 2 | 1 | |
| 27 | 3TB-1446R-00-00 | . SEAL | 1 | |
| 28 | 98506-05020-00 | SCREW, PAN HEAD | 7 | |
| 29 | 92906-05600-00 | WASHER, PLATE | 7 | |

*CONTINUED ON NEXT FRAME ➤*


# INTAKE

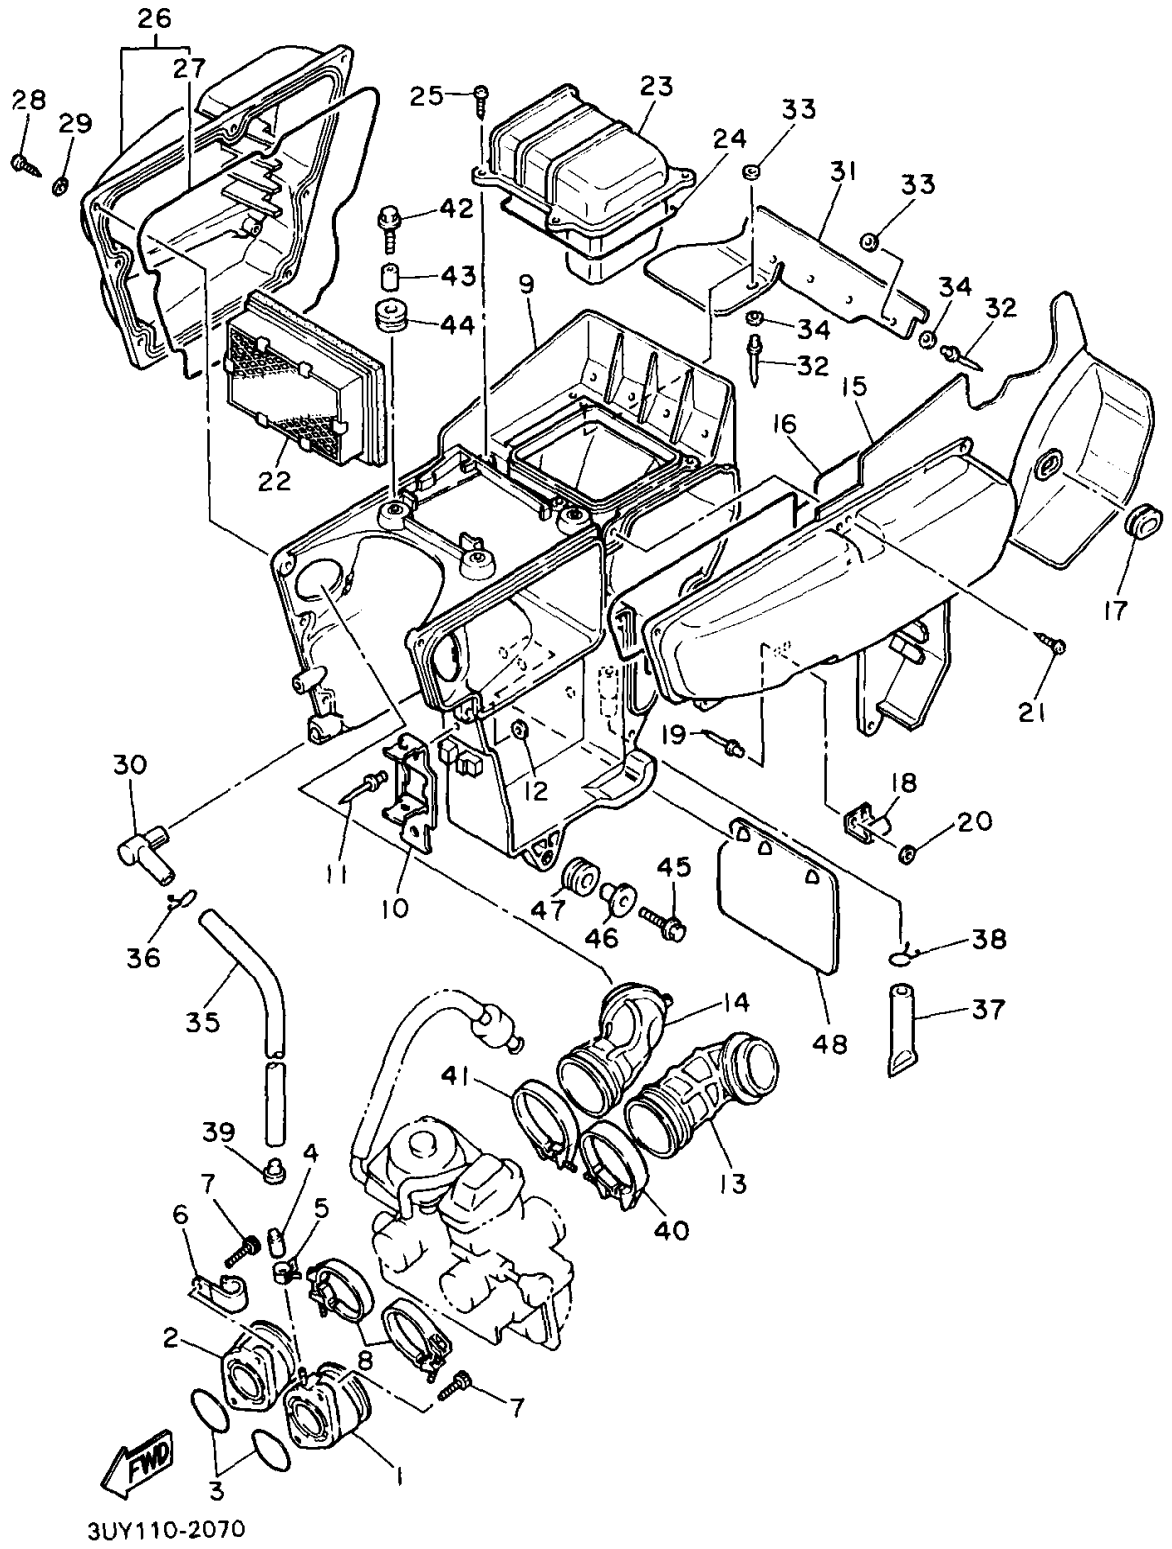


3UY110-2070

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 30 | 5Y1-14419-00-00 | PIPE | 1 | |
| 31 | 3TB-21621-00-00 | FLAP | 1 | |
| 32 | 90267-40077-00 | RIVET, BLIND | 5 | |
| 33 | 90201-047A2-00 | WASHER, PLATE | 5 | |
| 34 | 92990-04200-00 | WASHER, PLAIN | 5 | |
| 35 | 90445-126G6-00 | HOSE | 1 | |
| 36 | 90467-12052-00 | CLIP | 1 | |
| 37 | 34X-1443E-00-00 | PIPE, DRAIN | 1 | |
| 38 | 90467-11102-00 | CLIP, SCISSOR | 1 | |
| 39 | 90338-08174-00 | PLUG | 1 | |
| 40 | 90460-51059-00 | CLAMP, HOSE | 1 | |
| 41 | 90460-58015-00 | CLAMP, HOSE | 1 | |
| 42 | 95811-06020-00 | BOLT, FLANGE | 3 | |
| 43 | 90387-06033-00 | COLLAR | 3 | |
| 44 | 90480-14329-00 | GROMMET | 3 | |
| 45 | 95816-06025-00 | BOLT, FLANGE | 1 | |
| 46 | 90387-074X3-00 | COLLAR | 1 | |
| 47 | 90480-15064-00 | GROMMET | 1 | |
| 48 | 34X-21691-00-00 | FLAP | 1 | |

# CARBURETOR

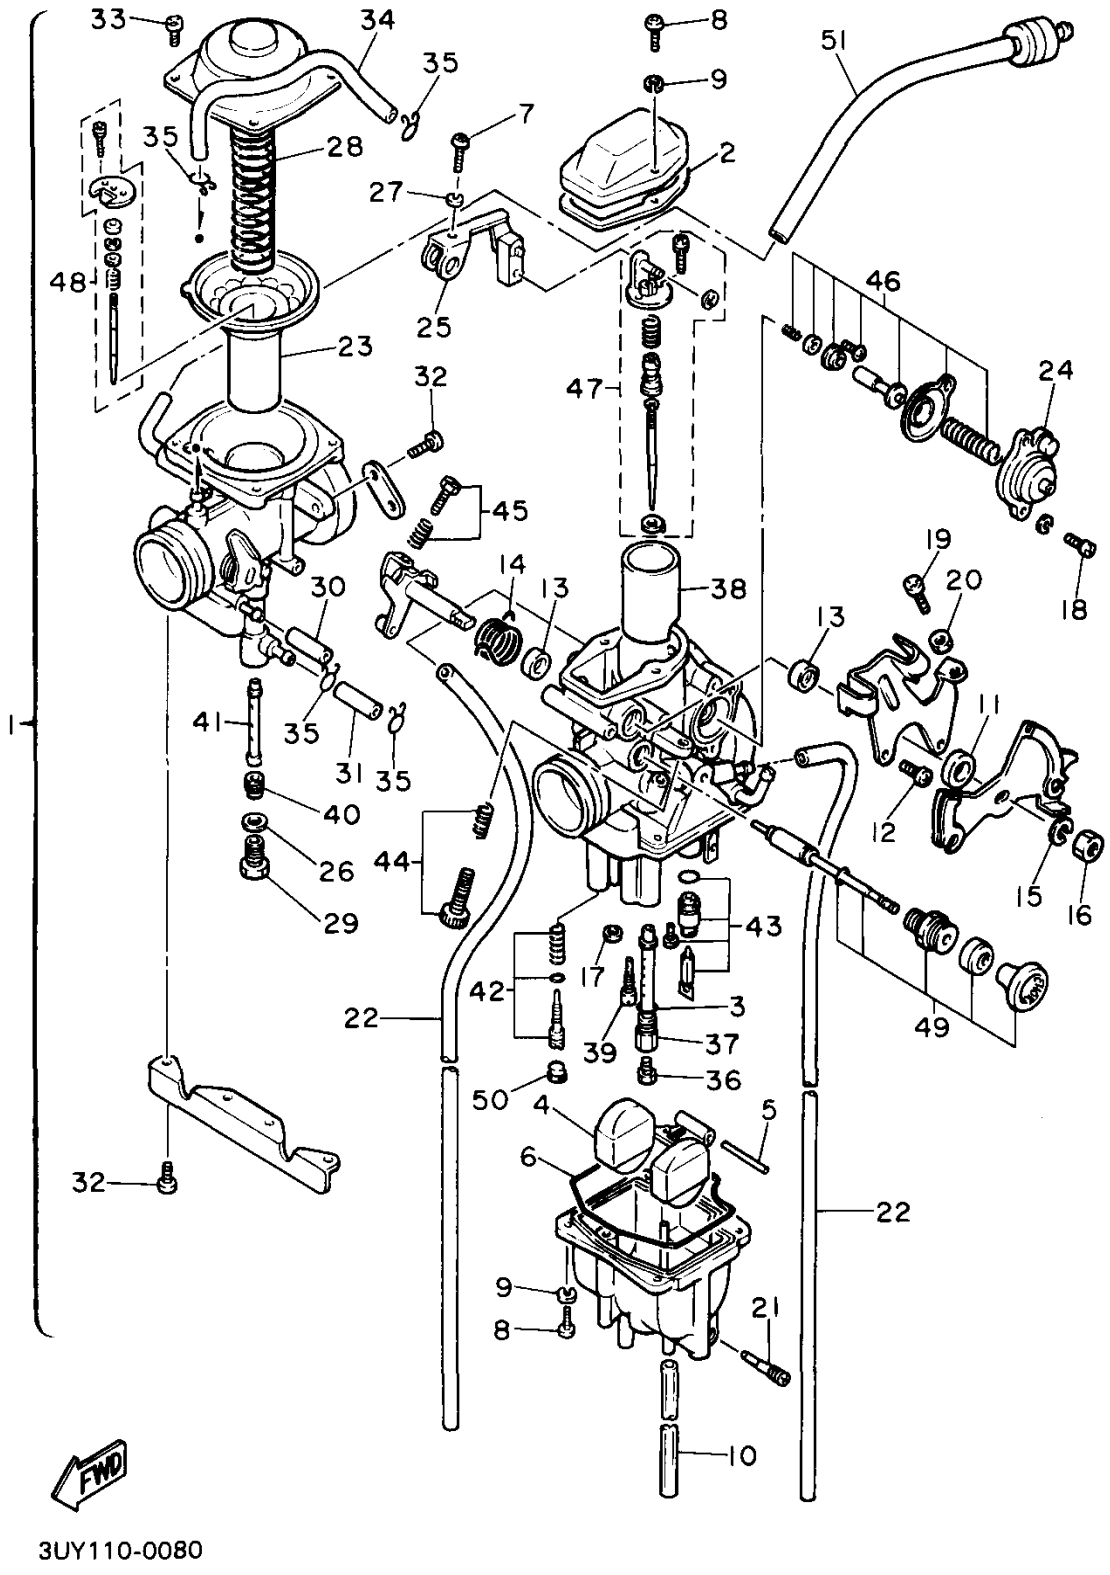



3UY110-0080

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3UY-14301-00-00 | CARBURETOR ASSEMBLY 1 . | 1 | UR CA ONLY |
| | 3UY-14301-10-00 | CARBURETOR ASSEMBLY 1 . | 1 | UR NON-CA |
| 2 | 5Y1-14198-00-00 | . GASKET . . . . . | 1 | |
| 3 | 360-24512-00-00 | . GASKET . . . . . | 2 | |
| 4 | 2JN-14385-00-00 | . FLOAT . . . . . | 1 | |
| 5 | 6E5-14386-01-00 | . PIN, FLOAT . . . . . | 1 | |
| 6 | 5Y1-14384-00-00 | . GASKET, FLOAT CHAMBER . | 1 | |
| 7 | 98580-04016-00 | . SCREW, PAN HEAD . . . . . | 1 | |
| 8 | 98503-04014-00 | . SCREW, PAN HEAD . . . . . | 6 | |
| 9 | 92901-04100-00 | . WASHER, SPRING . . . . . | 6 | |
| 10 | 1JK-14197-00-00 | . PIPE . . . . . | 1 | |
| 11 | 1JK-14357-00-00 | . COLLAR . . . . . | 1 | |
| 12 | 98580-04010-00 | . SCREW, PAN HEAD . . . . . | 2 | |
| 13 | 5Y1-14572-00-00 | . PLATE, STAY . . . . . | 2 | |
| 14 | 1XL-14131-00-00 | . SPRING, THROTTLE VALVE . | 1 | |
| 15 | 5Y1-14356-00-00 | . WASHER, SPRING . . . . . | 1 | |
| 16 | 5Y1-14358-00-00 | . NUT . . . . . | 1 | |
| 17 | 5Y1-14536-00-00 | . GASKET . . . . . | 1 | |
| 18 | 98580-04010-00 | . SCREW, PAN HEAD . . . . . | 2 | |
| 19 | 98580-04020-00 | . SCREW, PAN HEAD . . . . . | 1 | |
| 20 | 30X-14358-00-00 | . NUT . . . . . | 1 | |
| 21 | 14T-14104-00-00 | . AIR SCREW SET . . . . . | 1 | |
| 22 | 1VJ-14197-00-00 | . PIPE . . . . . | 2 | |
| 23 | 1JK-14940-01-00 | . DIAPHRAGM ASSEMBLY . . . | 1 | |
| 24 | 2JN-14293-00-00 | . COVER 1 . . . . . | 1 | |
| 25 | 1JK-14291-00-00 | . CONNECTER COMP . . . . . | 1 | |
| 26 | 7KF-14227-00-00 | . WASHER . . . . . | 1 | |
| 27 | 92990-04100-00 | . WASHER, SPRING . . . . . | 1 | |
| 28 | 1VJ-14286-00-00 | . SPRING . . . . . | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# CARBURETOR

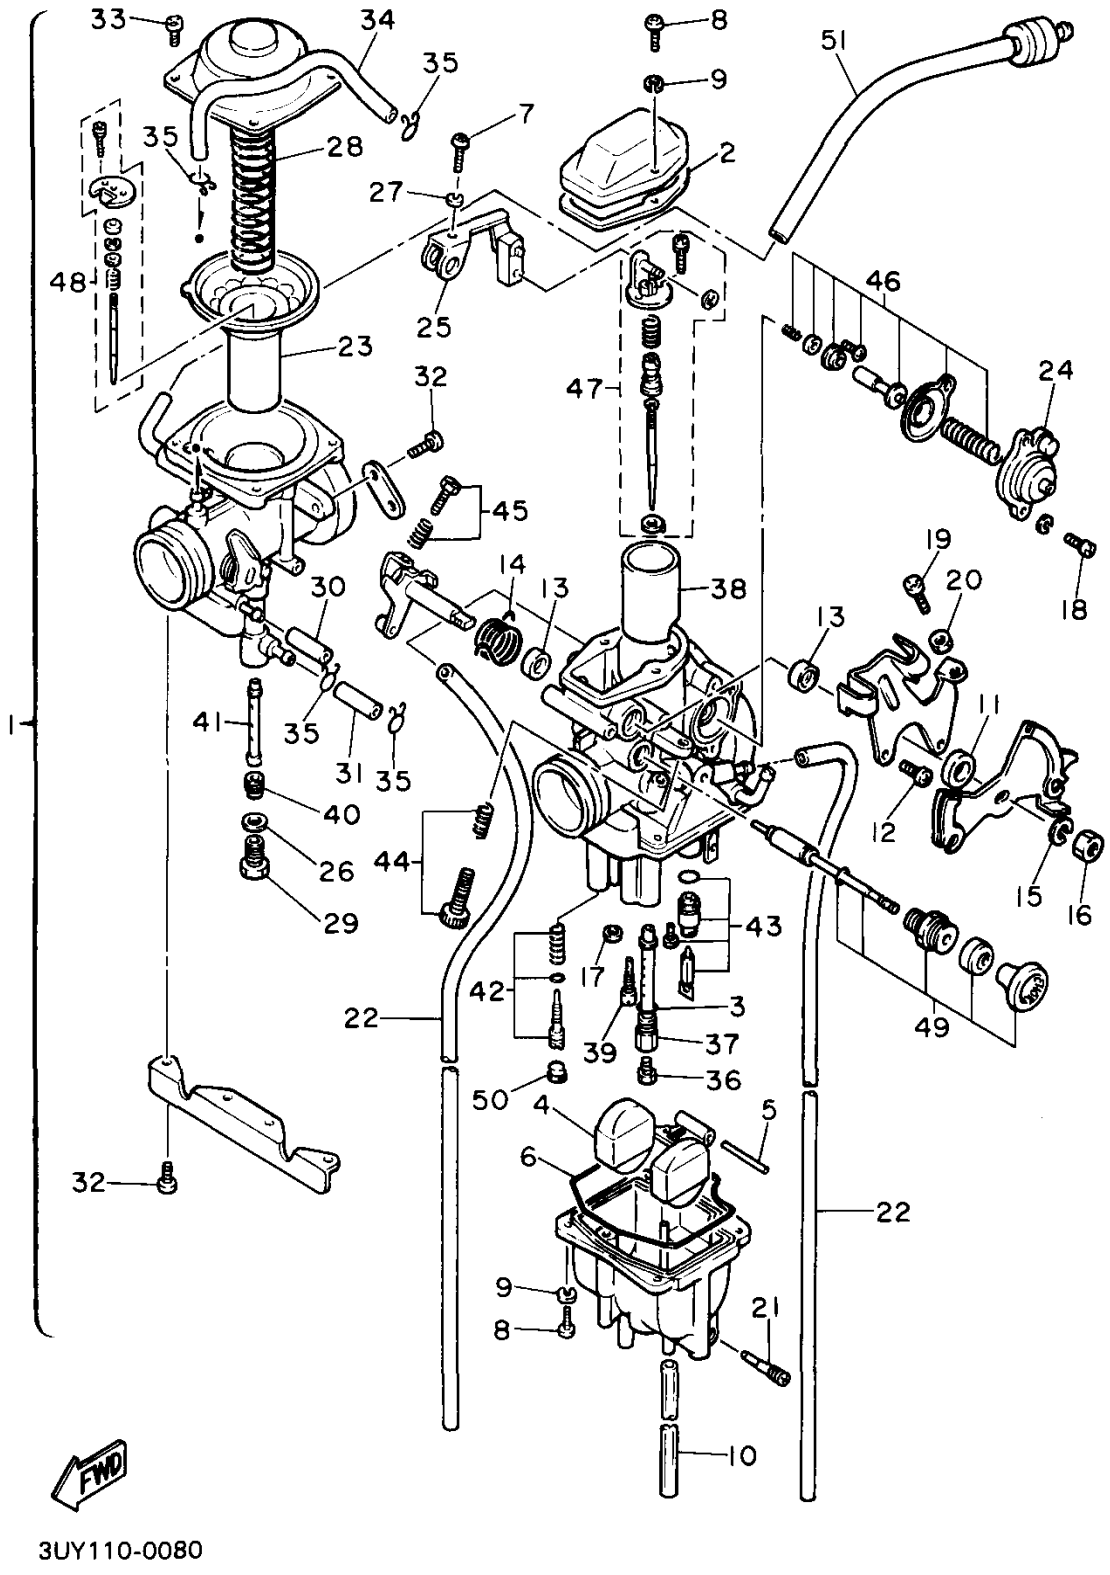


3UY110-0080

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 29 | 7KF-14162-00-00 | . BOLT, HOLDING | 1 | |
| 30 | 5Y1-14349-00-00 | . PIPE | 1 | |
| 31 | 30X-14148-00-00 | . PIPE | 1 | |
| 32 | 98501-05010-00 | . SCREW, PAN HEAD | 6 | |
| 33 | 98580-04010-00 | . SCREW, PAN HEAD | 4 | |
| 34 | 5Y1-14149-00-00 | . PIPE | 1 | |
| 35 | 5Y1-14159-00-00 | . CLIP | 4 | |
| 36 | 288-14343-60-00 | . JET, MAIN (#120) | 1 | UR |
| | 288-14343-65-00 | . JET, MAIN #1 0 | 1 | UR STD |
| | 288-14343-70-00 | . JET, MAIN (#140) | 1 | UR |
| 37 | 3UY-14341-00-00 | . NOZZLE, MAIN | 1 | |
| 38 | 3UY-14313-55-00 | . VALVE, THROTTLE 2 | 1 | |
| 39 | 43F-14342-24-00 | . JET, PILOT (# 48) | 1 | |
| 40 | 30X-14343-52-00 | . JET, MAIN (#104) | 1 | |
| 41 | 2KF-14355-00-00 | . NOZZLE, MAIN 2 | 1 | |
| 42 | 51Y-14105-00-00 | . PILOT SCREW SET (30X-14105-00-00) | 1 | |
| 43 | 2JN-14107-00-00 | . NEEDLE VALVE SET | 1 | |
| 44 | 2NX-1490K-00-00 | . STOP SCREW SET | 1 | |
| 45 | 2NX-14103-00-00 | . THROTTLE SCREW SET | 1 | |
| 46 | 1JK-1490A-00-00 | . DIAPHRAGM SET, 1 | 1 | |
| 47 | 3UY-1490J-10-00 | . NEEDLE SET | 1 | |
| 48 | 3UY-1490J-00-00 | . NEEDLE SET | 1 | |
| 49 | 2KF-1410A-00-00 | . STARTER SET | 1 | |
| 50 | 2WJ-14367-00-00 | . PLUG | 1 | |
| 51 | 3TD-14197-00-00 | PIPE | 1 | |


# EXHAUST

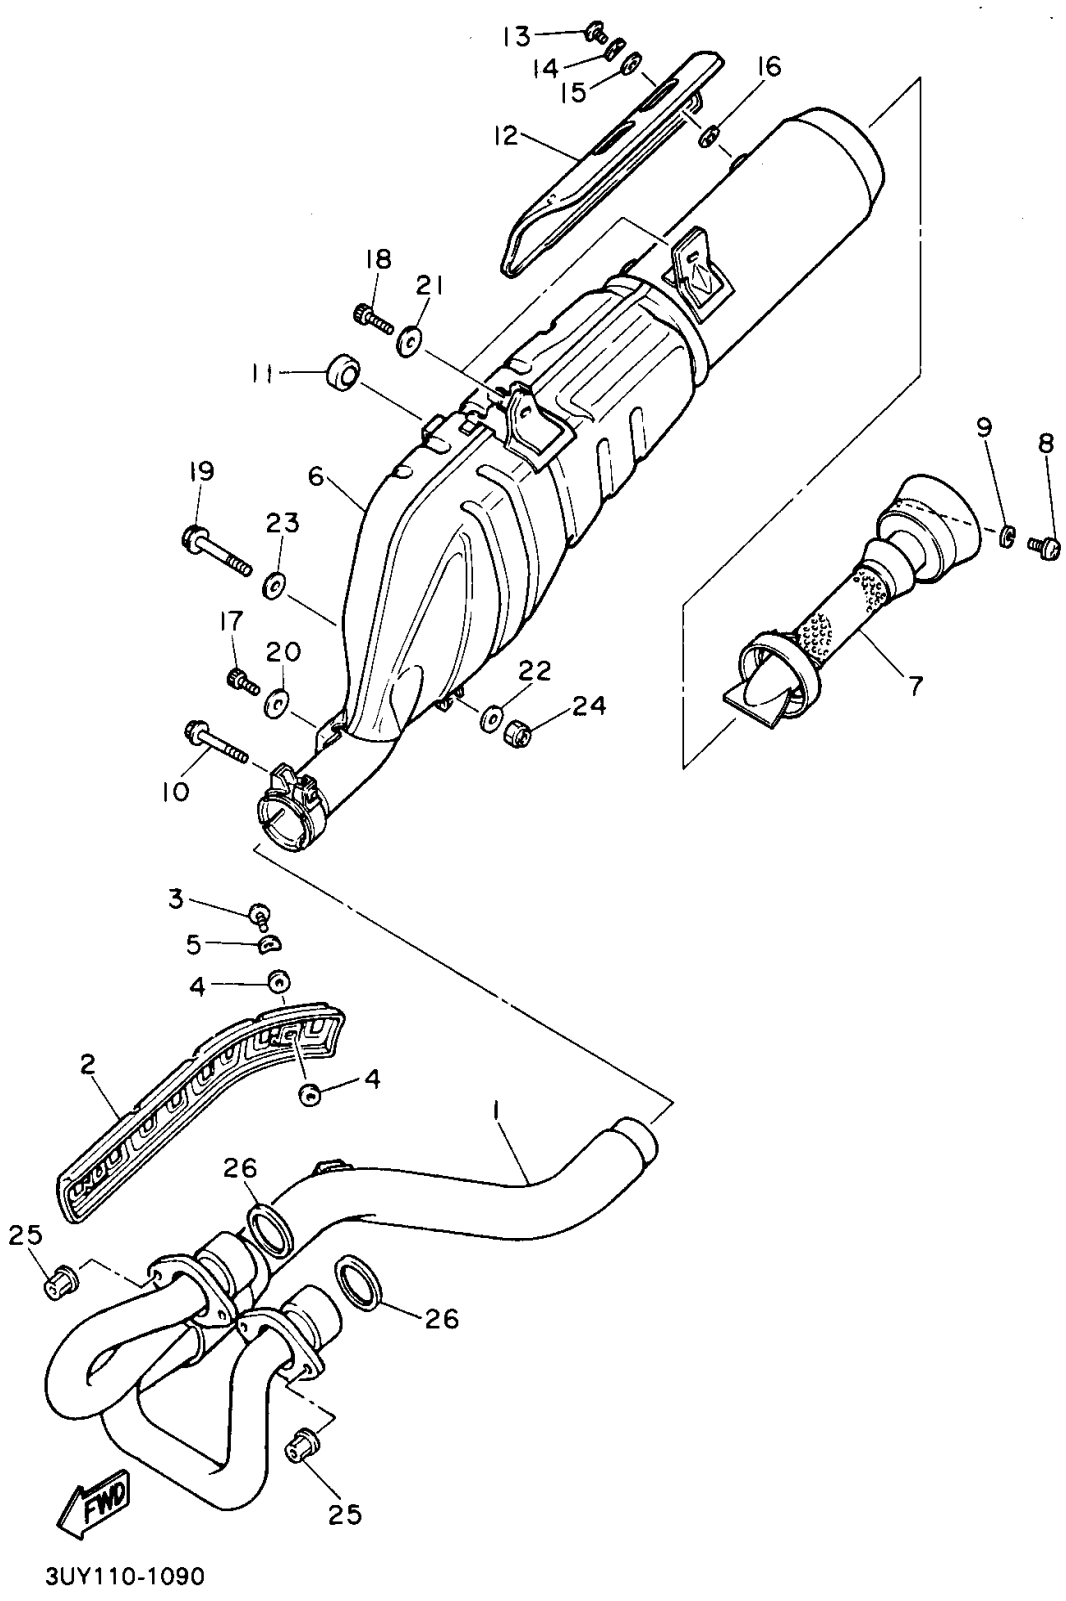

3UY110-1090

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 34K-14611-01-00 | PIPE, EXHAUST 1 | 1 | |
| 2 | 54G-14628-01-00 | PROTC, EXHAUST PIPEEXHAUST PIPE | 1 | |
| 3 | 90164-06017-00 | SCREW, TAPPING | 2 | |
| 4 | 30X-14766-00-00 | WASHER, PROTECTOR | 4 | |
| 5 | 90206-06090-00 | WASHER, WAVE | 2 | |
| 6 | 3UY-14711-00-00 | MUFFLER 1 | 1 | |
| 7 | 34K-14752-00-00 | PIPE, OUTLET | 1 | |
| 8 | 98506-06010-00 | SCREW, PAN HEAD | 1 | |
| 9 | 92906-06100-00 | WASHER, SPRING | 1 | |
| 10 | 95026-08045-00 | BOLT, FLANGE | 1 | |
| 11 | 22W-24181-00-00 | DAMPER, LOCATING 1 | 1 | |
| 12 | 3TB-14728-00-00 | PROTECTOR, MUFFLER 2 | 1 | |
| 13 | 98980-06010-00 | SCREW, BIND | 2 | |
| 14 | 90206-06090-00 | WASHER, WAVE | 2 | |
| 15 | 4BD-14766-00-00 | WASHER, PROTECTOR | 2 | |
| 16 | 30X-14766-00-00 | WASHER, PROTECTOR | 2 | |
| 17 | 90109-085E2-00 | BOLT | 1 | |
| 18 | 90105-10186-00 | BOLT, WASHER BASED | 2 | |
| 19 | 90105-10232-00 | BOLT, WASHER BASED | 1 | |
| 20 | 90201-08326-00 | WASHER, PLATE | 1 | |
| 21 | 90201-102J5-00 | WASHER, PLATE | 2 | |
| 22 | 90201-101J1-00 | WASHER, PLATE | 1 | |
| 23 | 90201-10144-00 | WASHER, PLATE | 1 | |
| 24 | 95611-10200-00 | NUT, SELF-LOCKING | 1 | |
| 25 | 90179-06500-00 | NUT | 4 | |
| 26 | 5Y1-14613-00-00 | GASKET, EXHAUST PIPE | 2 | |


# CRANKCASE

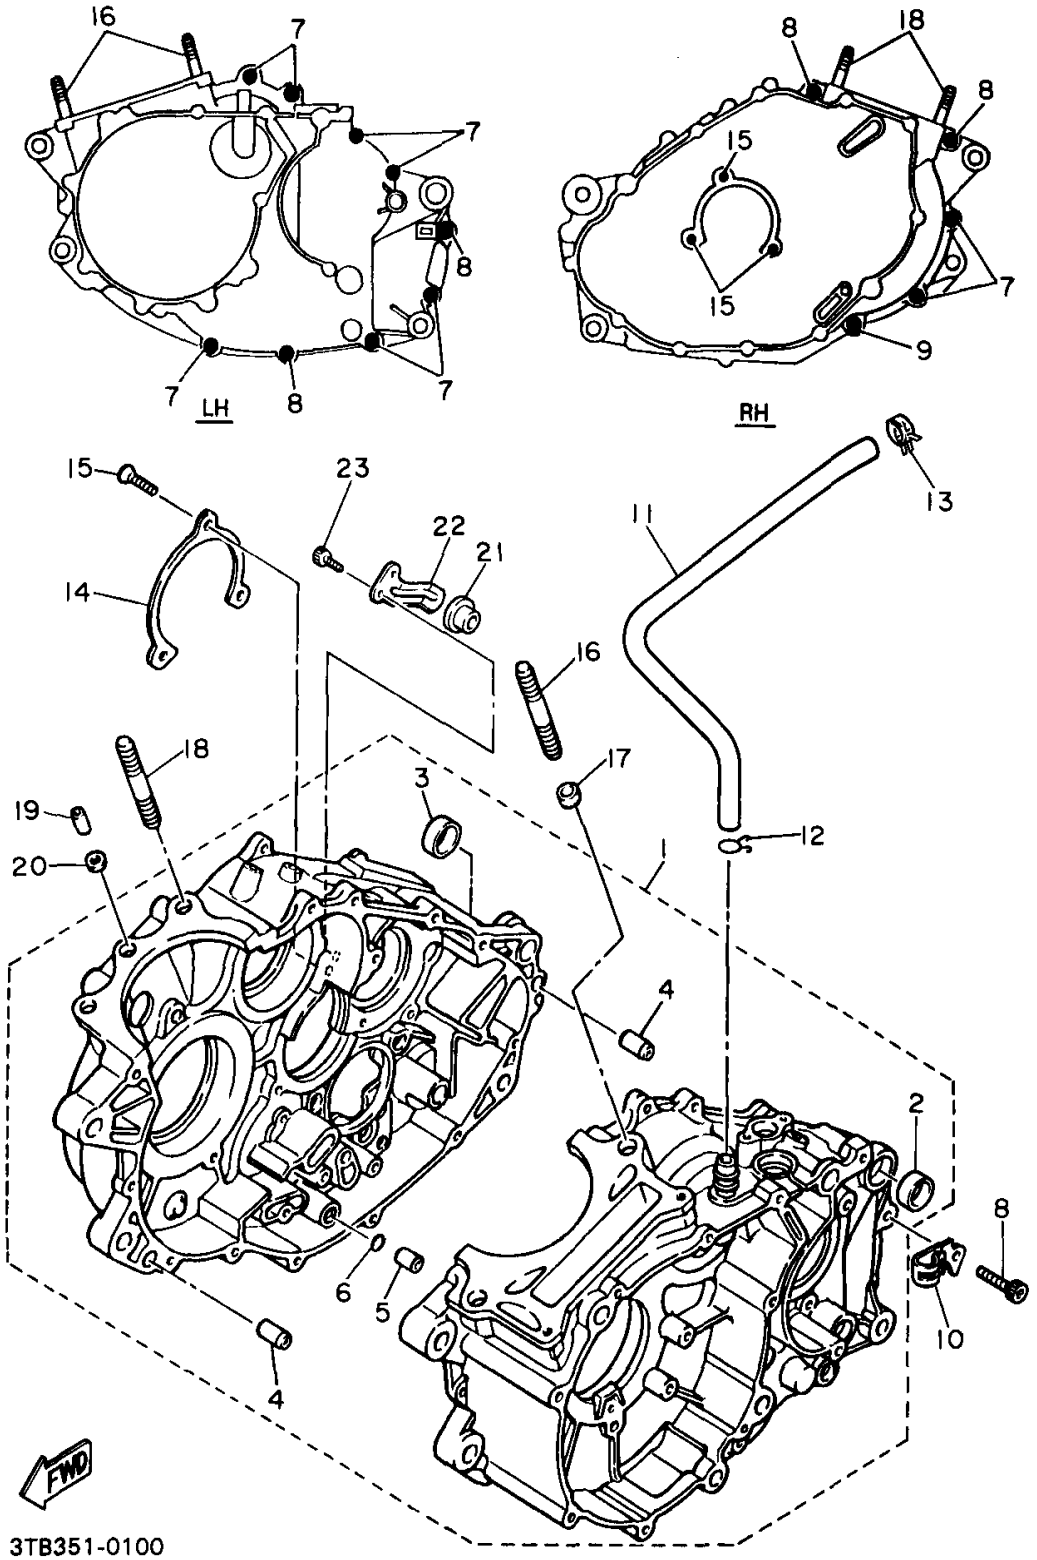


3TB351-0100

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3DS-15100-00-00 | CRANKCASE ASSEMBLY .... | 1 | CIRCUIT SILVER |
| 2 | 90387-17783-00 | . COLLAR ..... | 1 | |
| 3 | 90387-16782-00 | . COLLAR ..... | 1 | |
| 4 | 99510-12016-00 | . PIN, DOWEL ..... | 2 | |
| 5 | 99510-08016-00 | . PIN, DOWEL ..... | 1 | |
| 6 | 93210-07135-00 | . O-RING ..... | 1 | |
| 7 | 90110-06138-00 | BOLT, HEX SKT HEAD ..... | 9 | |
| 8 | 91316-06045-00 | BOLT, SOCKET HEAD ..... | 4 | |
| 9 | 91316-06060-00 | BOLT ..... | 1 | |
| 10 | 90465-08344-00 | CLAMP ..... | 1 | |
| 11 | 3TB-11166-00-00 | PIPE, BREATHER 1 ..... | 1 | |
| 12 | 90467-14015-00 | CLIP ..... | 1 | |
| 13 | 90467-17128-00 | CLIP ..... | 1 | |
| 14 | 5Y1-15383-00-00 | PLATE, BEARING COVER .... | 1 | |
| 15 | 98701-06012-00 | SCREW, FLAT HEAD (92701-06012) ..... | 3 | |
| 16 | 90116-10506-00 | BOLT, STUD ..... | 2 | |
| 17 | 99510-14016-00 | PIN, DOWEL ..... | 2 | |
| 18 | 90116-10263-00 | BOLT, STUD ..... | 2 | |
| 19 | 99510-08016-00 | PIN, DOWEL ..... | 1 | |
| 20 | 90430-08178-00 | GASKET ..... | 1 | |
| 21 | 3Y6-15167-00-00 | PLUG, BLIND 1 ..... | 1 | |
| 22 | 3Y6-15144-00-00 | PLATE, LOCK ..... | 1 | |
| 23 | 97011-06016-00 | BOLT ..... | 2 | |

# CRANKCASE COVER 1

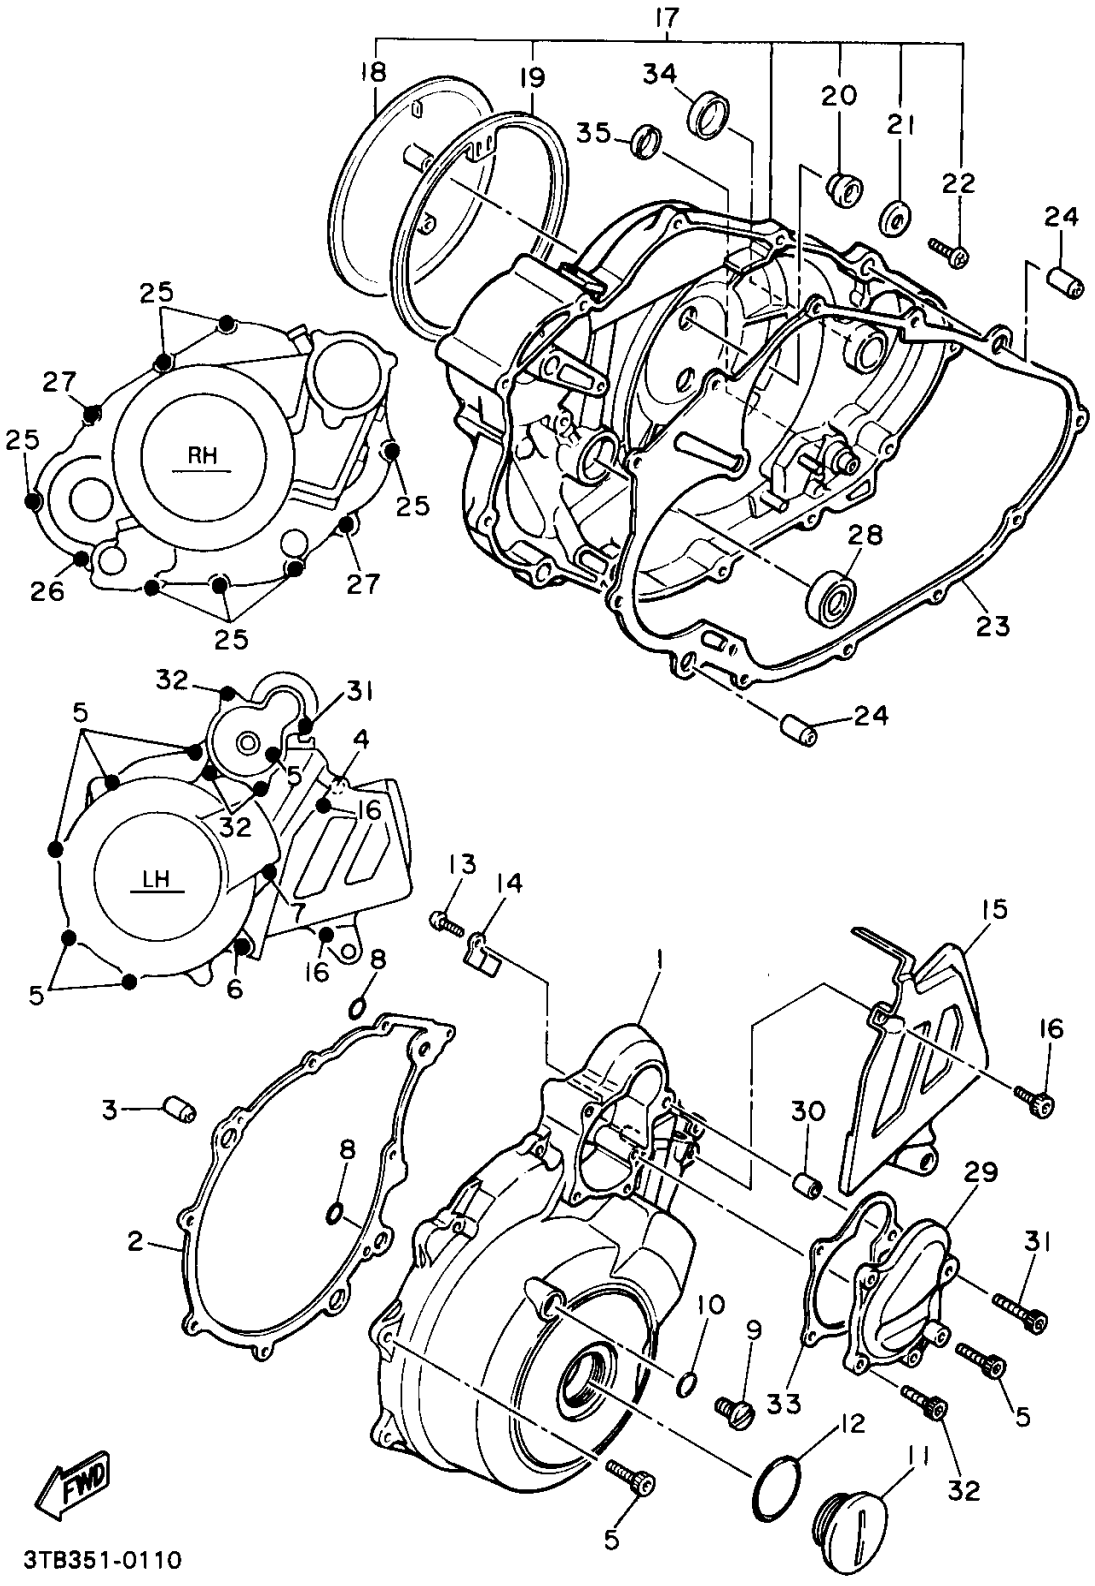



3TB351-0110

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-15411-01-00 | COVER, CRANKCASE 1 | 1 | |
| 2 | 4DW-15451-00-00 | GASKET, CRANKCASE COVER 1 | 1 | |
| 3 | 99510-12016-00 | PIN, DOWEL | 2 | |
| 4 | 91316-06035-00 | BOLT | 1 | |
| 5 | 91316-06025-00 | BOLT | 6 | |
| 6 | 91316-06050-00 | BOLT, SOCKET HEAD | 1 | |
| 7 | 91316-06050-00 | BOLT, SOCKET HEAD | 1 | |
| 8 | 93210-13361-00 | O-RING | 2 | |
| 9 | 90340-08M04-00 | PLUG, STRAIGHT SCREW | 1 | |
| 10 | 90430-08143-00 | GASKET | 1 | |
| 11 | 90340-36121-00 | PLUG, STRAIGHT SCREW | 1 | CIRCUIT SILVER |
| 12 | 93210-36510-00 | O-RING | 1 | |
| 13 | 98580-06012-00 | SCREW, PAN HEAD | 1 | |
| 14 | 90462-16102-00 | CLAMP | 1 | |
| 15 | 3AJ-15421-00-00 | COVER, CRANKCASE 2 | 1 | CIRCUIT SILVER |
| 16 | 91316-06016-00 | BOLT, SOCKET HEAD | 2 | |
| 17 | 3DS-15430-00-00 | CRANKCASE COVER ASSEMBLY 3 | 1 | CIRCUIT SILVER |
| 18 | 2WK-15418-01-00 | . COVER, CHAIN CASE | 1 | |
| 19 | 1JK-15449-00-00 | . RING, RUBBER | 1 | |
| 20 | 1JK-15486-00-00 | . GROMMET | 2 | |
| 21 | 90209-05279-00 | . WASHER | 2 | |
| 22 | 98501-05010-00 | . SCREW, PAN HEAD | 2 | |
| 23 | 34K-15462-01-00 | GASKET, CRANKCASE COVER 3 | 1 | |
| 24 | 99510-12016-00 | PIN, DOWEL | 2 | |
| 25 | 91316-06025-00 | BOLT | 7 | |
| 26 | 90110-06138-00 | BOLT, HEX SKT HEAD | 1 | |
| 27 | 91316-06035-00 | BOLT | 2 | |

*CONTINUED ON NEXT FRAME ➤*


# CRANKCASE COVER 1

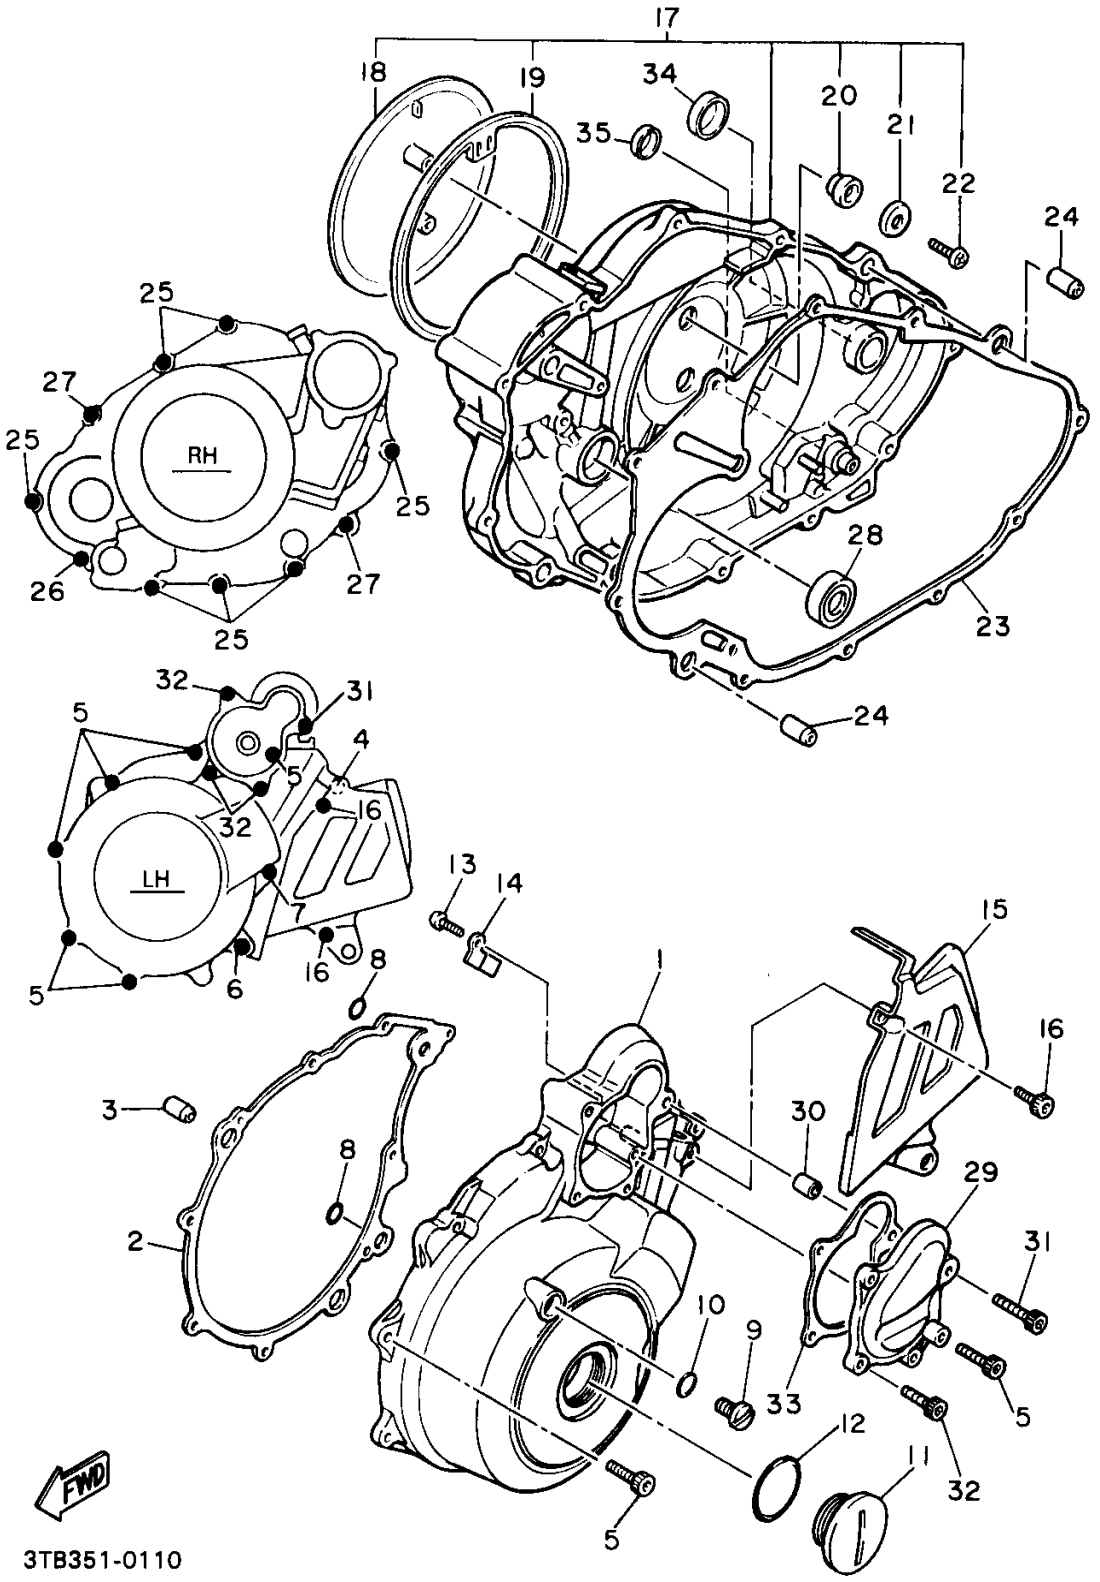


3TB351-0110

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 28 | 93101-14092-00 | OIL SEAL (S7-14-25-5.5-1-HS) . | 1 | |
| 29 | 3TB-15415-00-00 | COVER, GENERATOR . . . . . | 1 | |
| 30 | 99510-08016-00 | PIN, DOWEL . . . . . | 1 | |
| 31 | 91316-06035-00 | BOLT . . . . . | 1 | |
| 32 | 91316-06025-00 | BOLT . . . . . | 3 | |
| 33 | 3TB-15455-00-00 | GASKET 1 . . . . . | 1 | |
| 34 | 90338-30096-00 | PLUG . . . . . | 1 | |
| 35 | 90338-21100-00 | PLUG . . . . . | 1 | |


# GENERATOR

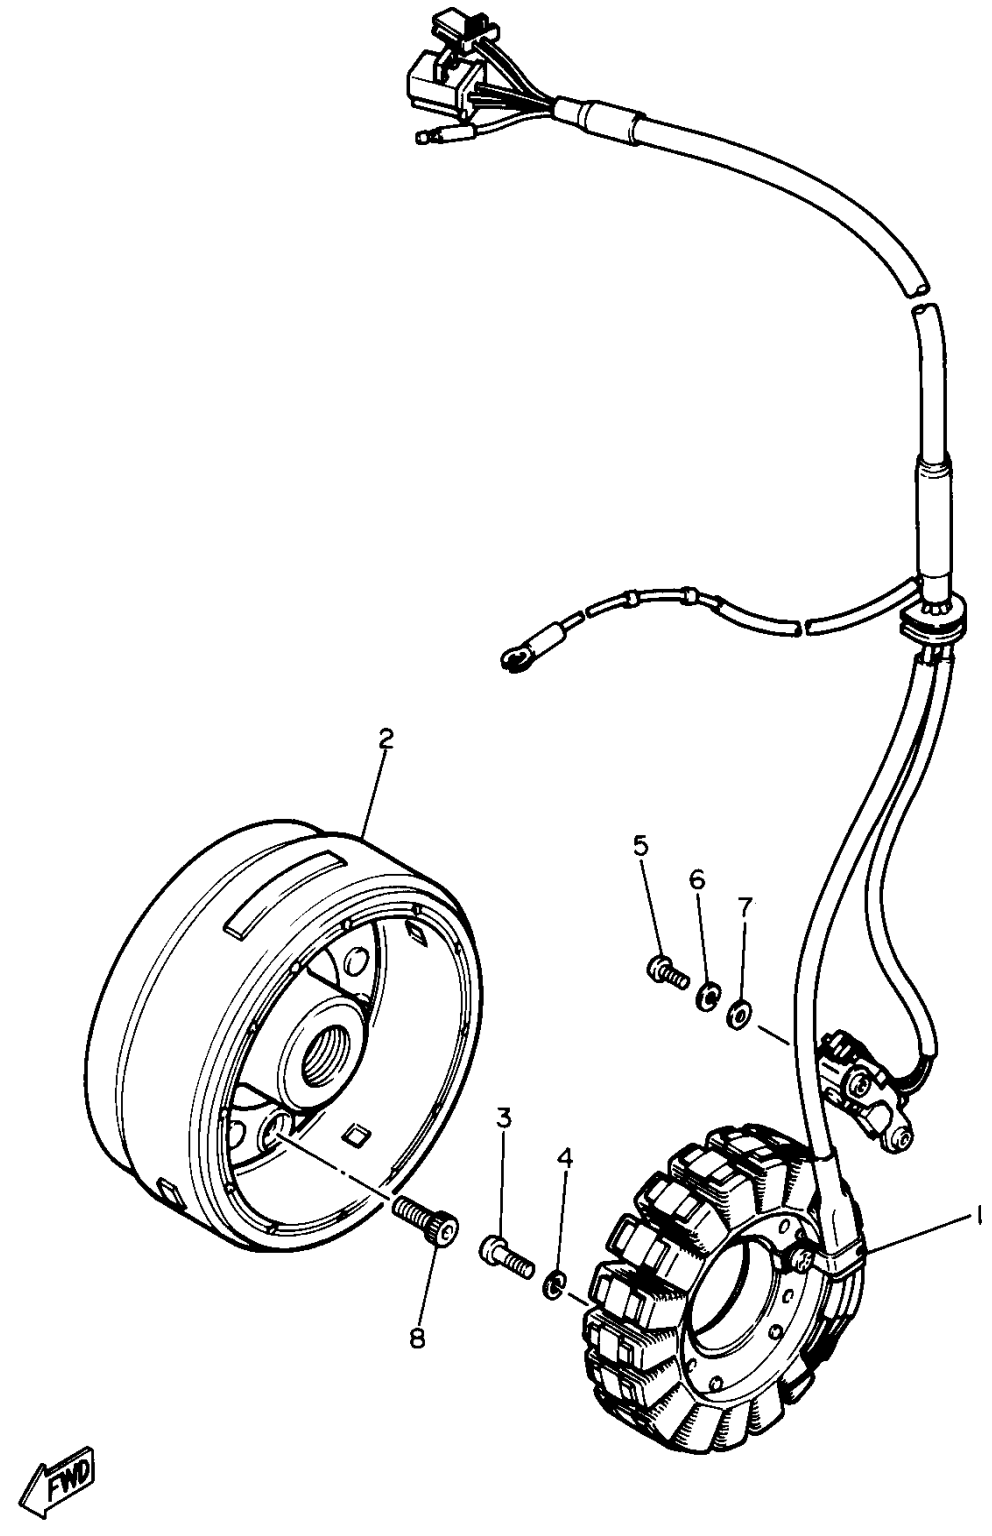


3TB351-0340


| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-81410-00-00 | STATOR ASSEMBLY | 1 | |
| 2 | 3TB-81450-00-00 | ROTOR ASSEMBLY | 1 | |
| 3 | 98501-06025-00 | SCREW, panhead (92501-06025) | 3 | |
| 4 | 92995-06100-00 | WASHER, SPRING | 3 | |
| 5 | 98501-05016-00 | SCREW, PAN HEAD | 2 | |
| 6 | 92990-05100-00 | WASHER, SPRING | 2 | |
| 7 | 92901-05600-00 | WASHER, PLATE | 2 | |
| 8 | 90110-08193-00 | BOLT, HEXAGON SOCKET HEAD | 3 | |

# STARTER CLUTCH

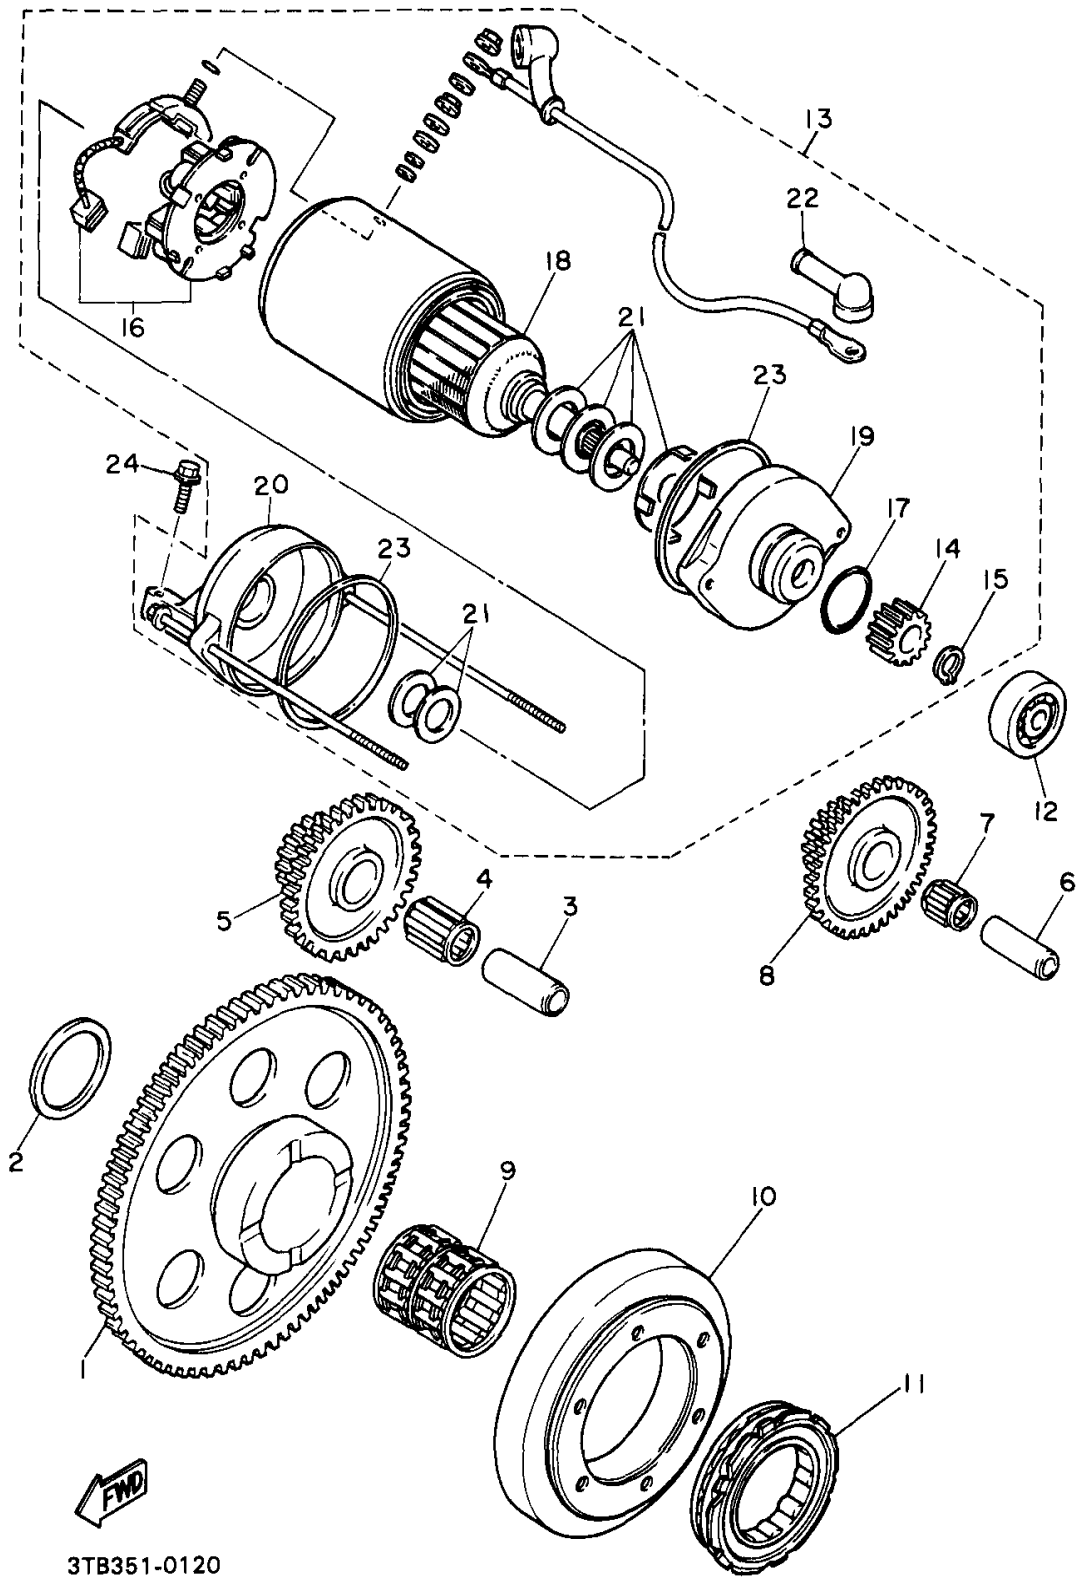


| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-15515-00-00 | GEAR 3 | 1 | |
| 2 | 90201-303P4-00 | WASHER, PLATE | 1 | |
| 3 | 1VJ-15522-00-00 | SHAFT 2 | 1 | |
| 4 | 93310-217R7-00 | BEARING, CYLINDRICAL | 1 | |
| 5 | 1VJ-15517-00-00 | GEAR, IDLER 2 | 1 | |
| 6 | 1VJ-15521-00-00 | SHAFT 1 | 1 | |
| 7 | 93310-212R6-00 | BEARING | 1 | |
| 8 | 1VJ-15512-00-00 | GEAR, IDLER 1 | 1 | |
| 9 | 93310-530C7-00 | BEARING, CYLINDRICAL | 1 | |
| 10 | 3TB-15590-00-00 | STARTER ONE-WAY ASSEMBLY | 1 | |
| 11 | 3TB-15594-00-00 | RACE, ONE-WAY BEARING | 1 | |
| 12 | 93306-20005-00 | BEARING (B6200) | 1 | NTN |
| 13 | 3TB-81800-00-00 | STARTING MOTOR ASSEMBLY | 1 | |
| 14 | 1VJ-15511-00-00 | . GEAR, STARTING MOTOR | 1 | |
| 15 | 93440-11024-00 | . CIRCLIP | 1 | |
| 16 | 3AJ-81801-00-00 | . BRUSH SET | 1 | |
| 17 | 26H-81847-00-00 | . O-RING | 1 | |
| 18 | 3AJ-81850-00-00 | . ARMATURE ASSEMBLY | 1 | |
| 19 | 3AJ-81830-00-00 | . FRONT BRACKET ASSEMBLY | 1 | |
| 20 | 3AJ-81820-00-00 | . REAR BRACKET ASSEMBLY | 1 | |
| 21 | 3AJ-81809-00-00 | . WASHER KIT | 1 | |
| 22 | 5H0-81871-00-00 | . CAP | 1 | |
| 23 | 11H-81844-00-00 | . GASKET | 2 | |
| 24 | 95811-06030-00 | BOLT, FLANGE | 2 | |


# CLUTCH

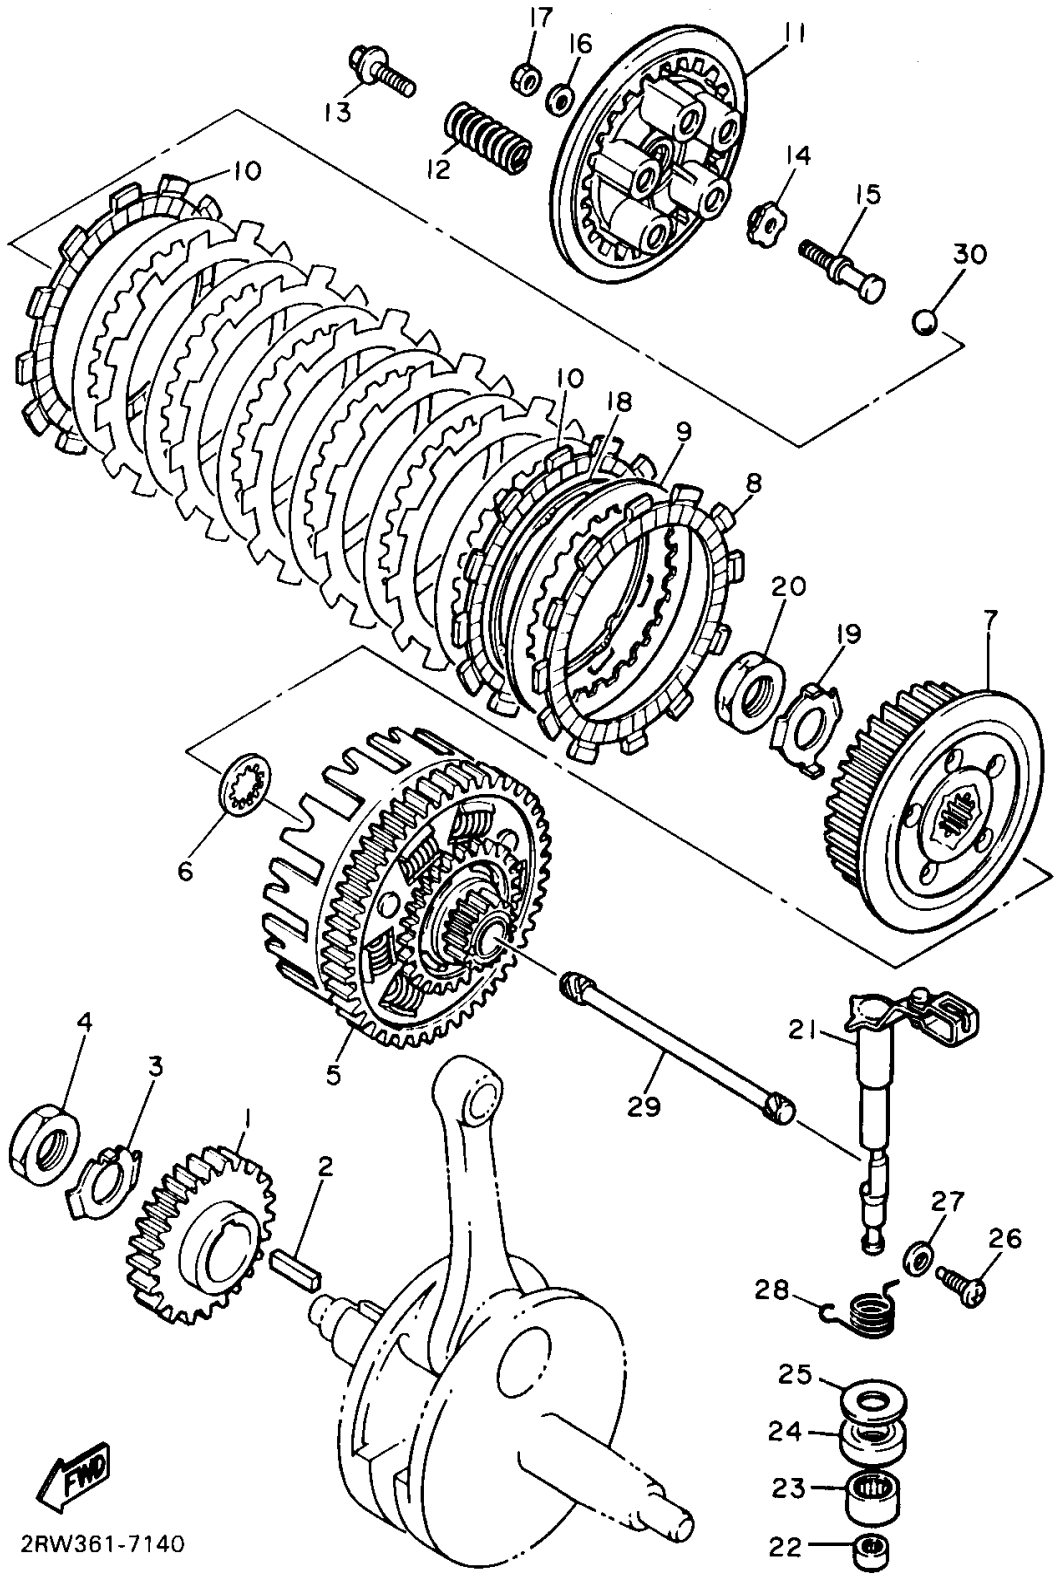


| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3AJ-16111-00-00 | GEAR, PRIMARY DRIVE (34T) | 1 | |
| 2 | 90282-07042-00 | KEY, STRAIGHT | 1 | |
| 3 | 90215-20197-00 | WASHER, LOCK | 1 | |
| 4 | 90170-20274-00 | NUT, HEXAGON | 1 | |
| 5 | 3AJ-16150-00-00 | PRIMARY DRIVEN GEAR COMP. (71T) | 1 | |
| 6 | 2JN-16154-00-00 | PLATE, THRUST 1 | 1 | |
| 7 | 2JN-16371-00-00 | BOSS, CLUTCH | 1 | |
| 8 | 5Y1-16321-00-00 | PLATE, FRICTION | 6 | |
| 9 | 360-16325-00-00 | PLATE, CLUTCH 2 | 7 | |
| 10 | 5Y1-16331-01-00 | PLATE, FRICTION 2 | 2 | |
| 11 | 5Y1-16351-00-00 | PLATE, PRESSURE 1 | 1 | |
| 12 | 90501-23142-00 | SPRING, COMPRESSION | 5 | |
| 13 | 90159-06010-00 | SCREW, WITH WASHER | 5 | |
| 14 | 30X-16358-00-00 | PLATE, PUSH | 1 | |
| 15 | 34K-16356-00-00 | ROD, PUSH 1 | 1 | |
| 16 | 92990-06200-00 | WASHER | 1 | |
| 17 | 95380-06600-00 | NUT | 1 | |
| 18 | 5Y1-16383-00-00 | SPRING, CLUTCH BOSS | 1 | |
| 19 | 90215-20231-00 | WASHER, LOCK | 1 | |
| 20 | 90170-20327-00 | NUT | 1 | |
| 21 | 1VJ-16380-01-00 | PUSH LEVER ASSEMBLY | 1 | |
| 22 | 93317-11020-00 | BEARING | 1 | |
| 23 | 93315-11720-00 | BEARING | 1 | |
| 24 | 93102-17357-00 | OIL SEAL | 1 | |
| 25 | 90201-17327-00 | WASHER, PLATE | 1 | |
| 26 | 90149-08067-00 | SCREW | 1 | |
| 27 | 90201-08087-00 | WASHER, PLATE | 1 | |
| 28 | 90508-14710-00 | SPRING, TORSION | 1 | |


*CONTINUED ON NEXT FRAME ➤*

# CLUTCH

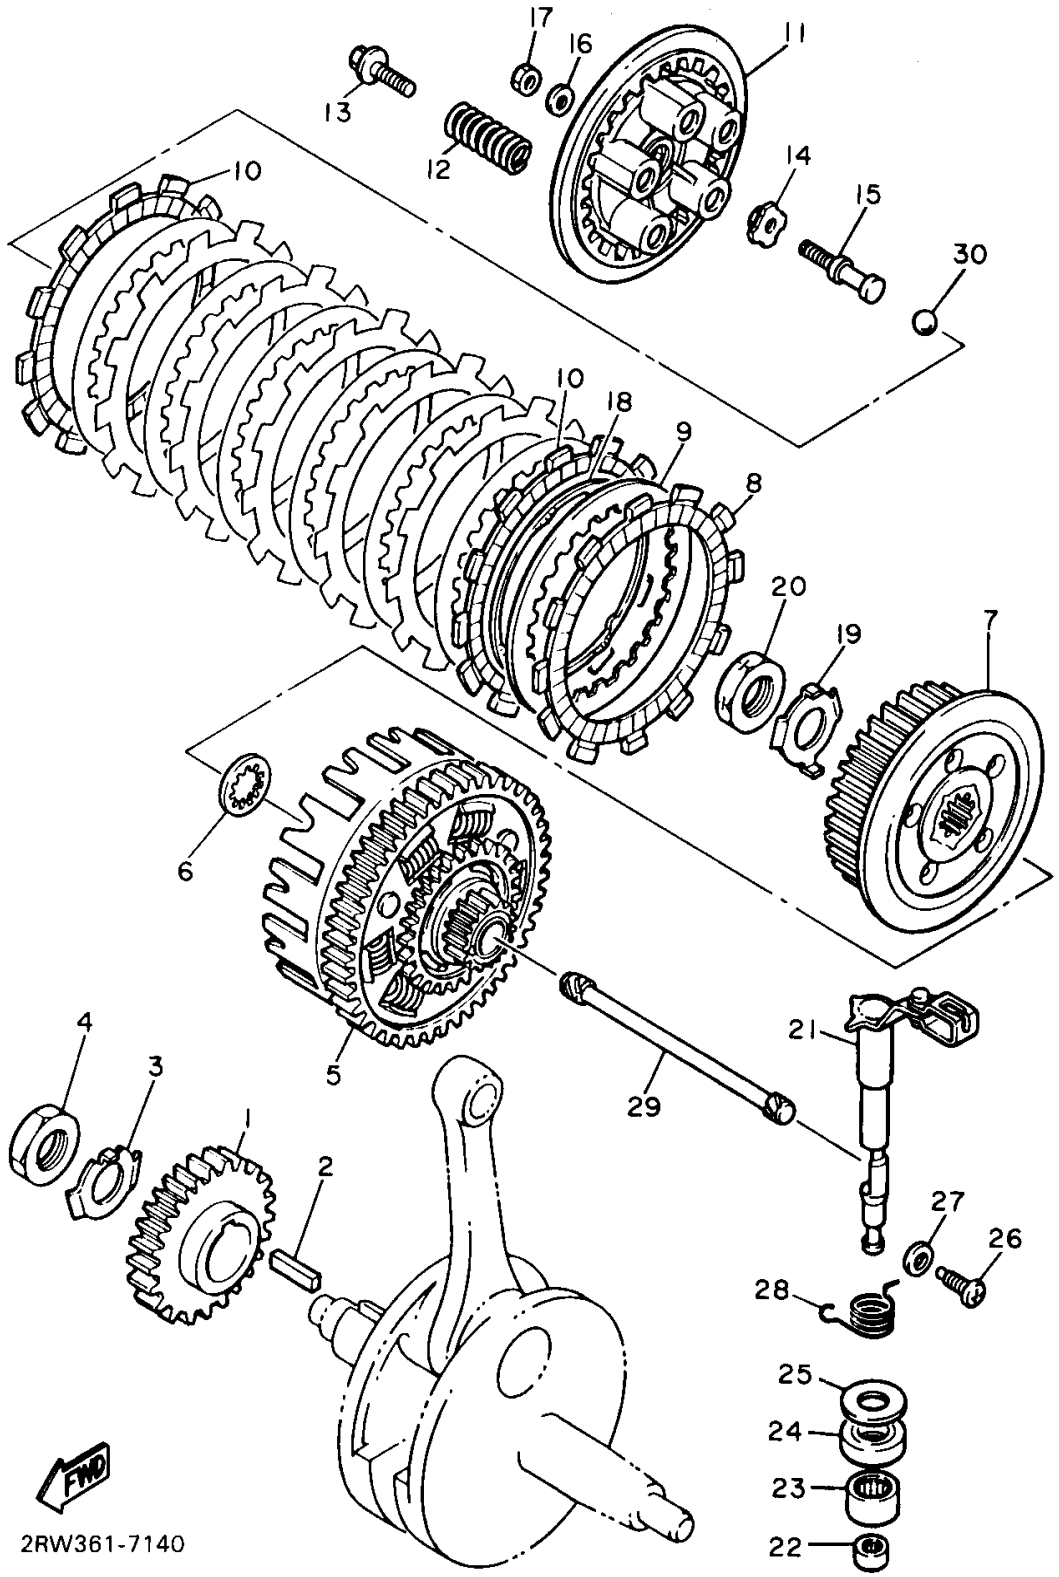


| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 29 | 5Y1-16357-00-00 | ROD, PUSH 2 . . . . . | 1 | |
| 30 | 93515-32029-00 | BALL . . . . . | 1 | |

# TRANSMISSION

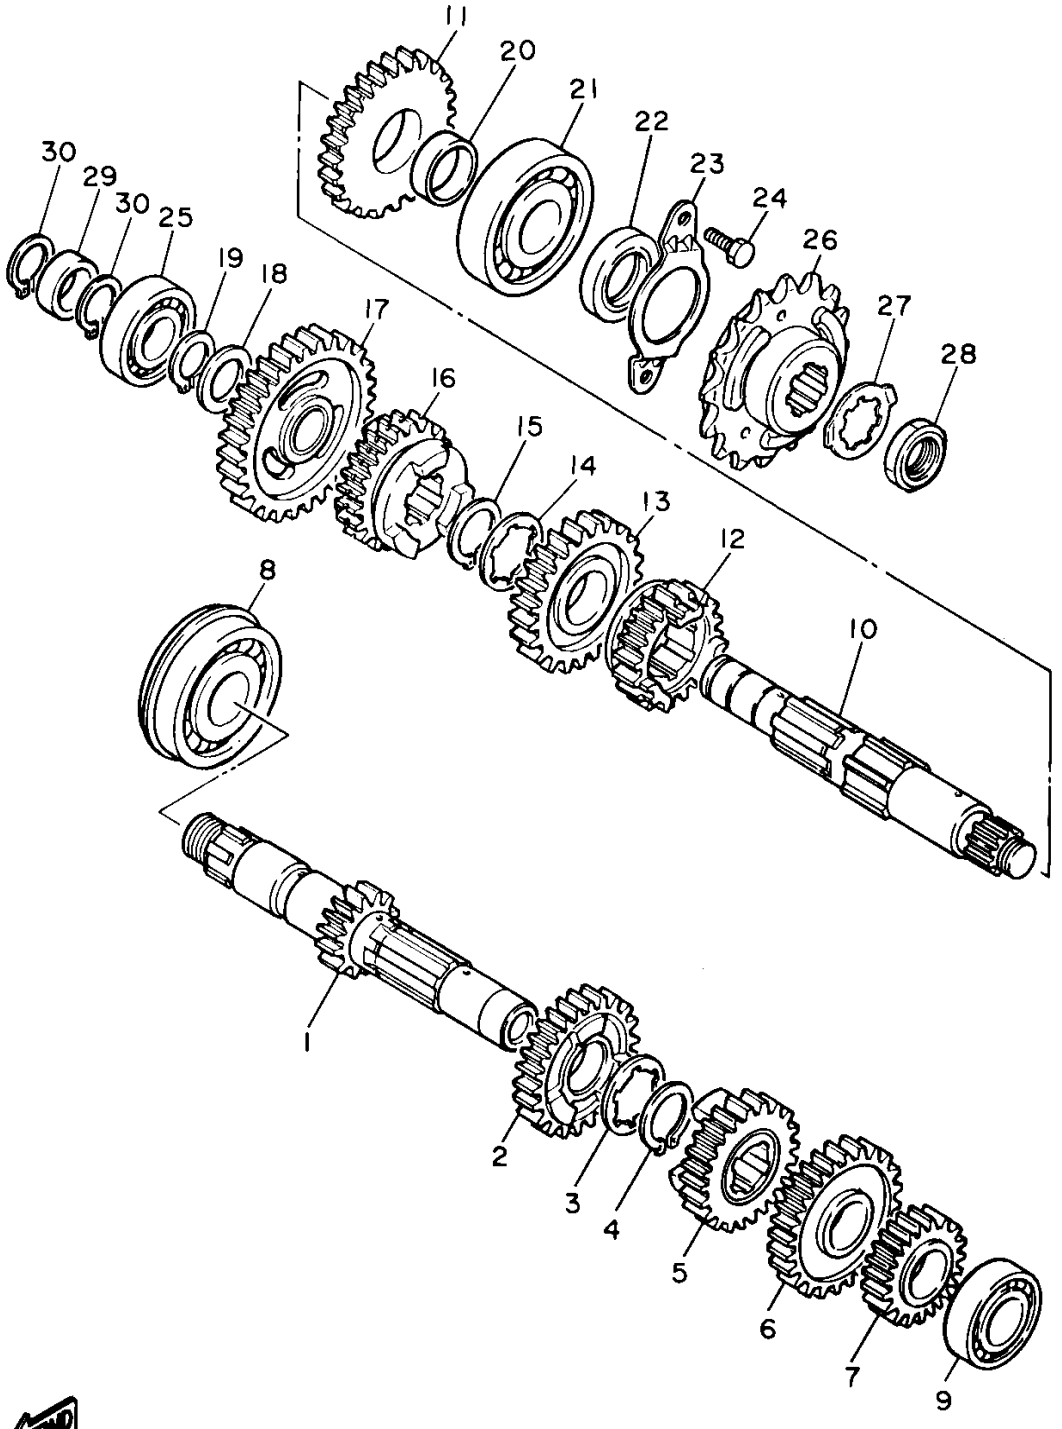



3AJ1351-8140

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 2RW-17411-00-00 | AXLE, MAIN (12T) | 1 | |
| 2 | 34K-17141-00-00 | GEAR, 4TH PINION (22T) | 1 | |
| 3 | 90209-22191-00 | WASHER | 1 | |
| 4 | 93440-25084-00 | CIRCLIP | 1 | |
| 5 | 1VJ-17131-00-00 | GEAR, 3RD PINION (20T) | 1 | |
| 6 | 2JT-17151-01-00 | GEAR, 5TH PINION (24T) | 1 | |
| 7 | 34K-17121-01-00 | GEAR, 2ND PINION (17T) | 1 | |
| 8 | 93306-30540-00 | BEARING (6305NRX1C3) | 1 | |
| 9 | 93306-00431-00 | BEARING | 1 | |
| 10 | 2RW-17402-00-00 | DRIVE AXLE ASSEMBLY | 1 | |
| 11 | 2JT-17221-00-00 | GEAR, 2ND WHEEL (27T) | 1 | |
| 12 | 2JT-17251-00-00 | GEAR, 5TH WHEEL (19T) | 1 | |
| 13 | 1VJ-17231-00-00 | GEAR, 3RD WHEEL (24T) | 1 | |
| 14 | 90209-22191-00 | WASHER | 1 | |
| 15 | 93440-25084-00 | CIRCLIP | 1 | |
| 16 | 3AJ-17241-00-00 | GEAR, 4TH WHEEL (21T) | 1 | |
| 17 | 3AJ-17211-00-00 | GEAR, 1ST WHEEL (31T) | 1 | |
| 18 | 90201-20276-00 | WASHER, PLATE (1.0T) | 1 | |
| 19 | 99009-20400-00 | CIRCLIP | 1 | |
| 20 | 90560-25283-00 | SPACER | 1 | |
| 21 | 93306-30535-00 | BEARING | 1 | |
| 22 | 93102-25226-00 | OIL SEAL | 1 | |
| 23 | 5Y1-17471-00-00 | PLATE, COVER | 1 | |
| 24 | 97021-06014-00 | BOLT | 2 | |
| 25 | 93306-00426-00 | BEARING | 1 | |
| 26 | 99999-01798-00 | SPROCKET, DRIVE (15T) | 1 | |
| 27 | 90215-23265-00 | WASHER, LOCK | 1 | |
| 28 | 90179-18552-00 | NUT | 1 | |
| 29 | 90560-20199-00 | SPACER | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# TRANSMISSION

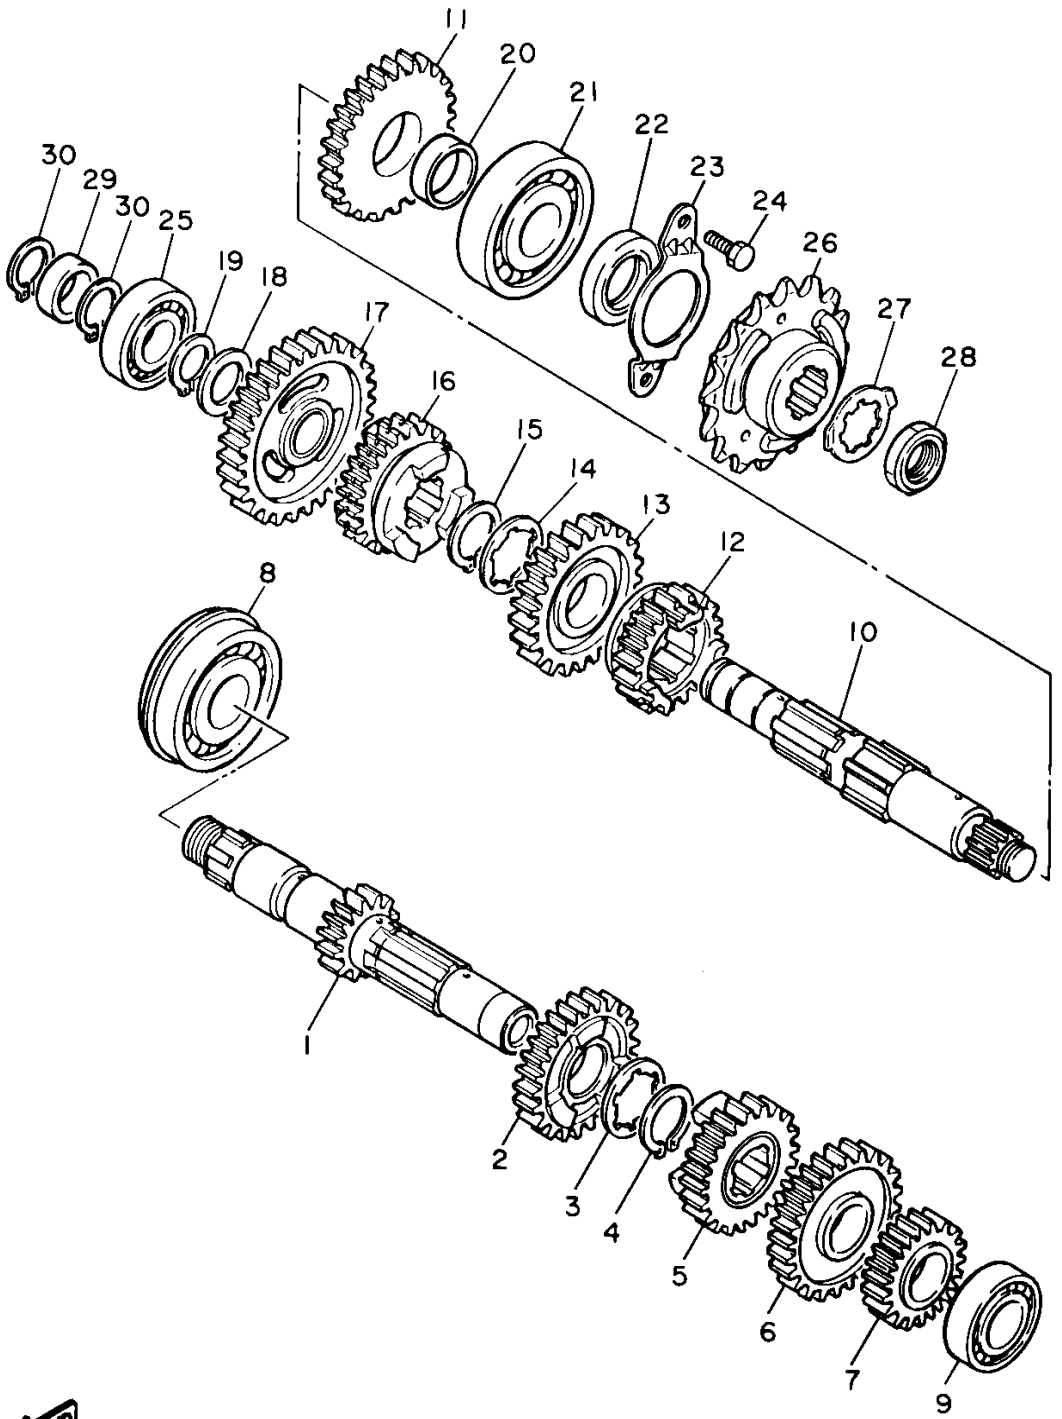


3AJ1351-8140

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 30 | 99009-20400-00 | CIRCLIP . . . . . | 2 | |

# SHIFT CAM - SHIFT FORK

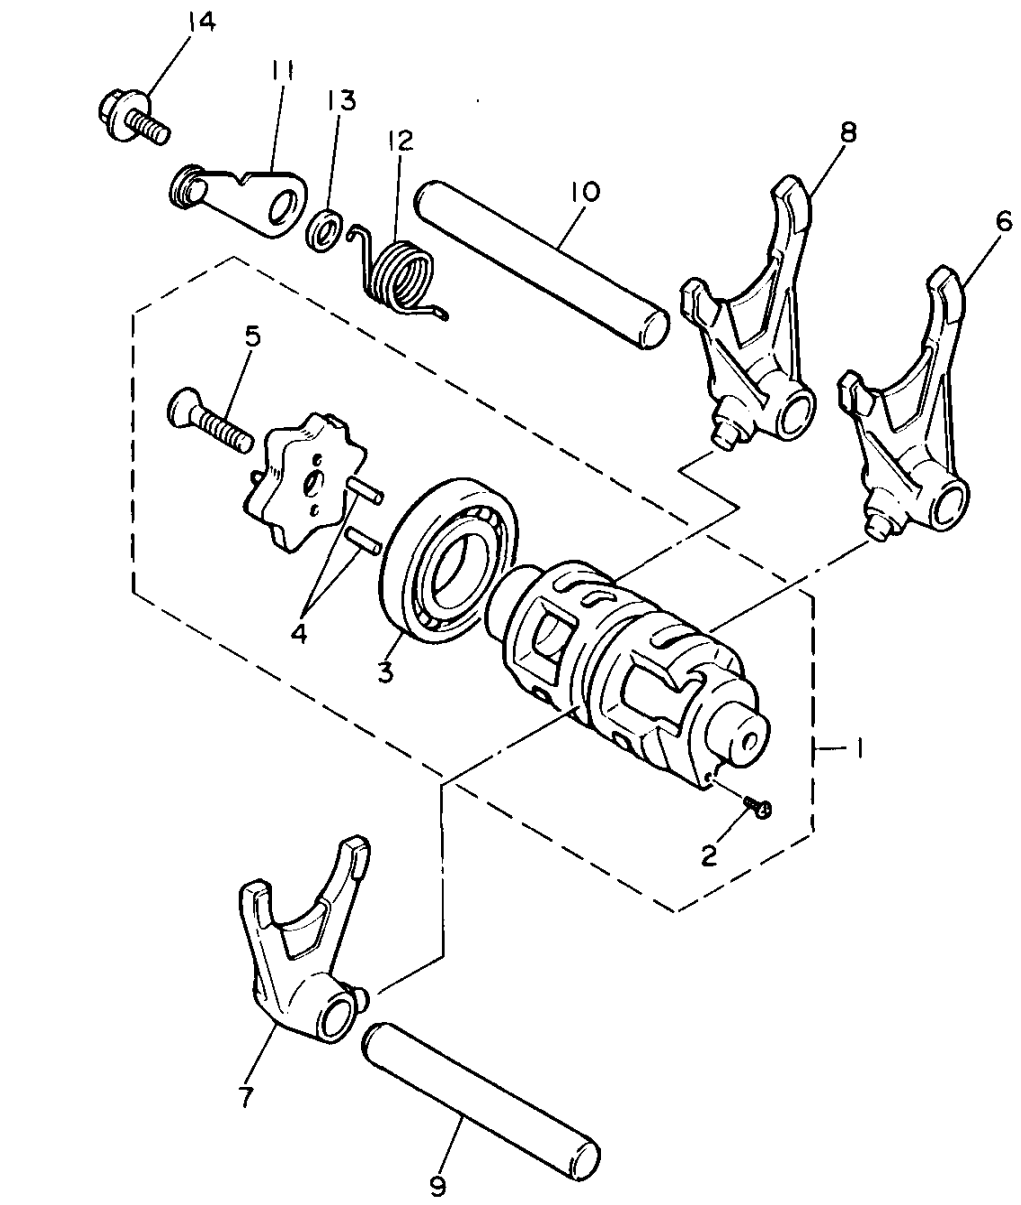



| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3YF-18540-00-00 | SHIFT CAM ASSEMBLY | 1 | |
| 2 | 136-18542-00-00 | . POINT, NEUTRAL | 1 | |
| 3 | 93316-00503-00 | . BEARING, CYLINDER.#16 (93316-00504) | 1 | |
| 4 | 93604-10011-00 | . PIN, DOWEL | 2 | |
| 5 | 90151-06017-00 | . SCREW, COUNTERSUNK | 1 | |
| 6 | 5Y1-18511-00-00 | FORK, SHIFT 1 | 1 | |
| 7 | 5Y1-18512-00-00 | FORK, SHIFT 2 | 1 | |
| 8 | 5Y1-18513-00-00 | FORK, SHIFT 3 | 1 | |
| 9 | 3YF-18531-00-00 | BAR, SHIFT FORK GUIDE 1 | 1 | |
| 10 | 34K-18535-00-00 | BAR, SHIFT FORK GUIDE 2 | 1 | |
| 11 | 34K-18140-00-00 | STOPPER LEVER ASSEMBLY | 1 | |
| 12 | 90508-26691-00 | SPRING, TORSION | 1 | |
| 13 | 90387-063F7-00 | COLLAR | 1 | |
| 14 | 90159-06078-00 | SCREW, WITH WASHER | 1 | |

FWD

2KF300-7150


# SHIFT SHAFT

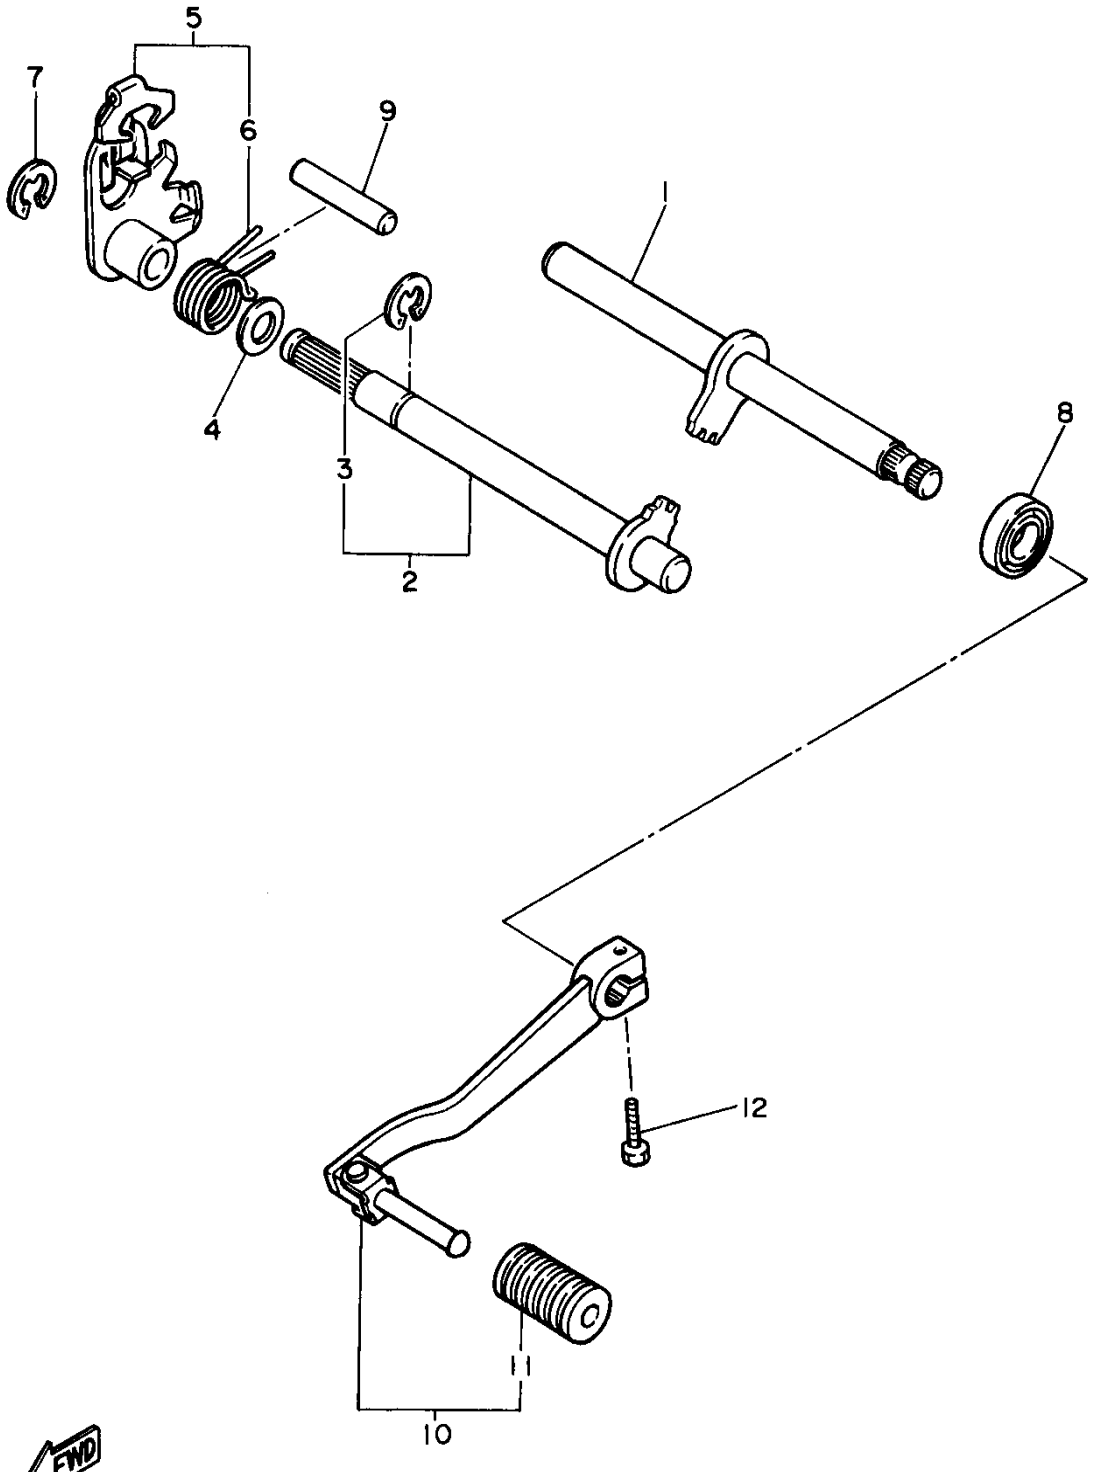


3TB351-0160

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 43F-18102-02-00 | SHIFT SHAFT ASSEMBLY 2 . . | 1 | |
| 2 | 5Y1-18101-02-00 | SHIFT SHAFT ASSEMBLY . . . . | 1 | |
| 3 | 99006-10600-00 | . CIRCLIP . . . . . | 1 | |
| 4 | 90201-12474-00 | WASHER, PLATE . . . . . | 1 | |
| 5 | 34K-18120-00-00 | SHIFT LEVER ASSEMBLY . . . . | 1 | |
| 6 | 90508-29629-00 | . SPRING, TORSION . . . . . | 1 | |
| 7 | 99001-09600-00 | CIRCLIP . . . . . | 1 | |
| 8 | 93102-12106-00 | OIL SEAL (SD 12-22-5 HS) . . . . | 1 | |
| 9 | 93608-33046-00 | PIN, DOWEL . . . . . | 1 | |
| 10 | 1VJ-18110-01-00 | SHIFT PEDAL ASSEMBLY . . . . | 1 | |
| 11 | 1W6-18113-00-00 | . COVER, SHIFT PEDAL . . . . . | 1 | |
| 12 | 97016-06020-00 | BOLT . . . . . | 1 | |

# FRAME

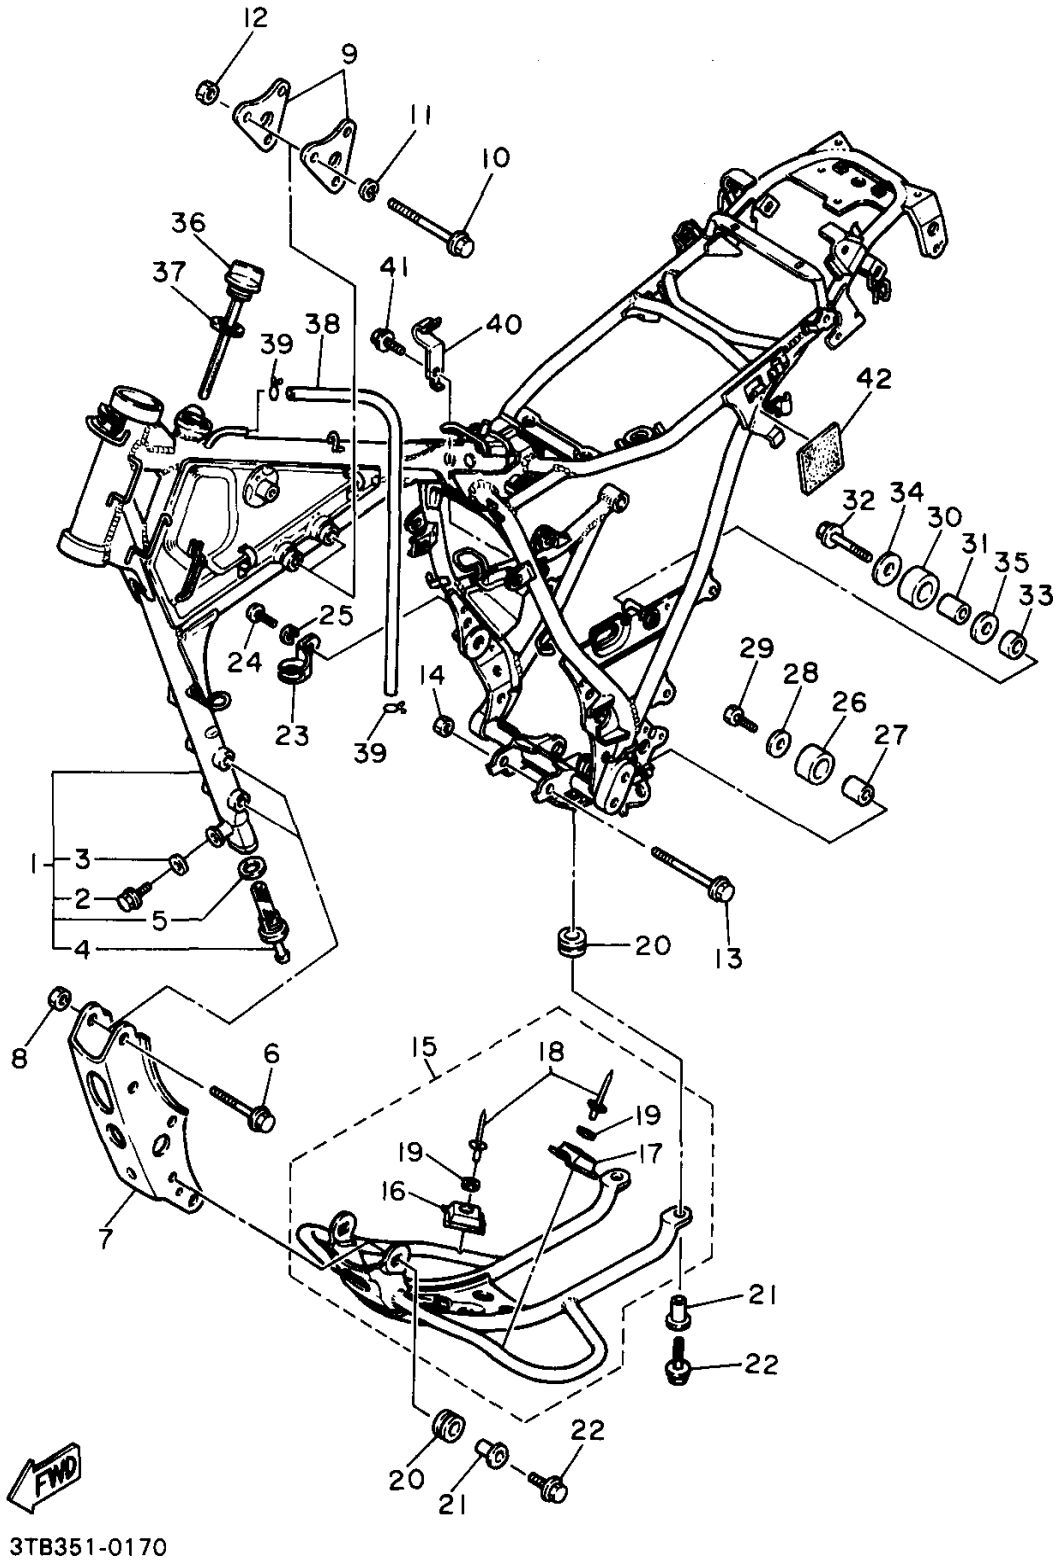



3TB351-0170

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3YP-21110-01-WL | FRAME COMP. | 1 | STARDUST SILVER NON-CA |
| 2 | 95811-08012-00 | . BOLT, FLANGE | 1 | |
| 3 | 90201-08087-00 | . WASHER, PLATE | 1 | |
| 4 | 3TB-21756-00-00 | . NET, FILTER | 1 | |
| 5 | 90430-22123-00 | . GASKET | 1 | |
| 6 | 90105-10286-00 | BOLT, WASHER BASED | 4 | |
| 7 | 3TB-21316-00-WL | STAY, ENGINE 3 | 1 | STARDUST SILVER |
| 8 | 90185-10060-00 | NUT, SELF-LOCKING | 4 | |
| 9 | 34L-21315-00-00 | STAY, ENGINE 2 | 2 | |
| 10 | 97011-10080-00 | BOLT | 3 | |
| 11 | 92901-10100-00 | WASHER, SPRING | 3 | |
| 12 | 90185-10060-00 | NUT, SELF-LOCKING | 3 | |
| 13 | 95811-10100-00 | BOLT, FLANGE | 1 | |
| 14 | 90185-10157-00 | NUT, SELF-LOCKING | 1 | |
| 15 | 3TB-W2147-00-WL | PROTECTOR, ENGINE | 1 | STARDUST SILVER |
| 16 | 34K-21485-00-00 | . DAMPER, RUBBER 1 | 1 | |
| 17 | 34K-21486-00-00 | . DAMPER 2 | 1 | |
| 18 | 90267-40075-00 | . RIVET, BLIND | 2 | |
| 19 | 90201-04M06-00 | . WASHER, PLATE | 2 | |
| 20 | 90480-15363-00 | GROMMET | 4 | |
| 21 | 90387-07391-00 | COLLAR | 4 | |
| 22 | 95811-06025-00 | BOLT, FLANGE | 4 | |
| 23 | 5Y1-21441-00-00 | BRACKET, STOP SWITCH | 1 | |
| 24 | 98516-06012-00 | SCREW, PAN HEAD | 1 | |
| 25 | 92906-06100-00 | WASHER, SPRING | 1 | |
| 26 | 3TB-22178-00-00 | TENSIONER | 1 | |
| 27 | 4V4-22184-00-00 | BUSH | 1 | |
| 28 | 90201-08753-00 | WASHER, PLATE | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# FRAME

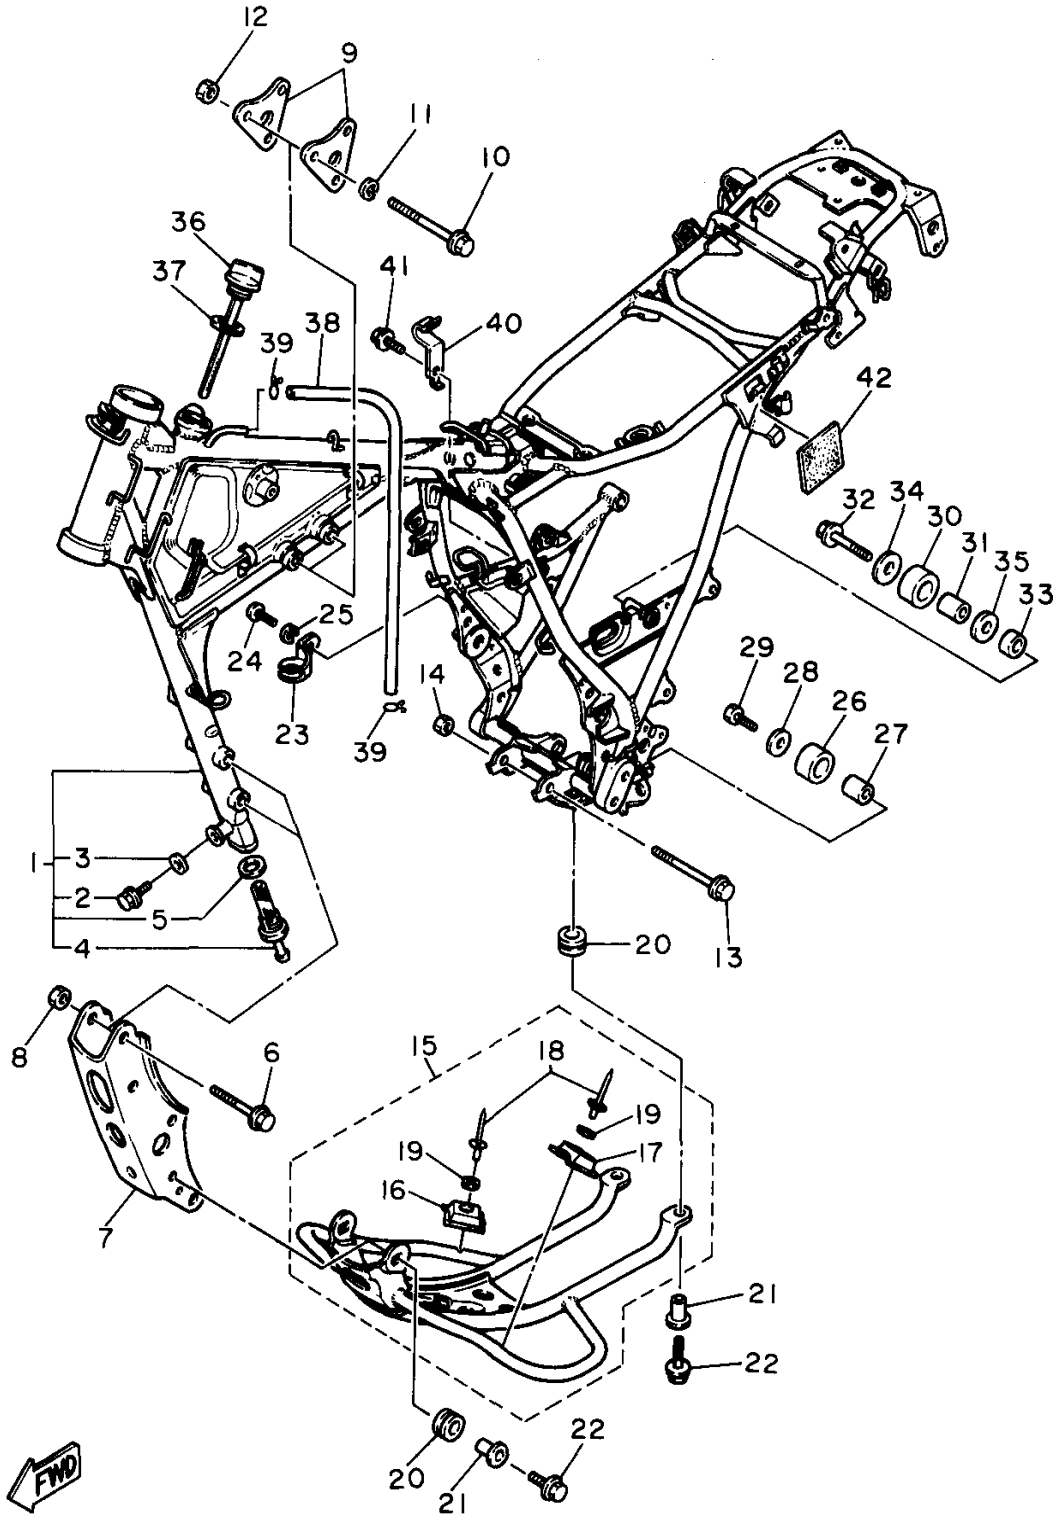


3TB351-0170

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 29 | 95023-08016-00 | BOLT | 1 | |
| 30 | 30X-22178-00-00 | TENSIONER | 1 | |
| 31 | 4V4-22184-00-00 | BUSH | 1 | |
| 32 | 90109-08705-00 | BOLT | 1 | |
| 33 | 90201-13409-00 | WASHER, PLATE | 1 | |
| 34 | 90201-08753-00 | WASHER, PLATE | 1 | |
| 35 | 90387-085E1-00 | COLLAR | 1 | |
| 36 | 3TB-21771-00-00 | BODY, CAP | 1 | |
| 37 | 90430-27124-00 | GASKET | 1 | |
| 38 | 90445-115G3-00 | HOSE | 1 | |
| 39 | 90467-10008-00 | CLIP | 2 | |
| 40 | 3TB-21338-00-00 | CLAMP | 1 | |
| 41 | 91026-06010-00 | BOLT | 1 | |
| 42 | 3TB-28415-00-00 | DAMPER 1 | 1 | |

# FRAME (CALIFORNIA MODEL ONLY)

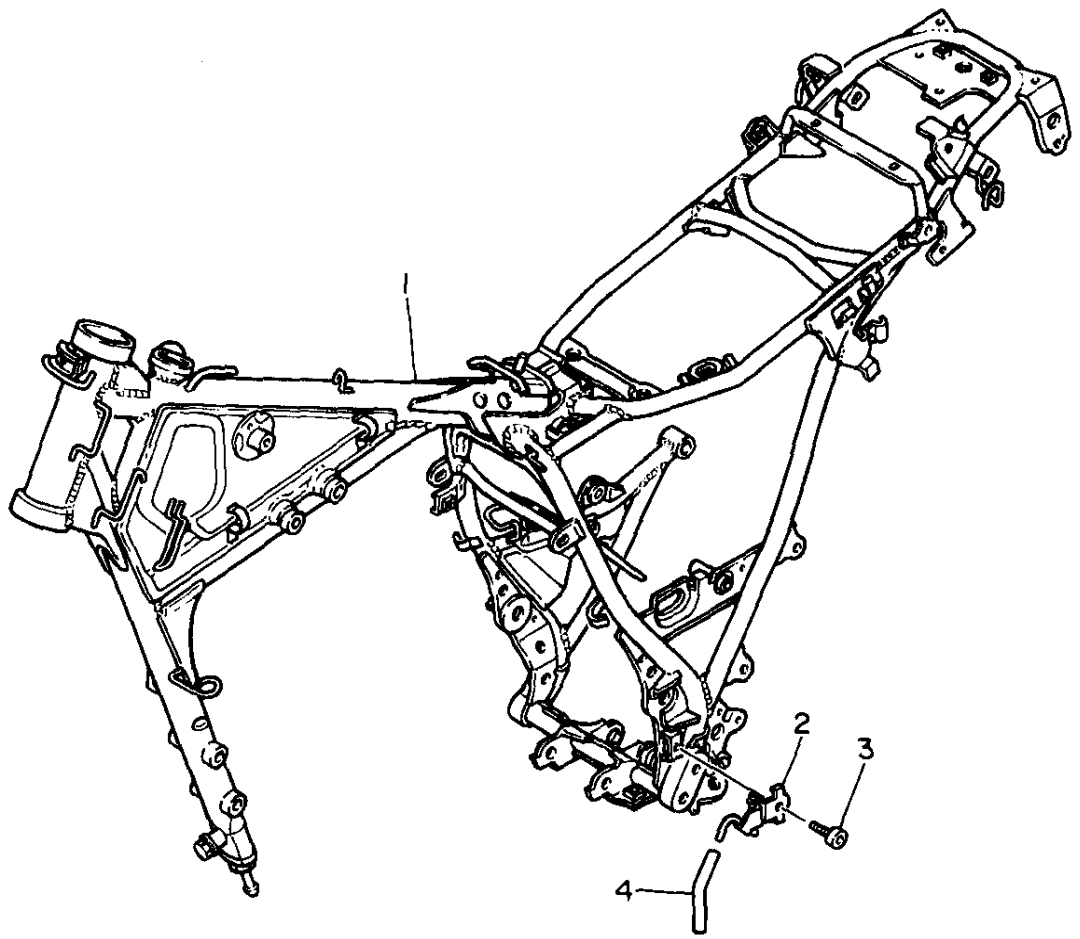






3UY110-0420

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3UY-21110-11-WL | FRAME COMP. | 1 | STARDUST SILVER |
| 2 | 3UY-14193-00-00 | PIPE, OVER FLOW | 1 | |
| 3 | 91316-08012-00 | BOLT | 1 | |
| 4 | 90445-07671-00 | HOSE | 1 | |

# FENDER

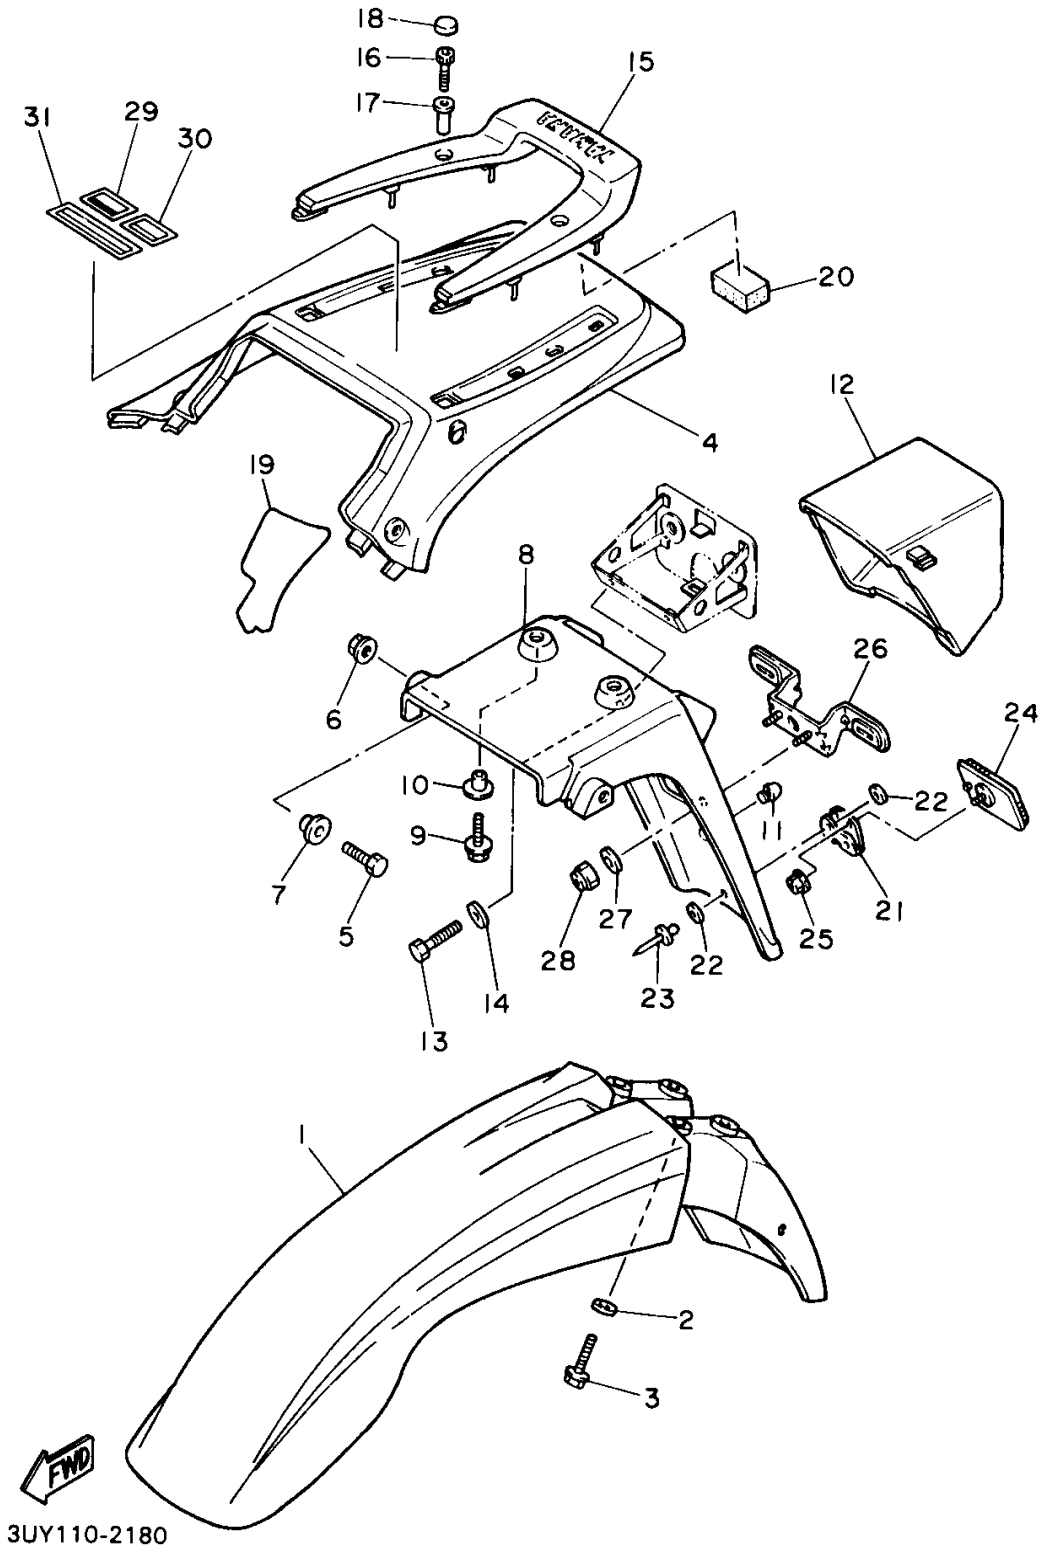


3UY110-2180

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3RW-21511-40-00 | FENDER, FRONT | 1 | FARAWAY BLUE |
| 2 | 90387-062V8-00 | COLLAR | 4 | |
| 3 | 90119-06097-00 | BOLT, WITH WASHER | 4 | |
| 4 | 3TB-21611-40-00 | FENDER, REAR | 1 | FARAWAY BLUE |
| 5 | 97016-06016-00 | BOLT | 2 | |
| 6 | 95706-06500-00 | NUT, FLANGE | 2 | |
| 7 | 90387-07717-00 | COLLAR | 2 | |
| 8 | 2KF-21685-01-00 | BRACKET, LICENSE | 1 | |
| 9 | 90119-06061-00 | BOLT, WITH WASHER | 2 | |
| 10 | 90387-066M3-00 | COLLAR | 2 | |
| 11 | 42U-21639-00-00 | DAMPER 2 | 1 | |
| 12 | 3UY-2163A-00-00 | COVER, REAR FENDER 1 | 1 | |
| 13 | 97011-06025-00 | BOLT (97001-06025) | 2 | |
| 14 | 90201-06059-00 | WASHER, PLATE | 2 | |
| 15 | 3TB-21651-00-00 | COVER, REAR FENDER | 1 | |
| 16 | 91311-06025-00 | BOLT, SOCKET HEAD | 2 | |
| 17 | 90387-062M3-00 | COLLAR | 2 | |
| 18 | 90336-18038-00 | PLUG, TAPER | 2 | |
| 19 | 3TB-2174T-00-00 | INSULATOR, SIDE COVER 2 | 1 | |
| 20 | 3TB-21639-00-00 | DAMPER 2 | 1 | |
| 21 | 33G-85132-01-00 | BRACKET, REFLECTOR 1 | 1 | |
| 22 | 90201-044A2-00 | WASHER, PLATE | 4 | |
| 23 | 90267-40090-00 | RIVET, blind | 2 | |
| 24 | 3G1-85130-01-00 | REAR REFLECTOR ASSEMBLY | 1 | |
| 25 | 95701-05500-00 | NUT, FLANGE | 1 | |
| 26 | 3UY-84751-00-00 | BRACKET, LICENSE | 1 | |
| 27 | 90201-06059-00 | WASHER, PLATE | 2 | |
| 28 | 95616-06100-00 | NUT, U | 2 | |
| 29 | 3TB-24877-00-00 | LABEL, CAUTION | 1 | |


*CONTINUED ON NEXT FRAME ➤*

# FENDER

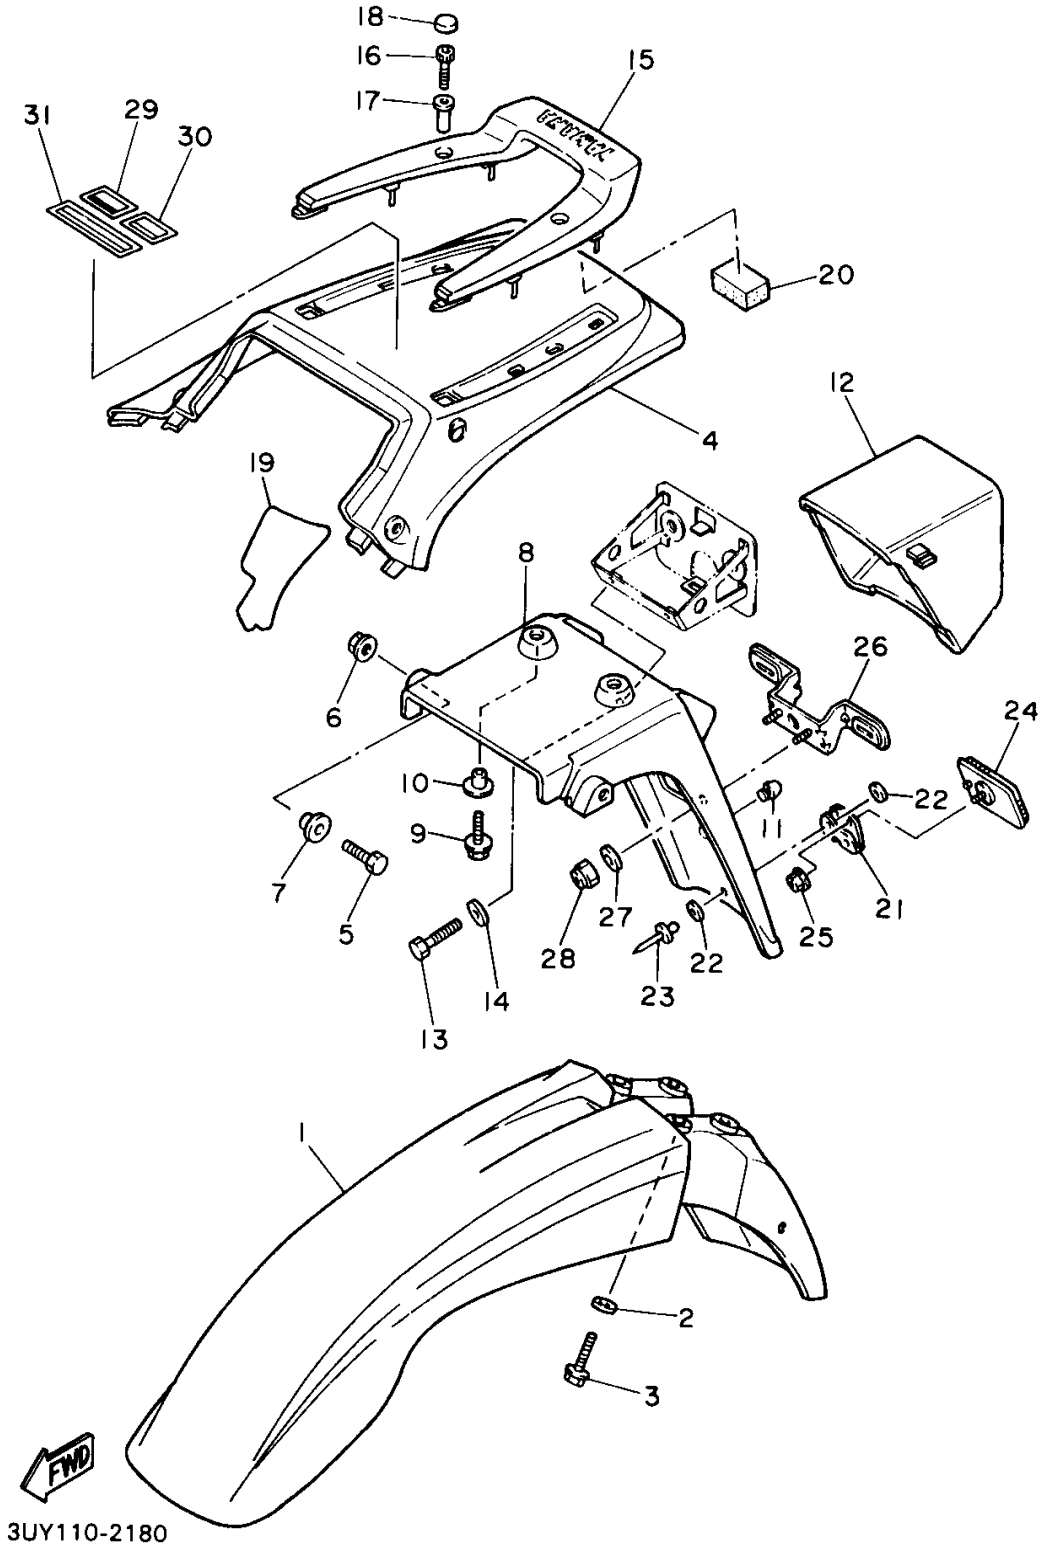


| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 30 | 3MX-24875-00-00 | LABEL 1 . . . . . | 1 | |
| 31 | 3JJ-28446-00-00 | LABEL, CAUTION . . . . . | 1 | |


# SIDE COVER

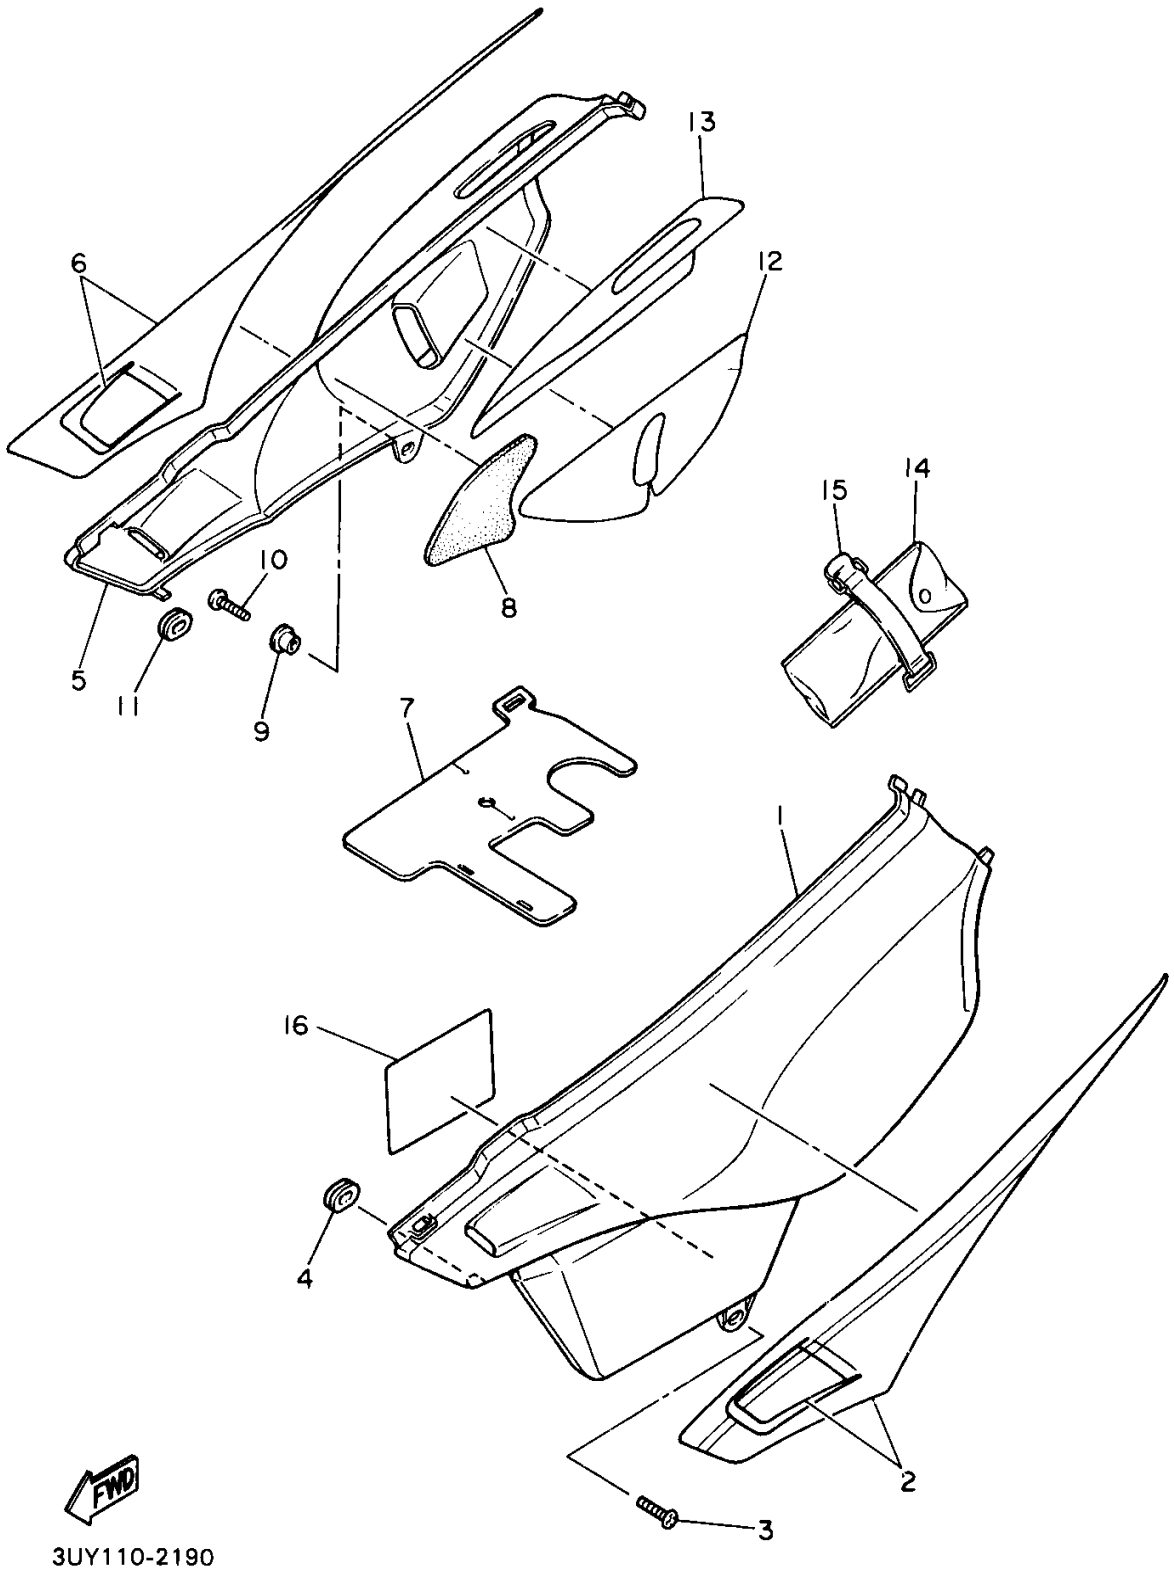


3UY110-2190

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-21711-40-00 | COVER, SIDE 1 | 1 | FARAWAY BLUE |
| 2 | 3TB-2173L-61-00 | GRAPHIC SET 1 | 1 | |
| 3 | 90149-06223-00 | SCREW | 1 | |
| 4 | 90480-01176-00 | GROMMET | 1 | |
| 5 | 3TB-21721-40-00 | COVER, SIDE 2 | 1 | FARAWAY BLUE |
| 6 | 3TB-2174L-61-00 | GRAPHIC SET 1 | 1 | |
| 7 | 3TB-2177F-00-00 | COVER | 1 | |
| 8 | 3TB-21542-00-00 | DAMPER 2 | 1 | |
| 9 | 90387-061V4-00 | COLLAR | 1 | |
| 10 | 90149-06223-00 | SCREW | 1 | |
| 11 | 90480-01176-00 | GROMMET | 1 | |
| 12 | 3TB-2174A-00-00 | INSULATOR, SIDE COVER | 1 | |
| 13 | 3TB-2174A-10-00 | INSULATOR, SIDE COVER | 1 | |
| 14 | 3TB-28100-00-00 | TOOL KIT | 1 | |
| 15 | 46X-21376-00-00 | BAND, TOOL | 1 | |
| 16 | 3UY-2179R-20-00 | PLATE, EPA 1 | 1 | UR CA ONLY |
| | 3UY-2179V-20-00 | PLATE, EPA 1 | 1 | UR NON-CA |

# REAR ARM

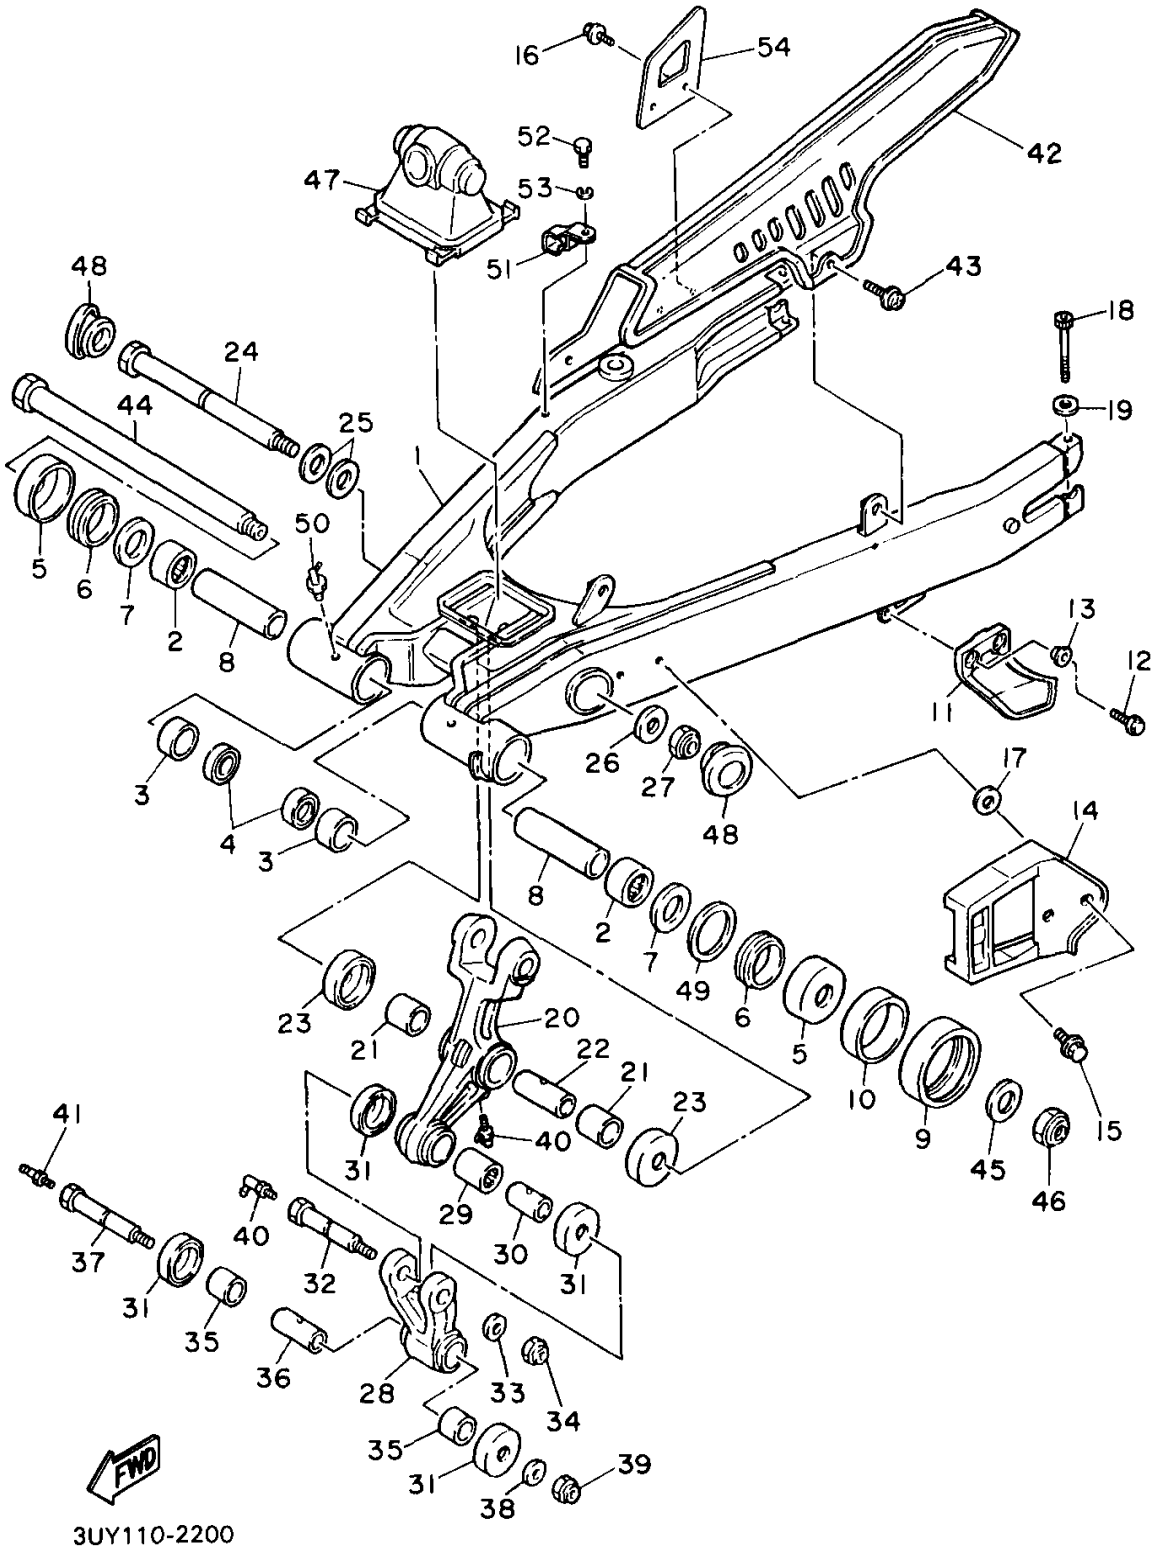



3UY110-2200

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-22110-01-P0 | REAR ARM COMP. | 1 | GRAY METALLIC |
| 2 | 93317-32231-00 | BEARING | 2 | |
| 3 | 90380-22111-00 | BUSH, SOLID | 2 | |
| 4 | 93106-22019-00 | OIL SEAL (DC 22-28-8) | 2 | |
| 5 | 2K6-22128-01-00 | COVER, THRUST 1 | 2 | |
| 6 | 93108-35004-00 | OIL SEAL (35-41-8) | 2 | |
| 7 | 90201-244A8-00 | WASHER, PLATE | 2 | |
| 8 | 1VJ-22123-00-00 | BUSH 1 | 2 | |
| 9 | 5X6-22151-10-00 | SEAL, GUARD | 1 | |
| 10 | 90387-440G3-00 | COLLAR | 1 | |
| 11 | 38V-22199-00-00 | SUPPORT, CHAIN | 1 | |
| 12 | 95811-06020-00 | BOLT, FLANGE | 2 | |
| 13 | 90387-06737-00 | COLLAR | 2 | |
| 14 | 2KF-22147-00-00 | PROTECTOR, CHAIN | 1 | |
| 15 | 95826-06010-00 | BOLT, FLANGE | 2 | |
| 16 | 95801-06010-00 | BOLT, flange | 2 | |
| 17 | 90209-06223-00 | WASHER | 2 | |
| 18 | 91311-06060-00 | BOLT | 2 | |
| 19 | 92901-06600-00 | WASHER | 2 | |
| 20 | 3TB-2217A-00-00 | ARM, RELAY | 1 | |
| 21 | 90386-20120-00 | BUSH | 2 | |
| 22 | 90380-14095-00 | BUSH, SOLID | 1 | |
| 23 | 34L-22128-00-00 | COVER, THRUST 1 | 2 | |
| 24 | 90105-12668-00 | BOLT, WASHER BASED | 1 | |
| 25 | 90201-140G9-00 | WASHER, PLATE (90201-14707) | 2 | |
| 26 | 90201-120A5-00 | WASHER, PLATE | 1 | |
| 27 | 95611-12100-00 | NUT, U | 1 | |
| 28 | 34L-2217F-00-00 | ROD, CONNECTING 1 | 1 | |
| 29 | 93315-31732-00 | BEARING, CYLINDRICAL | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# REAR ARM

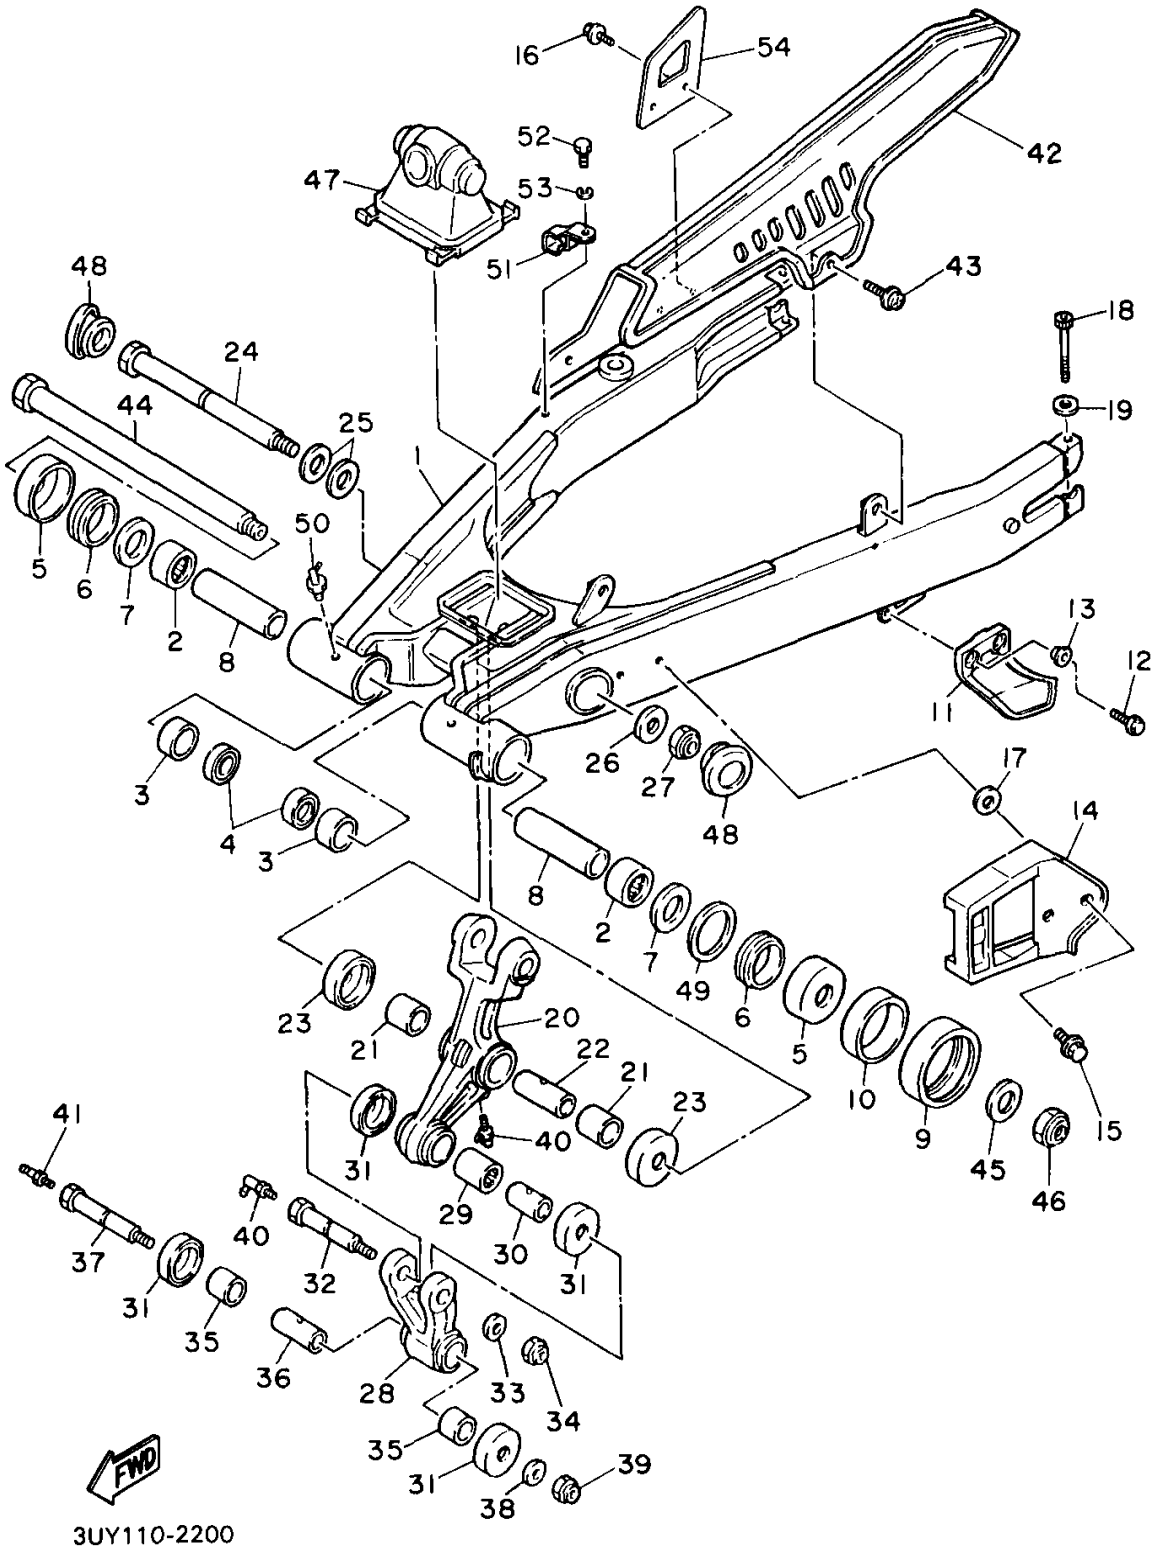


3UY110-2200

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 30 | 90387-121H1-00 | COLLAR | 1 | |
| 31 | 23X-22129-00-00 | COVER, THRUST 2 | 4 | |
| 32 | 90109-10759-00 | BOLT | 1 | |
| 33 | 90201-100E9-00 | WASHER, PLATE | 1 | |
| 34 | 90185-10120-00 | NUT, SELF-LOCKING | 1 | |
| 35 | 90386-20123-00 | BUSH | 2 | |
| 36 | 90387-122J6-00 | COLLAR | 1 | |
| 37 | 90109-10760-00 | BOLT | 1 | |
| 38 | 90201-100F7-00 | WASHER, PLATE | 1 | |
| 39 | 90185-10037-00 | NUT, SELF-LOCKING | 1 | |
| 40 | 93700-06005-00 | NIPPLE, GREASE | 2 | |
| 41 | 93700-06004-00 | NIPPLE, GREASE | 1 | |
| 42 | 3TB-22311-00-00 | CASE, CHAIN | 1 | |
| 43 | 90159-06084-00 | SCREW, WITH WASHER | 2 | |
| 44 | 1VJ-22141-00-00 | SHAFT, PIVOT | 1 | |
| 45 | 90201-15238-00 | WASHER, PLATE | 1 | |
| 46 | 90185-14070-00 | NUT, SELF-LOCKING | 1 | |
| 47 | 3TB-22189-00-00 | BOOT, RUBBER | 1 | |
| 48 | 34L-22117-00-00 | CAP | 2 | |
| 49 | 90201-251F6-00 | WASHER, PLATE | 1 | UN |
| 50 | 93700-06005-00 | NIPPLE, GREASE | 2 | |
| 51 | 90461-12110-00 | CLAMP | 1 | |
| 52 | 97003-06012-00 | BOLT (97001-06012) | 1 | |
| 53 | 92995-06100-00 | WASHER, SPRING | 1 | |
| 54 | 2KF-27491-00-00 | PROTECTOR | 1 | |


# REAR SUSPENSION

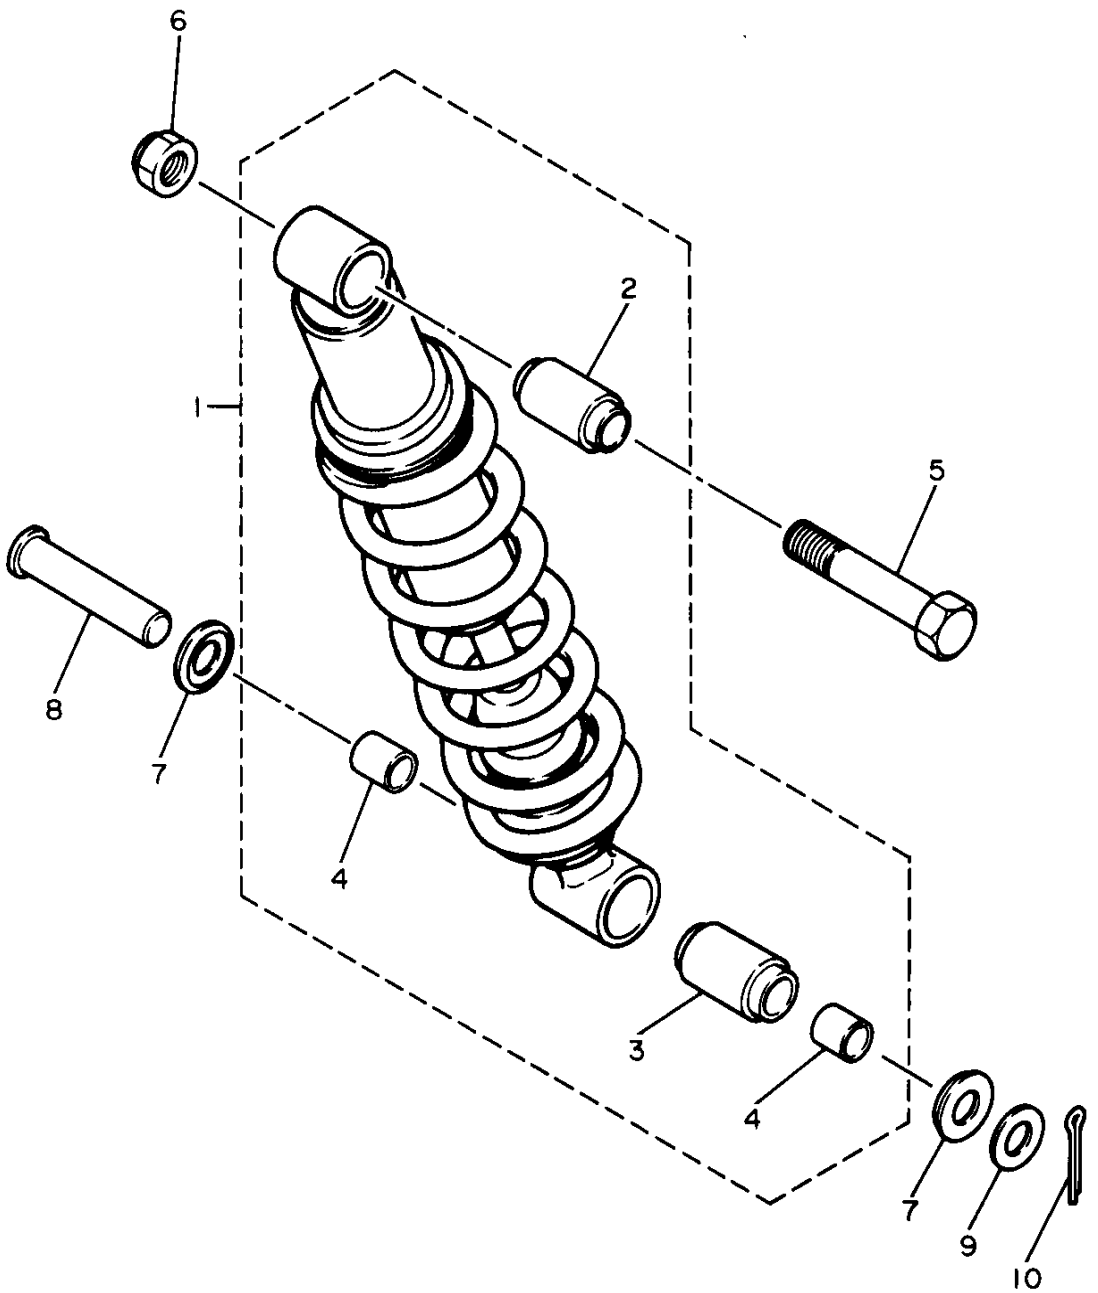


3TB351-0210

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-22210-20-33 | SHOCK ABSORBER ASSEMBLY, REAR | 1 | YAMAHA BLACK |
| 2 | 34L-22216-00-00 | . BUSH, REAR SHOCK ABSORBER | 1 | |
| 3 | 34L-22226-01-00 | . BUSH, SHOCK ABSORBER LOWER | 1 | |
| 4 | 90380-14130-00 | . BUSH, SOLID | 2 | |
| 5 | 90101-12295-00 | BOLT | 1 | |
| 6 | 95611-12100-00 | NUT, U | 1 | |
| 7 | 34L-22129-00-00 | COVER, THRUST 2 | 2 | |
| 8 | 90240-14106-00 | PIN, CLEVIS | 1 | |
| 9 | 92990-14600-00 | WASHER | 1 | |
| 10 | 91401-30030-00 | PIN, COTTER | 1 | |

# FRONT FORK

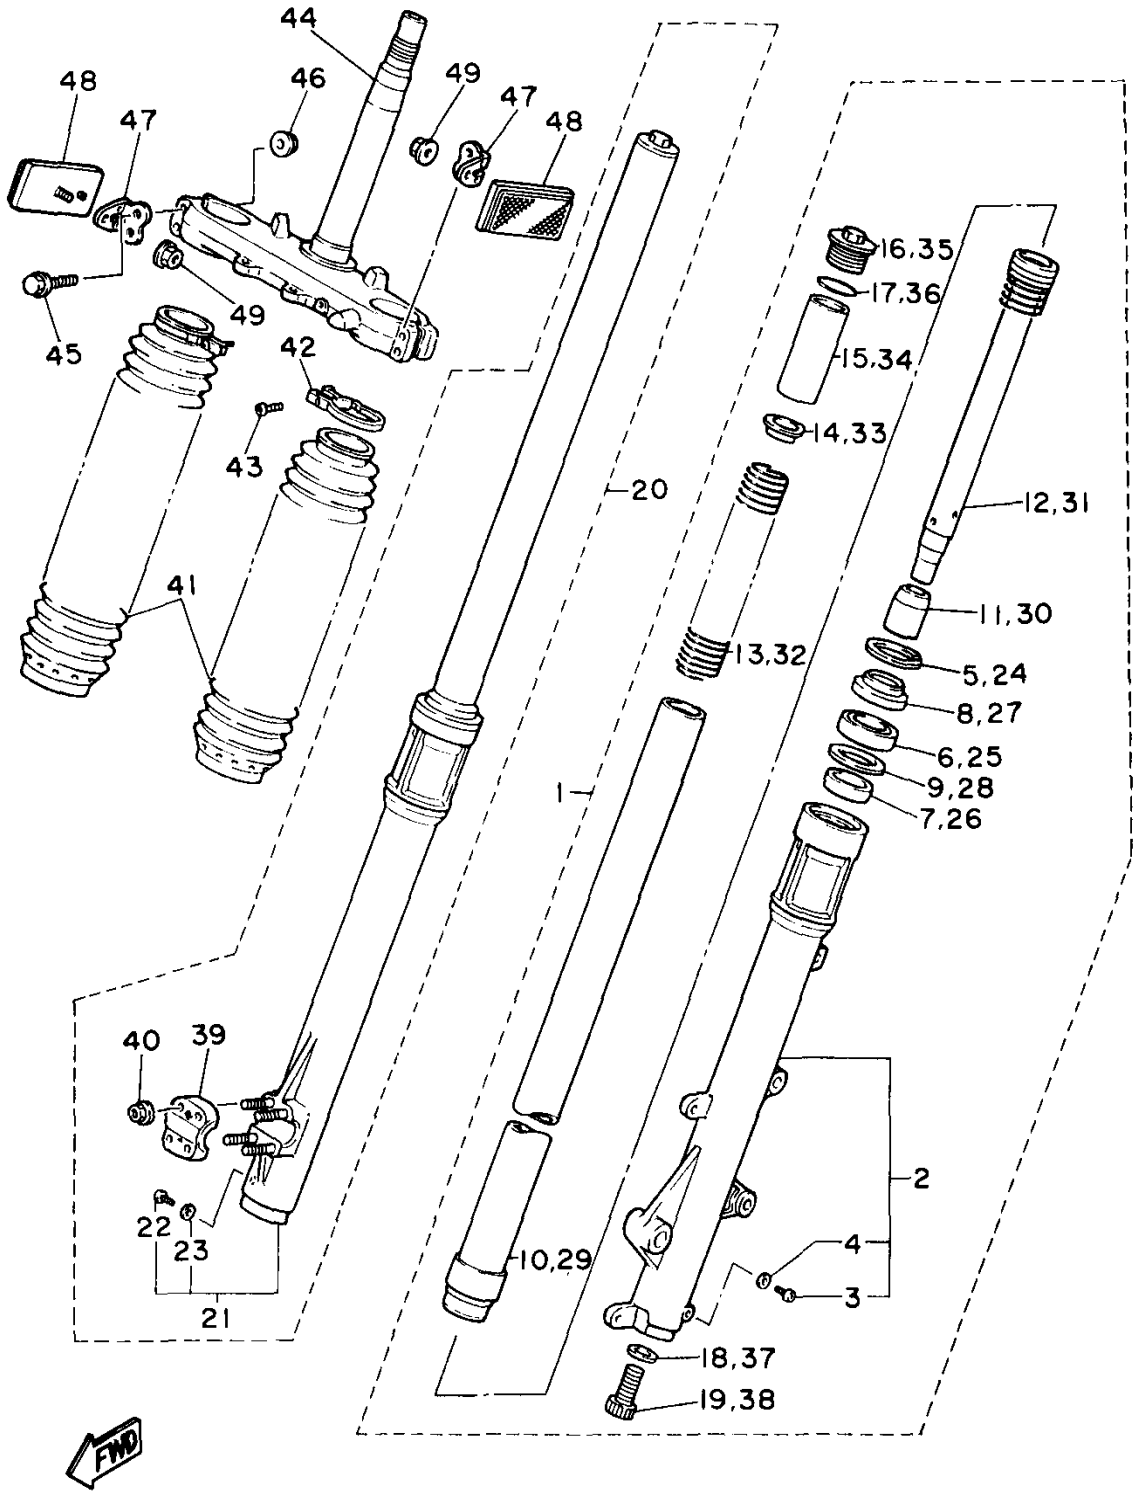



3UY110-0230

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-23102-00-00 | FRONT FORK ASSEMBLY (L.H) | 1 | |
| 2 | 3TB-23126-00-00 | . TUBE, OUTER 1 | 1 | |
| 3 | 4H7-23119-00-00 | . . PLUG, DRAIN - (122-23119-01) | 1 | |
| 4 | 122-23129-00-00 | . . GASKET, DRAIN PLUG | 1 | |
| 5 | 26H-23156-00-00 | . CLIP, OIL SEAL | 1 | |
| 6 | 43F-23145-10-00 | . OIL SEAL | 1 | |
| 7 | 3JD-23125-L0-00 | . METAL, SLIDE 1 (3LC-23125-00-00) | 1 | |
| 8 | 43F-23144-10-00 | . SEAL, DUST | 1 | |
| 9 | 36Y-23146-10-00 | . WASHER, OIL SEAL | 1 | |
| 10 | 3TB-23110-00-00 | . INNER TUBE COMP. 1 | 1 | |
| 11 | 3GM-23173-00-00 | . SPINDLE, TAPER | 1 | |
| 12 | 3TB-23170-00-00 | . CYLINDER COMP., FRONT FORK | 1 | |
| 13 | 3TB-23141-00-00 | . SPRING, FRONT FORK | 1 | |
| 14 | 43F-23142-10-00 | . SEAT, SPRING UPPER | 1 | |
| 15 | 3FW-23118-00-00 | . SPACER | 1 | |
| 16 | 3EN-23111-50-00 | . BOLT, CAP | 1 | |
| 17 | 43F-23188-10-00 | . O-RING | 1 | |
| 18 | 4V4-23158-L0-00 | . GASKET | 1 | |
| 19 | 4V4-23181-L0-00 | . BOLT, HEXAGON SOCKET HEAD | 1 | |
| 20 | 3TB-23103-00-00 | FRONT FORK ASSEMBLY (R.H) | 1 | |
| 21 | 3TB-23136-00-00 | . TUBE, OUTER 2 | 1 | |
| 22 | 4H7-23119-00-00 | . . PLUG, DRAIN - (122-23119-01) | 1 | |
| 23 | 122-23129-00-00 | . . GASKET, DRAIN PLUG | 1 | |
| 24 | 26H-23156-00-00 | . CLIP, OIL SEAL | 1 | |
| 25 | 43F-23145-10-00 | . OIL SEAL | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# FRONT FORK

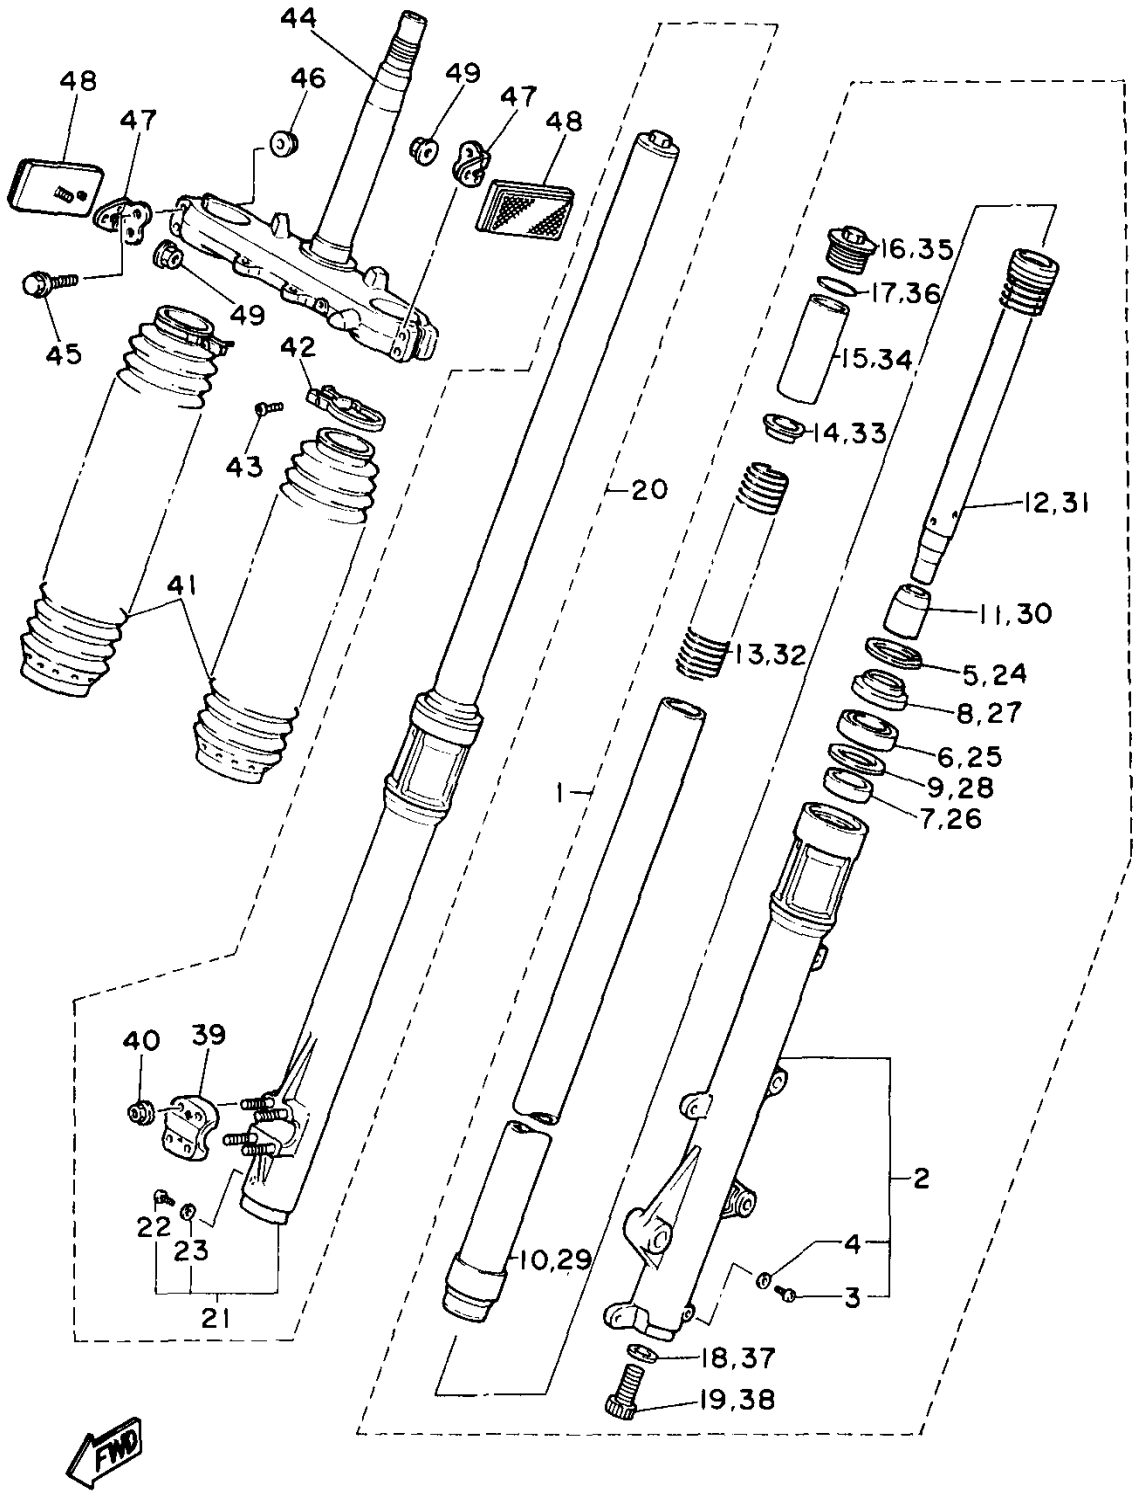


3UY110-0230

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 26 | 3JD-23125-L0-00 | . METAL, SLIDE 1 (3LC-23125-00-00) | 1 | |
| 27 | 43F-23144-10-00 | . SEAL, DUST | 1 | |
| 28 | 36Y-23146-10-00 | . WASHER, OIL SEAL | 1 | |
| 29 | 3TB-23110-00-00 | . INNER TUBE COMP. 1 | 1 | |
| 30 | 3GM-23173-00-00 | . SPINDLE, TAPER | 1 | |
| 31 | 3TB-23170-00-00 | . CYLINDER COMP., FRONT FORK | 1 | |
| 32 | 3TB-23141-00-00 | . SPRING, FRONT FORK | 1 | |
| 33 | 43F-23142-10-00 | . SEAT, SPRING UPPER | 1 | |
| 34 | 3FW-23118-00-00 | . SPACER | 1 | |
| 35 | 3EN-23111-50-00 | . BOLT, CAP | 1 | |
| 36 | 43F-23188-10-00 | . O-RING | 1 | |
| 37 | 4V4-23158-L0-00 | . GASKET | 1 | |
| 38 | 4V4-23181-L0-00 | . BOLT, HEXAGON SOCKET HEAD | 1 | |
| 39 | 4V2-23167-L0-00 | . HOLDER, AXLE | 1 | |
| 40 | 2KF-23127-01-00 | . NUT, OUTER TUBE | 1 | |
| 41 | 43F-23191-11-00 | BOOT | 2 | BLUISH GREEN SOLID 1 |
| 42 | 43M-23192-L0-00 | BAND | 2 | |
| 43 | 98506-04018-00 | SCREW, PAN HEAD | 2 | |
| 44 | 3TB-23340-00-00 | UNDER BRACKET COMP. | 1 | |
| 45 | 95811-08055-00 | BOLT, FLANGE | 4 | |
| 46 | 95701-08500-00 | NUT, FLANGE | 4 | |
| 47 | 49R-85112-00-00 | BRACKET, REFLECTOR 1 | 2 | |
| 48 | 23V-85110-00-00 | REFLECTOR ASSEMBLY | 2 | |
| 49 | 95701-05500-00 | NUT, FLANGE | 2 | |


# STEERING

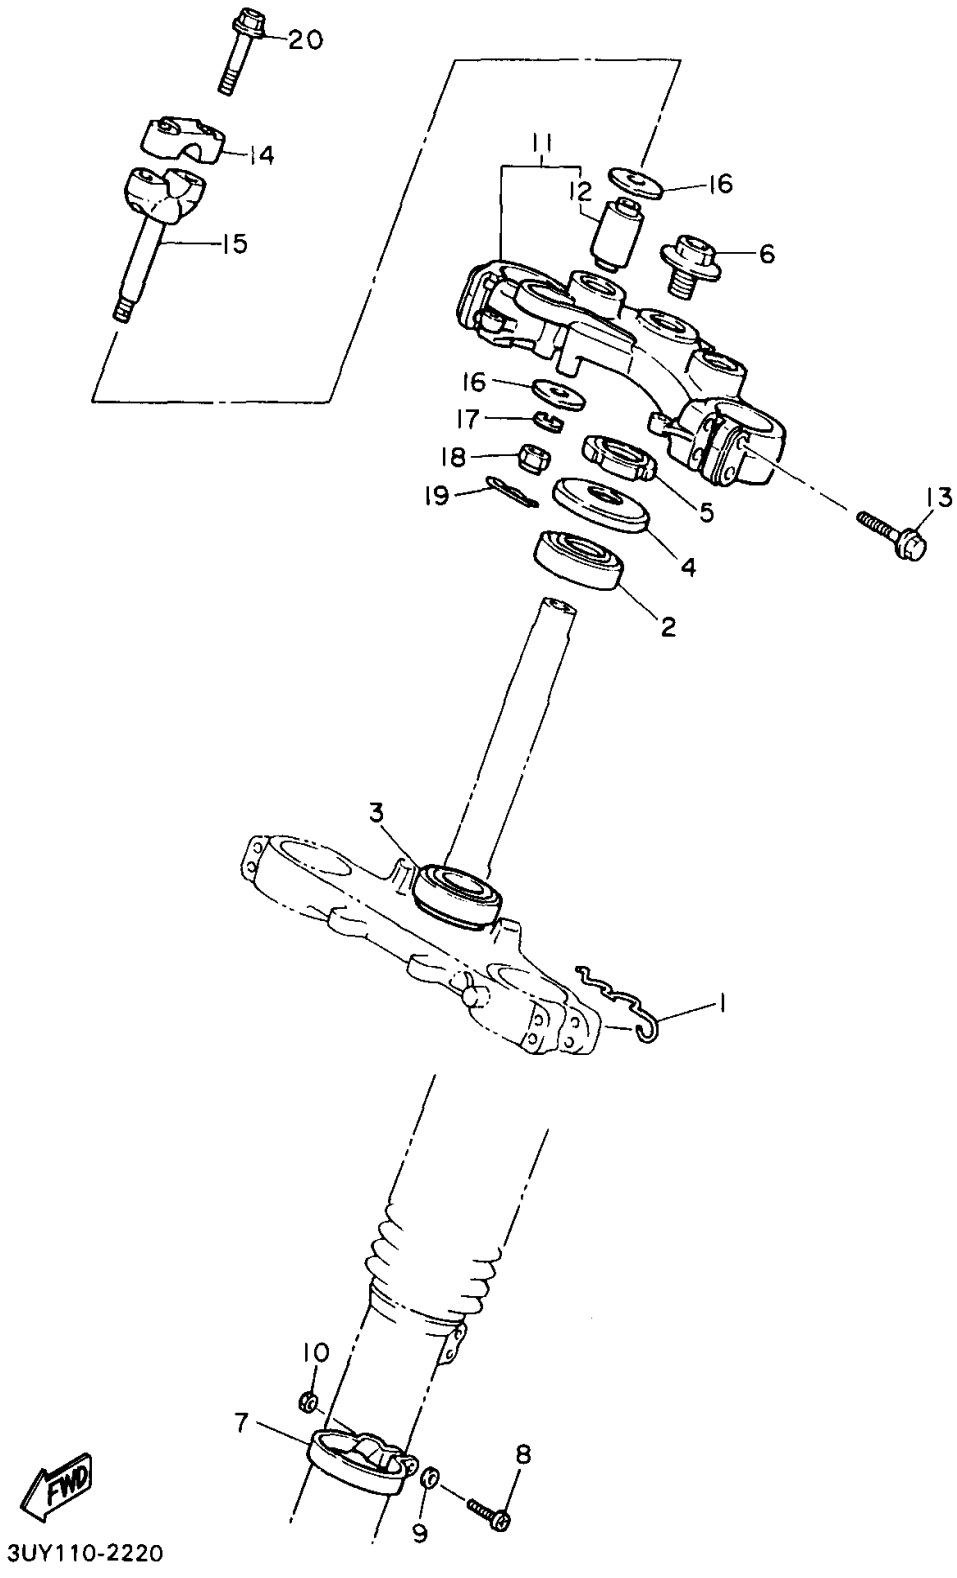


3UY110-2220

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-2331E-00-00 | GUIDE, CABLE | 1 | |
| 2 | 93332-00001-00 | BEARING | 1 | |
| 3 | 93332-00008-00 | BEARING | 1 | |
| 4 | 1W1-23416-00-00 | COVER, BALL RACE 2 | 1 | |
| 5 | 90179-25033-00 | NUT | 1 | |
| 6 | 90105-14102-00 | BOLT, WASHER BASED | 1 | |
| 7 | 34L-23318-01-00 | HOLDER, CABLE 1 | 1 | |
| 8 | 98501-05020-00 | SCREW, PAN HEAD | 1 | |
| 9 | 92901-05600-00 | WASHER, PLATE | 1 | |
| 10 | 95303-05600-00 | NUT | 1 | |
| 11 | 3TB-W2341-00-00 | CROWN, HANDLE | 1 | |
| 12 | 5A8-23434-00-00 | . HOLDER, DAMPER (5A8-23434-01-00) | 2 | |
| 13 | 95816-08040-00 | BOLT, FLANGE | 4 | |
| 14 | 1E6-23441-00-00 | HOLDER, HANDLE UPR | 2 | |
| 15 | 3Y6-23442-00-98 | HOLDER, HANDLE LOWER | 1 | LOW GLOSS BLACK |
| 16 | 90201-100A1-00 | WASHER, PLATE | 4 | |
| 17 | 92901-10100-00 | WASHER, SPRING | 2 | |
| 18 | 95303-10700-00 | NUT | 2 | |
| 19 | 90468-12006-00 | CLIP | 2 | |
| 20 | 95816-08035-00 | BOLT, FLANGE | 4 | |


# FUEL TANK

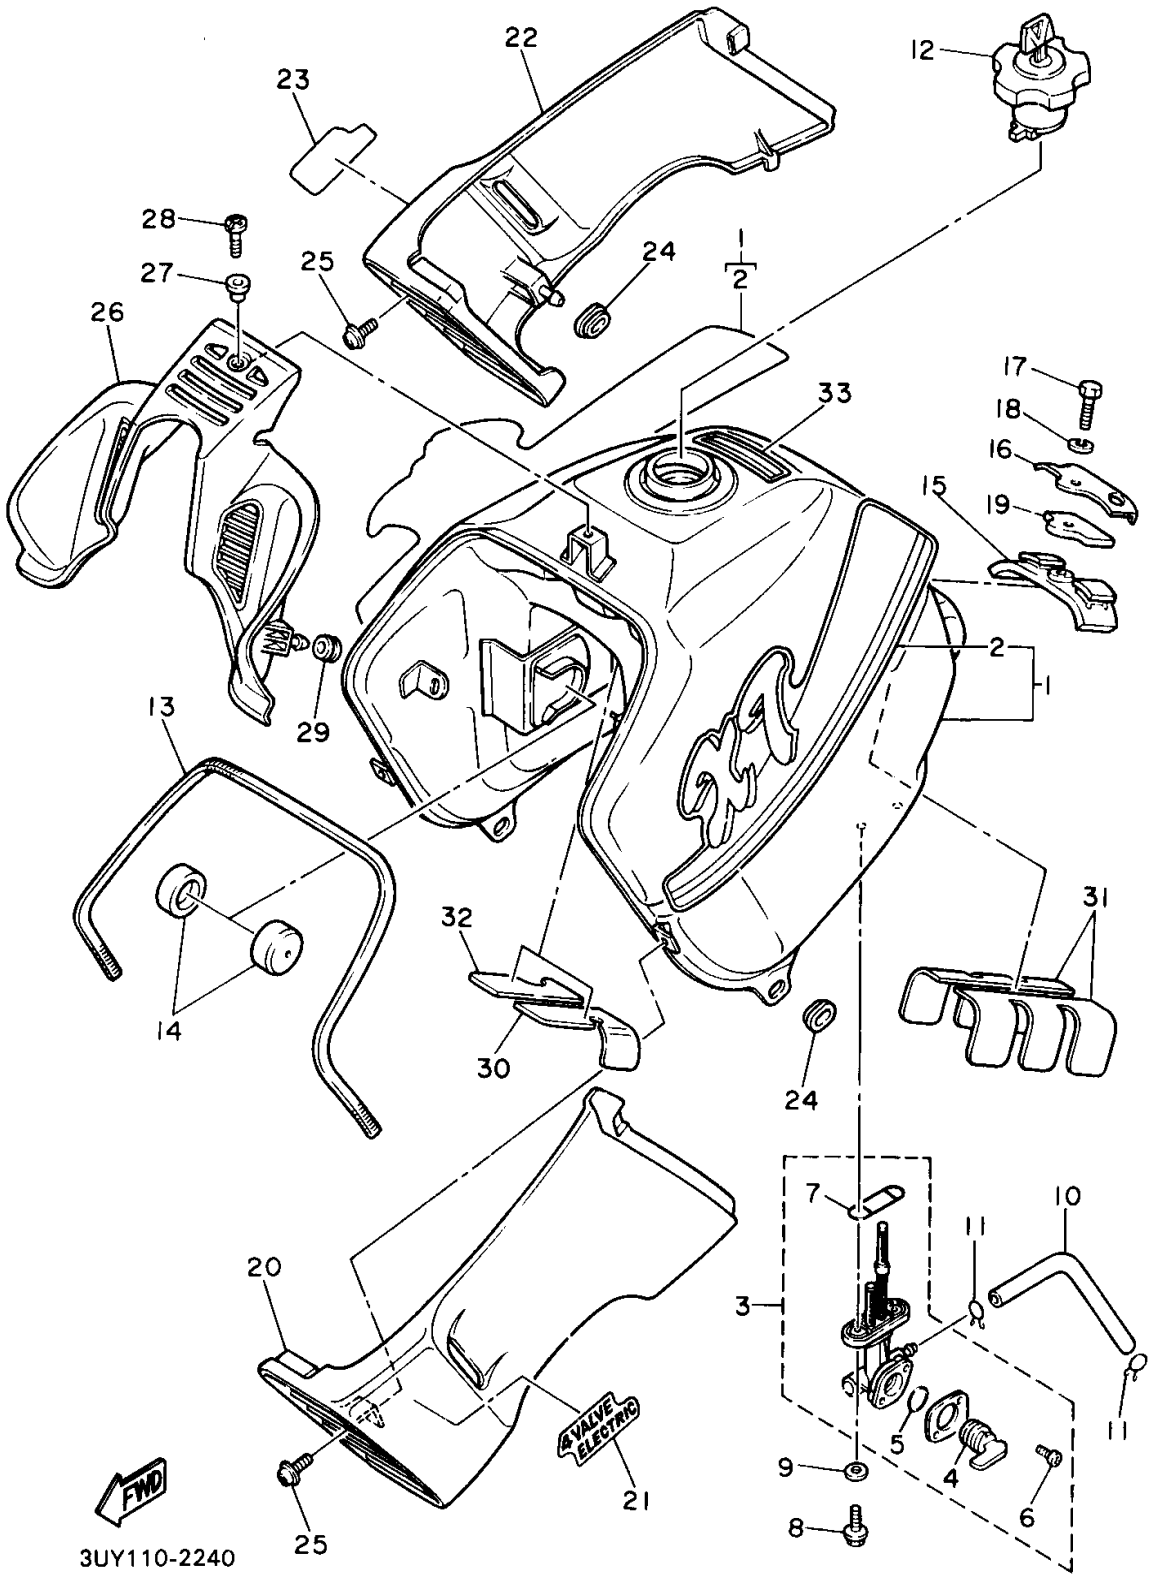


| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-24110-00-08 | FUEL TANK COMP | 1 | FARAWAY BLUE |
| 2 | 3TB-24240-60-00 | . GRAPHIC SET | 1 | |
| 3 | 3FY-24500-00-00 | FUEL COCK ASSEMBLY 1 | 1 | |
| 4 | 3AJ-24523-00-00 | . VALVE PACKING | 1 | |
| 5 | 3AJ-24534-00-00 | . SEAL, COCK | 1 | |
| 6 | 98503-03008-00 | . SCREW, PAN HEAD | 2 | |
| 7 | 4X8-24512-00-00 | . O-RING | 1 | |
| 8 | 95023-06016-00 | BOLT | 2 | |
| 9 | 90202-05193-00 | WASHER, PLATE | 2 | |
| 10 | 90445-10638-00 | HOSE | 1 | |
| 11 | 90467-09006-00 | CLIP | 2 | |
| 12 | 11H-24602-03-00 | CAP ASSEMBLY | 1 | NON-CA |
| 13 | 3TB-24188-00-00 | MOLD, FUEL TANK | 1 | |
| 14 | 3TB-24181-00-00 | DAMPER, LOCATING 1 | 2 | |
| 15 | 43F-24182-00-00 | DAMPER, LOCATING 2 | 1 | |
| 16 | 3TB-24186-00-00 | WASHER, SPECIAL | 1 | |
| 17 | 97313-06016-00 | BOLT, HEXAGON | 1 | |
| 18 | 92995-06100-00 | WASHER, SPRING | 1 | |
| 19 | 23T-24724-01-00 | DAMPER, SEAT | 1 | |
| 20 | 3TB-2137W-40-00 | SCOOP, AIR 1 | 1 | YAMAHA BLACK |
| 21 | 3TB-24231-60-00 | EMBLEM 1 | 1 | |
| 22 | 3TB-2137X-40-00 | SCOOP, AIR 2 | 1 | YAMAHA BLACK |
| 23 | 3TB-24232-60-00 | EMBLEM 2 | 1 | |
| 24 | 90480-01401-00 | GROMMET | 2 | |
| 25 | 90159-06042-00 | SCREW, WITH WASHER | 2 | |
| 26 | 3TB-2137Y-00-00 | GUIDE, AIR | 1 | |
| 27 | 90387-064J1-00 | COLLAR | 1 | |
| 28 | 90149-06223-00 | SCREW | 1 | |
| 29 | 90480-13383-00 | GROMMET | 2 | |


*CONTINUED ON NEXT FRAME ➤*

# FUEL TANK

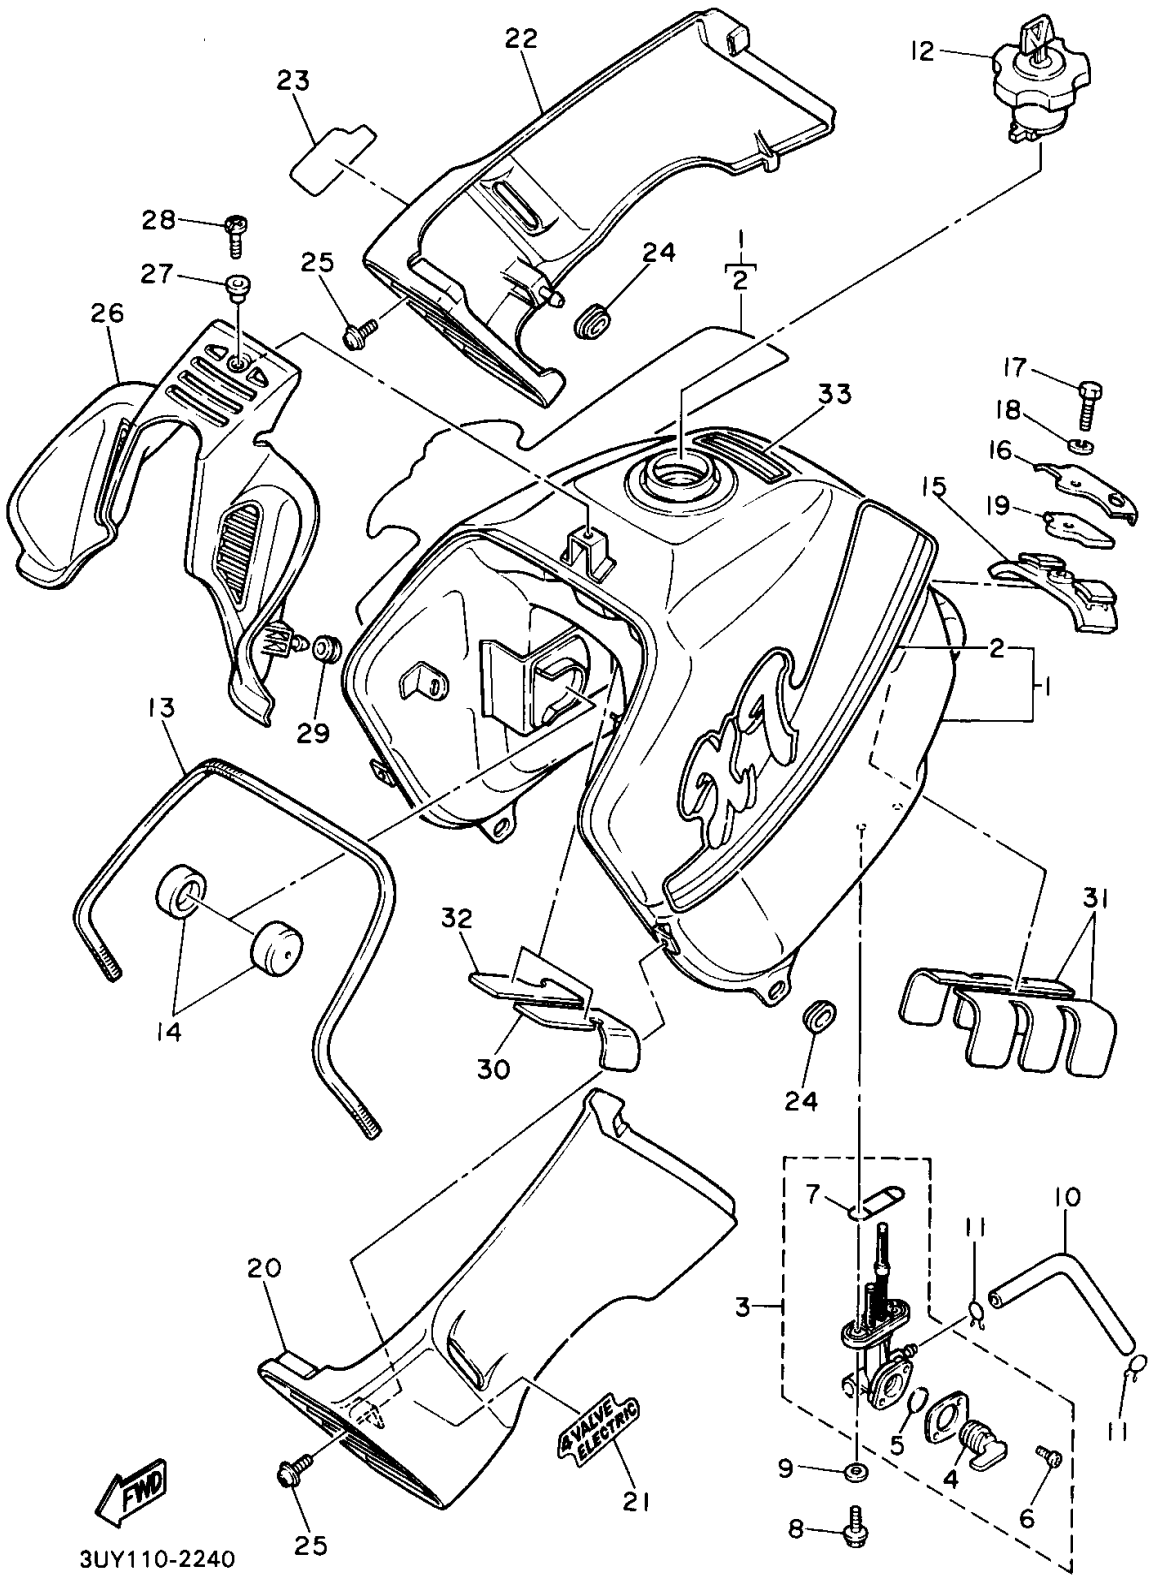



| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 30 | 3TB-2416F-00-00 | INSULATOR, FUEL TANK 1 | 1 | |
| 31 | 3TB-2416G-00-00 | INSULATOR, FUEL TANK 2 | 2 | |
| 32 | 3TB-2416F-10-00 | INSULATOR, FUEL TANK 1 | 1 | |
| 33 | 3MX-2118K-00-00 | LABEL, CAUTION | 1 | |

# FUEL TANK (CALIFORNIA MODEL ONLY

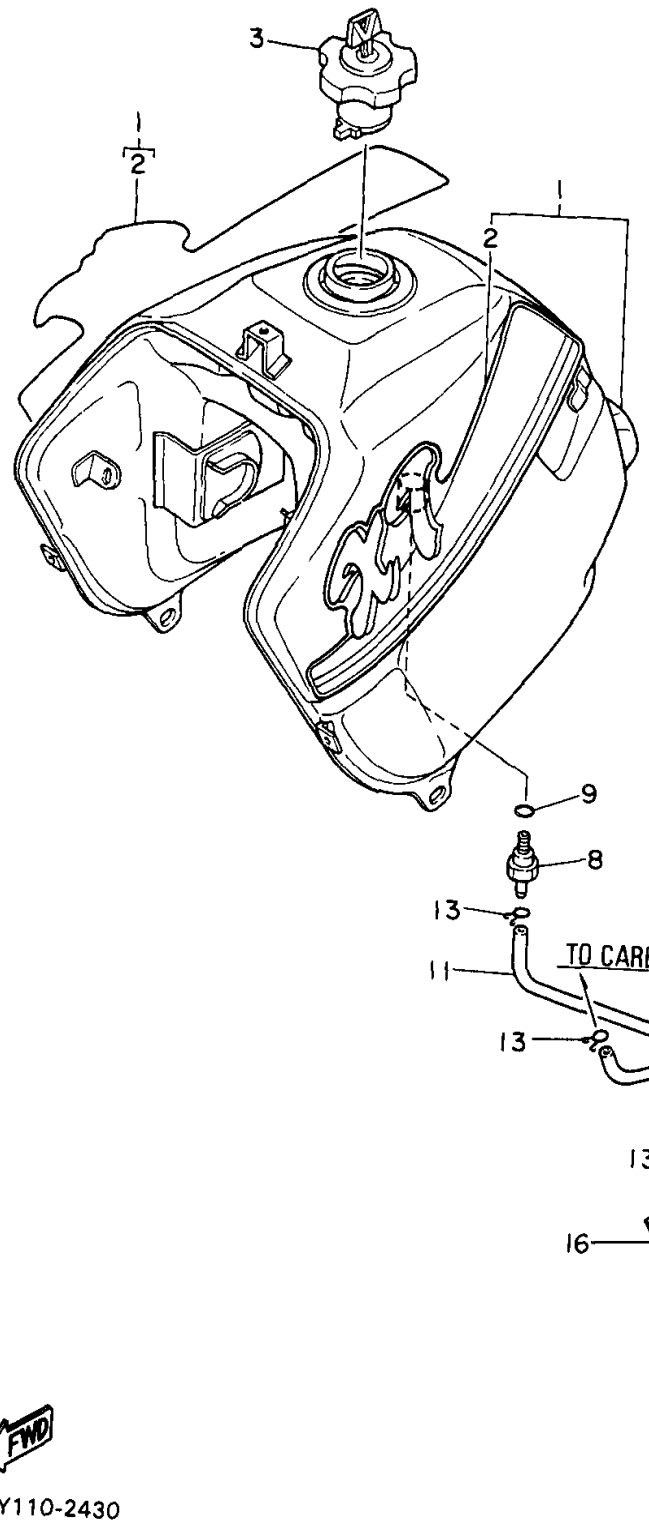


3UY110-2430

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3UY-24110-00-04 | FUEL TANK COMP ..... | 1 | FARAWAY BLUE |
| 2 | 3TB-24240-60-00 | . GRAPHIC SET ..... | 1 | |
| 3 | 51K-24602-00-00 | CAP ASSEMBLY ..... | 1 | |
| 4 | 47M-24170-00-00 | CANISTER ASSEMBLY ..... | 1 | |
| 5 | 90480-12529-00 | GROMMET ..... | 2 | |
| 6 | 90387-060G7-00 | COLLAR ..... | 2 | |
| 7 | 90119-06056-00 | BOLT, WITH WASHER ..... | 1 | |
| 8 | 20K-24180-00-00 | ROLL OVER VALVE ASSEMBLY ..... | 1 | |
| 9 | 93210-10166-00 | O-RING ..... | 1 | |
| 10 | 90445-102F4-00 | HOSE ..... | 1 | |
| 11 | 90445-10344-00 | HOSE ..... | 1 | |
| 12 | 90446-11268-00 | HOSE ..... | 1 | |
| 13 | 90467-09006-00 | CLIP ..... | 4 | |
| 14 | 90467-11102-00 | CLIP, SCISSOR ..... | 1 | |
| 15 | 90119-06118-00 | BOLT, WITH WASHER ..... | 1 | |
| 16 | 2H7-21628-00-00 | DAMPER 1 (4U5-2317J-00) ... | 1 | |

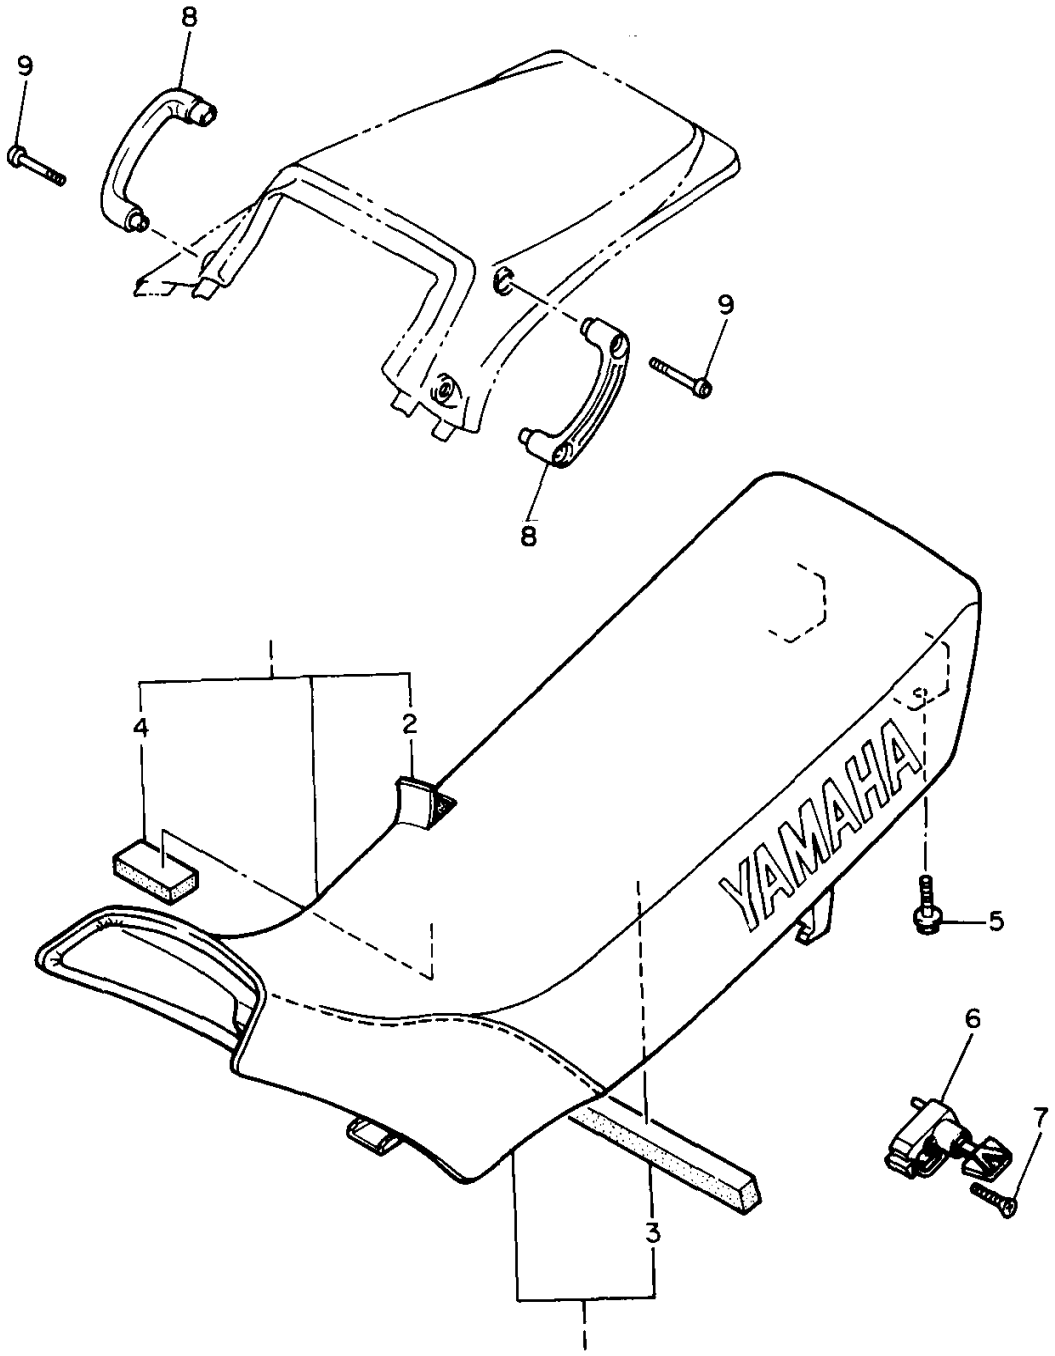



3TB351-0250

# SEAT

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-24770-40-00 | SEMI-DOUBLE SEAT ASSEMBLY | 1 | YAMAHA BLACK |
| 2 | 3TB-24731-40-00 | . COVER, SEAT | 1 | YAMAHA BLACK |
| 3 | 3TB-24723-00-00 | . DAMPER, SEAT | 1 | |
| 4 | 3TB-24185-00-00 | . DAMPER, LOCATING 5 | 1 | |
| 5 | 90119-06063-00 | BOLT, WITH WASHER | 2 | |
| 6 | 26H-21308-00-00 | HELMET HANGER ASSEMBLY (4R8-21308-00) | 1 | |
| 7 | 90149-06154-00 | SCREW | 1 | |
| 8 | 3TB-2164F-00-00 | STAY 1 | 2 | |
| 9 | 92016-08050-00 | SCREW | 4 | |

# FRONT WHEEL

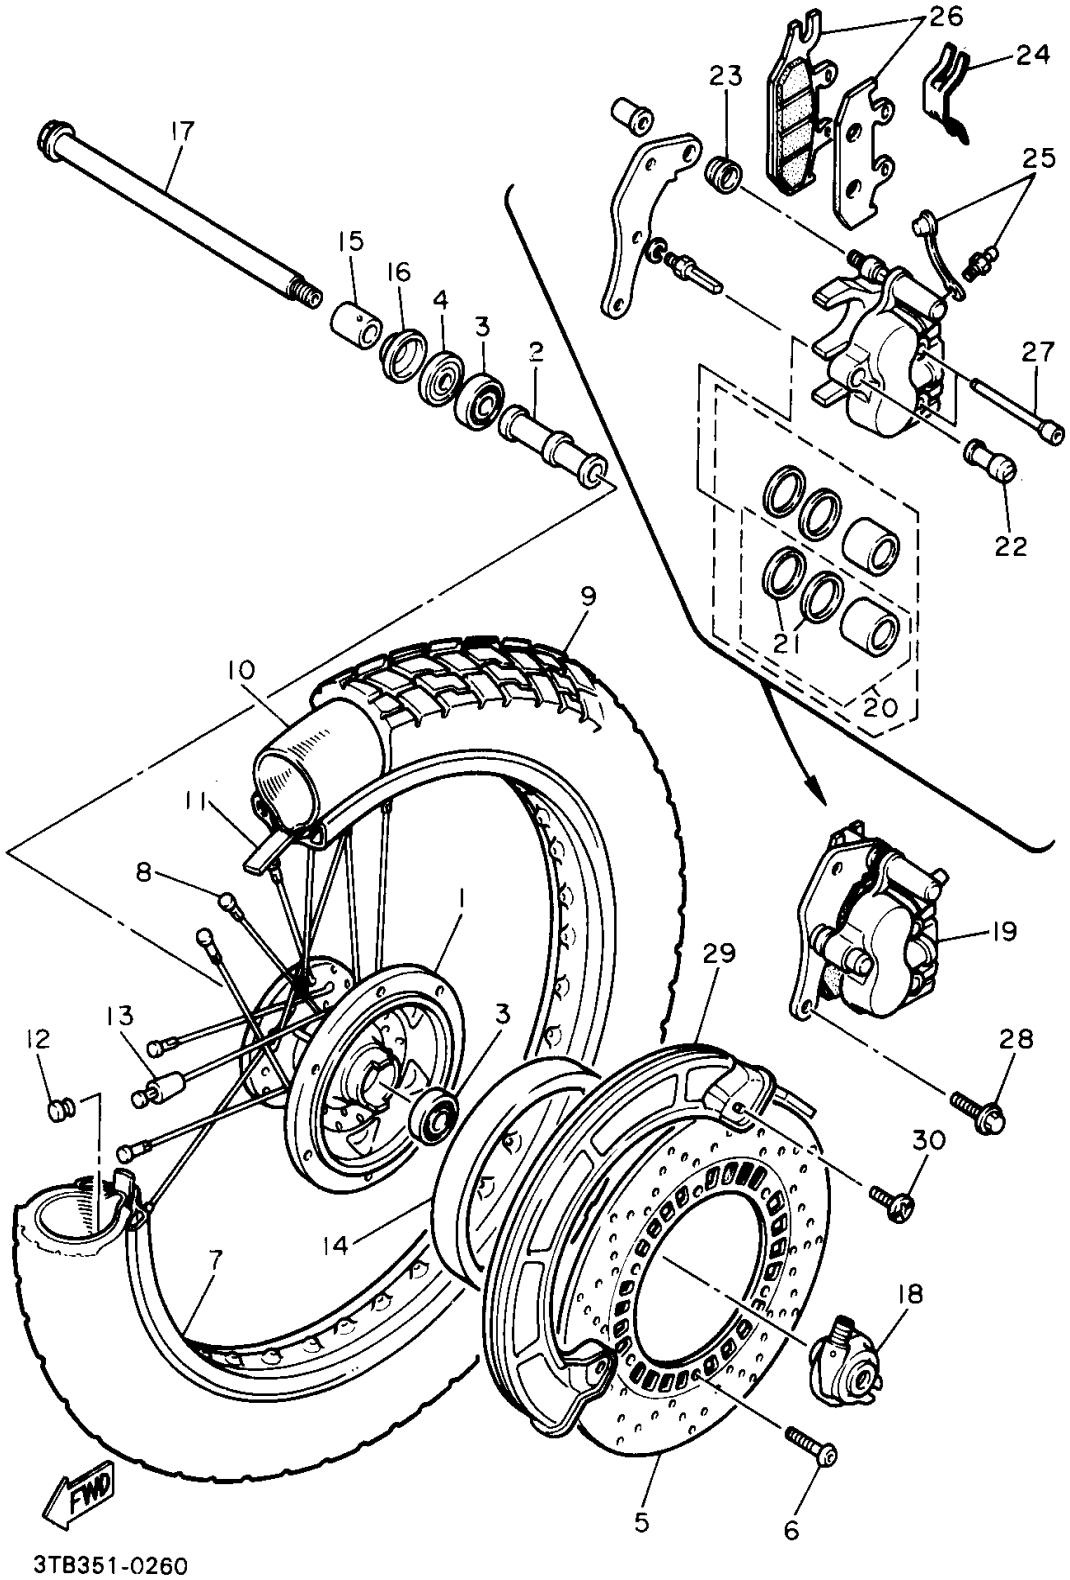


3TB351-0260

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-25111-00-98 | HUB, FRONT | 1 | LOW GLOSS BLACK |
| 2 | 90560-15240-00 | SPACER | 1 | |
| 3 | 93306-20209-00 | BEARING (B6202) | 2 | |
| 4 | 93102-20281-00 | OIL SEAL (SD 20-35-5) | 1 | |
| 5 | 3TB-2582T-00-00 | DISC, BRAKE | 1 | |
| 6 | 90149-06251-00 | SCREW | 6 | |
| 7 | 94418-21492-00 | RIM (1.85-21) | 1 | |
| 8 | 3TB-25104-00-00 | SPOKE SET, FRONT | 1 | |
| 9 | 94109-213X0-00 | TIRE (MCS 90/90-21 54S TW41) | 1 | UR BRIDGE- STONE |
| 10 | 94209-21277-00 | TUBE (80/100C-21 TR4) (94209-21229-00 ) | 1 | BRIDGE- STONE |
| 11 | 94330-21084-00 | BAND, RIM (3.00-21) | 1 | BRIDGE- STONE |
| 12 | 90338-09130-00 | PLUG | 1 | |
| 13 | 156-25398-00-00 | BALANCER, WHEEL | 1 | |
| 14 | 3TB-25336-00-00 | RING 2 | 1 | |
| 15 | 90387-152J3-00 | COLLAR | 1 | |
| 16 | 322-25118-00-00 | COVER, HUB DUST | 1 | |
| 17 | 55U-25181-01-00 | AXLE, WHEEL | 1 | |
| 18 | 34L-25190-01-00 | GEAR UNIT ASSEMBLY | 1 | |
| 19 | 3TB-2580T-00-00 | CALIPER ASSEMBLY (LEFT) | 1 | |
| 20 | 3TB-W0057-00-00 | . PISTON ASSEMBLY, CALIPER | 2 | |
| 21 | 3GD-W0047-00-00 | . . CALIPER SEAL KIT | 2 | |
| 22 | 1UY-25937-51-00 | . BOOT 2 | 1 | |
| 23 | 3JD-25917-00-00 | . BOOT, CALIPER | 1 | |
| 24 | 3TB-25919-00-00 | . SUPPORT, PAD | 1 | |
| 25 | 36Y-W0048-00-00 | . BLEED SCREW KIT | 1 | |
| 26 | 3TB-W0045-00-00 | . BRAKE PAD KIT | 1 | |
| 27 | 3TB-25933-00-00 | . PIN, PAD | 2 | |
| 28 | 90105-10316-00 | BOLT, WASHER BASED | 2 | |

*CONTINUED ON NEXT FRAME ➤*


# FRONT WHEEL

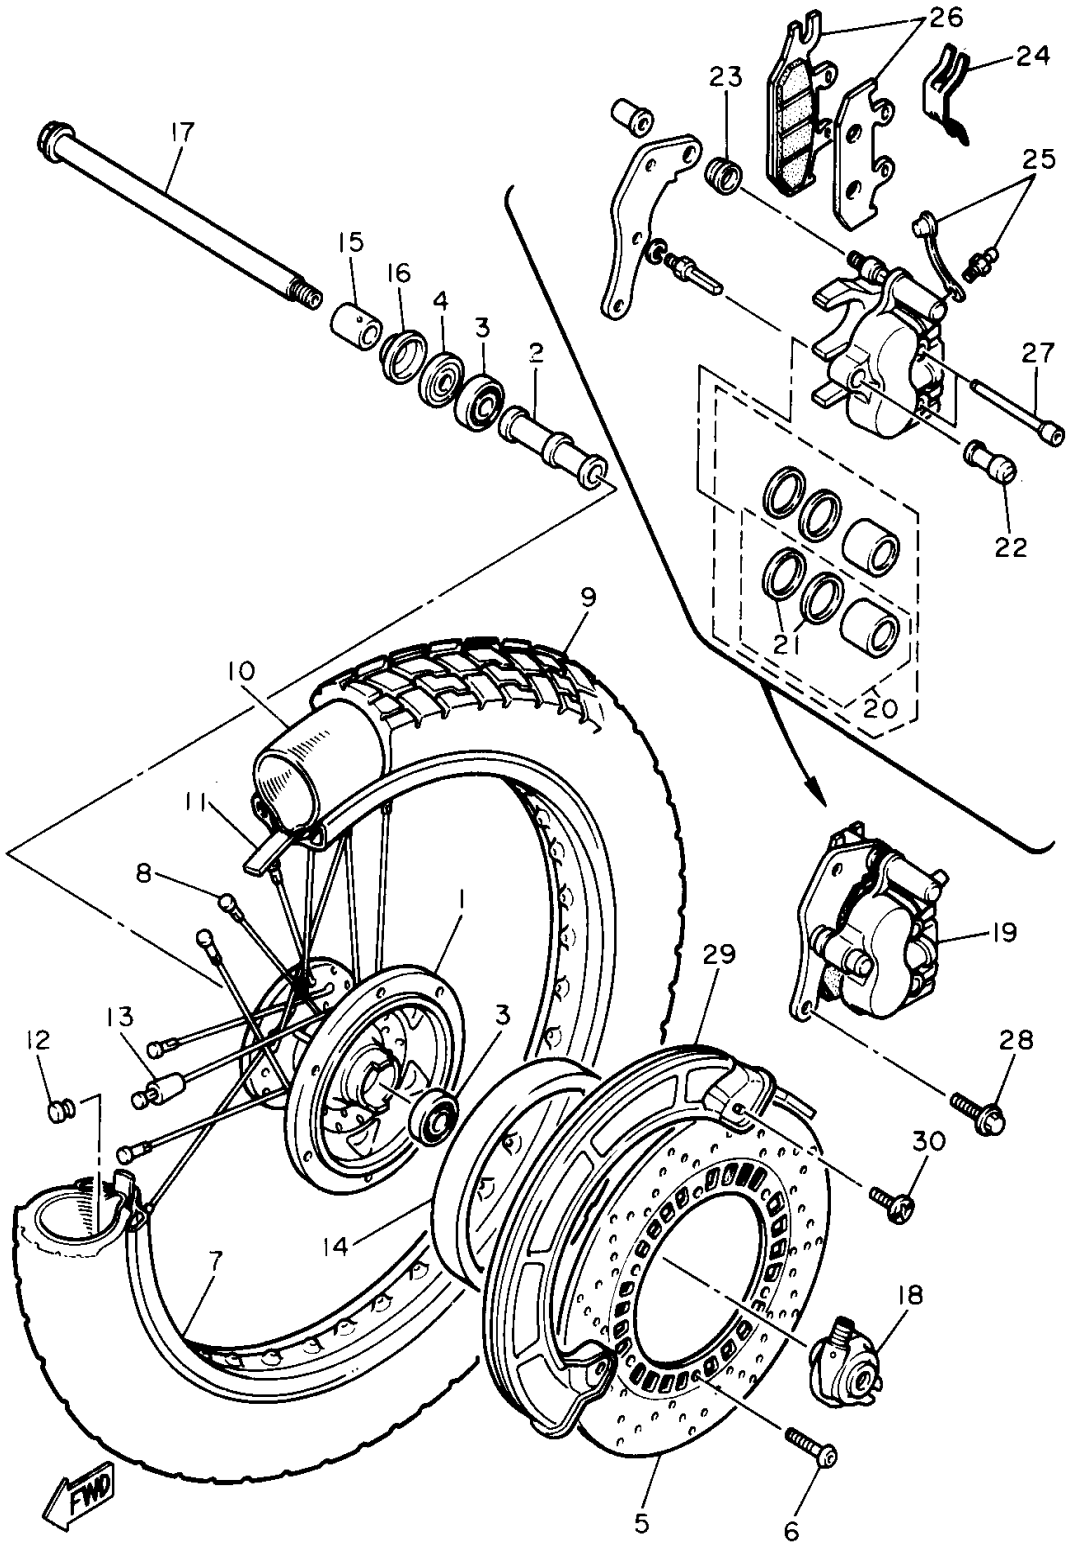


3TB351-0260

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 29 | 1VJ-25715-00-00 | COVER 1 . . . . . | 1 | INK BLUE |
| 30 | 90149-06194-00 | SCREW . . . . . | 2 | |

# REAR WHEEL

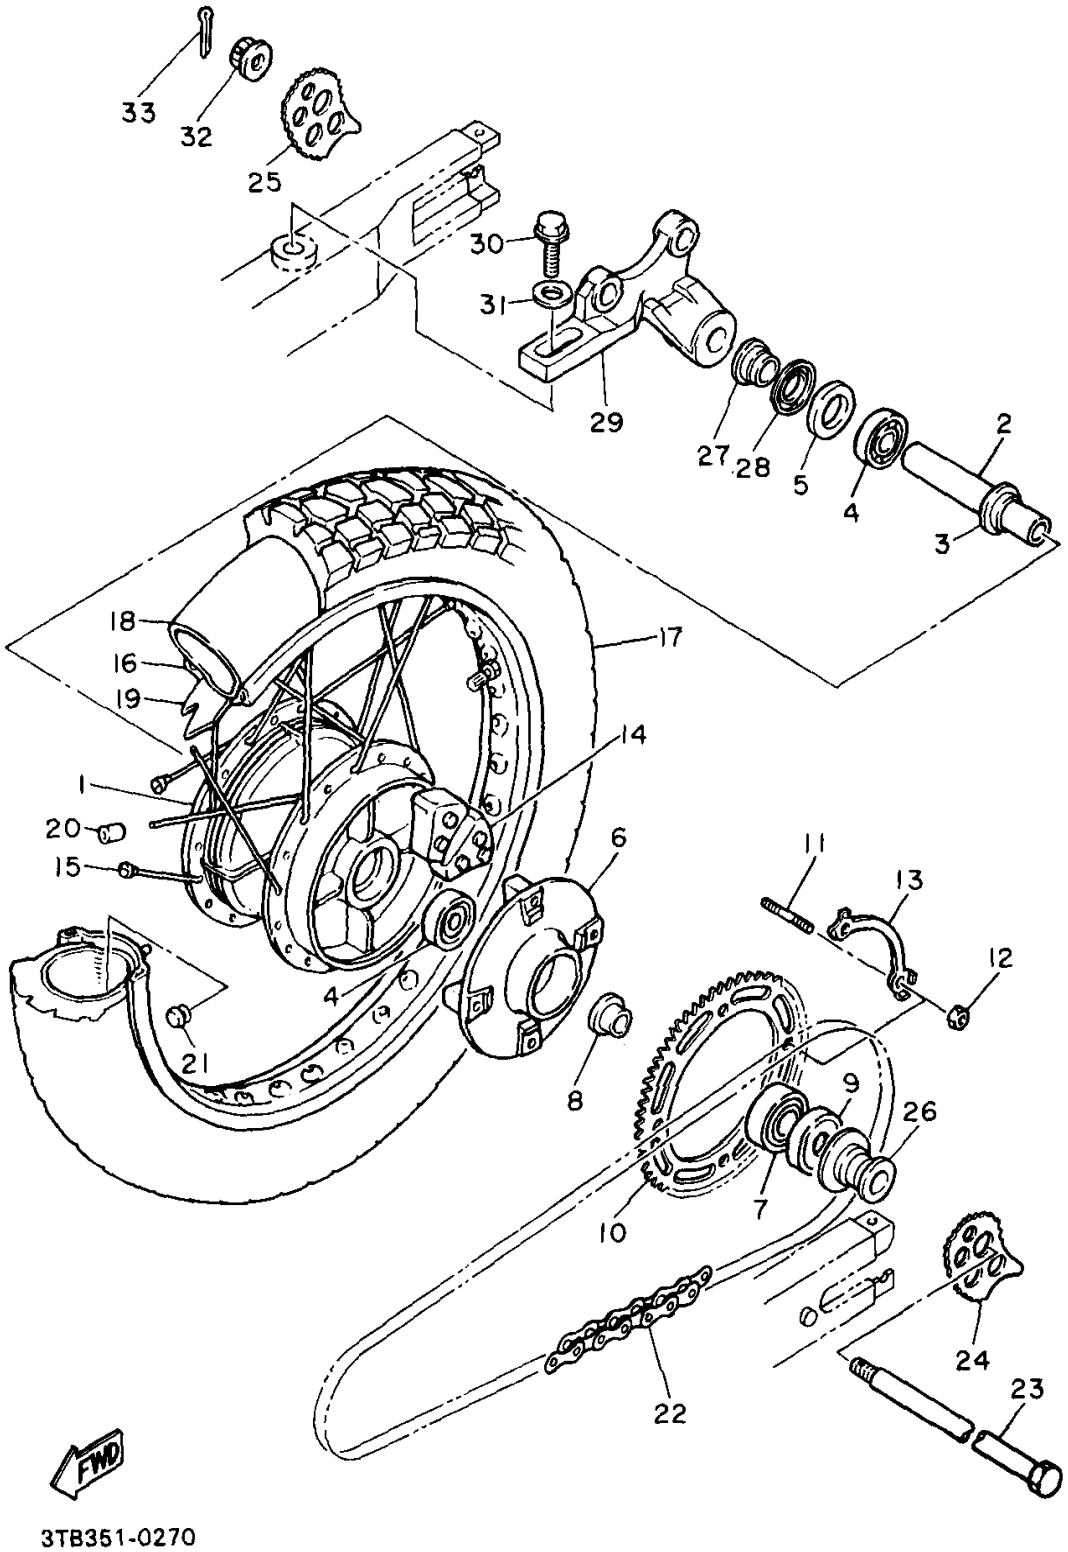



3TB351-0270

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 2KF-25311-00-98 | HUB, REAR | 1 | LOW GLOSS BLACK |
| 2 | 90387-173M5-00 | COLLAR | 1 | |
| 3 | 146-25315-00-00 | FLANGE, SPACER | 1 | |
| 4 | 93306-20310-00 | BEARING | 2 | |
| 5 | 93102-25311-00 | OIL SEAL (FPJ 25-44-8 TS) | 1 | |
| 6 | 1VJ-25366-01-98 | CLUTCH, HUB | 1 | LOW GLOSS BLACK |
| 7 | 93306-30416-00 | BEARING (B6304RS) | 1 | |
| 8 | 1VJ-25377-00-00 | COLLAR, WHEEL | 1 | |
| 9 | 93102-30072-00 | OIL SEAL, SD-TYPE | 1 | |
| 10 | 2UJ-25445-50-00 | SPROCKET, DRIVEN (45T) | 1 | |
| 11 | 90116-10348-00 | BOLT, STUD | 4 | |
| 12 | 90170-10219-00 | NUT | 4 | |
| 13 | 5Y1-25412-00-00 | WASHER | 2 | |
| 14 | 5Y1-25364-00-00 | DAMPER | 4 | |
| 15 | 3TB-25304-00-00 | SPOKE SET, REAR | 1 | |
| 16 | 94425-17491-00 | RIM (2.50-17) | 1 | |
| 17 | 94112-173X2-00 | TIRE (MCS 120/90-17 64S TW42B) | 1 | UR BRIDGE- STONE |
| 18 | 94212-17264-00 | TUBE (MCS 120/90-17 TR-4) | 1 | UR BRIDGE- STONE |
| | 94212-17281-00 | TUBE (120/90.130/80-17) | 1 | UR DUNLOP |
| 19 | 94330-17158-00 | BAND, RIM (3.00-17) | 1 | BRIDGE- STONE |
| 20 | 156-25398-00-00 | BALANCER, WHEEL | 1 | UN |
| 21 | 90338-09130-00 | PLUG | 1 | |
| 22 | 94581-45106-00 | CHAIN (DID520V2-106LE) | 1 | |
| 23 | 3AJ-25381-00-00 | AXLE, WHEEL | 1 | |
| 24 | 3Y1-25388-01-00 | PULLER, CHAIN 1 | 1 | |
| 25 | 3Y1-25389-00-00 | PULLER, CHAIN 2 | 1 | |
| 26 | 1VJ-25383-00-00 | COLLAR, WHEEL | 1 | |
| 27 | 90387-174F0-00 | COLLAR | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# REAR WHEEL

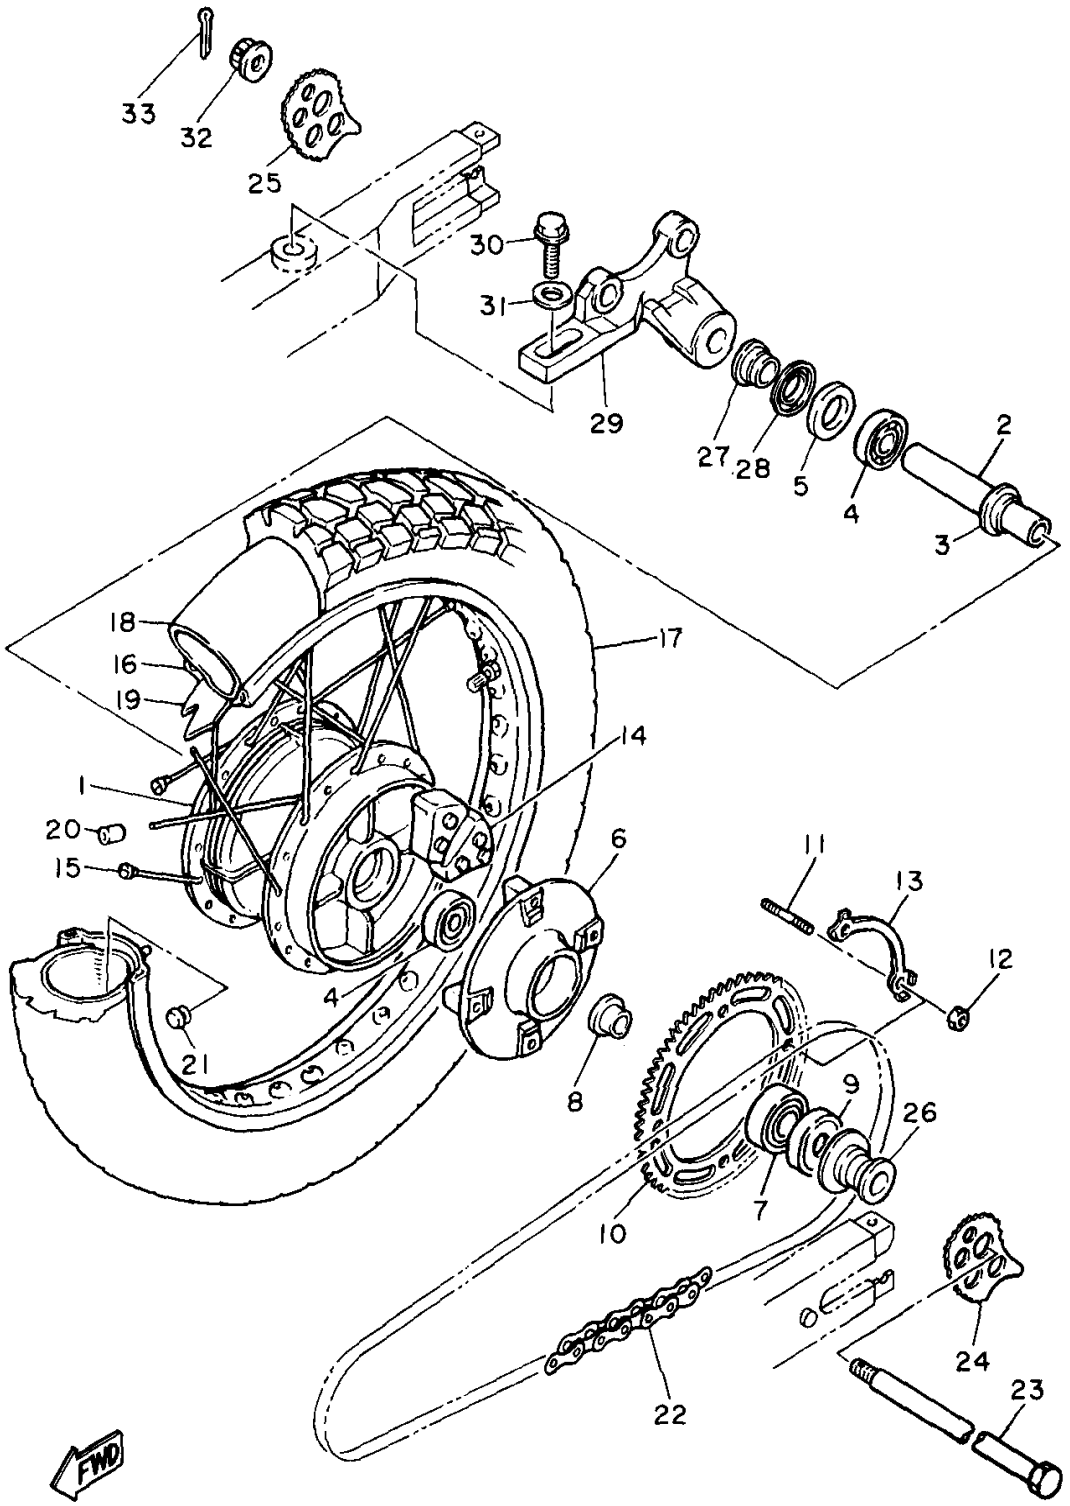


3TB351-0270

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 28 | 36R-25367-00-00 | COVER, HUB DUST | 1 | |
| 29 | 2KF-25819-00-00 | BRACKET, CALIPER | 1 | |
| 30 | 95811-10030-00 | BOLT, FLANGE | 1 | |
| 31 | 90201-10437-00 | WASHER, PLATE | 1 | |
| 32 | 90171-16024-00 | NUT, CASTLE | 1 | |
| 33 | 91401-30030-00 | PIN, COTTER | 1 | |


# REAR BRAKE CALIPER

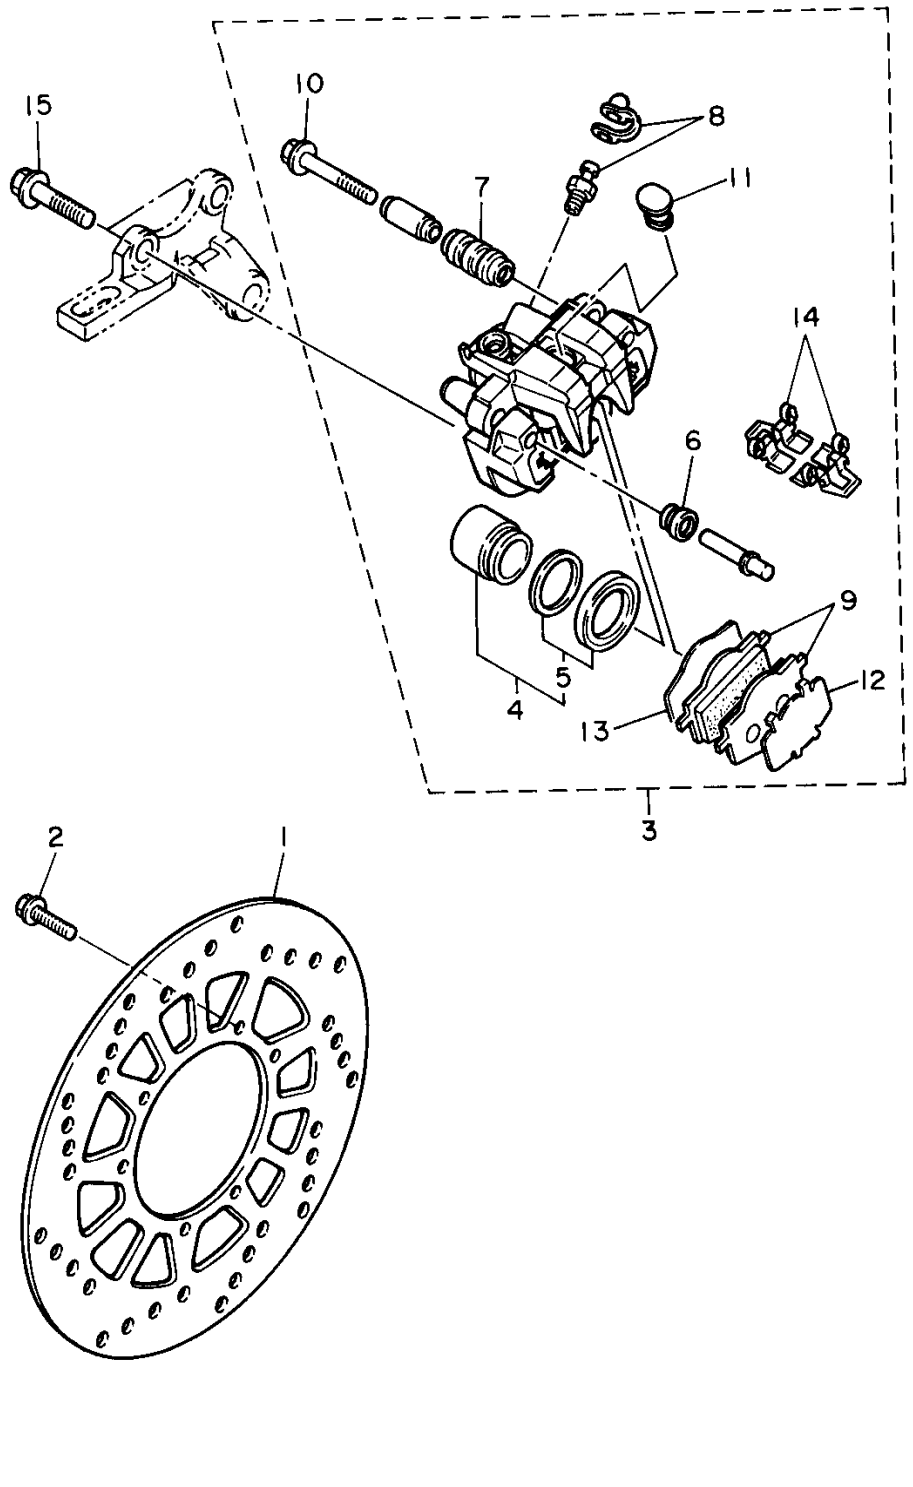


3TB351-0280

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 2KF-25831-50-00 | DISC, BRAKE | 1 | |
| 2 | 90109-06757-00 | BOLT | 6 | |
| 3 | 3TB-2580W-00-00 | CALIPER ASSEMBLY, REAR 2 | 1 | |
| 4 | 2KF-W0057-00-00 | . PISTON ASSEMBLY, CALIPER | 1 | |
| 5 | 34X-W0047-00-00 | . . CALIPER SEAL KIT | 1 | |
| 6 | 5R2-25937-00-00 | . BOOT 2 | 1 | |
| 7 | 34X-25937-00-00 | . BOOT 2 | 1 | |
| 8 | 51L-W0048-00-00 | . BLEED SCREW KIT | 1 | |
| 9 | 34X-W0046-02-00 | . BRAKE PAD KIT | 1 | |
| 10 | 2GV-25926-00-00 | . BOLT | 1 | |
| 11 | 34X-25845-00-00 | . CAP, INDICATOR | 1 | |
| 12 | 2KF-25827-00-00 | . SHIM, CALIPER | 1 | |
| 13 | 2KF-25828-00-00 | . SHIM, CALIPER | 1 | |
| 14 | 2KF-25919-10-00 | . SUPPORT, PAD | 2 | |
| 15 | 90105-10308-00 | BOLT, washer based | 2 | |


# STEERING HANDLE - CABLE

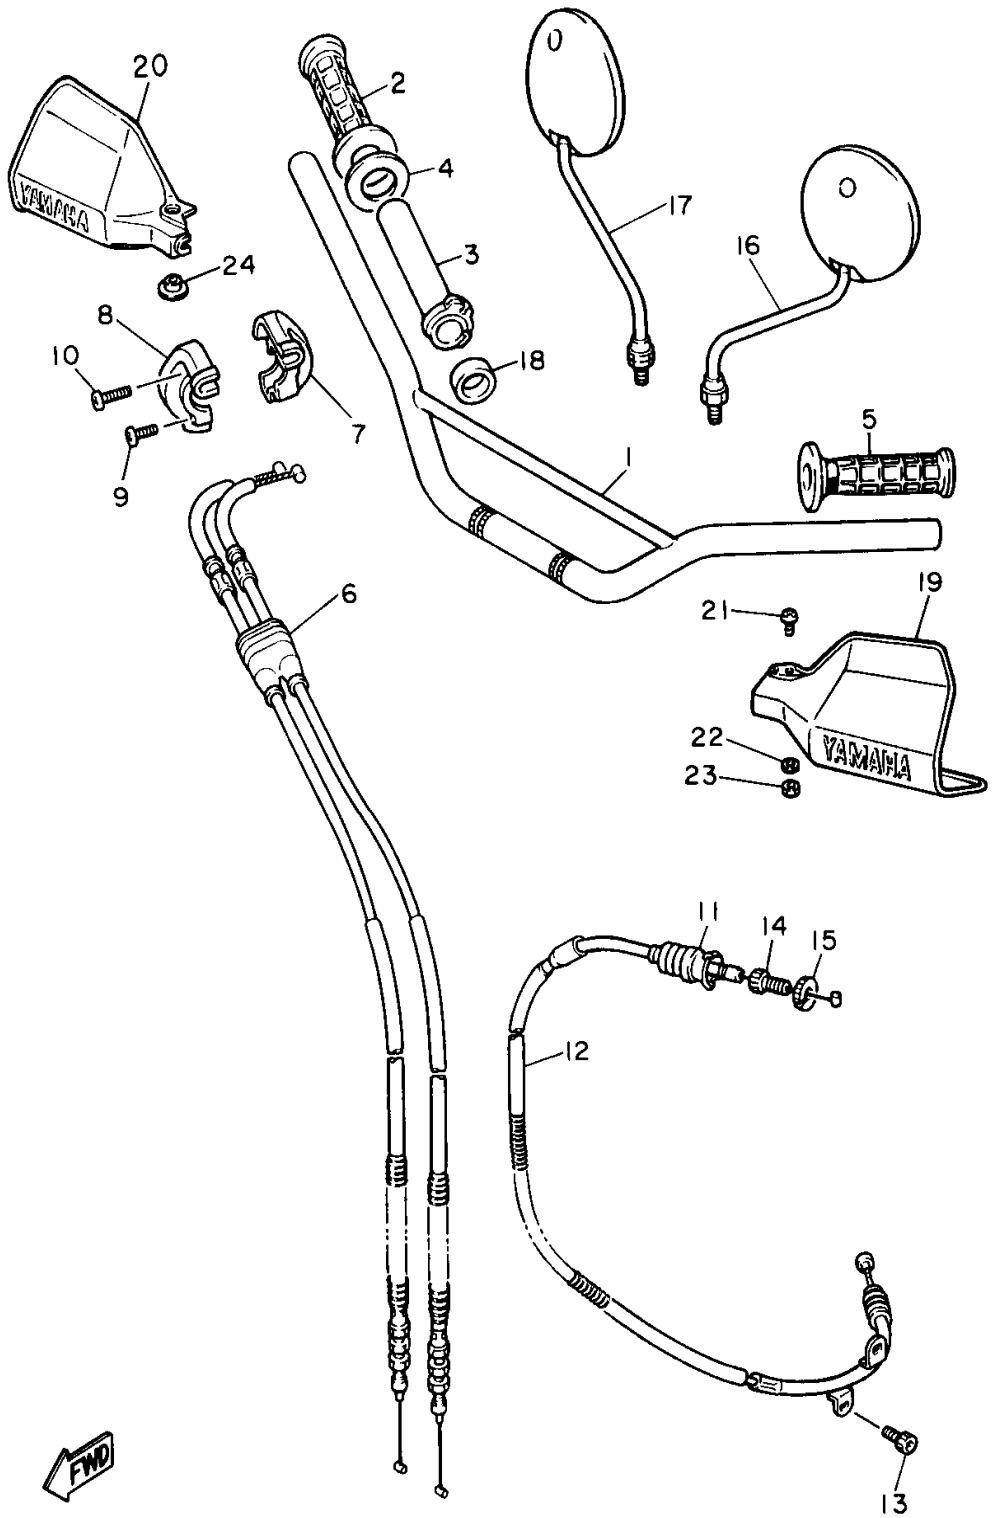


3UY110-0290

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-26111-01-00 | HANDLEBAR | 1 | |
| 2 | 33G-26242-00-00 | GRIP (RIGHT) | 1 | |
| 3 | 3Y1-26243-01-00 | TUBE, THROTTLE GUIDE | 1 | |
| 4 | 3Y1-26249-00-00 | RING, LEAF | 1 | |
| 5 | 33G-26241-00-00 | GRIP (LEFT) | 1 | |
| 6 | 3TB-26302-00-00 | THROTTLE CABLE ASSEMBLY | 1 | |
| 7 | 34K-26281-00-00 | CAP, GRIP UPPER | 1 | |
| 8 | 1VJ-26282-00-00 | CAP, GRIP LOWER | 1 | |
| 9 | 98506-05020-00 | SCREW, PAN HEAD | 1 | |
| 10 | 98506-05025-00 | SCREW, PAN HEAD | 1 | |
| 11 | 1E6-26342-00-00 | BOOT, CABLE | 1 | |
| 12 | 3TB-26335-00-00 | CABLE, CLUTCH | 1 | |
| 13 | 91316-06010-00 | BOLT, SOCKET HEAD | 1 | |
| 14 | 90123-08046-00 | BOLT | 1 | |
| 15 | 90179-08148-00 | NUT | 1 | |
| 16 | 3Y1-26290-00-00 | BACK MIRROR ASSEMBLY (R.H) | 1 | |
| 17 | 5Y1-26290-10-00 | BACK MIRROR ASSEMBLY (L.H) | 1 | |
| 18 | 90387-22660-00 | COLLAR | 1 | |
| 19 | 1VJ-26141-00-00 | GUARD, BRUSH 1 | 1 | FARAWAY BLUE |
| 20 | 3TB-26142-40-00 | GUARD, BRUSH 2 | 1 | FARAWAY BLUE |
| 21 | 98501-06035-00 | SCREW, PAN HEAD | 1 | |
| 22 | 92901-06600-00 | WASHER | 1 | |
| 23 | 95380-06700-00 | NUT | 1 | |
| 24 | 90387-06500-00 | COLLAR | 1 | |


# FRONT MASTER CYLINDER

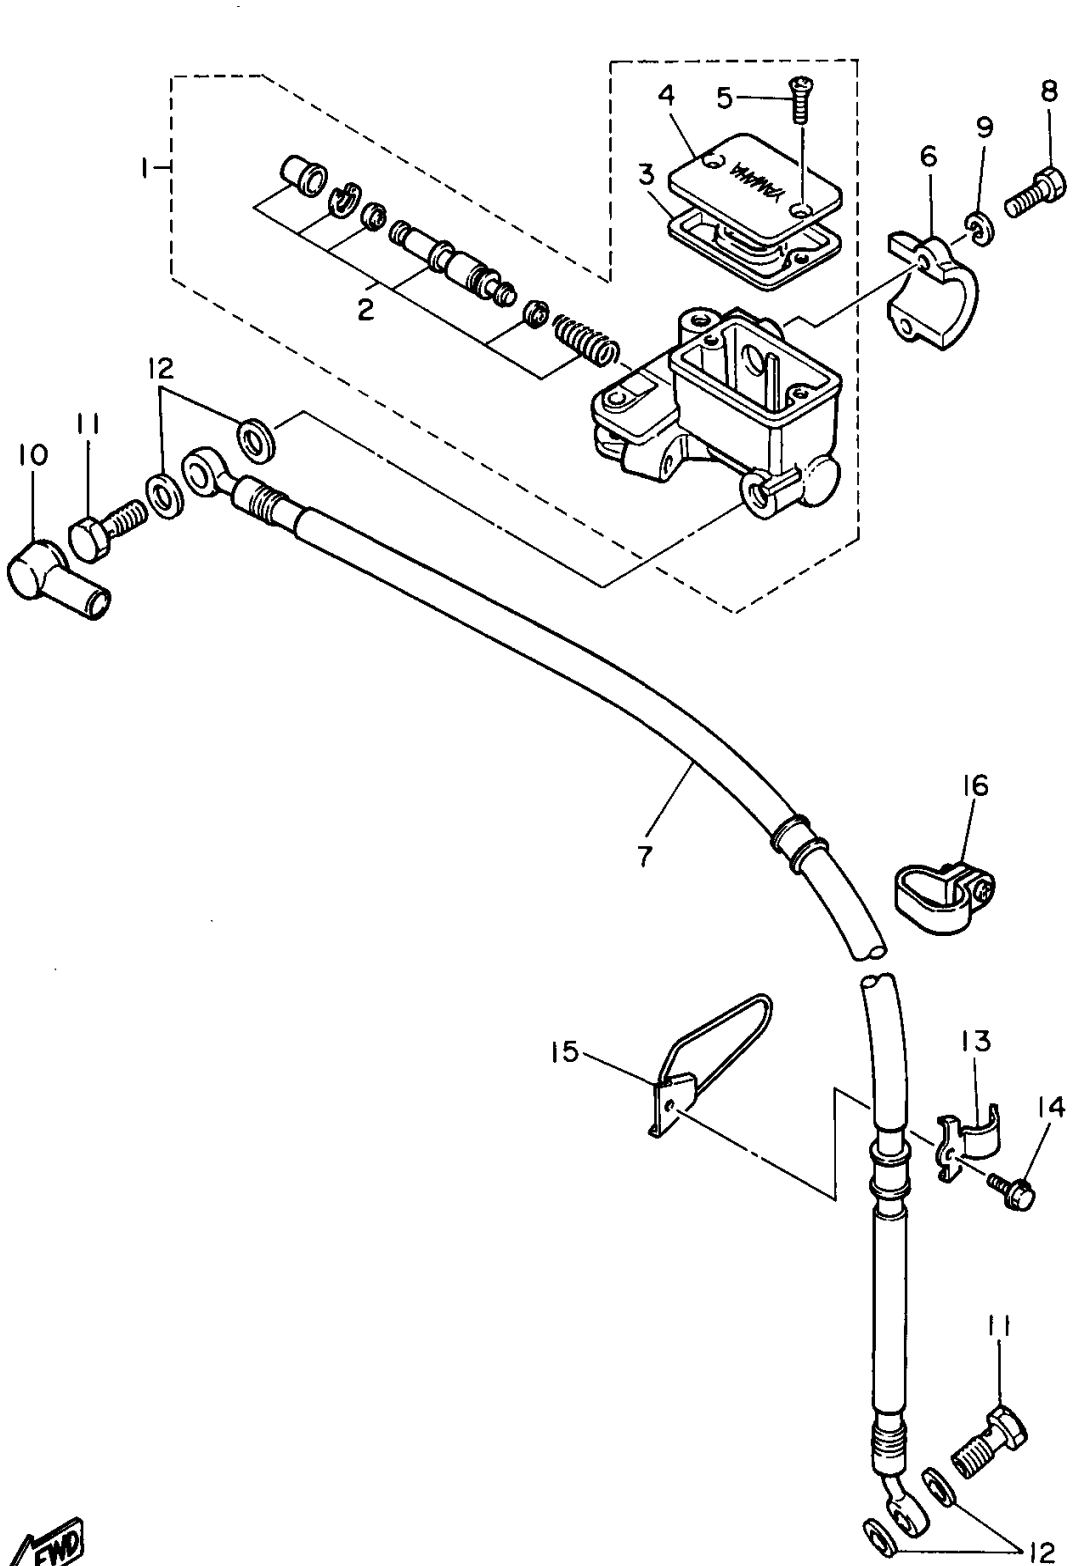


3TB351-0300

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-25870-00-00 | MASTER CYLINDER SUB ASSEMBLY | 1 | |
| 2 | 3TB-W0041-00-00 | . CYLINDER KIT, MASTER | 1 | |
| 3 | 4L0-25854-00-00 | . DIAPHRAGM, RESERVOIR | 1 | |
| 4 | 4H7-25852-00-00 | . CAP, RESERVOIR | 1 | |
| 5 | 98706-04012-00 | . SCREW, FLAT HEAD | 2 | |
| 6 | 4L0-25867-00-00 | BRACKET, MASTER CYLINDER | 1 | |
| 7 | 3TB-25872-01-00 | HOSE, BRAKE 1 | 1 | |
| 8 | 97016-06025-00 | BOLT | 2 | |
| 9 | 92906-06100-00 | WASHER, SPRING | 2 | |
| 10 | 4L0-25862-00-00 | BOOT, MASTER CYLINDER | 1 | |
| 11 | 90401-10034-00 | BOLT, UNION | 2 | |
| 12 | 90201-10118-00 | WASHER, PLATE | 4 | |
| 13 | 90461-16124-00 | CLAMP | 1 | |
| 14 | 95811-06016-00 | BOLT, FLANGE (95822-06016) | 1 | |
| 15 | 3TB-23318-00-00 | HOLDER, CABLE 1 | 1 | |
| 16 | 3TB-23467-00-00 | . CLAMP | 1 | |
| | 90445-05765-00 | . HOSE | 1 | |
| | 92901-04600-00 | . WASHER, PLATE | 1 | |
| | 98506-04018-00 | . SCREW, PAN HEAD | 1 | |
| | 99999-02107-00 | CLAMP | 1 | |


# STAND - FOOTREST

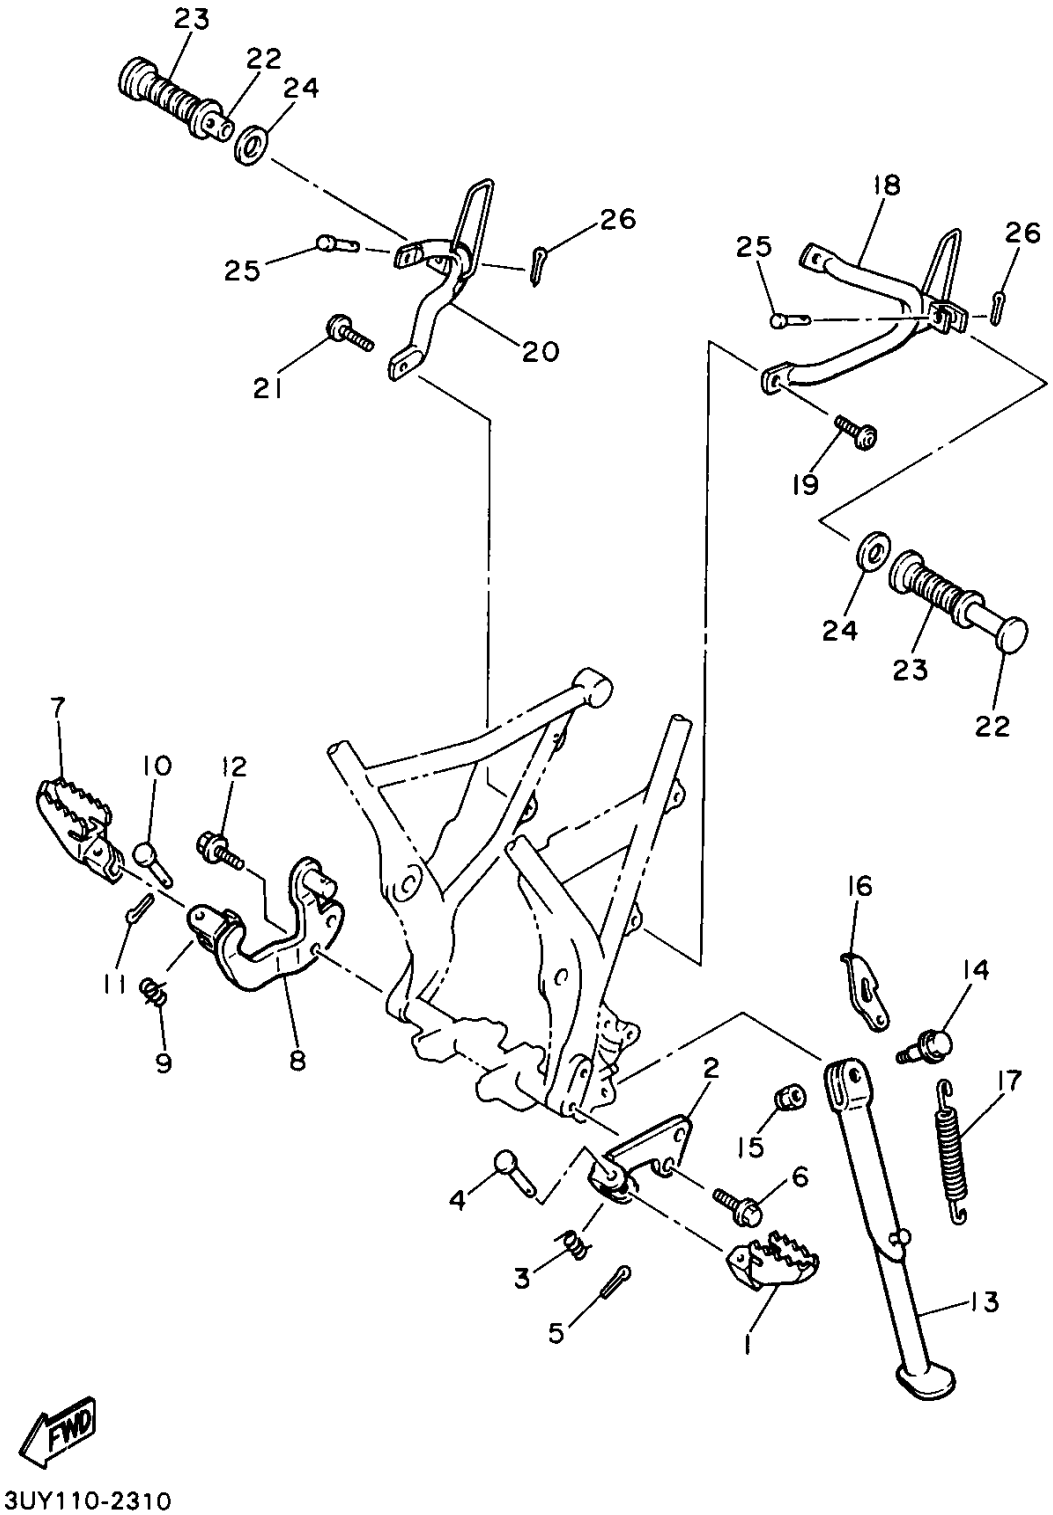


3UY110-2310

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 22W-27411-01-90 | FOOTREST 1 | 1 | UNI-CHROME BLACK |
| 2 | 34L-27412-00-R4 | BRACKET, FOOTREST 1 | 1 | BLACK |
| 3 | 90508-20023-00 | SPRING, TORSION | 1 | |
| 4 | 91701-08038-00 | PIN, CLEVIS | 1 | |
| 5 | 91401-25020-00 | PIN, COTTER | 1 | |
| 6 | 95826-10025-00 | BOLT, FLANGE | 2 | |
| 7 | 22W-27421-01-90 | FOOTREST 2 | 1 | UNI-CHROME BLACK |
| 8 | 2KF-27422-00-R4 | BRACKET, FOOTREST 2 | 1 | BLACK |
| 9 | 90508-20023-00 | SPRING, TORSION | 1 | |
| 10 | 91701-08038-00 | PIN, CLEVIS | 1 | |
| 11 | 91401-25020-00 | PIN, COTTER | 1 | |
| 12 | 95826-10025-00 | BOLT, FLANGE | 2 | |
| 13 | 3AJ-27311-00-R4 | STAND, SIDE | 1 | BLACK |
| 14 | 90105-12616-00 | BOLT, WASHER BASED | 1 | |
| 15 | 90185-12119-00 | NUT, SELF-LOCKING | 1 | |
| 16 | 5Y1-27315-00-00 | LINK, SIDE STAND | 1 | |
| 17 | 90507-32020-00 | SPRING, TENSION | 1 | |
| 18 | 26F-27432-00-WL | BRACKET 1 | 1 | STARDUST SILVER |
| 19 | 95816-08016-00 | BOLT, FLANGE | 2 | |
| 20 | 3YP-27442-00-WL | BRACKET 2 | 1 | STARDUST SILVER |
| 21 | 95816-08016-00 | BOLT, FLANGE | 2 | |
| 22 | 120-27431-00-00 | FOOTREST, REAR 1 | 2 | |
| 23 | 120-27433-00-00 | COVER, REAR FOOTREST | 2 | |
| 24 | 90201-20279-00 | WASHER, PLATE | 2 | |
| 25 | 90240-06009-00 | PIN, CLEVIS | 2 | |
| 26 | 91490-16020-00 | PIN, COTTER | 2 | |

# REAR MASTER CYLINDER

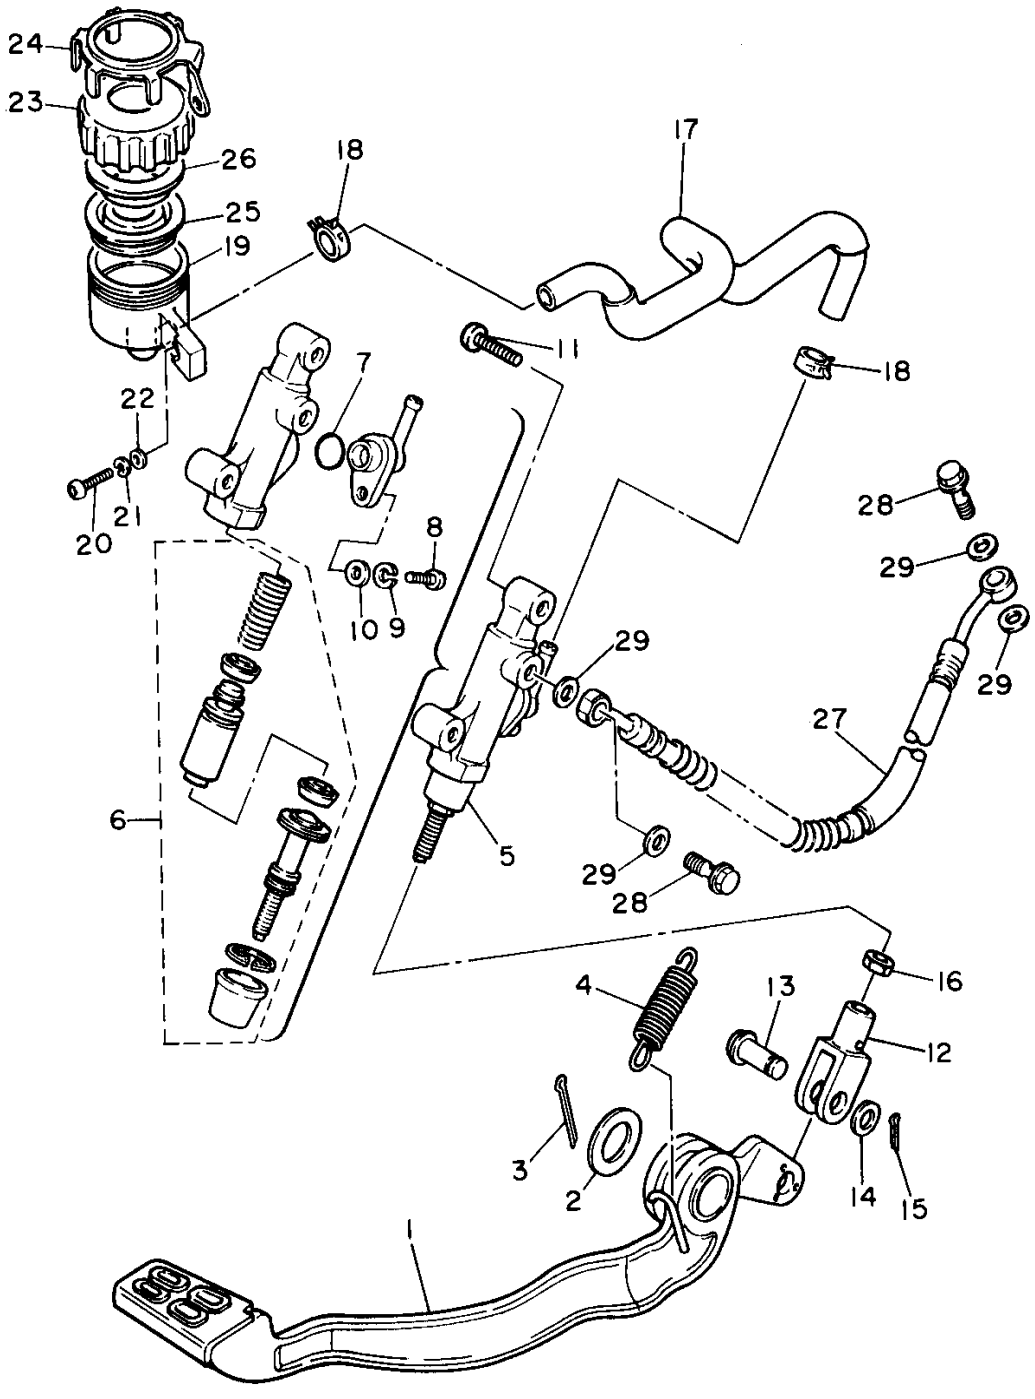



3TB351-0320

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3UW-27211-02-00 | PEDAL, BRAKE (3TB-27211-00-90) | 1 | UNI-CHROME BLACK |
| 2 | 90201-14215-00 | WASHER, PLATE | 1 | |
| 3 | 91401-30020-00 | PIN, COTTER | 1 | |
| 4 | 90507-18055-00 | SPRING, TENSION | 1 | |
| 5 | 3TB-2583V-00-00 | RR. MASTER CYLINDER ASSEMBLY. | 1 | |
| 6 | 31A-W0042-50-00 | . CYLINDER KIT, MASTER | 1 | |
| 7 | 93210-15620-00 | . O-RING | 1 | |
| 8 | 98511-04012-00 | . SCREW, PAN HEAD | 1 | |
| 9 | 92901-04100-00 | . WASHER, SPRING | 1 | |
| 10 | 92901-04600-00 | . WASHER, PLATE | 1 | |
| 11 | 92016-08025-00 | SCREW | 2 | |
| 12 | 47X-27222-00-00 | JOINT | 1 | |
| 13 | 90240-08013-00 | PIN, CLEVIS | 1 | |
| 14 | 90201-08083-00 | WASHER, PLATE | 1 | |
| 15 | 91490-16020-00 | PIN, COTTER | 1 | |
| 16 | 95303-08700-00 | NUT | 1 | |
| 17 | 3TB-25895-00-00 | HOSE, RESERVOIR | 1 | |
| 18 | 90467-14057-00 | CLIP | 2 | |
| 19 | 47X-25894-00-00 | TANK, RESERVOIR | 1 | |
| 20 | 92580-06020-00 | SCREW, PAN HEAD | 1 | |
| 21 | 92995-06100-00 | WASHER, SPRING | 1 | |
| 22 | 92901-06600-00 | WASHER | 1 | |
| 23 | 2KF-25852-50-00 | CAP, RESERVOIR | 1 | |
| 24 | 3AJ-25888-00-00 | COVER, RESERVOIR TANK | 1 | |
| 25 | 360-25854-00-00 | DIAPHRAGM, RESERVOIR | 1 | |
| 26 | 2GU-25855-00-00 | BUSH, DIAPHRAGM | 1 | |
| 27 | 3TB-25873-01-00 | HOSE, BRAKE 2 | 1 | |

*CONTINUED ON NEXT FRAME ➤*


# REAR MASTER CYLINDER

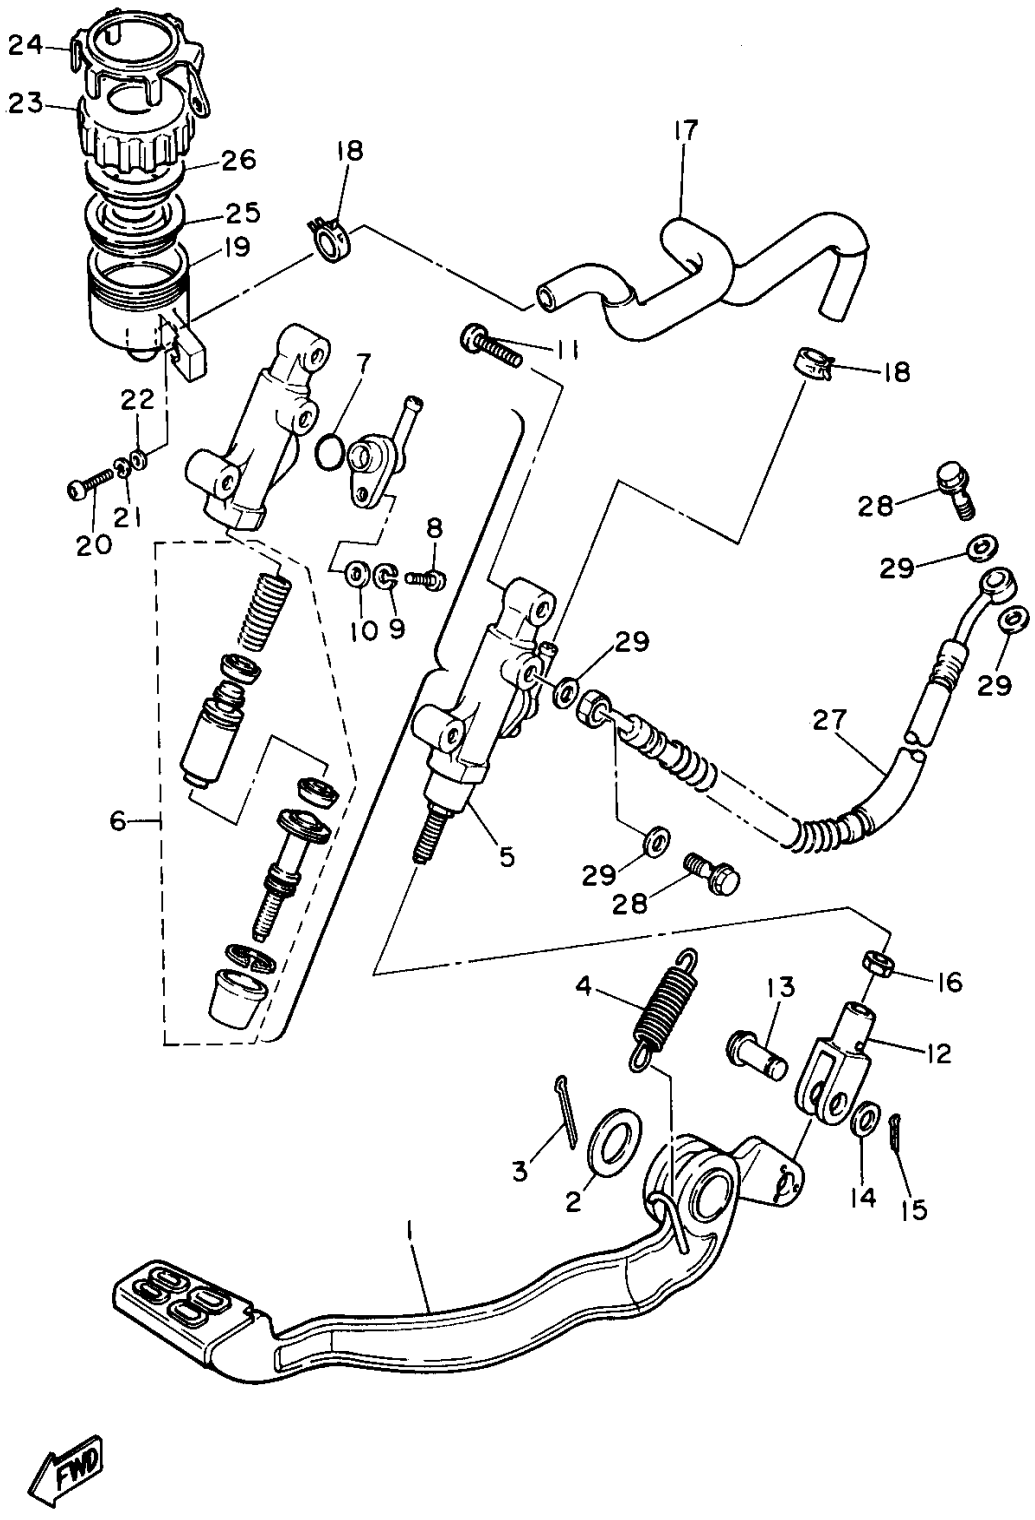


3TB351-0320

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 28 | 90401-10034-00 | BOLT, UNION . . . . . | 2 | |
| 29 | 90201-10118-00 | WASHER, PLATE . . . . . | 4 | |


# COWLING 1

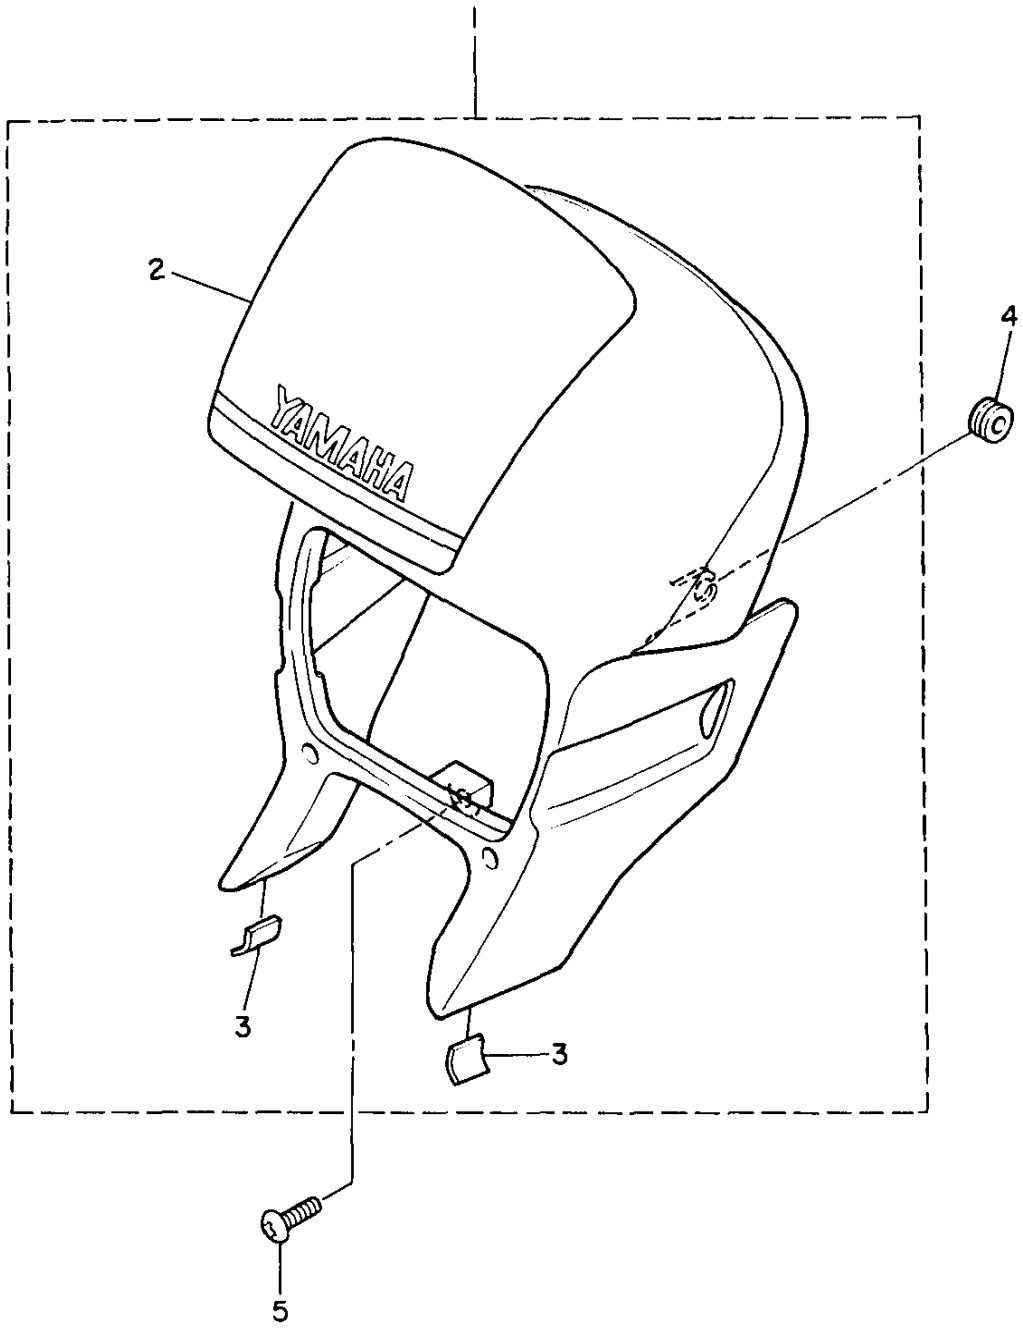


3UY110-2330

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-W2834-60-00 | BODY, COWLING (HEADLIGHT) | 1 | FARAWAY BLUE |
| 2 | 3TB-28368-61-00 | . GRAPHIC 1 | 1 | |
| 3 | 3TB-28217-00-00 | . DAMPER 1 | 2 | |
| 4 | 90480-12053-00 | GROMMET | 2 | |
| 5 | 90149-06263-00 | SCREW | 1 | |


# METER

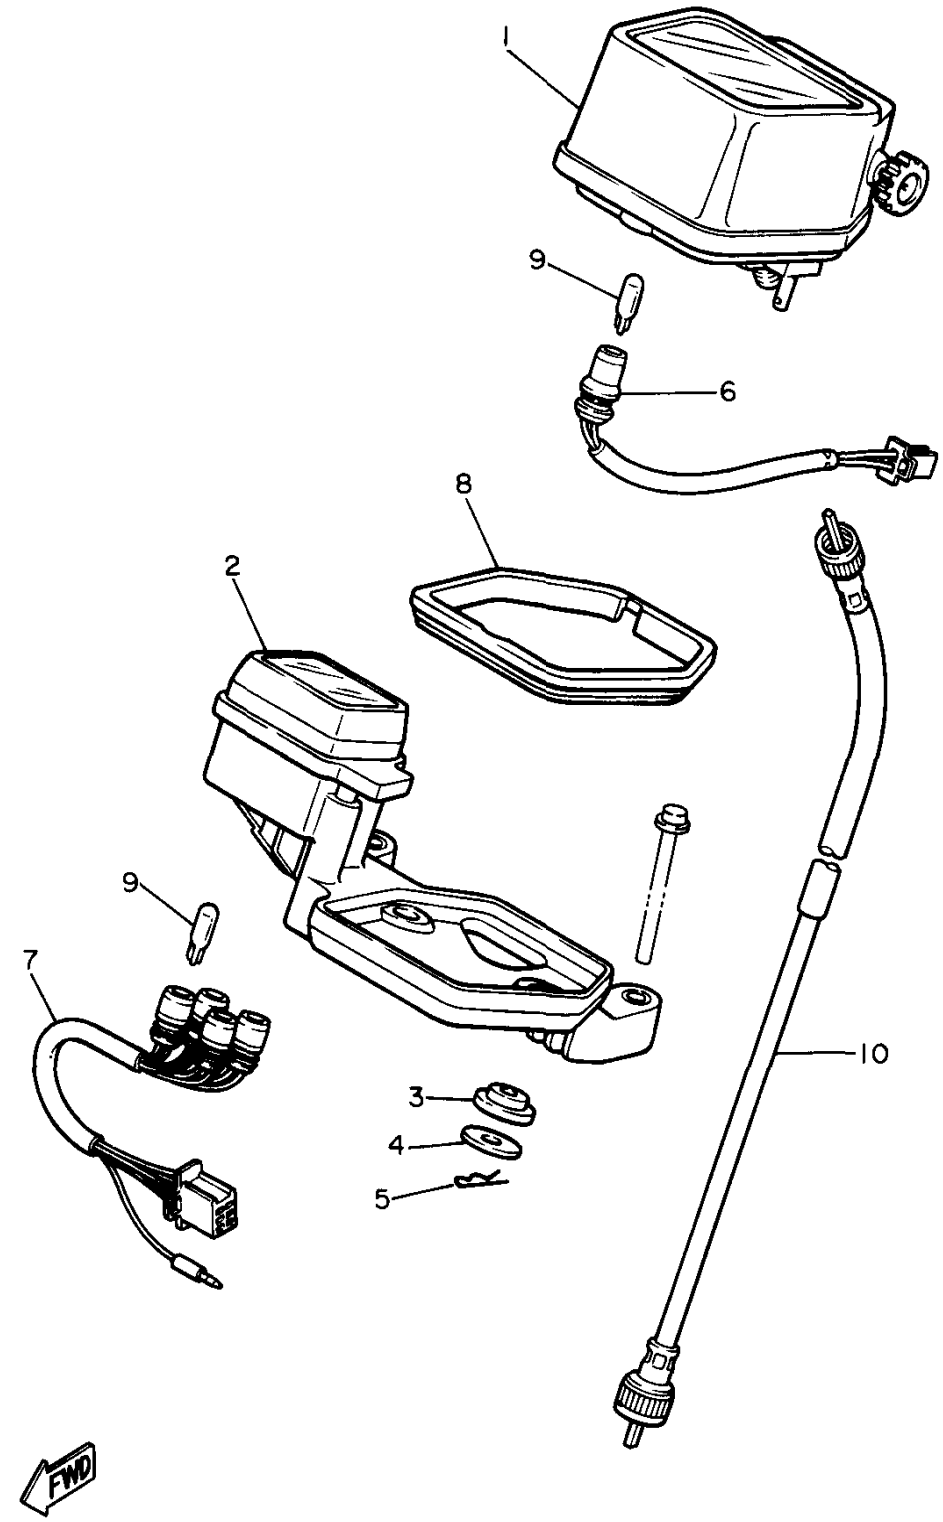


3TB351-0360

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3UY-83570-00-00 | SPEEDOMETER ASSEMBLY .. | 1 | |
| 2 | 3TB-8355A-00-00 | BRACKET, METER ..... | 1 | |
| 3 | 1M1-83526-00-00 | DAMPER 2 ..... | 2 | |
| 4 | 90201-05033-00 | WASHER, PLATE ..... | 2 | |
| 5 | 90468-10050-00 | CLIP ..... | 2 | |
| 6 | 2JX-83536-A0-00 | SOCKET, METER ..... | 1 | |
| 7 | 3TB-83520-00-00 | SOCKET CORD ASSEMBLY .. | 1 | |
| 8 | 5Y1-83513-00-00 | DAMPER ..... | 1 | |
| 9 | 4G1-84744-00-00 | BULB, MTR.12V3.4W ..... | 5 | |
| 10 | 3ET-83550-01-00 | SPEEDOMETER CABLE ASSEMBLY ..... | 1 | |


# HEADLIGHT

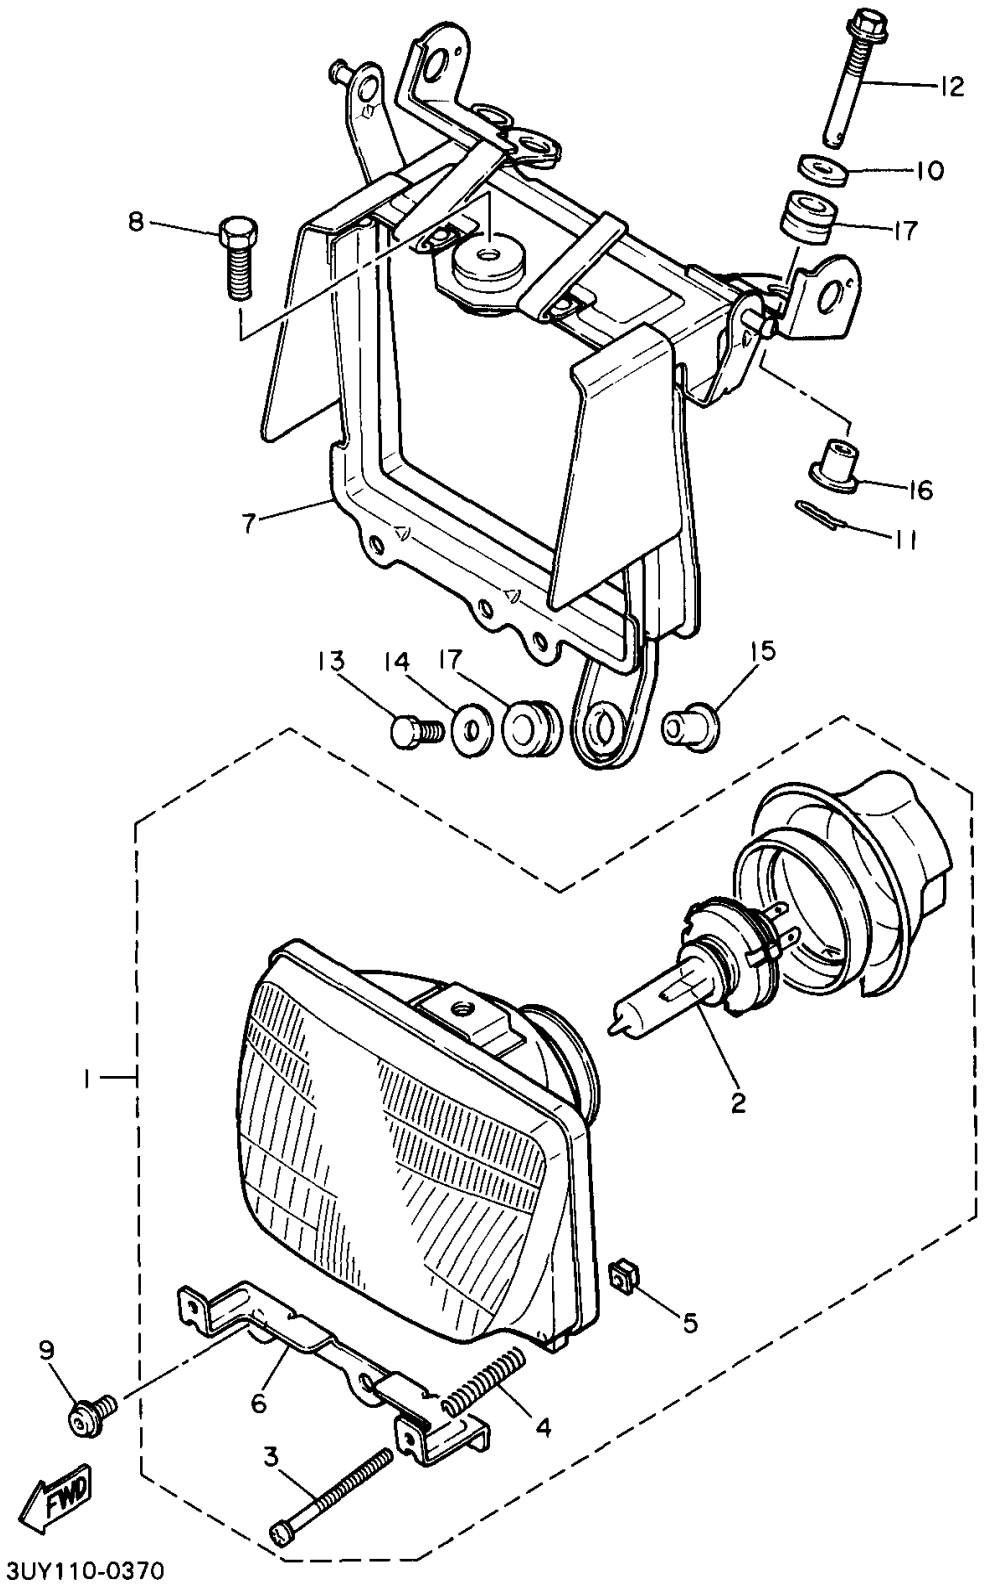

3UY110-0370

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3UY-84320-00-00 | LENS ASSEMBLY | 1 | |
| 2 | 5V2-84314-00-XX | . BULB, HL 12V60/55W (2F9-84314-00) | 1 | HALOGEN |
| 3 | 3TB-84325-00-00 | . SCREW, RIM FITTING | 2 | |
| 4 | 341-84332-60-00 | . SPRING, SCREW | 2 | |
| 5 | 198-84334-60-00 | . NUT, ADJUSTING | 2 | |
| 6 | 3TB-8431R-00-00 | . STAY, SETTING | 1 | |
| 7 | 3TB-84311-00-00 | BODY, HEADLIGHT | 1 | |
| 8 | 3TB-84372-01-00 | BOLT, LAMP STAY | 1 | |
| 9 | 3TB-84329-00-00 | BOLT, WING 1 | 2 | |
| 10 | 90202-06013-00 | WASHER, PLATE | 2 | |
| 11 | 90468-12120-00 | CLIP | 2 | |
| 12 | 3TB-84137-00-00 | BOLT, SPECIAL | 2 | |
| 13 | 97016-06025-00 | BOLT | 1 | |
| 14 | 90201-06059-00 | WASHER, PLATE | 1 | |
| 15 | 90387-06388-00 | COLLAR | 1 | |
| 16 | 90387-07391-00 | COLLAR | 2 | |
| 17 | 90480-14023-00 | GROMMET | 3 | |


# TAILLIGHT

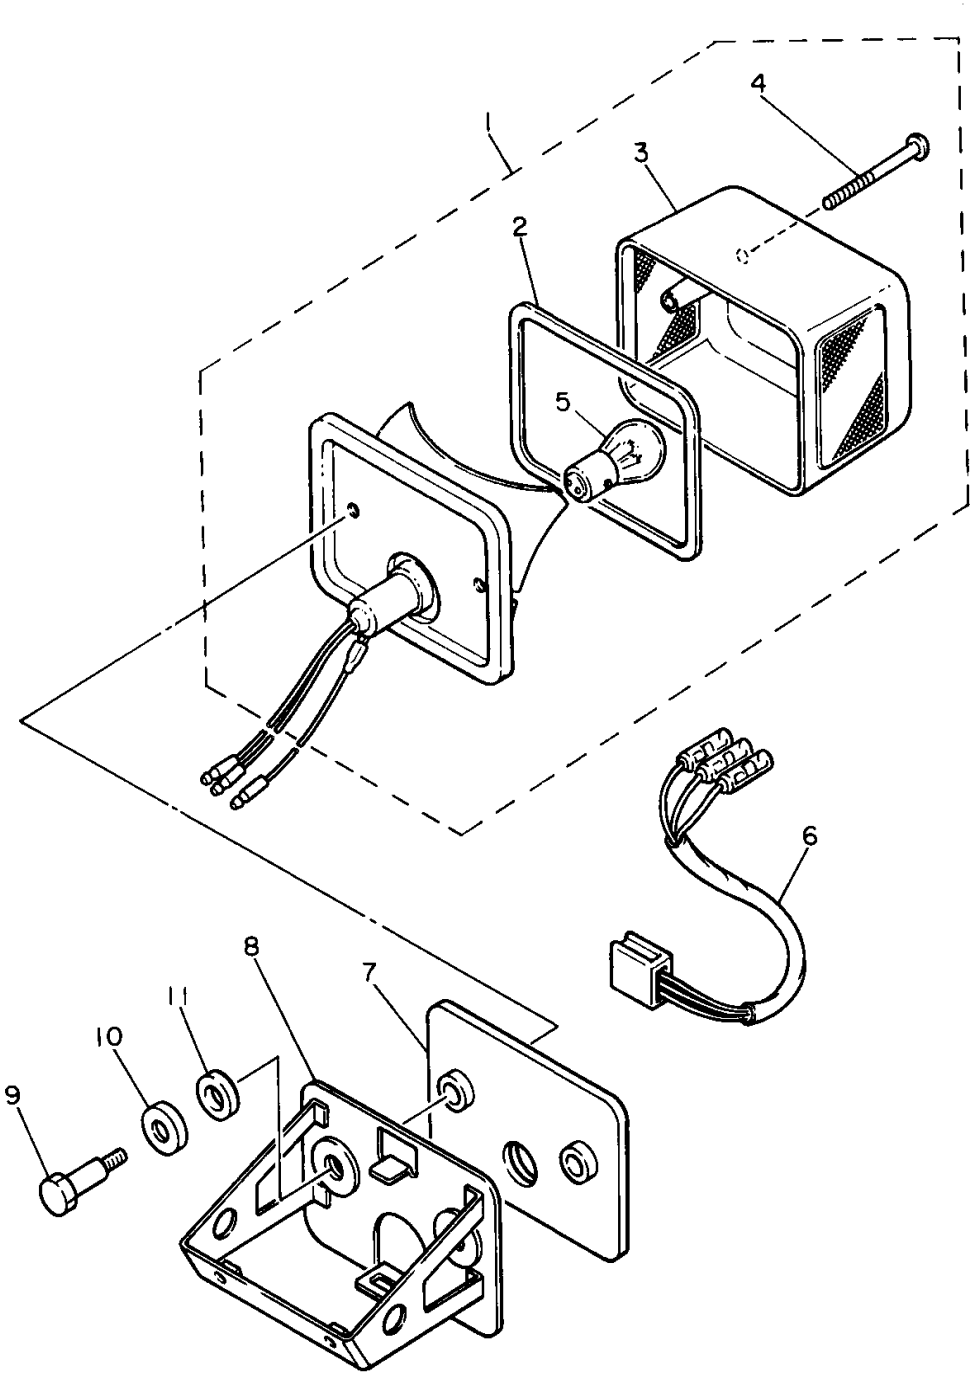


3UY110-0380

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 1W9-84710-60-00 | TAILLIGHT UNIT ASSEMBLY . . | 1 | |
| 2 | 1M1-84523-60-00 | . GASKET, LENS . . . . . | 1 | |
| 3 | 1M1-84521-60-00 | . LENS, TAILLIGHT . . . . . | 1 | |
| 4 | 1M1-84524-60-00 | . SCREW, LENS FITTING . . . . . | 2 | |
| 5 | 256-84714-61-00 | . BULB (12V-27/8W) . . . . . | 1 | |
| 6 | 3UY-84717-00-00 | CORD, TAILLIGHT . . . . . | 1 | |
| 7 | 4L0-84753-00-00 | DAMPER . . . . . | 1 | |
| 8 | 3UY-84519-00-00 | BRACKET, TAILLIGHT . . . . . | 1 | |
| 9 | 90109-06005-00 | BOLT . . . . . | 2 | |
| 10 | 90209-08125-00 | WASHER . . . . . | 2 | |
| 11 | 90201-083A0-00 | WASHER, PLATE . . . . . | 2 | |


# FLASHER LIGHT

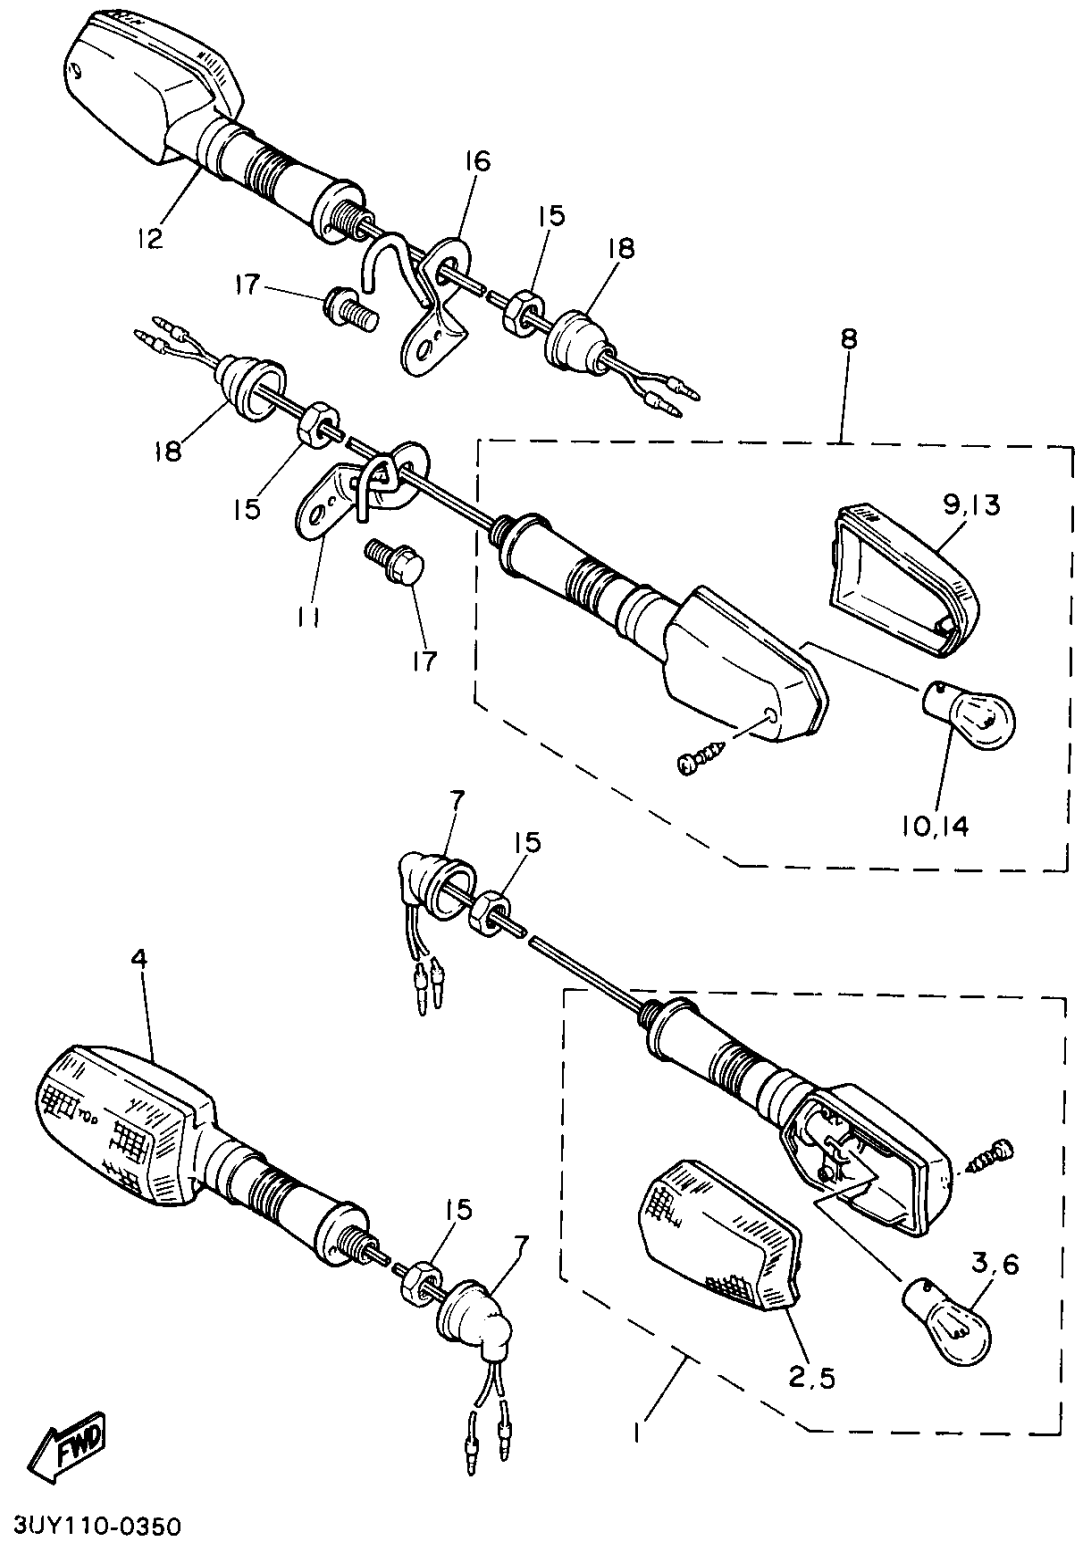



3UY110-0350

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3UY-83310-00-00 | FRONT FLASHER LIGHT ASSEMBLY 1 | 1 | |
| 2 | 51L-83332-01-00 | . LENS, FLASHER | 1 | |
| 3 | 256-84714-61-00 | . BULB (12V-27/8W) | 1 | |
| 4 | 1UF-83320-00-00 | FRONT FLASHER LIGHT ASSEMBLY 2 | 1 | |
| 5 | 51L-83342-01-00 | . LENS, FLASHER 2 | 1 | |
| 6 | 256-84714-61-00 | . BULB (12V-27/8W) | 1 | |
| 7 | 18G-83365-00-00 | CAP | 2 | |
| 8 | 1UF-83330-00-00 | REAR FLASHER LIGHT ASSEMBLY 1 | 2 | |
| 9 | 51L-83342-01-00 | . LENS, FLASHER 2 | 1 | |
| 10 | 256-83311-70-XX | . BULB, TS 12V27W | 1 | |
| 11 | 3TB-83368-00-00 | STAY, FLASHER 1 | 1 | |
| 12 | 3UY-83340-00-00 | REAR FLASHER LIGHT ASSEMBLY 2 | 2 | |
| 13 | 51L-83332-01-00 | . LENS, FLASHER | 1 | |
| 14 | 256-83311-70-XX | . BULB, TS 12V27W | 1 | |
| 15 | 95311-12700-00 | NUT | 4 | |
| 16 | 3TB-83369-00-00 | STAY, FLASHER 2 | 1 | |
| 17 | 95816-08014-00 | BOLT, flange (95806-08014-00) | 2 | |
| 18 | 10V-83365-00-00 | CAP | 2 | |

# ELECTRICAL 1

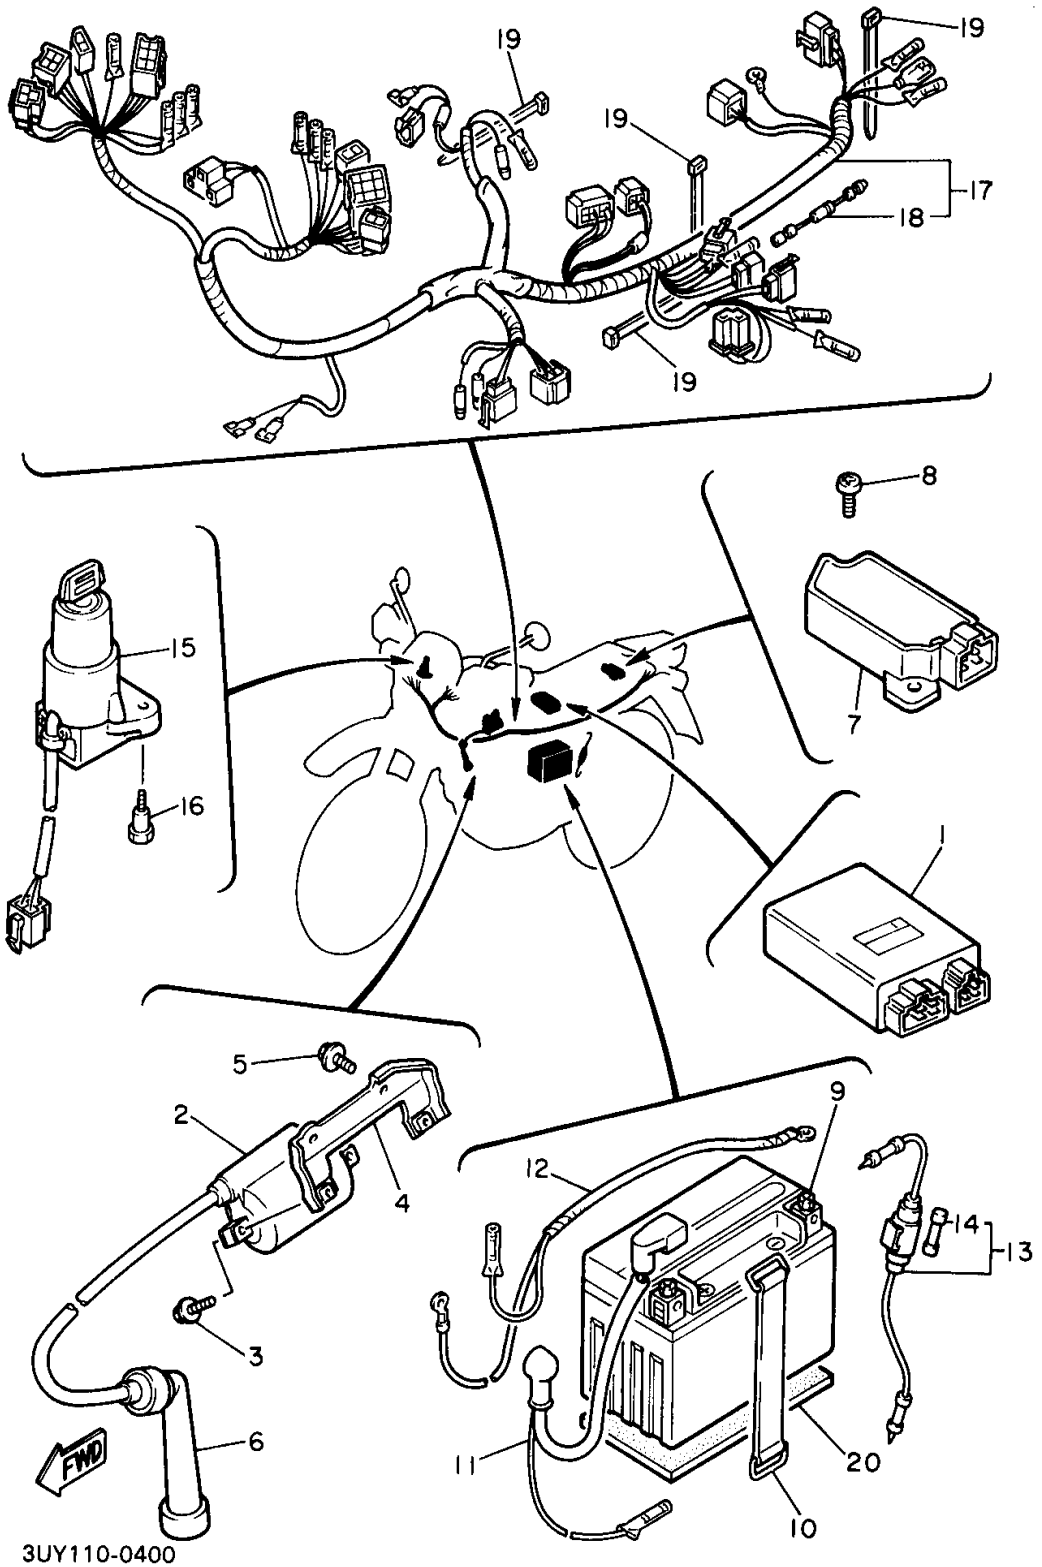


| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 3TB-82305-00-00 | IGNITOR UNIT ASSEMBLY | 1 | |
| 2 | 3TB-82310-00-00 | IGNITION COIL ASSEMBLY (3SX-82310-00-00) | 1 | |
| 3 | 97021-05020-00 | BOLT | 2 | |
| 4 | 3TB-82316-00-00 | BRACKET, IGNITION COIL | 1 | |
| 5 | 95811-06010-00 | BOLT, FLANGE | 2 | |
| 6 | 371-82370-00-00 | PLUG CAP ASSEMBLY | 1 | |
| 7 | 47X-81960-A2-00 | RECTIFIER & REGULATOR ASSEMBLY | 1 | |
| 8 | 98580-06012-00 | SCREW, PAN HEAD | 2 | |
| 9 | BTY-YTX9B-S0-00 | BATTERY (3PK-82100-00-00)V-8AH) | 1 | |
| 10 | 120-82131-00-00 | BAND, BATTERY | 1 | |
| 11 | 3TB-82115-00-00 | WIRE, PLUS LEAD | 1 | |
| 12 | 3TB-82116-00-00 | WIRE, MINUS LEAD | 1 | |
| 13 | 2UJ-82150-01-00 | FUSE HOLDER ASSEMBLY (2UJ-82150-00-00) | 1 | |
| 14 | 1A0-82161-00-00 | . FUSE (20A) (148-82151-00-00) | 1 | |
| 15 | 3UY-82501-00-00 | MAIN SWITCH STEERING LOCK | 1 | |
| 16 | 97522-06216-00 | BOLT (90109-06614-00) | 2 | |
| 17 | 3UY-82590-00-00 | WIRE HARNESS ASSEMBLY | 1 | |
| 18 | 3K7-81980-00-00 | . DIODE ASSEMBLY | 1 | |
| 19 | 12R-82591-00-00 | BAND | 4 | |
| 20 | 5X2-24183-00-00 | DAMPER, LOCATING 3 | 1 | |

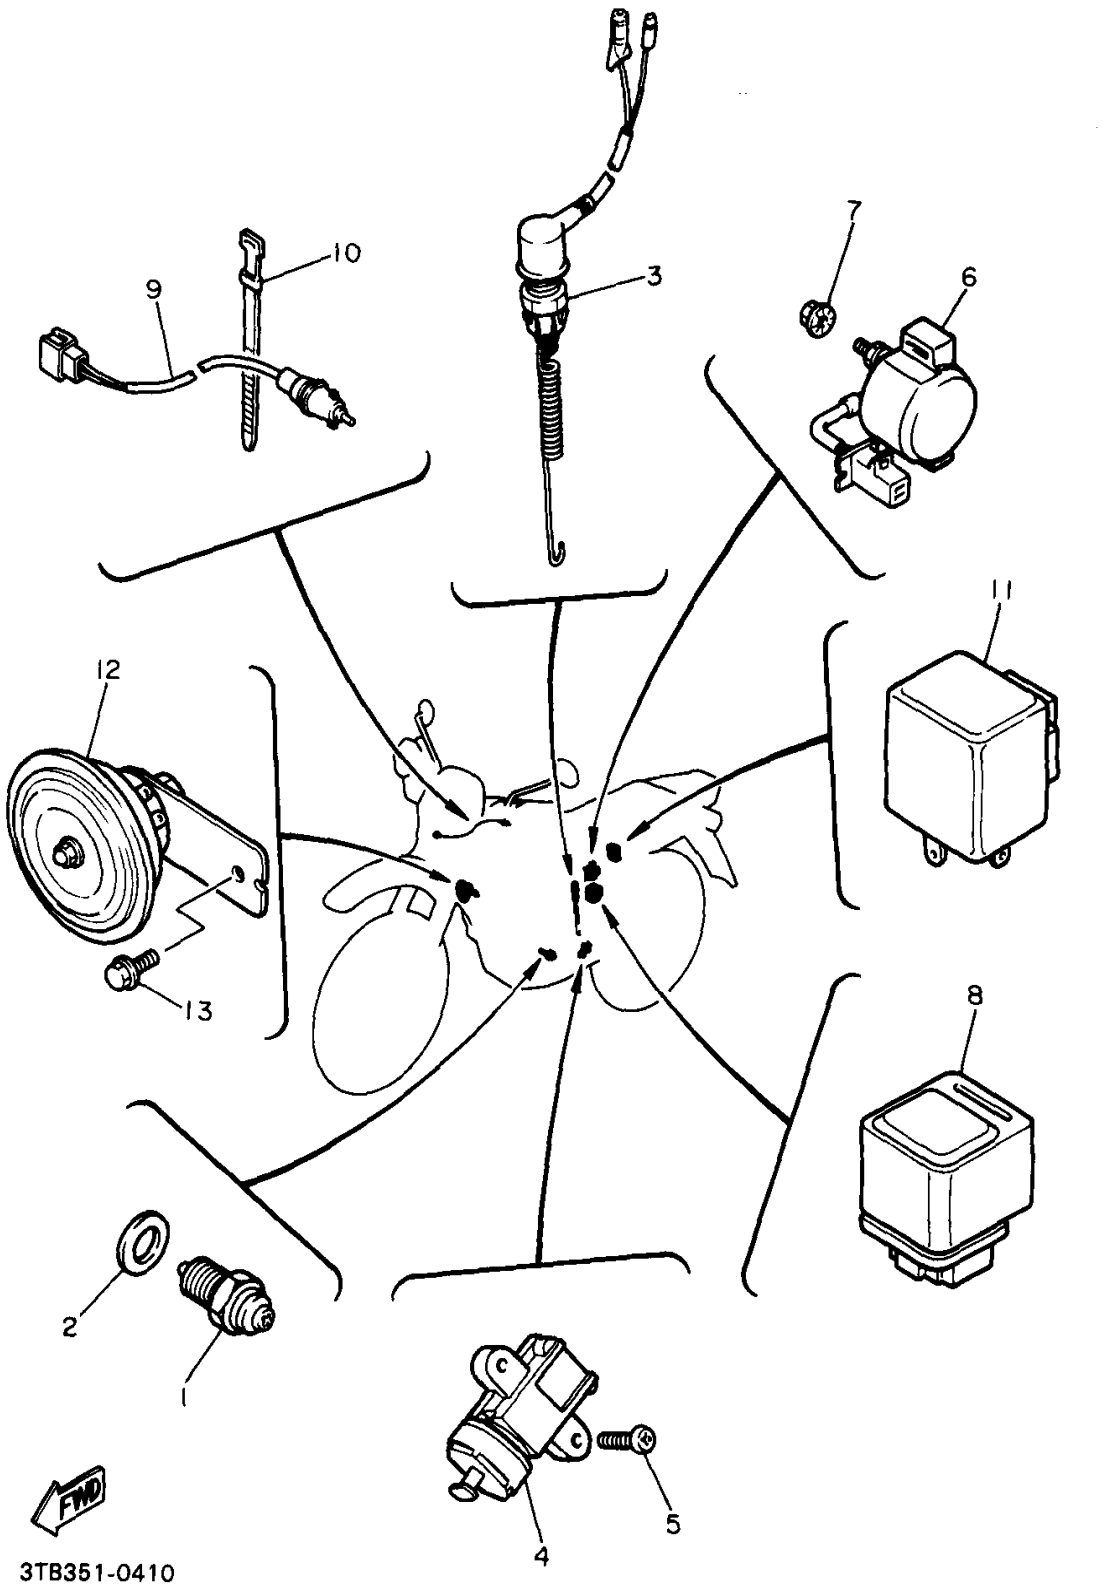



3TB351-0410

# ELECTRICAL 2

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 2H7-82540-00-00 | NEUTRAL SWITCH ASSEMBLY | 1 | |
| 2 | 90430-10171-00 | GASKET | 1 | |
| 3 | 34L-82530-01-00 | STOP SWITCH ASSEMBLY | 1 | |
| 4 | 3LD-82566-00-00 | SWITCH, SIDE STAND | 1 | |
| 5 | 98506-05016-00 | SCREW, PAN HEAD | 2 | |
| 6 | 3AY-81940-00-00 | STARTER RELAY ASSEMBLY | 1 | |
| 7 | 95701-06500-00 | NUT, FLANGE | 2 | |
| 8 | 12R-81950-01-00 | RELAY ASSEMBLY.RELAY (4H7-81950-01) | 1 | |
| 9 | 2GV-82917-00-00 | SWITCH | 1 | |
| 10 | 25G-83936-01-00 | BAND, SWITCH CORD | 1 | |
| 11 | 30X-83350-20-00 | FLASHER RELAY ASSEMBLY | 1 | |
| 12 | 3TB-83371-00-00 | HORN | 1 | |
| 13 | 95026-06010-00 | BOLT, FLANGE | 1 | |

# HANDLE SWITCH - LEVER

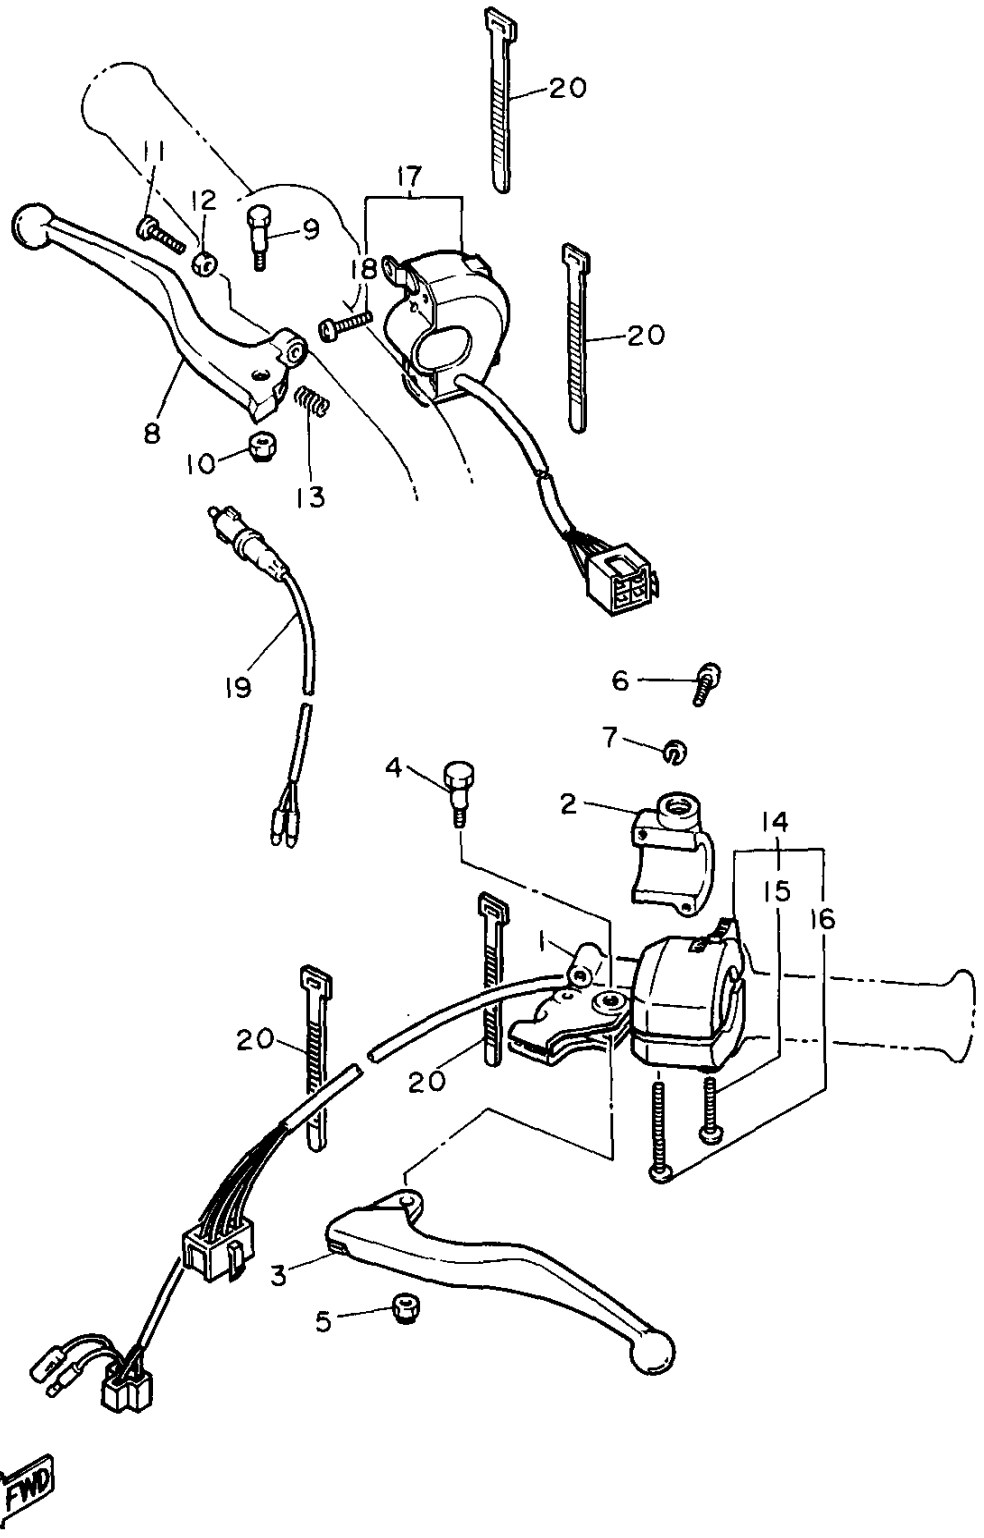


3UY110-0390

| Ref. No. | Part Number | Description | Qty | Remarks |
|---|---|---|---|---|
| 1 | 1LN-82911-00-00 | HOLDER, LEVER 1 | 1 | |
| 2 | 33G-82913-00-00 | HOLDER, LEVER LOWER 1 | 1 | |
| 3 | 3FY-83912-01-00 | LEVER 1 | 1 | |
| 4 | 90109-06799-00 | BOLT | 1 | |
| 5 | 95616-06100-00 | NUT, U | 1 | |
| 6 | 98506-05020-00 | SCREW, PAN HEAD | 2 | |
| 7 | 92906-05100-00 | WASHER, SPRING | 2 | |
| 8 | 3YR-83922-00-00 | LEVER 2 | 1 | |
| 9 | 90109-062A8-00 | BOLT | 1 | |
| 10 | 95616-06100-00 | NUT, U | 1 | |
| 11 | 90149-06289-00 | SCREW (90149-06153-00) | 1 | |
| 12 | 90170-06010-00 | NUT | 1 | |
| 13 | 90501-10312-00 | SPRING, COMPRESSION | 1 | |
| 14 | 3UY-83973-00-00 | SWITCH, HANDLE 3 | 1 | |
| 15 | 90157-05057-00 | . SCREW, PANHEAD | 1 | |
| 16 | 98506-05030-00 | . SCREW, PAN HEAD | 1 | |
| 17 | 3YF-83975-00-00 | SWITCH, HANDLE 2 (3UY-83975-00-00) | 1 | |
| 18 | 98506-05020-00 | . SCREW, PAN HEAD | 2 | |
| 19 | 34X-83980-01-00 | FRONT STOP SWITCH ASSEMBLY | 1 | |
| 20 | 437-83936-01-00 | BAND, SWITCH CORD | 4 | |

# YAMAHA MOTOR CORPORATION, U.S.A.

6555 KATELLA AVENUE • CYPRESS, CALIFORNIA 90630
MAIL ADDRESS: P.O. BOX 6555, CYPRESS, CALIFORNIA 90630

May 24, 1995

Dear California Dealer:

As you know, street legal motorcycles and scooters 50cc or greater sold in California are under California Air Resources Board (CARB) regulations.

Under these regulations, emissions-related components are covered by warranty for five years or a mileage figure based on displacement, whichever comes first. This coverage is in addition to the federal emission warranty information provided in the Limited Warranty.

The **California Emission Control Warranty** statement explains this warranty coverage. You must provide a copy of this warranty statement with each new eligible motorcycle or scooter sold in California, and also make copies available to any prospective customer or other interested party who requests one. A supply of the most up-to-date version of these statements is enclosed. When you need additional copies, order them from YPAD stock using part number LIT-11790-01-88.

Sincerely,

Service Division

## YAMAHA MOTOR CORPORATION, U.S.A.
## CALIFORNIA EMISSION CONTROL WARRANTY

### YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board and Yamaha Motor Corporation, U.S.A. are pleased to explain the emission control system warranty on your motorcycle. In California, new motor vehicles must be designed, built and equipped to meet the State's stringent anti-smog standards. Yamaha must warrant the emission control system on your motorcycle for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your motorcycle.

Your emission control system may include parts such as the carburetor or fuel-injection system, the ignition system, catalytic converter, and engine computer. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, Yamaha will repair your motorcycle at no cost to you including diagnosis, parts and labor.

**MANUFACTURER'S WARRANTY COVERAGE**

For the warranty period indicated below: If an emission-related part of your motorcycle is defective, the part will be repaired or replaced by Yamaha. This is your emission-control system defects warranty.

**OWNER'S WARRANTY RESPONSIBILITIES**

- As the motorcycle owner, you are responsible for the performance of the required maintenance listed in your owner's manual. Yamaha recommends that you retain all receipts covering maintenance on your motorcycle, but Yamaha cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.
- You are responsible for presenting your motorcycle to a Yamaha dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable time, not to exceed 30 days.
- As the motorcycle owner, you should also be aware that Yamaha may deny you warranty coverage if your motorcycle or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

If you have any questions regarding your warranty rights and responsibilities, you should contact the Yamaha Customer Relations Department at 1-(800) 962-7926 or the California Air Resources Board at 9528 Telstar Avenue, El Monte, CA 91731.

Yamaha Motor Corporation, U.S.A. warrants to the ultimate purchaser thereafter that new model year vehicles certified for sale and registered in California are:

1. Designed, built, and equipped so as to conform, at the time of sale, with all applicable regulations adopted by the California Air Resources Board, and
2. All warranted parts are free from defects in material and workmanship for the warranty period of the vehicle or the period prior to the first scheduled replacement point of the warranted part as required by the maintenance schedule, if applicable, whichever is less. A defect exists when a deficiency in material or workmanship is such that an emission-related warranted part does not function as designed.

For the warranty period indicated below: According to federal regulations, you may be eligible for additional warranty coverage.

Warranty period means — for motorcycles with an engine displacement of:

| Engine Displacement | Warranty Period |
|---|---|
| 50cc to 169cc | 12,000 km (7,465 miles) or five years, whichever comes first. |
| 170cc to 279cc | 18,000 km (11,185 miles) or five years, whichever comes first. |
| 280cc or larger | 30,000 km (18,641 miles) or five years, whichever comes first. |

The warranty period begins on the date that the motorcycle is delivered to an ultimate purchaser or on the date it is first placed in service.

**WARRANTED PARTS INCLUDE the following:**

1. Fuel metering system
   Carburetor and internal parts (or fuel injection)
2. Air induction system
   Carburetor joints
   Turbocharger
3. Ignition system
   Spark advance/retard system
   Spark plugs*
   Ignition coil
   Control module
   Ignition wires

Continued

Effective Date 1/17/95
LIT-11790-01-88

4. Evaporative control system
   Vapor storage canister
   Rollover valve
   Fuel tank
   Filler cap
   Solenoid valve
   Purge control valve
5. Air injection system
   Reed valve
   Air cutoff valve
6. Exhaust system
   Catalytic converter
   EXUP (EXhaust Ultimate Power Valve)
7. Miscellaneous
   Restricted fuel filler neck, hoses, clamps, fittings, sealing gaskets or devices, and mounting hardware.

*The original spark plug(s) are warranted for the period of replacement indicated in the Owner's Manual and not the useful life of the vehicle (see your Owner's Manual).

**DURING THE PERIOD OF THIS WARRANTY**

Yamaha Motor Corporation, U.S.A. will repair or replace any warranted part deemed defective by Yamaha during the scope of the warranty without charge to the owner, including parts, labor, and diagnosis. Except under emergency conditions, this work must be done at an authorized Yamaha dealer. Give notice to an authorized Yamaha dealer of any apparent defects(s) within a reasonable period of time after discovery. The vehicle must be made available for inspection by an authorized Yamaha dealer.

In the event that a warranted part proves to be defective in an emergency situation (no authorized Yamaha dealer is reasonably available, or a Yamaha part is not available within 30 days, or a repair is not completed within 30 days), the owner may repair the vehicle himself or utilize any repair establishment and any equivalent part. For reimbursement, you must keep all defective parts and receipts for parts and labor. Present the above to an authorized Yamaha dealer for inspection. The dealer will assist you regarding warranty reimbursement.

**WARRANTY REIMBURSEMENT,** under emergency conditions are limited to the costs of diagnosis, parts, and labor documented by the receipt, or to the suggested retail price of an equivalent genuine Yamaha part and the manufacturer-recommended time allowance for diagnosis and labor for the warranty repair at the labor rates prevailing in that area, whichever is less.

**OWNER'S RESPONSIBILITY:** The owner of the vehicle is responsible for the performance of required maintenance (see your Owner's Manual). Receipts and maintenance records covering the performance of regular maintenance should be retained in the event questions arise concerning maintenance. The receipts should be transferred to each subsequent owner of this vehicle.

The emission control systems of your Yamaha motorcycle were designed, built, tested, and certified as being in conformity with California emission control regulations using genuine Yamaha parts. Accordingly, it is recommended that any replacement part(s) used for maintenance, replacement, or repair of emission control systems be Yamaha parts. The owner may elect to have maintenance, replacement, or repair of the emission control devices and systems performed by any repair establishment or individual, and may elect to use parts other than Yamaha parts for such maintenance, replacement, or repair without invalidating this warranty. However, the cost of such service or parts will not be covered under the warranty.

**EXCLUSIONS:** No warranty coverage will be allowed if the part(s) failure was caused by owner/operator abuse, neglect, tampering, improper adjustment unless performed by a dealer during warranty repair work, modification, misuse, alteration, or improper maintenance (see your Owner's Manual).

This warranty does not apply to any Yamaha off-road-only motorcycle, competition motorcycle, or any Yamaha motorcycle or moped with an actual displacement of less than 50 cubic centimeters.

Use of parts which are not qualitatively equivalent to genuine Yamaha parts, improper service, or lack of required maintenance which causes failure of a warranted part may constitute abuse and/or improper service, thereby invalidating warranty liability hereunder.

This warranty does not cover damage resulting from accidents, acts of nature, or other events or occurences beyond the control of Yamaha. Yamaha Motor Corporation, U.S.A. expressly disclaims responsibility for any and all consequential damages, such as loss of time, inconvenience, loss of use of the vehicle, or commercial loss. This warranty does not cover any vehicle on which the odometer has been tampered with or on which the mileage has been changed.

Yamaha Motor Corporation, U.S.A.
PO. Box 6555
Cypress, CA 90630

MOTORCYCLE | 3/1/95 | M95-006

# TECH EXCHANGE

**SUBJECTS:** 1. Reformulated Gasoline
2. Areas Exceeding Federal Ozone Standards

## Reformulated Gasoline

Beginning January 1, 1995, extreme and severe non-ozone attainment cities are required to sell only reformulated gasoline (RFG) year round, not seasonally like Oxygenated fuels. Topic number 2 in this Tech Exchange contains a list of affected cities. Other serious, moderate, and marginal attainment areas will phase in this gasoline to fulfill their individual agendas for pollution abatement.

***What is RFG?***

As the name indicates, it is the next generation of fuels reformulated to reduce pollutants and protect the environment. The main focus of RFG is to reduce pollutants that affect the ozone, however, it will contain the same Oxygenates used in fuels that are currently being used (seasonally) in various mandated areas to lower CO emissions. Oxygenated fuels are primarily used between the months of October and February in these selected areas. The following table illustrates the major ingredients of RFG that will be reformulated and the environmental benefits of reformulation.

**FOCUS OF FUEL REFORMULATING**

**Potential Reformulation**
Reduce Sulfur
Reduce Benzene
Reduce Aromatics & Olefins
Reduce fuel volatility
Increase oxygen contents
Alter distillation characteristics
Deposit control additives

**Environmental Benefits**
Reduces acid rain, improves vehicle catalyst efficiency
Reduces incidence of cancer, reduces toxicity of emissions
Reduces photochemical reactivity/smog formation
Reduces evaporative emissions/smog formation
Reduces tailpipe/exhaust CO emissions, replaces toxic components
Control of evaporative & exhaust emissions
Reduce engine deposits, thus reducing exhaust emissions

***Can Yamaha Products Operate On Reformulated Gasoline?***

Extensive testing has been done on the affects of RFG on lubricity and material compatibility, **particularly with 2-stroke engines.** Results show no adverse affects or catastrophic failures when using RFG. Tests also indicate that no increase in service intervals beyond the existing Yamaha recommendations were necessary.

**RUNNING CHARACTERISTICS WITH RFG**

Because RFG contains oxygenates, the fuel mixture can lean-out slightly causing a rougher than normal idle. This can usually be corrected by small adjustments to the idle mixture screws. **Be sure to refer to your Yamaha technical specifications for correct fuel mixture settings! Use an engine exhaust gas analyzer where applicable.**

**GUIDELINES FOR RFG USAGE**

- Become familiar with the areas where RFG is sold. Normally the gas station will post a sign about the type of fuel they sell.
- Storage life of RFG is shorter than the fuel sold in the past. Treat stored fuel with Yamaha Fuel Stabilizer and Conditioner. Be sure to store gasoline in an approved container and place in a cool, dry place.
- In the case of large fuel tanks (such as in a boat or a large touring motorcycle), be sure to keep the tank completely full to prevent water accumulation. The expanding and contracting of the fuel causes air to enter the fuel tank. Water in the air will condense in the tank if the tank is not kept full.
- Be sure to use fresh fuel when doing a tune-up on any unit that has been in storage for a long time.

If you have technical tips you think other dealers could use, let us know. You'll receive credit in the Tech Exchange for ideas we use, and we'll send you an exclusive Yamaha Tech Exchange hat as our thanks.
Send your tips to: Yamaha Motor Corporation, U.S.A., Attn: Tech Exchange, P.O. Box 6555, Cypress, CA 90630

©1995 YAMAHA MOTOR CORPORATION, U.S.A.

**Reformulated Gasoline (Cont'd.)**

**SUMMARY**

More information will become available during the next year as RFG penetrates the market. If you want more information on gasoline, send for the technical manual, *Changes in Gasoline II* at:

Changes in Gasoline II
Technicians Manual
Downstream Alternatives, Inc.
PO Box 190
Bremen, IN 46506-0190

The cost of this manual is $2.00 each.

## Areas Exceeding Federal Ozone Standards

The following charts show the areas of the country that exceed the Federal Ozone Standards. The nine cities in the **Extreme and Severe** areas are required to start selling RFG during 1995. This program is optional in the other listed areas.

**RFG FUEL AREAS EXCEEDING FEDERAL OZONE STANDARDS**

| *Extreme Areas** | *Moderate Areas* | *Marginal Areas* | |
|---|---|---|---|
| Los Angeles* | Atlantic City, NJ | Albany, NY | South Bend, IN |
| | Bowling Green, KY | Allentown, PA-NJ | Stockton, CA |
| *Severe Areas** | Charleston, WV | Altoona, PA | Sussex County, DE |
| Baltimore, MD | Charlotte, NC-SC | Birmingham, AL | Tampa, FL |
| Chicago, IL-IN-WI | Cincinnatti, OH-KY-IN | Buffalo, NY | Waldo County, ME |
| Houston, TX | Cleveland, OH | Canton, OH | York, PA |
| Milwaukee, WI | Dallas, TX | Columbus, OH | Youngstown, OH-Sharon, PA |
| Muskegon, MI | Dayton-Springfield, OH | Erie, PA | |
| New York, NY-NJ-CT | Detroit, MI | Essex County, NY | |
| Philadelphia, PA-NJ-DE-MD | Grand Rapids, MI | Evansville, IN-KY | |
| San Diego, CA | Greensboro, NC | Fayetteville, NC | |
| | Jefferson County, NY | Greenbrier County, WV | |
| *Serious Areas** | Kewaunee County, WI | Greenville-Spartanburg, SC | |
| Atlanta, GA | Knox County, ME | Hancock County, ME | |
| Bakersfield, CA | Louisville, KY-IN | Harrisburg, PA | |
| Baton Rouge, LA | Memphis, TN-AR-MS | Indianapolis, IN | |
| Beaumont, TX | Miami, FL | Johnson City-Kingsport-Bristol, TN | |
| Boston, MA-NH | Modesto, CA | Johnstown, PA | |
| El Paso, TX | Nashville, TN | Kansas City, MO-KS | |
| Fresno, CA | Pittsburgh, PA | Knoxville, TN | |
| Hartford, CT | Portland, ME | Lake Charles, LA | |
| Huntington, WV-KY-OH | Raleigh-Durham, NC | Lancaster, PA | |
| Parkersburg, WV-OH | Reading, PA | Lewiston, ME | |
| Portsmouth, NH-ME | Richmond, VA | Lexington, KY | |
| Providence, RI | Salt Lake City, UT | Lincoln County, ME | |
| Sacramento, CA | San Francisco-Oakland-San Jose, CA | Manchester, NH | |
| Sheboygan, WI | Santa Barbara, CA | Montgomery, AL | |
| Springfield, MA | Smyth County, VA | Norfolk, VA | |
| Washington, DC-MD-VA | St. Louis, MO-IL | Owensboro, KY | |
| | Toledo, OH | Paducah, KY | |
| | Visalia, CA | Poughkeepsie, NY | |
| | Worcester, MA | Scranton, PA | |

*Nine cities with highest ozone levels designated extreme or severe will be required to implement reformulated gasoline programs in 1995. Other ozone non-attainment areas may elect to "opt-in" to this program.

**Oxygenated Fuel Sold Seasonally in These Areas Exceeding Federal Carbon Monoxide Standards**

| | | | |
|---|---|---|---|
| Albuquerque, NM | Fairbanks, AK | Memphis, TN | Reno, NV |
| Anchorage, AK | Ft Collins, CO | Minneapolis, MN | Sacramento, CA |
| Baltimore, MD | Fresno, CA | Missoula, MT | San Diego, CA |
| Boston, MA | Grants Pass, OR | Modesto, CA | San Francisco, CA |
| Chico, CA | Greensboro, NC | New York/Northern NJ | Seattle, WA |
| Cleveland, OH | Hartford, CT | Philadelphia, PA | Spokane, WA |
| Colorado Springs, CO | Klamath County, OR | Phoenix, AZ | Stockton, CA |
| Denver/Boulder, CO | Las Vegas, NV | Portland, OR | Syracuse, NY |
| Duluth, MN | Los Angeles, CA | Provo/Orem, UT | Washington, DC |
| El Paso, TX | Medford, OR | Raleigh, NC | |

MOTORCYCLE | 7/3/96 | M96-010

# TECH EXCHANGE

**SUBJECTS:**
1. **Finding Oil Leaks - All Models**
2. **Cleaning Gasket Surfaces - All Models**
3. **Special Tool - YZ125 Models**

## FINDING OIL LEAKS - ALL MODELS

Finding a small oil leak can be difficult. If you are having problems, try doing a Powder Check. A Powder Check can be accomplished by following the steps below.

1. Thoroughly clean the suspected area of all oil residue and dry it completely. Yamaha MUD, GREASE AND ENGINE CLEANER (ACC-MUDGR-CL-NR) and SIMPLE GREEN (ACC-SMPGR-00-24) both work well for this. Again make sure that the area is completely dry.

**⚠WARNING**
**Use these materials in well ventilated area and use adequate breathing protection to prevent inhalation of the powder.**

2. Use an aerosol can that dispenses light powder (i.e. deodorant or foot powder). Make sure the suspected area has a remaining coat of the dry powder. If any wet/dark spots appear, this may be where your leak is coming from, or possibly it could be from incomplete cleaning. Note the spot and repeat steps 1 & 2.
3. Briefly start the engine or operate the device you think has the leak. Inspect the dry powder for a new appearing wet/dark spot indicating the start of a leak. It may be necessary to duplicate actual customer operating conditions if there is no indication of any leak.

## CLEANING GASKET SURFACES - ALL MODELS

When repairing an engine, or any other item using non-metal gaskets, the removal of all the small pieces of old gasket material can be time consuming. This job can be done easier and faster by using a knife sharpening stone instead of a knife or scraper. Follow the steps below.

1. First, apply several coats of MEK (Methyl Ethyl Ketone) with a brush to the old gasket.
2. While thoroughly soaked, remove the larger pieces of the gasket, using a scraper if necessary.
3. Use a standard 1" to 2" by 6" to 8" flat stone with solvent to rub (as if using sandpaper) the remaining gasket material from the casting. **NOTE:** This will easily remove the small pieces of old gasket, remove any glue and smooth out any nicks to produce a nice surface for the new gasket.

Use a standard, double sided medium/fine grit sharpening stone large enough to span the openings when preparing the crankcase or other large castings. This stone is available at sporting goods stores and some tool suppliers.

If you have technical tips you think other dealers could use, let us know. You'll receive credit in the Tech Exchange for ideas we use, and we'll send you an exclusive Yamaha Tech Exchange hat as our thanks.
Send your tips to: Yamaha Motor Corporation, U.S.A., Attn: Tech Exchange, P.O. Box 6555, Cypress, CA 90630

©1996 YAMAHA MOTOR CORPORATION U.S.A.

# SPECIAL TOOL - YZ125 H1 MODELS

You may encounter some difficulty disassembling the crankshaft without damaging the plastic stuffers. You can make your own assembly/disassembly special tool for pressing the crankshaft apart, by following the illustration instructions below:

