8

XS650SE

Supplementary

FOREWORD

This Supplementary Service Manual for XS650SE has been published to supplement the Service Manual for the XS650E (2FO-28197-10) and includes changes in specifications and addition to the data.

For complete information on service procedures, it is necessary to use this Supplementary Service Manual together with the Service Manual for the XS650E (2FO-28197-10).

Page numbers shown in brackets correspond to page numbers of the XS650E Service Manual (2FO-28197-10).

(PAGE 4 ~ 5)

2-2. MAINTENANCE INTERVALS CHARTS

A. PERIODIC MAINTENANCE

Unit: km (mi)

Item	Remarks	Initial				Thereafter every		
		400 (250)	800 (500)	1,600 (1,000)	3,200 (2,000)	1,600 (1,000)	3,200 (2,000)	6,400 (4,000)
Cylinder	Check compression				○			○
Valves	Check/Adjust valve clearance			○	○			○
Cam chain	Check/Adjust chain tension	○			○			○
Spark plugs	Inspect/Clean or replace as required	○			○	○		
Air filter	Dry type – Clean/Replace as required			○	○	○		
Carburetor	Check operation/Adjust as required		○		○		○	
Brake system (complete)	Check/Adjust as required – Repair as required	○	○	○	○	○		
Clutch	Check/Adjust as required		○		○		○	
Wheel and tires	Check pressure/Wear/Damage	○	○	○	○	○		
Fuel petcocks	Clean/Flush tank as required	○		○			○	
Battery	Top-up/Check specific gravity and breather pipe	○	○	○	○	○		
Ignition timing	Adjust/Clean or replace parts as required		○	○	○		○	
Lights/Signals	Check operation/Replace as required	○	○	○	○	○		
Fittings/Fasteners	Tighten before each trip and/or ...	○	○	○	○	○		
Generator brushes	Check brush wear/Replace if necessary							○
Drive chain	Check tension, alignment/Adjust as required	Every 400 (250)						

B. LUBRICATION INTERVALS

Unit: km (mi)

Item	Remarks	Type	Initial				Thereafter every		
			400 (250)	800 (500)	1,600 (1,000)	3,200 (2,000)	1,600 (1,000)	3,200 (2,000)	6,400 (4,000)
Engine oil	Replace/Warm engine before draining	YAMALUBE 4-cycle oil or SAE 20W/40 type "SE" motor oil	○			○		○	
Drive chain	Clean/Lube	Yamaha chain and cable lube or SAE 10W/30 motor oil	Every 400 (250)						
Brake pedal shaft/ Change pedal shaft	Light application	Lithium base grease			○		○		
Control/Meter cables	Apply thoroughly	Yamaha chain and cable lube or SAE 10W/30 motor oil			○	○		○	

Unit: km (mi)

Item	Remarks	Type	initial				Thereafter every		
			400 (250)	800 (500)	1,600 (1,000)	3,200 (2.000)	1,600 (1,000)	3,200 (2.000)	6,400 (4.000)
Throttle grip/ Housing	Apply lightly	Lithium basegrease				0		0	
Hydraulic brake fluid reserve	Use new fluid only	DOT No. 3 Brake fluid	check	check	check	check	check		
Oil filter element	Clean/Replace as required	–	0			0		0	
Front forks	Drain completely – Check specifications	Yamaha Fork Oil 20 wt.				0			0
Steering bearings	Inspect thoroughly Pack moderately Yearly or . . .	Medium-weight wheel bearing grease							12,800 (8,000)
Speedometer gear housing	Inspect thoroughly Pack moderately	Lithium base grease							12,800 (8,000)
Rear arm pivot shafts	Apply grease fully	Medium-weight wheel bearing grease							12,800 (8,000)
Wheel bearings	Do not over-pack Yearly or . . .	Medium-weight wheel bearing grease							12,800 (8,000)
Point cam lubrication wicks	Apply very lightly	Light-weight machine oil		0	0	0		0	

NOTE :

Brake fluid replacement:


1. When disassembling the master cylinder or caliper cylinder, replace the brake fluid. Normally check the brake fluid level and add the fluid as required.
2. On the inner parts of the master cylinder and caliper cylinder, replace the oil seals every two years.
3. Replace the brake hoses every four years, or if cracked or damaged.

(PAGE 7,10 ~ 13)

24. CHASSIS

A. Fuel petcock cleaning

1. Open the seat and remove the fuel tank securing bolt.
2. Turn the petcock lever to the "ON" or "RES" position. Raise the fuel tank to remove the fuel pipe.

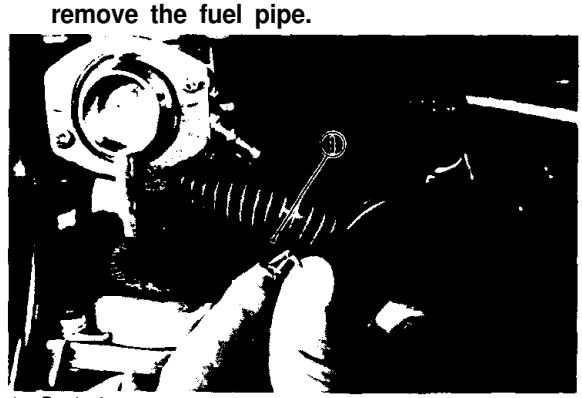

1. Fuel pipe

3. Remove the drain bolt and clean with solvent. If gasket is damaged, replace.



1. Drain bolt

E. Rear brake


The rear brake pedal should be so adjusted that it has a free play of 13 ~ 15 mm (0.51 ~ 0.59 in) from when the brake pedal is trod to when the brake begins to be effected.

1. Loosen the adjuster lock nut (for pedal height).
2. By turning the adjuster bolt clockwise or counterclockwise, adjust the brake pedal

position so that its top end is approx. 12 ~ 18 mm (0.47 ~ 0.71 in) below the footrest top end.

3. Secure the adjuster lock nut.
4. Loosen the brake rod adjuster lock nut and screw brake rod downward until there is noticeable free play between rod and master cylinder.
5. Turn in the brake rod until it lightly touches the master cylinder, then turn it out by approx. 1-1/5 turns (for proper free play).
6. Tighten the brake rod adjuster lock nut.

CAUTION:
See that the punched mark on the brake rod is not above the top surface of the adjuster lock nut in securing the brake rod adjuster lock nut.

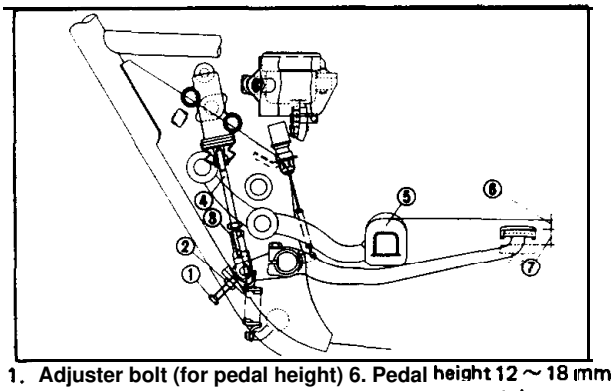

1. Adjuster bolt (for pedal height)
2. Lock nut
3. Lock nut
4. Brake rod
5. Footrest
6. Pedal height 12 ~ 18 mm (0.47 -0.71 in)
7. Free play 13 ~ 15 mm (0.51 -0.69 in)

F. Wheels and tires

2. Tires

Specifications should be changed as follows:


	FRONT	REAR
XS650SE BASIC WEIGHT with oil and full fuel tank	103 kg (227 lb)	119 kg (262 lb)
Standard tire	Bridgestone or Yokohama 3.50S19-4PR	Bridgestone or Yokohama 130/90S16-4PR
Maximum load limit	166 kg (365 lb)	279 kg (615 lb)
Cold tire pressure: Up to 90 kg (198 lb) load	1.6 kg/cm² (22 psi)	2.0 kg/cm² (28 psi)
90 kg (198 lb) load -204 kg (445 lb) load (Maximum load)	2.0 kg/cm² 128 psi)	2.3 kg/cm² (32 psi)
High speed riding	2.0 kg/cm² (28 psi)	2.3 kg/cm² (32 psi)
Minimum tire tread depth	0.8 mm (0.03 in)	l.8 mm (0.03 in)

G. Drive chain

1. Tension check

NOTE:
Before checking and/or adjusting, rotate rear wheel through several revolutions and check tension several times to find the tightest point. Check and/or adjust chain tension with rear wheel in this "tight chain" position.


Inspect the drive chain with the center stand put up. Check the tension at the position shown in the illustration. The normal vertical deflection is approximately 10 ~ 20 mm (0.4 ~ 0.8 in). If the deflection exceeds 20 mm (0.8 in) adjust the chain tension.

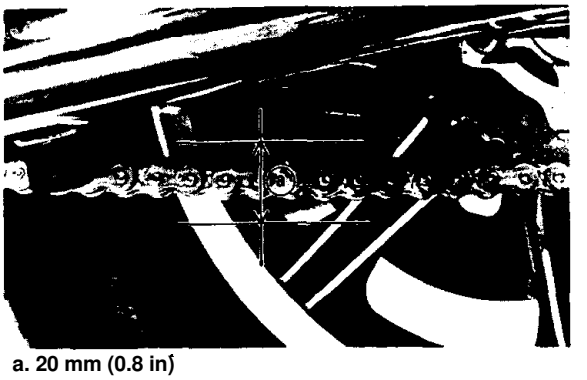


a. 20 mm (0.8 in)

2. Tension adjustment

a. Remove the cotter pin of the rear wheel axle nut with pliers.
b. Loosen the rear wheel axle nut.
c. Loosen the lock nuts on each side. To tighten chain turn chain puller adjusters clockwise. To loosen chain turn adjusters counterclockwise and push wheel forward. Turn each adjuster exactly the same amount to maintain correct axle alignment. (There are marks on each side of rear arm and on each chain puller; use them to check for proper alignment.)
d. After adjusting, be sure to tighten the lock nuts and the rear wheel axle nut.
e. Insert the cotter pin into the rear wheel axle nut and bend the end of the cotter pin as shown in the illustration (if the nut notch and the cotter pin hole do not match, tighten the nut slightly to match).

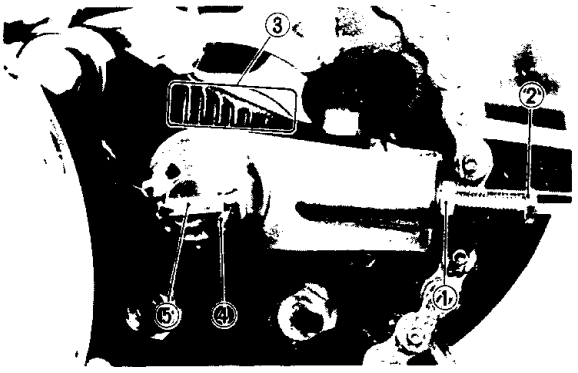

1. Lock nut
2. Adjuster
3. Marks for align
4. Rear wheel axle nut
5. Cotter pin

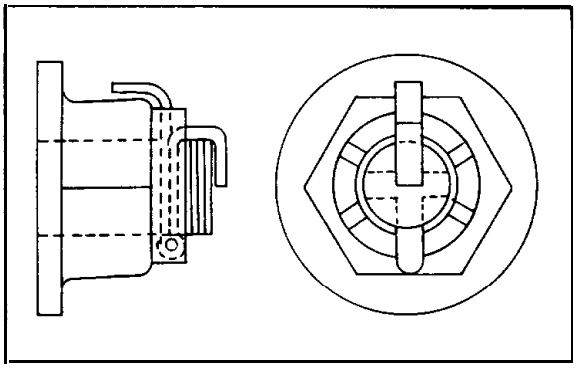

-CAUTION:

Excessive chain tension will overload the engine and other vital parts; keep the tension within the specified limits. Also, replace the rear axle cotter pin with a new one.

H. Front fork oil change

8. Pour specified amount of oil into the inner tube through the upper end opening.

Front for oil capacity: 169 cc (5.72 US oz) each leg

(PAGE 22 ~ 29)

3-3. INSPECTION AND REPAIR

D. Valve spring

1. Checking the valve springs

d. Valve spring specifications

Specifications should be changed as follows:

	Inner	Outer
Free length	42 mm (1.654 in)	42.55 mm (1.675 in)
Installed pressure (Valve closed)	9.3 ~ 10.7 kg (20.5 ~ 23.6 lb)	16.45 ~ 18.95 kg (36.3 ~ 41.8 lb)
Installed length (Valve closed)	35 mm (1.378 in)	37 mm (1.457 in)
Compressed pressure (Vlave open)	25.3 ~ 28.1 kg (55.8 ~ 62.0 lb)	53.5 ~ 61.5 kg (118.0 ~ 135.6 lb)
Compressed length (Valve open)	25.5 mm (1.004 in)	27.5 mm (1.083 in)
Allowable tilt from vertical	1.6 mm or 2.5° (0.063 in)	←

(PAGE 29 ~ 33)

3-4. ENGINE ASSEMBLY AND ADJUSTMENT

0. Engine

Specifications should be changed as follows:

Engine mounting bolt torque:			
Upper (U Nut)	M8	1.8 m-kg	(13.0 ft-lb)
Upper	M10	3.0 m-kg	(21.5 ft-lb)
Front (U Nut)	M10	4.6 m-kg	(33.5 ft-lb)
Rear (U Nut)	M10	4.1 m-kg	(29.5 ft-lb)
Rear — under (U Nut)	M10	4.6 m-kg	(33.5 ft-lb)
Under (U Nut)	M10	9.0 m-kg	(65.0 ft-lb)

(PAGE 39 ~ 40)

5-1. FRONT WHEEL

C. Front wheel inspection

1. Check for cracks, bends or warpage of wheels. If a wheel is deformed or cracked, it must be replaced.

NOTE:

These aluminum wheels are not designed for use with tubeless tires.

2. Check wheel run-out

If deflection exceeds tolerance, check wheel bearing or replace wheel as required.

Rim run-out limits: Vertical: 2 mm (0.08 in) Lateral: 2 mm (0.08 in)


3. Check wheel balance


Rotate wheel lightly several times and observe resting position.

If wheels is not statically balanced, wheel will come to rest at the same position. Install balance weight at lighter position (at top) as illustrated.

NOTE:

The wheel should be balanced with brake disc installed.

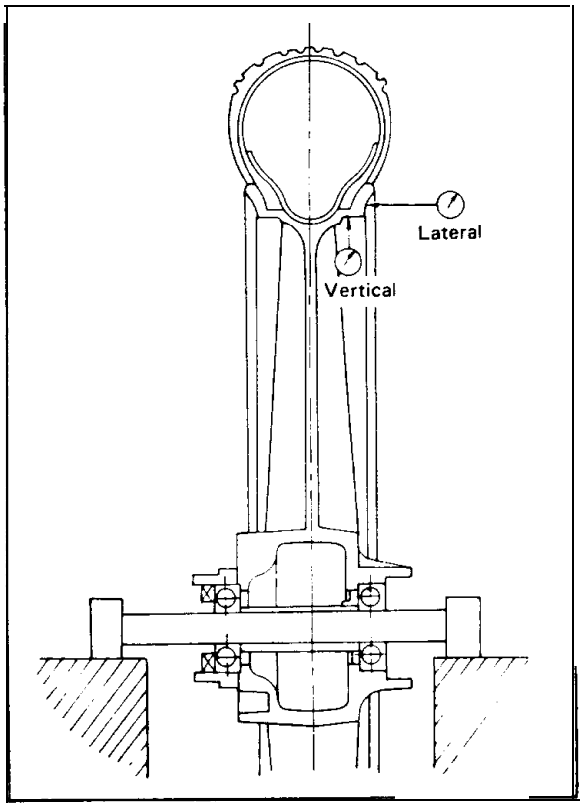

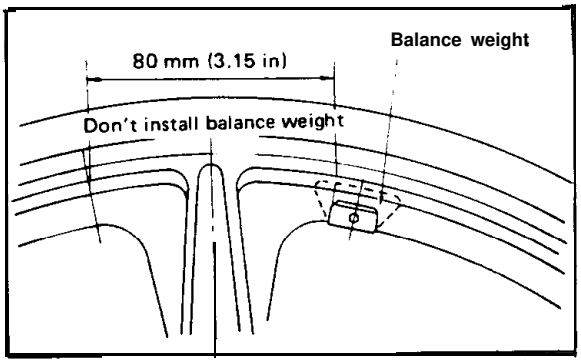

E. Installing front wheel

4. Always secure the front wheel axle as follows:

Specifications should be changed as follows:

Axle nut torque:
10.7 m-kg (77.5 ft-lb)
Holder nut torque:
1.4 m-kg (10.0 ft-lb)

(PAGE 40)

5-2. REAR WHEEL

A. Removal

1. **Support machine on the center stand.**
2. **Disconnect the drive chain. Using drive chain cutter (special tool).**

NOTE:

The chain joint should be replaced each time the chain is cut.

3. **Remove the axle nut cotter pin and axle nut.**
4. **While supporting the brake caliper, pull out the rear axle.**
5. **Remove the rear wheel assembly.**

E. Rear wheel installation

When installing rear wheel, reverse removal procedure taking care of following points:

1, **Lightly grease lip of rear wheel oil seals.**
2. **Make sure the brake pads are installed properly and that there is an enough gap to install the rear disc.**
3. **Install wheel assembly and axle. Always use a new cotter pin on the axle nut.**

Axle nut torque:
15.0 m-kg (108.5 ft-lb)

4. **Connect drive chain.**
5. **Adjust drive chain.**

(PAGE 40 ~ 44)


5-3. BRAKES

Except for the following, the same procedure can be performed for Disassembly, Inspection and Assembly of XS650SE front and rear brake and XS650E front brake.

D. Brake inspection and repair

Specifications should be changed as follows:

Wear limit:
6.0 mm (0.24 in)

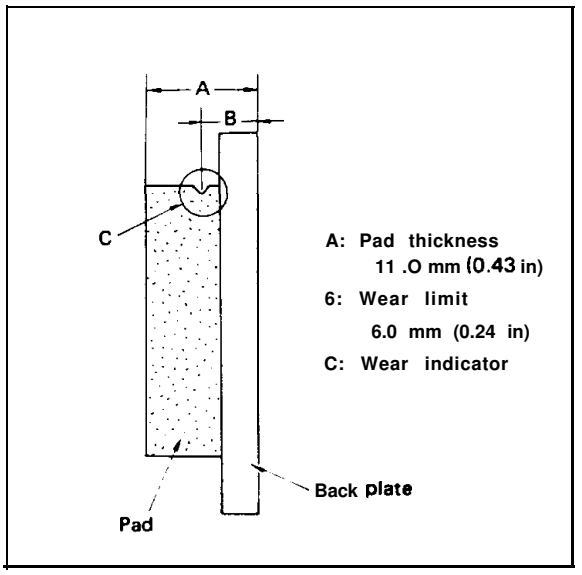

(PAGE 48)

5-9. REAR SHOCK ABSORBER

B. Inspection

Specifications should be changed as follows:


Rear shock absorber tightening torque:	
Upper	3.0 m-kg (21.5 ft-lb)
Lower	3.9 m-kg (28.0 ft-lb)

(PAGE 50 ~ 51)

6-1. STARTER

A. Armature

1. **Check the outer surface of the commutator. If it's surface is dirty, clean with No. 600 grit sand paper.**
2. **The mica insulation between commutator segments should be 0.7 mm (0.028 in) below the segment level. If not, scrape to proper limits with appropriately shaped tool. (A hack saw blade can be ground to fit.)**

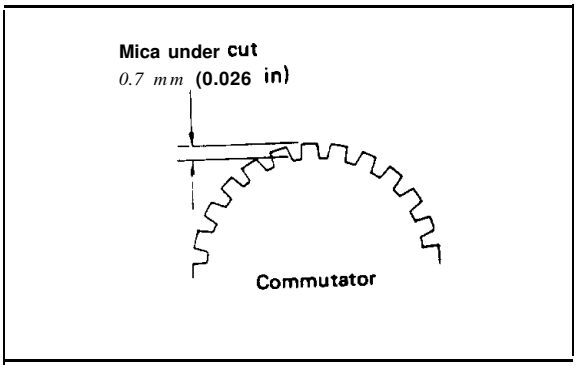

3. **Check the armature and field coil for shorting and insulation. Replace armature as required.**

	Coil resistance
Armature coil	0.0067Ω at 20°C (68°F)
Field coil	0.004Ω at 20°C (68°F)

4. **Check the front and rear cover bearings for damage. If damaged, the starter assembly must be replaced.**

(PAGE 57 ~ 58)

6-5. LIGHTING AND SIGNAL SYSTEMS

B. Reserve lighting system

1. **Description:**

The reserve lighting system has two functions: (1) It notifies the rider that one of the headlight filaments is inoperative, and (2) it switches current from the inoperative filament to the remaining functional filament.


The system is connected to the headlight circuit only. The reserve lighting system unit is located under the fuel tank.


NOTE:


This model has been equipped with a safety relay so that the headlight comes on automatically when the engine is started even with the headlight switch "OFF".


Headlight condition	Headlight failure indicator light	Reserve lighting function
Normal	Comes on (very dim)	—
High beam faulty	Comes on	Low beam comes on
Low beam faulty	Comes on	High beam comes on at low brilliance


2. Troubleshooting/inspection

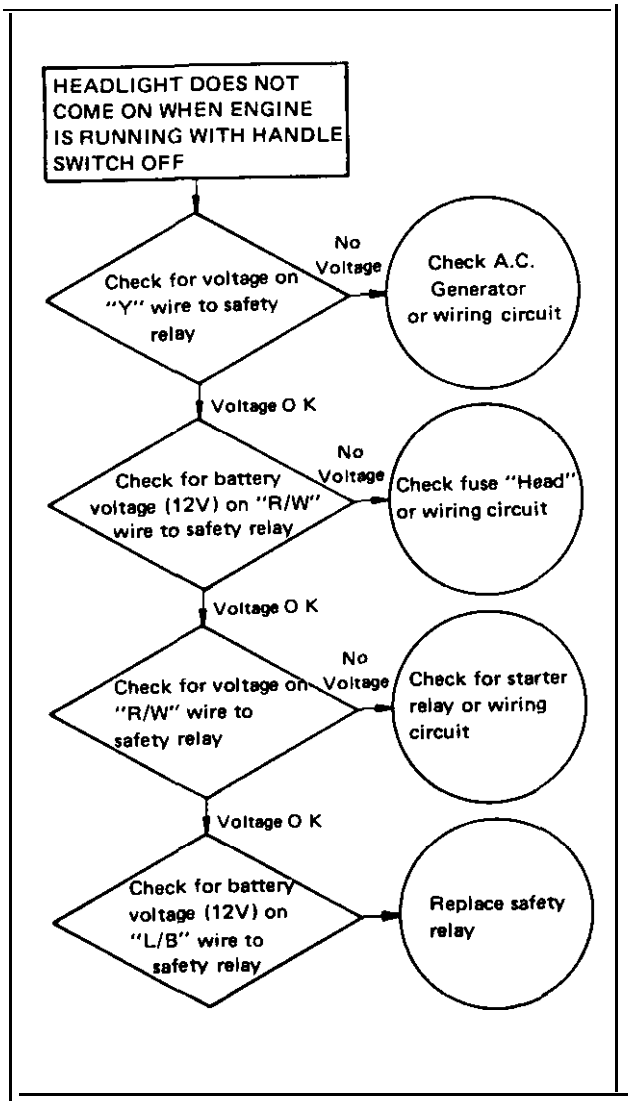


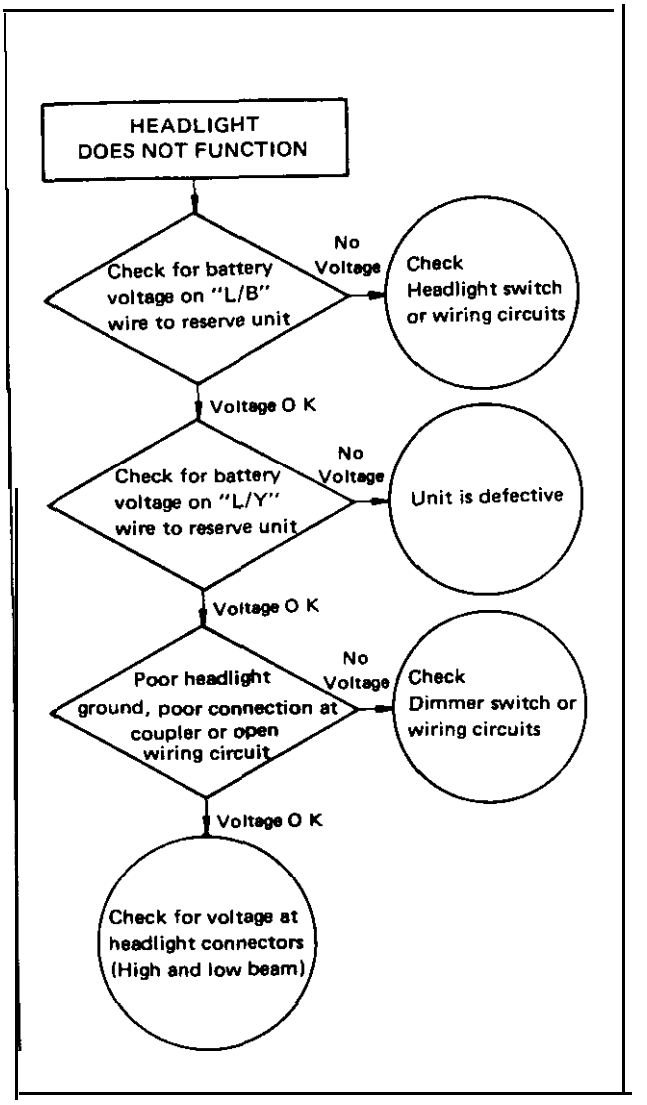

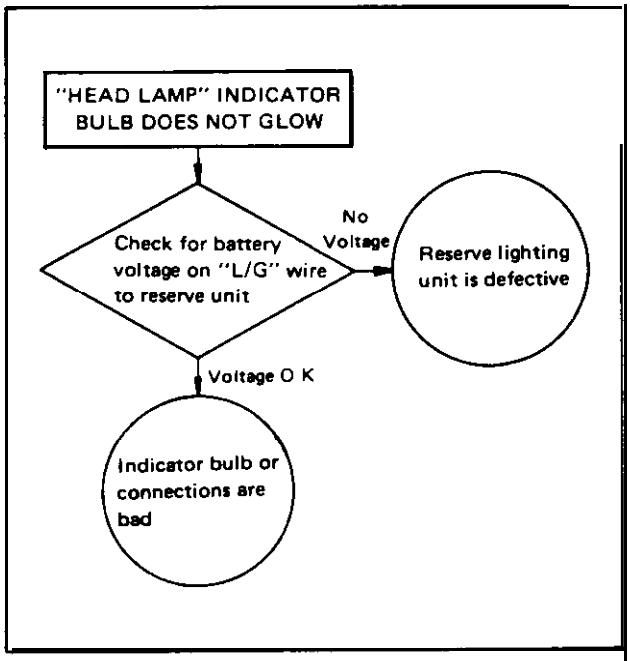
"HEAD LAMP" INDICATOR BULB DOES NOT GLOW
Check for battery voltage on "L/G" wire to reserve unit
No Voltage
Reserve lighting unit is defective
Voltage O K
Indicator bulb or connections are bad

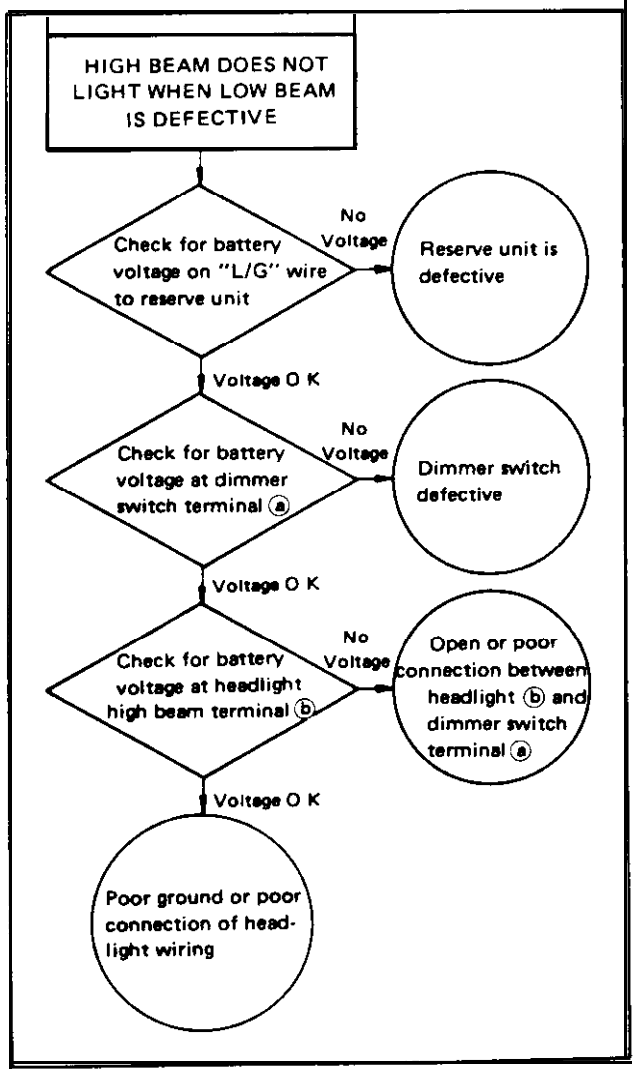
HIGH BEAM DOES NOT LIGHT WHEN LOW BEAM IS DEFECTIVE
Check for battery voltage on "L/G" wire to reserve unit
No Voltage
Reserve unit is defective
Voltage O K
Check for battery voltage at dimmer switch terminal ⓐ
No Voltage
Dimmer switch defective
Voltage O K
Check for battery voltage at headlight high beam terminal ⓑ
No Voltage
Open or poor connection between headlight ⓑ and dimmer switch terminal ⓐ
Voltage O K
Poor ground or poor connection of head-light wiring

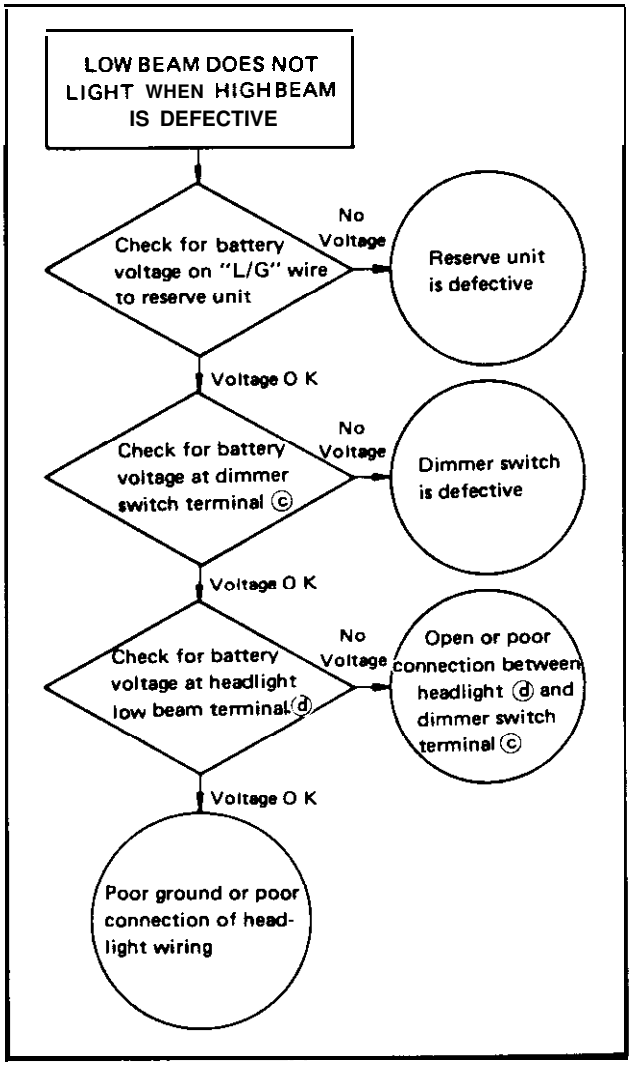
LOW BEAM DOES NOT LIGHT WHEN HIGH BEAM IS DEFECTIVE
Check for battery voltage on "L/G" wire to reserve unit
No Voltage
Reserve unit is defective
Voltage O K
Check for battery voltage at dimmer switch terminal ⓒ
No Voltage
Dimmer switch is defective
Voltage O K
Check for battery voltage at headlight low beam terminal ⓓ
No Voltage
Open or poor connection between headlight ⓓ and dimmer switch terminal ⓒ
Voltage O K
Poor ground or poor connection of head-light wiring

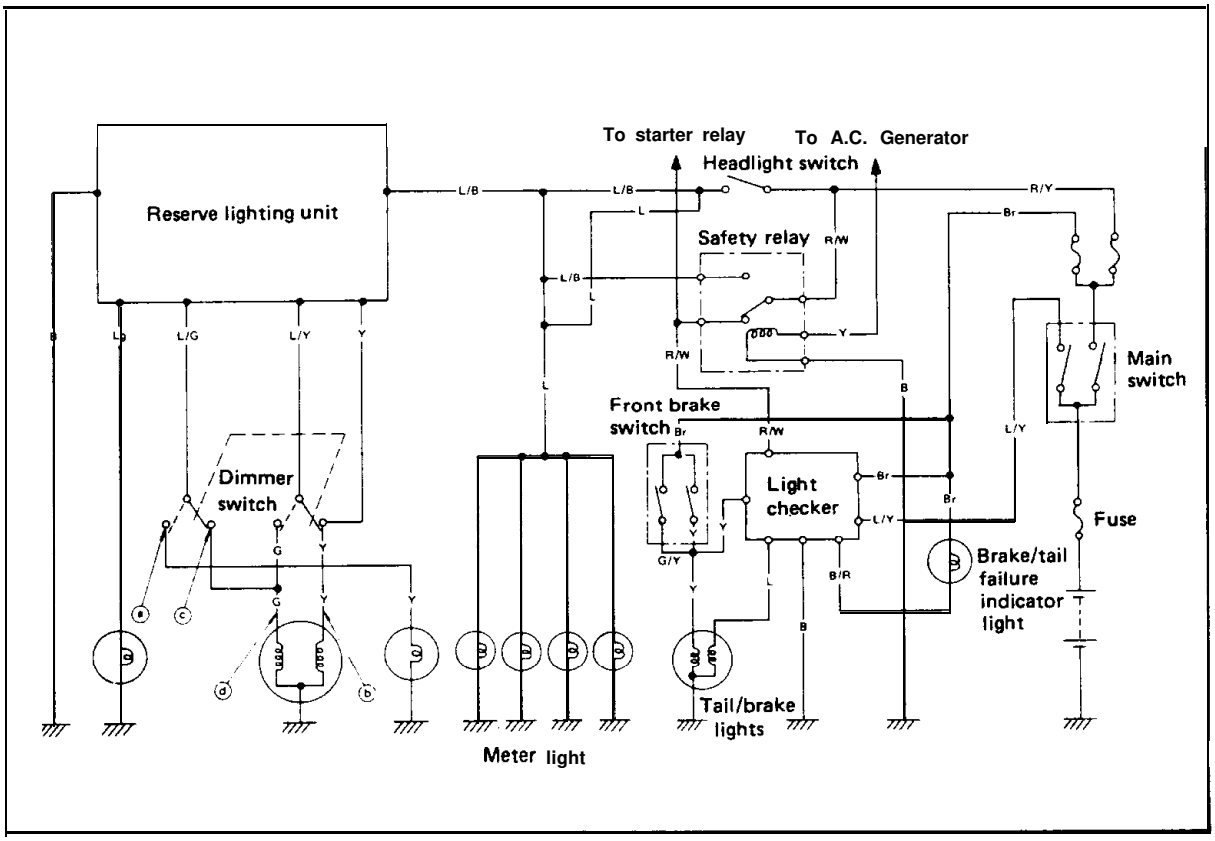


(PAGE 61 ~ 62)

7-1. TORQUE SPECIFICATION

The following torque specifications must be adhered to on every machine. When applying torque to multi-secured fastener components, the several studs should be tightened in gradual stages and in a pattern that will avoid warpage to the item being secured. Torque settings are for dry, clean threads. Torquing should always be done to the nut, never the bolt head.

NOTE:

Certain items with other than standard thread pitches may require differing torque.

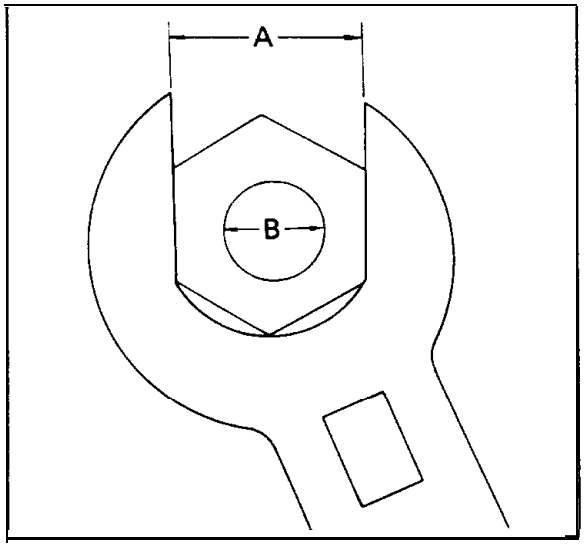

Torque Specifications

A (Nut)	B (Bolt)	Standard tightening torque	
		m-kg	ft-l b
10 mm	6 m m (M6)	1.0	7.2
12mm	Bm m (M8)	2.0	15
14 mm	10mm (MI0)	4.0	29
17mm	12mm (M12)	4.5	33
19 mm	14mm (M14)	5.0	36
22 mm	16mm (MI6)	6.5	47
24 mm	18mm (MI8)	7.0	50
27 mm	20mm (M20)	8.0	58

Part to be tightened	Thread dia. and part name	Tightening torque
Engine:		
Cylinder head and cylinder head cover	10 mm nut 8 mm bolt	3.7 m-kg (27.0 ft-lb) 2.1 m-ka 115.0 ft-lb)
Cylinder head	6 mm bolt	0.9 m-kg (6.5 ft-lb)
Cylinder head cover side	6 mm crown nut 8 mm crown nut	0.9 m-kg (6.5 ft-lb) 1.3 m-ka (9.5 ft-lb)
Spark plug	14 mm	2.0 m-ka (14.5 ft-lb)
Generator	12 mm nut	3.8 m-ka (27.5 ft-lb)
Stator coil	6 mm pan head screw	0.9 m-kg (6.5 ft-lb)
Governer	6 mm bolt	0.8 m-kg (6.0 ft-lb)
Valve clearance adjustment nut	8 mm nut	2.7 m-kg (19.5 ft-lb)
Cam chain tensioner	18 mm cap	2.1 m-kg (15.0 ft-lb)
Pump cover	6 mm pan head screw	1 .0 m-kg (7.0 ft-lb)
Strainer cover	6 mm bolt	1.0 m-kg (7.0 ft-lb)
Drain plug	30 mm bolt	4.2 m-kg (30.5 ft-lb)
Oil filter	6 mm bolt	0.9 m-kg (6.5 ft-lb)
Delivery pipe	10 mm union bolt	2.1 m-kg (15.0 ft-lb)
Exhaust pipe	8 mm nut	1.3 m-kg (9.5 ft-lb)
Crankcase	8 mm bolt/nut	2.1 m-kg (15.0 ft-lb)
Kick crank boss	8 mm bolt	2.0 m-kg (14.5 ft-lb)
Primary drive gear	14 mm nut	9.0 m-kg (65.0 ft-lb)
Clutch boss	18mm nut	8.0 m-kg (58.0 ft-lb)
Drive sprocket	22 mm nut	6.5 m-kg (47.0 ft-lb)
Change pedal	6 mm bolt	1 .O m-kg (7.0 ft-lb)
Chassis:		
Front wheel axle	14 mm nut	10.7 m-kg (77.5 ft-lb)
Front fork and axle holder	8 mm nut	1.4 m-kg (10.0 ft-lb)
Handle crown and inner tube	8 mm nut	1 .1 m-kg (8.0 ft-lb)
Handle crown and steering shaft	8 mm nut	1.1 m-kg (8.0 ft-lb)
Handle crown and steering shaft	14 mm bolt	5.4 m-kg (39.0 ft-lb)
Handle crown and handle holder	8 mm bolt	1.8 m-kg (13.0 ft-lb)
Under bracket and inner tube	8 mm nut	2.0 m-kg (14.6 ft-lb)
Engine mounting Upper	8 mm nut	1.8 m-kg (13.0 ft-lb)
Engine mounting Upper	10 mm nut	3.0 m-kg (21.5 ft-lb)
Engine mounting Front	10 mm nut	4.6 m-kg (33.5 ft-lb)
Engine mounting Rear	10 mm nut	4.1 m-kg (29.5 ft-lb)
Engine mounting Rear-Lower	10 mm nut	4.6 m-kg (33.5 ft-lb)
Engine mounting Lower	10 mm nut	9.0 m-kg (65.0 ft-lb)
Front flasher and headlight	8 mm nut	1 .O m-kg (7.0 ft-lb)
Master cylinder and brake hose	10 mm union bolt	2.6 m-kg (19.0 ft-lb)
Brake disc and hub	8 mm bolt	2.0 m-kg (14.5 ft-lb)
Caliper and support bracket	8 mm bolt	1.8 m-kg (13.0 ft-lb)
Caliper and pad	5 mm bolt	0.3 m-kg (2.0 ft-lb)
Caliper and bleed screw	8 mm bolt	0.6 m-kg (4.5 ft-lb)
Front caliper and front fork	10 mm bolt	3.5 m-kg (25.5 ft-lb)
Master cylinder and cylinder bracket	6 mm bolt	0.6 m-kg (4.5 ft-lb)

Part to be tightened	Thread dia. and part name	Tightening torque
Pivot shaft	14 mm nut	6.5 m-kg (47.0 ft-lb)
Rear wheel axle	16 mm nut	15.0 m-kg (108.5 h-lb)
Tension bar and brake caliper	8 mm nut	1.8 m-kg (13.0 ft-lb)
Tension bar and rear arm	8 mm nut	3.2 m-kg (23.0 ft-lb)
Rear shock absorber Upper	10 mm bolt	3.0 m-kg (21.5 ft-lb)
Rear shock absorber Lower	10 mm bolt	3.9 m-kg (28.0 ft-lb)
Rear arm and rear arm end	8 mm bolt	1.0 m-kg (7.0 ft-lb)
Front fender	8 mm bolt	1.0 m-kg (7.0 ft-lb)
Neutral switch	12mm	1.3 m-kg (9.5 ft-lb)

(PAGE 64 ~ 71)

7-3. SPECIFICATION

A. General

1. MODEL	
1) Model (I.B.M. No.)	XS650SE (2MO)
2) Frame I.D. and starting number	2FO-100101
3) Engine I.D. and starting number	2FO-100101
2. DIMENSION	
1) Overall length	2,120 mm (83.5 in)
2) Overall width	925 mm (36.4 in)
3) Overall height	1,220 mm (48.0 in)
4) Seat height	790 mm (31.1 in)
5) Wheelbase	1,435 mm (56.5 in)
6) Minimum ground clearance	135 mm (5.3 in)
3. WEIGHT	
1) Net weight (Dry)	210 kg (463 lb)
4. PERFORMANCE	
1) Climbing ability	26°
2) Minimum turning radius	2,500 mm (98.4 in)
3) Braking distance	14 m @ 50 km/h (45.9 ft @ 31 mi/h)

B. Engine

1. DESCRIPTION	
1) Engine type	Air cooled, 4-stroke, SOHC twin, parallel forward incline
2) Engine model	2F0
3) Displacement	653 cc (39.85 cu.in)
4) Bore x stroke	75 x 74 mm (2.953 x 2.913 in)
5) Compression ratio	8.5 : 1
6) Starting system	Kick and electric starter
7) Ignition system	Battery ignition
8) Lubrication system	Wet sump
2. CYLINDER HEAD	
1) Combustion chamber volume (with N-7Y)	43.6 cc (2.660 cu.in)
2) Combustion chamber We	Dome + Squish
3) Head gasket thickness	1.2 mm (0.047 in)
3. CYLINDER	
1) Material	Aluminum alloy with cast iron sleeve
2) Bore size	75.00 $^{+0.02}_{0}$ mm (2.9528 $^{+0.0008}_{0}$ in)
3) Taper limit	0.05 mm (0.002 in)
4) Out of round limit	0.01 mm (0.0004 in)

4. PISTON

1) Pistonskirt clearance: 0.050 ~ 0.055 mm (0.0020 ~ 0.0022 in)

2) Piston oversize:

75.25 mm (2.963 in)	75.50 mm (2.972 in)	75.75 mm (2.982 in)	76.00 mm (2.992 in)

3) Piston pin outside diameter x length: $20.0\ ^{0}_{-0.005}$ mm x $61.0\ ^{0}_{-0.3}$ mm ($0.79\ ^{0}_{-0.0002}$ in x $2.40\ ^{0}_{-0.0116}$ in)

5. PISTON RING

1) Piston ring design	(Top)	Barrel ring 1.2 mm (0.047 in)
	(2nd)	Taper ring 1.5 mm (0.059 in)
	(Oil ring)	With expander 2.8 mm (0.110 in)
2) Ring end gap	(Installed, top)	0.2 ~ 0.4 mm (0.008 ~ 0.016 in)
	(Installed, 2nd)	0.2 ~ 0.4 mm (0.008 ~ 0.016 in)
	(Installed, oil)	0.3 ~ 0.9 mm (0.012 ~ 0.035 in)
3) Ring groove side clearance	(Top)	0.04 ~ 0.08 mm (0.0016 ~ 0.0031 in)
	(2nd)	0.03 ~ 0.07 mm (0.0012 ~ 0.0028 in)

6. BIG END BEARING

1) Type: Needle bearing

2) Bearing size: ϕ 26 x ϕ34 x 19.8

3) Needle size: ϕ 4 x ϕ15.8 x 13

7. CAMSHAFT

1) Cam drive type: Chain (Center side)

2) Number and type of bearing: 4 bearings, Ball bearings (6005)


3) Bearing type: ϕ 25-ϕ 47-8

4) Cam dimensions

	Cam height "A"	Limit	Base circle "B"	Limit	Lift "C"
IN	39.99 ± 0.05 mm (1.574 ± 0.002 in)	39.84 mm (1.569 in)	32.24 ± 0.05 mm (1.269 ± 0.002 in)	32.09 mm (1.263 in)	7.991 mm (0.315 in)
EX	40.03 ± 0.05 mm (1.576 ± 0.002 in)	39.88 mm (1.570 in)	32.30 ± 0.05 mm (1.272 ± 0.002 in)	32.15 mm (1.266 in)	8.030 mm (0.316 in)

5) Valve timing

	OPEN	CLOSE	DURATION	OVERLAP
IN	BTDC36°	ABDC68°	284°	72°
EX	BBDC68°	ATDC36°	284°	

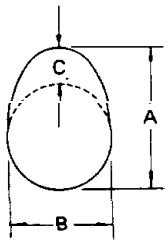

6) Camshaft deflection limit: 0.03 mm (0.0012 in)

7) Cam chain

Type	TSUBAKIMOTO BF05M
Number of links	106L
Sprocket ratio	36/18 (2.000)

8. ROCKER ARM AND ROCKER SHAFT

1) Rocker arm inner diameter: $15.0\ ^{+0.018}_{0}$ mm ($0.591\ ^{+0.0007}_{0}$ in)

2) Rocker arm shaft diameter: $15.0\ ^{-0.009}_{-0.015}$ mm ($0.591\ ^{-0.00035}_{-0.00059}$ in)

3) Clearance: 0.009 ~ 0.033 mm (0.00035 ~ 0.00130 in)

4) Lift ratio: X : Y = 40 : 48.41 mm (1.575 : 1.906 in)


9. VALVE, VALVE SEAT AND VALVE GUIDE


1) Valve per cylinder: 2 pcs.

2) Valve clearance (In cold engine): IN: 0.10 mm (0.0039 in); EX: 0.15 mm (0.0059 in)

3) Dimensions

Valve head diameter "A"	IN: 41 mm (1.614 in); EX: 35 mm (1.378 in)
Valve face width "B"	IN: 2.1 mm (0.083 in); EX: 2.1 mm (0.083 in)
Valve seat width "C"	IN: 1.3 mm (0.051 in); EX: 1.3 mm (0.051 in)

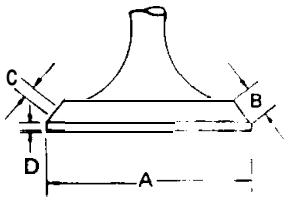


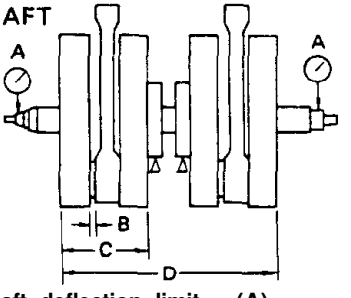Valve margin thickness "D"	IN: 1.3 mm (0.051 in) EX: 1.3 mm (0.051 in)
Valve stem diameter	IN: 8.0 $^{-0.010}_{-0.025}$ mm (0.315 $^{-0.0004}_{-0.0010}$ in) EX: 8.0 $^{-0.025}_{-0.040}$ mm (0.315 $^{-0.0010}_{-0.0016}$ in)
Valve guide diameter	IN: 8.0 $^{+0.019}_{+0.010}$ mm (0.315 $^{+0.0007}_{+0.0004}$ in) EX: 8.0 $^{+0.019}_{+0.010}$ mm (0.315 $^{+0.0007}_{+0.0004}$ in)
Valve stem to guide clearance	IN: 0.020 ~ 0.044 mm (0.00079 ~ 0.00173 in) EX: 0.035 ~ 0.059 mm (0.00138 ~ 0.00232 in)
4) Valve face runout limit	IN & EX: 0.03 mm (0.0012 in) or less
10. VALVE SPRING	
1) Free length	INNER (IN/EX): 42 mm (1.654 in) OUTER (IN/EX): 42.55 mm (1.675 in)
2) Spring rate	INNER (IN/EX): k_1 = 1.43 kg/mm (80.1 lb/in) k_2 = 1.81 kg/mm (101.4 lb/in) OUTER (IN/EX): k_1 = 3.2 kg/mm (179.2 lb/in) k_2 = 4.18 kg/mm (234.1 lb/in)
3) Installed length (Valve closed)	INNER (IN/EX): 35 mm (1.378 in) OUTER (IN/EX): 37 mm (1.457 in)
4) Installed pressure (Valve closed)	INNER (IN/EX): 10 ± 0.7 kg (22.0 ± 1.5 lb) OUTER (IN/EX): 17.7 ± 1.25 kg (39.0 ± 2.8 lb)
5) Compressed length (Valve open)	INNER (IN/EX): 25.5 mm (1.004 in) OUTER (IN/EX): 27.5 mm (1.083 in)
6) Compressed pressure (Valve open)	INNER (IN/EX): 27.2 ± 1.9 kg (60.0 ± 4.2 lb) OUTER (IN/EX): 57.4 ± 4.0 kg (126.5 ± 8.8 lb)
7) Wire diameter	INNER (IN/EX): 2.9 mm (0.114 in) OUTER (IN/EX): 4.2 mm (0.165 in)
8) Winding D.D.	INNER (IN/EX): 19.4 mm (0.764 in) OUTER (IN/EX): 32.6 mm (1.283 in)
9) Number of windings	INNER (IN/EX): 6.0 turns OUTER (IN/EX): 4.25 turns
11. CRANKSHAFT 	
1) Crankshaft deflection limit (A)	0.05 mm (0.002 in)
2) Con-rod large end clearance (B)	0.15 ~ 0.4 mm (0.0059 ~ 0.0157 in)
3) Width of crankshaft (C)	66 $^{-0.05}_{-0.10}$ mm (2.598 $^{-0.002}_{-0.004}$ in)
(D)	186 $^{0}_{-0.3}$ mm (7.323 $^{0}_{-0.012}$ in)
4) Crank pin I.D.	26 $^{-0.077}_{-0.095}$ mm (1.024 $^{-0.003}_{-0.004}$ in)
5) Crank pin O.D. x length	28 $^{0}_{-0.006}$ x 65 $^{+0.1}_{-0.2}$ mm (1.024 $^{0}_{-0.0002}$ x 2.559 $^{+0.004}_{-0.008}$ in)
12. CONNECTING ROD	
1) Big end I.D.	34 $^{+0.016}_{0}$ mm (1.339 $^{+0.0006}_{0}$ in)
2) Small end I.D.	20 $^{+0.028}_{+0.015}$ mm (0.787 $^{+0.0011}_{+0.0006}$ in)
13. CRANK BEARING	
1) Type Right end	φ30-φ78-19
Others	φ32-φ68-17
2) Oil seal type	SD-2540-9

14. CLUTCH	
1) Clutch type	Wet, multiple type
2) Clutch operating mechanism	Inner push type, screw push system
3) Primary reduction ratio and method	72/27 (2.666). spar gear
4) Primary reduction gear back lash (4 teeth)	21.45 $^{0}_{-0.025}$ mm (0.8445 $^{0}_{-0.00010}$ in)
5) Friction plate	
Thickness/Quantity	3 mm (0.118 in)/7 pcs.
Wear limit	2.7 mm (0.106 in)
6) Clutch plate	
Thickness/Quantity	1.4 mm (0.055 in)/6 pcs.
Warp limit	0.05 mm (0.002 in)
7) Clutch spring	
Free length/Quantity	34.6 mm (1.362 in)/6 pcs.
8) Clutch housing radial play	0.027 ~ 0.061 mm (0.0011 ~ 0.0032 in)
9) Push rod bending limit	0.2 mm (0.006 in)
15. TRANSMISSION	
1) Type	Constant mesh, 5-speed forward
2) Gear ratio: 1st	32/13 (2.461)
2nd	27/17 (1.588)
3rd	26/20 (1.300)
4th	23/21 (1.095)
6th	22/23 (0.966)
3) Bearing type: Main axle (Left)	Needle bearing (ϕ20-ϕ30-20)
Main axle (Right)	Ball bearing (ϕ25-ϕ52-20.6)
Drive axle (Left)	Ball bearing (ϕ30-ϕ62-23.8)
Drive axle (Right)	Needle bearing (ϕ20-ϕ30-16)
4) Oil seal type Drive axle (Left)	SDD-40-62-9
5) Secondary reduction ratio and method	34/17 (2.000)/Chain
16. SHIFTING MECHANISM	
1) Tvpe	Cam drum, return type
2) Oil seal type (Change lever)	SDO-14-24-6
17. KICK STARTER	
1) Tvpe	Bendix type
2) Oil seal type (Kick axle)	SD-25-35-7
3) Kick clip friction tension	1.2 ~ 1.7 kg (2.6 ~ 3.7 lb)
18. INTAKE	
1) Air cleaner: Type/Quantity	Dry. foam rubber/2 pcs.
2) Cleaner cleaning interval	Every 1,600 km (1,000 mile)
19. CARBURETOR	
1) Type and manufacturer/Quantity	BS38 MIKUNI/2 pcs.
2) I.D. mark	2F0-00
3) Main jet (MJ)	#135
4) Air jet (AJ)	#140
5) Jet needle (JN)	502-3
6) Needle jet (NJ)	Z-2
7) Throttle valve (Th.V)	#120
8) Pilot jet (PJ)	#27.5
9) Pilot screw (Turns out) (PS)	Preset
10) Starter jet (GS)	GS_1 : #80, GS_2 : 0.5
11) Fuel level (FL)	24 ± 1 mm (0.94 ±0.04 in)
12) Idling engine speed	1,200 r/min
20. LUBRICATION	
1) Engine sump oil quantity	Oil exchange: 2.0 lit (2.1 qt) Overhaul: 2.5 lit (2.6 qt)
2) Oil type and grade	Yamaluba 4-cycle oil or SAE 20W/40 type "SE" motor oil
3) Oil pump type	Trochoid pump

4) Trochoid pump specifications	
Top clearance	0.10 ~ 0.18 mm (0.0039 ~ 0.0071 in)
Tip clearance	0.03 ~ 0.09 mm (0.0012 ~ 0.0035 in)
Side clearance	0.03 ~ 0.08 mm (0.0012 ~ 0.0031 in)
Oil pump volume	1.3 lit/min (1.37 qt/min) at 1,000 r/min
5) Bypass valve setting pressure	1.0 kg/cm^2 (14 psi)

6) Lubrication chart

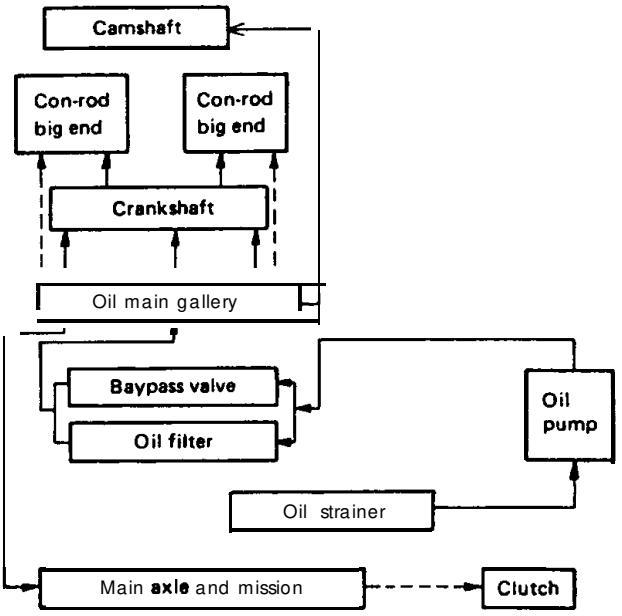

C. Chassis

1. FRAME	
1) Frame design	Double cradle, high tensile frame
2. STEERING SYSTEM	
1) Caster	27"
2) Trail	115 mm (4.53 in)
3) Number and size of balls in steering head	
Upper race	19 pcs. 1/4 in
Lower race	19 pcs. 1/4 in
4) Steering lock to lock	42" each (L and R)
3. FRONT SUSPENSION	
1) Type	Telescopic fork
2) Damper type	Oil damper, coil spring
3) Front fork spring	
Free length	482 mm (18.98 in)
Wire diameter x winding diameter	4 x 24.5 mm (0.157 x 0.965 in)
Spring constant	k_1 = 0.48 kg/mm (26.88 lb/in)/ 0 ~ 100 mm (0 ~ 3.94 in)
	k_2 = 0.65 kg/mm (36.40 lb/in)/ 100 ~ 150 mm (3.94 ~ 5.91 in)
4) Front fork travel	150 mm (5.906 in)
5) Inner tuba O.D.	35 mm (1.378 in)
6) Front fork oil quantity and type	169 cc (5.72 oz) each leg Yamaha fork oil 20 wt or equivalent
7) Distance from the top of inner tube oil level without spring	Approx. 454 mm (17.9 in)
4. REAR SUSPENSION	
1) Tvpe	Swing arm
2) Damper type	Oil damper, coil spring
3) Shock absorber travel	80 mm (3.15 in)
4) Shock absorber spring	
Free length	226 mm (8.90 in)


Wire diameter x winding diameter	7.5 x 60.5 mm (0.295 x 2.382 in)
Spring constant	k_1 = 1.714 kg/mm (96.0 lb/in)/ 0 ~ 45 mm (0 ~ 1.77 in) k_2 = 2.244 kg/mm (125.7 lb/in)/ 45 ~ 80 mm (1.77 ~ 3.15 in)
5) Swing arm free play (Limit)	1 mm (0.04 in)
6) Pivot shaft – Outside diameter	16 mm (0.63 in)
5. FUEL TANK	
1) Capacity	11.5 lit (2.53 US. gal)
2) Fuel grade	Regular gasoline
6. WHEEL	
1) Type (Front and rear)	Aluminum rim
2) Tire size (Front)	3.50S19-4PR
(Rear)	130/90S16-4PR
3) Tire pressure:	
up to 90 kg (198 lb) load	Front: 1.6 kg/cm^2 (22 psi) Rear: 2.0 kg/cm^2 (28 psi)
90 kg (198 lb)load ~ 204 kg (445 lb)load (Maximum load)	Front: 2.0 kg/cm^2 (28 psi) Rear: 2.3 kg/cm^2 (32 psi)
High speed riding	Front: 2.0 kg/cm^2 (28 psi) Rear: 2.3 kg/cm^2 (32 psi)
4) Rim run out limit (Front and rear)	
Vertical	2 mm (0.08 in)
Lateral	2 mm (0.08 in)
5) Rim size (Front)	1.85 x 19
(Rear)	MT3.00 x 16
6) Bearing type	
Front wheel (Left)	630322
Front wheel (Right)	63032132
Rear wheel (Left)	63052
Rear wheel (Right)	63042
7) Oil seal type	
Front wheel (Left)	SDD-45-56-6
Front wheel (Right)	SD-28-47-7
Rear wheel (Left)	SD-35-62-9
Rear wheel (Right)	SO-27-52-5
8) Secondary drive chain type	
Type	50HDS
Number of links	103L + Joint
Chain pitch	15.875 mm (5/8 in)
Chain free play	20 mm (314 in)
7. BRAKE	
1) Front brake	
Type	Hydraulic disc type
Disc size (Outside dia. x thickness)	298 x 7.0 mm (11.73 x 0.28 in)
Disc wear limit	6.5 mm (0.26 in)
Disc pad thickness	11 .O mm (0.43 in)
Pad wear limit	6.0 mm (0.24 in)
Master cylinder inside dia.	14.0 mm (0.55 in)
Caliper cylinder inside dia.	38.1 mm (1.50 in)
Brake fluid type / quantity	DOT #3 Brake fluid / 38.1 cc (1.29 oz)
2) Rear brake	
Type	Hydraulic disc type
Disc size (Outside dia. x thickness)	267 x 7.0 mm (10.5 x 0.28 in)
Disc wear limit	6.5 mm (0.26 in)
Disc pad thickness	11 .O mm (0.43 in)
Pad wear limit	6.0 mm (0.24 in)
Master cylinder inside dia.	14.0 mm (0.55 in)
Caliper cylinder inside dia.	38.1 mm (1.50 in)
Brake fluid type / quantity	DOT #3 Brake fluid / 38.1 cc (1.29 oz)

D. Electrical


1. IGNITION SYSTEM	
1) Ignition timing (B.T.D.C.)	15°/1,200 r/min
2) ignition coil	
Model/Manufacturer	CM11-50B/HITACHI
Spark gap	B mm (0.31 in) or more/300 r/min at 8V
Primary winding resistance	3.9Ω ± 10% at 20°C (68°F)
Secondary winding resistance	8.0kΩ ± 20% at 20°C (68°F)
3) Spark plug	
Type	N-7Y (CHAMPION) or BP7ES (N.G.K.)
Spark plug gap	0.7 ~ 0.8 mm (0.027 ~ 0.031 in)
4) Contact breaker	
Manufacturer/Quantity	HITACHI/2 pcs.
Point gap	0.30 ~ 0.40 mm (0.012 ~ 0.016 in)
Point spring pressure	650 ~ 850 g (22.9 ~ 30.0 oz)
Cam closing angle	93" ± 5"
5) Condenser	
Capacity	0.22μF
Insulation resistance	10MΩ or more
Quantity	2 pcs.
2. CHARGING SYSTEM	
1) AC generator	
Charging output	14V 1 1A/2,000r/min
Rotor coil resistance (Field coil)	5.2552 ± 10% at 20°C (68°F)
Stator coil resistance	0.46Ω ± 10% at 20°C (68°F)
Brush length	14.5 mm (0.571 in)
Brush wear limit	7.0 mm (0.276 in)
2) Rectifier	
Type	6-Element type (Full wave)
Model/Manufacturer	SB6B-17/HITACHI
Capacity	12A
Withstand voltage	4oov
3) Regulator	
Type	Tillil type
Model/Manufacturer	TLIZ-80/HITACHI
Regulating voltage	14.5 ± 0.5V
Core gap	0.6 ~ 1.0 mm (0.024 ~ 0.039 in)
Point gap	0.3 ~ 0.4 mm (0.012 ~ 0.016 in)
Voltage coil resistance	10Ω at 20°C (68°F)
5) Battery	
Model/Manufacturer/Quantity	YB14L-A2/YUASA/1 pc.
Capacity	12V, 14AH
Charging rate	1.4A 10 hours
Specific gravity	1.28 at 20°C (68°F)
3. STARTER	
1) Starter motor	
Type	Bendix type
Manufacturer	HITACHI
Model	S108-35
output	0.5 kw
Armature coil resistance	0.006752 ± 10% at 20°C (68°F)
Field coil resistance	0.00451 ± 10% at 20°C (68°F)
Brush size/Quantity	16 mm (0.63 in)/2 pcs.
Wear limit	4 mm (0.16 in)
Spring pressure	800 g (28.2 oz)
Commutator O.D./Wear limit	33 mm (1.30 in)/31 mm (1.22 in)
Mica undercut	0.7 mm (0.028 in)

2) Starter switch	
Manufacturer	HITACHI
Model	A104-70
Amparage rating	100A
Cut-in voltage	6.5V
Winding resistance	3.5Ω
3) Starter clip friction tension	2.2 ~ 2.5 kg (4.9 ~ 5.5 lb)
4. LIGHTING SYSTEM	
1) Head light type	Sealed beam
2) Bulb brightness and wattage/Quantity	
Head light	12V, 50/40W x 1 PC.
Tail/brake light	12V, 3/32 CP (8W/27W) x 1 PC.
Flasher light	12V, 32 CP (27W) x 4 pcs.
Pilot lights: Turn	12V, 3.4W x 2 PCS.
High beam	12v. 3.4W x 1 PC.
Headlight failure	12V, 3.4W x 1 pc.
Neutral	12V, 3.4W x 1 pc.
Tail/brake failure	12V, 3.4W x 1 PC.
Meter lights	12V, 3.4W x 4 PCS.
3) Reserve lighting unit Model/Manufacturer	337-I 1720/KOITO
4) Horn	
Model/Manufacturer	CF-12/NIKKO
Maximum amparage	2.5A
5) Flasher relay	
Type	Condenser type
Model/Manufacturer	1A0-70/NIPPON DENS0
Flasher frequency	85 ± 10 cycle/min.
Capacity	32 CP (27W) x 2 + 3.4W
6) Flasher cancelling unit	
Model	EVH-AC518
Voltage	DC9V ~ 16V
7) Fuse	
Rating/Quantity	Main (Red): 20A
8) Light checker	
Model	35200-7 1859
Manufacturer	KOITO


7-4 CABLE ROUTING DIAGRAM

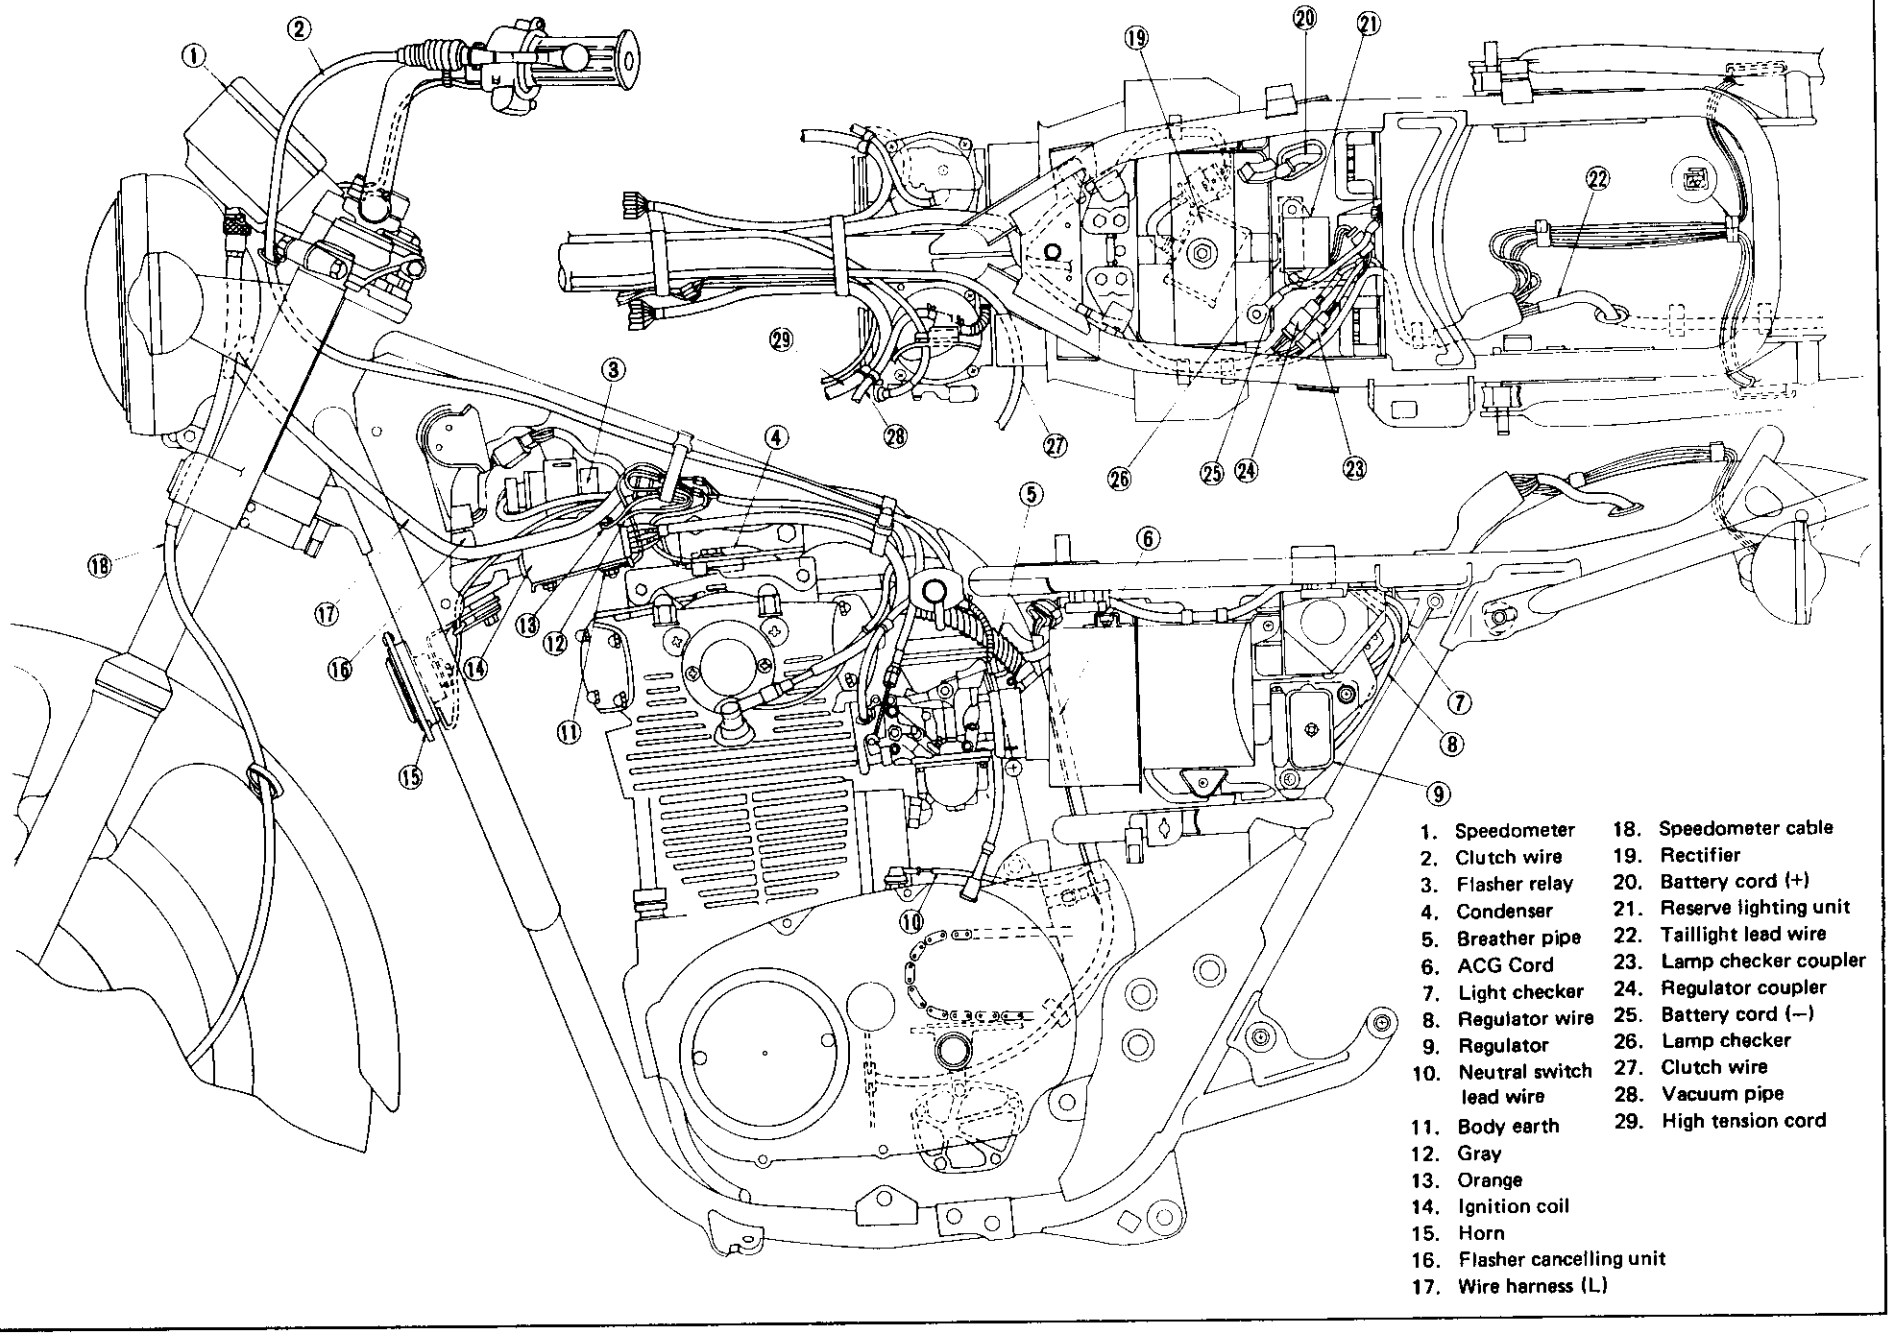

1. Speedometer
2. Clutch wire
3. Flasher relay
4. Condenser
5. Breather pipe
6. ACG Cord
7. Light checker
8. Regulator wire
9. Regulator
10. Neutral switch lead wire
11. Body earth
12. Gray
13. Orange
14. Ignition coil
15. Horn
16. Flasher cancelling unit
17. Wire harness (L)
18. Speedometer cable
19. Rectifier
20. Battery cord (+)
21. Reserve lighting unit
22. Taillight lead wire
23. Lamp checker coupler
24. Regulator coupler
25. Battery cord (–)
26. Lamp checker
27. Clutch wire
28. Vacuum pipe
29. High tension cord

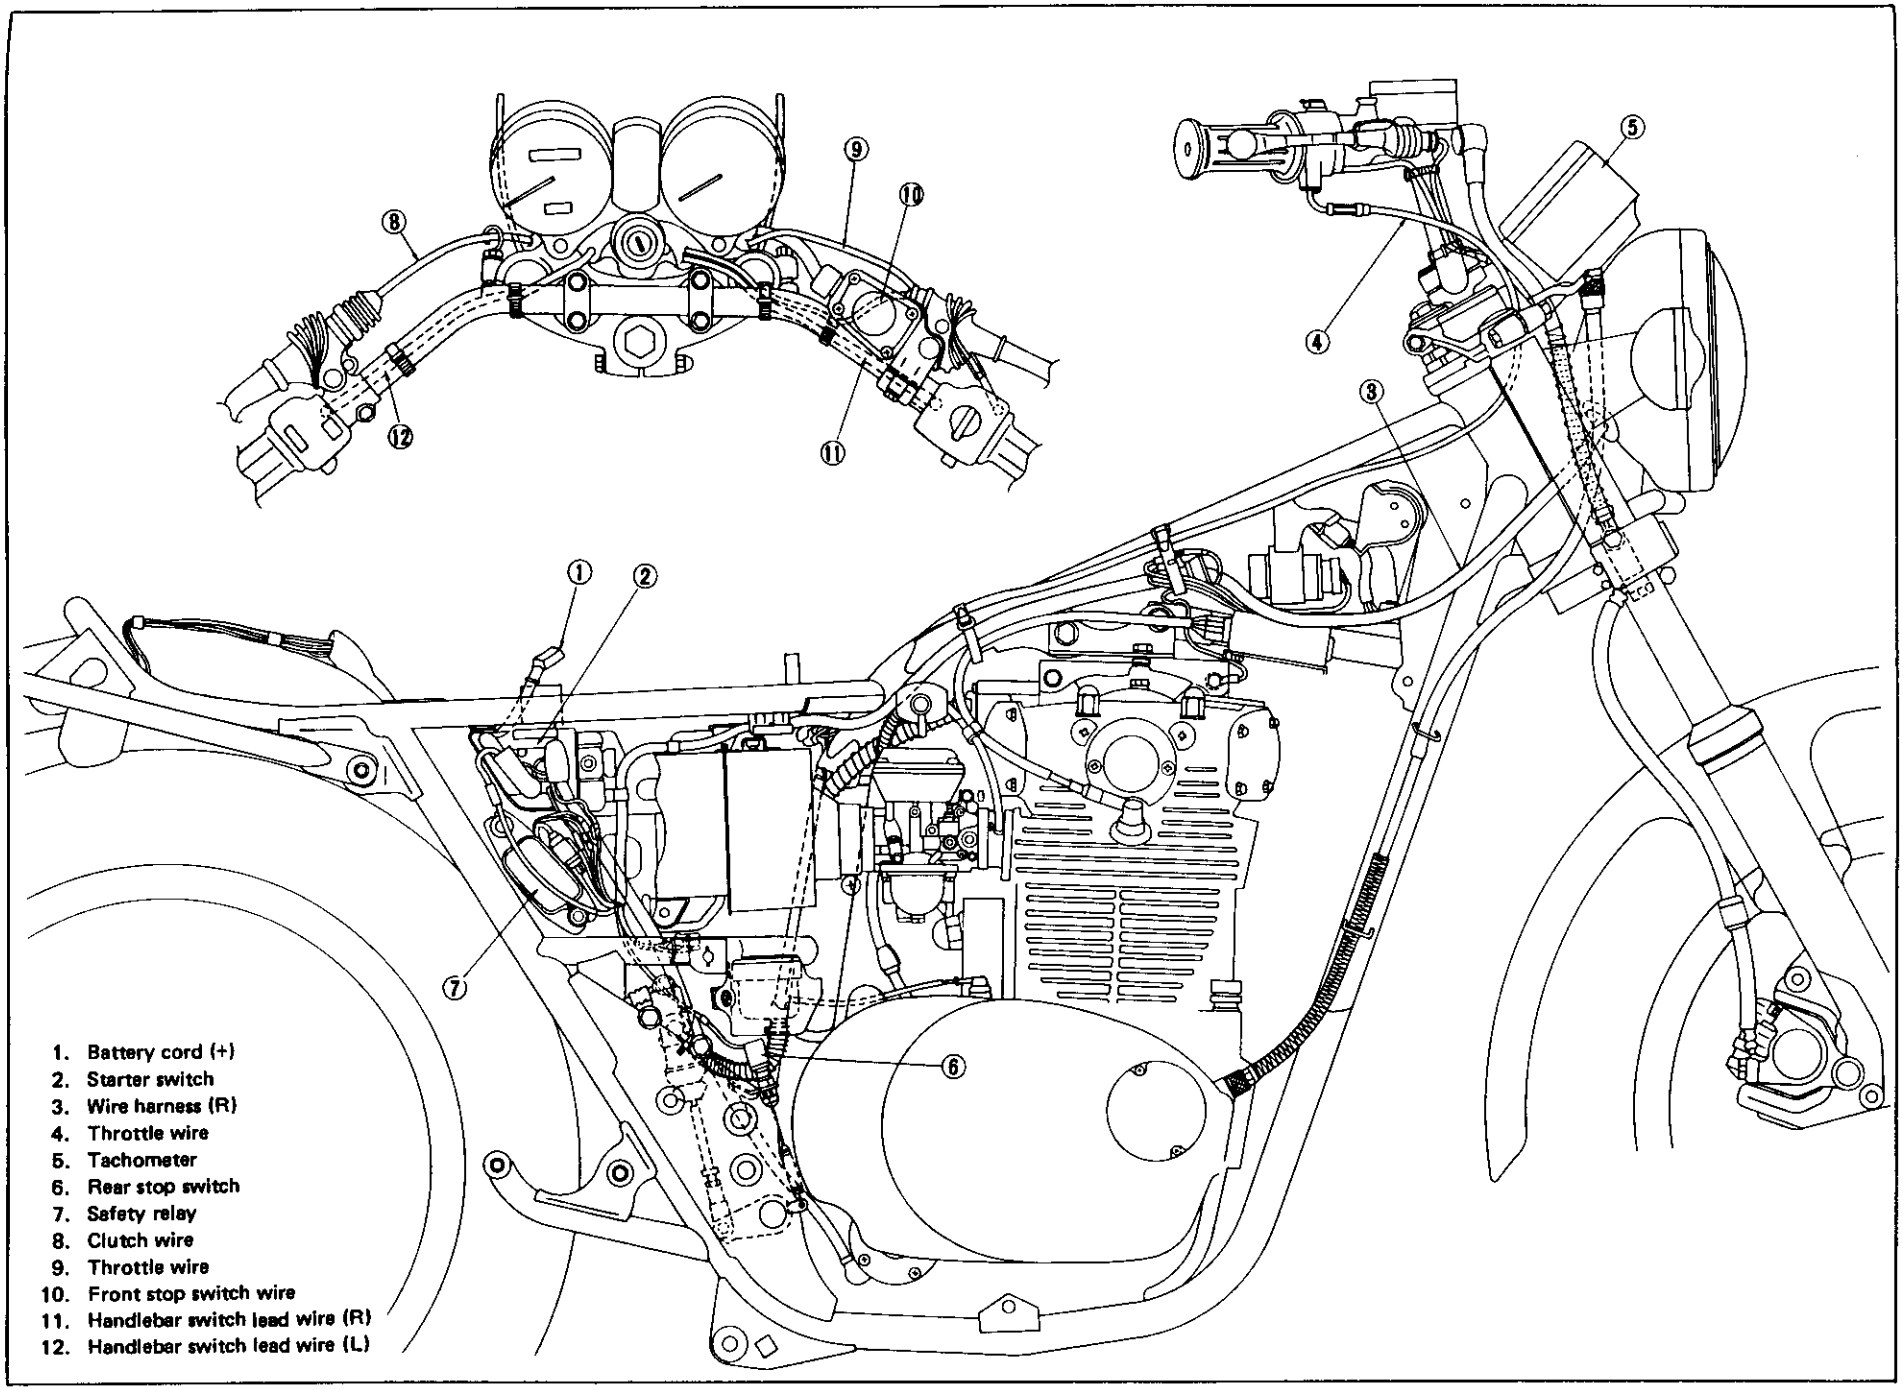
1. Battery cord (+)
2. Starter switch
3. Wire harness (R)
4. Throttle wire
5. Tachometer
6. Rear stop switch
7. Safety relay
8. Clutch wire
9. Throttle wire
10. Front stop switch wire
11. Handlebar switch lead wire (R)
12. Handlebar switch lead wire (L)

7-5 WIRING DIAGRAM

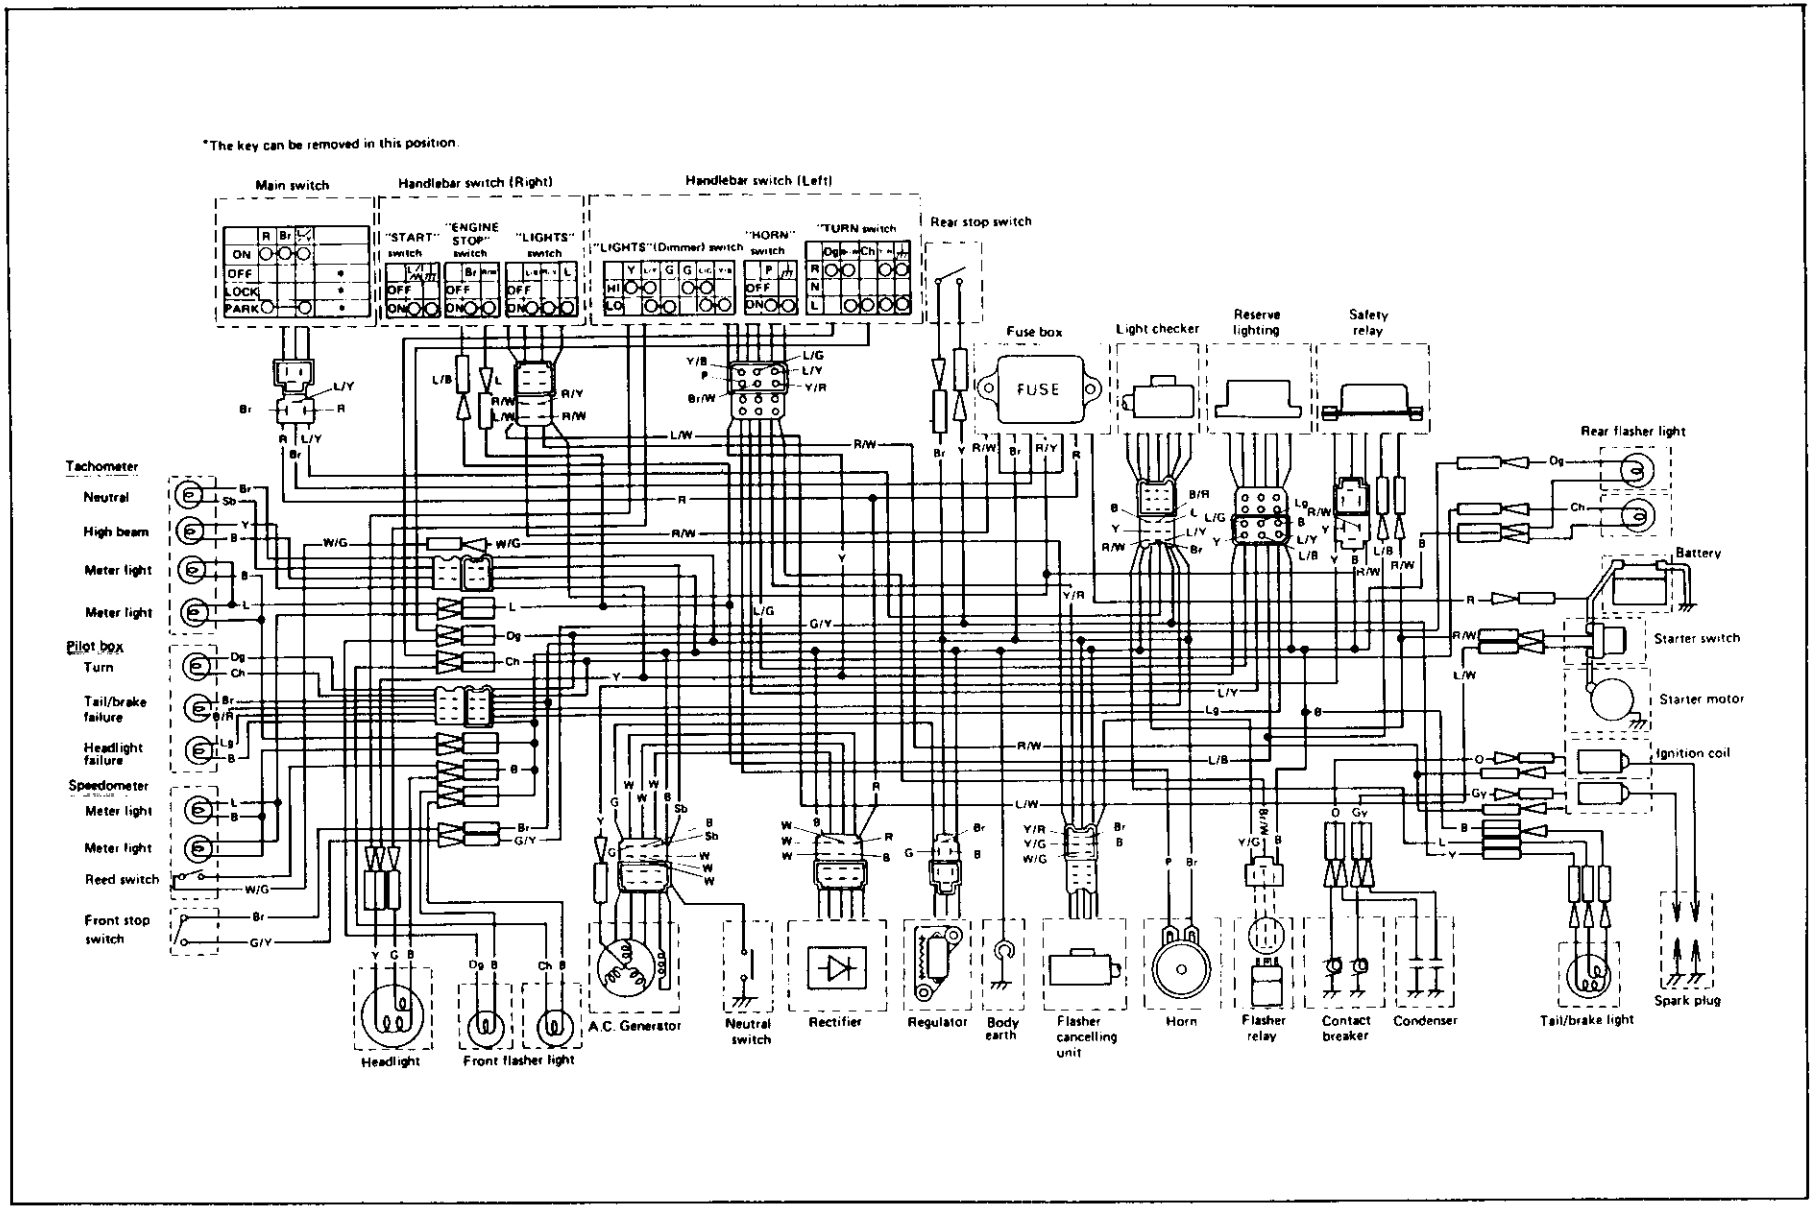

COLOR CODE

R	Red	L/W	Blue/White
Br	Brown	R/W	Red/White
L	Blue	L/B	Blue/Black
Y	Yellow	L/Y	Blue/Yellow
G	Green	L/G	Blue/Green
P	Pink	Y/B	Yellow/Black
B	Black	Br/W	Brown/White
Dg	Dark green	Y/R	Yellow/Red
Ch	Chocolate	L/R	Blue/Red
Sb	Sky blue	W/B	White/Black
W	White	G/W	Green/White
Gy	Gray	W/G	White/Green
O	Orange	G/Y	Green/Yellow
Lg	Light green	Y/G	Yellow/Green
R/Y	Red/Yellow		

