YAMAHA


GENUINE

PARTS CATALOGUE

MOTORCYCLE


A1

CYLINDER HEAD

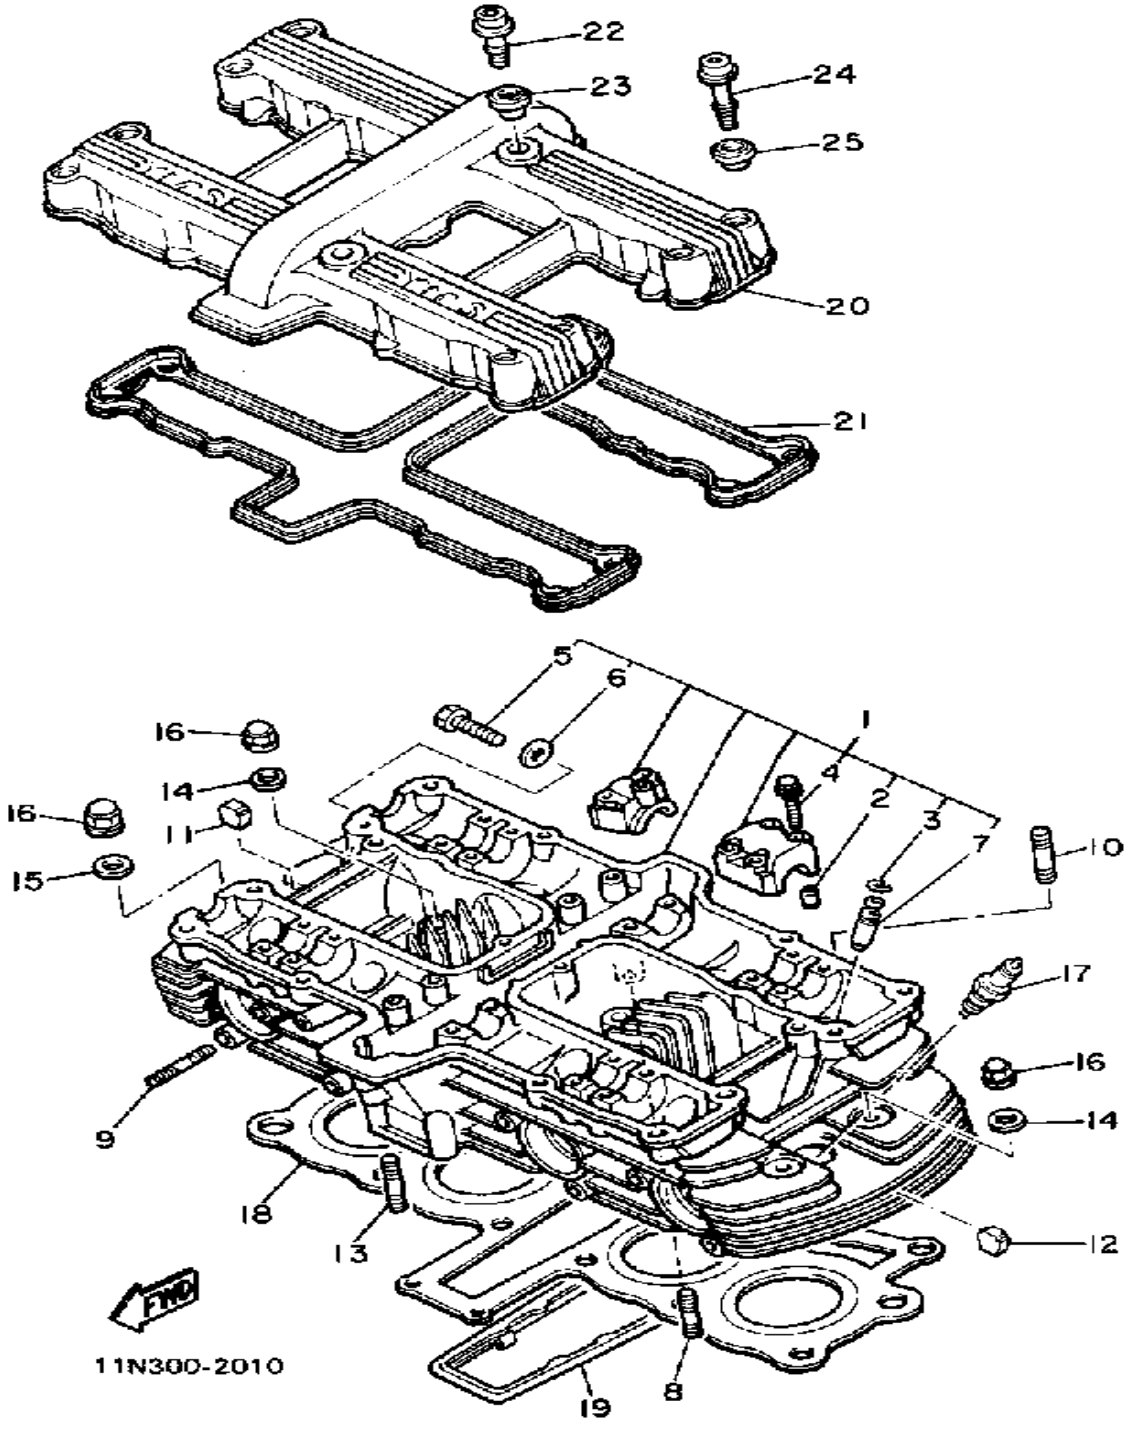


Ref. No.	Part Number	Description	Qty	Remarks
1	5G2-11101-00-00	CYLINDER HEAD ASSEMBLY .	1	
2	99510-08016-00	. PIN, DOWEL	12	
3	93440-12052-00	. CIRCLIP	8	
4	90105-06153-00	. BOLT, WASHER BASED	24	
5	90153-06045-00	. SCREW, HEXAGON	1	
6	90430-06014-00	. GASKET	1	
7	4H7-11133-10-00	. GUIDE, INTAKE VALVE	8	
8	95612-06625-00	BOLT, STUD	2	
9	95611-06630-00	BOLT, STUD	8	
10	95611-08330-00	BOLT, STUD	2	
11	434-11161-00-00	ABSORBER 1	8	
12	4H7-11161-00-00	ABSORBER 1	14	
13	95611-06630-00	BOLT, STUD	2	
14	90201-10131-00	WASHER, PLATE	10	
15	90201-10128-00	WASHER, PLATE	2	
16	90176-10049-00	NUT, CROWN	12	
17	NGK-BP7ES-00-00	PLUG, SPARK (NGK BP-7ES) .	4	
18	5G2-11181-00-00	GASKET, CYLINDER HEAD 1 .	1	
19	5G2-11355-00-00	SEAL, CYLINDER 1	1	
20	5G2-11191-10-00	COVER, CYLINDER.HEAD 1 . .	1	
21	5G2-11193-00-00	GASKET, HD.COVER 1	1	
22	90109-06604-00	BOLT	4	
23	4G0-1111G-00-00	RUBBER, MOUNT 1	4	
24	90109-06605-00	BOLT	8	
25	4U8-1112G-00-00	RUBBER, MOUNT 2	8	

CYLINDER

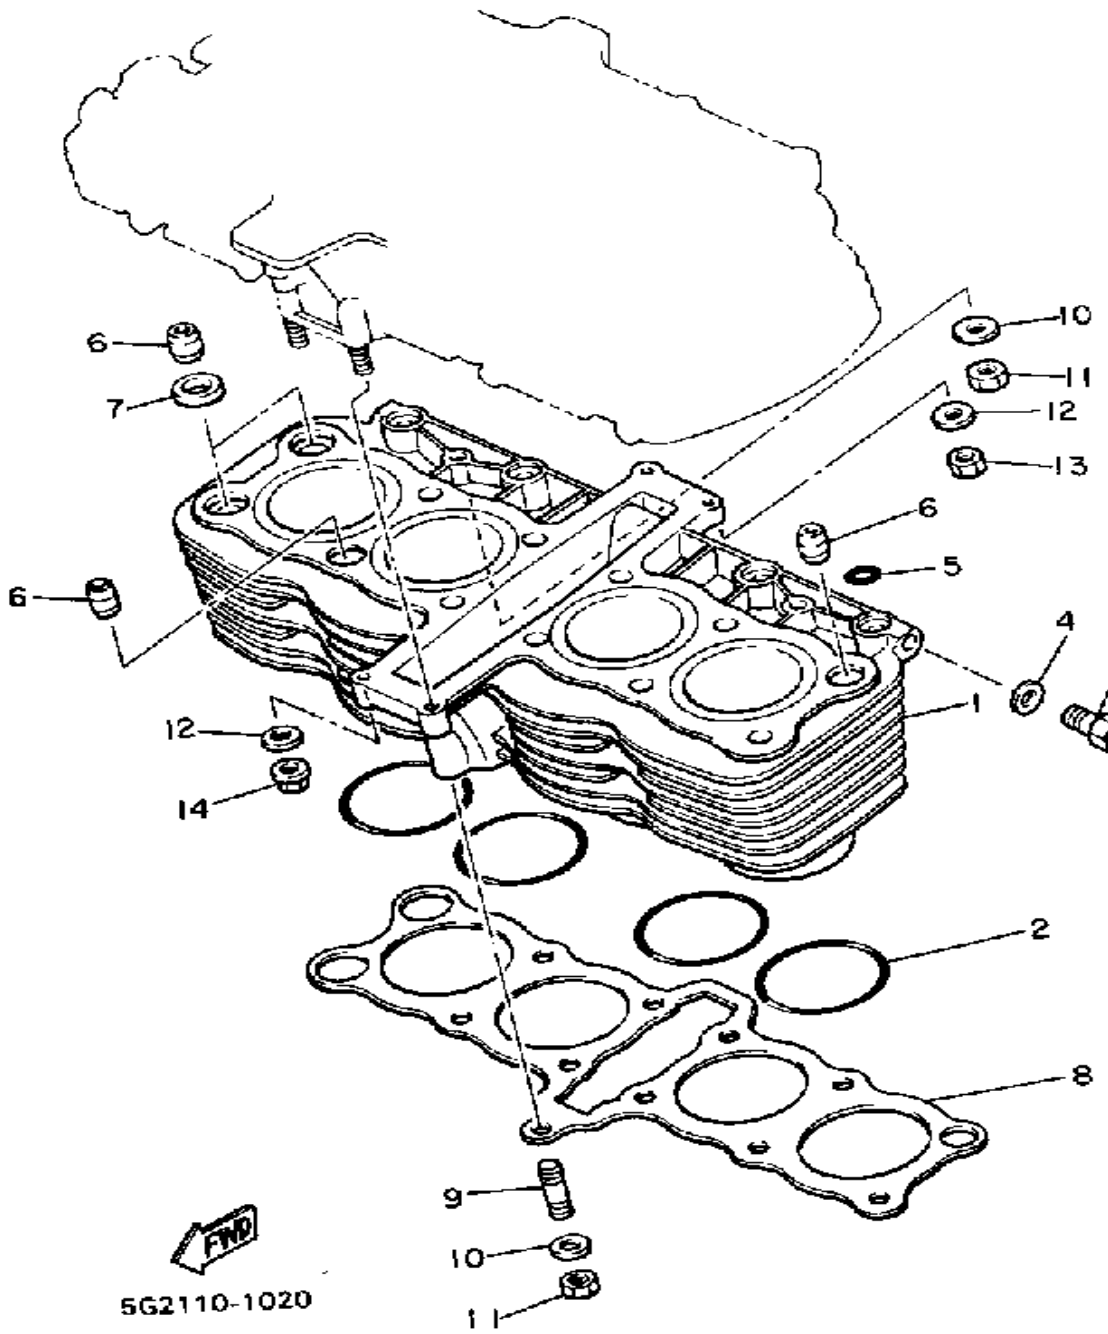

Ref. No.	Part Number	Description	Qty	Remarks
1	5G2-11310-10-00	CYLINDER	1	
2	93210-71462-00	O-RING	4	
3	90340-12065-00	PLUG, STRAIGHT SCRW	2	
4	90201-12790-00	WASHER, PLATE	2	
5	93210-09443-00	O-RING	4	
6	99530-14016-00	PIN, DOWEL	4	
7	90430-14131-00	GASKET	2	
8	4BB-11351-00-00	GASKET, CYLINDER (5G2-11351-00)	1	
9	95611-08330-00	BOLT, STUD	1	
10	90201-084G3-00	WASHER, PLATE	3	
11	95333-08600-00	NUT	3	
12	92901-06600-00	WASHER	4	
13	95311-06600-00	NUT	2	
14	90179-06499-00	NUT	2	

CRANKSHAFT-PISTON

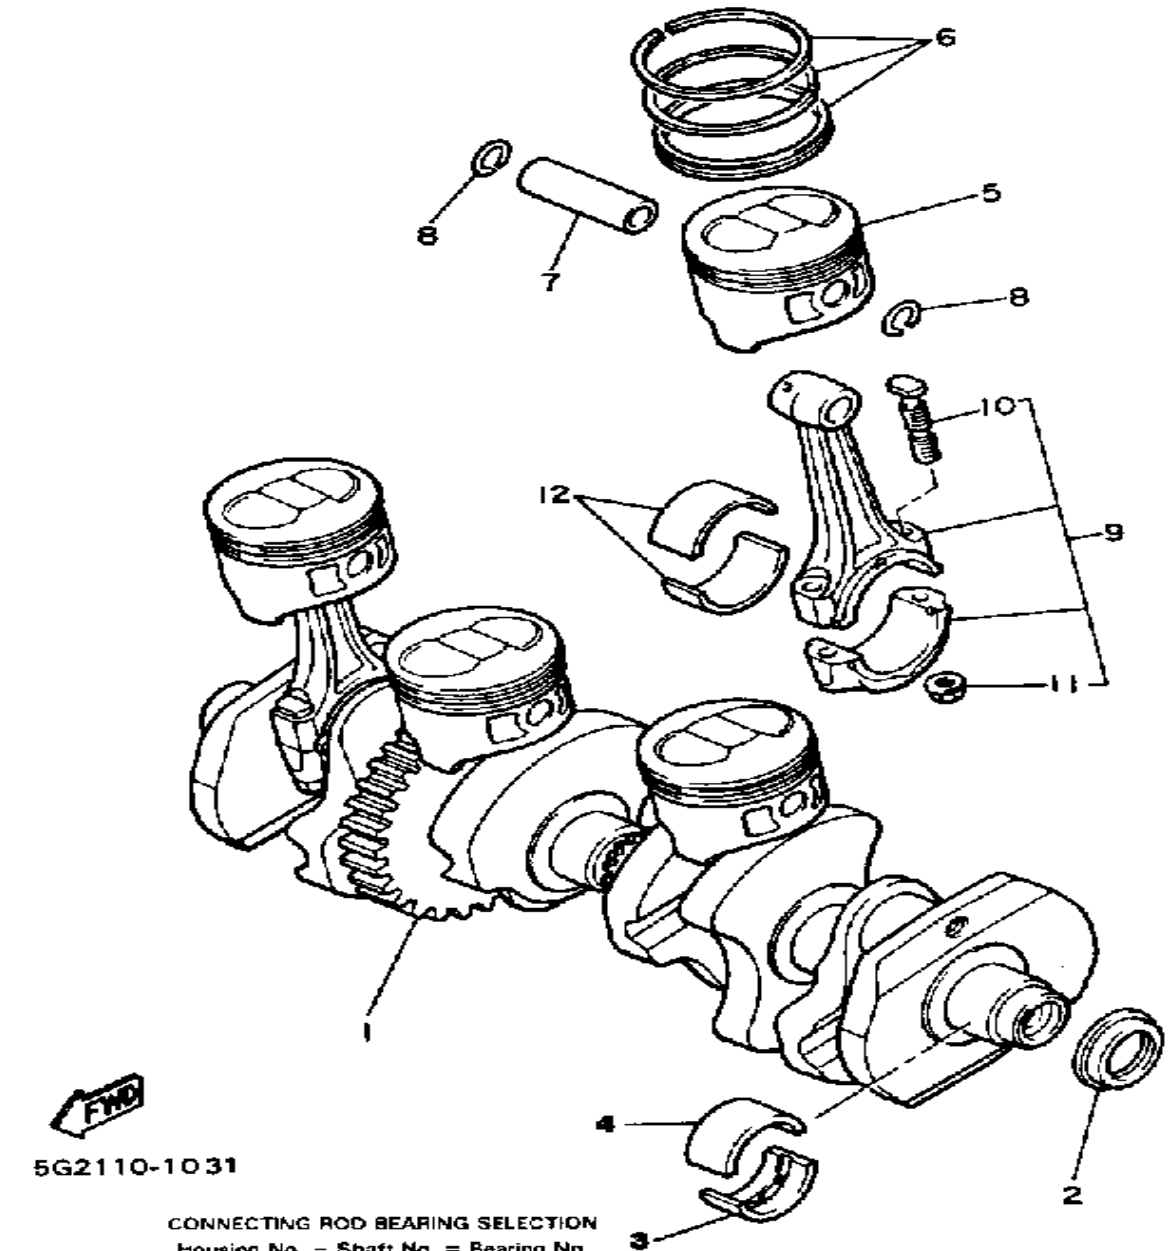

5G2110-1031

CONNECTING ROD BEARING SELECTION
Housing No. – Shaft No. = Bearing No.


BEARING No.	PART No	COLOUR
BEARING 1	4X7-11656-00	BLUE
BEARING 2	4X7-11656-10	BLACK
BEARING 3	4X7-11656-20	BROWN
BEARING 4	4X7-11656-30	GREEN
BEARING 5	4X7-11650-40	YELLOW

Ref. No.	Part Number	Description	Qty	Remarks
1	5G2-11411-00-00	CRANKSHAFT	1	
2	93101-32144-00	OIL SEAL	1	
3	4H7-11416-01-00	PLANE BRNG, CRSF 1	5	
	4H7-11416-11-00	PLANE BRNG, CRSF 1	5	
	4H7-11416-21-00	PLANE BRNG, CRSF 1	5	
	4H7-11416-31-00	PLANE BRNG, CRSF 1	5	
	4H7-11416-41-00	PLANE BRNG, CRSF 1	5	
4	5G2-11418-00-00	PLANE BRNG, CRSF 3	5	
	5G2-11418-10-00	PLANE BRNG, CRSF 3	5	
	5G2-11418-20-00	PLANE BRNG, CRSF 3	5	
	5G2-11418-30-00	PLANE BRNG, CRSF 3	5	
	5G2-11418-40-00	PLANE BRNG, CRSF 3	5	
5	5G2-11631-00-00	PISTON STD (STD)	4	U.R.
	5G2-11636-00-00	PISTON 2 O/S 0.50 (2ND O/S 0.50MM)	4	ALTERNATE PART
	5G2-11638-00-00	PISTON 4 O/S 1.00 (4TH O/S 1.00MM)	4	ALT. PART
6	5G2-11610-00-00	PISTON RINGSET STD (STD)	4	U.R.
	5G2-11610-20-00	PISTON RINGSET 2ND (2ND O/S)	4	ALTERNATE PART
	5G2-11610-40-00	PISTON RINGSET 4TH (4TH O/S)	4	ALTERNATE PART
7	4H7-11633-00-00	PIN, PISTON	4	
8	93450-17044-00	CIRCLIP	8	
9	5G2-11650-00-00	CONNECTING ROD ASSEMBLY	4	
10	4H7-11654-00-00	. BOLT, CONNECTING ROD	2	
11	90179-07307-00	. NUT	2	
12	5G2-11656-00-00	PLANE BRNG, CON RODCONNECTING ROD	8	
	5G2-11656-10-00	PLANE BRNG, CON RODCONNECTING ROD	8	

CONTINUED ON NEXT FRAME ➤

CRANKSHAFT-PISTON

Ref. No.	Part Number	Description	Qty	Remarks
12	5G2-11656-20-00	PLANE BRNG, CON RODCONNECTING ROD	8	
	5G2-11656-30-00	PLANE BRNG, CON RODCONNECTING ROD	8	

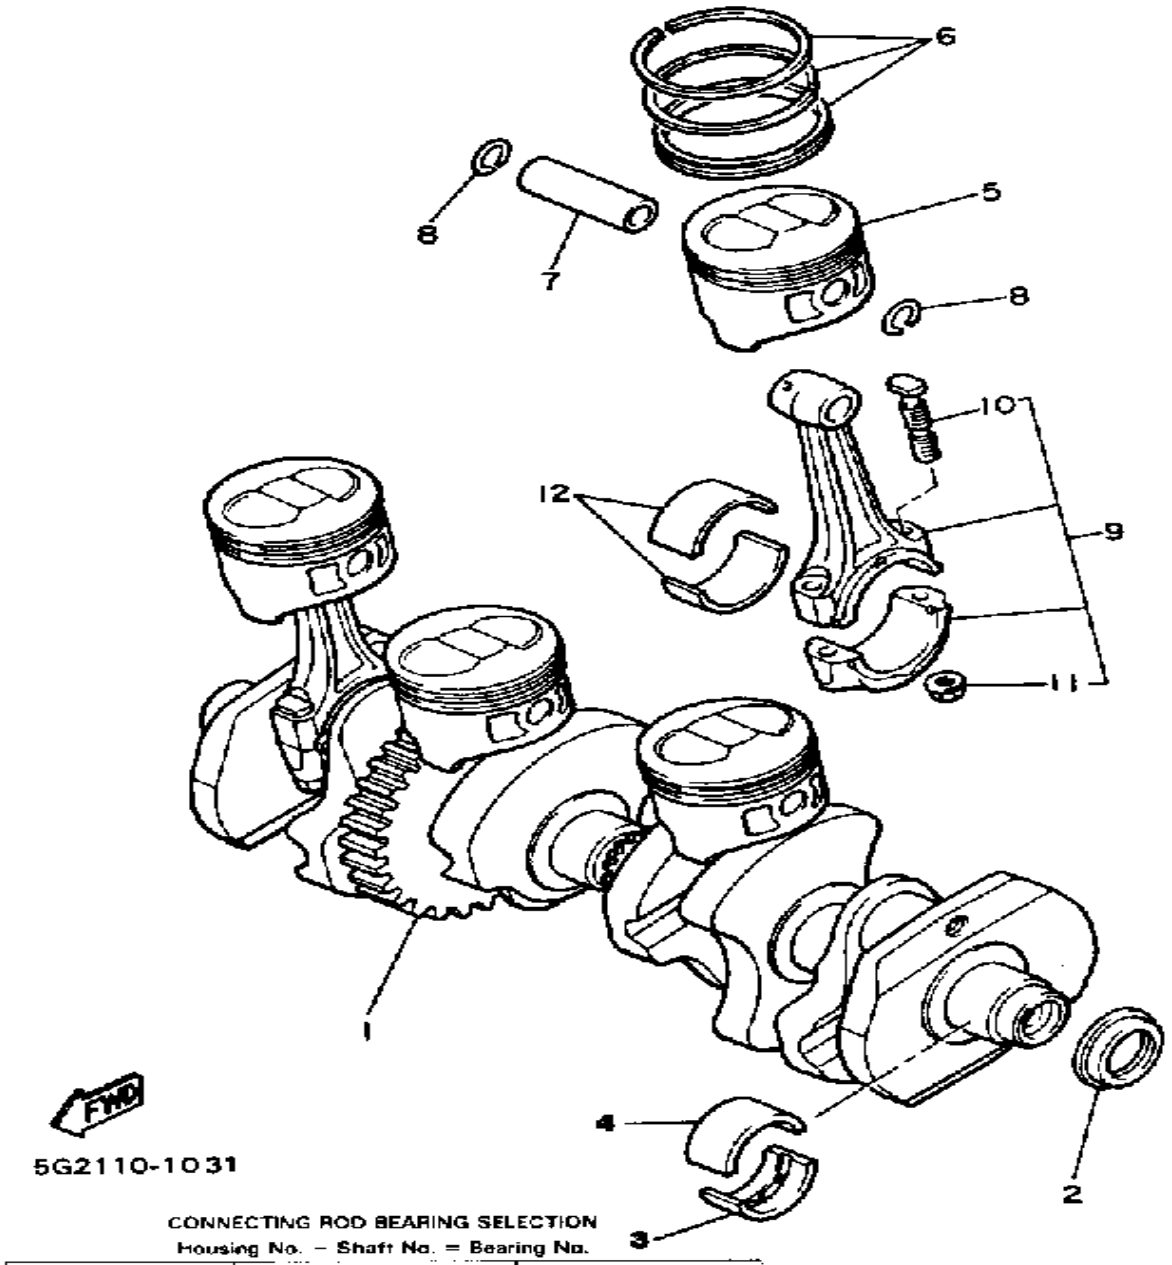


5G2110-1031

CONNECTING ROD BEARING SELECTION
Housing No. – Shaft No. = Bearing No.


BEARING No.	PART No	COLOUR
BEARING 1	4X7-11656-00	BLUE
BEARING 2	4X7-11656-10	BLACK
BEARING 3	4X7-11656-20	BROWN
BEARING 4	4X7-11656-30	GREEN
BEARING 5	4X7-11650-40	YELLOW

CAMSHAFT-CHAIN

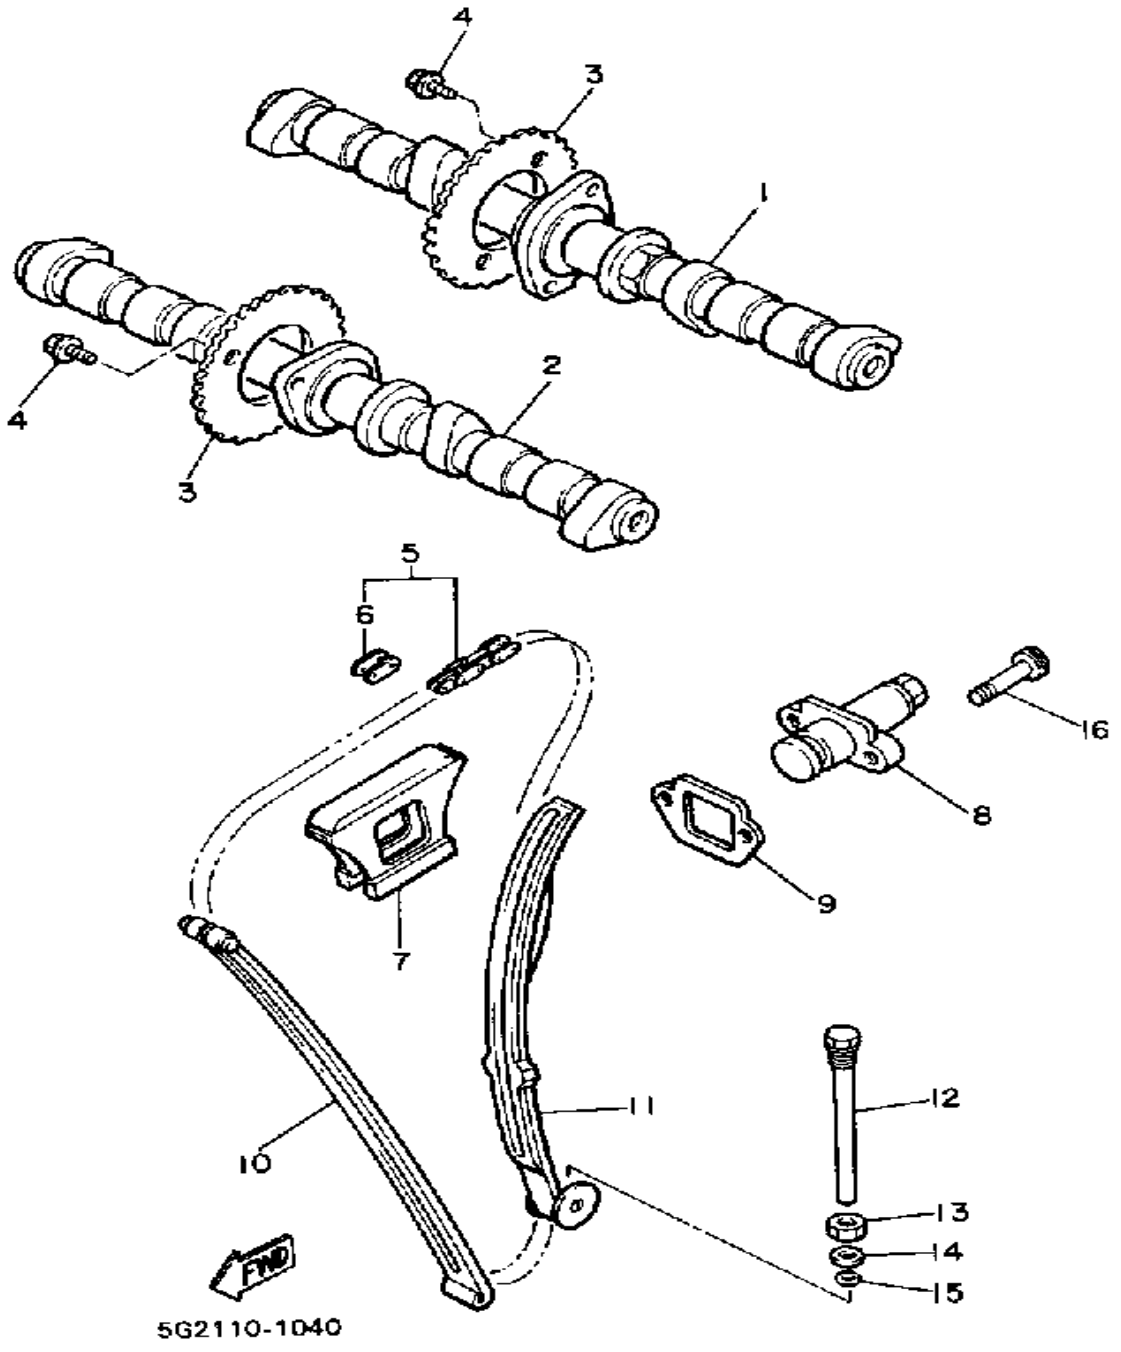


Ref. No.	Part Number	Description	Qty	Remarks
1	4K0-12171-00-00	CAMSHAFT 1	1	
2	4K0-12181-00-00	CAMSHAFT 2	1	
3	4G0-12176-01-00	SPROCKET, CAM CHAIN (4G0-12176-00) (32T)	2	
4	90105-07087-00	BOLT, WASHER BASED	4	
5	94500-02120-00	CHAIN (BF05M-120L)	1	
6	94600-02001-00	. JOINT, CHAIN (BF05M)	1	
7	4H7-12241-00-00	GUIDE, STOPPER 2	1	
8	5G2-12210-02-00	TENSNR ASSEMBLY, CAMCHN	1	
9	3YX-12213-00-00	GASKET, TENSNR CASE (5G2-12213-00)	1	
10	4H7-12251-00-00	DAMPER, CHAIN 1	1	
11	4H7-12252-00-00	DAMPER, CHAIN 2	1	
12	90109-10570-00	BOLT	1	
13	95303-10700-00	NUT	1	
14	92901-08600-00	WASHER	1	
15	93210-08006-00	O-RING	1	
16	91316-06025-00	BOLT	2	

VALVE

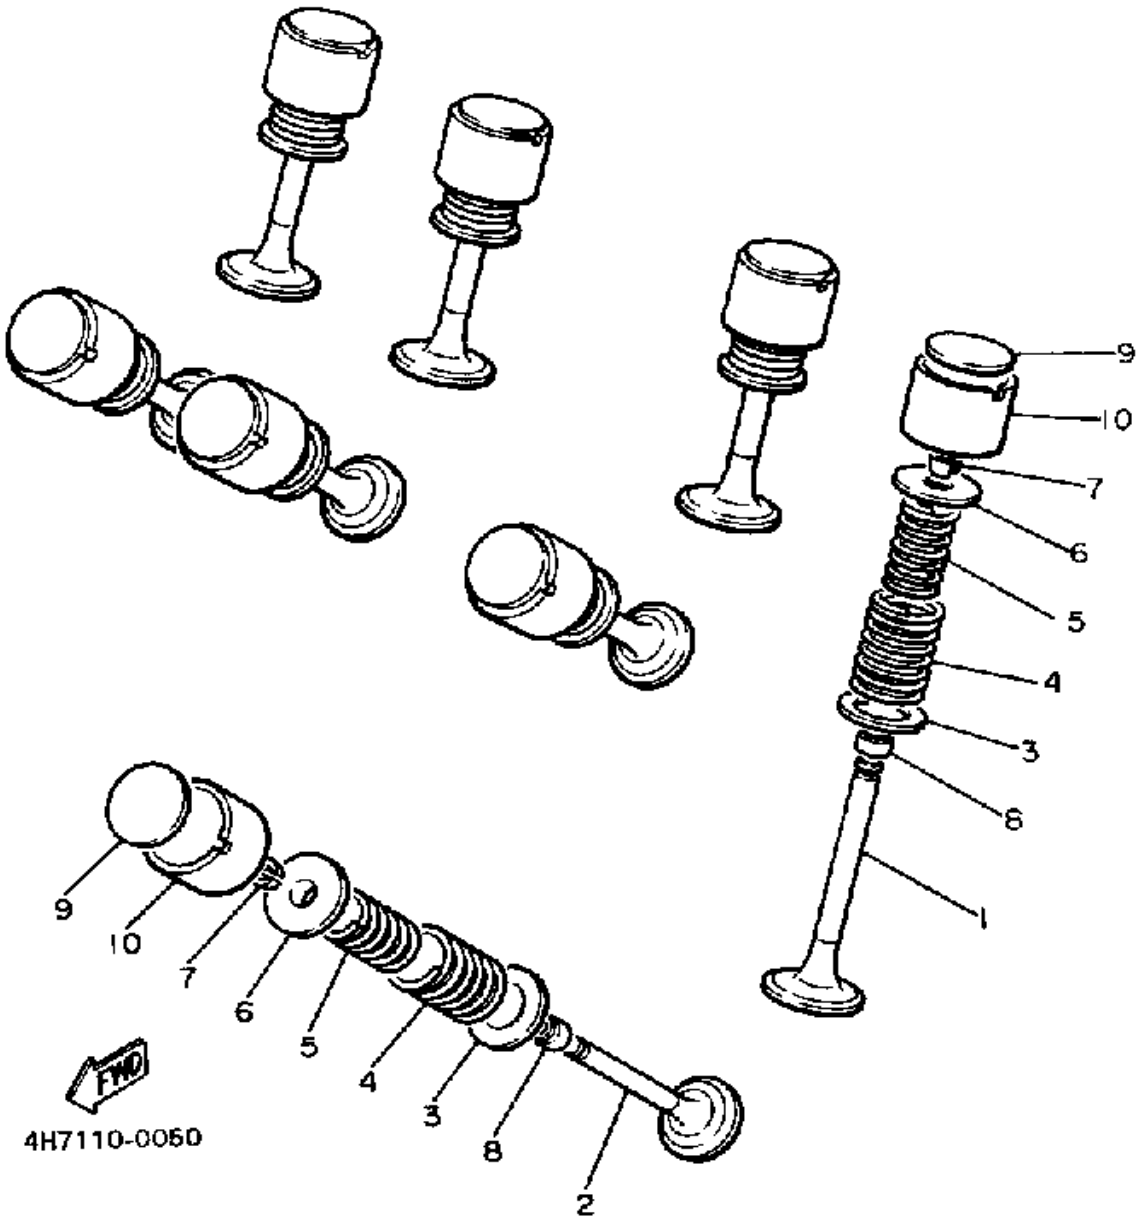

Ref. No.	Part Number	Description	Qty	Remarks
1	4H7-12111-00-00	VALVE, INTAKE	4	
2	4H7-12121-00-00	VALVE, EXHAUST	4	
3	4H7-12116-00-00	SEAT, VALVE SPRING	8	
4	4H7-12114-00-00	SPRING, VALVE OUTER	8	
5	4H7-12113-00-00	SPRING, VALVE INNER	8	
6	2F3-12117-00-00	RETAINER, VALVE SPRING	8	
7	1J7-12118-00-00	COTTER, VALVE	16	
8	1J7-12119-01-00	SEAL, VALVE STEM	8	
9	1J7-12169-01-00	PAD, ADJUSTING 2.00 (2.00)	8	U.R.
	1J7-12169-11-00	PAD, ADJUSTING 2.05 (2.05)	8	U.R.
	1J7-12169-21-00	PAD, ADJUSTING 2.10 (2.10)	8	U.R.
	1J7-12169-31-00	PAD, ADJUSTING 2.15 (2.15)	8	U.R.
	1J7-12169-41-00	PAD, ADJUSTING 2.20 (2.20)	8	U.R.
	1J7-12169-51-00	PAD, ADJUSTING 2.25 (2.25)	8	U.R.
	1J7-12169-61-00	PAD, ADJUSTING 2.30 (2.30)	8	U.R.
	1J7-12169-71-00	PAD, ADJUSTING 2.35 (2.35)	8	U.R.
	1J7-12169-81-00	PAD, ADJUSTING 2.40 (2.40)	8	U.R.
	1J7-12169-91-00	PAD, ADJUSTING 2.45 (2.45)	8	U.R.
	1J7-12169-A1-00	PAD, ADJUSTING 2.50 (2.50)	8	U.R.
	1J7-12169-E1-00	PAD, ADJUSTING 2.55 (2.55)	8	U.R.
	1J7-12169-F1-00	PAD, ADJUSTING 2.60 (2.60)	8	U.R.
	1J7-12169-G1-00	PAD, ADJUSTING 2.65 (2.65)	8	U.R.
	1J7-12169-H1-00	PAD, ADJUSTING 2.70 (2.70)	8	U.R.
	1J7-12169-J1-00	PAD, ADJUSTING 2.75 (2.75)	8	U.R.
	1J7-12169-K1-00	PAD, ADJUSTING 2.80 (2.80)	8	U.R.
	1J7-12169-L1-00	PAD, ADJUSTING 2.85 (2.85)	8	U.R.
	1J7-12169-M1-00	PAD, ADJUSTING 2.90 (2.90)	8	U.R.
	1J7-12169-N1-00	PAD, ADJUSTING 2.95 (2.95)	8	U.R.
	1J7-12169-R1-00	PAD, ADJUSTING 3.00 (3.00)	8	U.R.


CONTINUED ON NEXT FRAME ➤

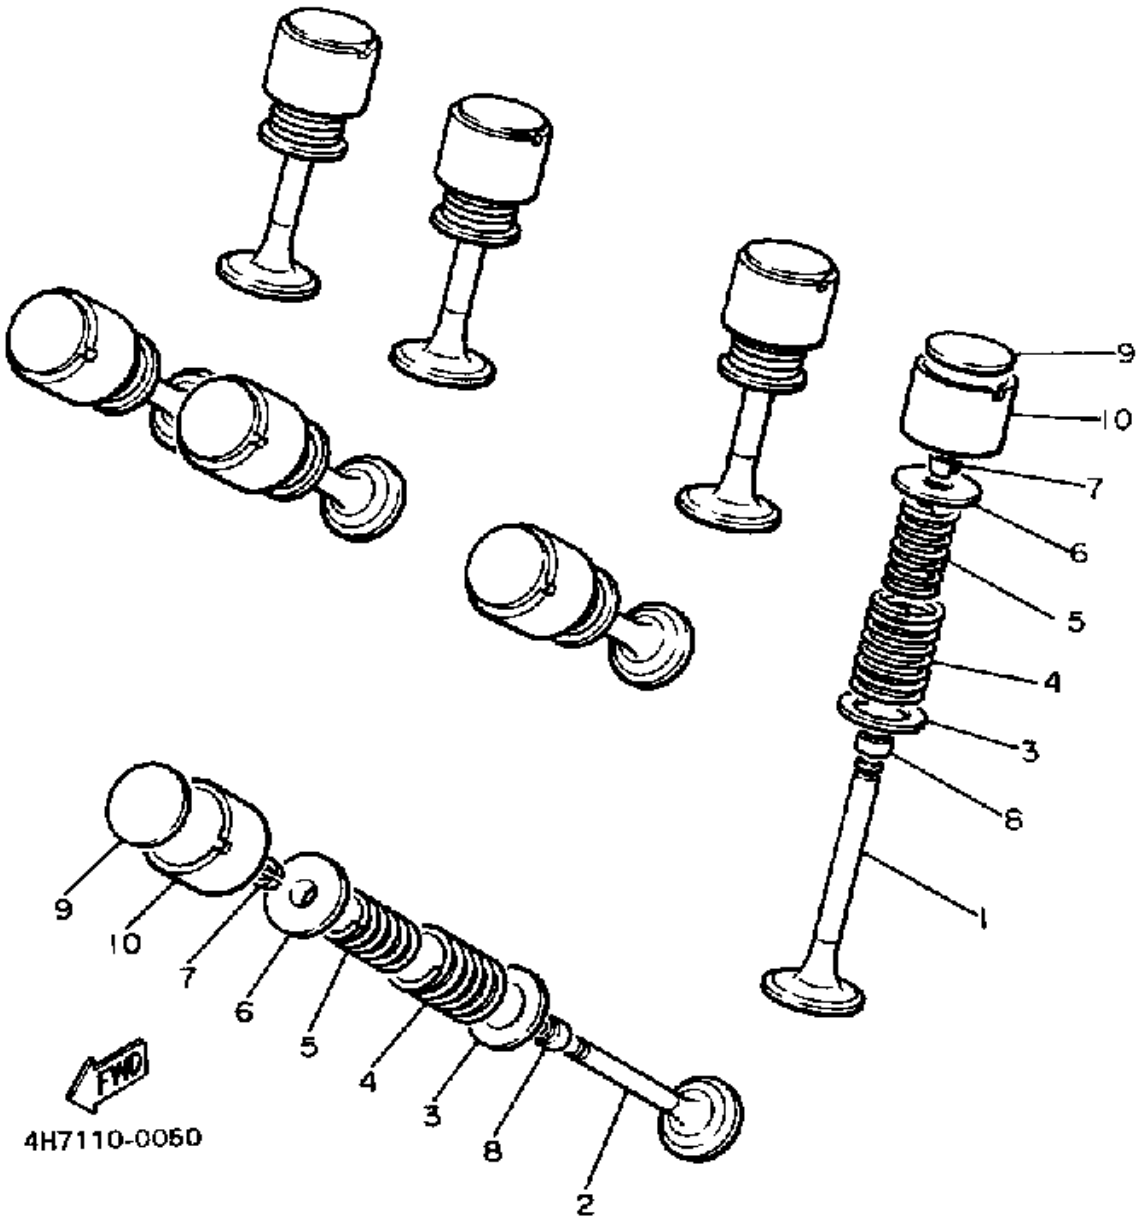

VALVE


Ref. No.	Part Number	Description	Qty	Remarks
9	1J7-12169-T1-00	PAD, ADJUSTING 3.05 (3.05) . .	8	U.R.
	1J7-12169-U1-00	PAD, ADJUSTING 3.10 (3.10) . .	8	U.R.
	1J7-12169-V1-00	PAD, ADJUSTING 3.15 (3.15) . .	8	U.R.
	1J7-12169-W1-00	PAD, ADJUSTING 3.20 (3.20) . .	8	U.R.
10	31A-12153-00-E0	LIFTER, VALVE (4H7-12153-01)	8	

OIL PUMP

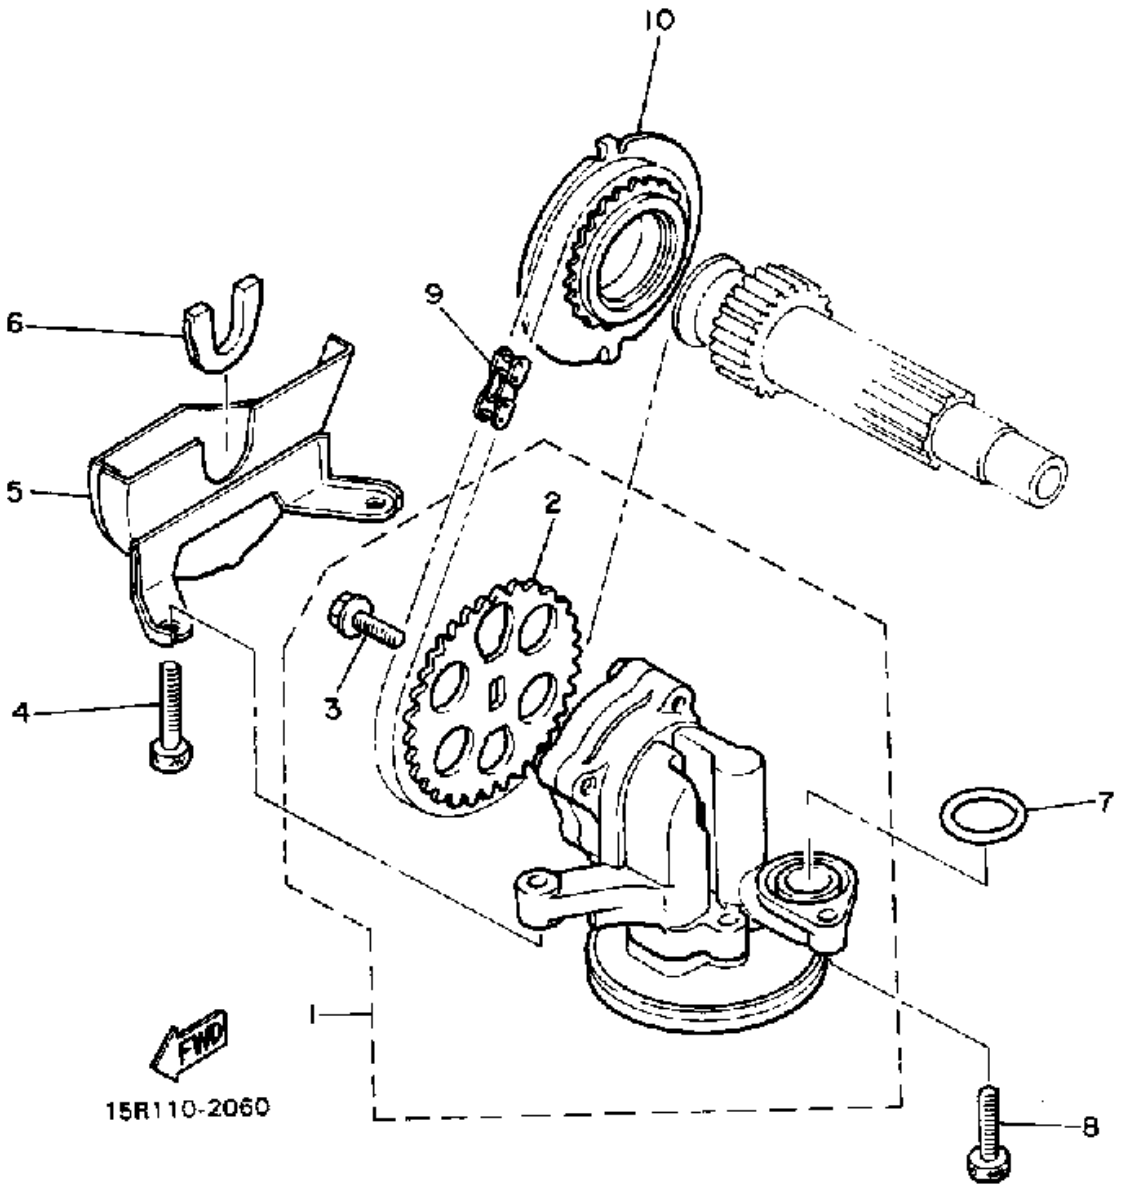

Ref. No.	Part Number	Description	Qty	Remarks
1	5G2-13300-00-00	OIL PUMP ASSEMBLY	1	
2	5G2-13355-00-00	. SPROCKET, DRIVEN	1	
3	90105-06154-00	. BOLT, WASHER BASED	1	
4	90110-06035-00	BOLT, HEXAGON SOCKET HEAD	2	
5	4H7-13327-00-00	COVER, PUMP GEAR	1	
6	4H7-13328-00-00	GROMMET, GEAR COVER . . .	1	
7	93210-18319-00	O-RING	1	
8	91316-06025-00	BOLT	1	
9	94580-25062-00	CHAIN	1	
10	4H7-13354-00-00	SPROCKET, DRIVE	1	


OIL FILTER

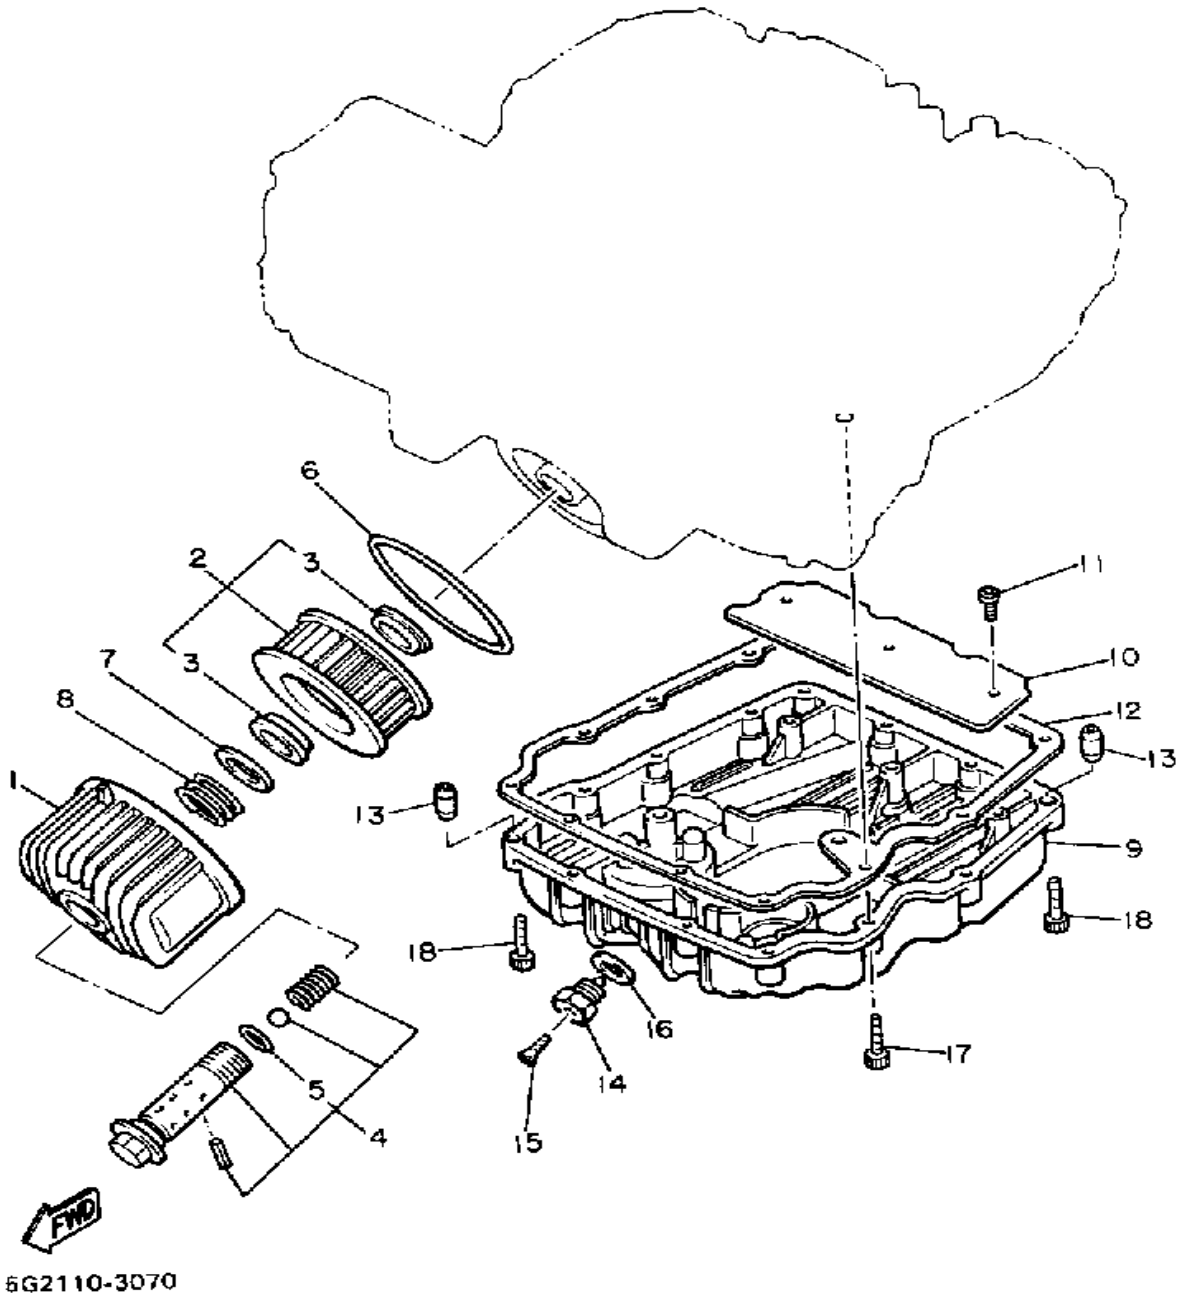

5G2110-3070


Ref. No.	Part Number	Description	Qty	Remarks
1	4H7-13447-00-00	COVER, OIL ELEMENT	1	
2	1L9-13441-11-00	ELEMENT, OIL CLNR	1	
3	90480-23193-00	. GROMMET	2	
4	1L9-13340-01-00	BY-PASS VALVE ASSEMBLY	1	
5	93210-16629-00	. O-RING	1	
6	93210-87723-00	O-RING	1	
7	90201-21608-00	WASHER, PLATE	1	
8	90501-20422-00	SPRING, COMPRESSION	1	
9	4H7-13417-03-00	COVER, STRAINER (4H7-13417-02)	1	
10	4H7-13337-00-00	PLATE, BAFFLE LOWER	1	
11	98580-06010-00	SCREW, PAN HEAD (92503-06010)	3	
12	4BB-13414-00-00	GASKET, STRNR COVER	1	
13	99510-08016-00	PIN, DOWEL	2	
14	3VD-13455-00-00	PLUG	1	
15	98901-06008-00	SCREW, BIND	1	
16	214-11198-01-00	GASKET	1	
17	90110-06138-00	BOLT, HEX SKT HEAD	11	
18	91316-06040-00	BOLT, SOCKET HEAD	2	

AIR CLEANER

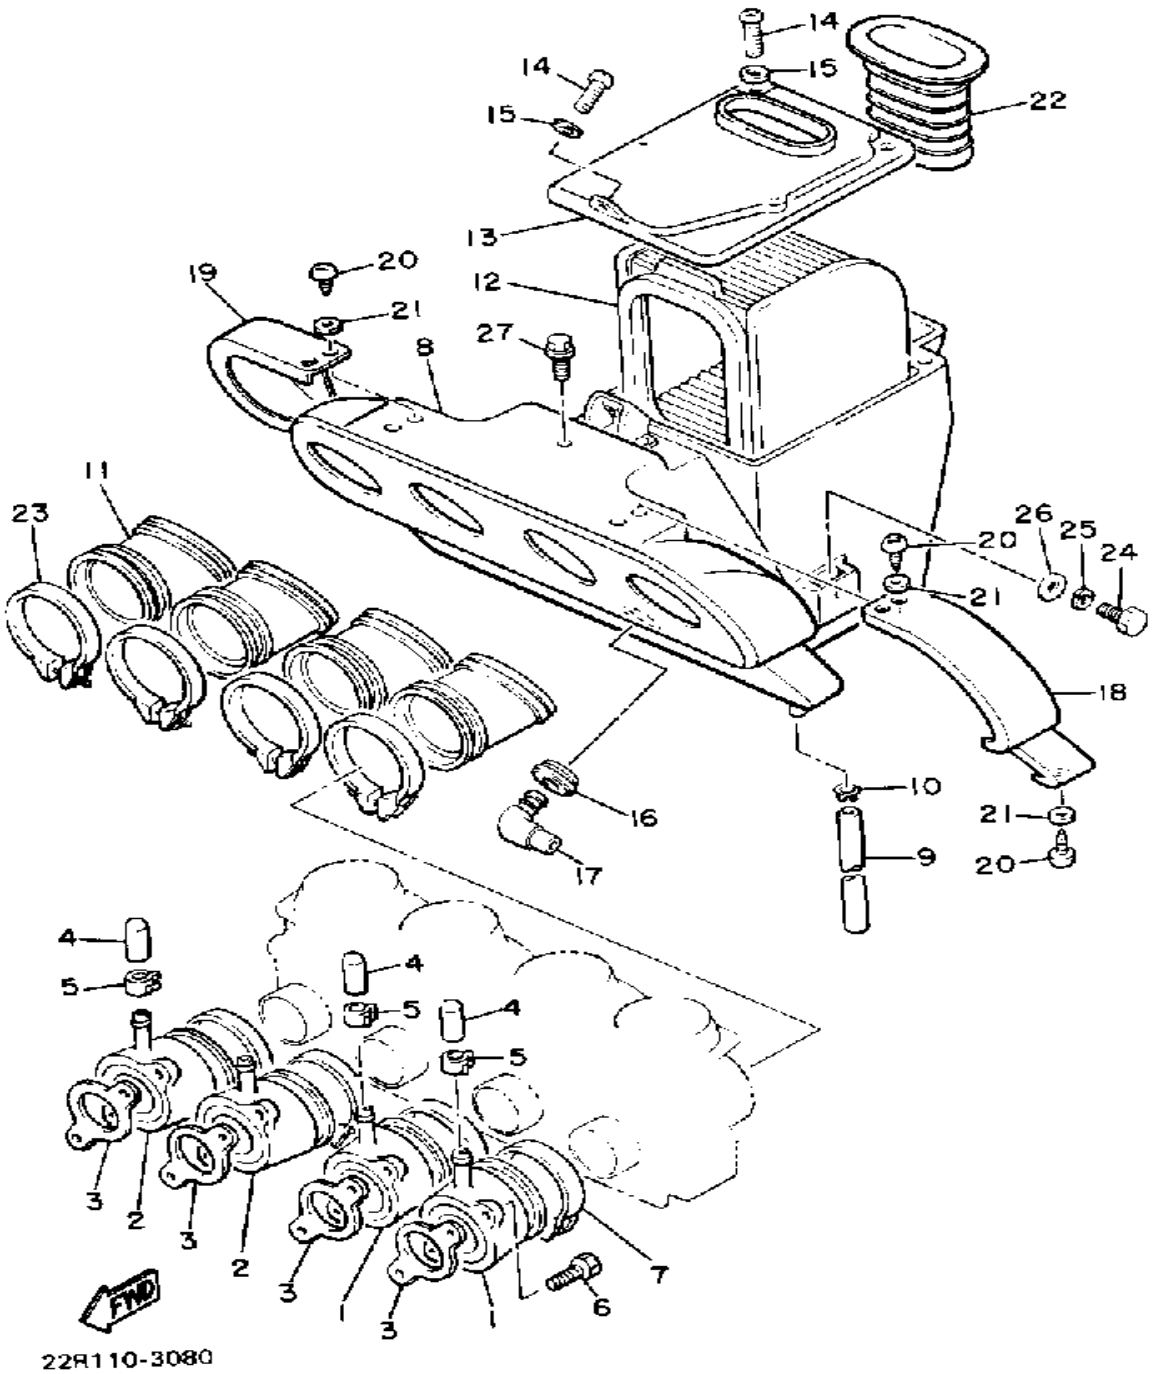

Ref. No.	Part Number	Description	Qty	Remarks
1	5G2-13586-02-00	JOINT, CARBURETOR 1 (5G2-13586-01)	2	
2	5G2-13596-01-00	JOINT, CARBURETOR 2 (5G2-13596-00)	2	
3	4H7-13556-01-00	GASKET, MANIFOLD	4	
4	16G-13569-00-00	PLUG, BLIND	3	
5	90467-10039-00	CLIP	3	
6	91316-06020-00	BOLT, SOCKET HEAD	8	
7	90460-49248-00	CLAMP, HOSE (1)	4	
8	5G2-14401-00-00	AIR CLNR CASE ASSEMBLY	1	
9	90445-11182-00	HOSE	1	
10	90467-09006-00	CLIP	1	
11	5G2-14453-00-00	JOINT, AIR CLNR 1	4	
12	4H7-14451-00-00	ELEMENT, AIR CLNR	1	
13	5G2-14412-00-00	CAP, CLEANER CASE 1	1	
14	98580-06012-00	SCREW, PAN HEAD	3	
15	92901-06600-00	WASHER	3	
16	90480-16278-00	GROMMET	1	
17	4H7-14419-00-00	PIPE	1	
18	15R-1441A-00-00	COVER, CLNR CASE 1	1	
19	15R-1441E-00-00	COVER, CLNR CASE 2	1	
20	90167-05006-00	SCREW, TAPPING	6	
21	92906-05200-00	WASHER, PLAIN	6	
22	5G2-14437-00-00	DUCT	1	
23	90460-56105-00	CLAMP, HOSE	4	
24	97001-06018-00	BOLT	1	
25	92995-06100-00	WASHER, SPRING	1	
26	90201-06067-00	WASHER, PLATE	1	
27	90119-06029-00	BOLT, WITH WASHER	1	

CARBURETOR

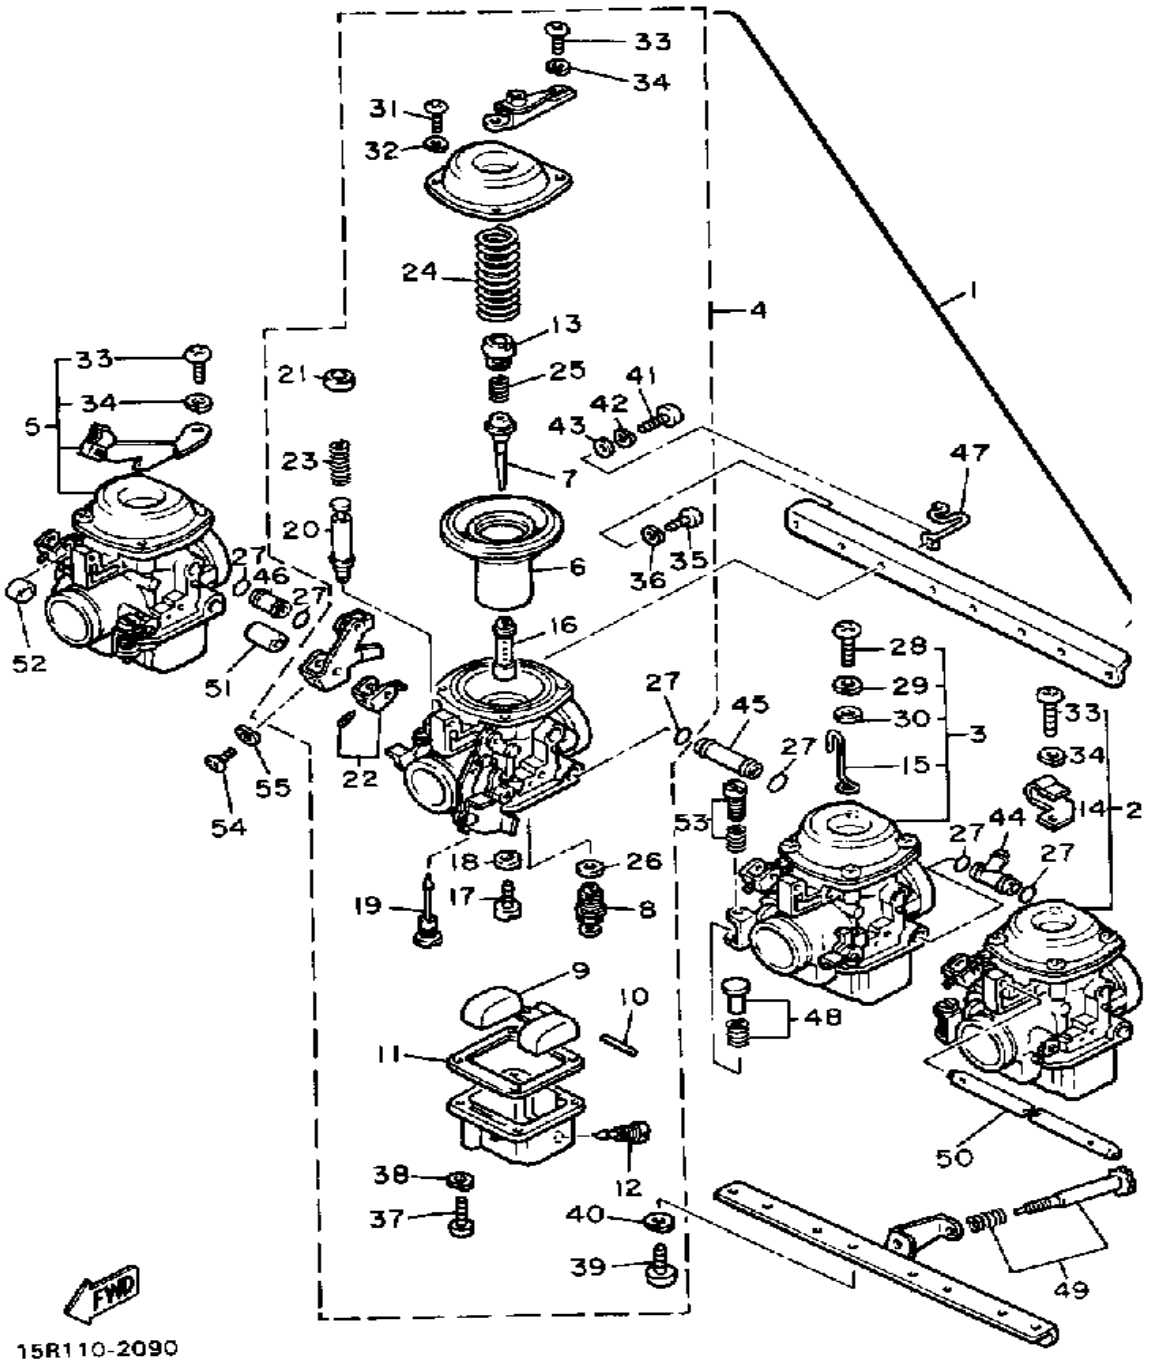


15R110-2090

Ref. No.	Part Number	Description	Qty	Remarks
1	¢5G-21490-00-10	UNAVAILABLE IN PRICE BOOK	1	N/A
2	5G2-14901-01-00	. CARBURETOR ASSEMBLY 1 (15R-14901-00)	1	
3	(5G2-14902-01-00)	CARBURETOR ASSEMBLY 2 .	1	
4	5G2-14903-01-00	. CARBURETOR ASSEMBLY 3 (15R-14903-00)	1	
5	5G2-14904-01-00	. CARBURETOR ASSEMBLY 4 (15R-14904-00)	1	
6	4H7-14940-00-00	. . DIAPHRAGM ASSEMBLY . .	4	
7	4H7-14917-13-00	. . JET, NEEDLE	4	
8	10L-14390-02-00	. . NEEDLE VALVE ASSEMBLY (4X7-14390-00)	4	
9	4H7-14985-00-00	. . FLOAT	4	
10	4H7-14186-00-00	. . PIN, FLOAT	4	
11	4H7-14984-01-00	. . GASKET, FLOAT CHMBR (4H7-14984-00)	4	
12	4X7-14191-01-00	. . PLUG, DRAIN	4	
13	(4H7-14936-00-00)	SEAT, SPRING	4	
14	(4H7-14159-00-00)	CLIP	1	
15	4H7-14139-01-00	. . CLIP, PIPE (4H7-14139-00) . .	1	
16	4H7-14921-32-00	. . NOZZLE, MAIN	4	
17	4X7-14925-20-00	. . JET, MAIN #120 (#120)	4	
18	4H7-14945-00-00	. . WASHER, MAIN JET	4	
19	4H7-14948-40-00	. . JET (#40)	4	
20	4H7-14171-00-00	. . PLUNGER, STARTER	4	
21	4H7-14173-00-00	. . COVER, PLUNGER CAP . . .	4	
22	5G2-W1495-00-00	. . STARTER LEVER SET	4	
23	4H7-14135-00-00	. SPRING, PLUNGER	4	
24	4H7-14933-00-00	. SPRING, DIAPHRAGM	4	
25	4H7-14589-01-00	. . SPRING	4	

CONTINUED ON NEXT FRAME ➤

CARBURETOR

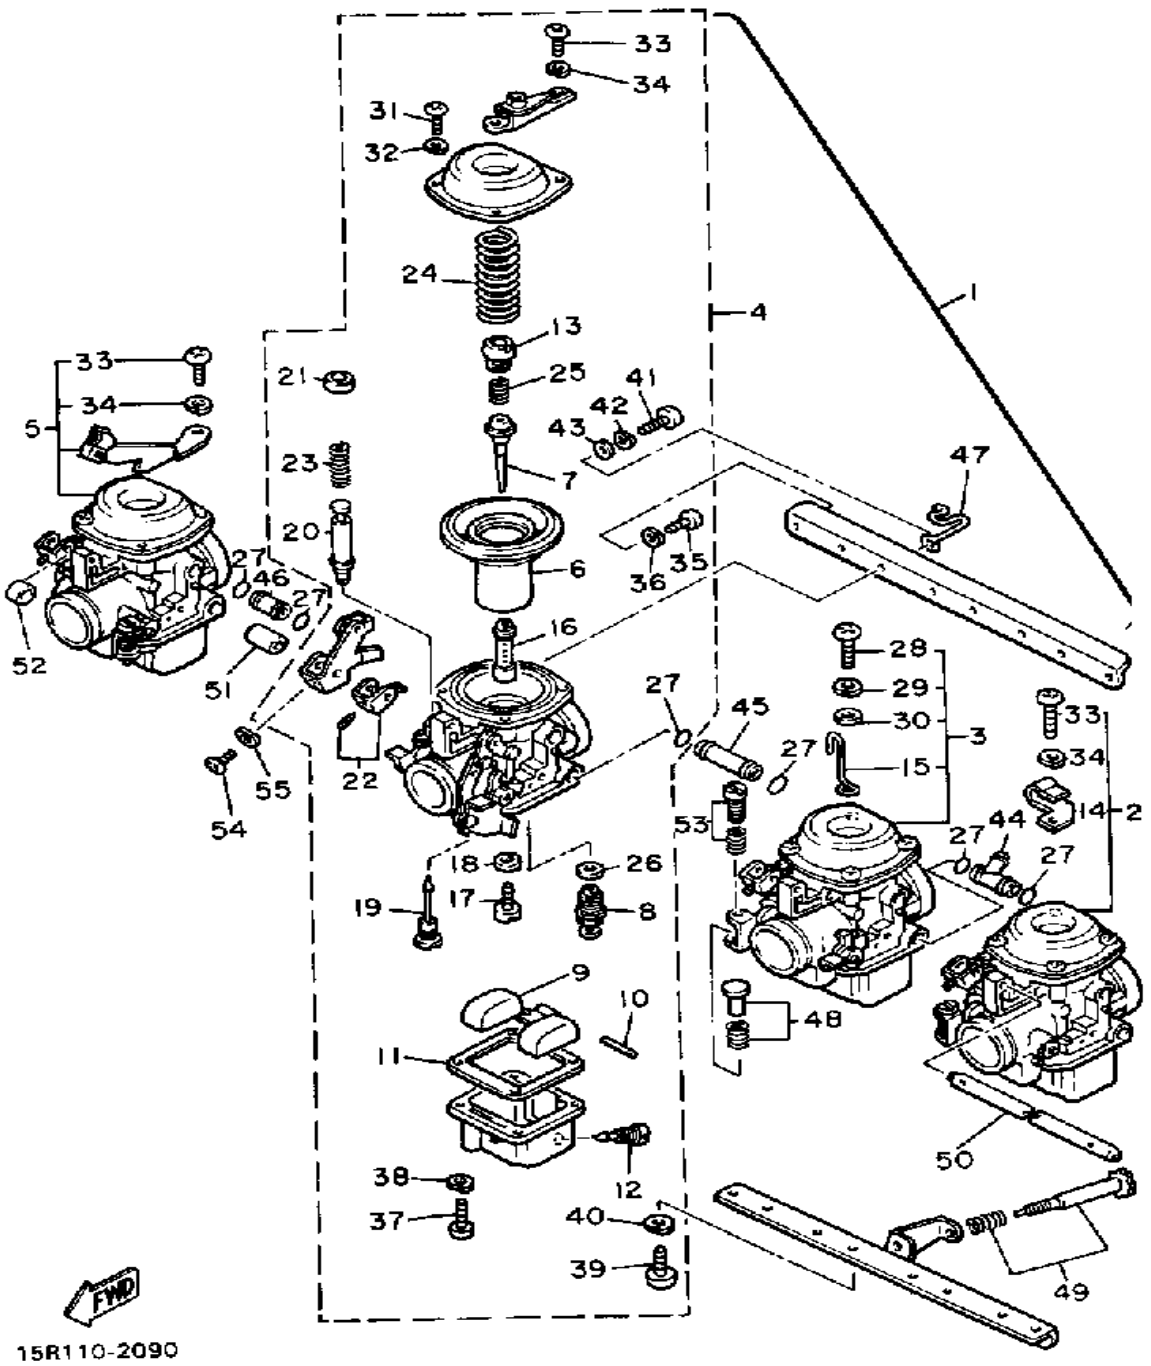


15R110-2090

Ref. No.	Part Number	Description	Qty	Remarks
26	4H7-14952-00-00	. . WASHER	4	
27	3J3-14147-00-00	. . O-RING	6	
28	98580-04010-00	. . SCREW, PAN HEAD	1	
29	92901-04100-00	. . WASHER, SPRING	1	
30	92901-04600-00	. . WASHER, PLATE	1	
31	98580-04008-00	. . SCREW, PAN HEAD	10	
32	92901-04100-00	. . WASHER, SPRING	10	
33	98580-04010-00	. . SCREW, PAN HEAD	5	
34	92901-04100-00	. . WASHER, SPRING	5	
35	98580-05010-00	. . SCREW, PAN HEAD	7	
36	92990-05100-00	. . WASHER, SPRING	7	
37	98580-05016-00	. . SCREW, PAN HEAD	16	
38	92990-05100-00	. . WASHER, SPRING	16	
39	98580-06012-00	. . SCREW, PAN HEAD	8	
40	92995-06100-00	. . WASHER, SPRING	8	
41	98580-05012-00	. . SCREW, PAN HEAD	1	
42	92990-05100-00	. . WASHER, SPRING	1	
43	92901-05600-00	. . WASHER, PLATE	1	
44	(4H7-14988-00-00)	PIPE, STARTER CON	1	
45	(4H7-14188-01-00)	CONNECTOR	1	
46	4H7-14189-01-00	. CONNECTOR	1	
47	4H7-14919-00-00	. CLIP	1	
48	5G2-W1492-00-00	. THRTL AJST SCRW 2SET 2	3	
49	5G2-W1493-00-00	. THRTL AJST SCRW 3SET 3	1	
50	(5G2-14978-00-00)	SHAFT, STARTER LVR	1	
51	(4H7-14998-00-00)	BUSH	1	
52	4H7-14973-00-00	. WASHER	1	
53	5G2-W1491-00-00	. THRTL AJST SCRW 1SET 1	3	
54	98501-03016-00	. SCREW, PAN HEAD	1	

CONTINUED ON NEXT FRAME ➤


CARBURETOR

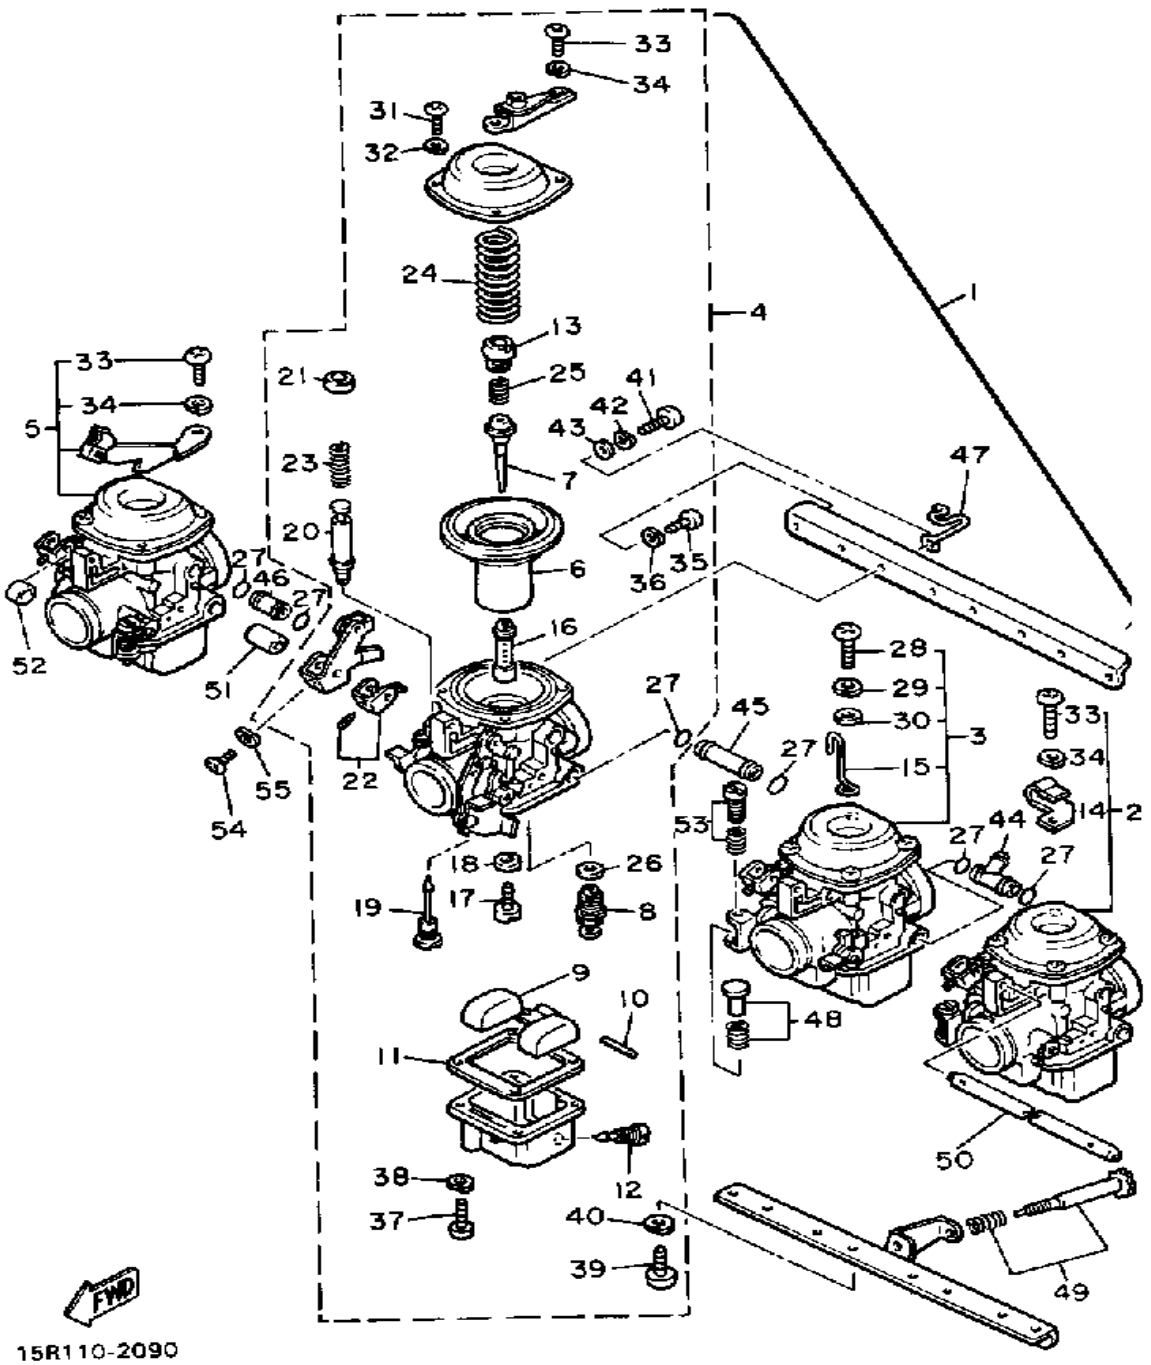

15R110-2090

Ref. No.	Part Number	Description	Qty	Remarks
55	92990-03100-00	. WASHER, SPRING (92901-03100)	1	


EXHAUST

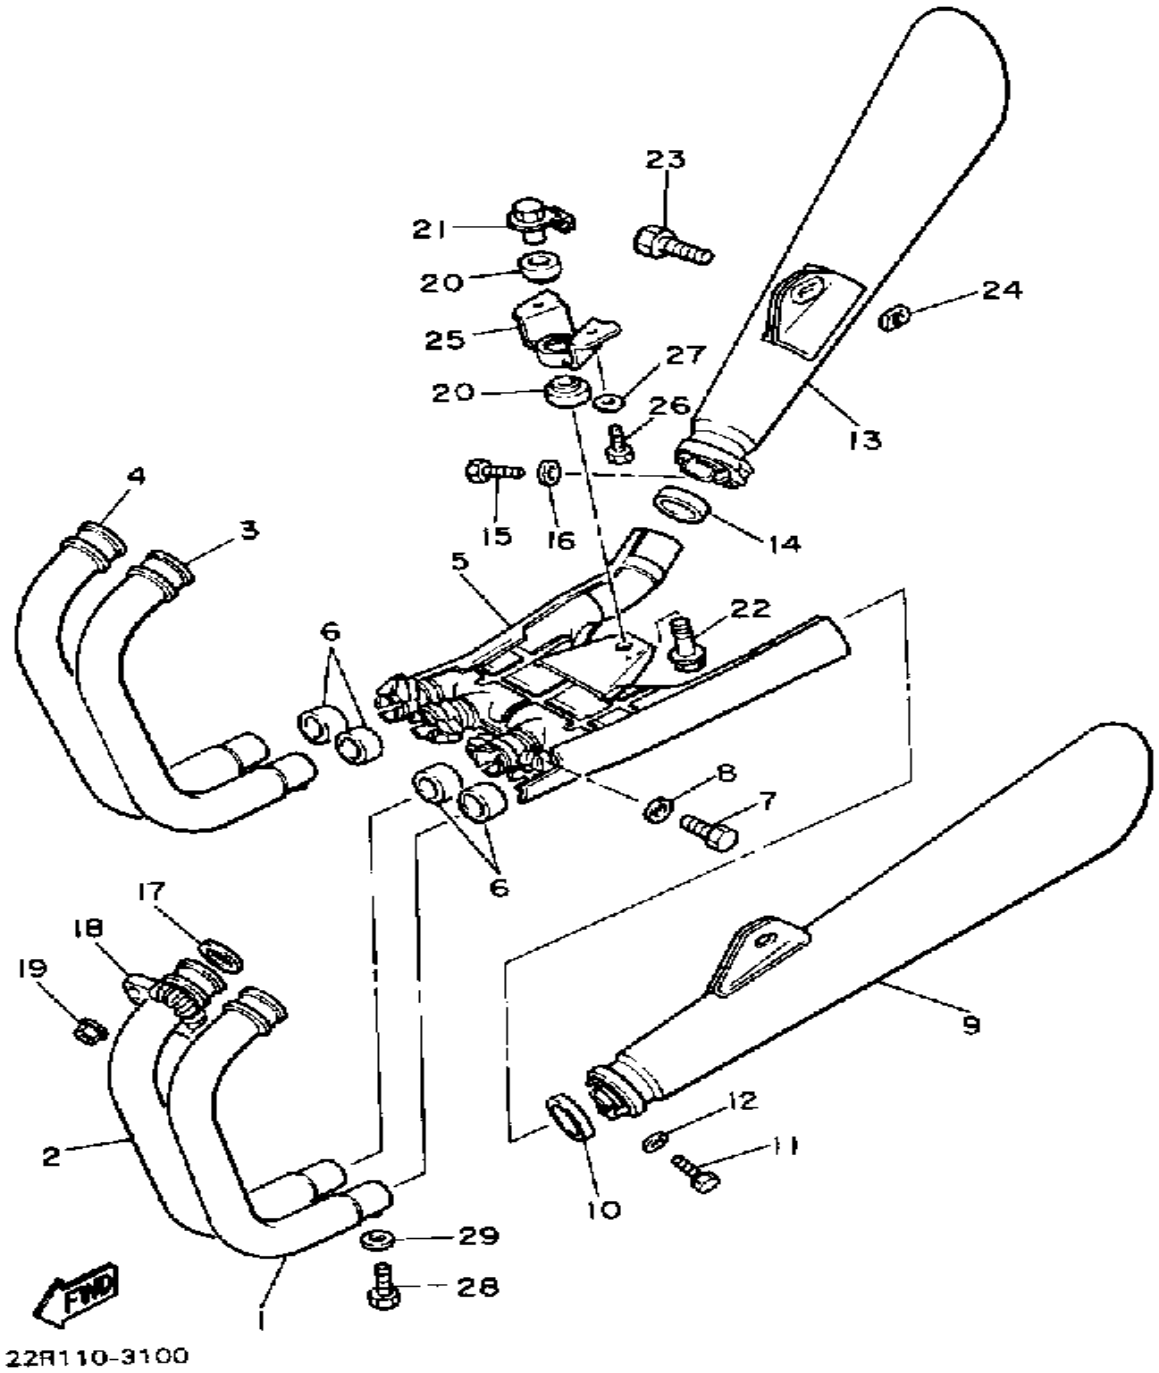

22R110-3100

Ref. No.	Part Number	Description	Qty	Remarks
1	5G2-14611-00-00	PIPE, EXHAUST L	1	
2	5G2-14621-00-00	PIPE, EXHAUST R	1	
3	5G2-14631-00-00	PIPE, EXHAUST 3	1	
4	5G2-14641-00-00	PIPE, EXHAUST 4	1	
5	15R-14615-00-00	JOINT, EXHAUST L	1	
6	4H7-14714-00-00	GASKET, muffler (DXK)	4	
7	97016-08020-00	BOLT	4	
8	92906-08600-00	WASHER	4	
9	15R-14711-00-00	MUFFLER L	1	
10	3JJ-14653-00-00	GASKET, EXHAUST 4	1	
11	97013-08025-00	BOLT	1	
12	92901-08600-00	WASHER	1	
13	15R-14721-00-00	MUFFLER R	1	
14	3JJ-14653-00-00	GASKET, EXHAUST 4	1	
15	97013-08025-00	BOLT	1	
16	92901-08600-00	WASHER	1	
17	4H7-14613-00-00	GASKET, EXST PIPE	4	
18	5G2-14612-00-00	NUT, RING	4	
19	90179-06499-00	NUT	8	
20	36Y-14747-00-00	DAMPER, MUFFLER	2	
21	1AE-14638-00-00	COLLAR	1	
22	95811-10040-00	BOLT, FLANGE (95801-10040)	1	
23	90109-10691-00	BOLT	2	
24	90179-10276-00	NUT, SPEC''L SHAPE	2	
25	4K0-14791-00-00	STAY, MUFFLER	1	
26	97013-08025-00	BOLT	2	
27	92901-08600-00	WASHER	2	
28	90101-06576-00	BOLT	4	
29	92990-06600-00	WASHER, PLATE	4	


CRANKCASE

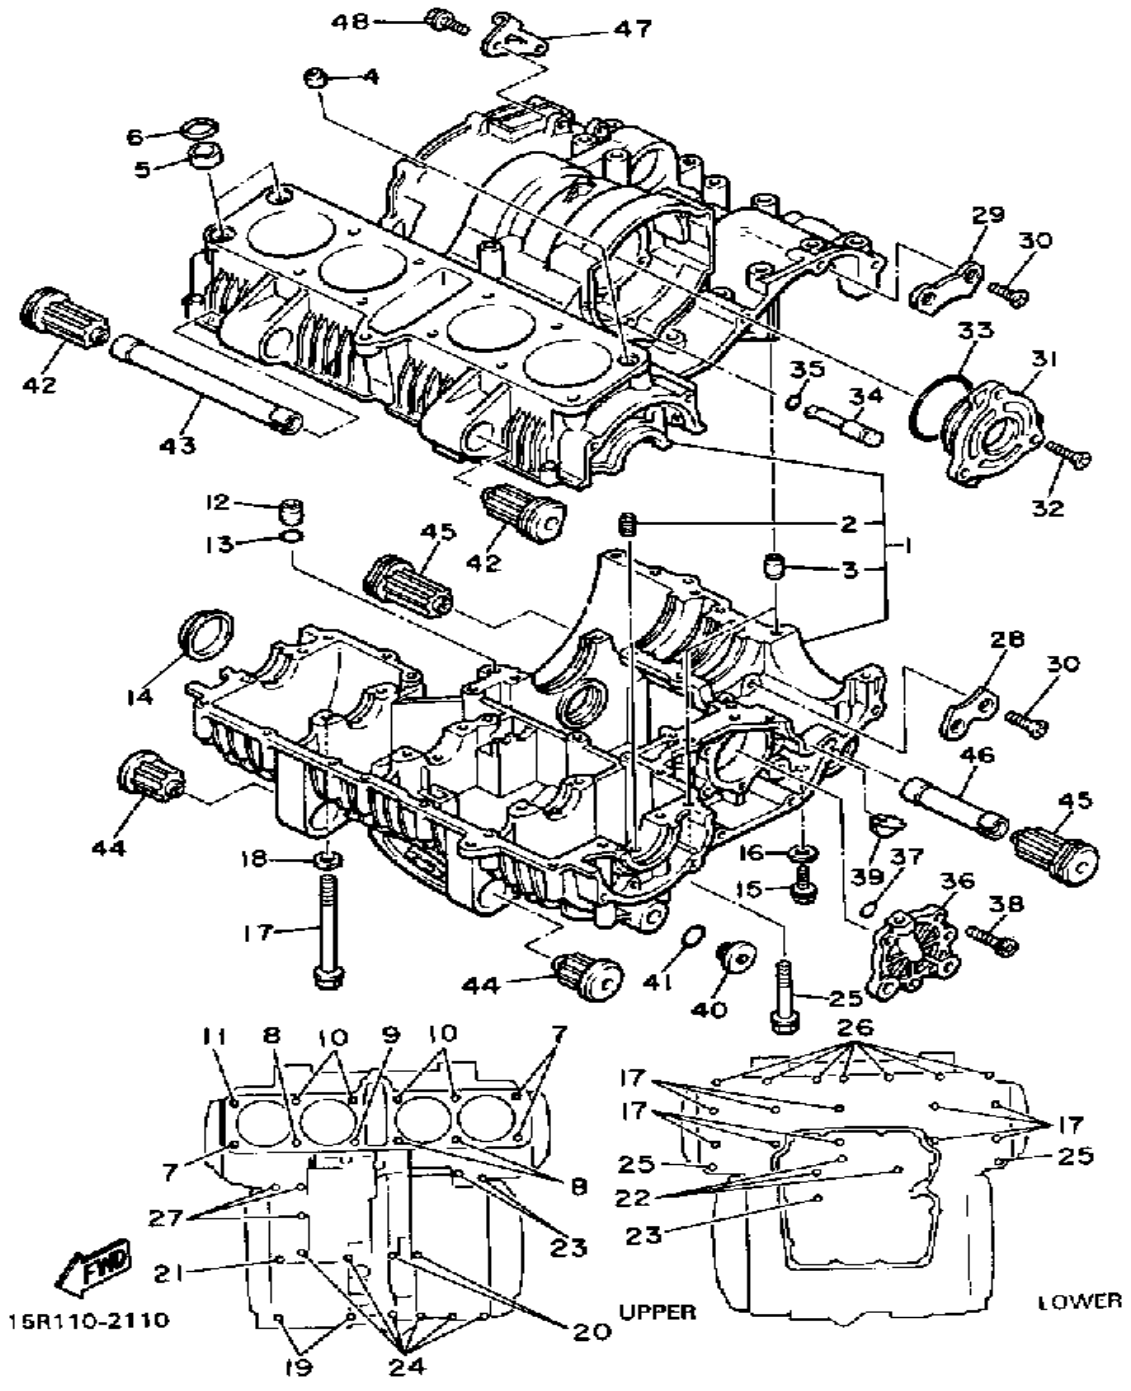

Ref. No.	Part Number	Description	Qty	Remarks
1	4H7-15100-03-00	CRANKCASE ASSEMBLY	1	
2	4H7-15138-00-00	. NOZZLE 1	3	
3	99510-12016-00	. PIN, DOWEL	3	
4	99530-14016-00	PIN, DOWEL	1	
5	90387-16547-00	COLLAR	2	
6	93210-18322-00	O-RING	2	
7	90116-10330-00	BOLT, STUD	3	
8	90116-10329-00	BOLT, STUD	3	
9	90116-10328-00	BOLT, STUD	1	
10	4H7-11363-00-00	BOLT, CYLINDER HOLDING 3 .	4	
11	4H7-11364-00-00	BOLT, CYLINDER HOLDING 4 .	1	
12	99510-12016-00	PIN, DOWEL	1	
13	93210-11124-00	O-RING (1.6-10.6)	1	
14	4H7-15167-10-00	PLUG, BLIND 1	1	
15	90105-08003-00	BOLT, WASHER BASED (834-6777-00)	1	
16	90201-08087-00	WASHER, PLATE	1	
17	95811-08105-00	BOLT, FLANGE (95812-08105) .	10	
18	90201-094G1-00	WASHER, PLATE	8	
19	95811-08065-00	BOLT, FLANGE	2	
20	95811-06135-00	BOLT, FLANGE	2	
21	95811-06120-00	BOLT, FLANGE	1	
22	95811-06080-00	BOLT, FLANGE	3	
23	95811-06070-00	BOLT, FLANGE	3	
24	95811-06060-00	BOLT, FLANGE	6	
25	95811-06055-00	BOLT, FLANGE (95802-06055) .	2	
26	95811-08045-00	BOLT, FLANGE (JN5)	7	
27	95811-06035-00	BOLT, FLANGE	3	
28	(31A-15381-00-00)	PLATE, BRNG COVER	1	


CONTINUED ON NEXT FRAME ➤

CRANKCASE

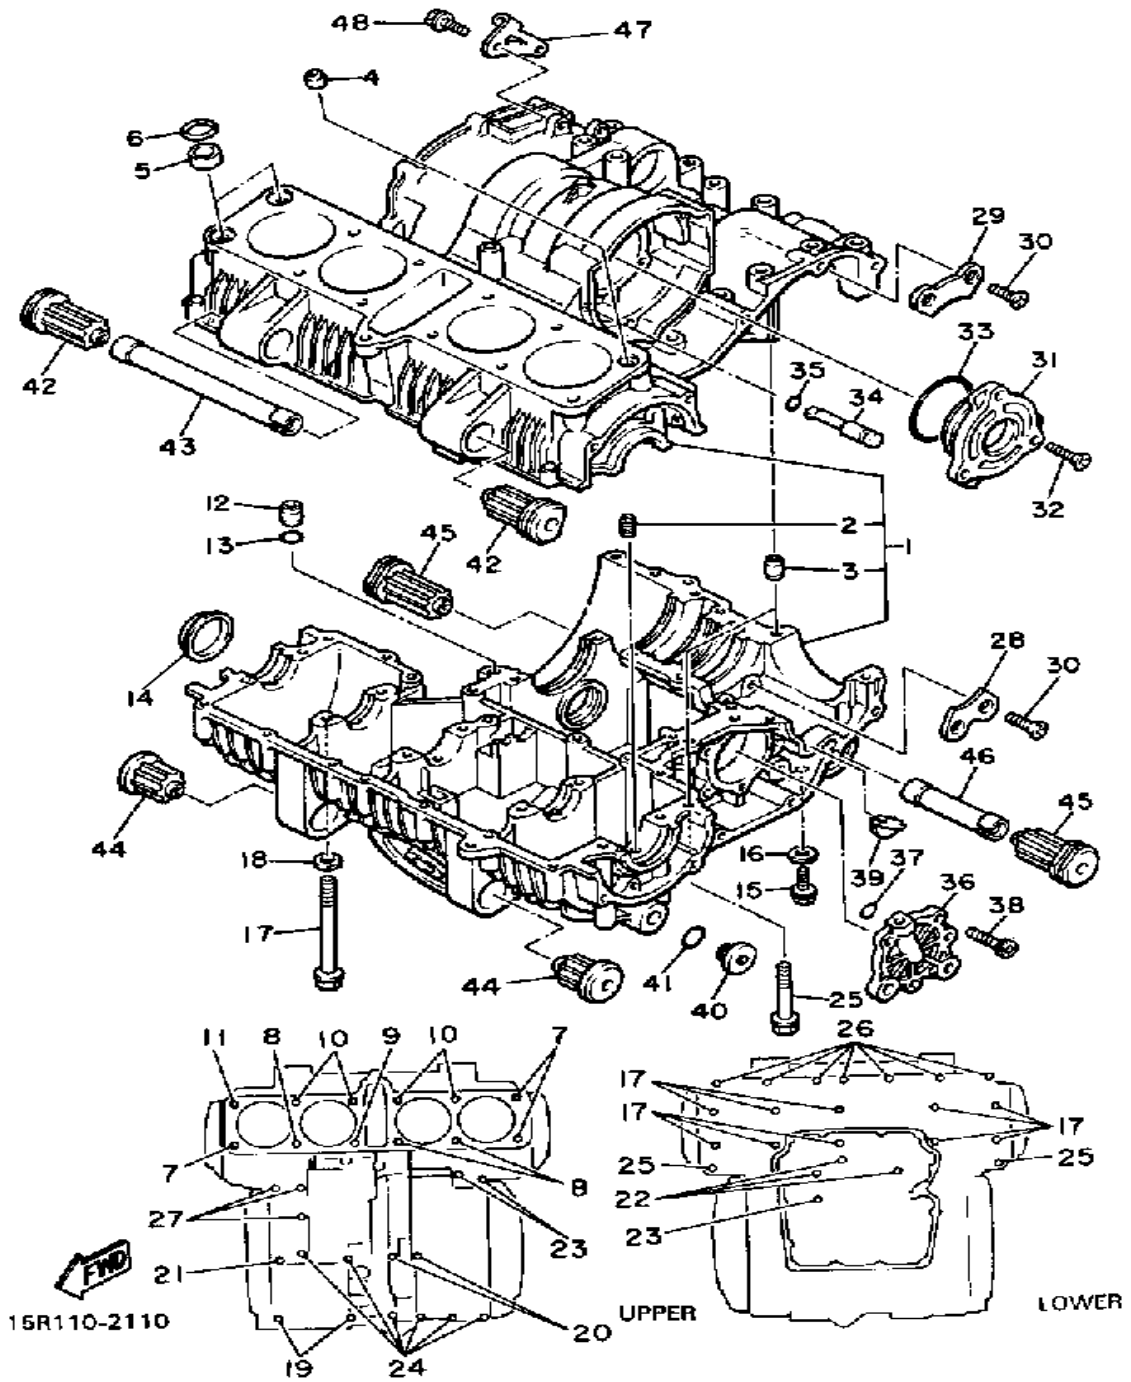

Ref. No.	Part Number	Description	Qty	Remarks
29	31A-15383-00-00	PLATE, BRNG COVER	1	
30	90149-08152-00	SCREW	4	
31	4H7-15163-01-00	HOUSING, BEARING 1	1	
32	90151-06014-00	SCREW, COUNTERSUNK	3	
33	93210-62439-00	O-RING	1	
34	4H7-13454-00-00	NOZZLE	1	
35	93210-07540-00	O-RING	1	
36	(5G2-15164-00-00)	HOUSING, BEARING 2	1	
37	93210-07438-00	O-RING	1	
38	91311-06020-00	BOLT, SOCKET HEAD	3	
39	4H7-15365-00-00	GROMMET	1	
40	4H7-15189-00-00	PLUG	2	
41	93210-21276-00	O-RING	2	
42	36Y-15336-00-00	DAMPER, ENG MOUNT 3 (4H7-15326-00)	2	
43	4H7-15317-00-00	SPACER, ENG MOUNT (4W5-15317-00)	1	
44	4H7-15316-00-00	DAMPER, ENG MOUNT 1	2	
45	36Y-15326-00-00	DAMPER, ENGINE MOUNT 2 (2H7-15326-01-00)	2	
46	4H7-15327-00-00	SPACER, ENG MOUNT (4W5-15327-00)	1	
47	4H7-15441-01-00	HOLDER, CLCH CABLE	1	
48	90110-06145-00	BOLT, HEX.SOCKET	2	


CRANKCASE COVER

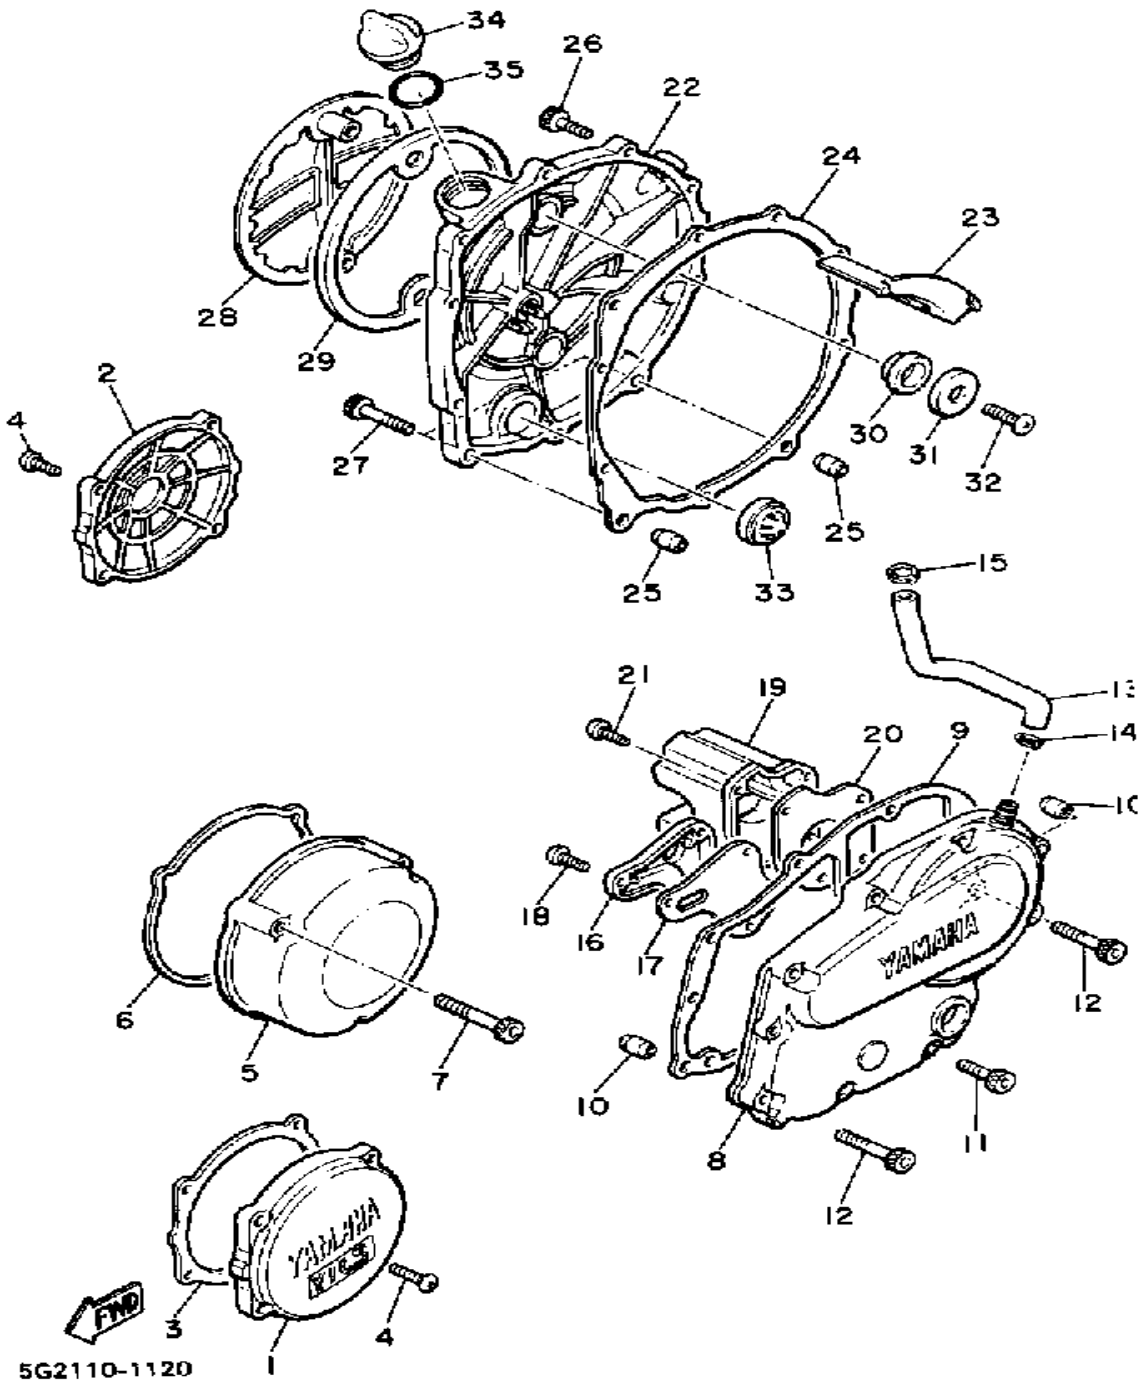

Ref. No.	Part Number	Description	Qty	Remarks
1	4U8-15416-01-00	COVER, OIL PUMP	1	
2	4U8-15426-01-00	COVER, OIL PUMP R	1	
3	4BB-15456-00-00	GASKET, O/PMP CVR 1	1	
4	98980-06020-00	SCREW, BIND	8	
5	4H7-15415-00-00	COVER, GENERATOR	1	
6	4BB-15455-00-00	GASKET 1	1	
7	91311-06070-00	BOLT	3	
8	15R-15409-00-00	CRANKCASE CVR ASSEMBLY	1	
9	4BB-15451-00-00	GASKET, CRCS CVR.	1	
10	99530-10014-00	PIN, DOWEL	2	
11	91311-06025-00	BOLT, SOCKET HEAD	8	
12	91311-06040-00	BOLT	2	
13	5G2-11166-00-00	PIPE, BREATHER 1	1	
14	90467-14015-00	CLIP	1	
15	90468-08104-00	CLIP	1	
16	(4H7-15346-00-00)	BREATHER 1	1	
17	4BB-15457-00-00	GASKET	1	
18	98503-06014-00	SCREW, PAN HEAD (92502-06016)	3	
19	4H7-15347-00-00	BREATHER 2	1	
20	4BB-15467-00-00	GASKET	1	
21	98503-06014-00	SCREW, PAN HEAD (92502-06016)	4	
22	4H7-15421-02-00	COVER, CRANKCASE R	1	
23	4H7-15412-01-00	COVER, OIL PUMP	1	
24	4BB-15461-00-00	GASKET, CRCS CVR 2	1	
25	99530-10014-00	PIN, DOWEL	2	
26	91311-06025-00	BOLT, SOCKET HEAD	8	
27	91311-06040-00	BOLT	2	


CONTINUED ON NEXT FRAME ➤

CRANKCASE COVER

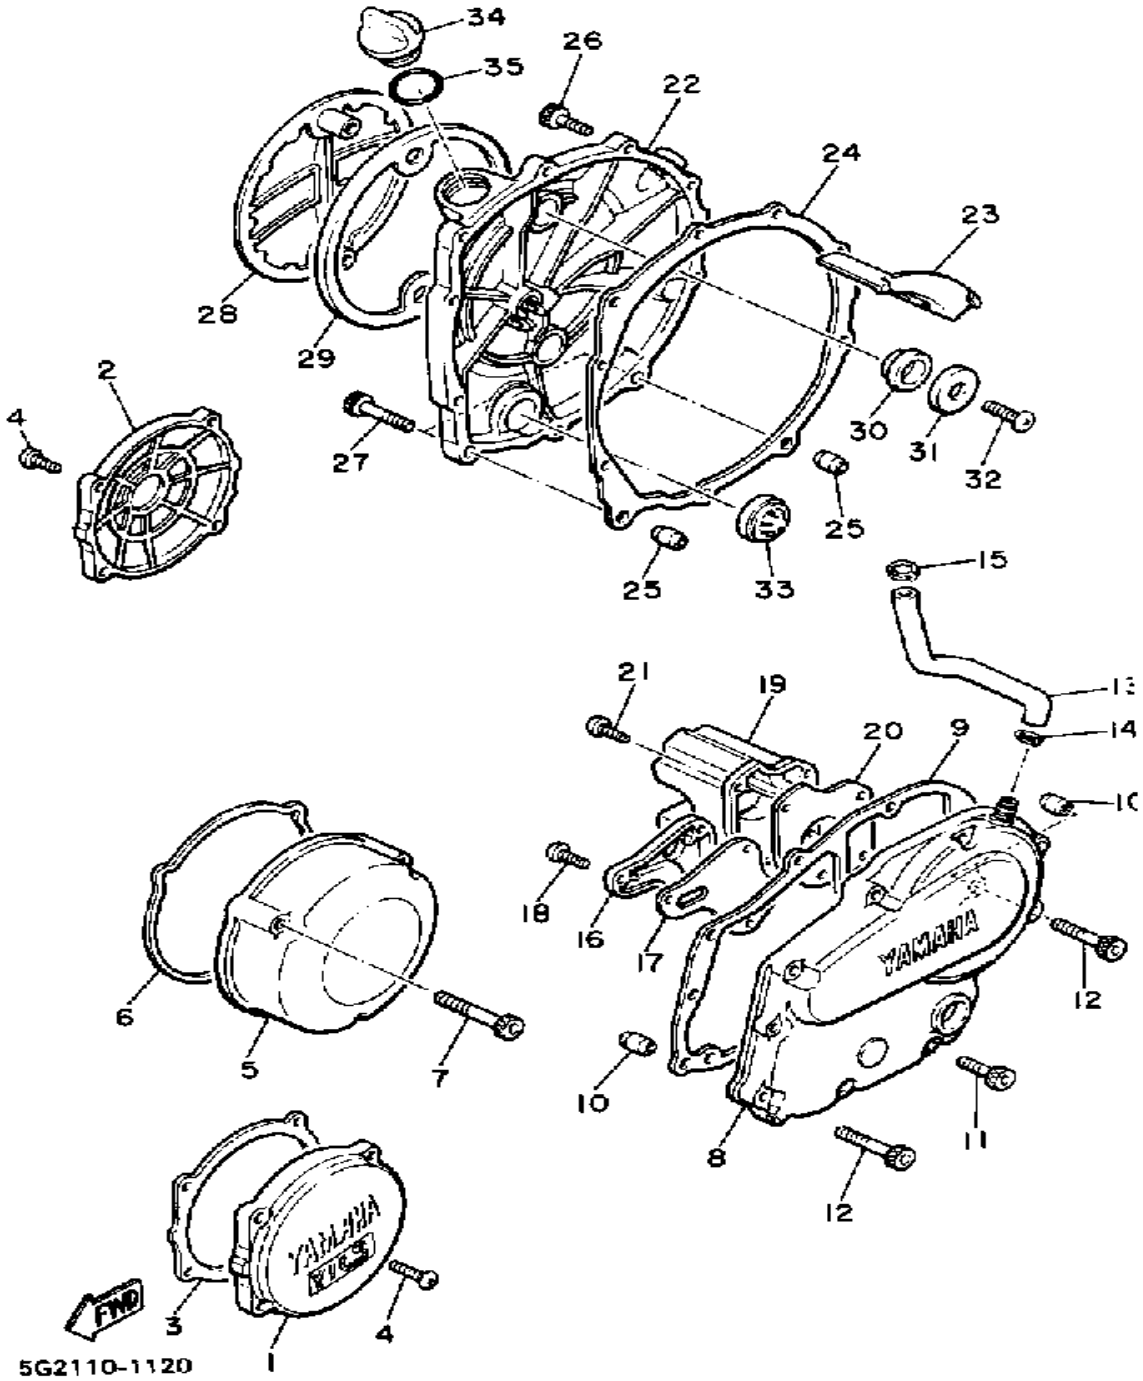


Ref. No.	Part Number	Description	Qty	Remarks
28	5G2-15417-00-00	COVER, CAP	1	
29	4H7-15449-00-00	RING, RUBBER	1	
30	4H7-15486-00-00	GROMMET	2	
31	90209-06096-00	WASHER	2	
32	98503-06014-00	SCREW, PAN HEAD (92502-06016)	2	
33	2H7-15361-00-00	GAUGE, LEVEL	1	
34	2H7-15363-00-00	PLUG, OIL	1	
35	93210-27778-00	O-RING	1	

A - C - GENERATOR

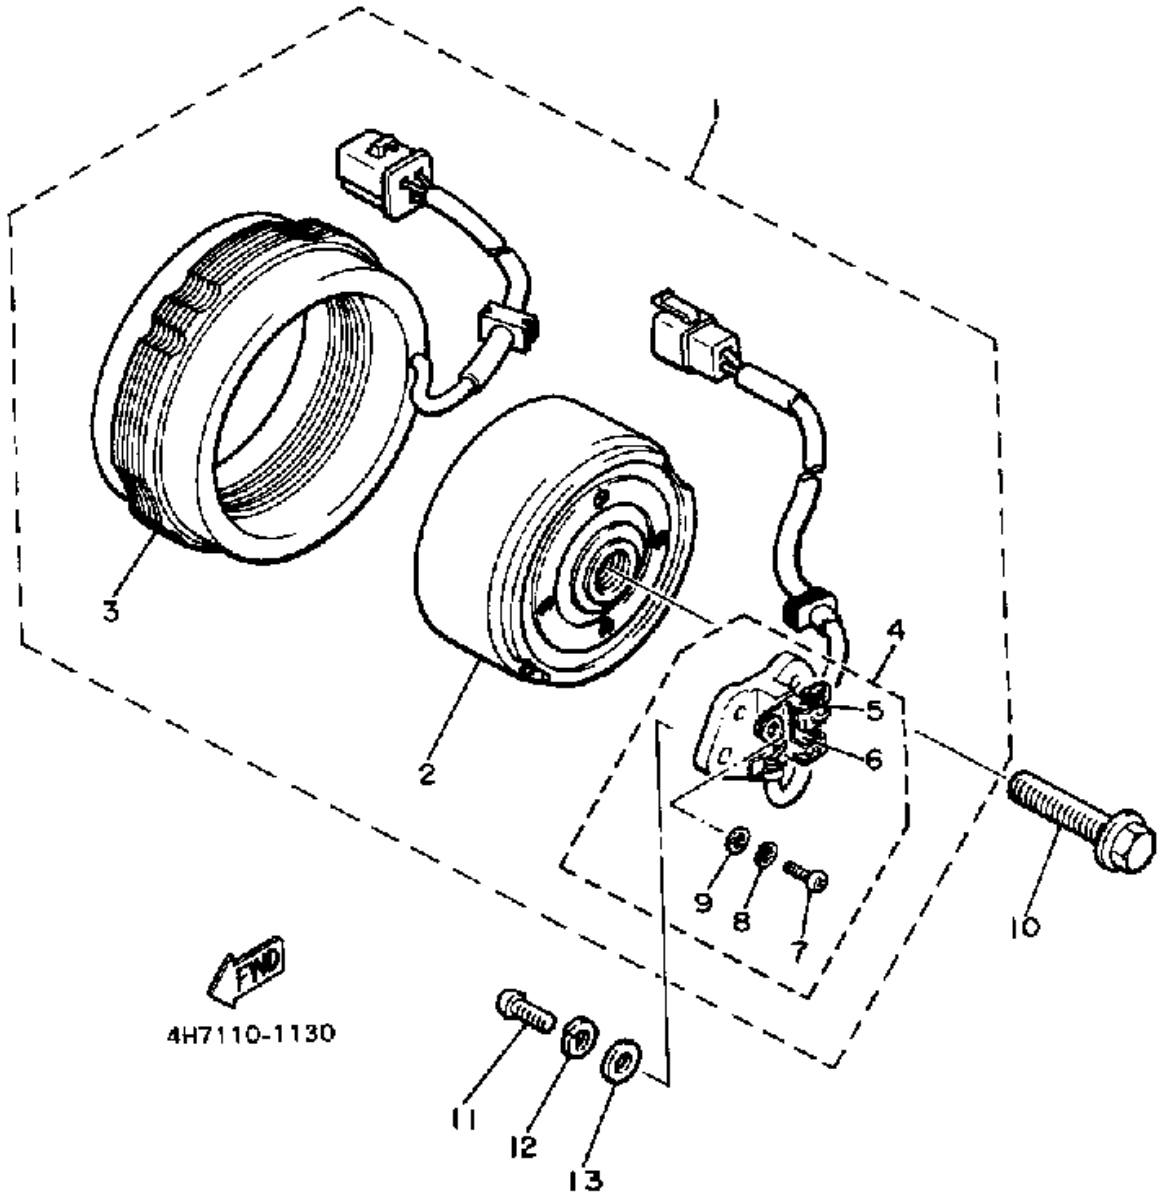


Ref. No.	Part Number	Description	Qty	Remarks
1	(4H7-81600-10-00)	AC GENERATOR ASSEMBLY .	1	
2	4H7-81650-10-00	. ROTOR ASSEMBLY	1	
3	4H7-81610-10-00	. STATOR ASSEMBLY	1	
4	4H7-81619-10-00	. BRUSH HOLDER ASSEMBLY	1	
5	46X-81611-10-00	. . BRUSH 1	1	
6	4G0-81612-10-00	. . BRUSH 2	1	
7	98511-04012-00	. . SCREW, PAN HEAD	2	
8	92901-04100-00	. . WASHER, SPRING	2	
9	92901-04600-00	. . WASHER, PLATE	2	
10	90105-10152-00	BOLT, WASHER BASED	1	
11	98503-06014-00	SCREW, PAN HEAD (92502-06016)	2	
12	92995-06100-00	WASHER, SPRING	2	
13	92901-06600-00	WASHER	2	

PICKUP COIL-GOVERNOR

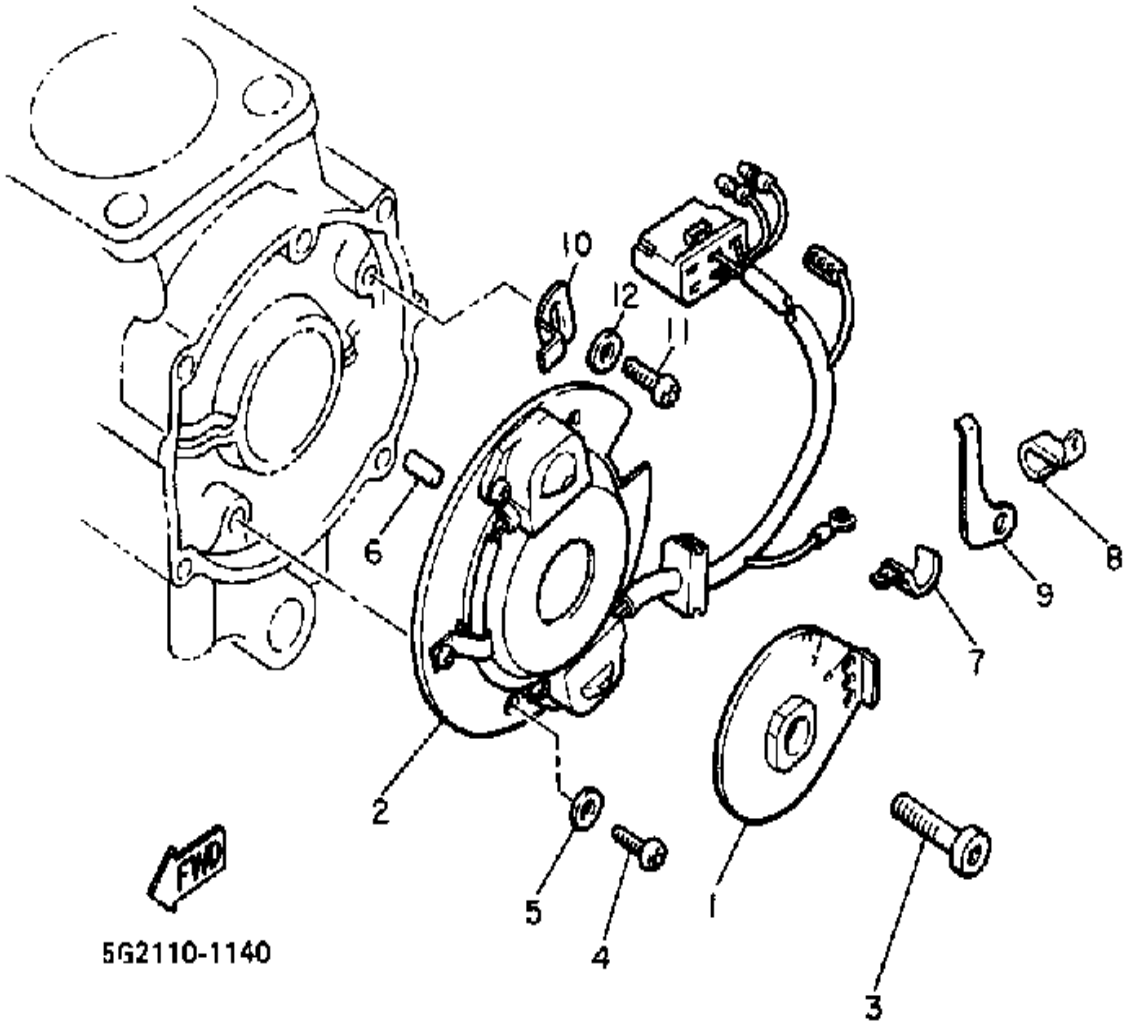


Ref. No.	Part Number	Description	Qty	Remarks
1	5G2-81673-10-00	ROTOR	1	
2	5G2-81671-10-00	BASE, PICKUP	1	
3	91316-08030-00	BOLT, SOCKET HEAD	1	
4	98580-06012-00	SCREW, PAN HEAD	2	
5	92901-06600-00	WASHER	2	
6	93604-08071-00	PIN, DOWEL	1	
7	90465-08277-00	CLAMP	1	
8	90465-08156-00	CLAMP	1	
9	90465-12160-00	CLAMP	1	
10	4H7-81632-00-00	PLATE, TIMING	1	
11	98580-06012-00	SCREW, PAN HEAD	1	
12	92990-06200-00	WASHER	1	

STARTER MOTOR

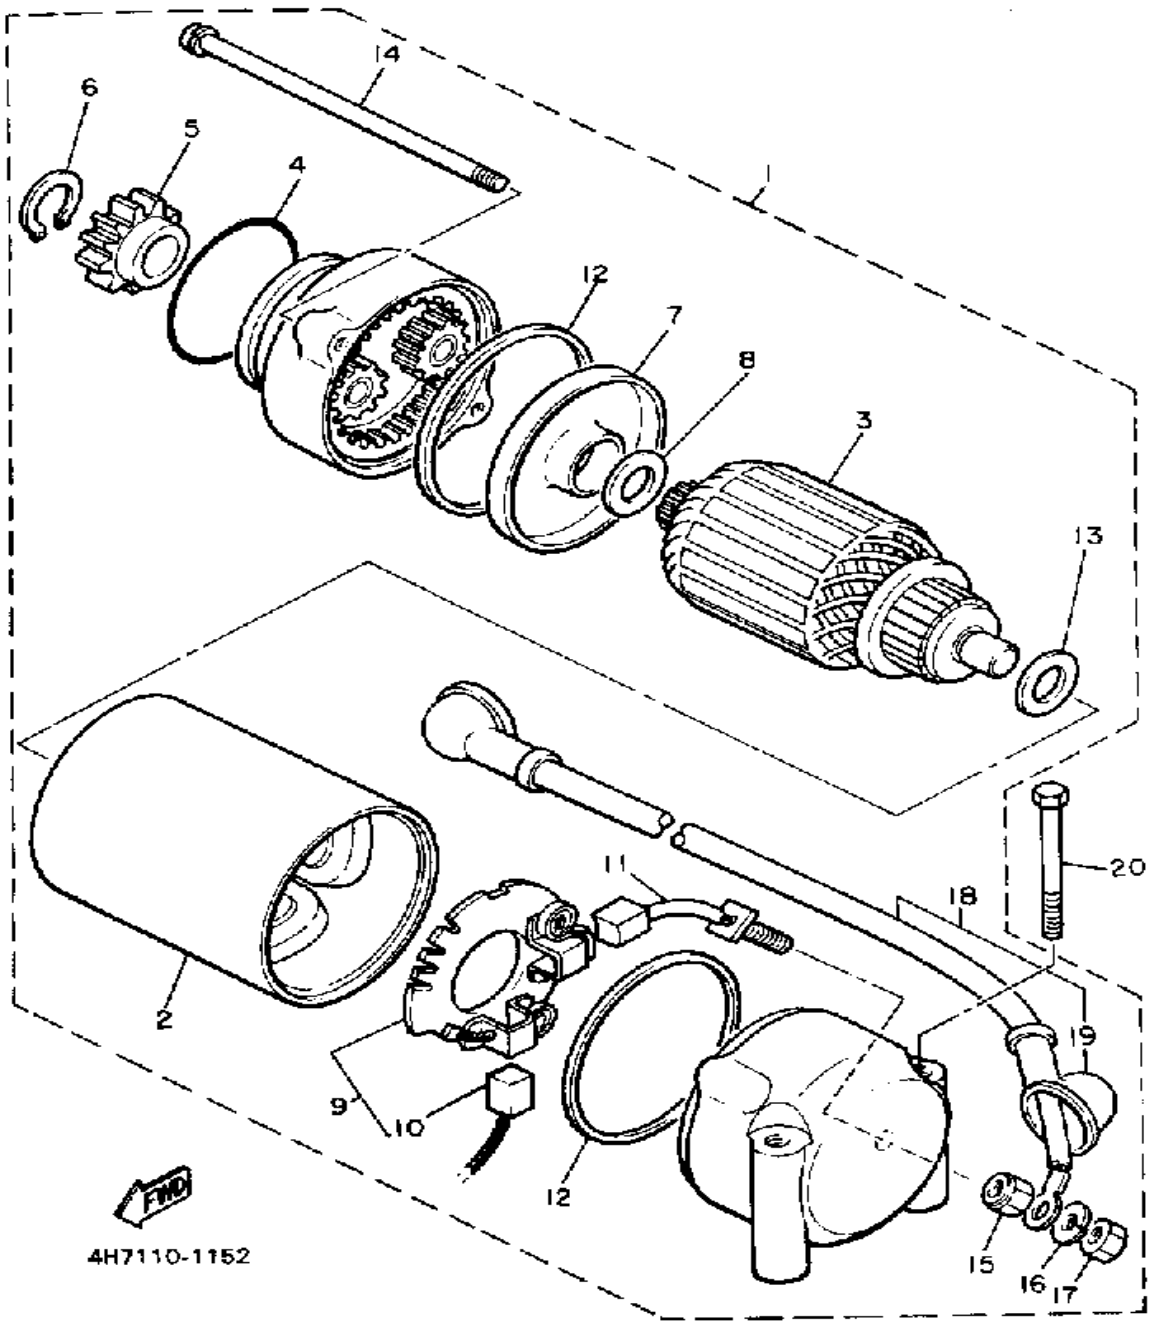


Ref. No.	Part Number	Description	Qty	Remarks
1	4BB-81800-00-00	STARTING MOTOR ASSEMBLY	1	
2	4H7-81810-01-00	. STATOR ASSEMBLY	1	
3	4H7-81850-00-00	. ARMATURE ASSEMBLY	1	
4	4H7-81847-01-00	. O-RING	1	
5	4H7-15511-01-00	. GEAR, STARTING MTR	1	
6	4H7-81819-00-00	. CIRCLIP	1	
7	(4H7-81845-00-00)	PLATE	1	
8	4H7-81843-50-00	. WASHER 1	1	
9	4H7-81840-01-00	. BRUSH HOLDER ASSEMBLY	1	
10	4H7-81811-00-00	. . BRUSH 1	1	
11	4H7-81812-01-00	. BRUSH 2	1	
12	4H7-81844-00-00	. O-RING (4H7-81844-50-00)	2	
13	(4H7-81824-00-00)	WASHER 2	1	
14	4H7-81826-01-00	. BOLT	2	
15	4H7-81872-00-00	. NUT, SPECIAL	1	
16	92995-06100-00	. WASHER, SPRING	1	
17	95380-06600-00	. NUT	1	
18	4H7-81815-00-00	. WIRE, STARTER	1	
19	(4H7-81871-00-00)	CAP	1	
20	95801-06060-00	BOLT, FLANGE	1	

STARTER CLUTCH

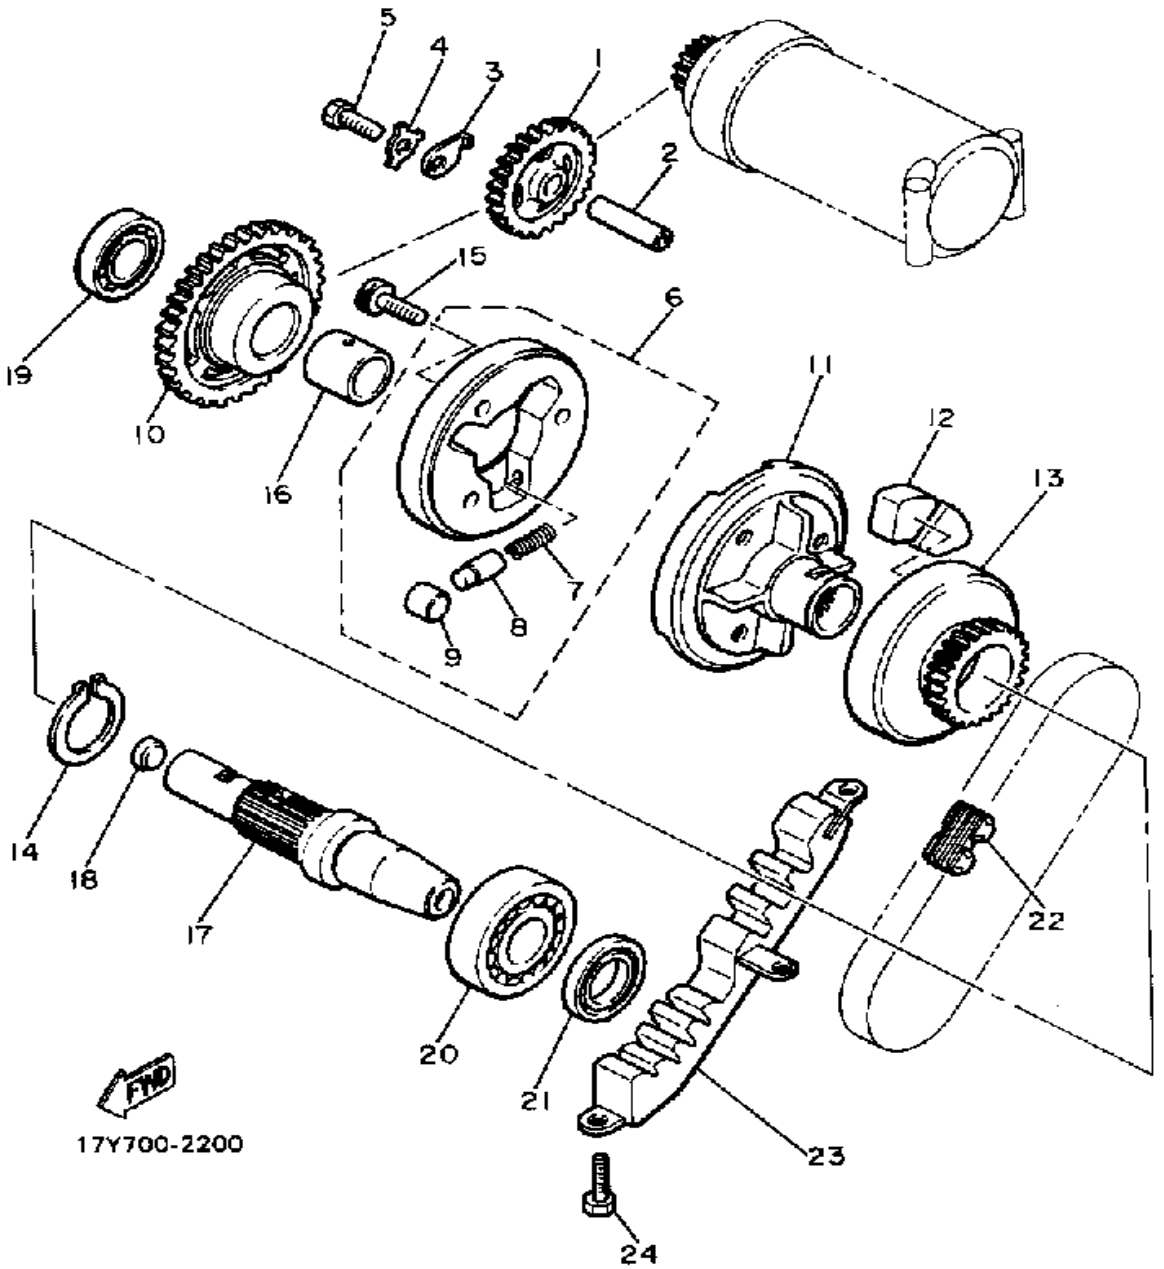

Ref. No.	Part Number	Description	Qty	Remarks
1	4H7-15512-00-00	GEAR, IDLER 1	1	
2	4H7-15521-00-00	SHAFT 1	1	
3	2H7-15531-00-00	PLATE, STOPPER	1	
4	90215-06040-00	WASHER, LOCK	1	
5	97313-06016-00	BOLT, HEXAGON	1	
6	4H7-15580-10-00	STARTER CLUTCH OUTER ASSEMBLY	1	
7	90501-04596-00	. SPRING, COMPRESSION	3	
8	341-15583-05-00	. CAP, STR CLUTCH SPR -CLUTCH SPRING	3	
9	93615-12088-00	. PIN, DOWEL	3	
10	4H7-15517-00-00	GEAR, IDLER 2	1	
11	4H7-15524-00-00	WHEEL, STARTER	1	
12	4H7-16155-01-00	ABSORBER 1	4	
13	4H7-15519-00-00	SPROCKET, STARTER 2	1	
14	93410-32052-00	CIRCLIP	1	
15	91316-08014-00	BOLT	3	
16	90387-202A7-00	COLLAR	1	
17	(4H7-15522-00-00)	SHAFT 2	1	
18	90331-12028-00	PLUG, TIGHT	1	
19	93306-00426-00	BEARING	1	
20	93306-20541-00	BEARING (B6205)	1	
21	93102-25218-00	OIL SEAL, SD-TYPE	1	
22	4H7-11456-00-00	CHAIN, PRIMARY	1	
23	4H7-11474-01-00	GUIDE, UPPER	1	
24	97301-06014-00	BOLT, HEXAGON	3	


CLUTCH

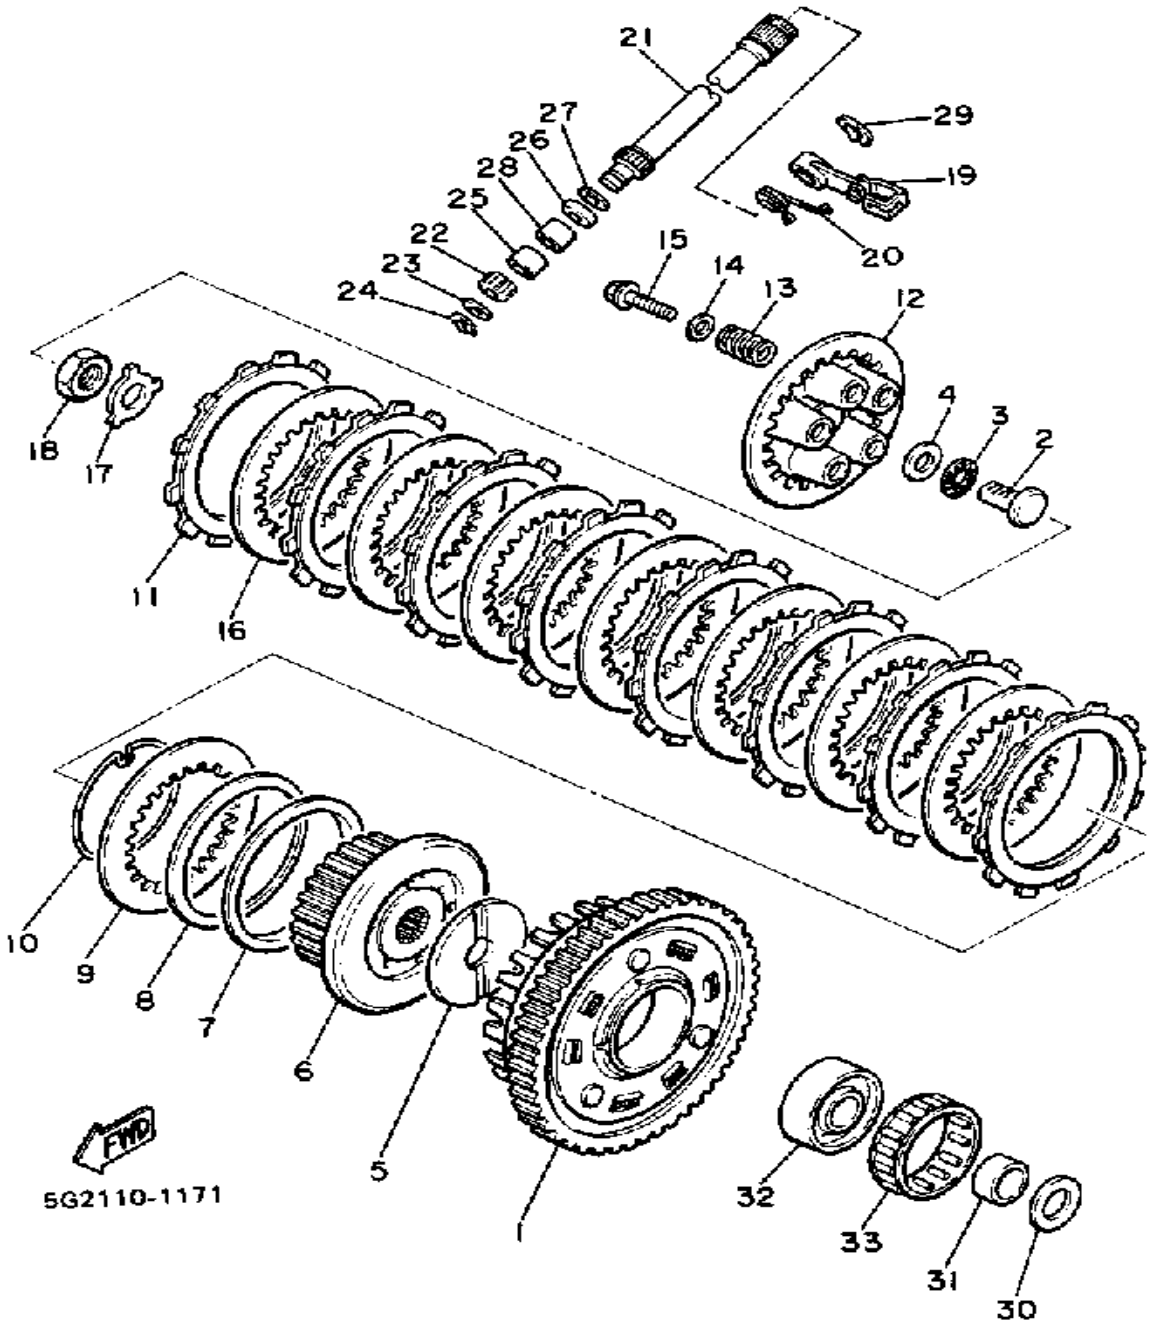

Ref. No.	Part Number	Description	Qty	Remarks
1	4H7-16150-10-00	PRI DRVN GEARCOMP. (97T)	1	
2	4H7-16356-01-00	ROD, PUSH 1	1	
3	93340-21505-00	BEARING	1	
4	90201-154E9-00	WASHER, PLATE	1	
5	4H7-16154-00-00	PLATE, THRUST 1	1	
6	4H7-16371-01-00	BOSS, CLUTCH	1	
7	1J7-16384-00-00	PLATE, SEAT	1	
8	5G2-16383-00-00	SPRING, CLUTCH BOSS	1	
9	168-16324-00-00	PLATE, CLUTCH 1	1	
10	1J7-16385-00-00	RING, CLUTCH BOSS	1	
11	4H7-16321-01-00	PLATE, FRICTION	8	
12	4H7-16351-00-00	PLATE, PRESSURE 1	1	
13	90501-23391-00	SPRING, COMPRESSION	5	
14	90201-061A5-00	WASHER, PLATE	5	
15	95811-06025-00	BOLT, FLANGE	5	
16	4H7-16325-00-00	PLATE, CLUTCH 2	7	
17	90215-20231-00	WASHER, LOCK	1	
18	90170-20327-00	NUT	1	
19	4H7-16340-00-00	PUSH LEVER ASSEMBLY	1	
20	90508-16459-00	SPRING, TORSION	1	
21	4H7-16382-01-00	AXLE, PUSH LEVER	1	
22	4H7-16398-00-00	PINION, RELEAS (16T)	1	
23	92901-08600-00	WASHER	1	
24	99080-07600-00	CIRCLIP (E)	1	
25	93317-11020-00	BEARING	1	
26	93102-12224-00	OIL SEAL	1	
27	90201-12M34-00	WASHER, PLATE	1	
28	93315-11206-00	BEARING	1	
29	99001-09600-00	CIRCLIP	1	


CONTINUED ON NEXT FRAME ➤

CLUTCH

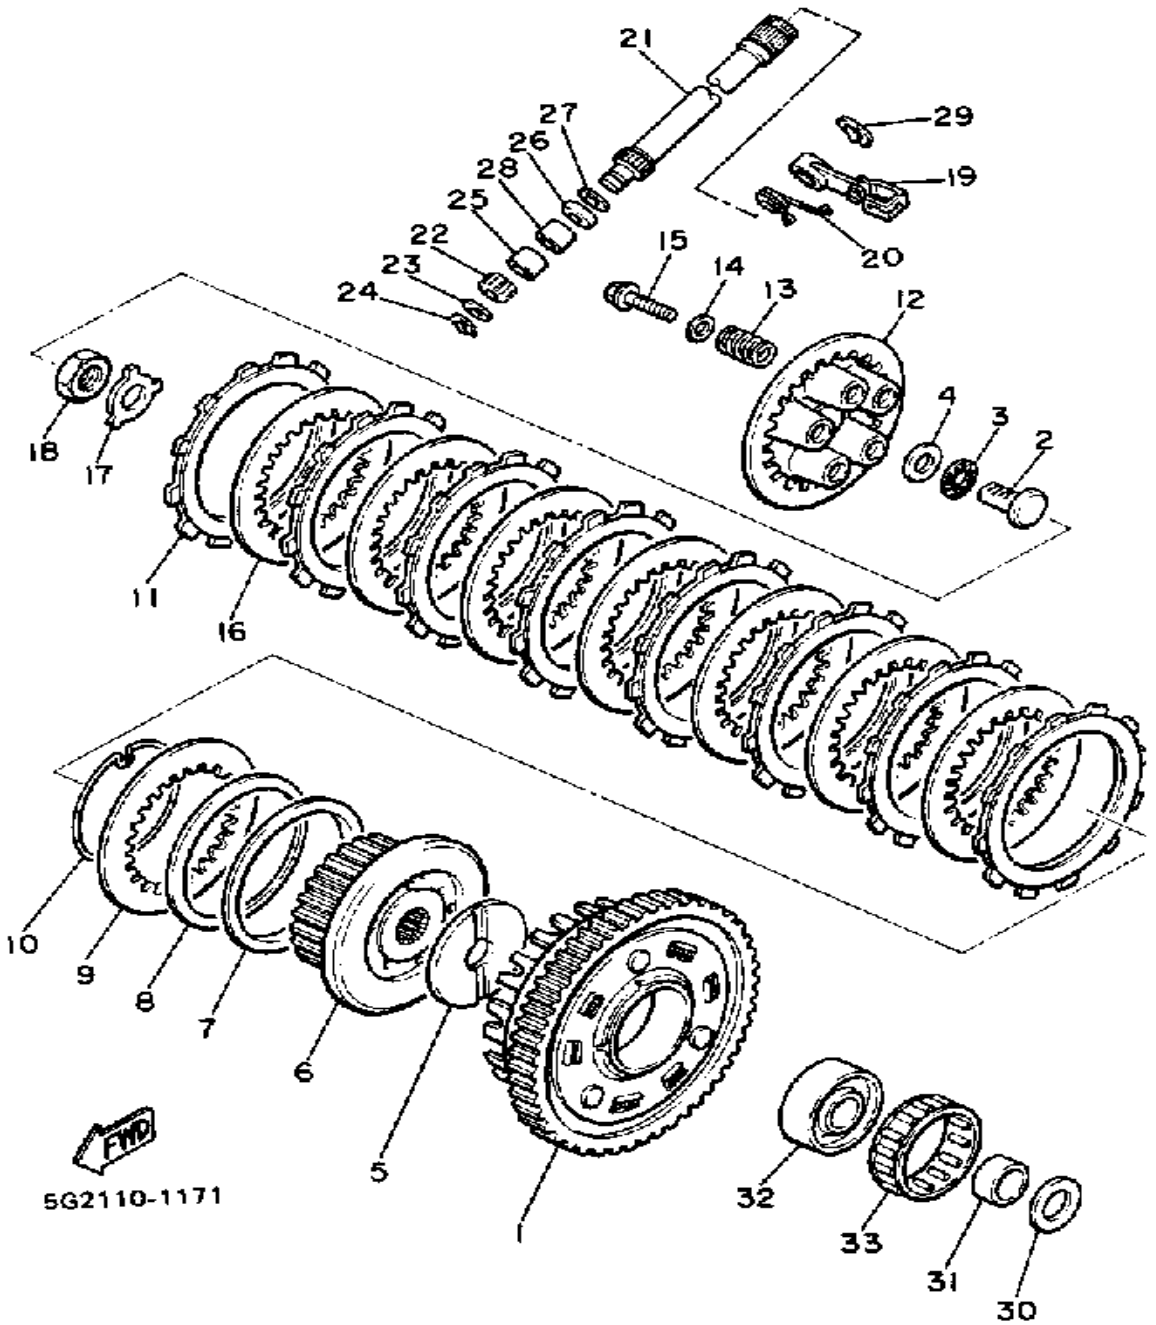

Ref. No.	Part Number	Description	Qty	Remarks
30	2K7-16154-00-00	PLATE, THRUST 1	1	
31	90387-252A8-00	COLLAR	1	
32	4H7-16181-00-00	SPACER 1	1	
33	93310-365H3-00	BEARING, CYLINDER.# 0	1	


TRANSMISSION

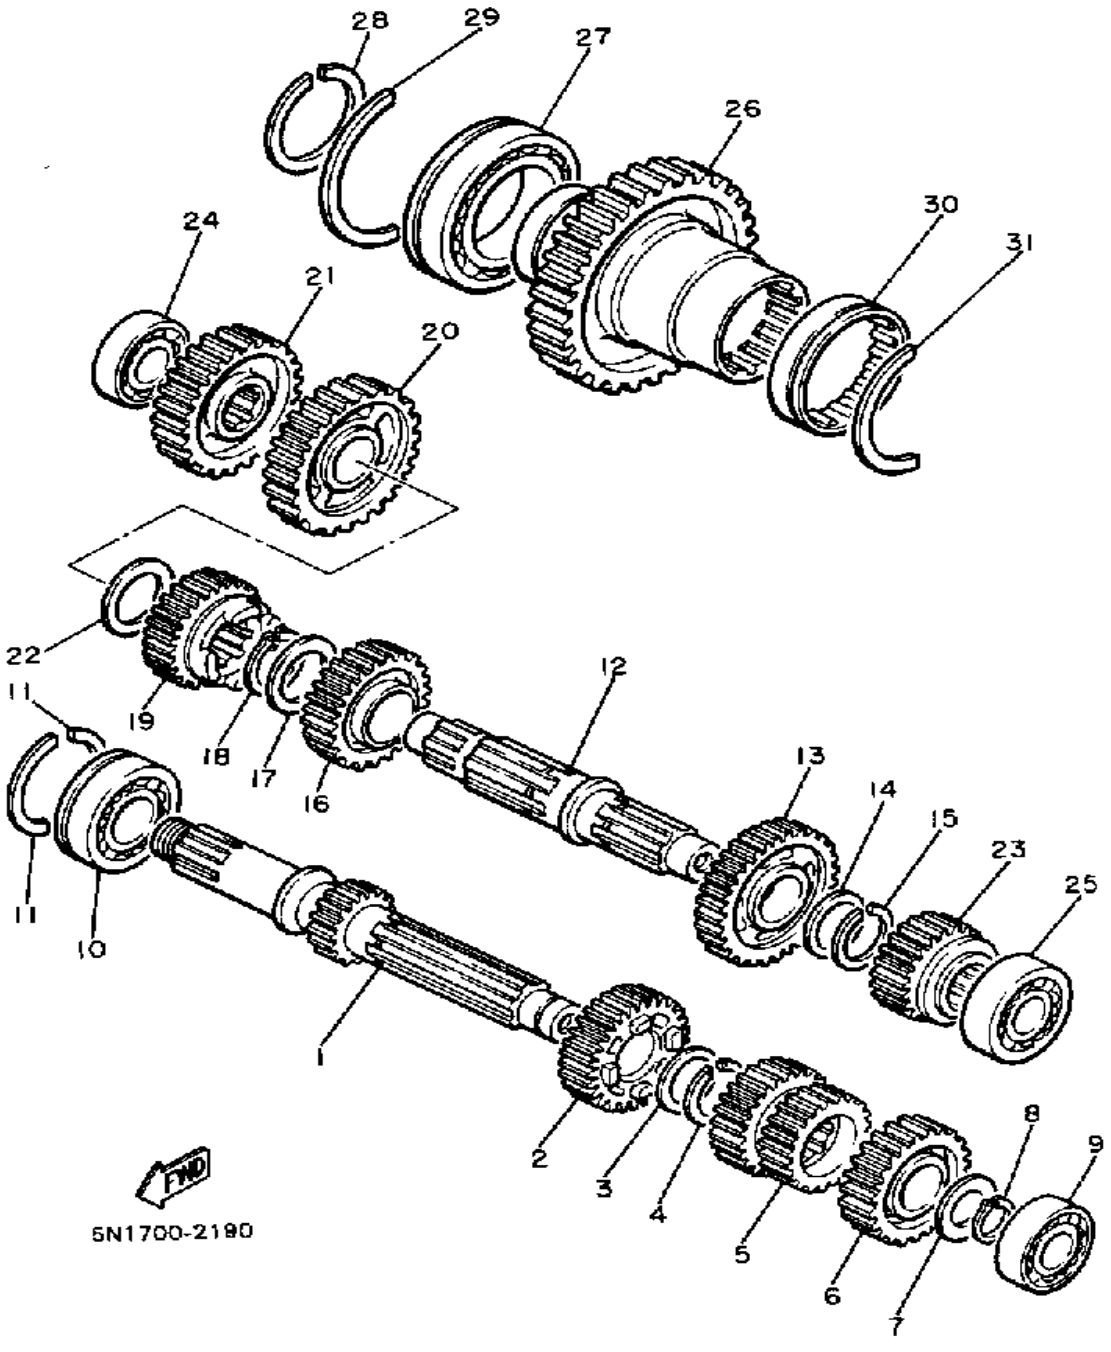

Ref. No.	Part Number	Description	Qty	Remarks
1	4H7-17401-00-00	MAIN AXLE ASSEMBLY	1	
2	4H7-17141-00-00	GEAR, 4TH PINION	1	
3	90209-22191-00	WASHER	1	
4	93440-25084-00	CIRCLIP	1	
5	4BB-17121-00-00	GEAR, 2ND PINION	1	
6	4H7-17151-00-00	GEAR, 5TH PINION	1	
7	90201-20276-00	WASHER, PLATE (1.0T)	1	
8	99009-20400-00	CIRCLIP	1	
9	93306-20458-00	BEARING	1	
10	93306-30550-00	BEARING	1	U.R.
11	278-17424-01-00	CIRCLIP 1	2	
12	4H7-17402-01-00	DRIVE AXLE ASSEMBLY	1	
13	99999-02204-00	GEAR, 2ND WHEEL (30T)	1	
14	90209-22191-00	WASHER	1	
15	93440-25084-00	CIRCLIP	1	
16	4BB-17231-00-00	GEAR, 3RD WHEEL	1	
17	90209-25196-00	WASHER	1	
18	93440-28062-00	CIRCLIP	1	
19	4H7-17241-00-00	GEAR, 4TH WHEEL	1	
20	4H7-17211-01-00	GEAR, 1ST WHEEL	1	
21	4L6-17582-00-00	GEAR, MIDDLE DRIVE	1	
22	90201-243A2-00	WASHER, PLATE	1	
23	16G-17251-00-00	GEAR, 5TH WHEEL	1	
24	93306-30311-00	BEARING	1	
25	93306-30425-00	BEARING (83A581A)	1	
26	(4L6-17583-00-00)	GEAR, MIDDLE DRIVEN	1	
27	93306-91101-00	BEARING	1	
28	93410-55057-00	CIRCLIP	1	
29	93440-80082-00	CIRCLIP, OUTER	1	


CONTINUED ON NEXT FRAME ➤

TRANSMISSION

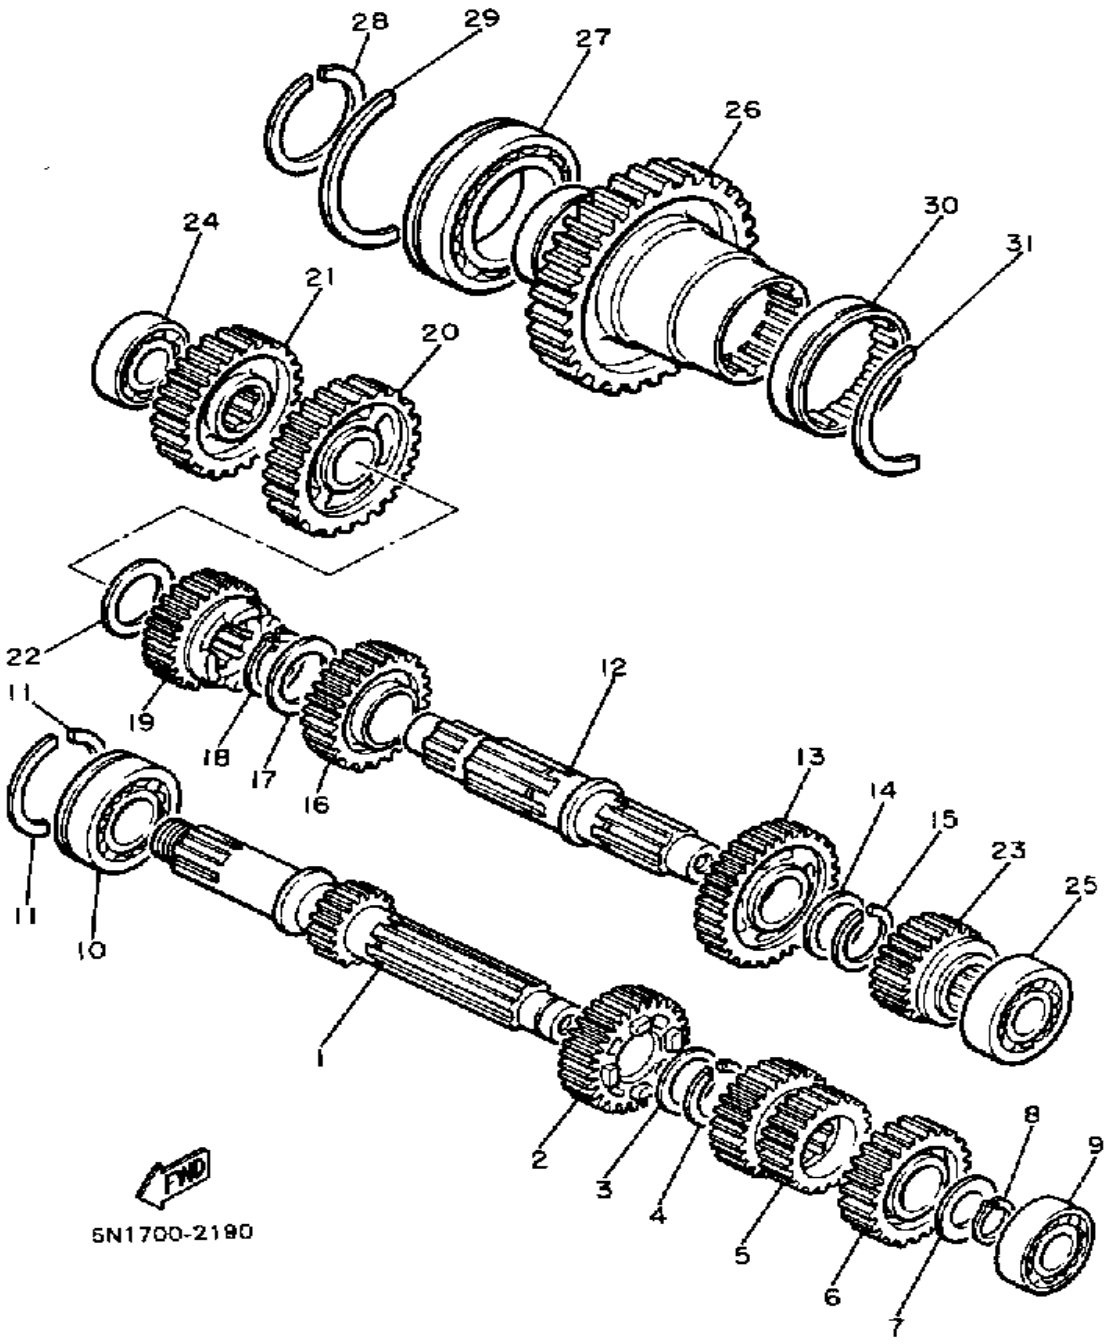


Ref. No.	Part Number	Description	Qty	Remarks
30	93311-36042-00	BEARING, CYLINDER.# 1	1	
31	93440-72049-00	CIRCLIP	1	

MIDDLE DRIVE GEAR

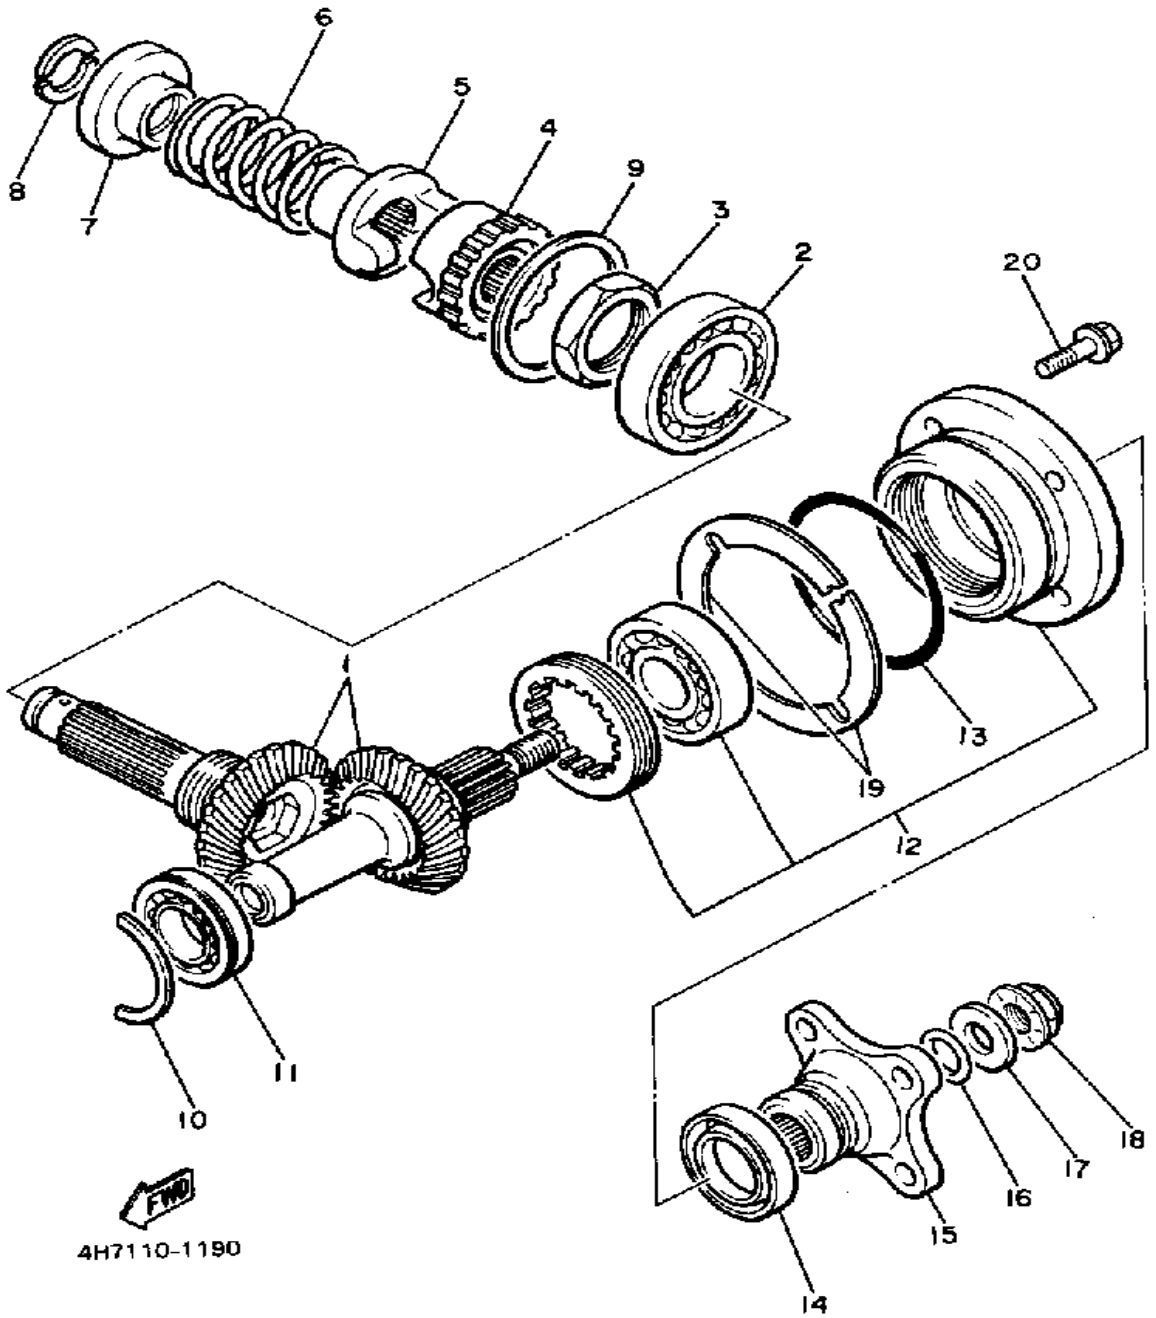

Ref. No.	Part Number	Description	Qty	Remarks
1	4H7-W1751-00-00	MIDDLE GEAR	1	
2	93306-20709-00	BEARING	1	
3	90179-34304-00	NUT, SPEC''L SHAPE	1	
4	4H7-17526-02-00	CAM, DRIVE	1	
5	4H7-17527-00-00	CAM, DRIVEN	1	
6	(90501-65575-00)	SPRING, COMPRESSION	1	
7	4H7-17524-00-00	HOLDER	1	
8	3H5-17529-00-00	WASHER, THRUST	2	
9	4H7-17537-00-20	SHIM, THRUST (0.20T)	1	U.R.
	4H7-17537-00-30	SHIM, THRUST (0.30T)	1	UR.
	4H7-17537-00-40	SHIM, THRUST (0.40T)	1	U.R.
10	93440-47081-00	CIRCLIP, OUTER	1	
11	93306-00519-00	BEARING	1	
12	4H7-W1752-00-00	HOUSHING COMP.	1	
13	93210-71360-00	O-RING	1	
14	93101-35097-00	OIL SEAL	1	
15	4H7-17555-00-00	FLANGE, MIDDLE GEAR	1	
16	93210-14359-00	O-RING	1	
17	90201-14633-00	WASHER, PLATE	1	
18	90179-14317-00	NUT, SPEC''L SHAPE	1	
19	3JB-17531-10-00	SHIM, PINION (0.15T)	1	U.R.
	3JB-17531-20-00	SHIM, PINION (0.20T)	1	U.R.
	3JB-17531-30-00	SHIM, PINION (0.30T)	1	U.R.
	3JB-17531-40-00	SHIM, PINION (0.40T)	1	U.R.
	4H7-17531-00-15	SHIM, PINION	1	U.R.
20	95811-08030-00	BOLT, FLANGE	4	


SHIFT CAM-FORK

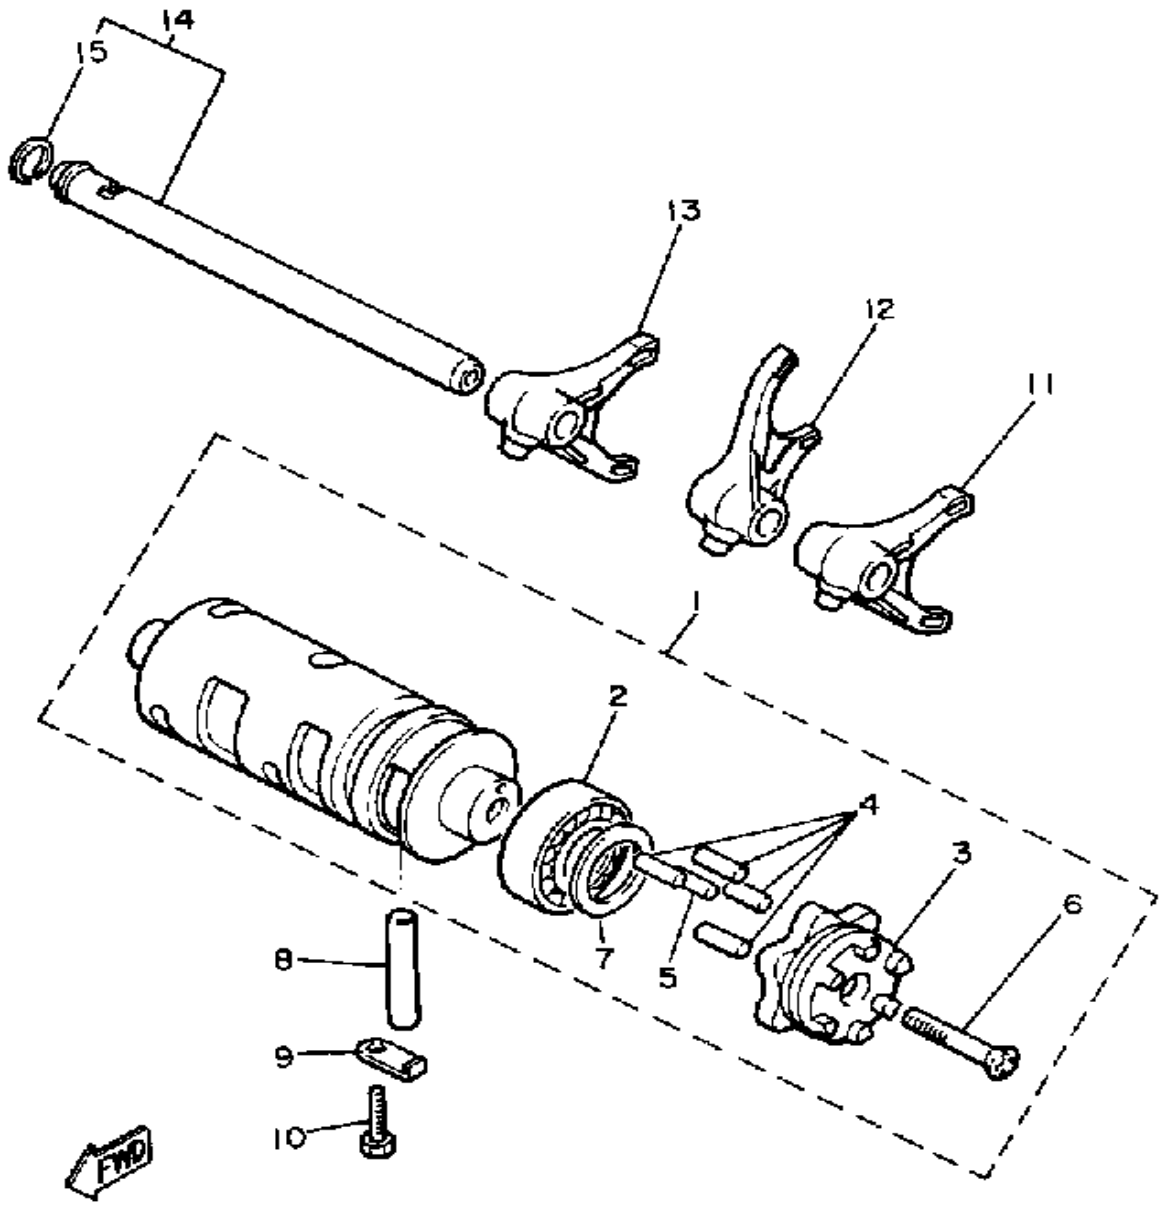

16G110-3241


Ref. No.	Part Number	Description	Qty	Remarks
1	16G-18540-00-00	SHIFT CAM ASSEMBLY	1	
2	93306-90501-00	. BEARING	1	
3	16G-18185-00-00	. SEGMENT	1	
4	93604-16092-00	. PIN, DOWEL	4	
5	93604-10011-00	. PIN, DOWEL	1	
6	98701-05035-00	. SCREW, FLAT HEAD	1	
7	90201-253K0-00	. WASHER, PLATE (T=1.0)	1	
8	93608-43157-00	PIN, DOWEL	1	
9	2H7-15531-00-00	PLATE, STOPPER	1	
10	97313-06016-00	BOLT, HEXAGON	1	
11	4H7-18511-01-00	FORK, SHIFT 1	1	
12	4H7-18512-01-00	FORK, SHIFT 2	1	
13	4H7-18513-01-00	FORK, SHIFT 3	1	
14	4H7-18531-00-00	BAR, SHIF FRK GDE 1	1	
15	93440-11029-00	. CIRCLIP, OUTER	1	

SHIFT SHAFT-PEDAL

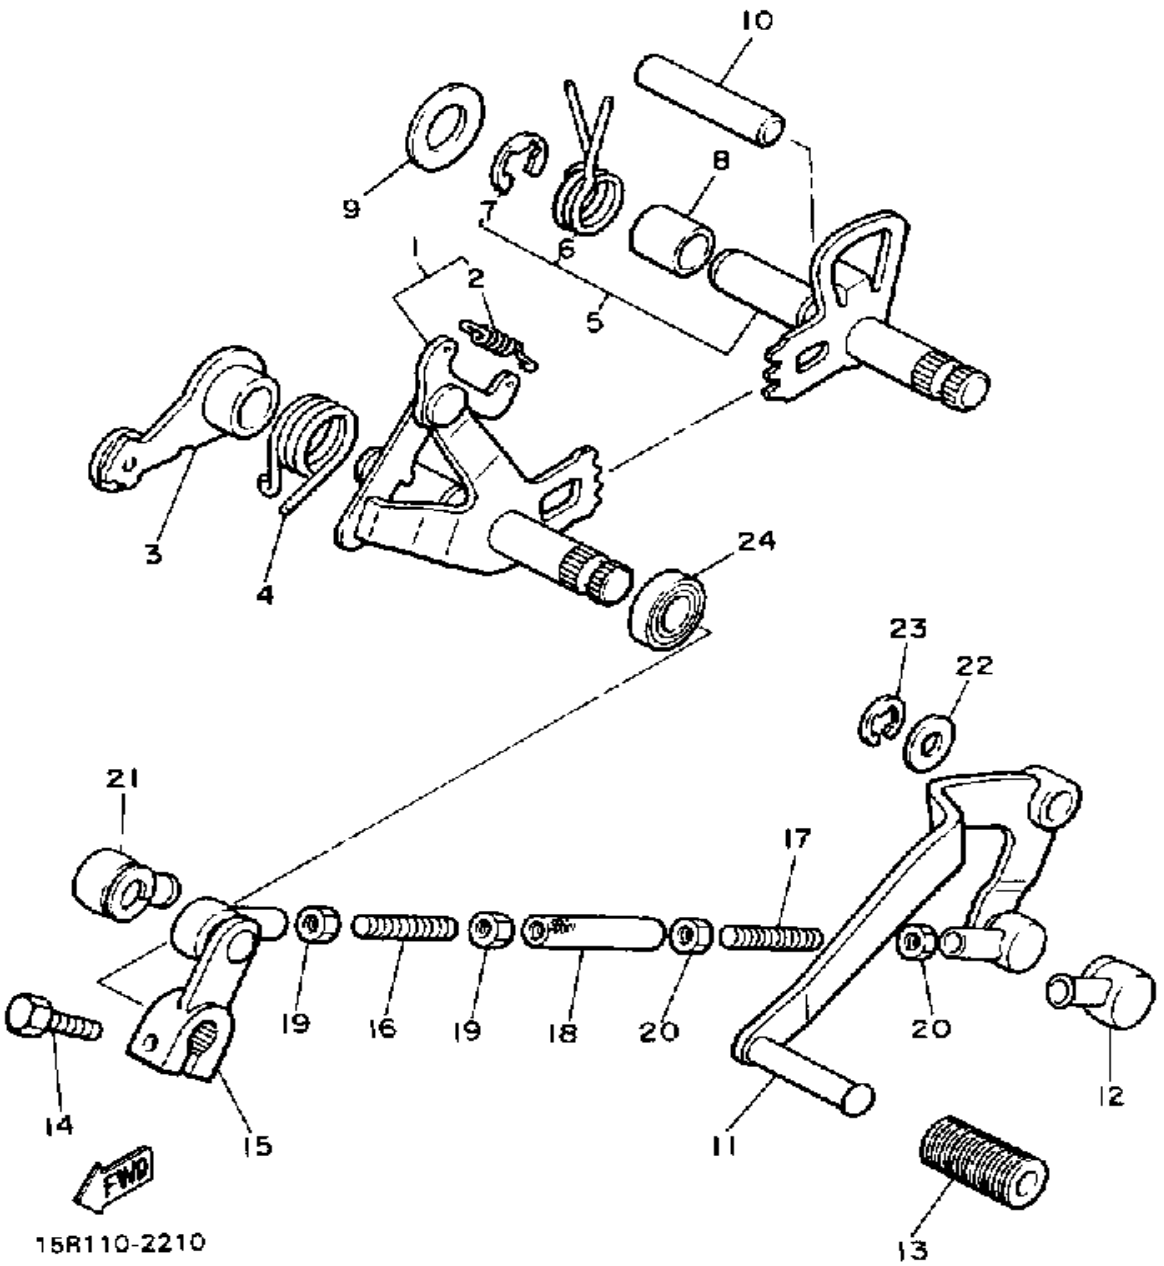

Ref. No.	Part Number	Description	Qty	Remarks
1	4K0-18101-00-00	SHIFT SHAFT ASSEMBLY 1 . .	1	
2	90506-08227-00	. SPRING, TENSION	1	
3	4H7-18140-00-00	STOPPER LEVER ASSEMBLY .	1	
4	90508-29530-00	SPRING, TORSION	1	
5	4K0-18120-01-00	SHIFT LEVER ASSEMBLY	1	
6	90508-32535-00	. SPRING, TORSION	1	
7	99006-10600-00	. CIRCLIP	1	
8	90387-124F4-00	COLLAR	1	
9	90201-12166-00	WASHER, PLATE	1	
10	93608-50158-00	PIN, DOWEL	1	
11	15R-18111-00-00	PEDAL, SHIFT	1	
12	2H9-18154-00-00	COVER, DUST	1	
13	132-18113-01-00	COVER, SHIFT PEDAL	1	
14	97011-06020-00	BOLT	1	
15	15R-18112-00-00	ARM, SHIFT	1	
16	90116-06382-00	BOLT, STUD	1	
17	90116-06383-00	BOLT, STUD	1	
18	15R-18115-00-00	ROD, SHIFT	1	
19	95380-06700-00	NUT	2	
20	90170-06228-00	NUT (COUNTER CLOCKWISE)	2	
21	2H9-18154-00-00	COVER, DUST	1	
22	90201-124E4-00	WASHER, PLATE	1	
23	99006-10600-00	CIRCLIP	1	
24	93102-12321-00	OIL SEAL, SD-TYPE	1	


FRAME

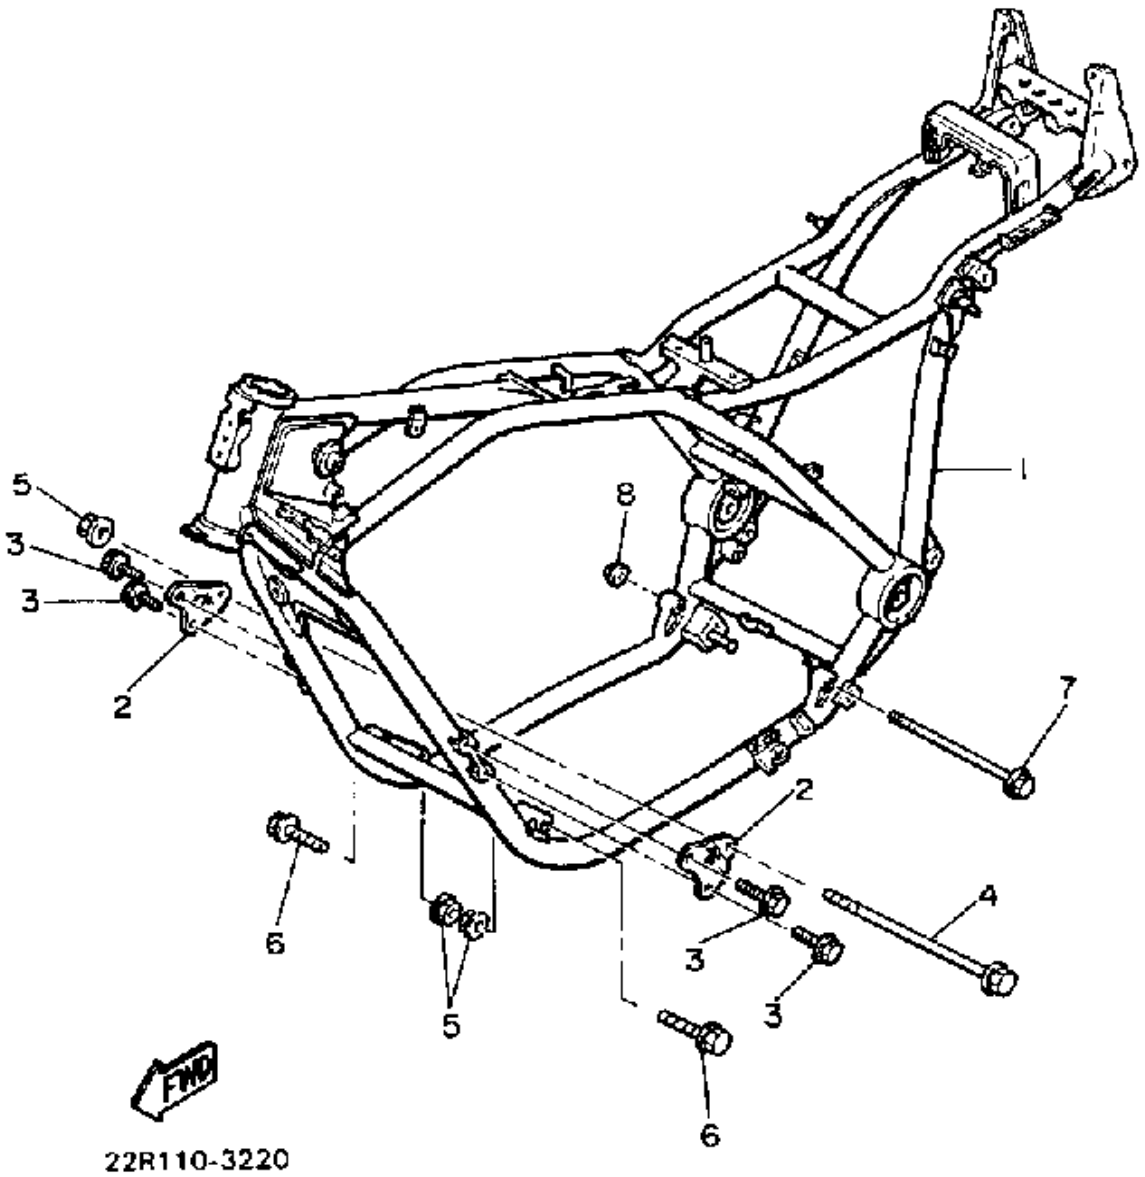

22R110-3220


Ref. No.	Part Number	Description	Qty	Remarks
1	(22R-21110-00-98)	FRAME	1	LOW GLOSS BLK
2	4H7-21315-00-00	STAY, ENGINE 2	2	
3	95811-08012-00	BOLT, FLANGE	4	
4	90105-10156-00	BOLT, WASHER BASED	1	
5	90179-10247-00	NUT	3	
6	90105-10038-00	BOLT, WASHER BASED	2	
7	(90105-12229-00)	BOLT, WASHER BASED	1	
8	90179-12421-00	NUT, SPEC''L SHAPE	1	

FENDER

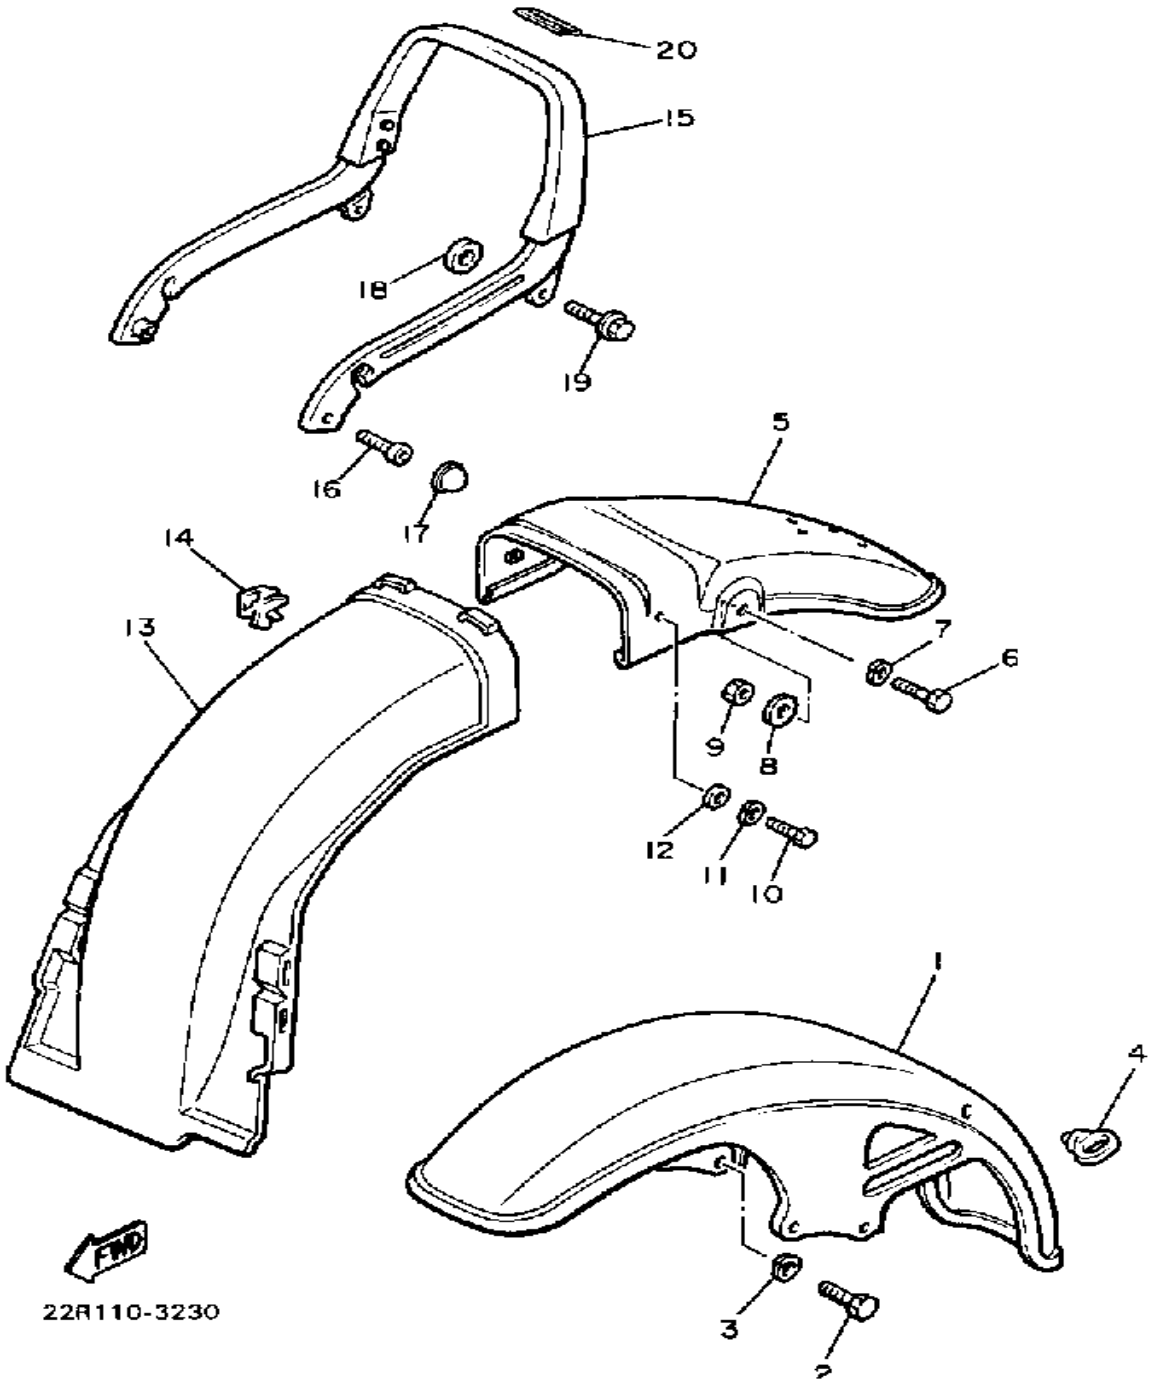

Ref. No.	Part Number	Description	Qty	Remarks
1	15R-21510-00-93	FENDER, FRONT	1	CHROME PLATED
2	97313-08020-00	BOLT, HEXAGON	4	
3	92990-08100-00	WASHER	4	
4	1A0-21518-00-00	HOLDER, CABLE	1	
5	15R-21610-00-93	FENDER, REAR	1	CHROME PLATED
6	97016-08020-00	BOLT	2	
7	92906-08100-00	WASHER, SPRING	2	
8	92990-08200-00	WASHER, PLAIN	2	
9	95333-08600-00	NUT	2	
10	97026-06012-00	BOLT	2	
11	92906-06100-00	WASHER, SPRING	2	
12	92906-06600-00	WASHER	2	
13	15R-21629-00-00	GUARD, MUD	1	
14	90464-16021-00	CLAMP	1	
15	15R-21640-00-00	REAR STAY CMPLT	1	
16	91311-08035-00	BOLT	2	
17	341-23469-00-00	CAP, BOLT	2	
18	90201-090F4-00	WASHER, PLATE	2	
19	95821-08025-00	BOLT, FLANGE	2	
20	(33N-21787-00-00)	EMBLEM 7	1	


SIDE COVER

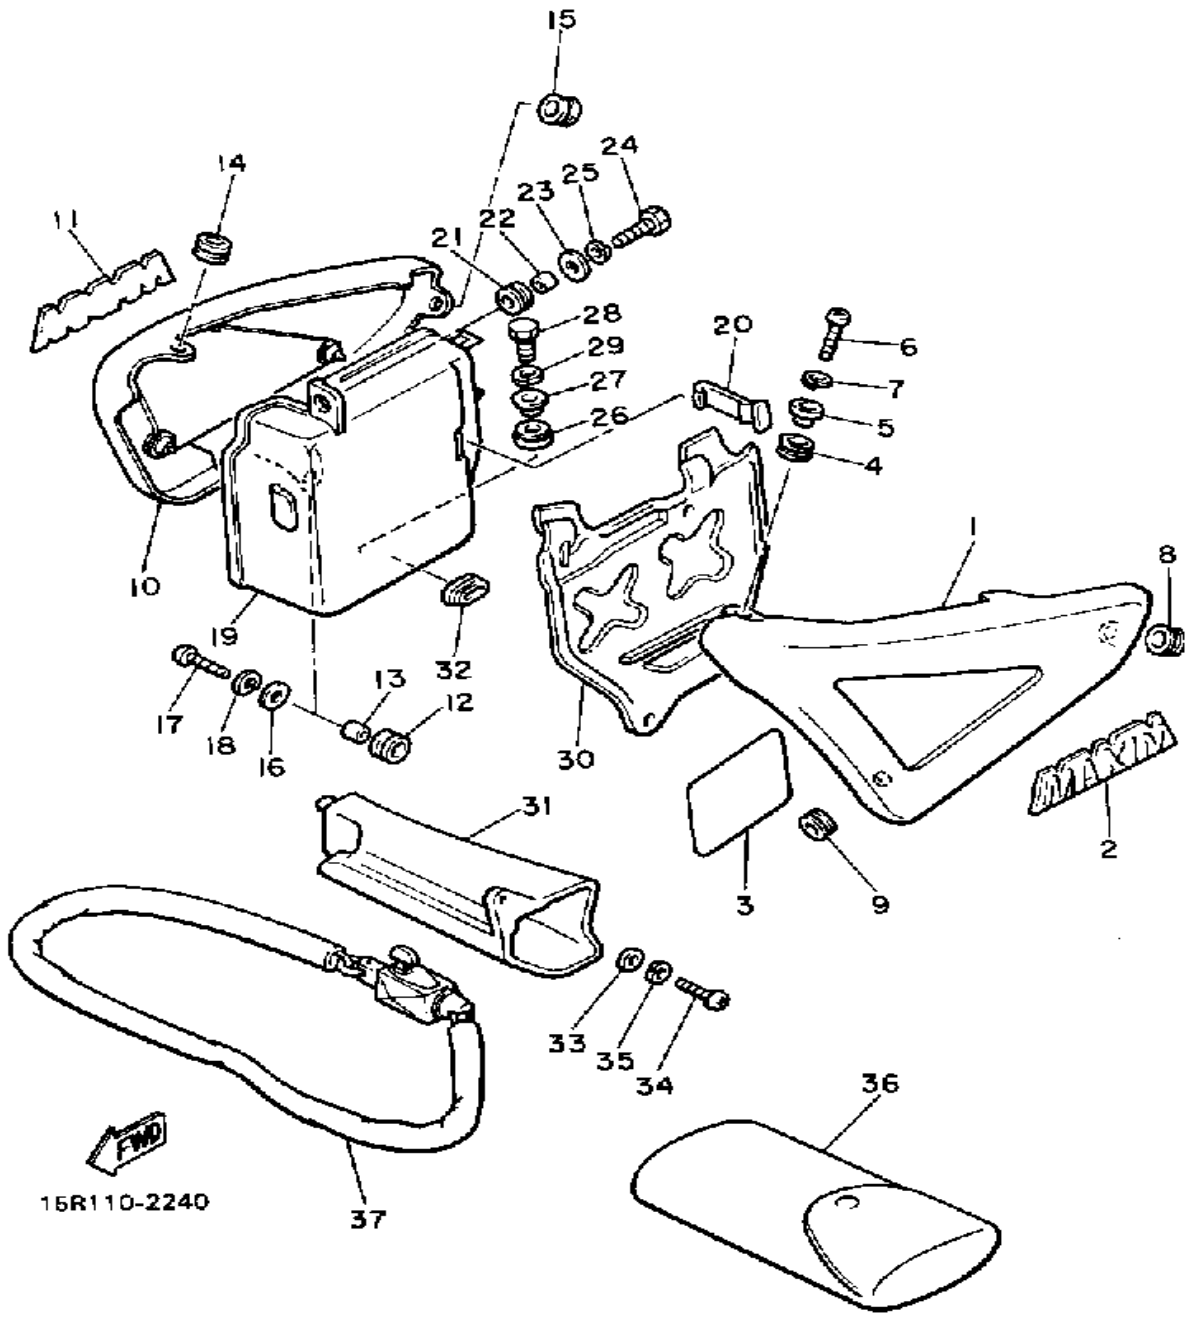

Ref. No.	Part Number	Description	Qty	Remarks
1	15R-21710-00-6G	SIDE COVER ASSEMBLY 1 . . .	1	U.R. NEW YAMAHA BLK
	15R-21710-00-7J	SIDE COVER ASSEMBLY 1 . . .	1	U.R. NEW RUBY RED
2	15R-21781-00-00	EMBLEM 1	1	
3	(5G2-21683-20-00)	PLATE, SPEC	1	
4	90480-10297-00	GROMMET	1	
5	90387-06024-00	COLLAR	1	
6	98506-06016-00	SCREW, PANHEAD	1	
7	92906-06100-00	WASHER, SPRING	1	
8	90480-11224-00	GROMMET	1	
9	90480-12296-00	GROMMET	1	
10	15R-21720-00-6G	SIDE COVER ASSEMBLY 2 . . .	1	NEW YAMAHA BLK
	15R-21720-00-7J	SIDE COVER ASSEMBLY 2 . . .	1	U.R. NEW RUBY RED
11	15R-21781-00-00	EMBLEM 1	1	
12	90480-10297-00	GROMMET	1	
13	90387-060E7-00	COLLAR	1	
14	90480-12261-00	GROMMET	1	
15	90480-11224-00	GROMMET	1	
16	90201-062A8-00	WASHER, PLATE	1	
17	98516-06020-00	SCREW, PAN HEAD	1	
18	92906-06100-00	WASHER, SPRING	1	
19	5G2-21240-00-00	BOX	1	
20	4H7-2175R-00-00	HOOK, BANK	1	
21	90480-16233-00	GROMMET	1	
22	90387-060A7-00	COLLAR	1	
23	90201-06407-00	WASHER, PLATE (90201-06747-00)	1	
24	97011-06025-00	BOLT (97001-06025)	1	
25	92995-06100-00	WASHER, SPRING	1	


CONTINUED ON NEXT FRAME ➤

SIDE COVER

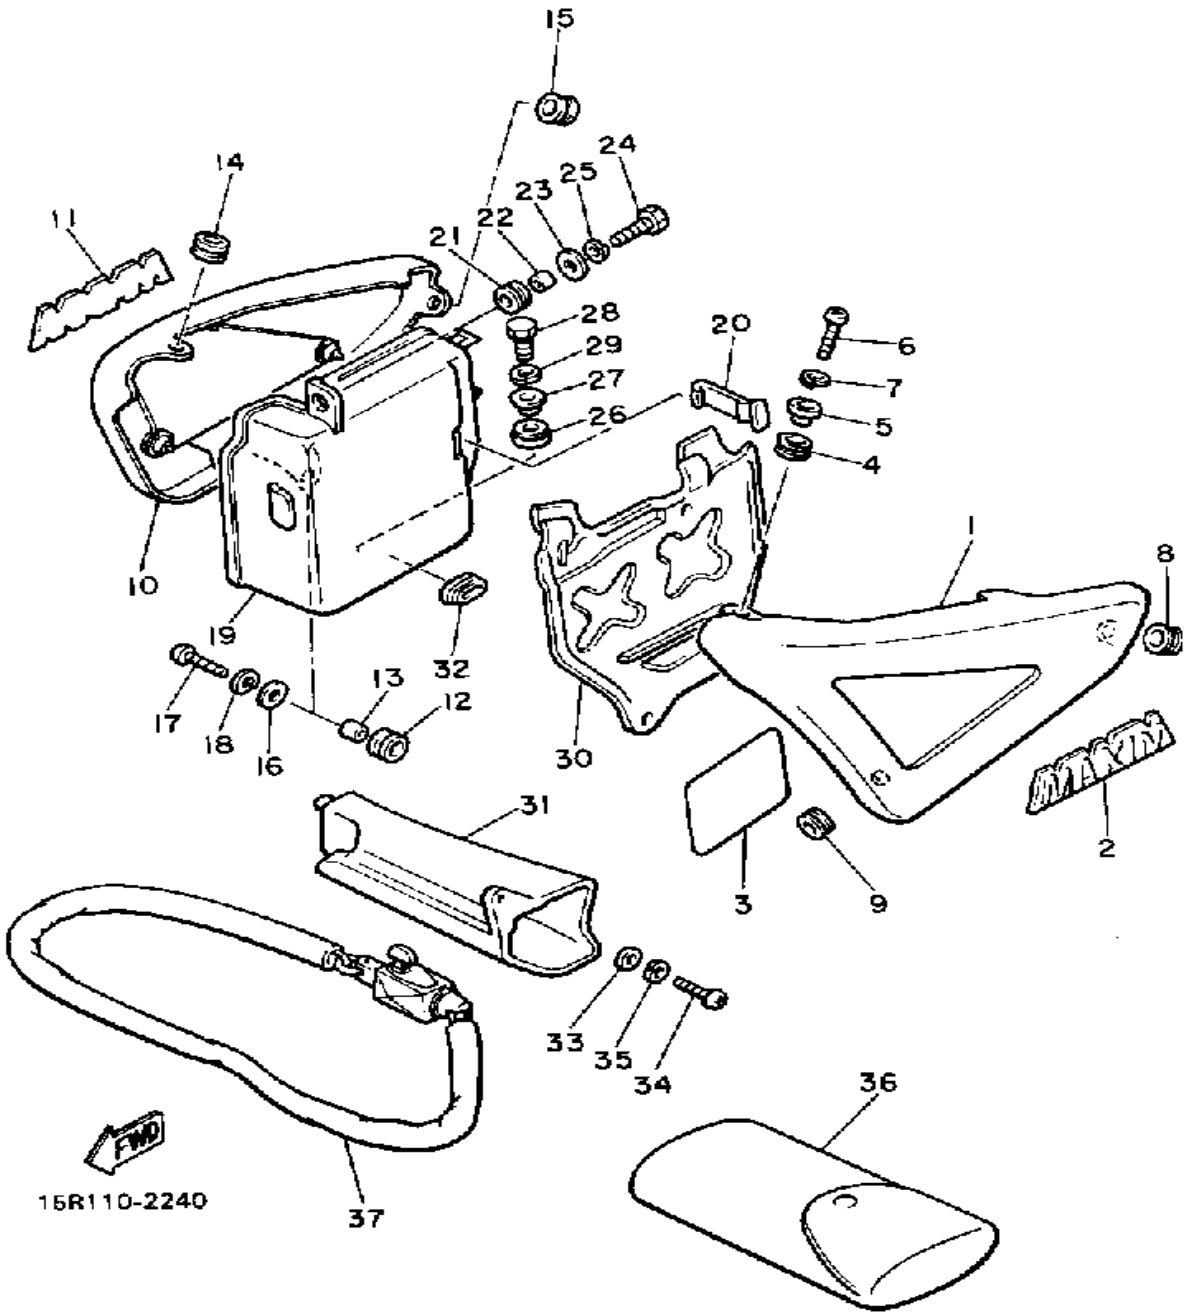

Ref. No.	Part Number	Description	Qty	Remarks
26	4H7-21746-00-00	DAMPER	1	
27	90387-093H1-00	COLLAR (46Y)	1	
28	97013-08025-00	BOLT	1	
29	92990-08100-00	WASHER	1	
30	4H7-21243-01-00	PLATE, BRIDGE	1	
31	4H7-21258-00-00	BOX	1	
32	90480-22084-00	GROMMET	1	
33	90201-065F3-00	WASHER, PLATE	1	
34	98580-06020-00	SCREW	1	
35	92995-06100-00	WASHER, SPRING	1	
36	5G2-28100-00-00	TOOL KIT (5G2-28100-10)	1	
37	4W5-W2171-01-00	UNAVAILABLE IN PRICE BOOK (4H7-W2171-01)	1	


SWING ARM-REAR SHOCKS

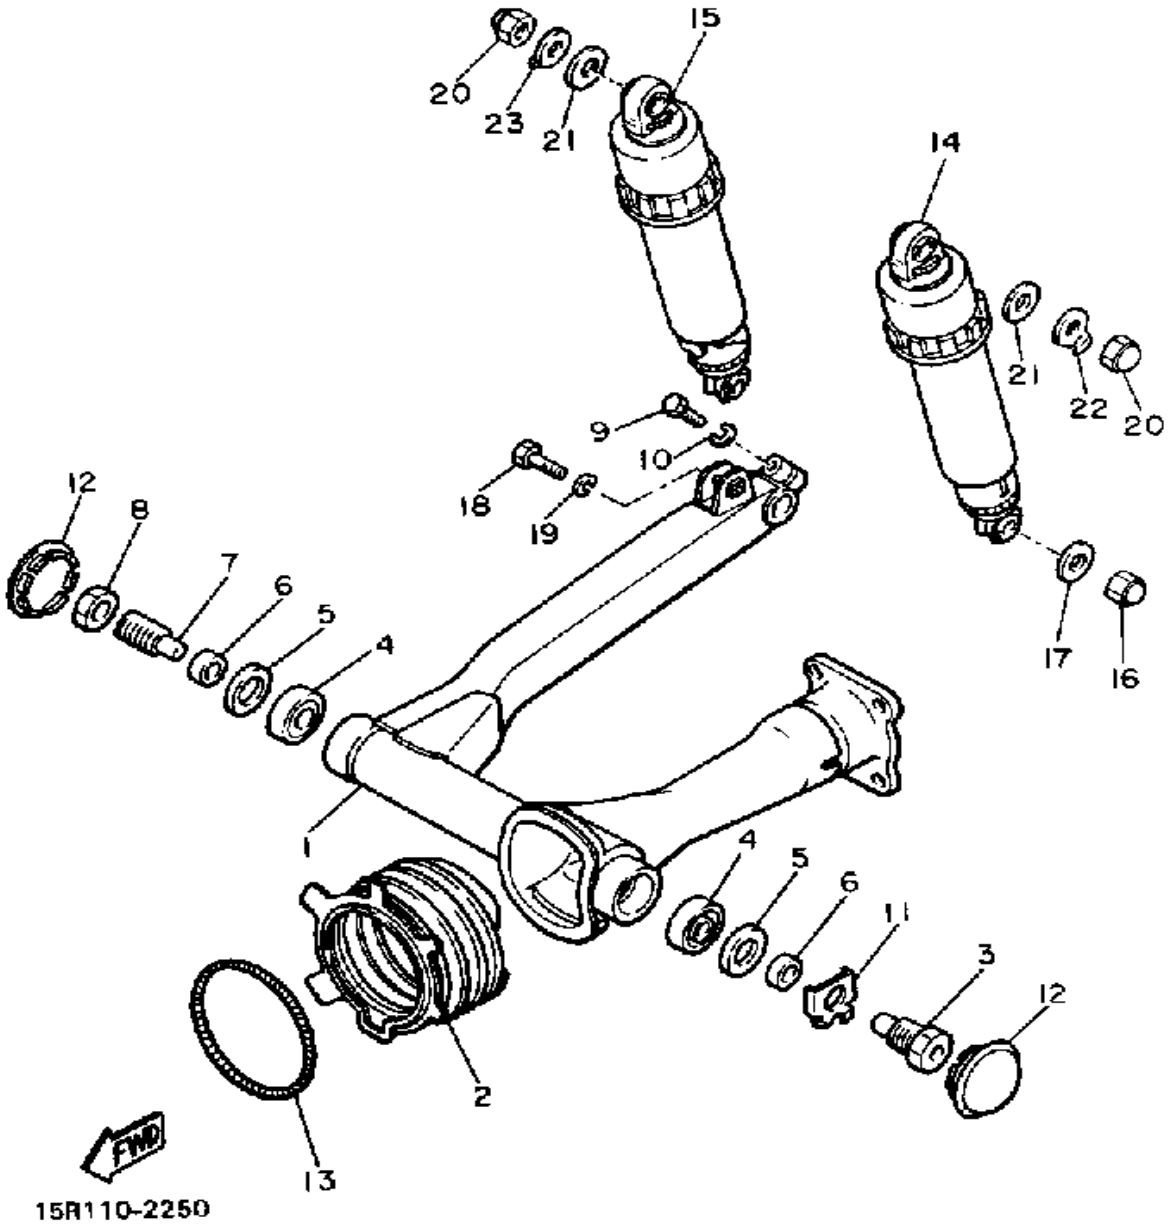

15R110-2250

Ref. No.	Part Number	Description	Qty	Remarks
1	16G-22110-00-98	REAR ARM (4H7-22110-00-98) .	1	LOW GLOSS BLK
2	4H7-22189-00-00	BOOT, RUBBER	1	
3	4H7-22141-00-00	SHAFT, PIVOT	1	
4	93332-00010-00	BEARING	2	
5	93102-25017-00	OIL SEAL	2	
6	90387-17543-00	COLLAR	2	
7	1J7-22141-00-00	SHAFT, PIVOT	1	
8	1J7-22143-00-00	NUT	1	
9	97026-08035-00	BOLT (TJ)	1	
10	92906-08100-00	WASHER, SPRING	1	
11	90215-22238-00	WASHER, LOCK	1	
12	2H7-2219X-00-00	COVER	2	
13	90506-07136-00	SPRING, TENSION	1	
14	15R-22210-00-00	SHK/ABS ASSEMBLY, REAR .	1	
15	15R-22210-10-00	SHK/ABS ASSEMBLY, REAR .	1	
16	90176-10013-00	NUT, CROWN	1	
17	90201-10437-00	WASHER, PLATE	1	
18	90106-10030-00	BOLT, DOME HEAD	1	
19	92990-10100-00	WASHER, SPRING	1	
20	90176-10013-00	NUT, CROWN	2	
21	90201-10142-00	WASHER, PLATE (341-22243-00)	2	
22	4H7-22243-00-00	WASHER 1	1	
23	4W5-22244-00-00	WASHER 2 (4H7-22244-00) . . .	1	


DRIVE SHAFT

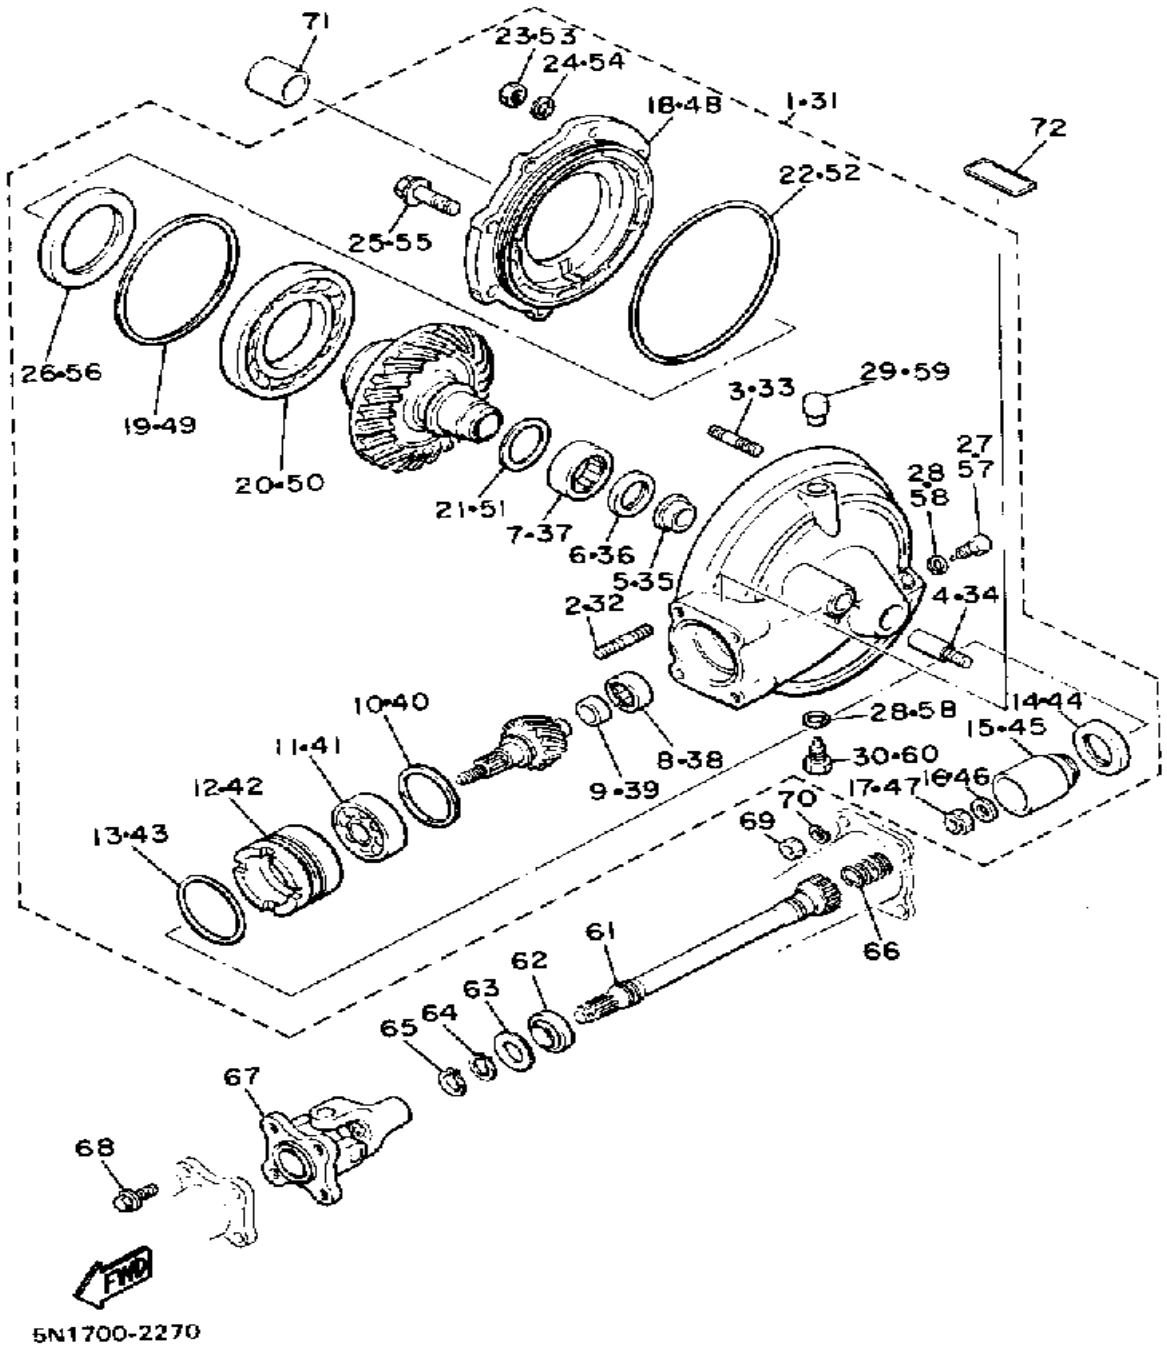

Ref. No.	Part Number	Description	Qty	Remarks
1	5G2-46101-01-00	REAR AXLE GEAR CASE ASSEMBLY	1	U.R.
2	90116-10361-00	. BOLT, STUD	4	
3	90116-08360-00	. BOLT, STUD	6	
4	90116-10249-00	. BOLT, STUD	1	
5	4H7-46153-00-00	. COLLAR, GUIDE	1	
6	93101-30084-00	. OIL SEAL	1	
7	93311-43729-00	. BEARING	1	
8	93317-41510-00	. BEARING	1	
9	2H7-46122-00-00	. RACE, INNER	1	
10	1J7-17537-Y0-30	. SHIM, THRUST (0.30T)	1	U.R.
	1J7-17537-Y0-40	. SHIM, THRUST (0.40T)	1	U.R.
	1J7-17537-Y0-50	. SHIM, THRUST (0.50T)	1	U.R.
11	93306-30533-00	. BEARING (B6305RB1 SPECIAL)	1	
12	4H7-46125-00-00	. RETAINER, BEARING	1	
13	93210-60426-00	. O-RING	1	
14	93101-38098-00	. OIL SEAL	1	
15	4H7-46123-00-00	. COUPLING, GEAR	1	
16	90201-14632-00	. WASHER, PLATE	1	
17	90185-14070-00	. NUT, SELF-LOCKING	1	
18	4H7-46152-00-00	. HOUSING, BEARING	1	
19	1J7-46117-Y0-25	. SHIM, RING GEAR (0.25T)	1	U.R.
	1J7-46117-Y0-30	. SHIM, RING GEAR (0.30T)	1	U.R.
	1J7-46117-Y0-35	. SHIM, RING GEAR	1	U.R.
	1J7-46117-Y0-40	. SHIM, RING GEAR (0.40T)	1	U.R.
	1J7-46117-Y0-50	. SHIM, RING GEAR (0.50T)	1	U.R.
20	93316-01403-00	. BEARING	1	
21	1J7-46118-Y0-18	. WASHER, THRUST	1	U.R.

CONTINUED ON NEXT FRAME ➤

DRIVE SHAFT

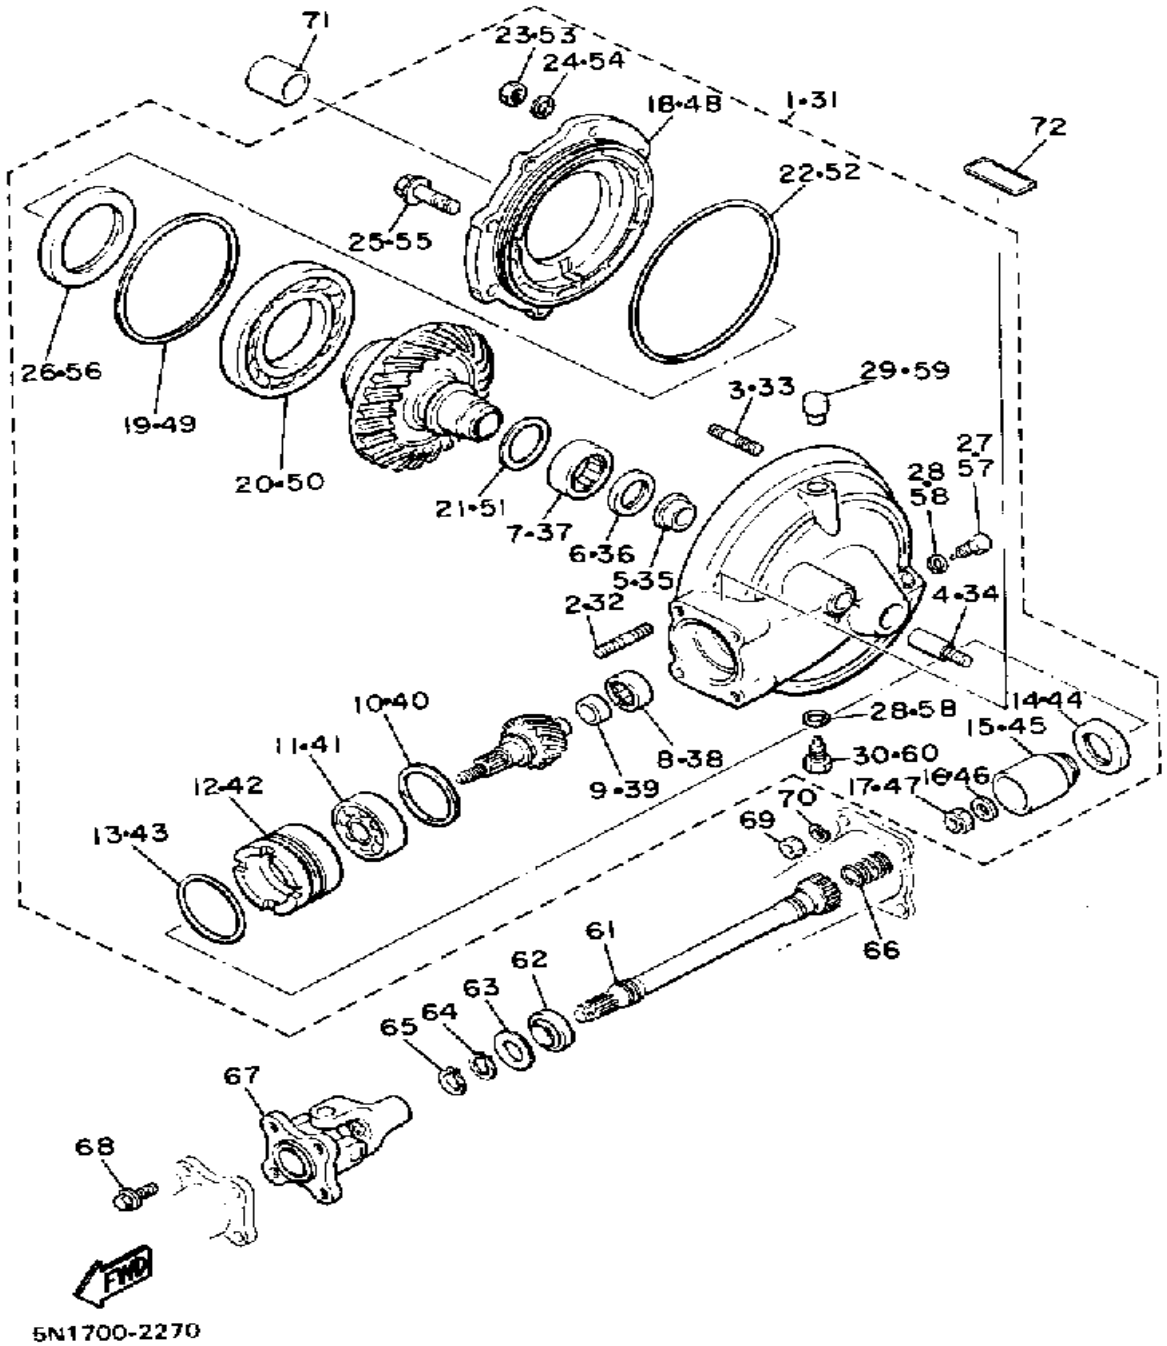


5N1700-2270

Ref. No.	Part Number	Description	Qty	Remarks
21	1J7-46118-Y0-19	. WASHER, THRUST	1	U.R.
	1J7-46118-Y0-20	. WASHER, THRUST	1	U.R.
	1J7-46118-Y0-21	. WASHER, THRUST	1	U.R.
	4H7-46118-00-14	. WASHER, THRUST	1	U.R.
	4H7-46118-00-15	. WASHER, THRUST	1	U.R.
	4H7-46118-00-16	. WASHER, THRUST	1	U.R.
	4H7-46118-00-17	. WASHER, THRUST	1	U.R.
	4H7-46118-00-22	. WASHER, THRUST	1	U.R.
	4H7-46118-00-23	. WASHER, THRUST	1	U.R.
22	93211-44348-00	. O-RING	1	
23	95333-08600-00	. NUT	6	
24	92901-08700-00	. WASHER, WAVE	6	
25	95811-10025-00	. BOLT, FLANGE	2	
26	93102-70167-00	. OIL SEAL	1	
27	3VD-13455-00-00	. PLUG	1	
28	214-11198-01-00	. GASKET	2	
29	2H7-17590-00-00	. BREATHER COMP.	1	
30	90340-14118-00	. PLUG, STRAIGHT	1	
31	5G2-46101-01-00	REAR AXLE GEAR CASE ASSEMBLY	1	U.R.
32	90116-10361-00	. BOLT, STUD	4	
33	90116-08360-00	. BOLT, STUD	6	
34	90116-10249-00	. BOLT, STUD	1	
35	4H7-46153-00-00	. COLLAR, GUIDE	1	
36	93101-30084-00	. OIL SEAL	1	
37	93311-43729-00	. BEARING	1	
38	93317-41510-00	. BEARING	1	
39	2H7-46122-00-00	. RACE, INNER	1	
40	1J7-17537-Y0-30	. SHIM, THRUST (0.30T)	1	U.R.

CONTINUED ON NEXT FRAME ➤


DRIVE SHAFT

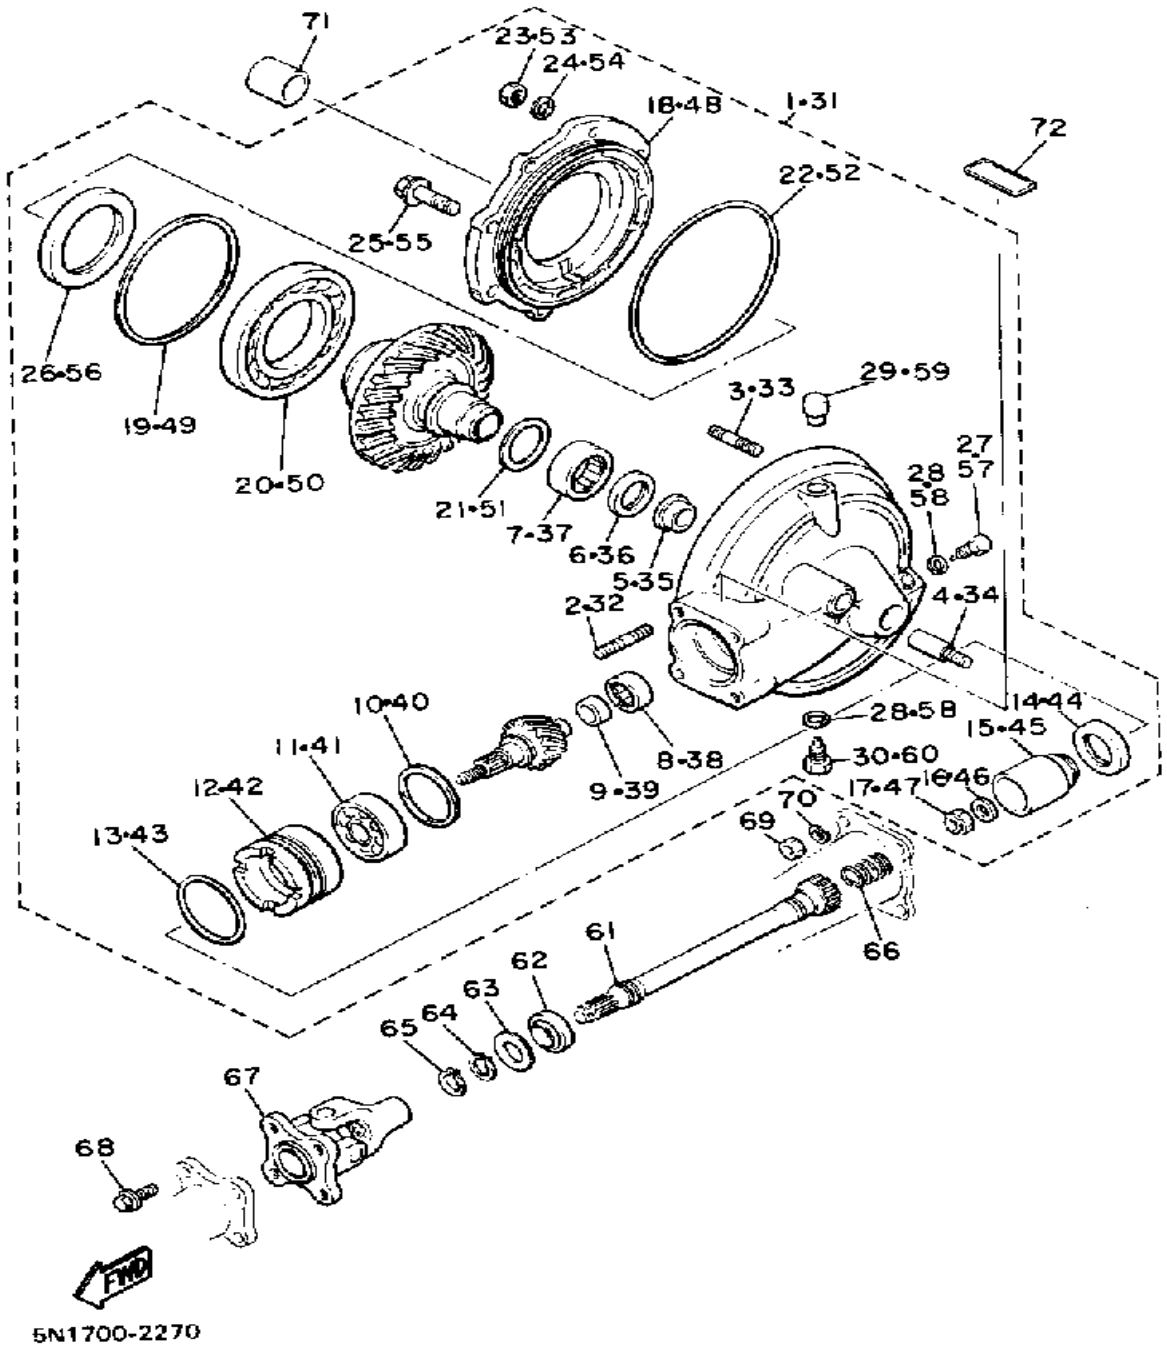

Ref. No.	Part Number	Description	Qty	Remarks
40	1J7-17537-Y0-40	. SHIM, THRUST (0.40T)	1	U.R.
	1J7-17537-Y0-50	. SHIM, THRUST (0.50T)	1	U.R.
41	93306-30533-00	. BEARING (B6305RB1 SPECIAL)	1	
42	4H7-46125-00-00	. RETAINER, BEARING	1	
43	93210-60426-00	. O-RING	1	
44	93101-38098-00	. OIL SEAL	1	
45	4H7-46123-00-00	. COUPLING, GEAR	1	
46	90201-14632-00	. WASHER, PLATE	1	
47	90185-14070-00	. NUT, SELF-LOCKING	1	
48	4H7-46152-00-00	. HOUSING, BEARING	1	
49	1J7-46117-Y0-25	. SHIM, RING GEAR (0.25T) . . .	1	U.R.
	1J7-46117-Y0-30	. SHIM, RING GEAR (0.30T) . . .	1	U.R.
	1J7-46117-Y0-35	. SHIM, RING GEAR	1	U.R.
	1J7-46117-Y0-40	. SHIM, RING GEAR (0.40T) . . .	1	U.R.
	1J7-46117-Y0-50	. SHIM, RING GEAR (0.50T) . . .	1	U.R.
50	93316-01403-00	. BEARING	1	
51	1J7-46118-Y0-18	. WASHER, THRUST	1	U.R.
	1J7-46118-Y0-19	. WASHER, THRUST	1	U.R.
	1J7-46118-Y0-20	. WASHER, THRUST	1	U.R.
	1J7-46118-Y0-21	. WASHER, THRUST	1	U.R.
	4H7-46118-00-14	. WASHER, THRUST	1	U.R.
	4H7-46118-00-15	. WASHER, THRUST	1	U.R.
	4H7-46118-00-16	. WASHER, THRUST	1	U.R.
	4H7-46118-00-17	. WASHER, THRUST	1	U.R.
	4H7-46118-00-22	. WASHER, THRUST	1	U.R.
	4H7-46118-00-23	. WASHER, THRUST	1	U.R.
52	93211-44348-00	. O-RING	1	
53	95333-08600-00	. NUT	6	


CONTINUED ON NEXT FRAME ➤

DRIVE SHAFT

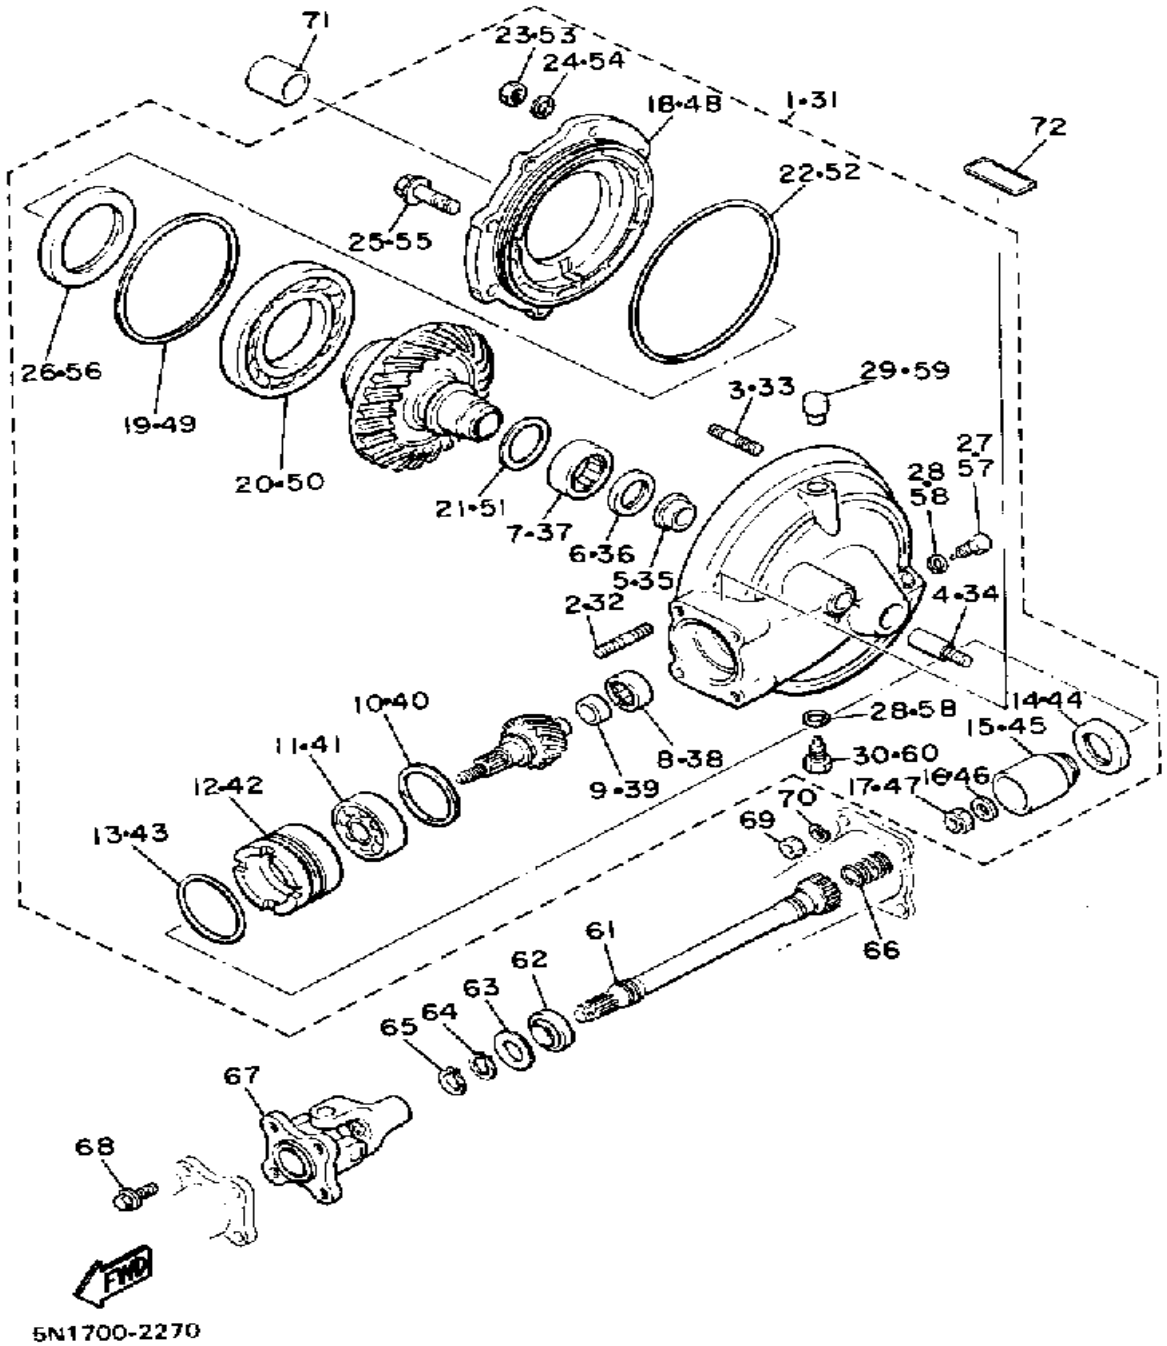

Ref. No.	Part Number	Description	Qty	Remarks
54	92901-08700-00	. WASHER, WAVE	6	
55	95811-10025-00	. BOLT, FLANGE	2	
56	93102-70167-00	. OIL SEAL	1	
57	3VD-13455-00-00	. PLUG	1	
58	214-11198-01-00	. GASKET	2	
59	2H7-17590-00-00	. BREATHER COMP.	1	
60	90340-14118-00	. PLUG, STRAIGHT	1	
61	5G2-46172-00-00	SHAFT, DRIVE	1	
62	93108-23007-00	OIL SEAL	1	
63	90201-231A2-00	WASHER, PLATE	1	
64	93410-23056-00	CIRCLIP	1	
65	93410-22039-00	CIRCLIP	1	
66	90501-16491-00	SPRING, COMPRESSION	1	
67	4H7-46180-00-00	CROSS JOINT	1	
68	90105-08155-00	BOLT, WASHER BASED	4	
69	95336-10600-00	NUT	4	
70	92906-10100-00	WASHER, SPRING	4	
71	90387-172A5-00	COLLAR	1	
72	4H7-46181-10-00	LABEL, OIL CAUTION	1	


FRONT FORK

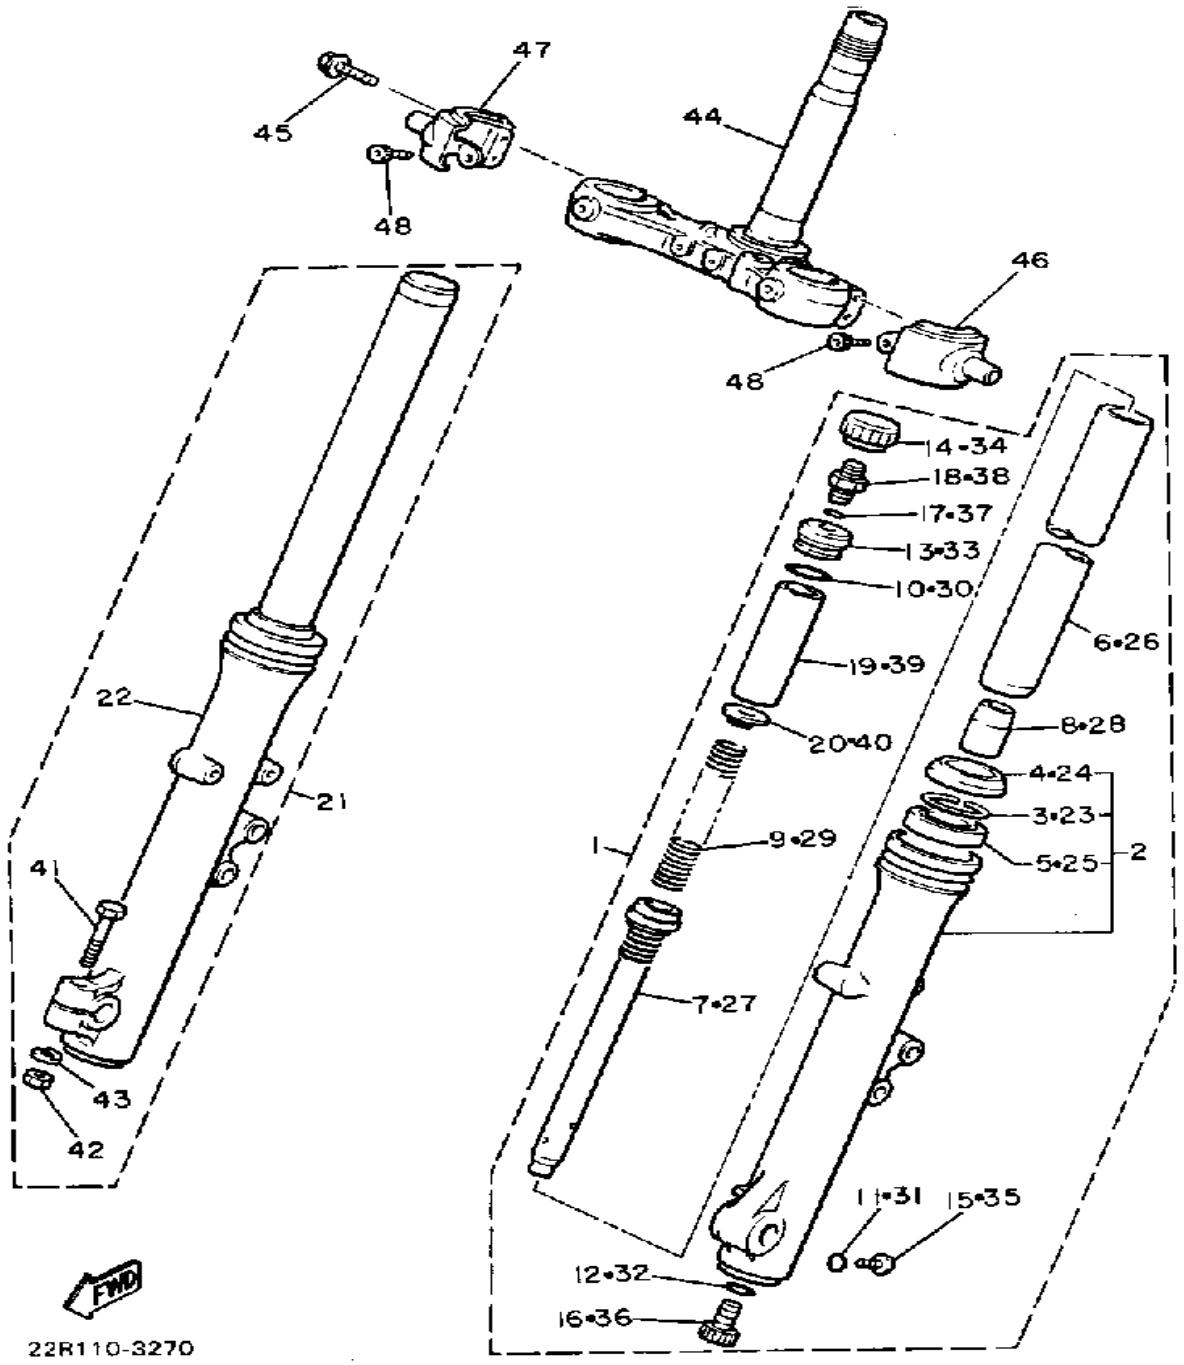

Ref. No.	Part Number	Description	Qty	Remarks
1	(22R-23102-00-00)	FRONT FORK ASSEMBLY L . .	1	
2	15R-23126-00-00	. TUBE, OUTER 1	1	
3	4A1-23156-00-00	. . CLIP, OIL SEAL	1	
4	33M-23144-00-00	. . SEAL, DUST (15R-23144-00)	1	
5	49A-23145-00-00	. . OIL SEAL (15R-23145-00) . .	1	
6	22R-23110-00-00	. INNER TUBE 1	1	
7	4H7-23170-00-00	. CYLINDER, FRTFRKFRONT FORK	1	
8	1W1-23173-L0-00	. SPINDLE, TAPER	1	
9	(5N8-23141-00-00)	SPRING, FRONT FORK	1	
10	240-23114-00-00	. GASKET	1	
11	122-23129-00-00	. GASKET, DRAIN PLUG	1	
12	509-23158-L0-00	. GASKET	1	
13	20X-23111-00-00	. BOLT, CAP	1	
14	4X7-23168-00-00	. CAP, FRONT FORK	1	
15	4H7-23119-00-00	. PLUG, DRAIN - (122-23119-01)	1	
16	278-23181-50-00	. BOLT, HEXAGON SOCKET HEAD	1	
17	3J2-23147-00-00	. O-RING	1	
18	4V4-23190-L0-00	. AIR VALVE COMP	1	
19	5N8-23118-00-00	. INACTIVE PART NUMBER . . .	1	
20	583-23142-00-00	. SEAT, SPRING UPPER	1	
21	(22R-23103-00-00)	FRONT FORK ASSEMBLY R . .	1	
22	15R-23136-00-00	. TUBE, OUTER 2	1	
23	4A1-23156-00-00	. . CLIP, OIL SEAL	1	
24	33M-23144-00-00	. . SEAL, DUST (15R-23144-00)	1	
25	49A-23145-00-00	. . OIL SEAL (15R-23145-00) . .	1	
26	22R-23110-00-00	. INNER TUBE 1	1	
27	4H7-23170-00-00	. CYLINDER, FRTFRKFRONT FORK	1	

CONTINUED ON NEXT FRAME ➤


FRONT FORK

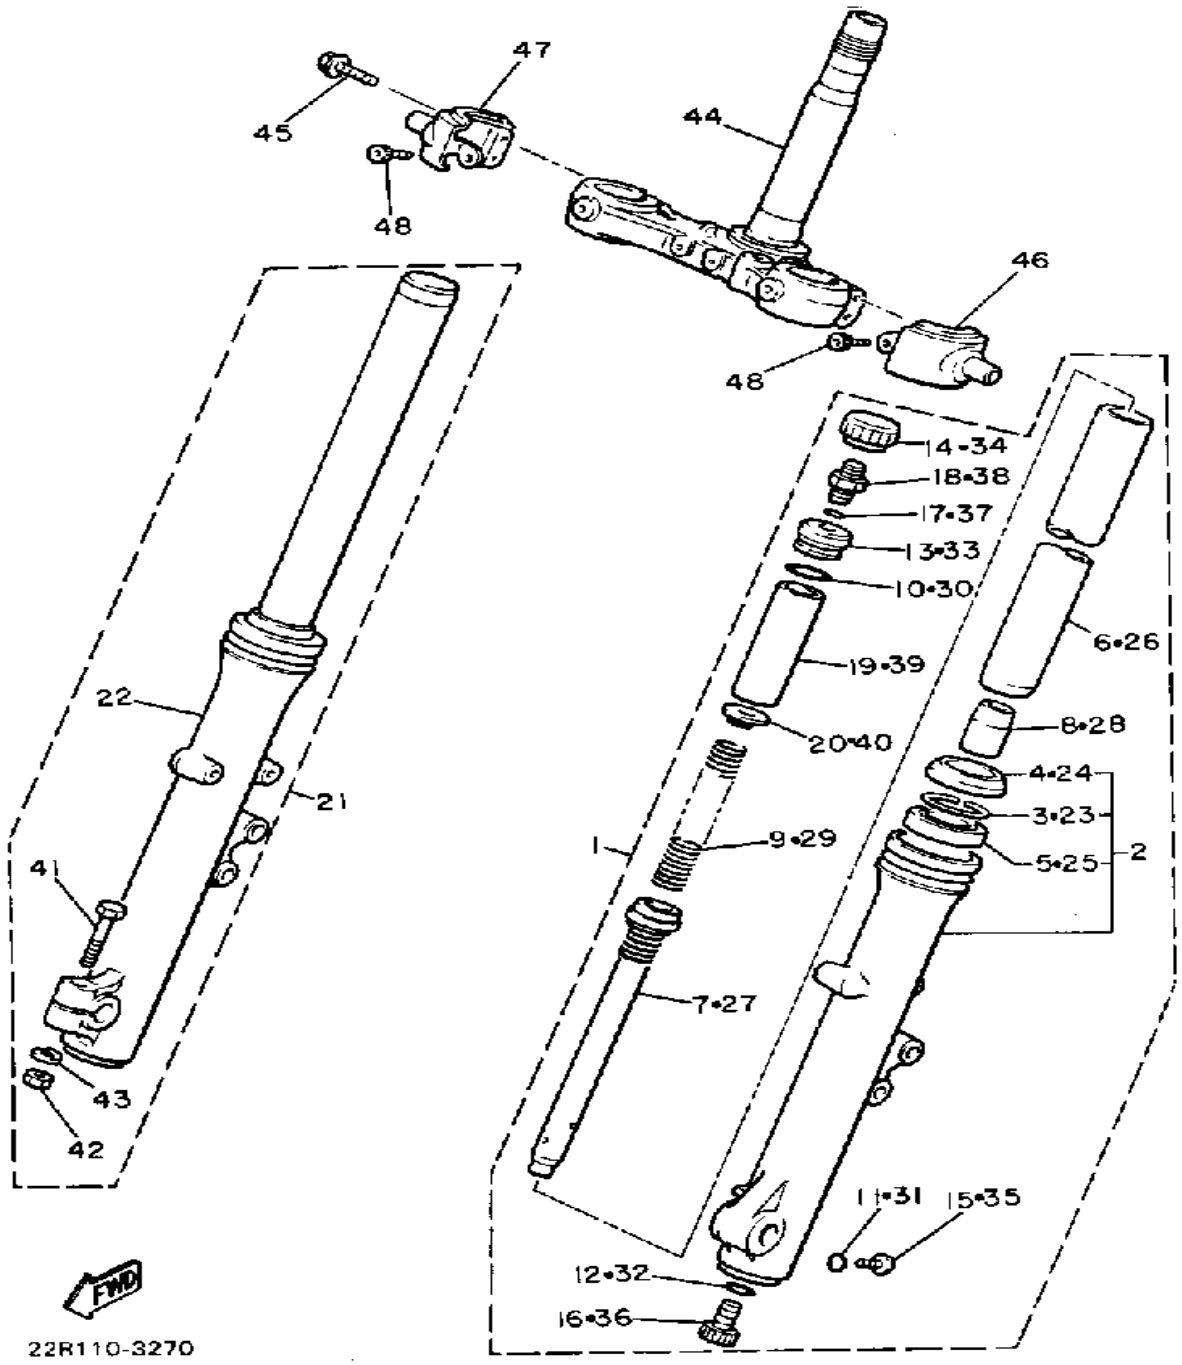

22R110-3270


Ref. No.	Part Number	Description	Qty	Remarks
28	1W1-23173-L0-00	. SPINDLE, TAPER	1	
29	(5N8-23141-00-00)	SPRING, FRONT FORK	1	
30	240-23114-00-00	. GASKET	1	
31	122-23129-00-00	. GASKET, DRAIN PLUG	1	
32	509-23158-L0-00	. GASKET	1	
33	20X-23111-00-00	. BOLT, CAP	1	
34	4X7-23168-00-00	. CAP, FRONT FORK	1	
35	4H7-23119-00-00	. PLUG, DRAIN - (122-23119-01)	1	
36	278-23181-50-00	. BOLT, HEXAGON SOCKET HEAD	1	
37	3J2-23147-00-00	. O-RING	1	
38	4V4-23190-L0-00	. AIR VALVE COMP	1	
39	5N8-23118-00-00	. INACTIVE PART NUMBER	1	
40	583-23142-00-00	. SEAT, SPRING UPPER	1	
41	97313-08045-00	. BOLT	1	
42	95333-08600-00	. NUT	1	
43	92990-08100-00	. WASHER	1	
44	5N8-23340-00-33	UNDER BRACKET	1	YAMAHA BLACK
45	18G-23128-00-00	BOLT, W/WASHER	4	
46	4H7-23122-00-00	COVER, OUTER 1	1	
47	4H7-23132-00-00	COVER, OUTER 2	1	
48	4H7-23181-00-00	BOLT, HEX SCKT HEAD	2	

STEERING

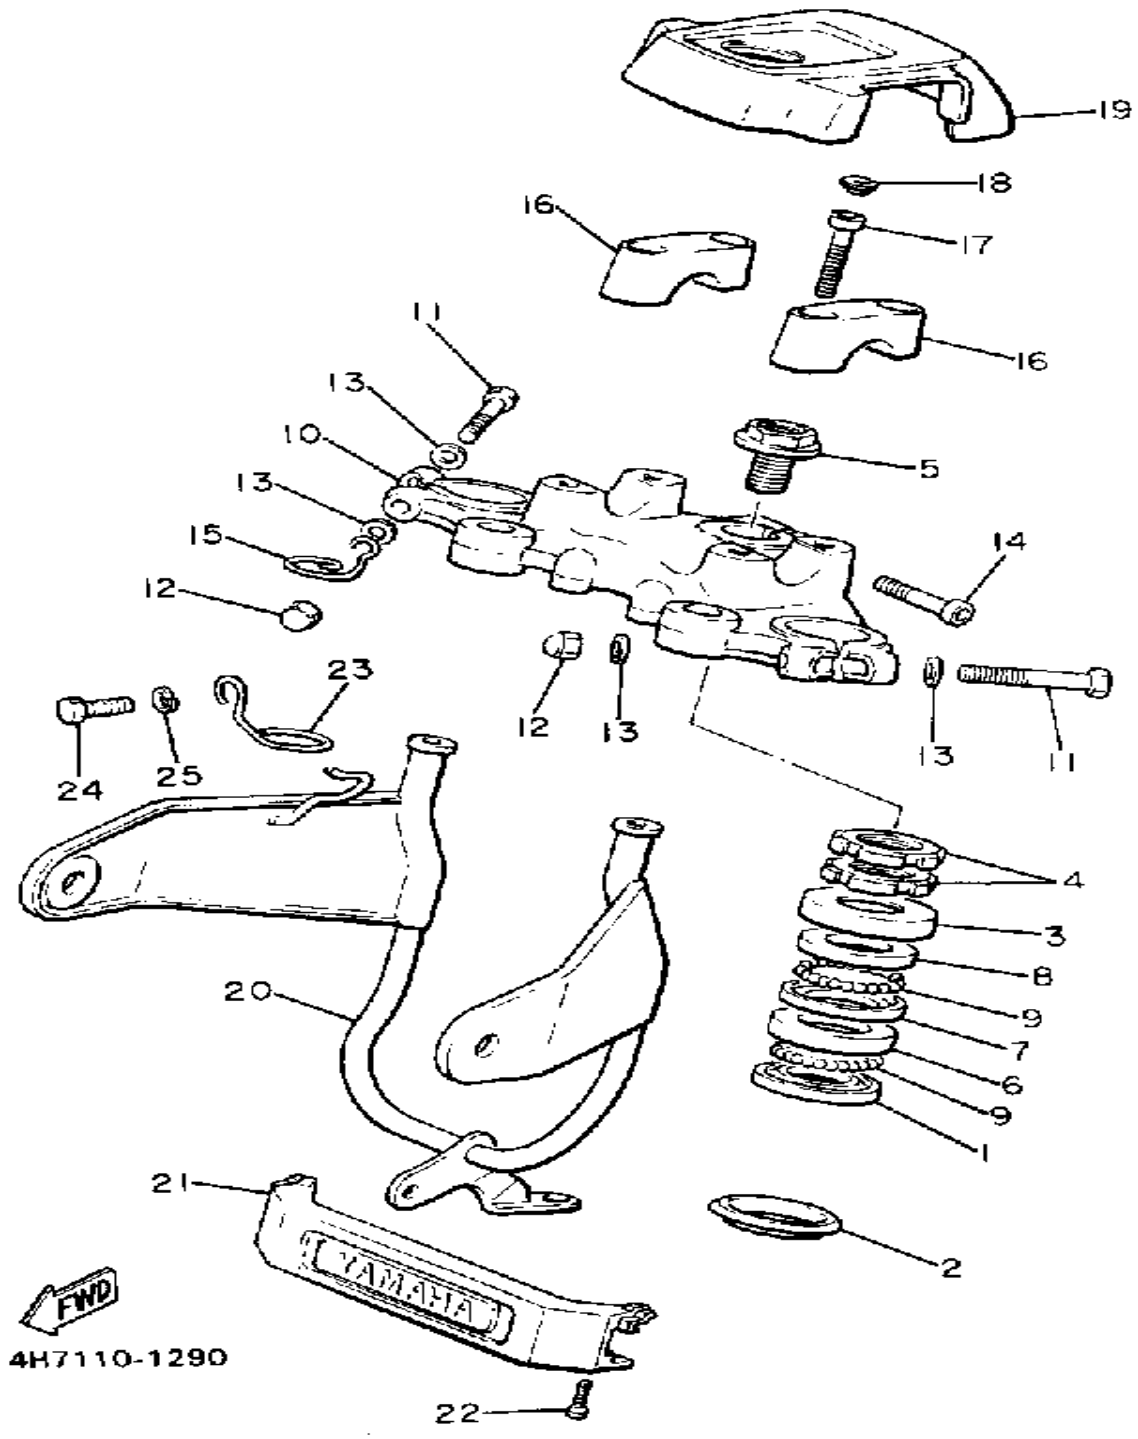

Ref. No.	Part Number	Description	Qty	Remarks
1	256-23411-00-00	RACE, BALL 1	1	
2	164-23462-00-00	SEAL, STEERING	1	
3	4K0-23415-00-00	COVER, BALL RACE 1	1	
4	90179-25495-00	NUT, SPEC''L SHAPE	2	
5	90105-14102-00	BOLT, WASHER BASED	1	
6	256-23412-00-00	RACE, BALL 2	1	
7	256-23413-00-00	RACE, BALL 3	1	
8	256-23414-00-00	RACE, BALL 4	1	
9	93501-04011-00	BALL	38	
10	4H7-23435-00-98	CROWN, HANDLE	1	LOW GLOSS BLK
11	97026-08055-00	BOLT	2	
12	95306-08800-00	NUT (CROWN)	2	
13	92906-08600-00	WASHER	4	
14	91316-08040-00	BOLT, SOCKET HEAD	1	
15	4H7-23317-00-00	HOLDER, CABLE	1	
16	4H7-23441-00-98	HOLDER, HANDLE UPR	2	
17	91316-08030-00	BOLT, SOCKET HEAD	4	
18	341-23469-00-00	CAP, BOLT	4	
19	4H7-26213-00-00	COVER, UPPER	1	
20	4H7-23174-00-00	STAY, HEADLIGHT	1	
21	4H7-23395-00-00	EMBLEM	1	
22	98780-05012-00	SCREW, FLAT HEAD	2	
23	4H3-23318-00-00	HOLDER, CABLE 1	1	
24	97013-06012-00	BOLT	1	
25	92995-06100-00	WASHER, SPRING	1	


FUEL TANK

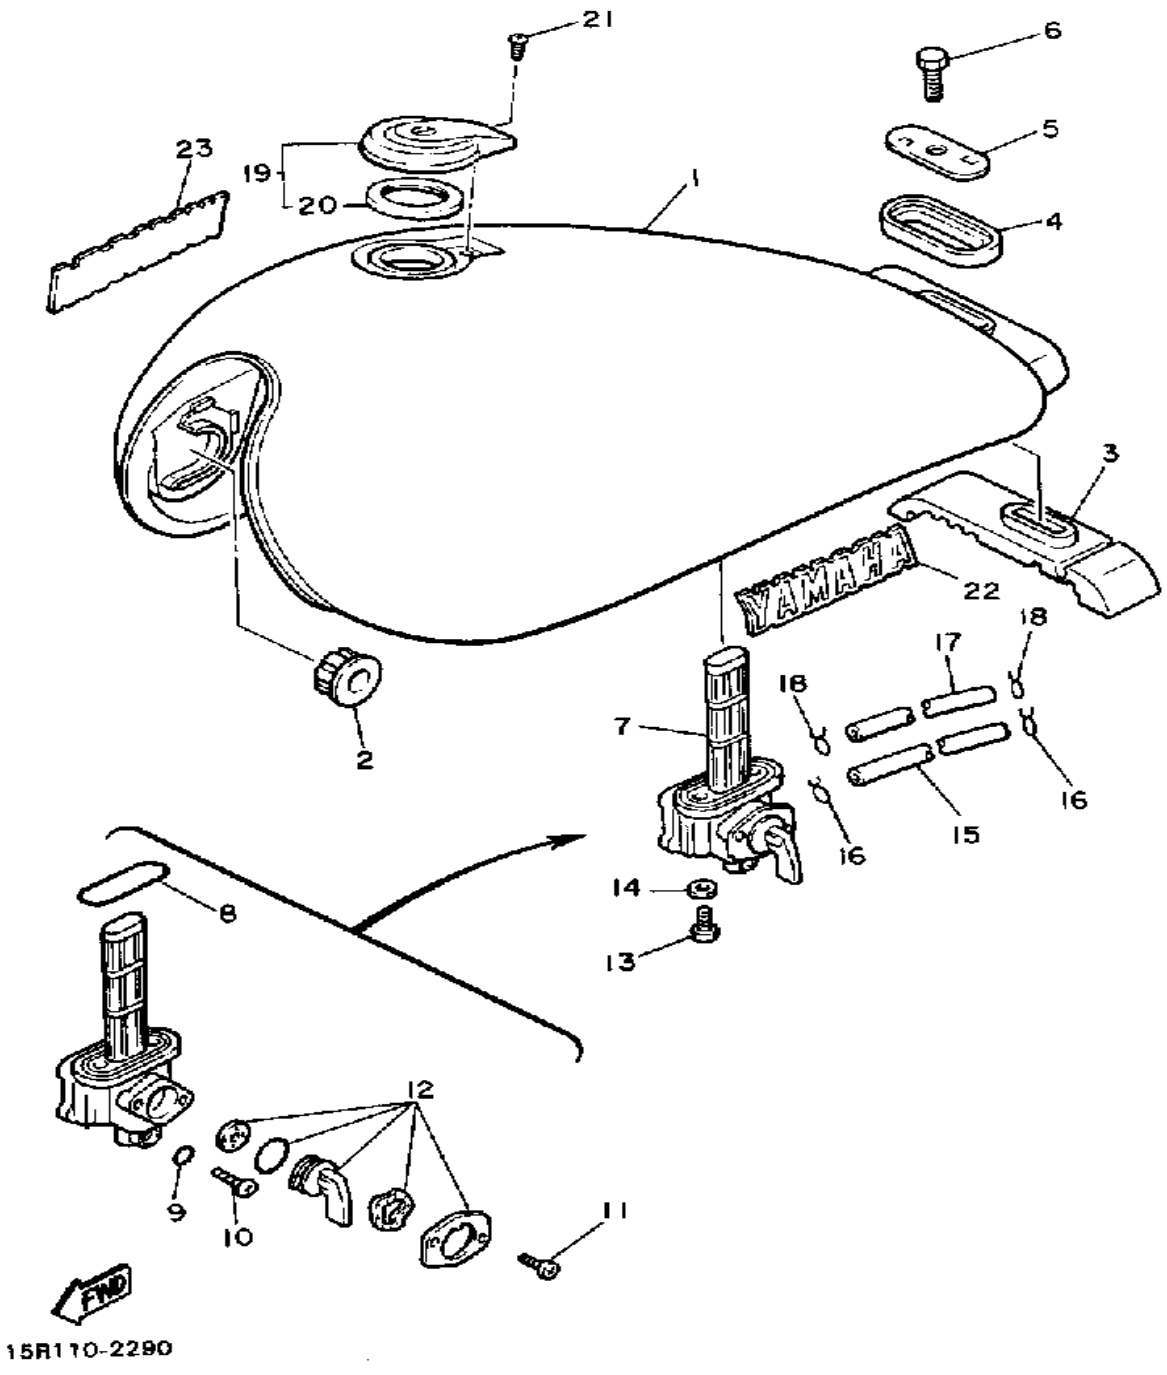

15R110-2290

Ref. No.	Part Number	Description	Qty	Remarks
1	22R-24110-00-6G	FUEL TANK	1	U.R. NEW YAMAHA BLK
	22R-24110-00-7J	FUEL TANK	1	U.R. NEW RUBY RED
2	4H7-24181-00-00	DAMPER, LOCATING 1	2	
3	(15R-24182-00-00)	DAMPER, LOCATING 2	1	
4	4H7-24183-00-00	DAMPER, LOCATING 3	1	
5	4H7-24186-00-00	WASHER, SPECIAL	1	
6	97313-08012-00	BOLT	1	
7	33M-24500-00-00	FUEL COCK ASSEMBLY 1 (15R-24500-00)	1	
8	2W6-24512-00-00	. O-RING	1	
9	2G2-24522-00-00	. GASKET	1	
10	98580-06008-00	. SCREW, PAN HEAD	1	
11	98580-03008-00	. SCREW, PAN HEAD	2	
12	10L-W0092-00-00	. FUEL COCK VLV SET	1	
13	90149-06011-00	SCREW	2	
14	90202-05187-00	WASHER, PLATE	2	
15	5G2-24311-00-00	PIPE, FUEL 1	1	
16	90467-10008-00	CLIP	2	
17	90445-09500-00	HOSE	1	
18	90467-08021-00	CLIP	2	
19	4X7-24602-02-00	CAP ASSEMBLY	1	
20	4X7-24612-00-00	. GASKET, CAP	1	
21	98506-05010-00	SCREW, PAN HEAD	1	
22	5G2-24161-00-00	EMBLEM 1	1	
23	5G2-24162-00-00	EMBLEM 2	1	


SEAT

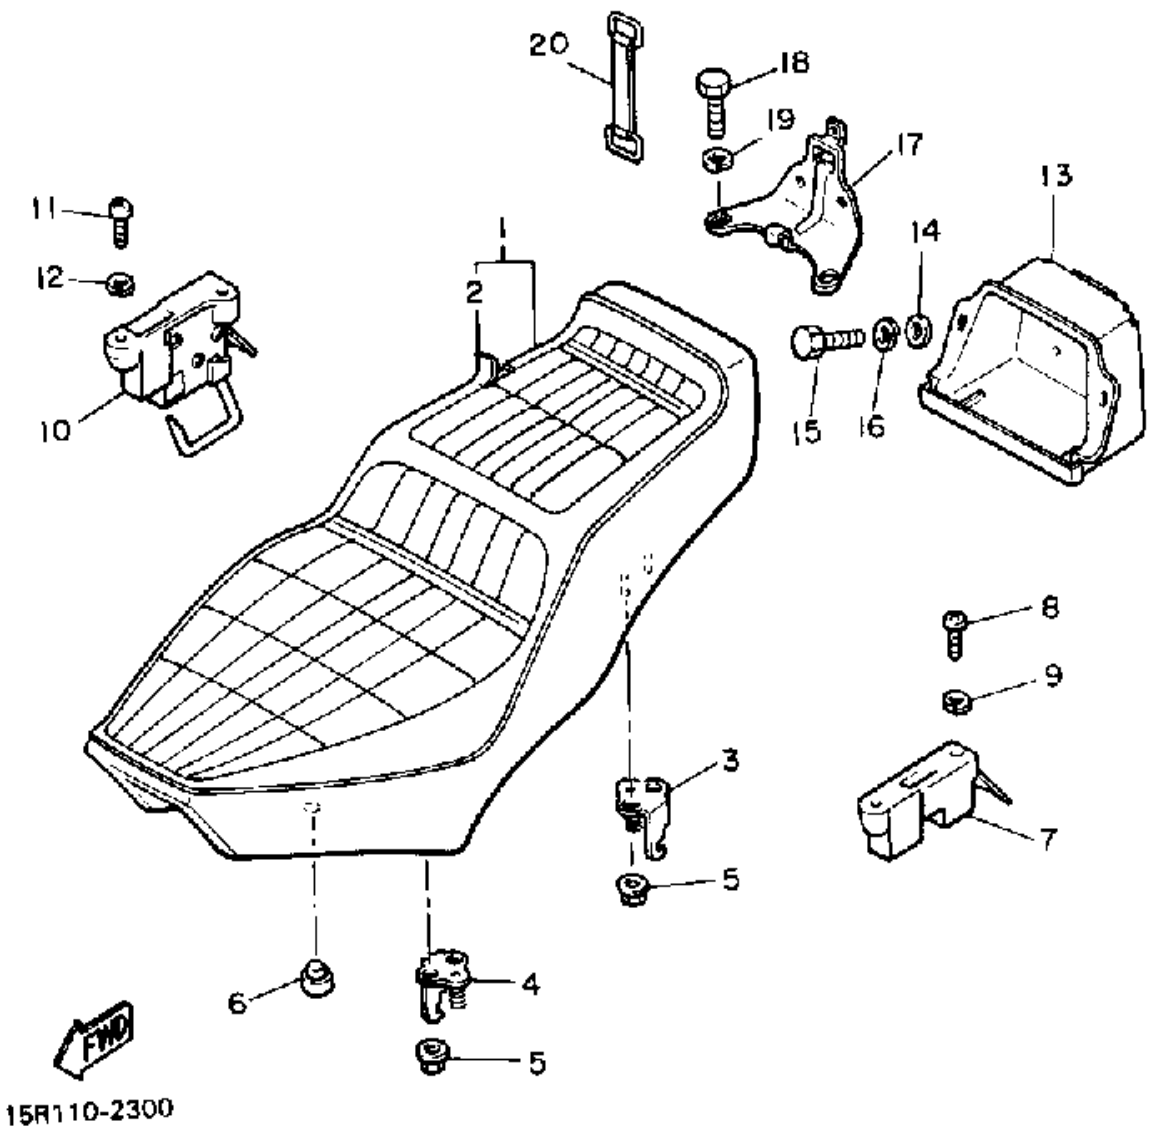

15R110-2300

Ref. No.	Part Number	Description	Qty	Remarks
1	15R-W2472-00-00	DOUBLE SEAT ASSEMBLY	1	
2	15R-24731-00-00	. COVER, DOUBLE SEAT	1	
3	10M-24728-00-00	BRACKET, SEAT	1	
4	10M-24738-00-00	BRACKET, SEAT	1	
5	95701-06500-00	NUT, FLANGE	4	
6	116-24741-00-00	PAD, SEAT	9	
7	4L0-24760-00-00	SEAT LEVER ASSEMBLY	1	
8	98580-06012-00	SCREW, PAN HEAD	2	
9	92995-06100-00	WASHER, SPRING	2	
10	4L0-24705-00-00	SEAT LOCK ASSEMBLY	1	
11	98580-06012-00	SCREW, PAN HEAD	2	
12	92995-06100-00	WASHER, SPRING	2	
13	15R-2473R-00-00	BOX 1	1	
14	90201-065F3-00	WASHER, PLATE	2	
15	97023-06020-00	BOLT (3XF)	2	
16	92995-06100-00	WASHER, SPRING	2	
17	15R-2475H-00-00	BRACKET, SEAT LVR 1	1	
18	97023-06020-00	BOLT (3XF)	2	
19	92995-06100-00	WASHER, SPRING	2	
20	116-82131-00-00	BAND, BATTERY	1	


FRONT WHEEL

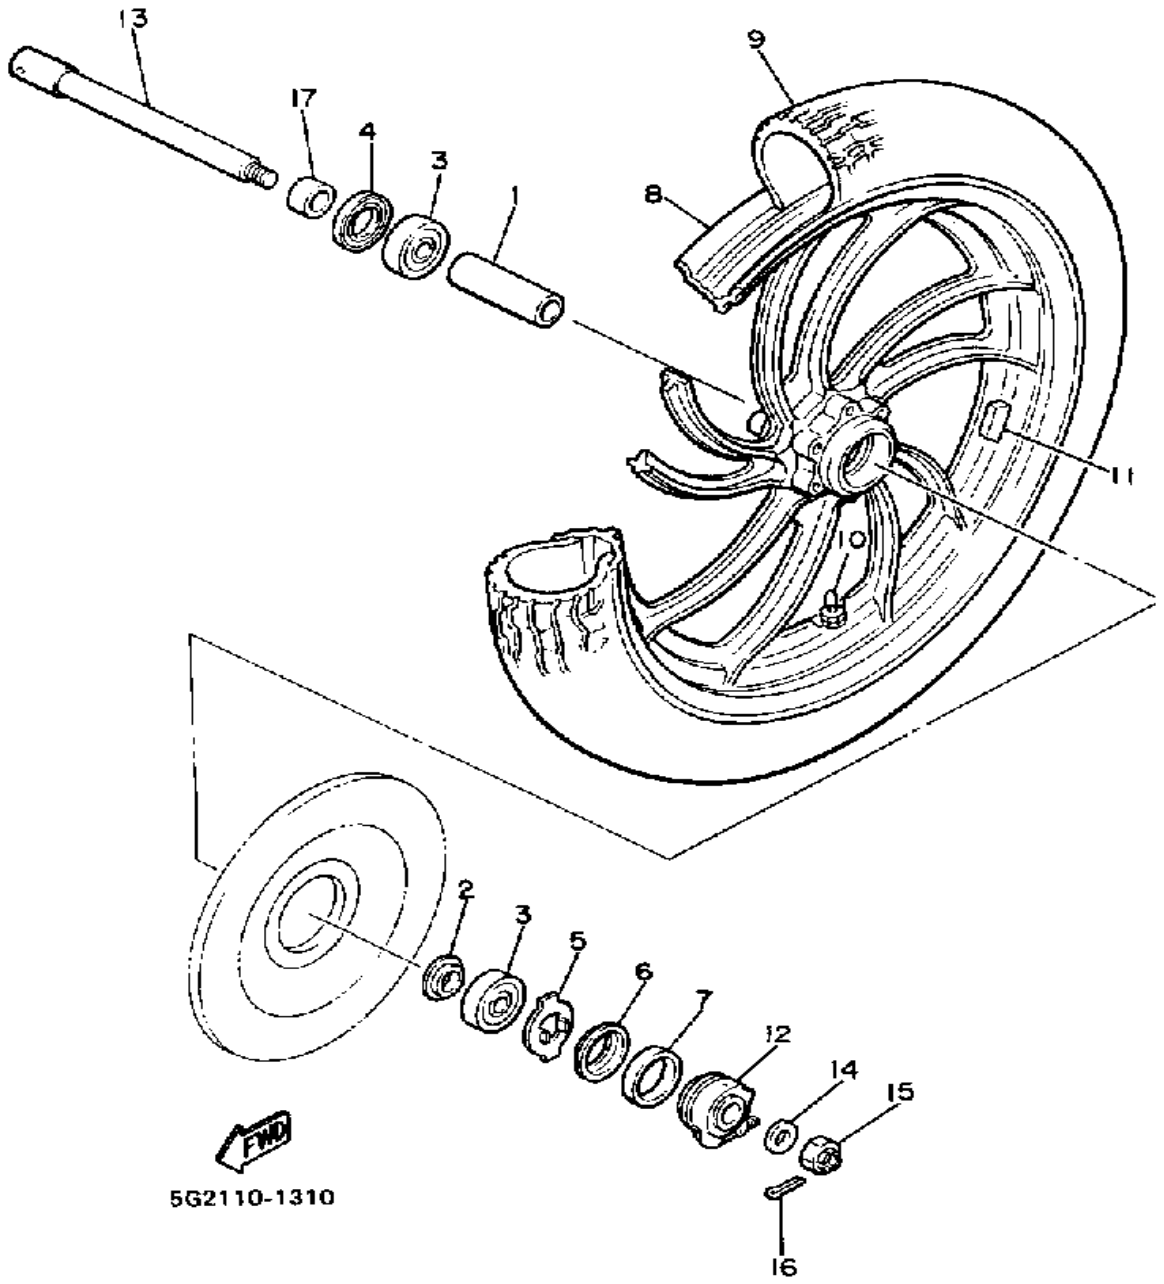

5G2110-1310


Ref. No.	Part Number	Description	Qty	Remarks
1	90560-15116-00	SPACER	1	
2	146-25115-00-00	FLANGE, SPACER 1	1	
3	93306-30202-00	BEARING	2	
4	93102-22014-00	OIL SEAL	1	
5	341-25149-00-00	CLUTCH, METER	1	
6	341-25846-00-00	RETAINER, CLUTCH	1	
7	93105-45017-00	OIL SEAL	1	
8	4H7-25168-29-98	WHEEL, CAST FRONT	1	LOW GLOSS BLK
9	94132-193M3-00	325H19 L303TL #TBB (3.25-19) (94132-1946)	1	BRIDGESTONE
10	93900-00001-00	VALVE, RIM	1	BRIDGESTONE
11	1A1-25398-01-00	BALANCER, WHEEL	1	U.N.
	1A1-25399-00-00	BALANCER, WHEEL	1	U.N.
	2M0-25399-00-00	BALANCER, WHEEL	1	U.N.
12	4H7-25190-00-00	GEAR UNIT ASSEMBLY	1	
13	4H7-25181-01-00	AXLE, WHEEL	1	
14	92990-14200-00	WASHER, PLAIN	1	
15	90171-14020-00	NUT, CASTLE	1	
16	91401-30030-00	PIN, COTTER	1	
17	90387-15734-00	COLLAR	1	

FRONT BRAKE-CALIPER

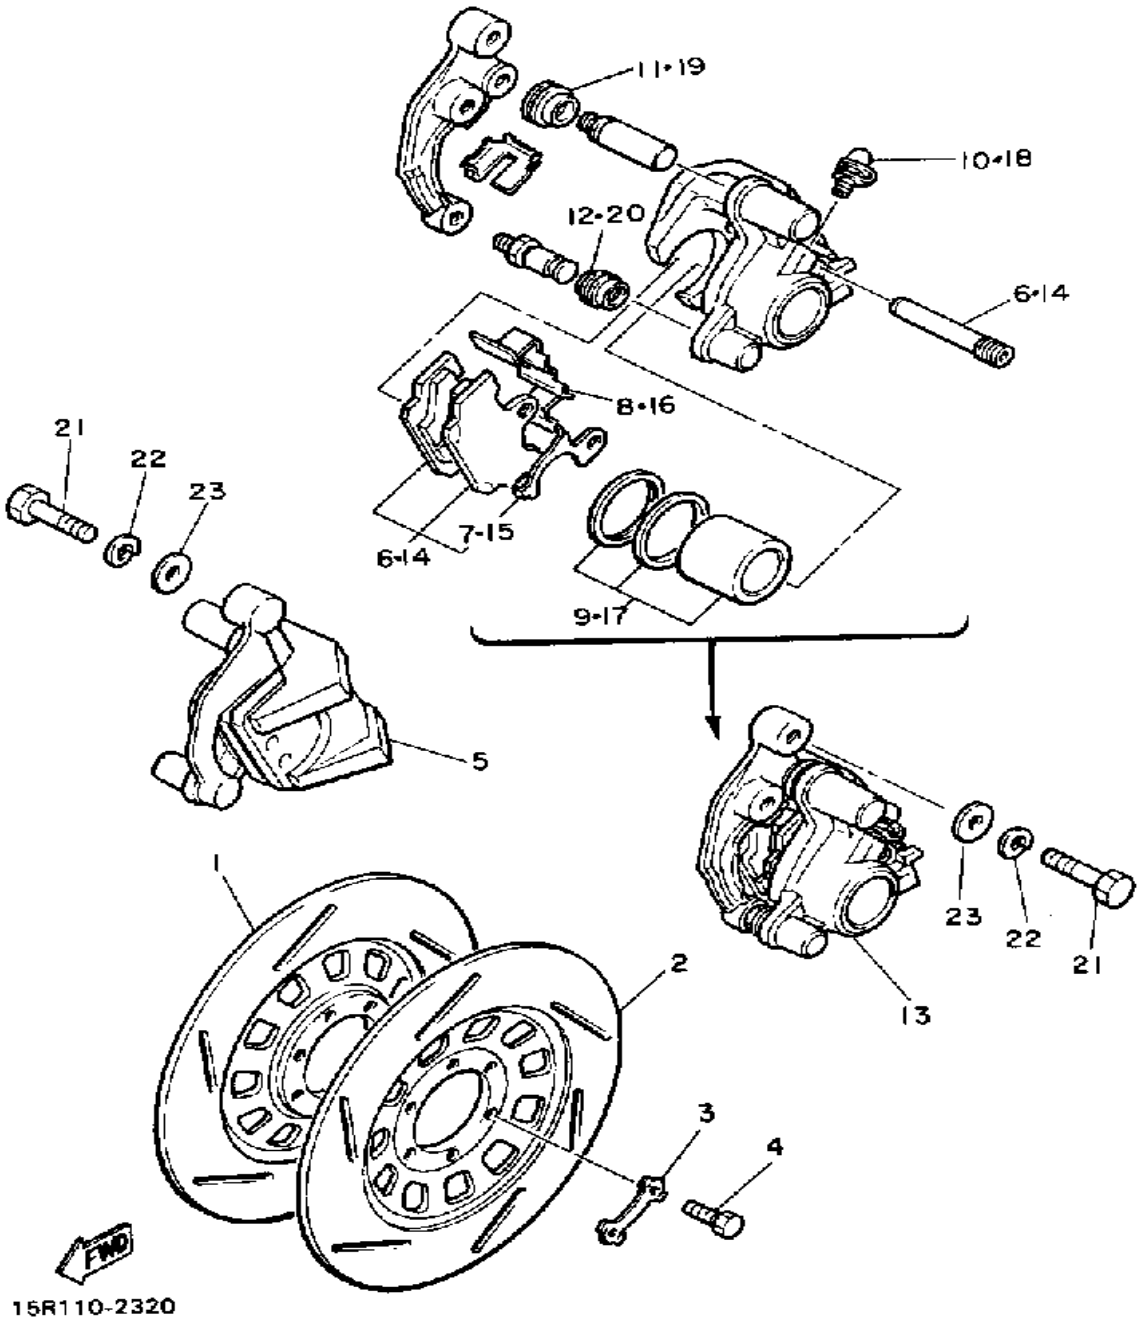

Ref. No.	Part Number	Description	Qty	Remarks
1	5G9-25831-00-00	DISC, BRAKE	1	
2	5G9-25831-10-00	DISC, BRAKE	1	
3	3H5-25834-00-00	WASHER, LOCK	6	
4	90101-08477-00	BOLT	12	
5	29L-2580U-00-00	CALIPER ASSEMBLY (11H-25810-01) (RIGHT)	1	
6	43F-W0045-01-00	. BRAKE PAD KIT, FRO (11H-W0045-00)	1	
7	(11H-25827-00-00)	SHIM, CALIPER	1	
8	11H-25919-00-00	. SUPPORT, PAD	1	
9	4X8-W0057-00-00	. PISTON ASSEMBLY, CALIPER	1	
10	51L-W0048-00-00	. BLEED SCREW KIT	1	
11	4X8-25917-00-00	. BOOT, CALIPER	1	
12	5R2-25937-00-00	. BOOT 2	1	
13	11H-25810-12-00	CALIPER ASSEMBLY 0 1	1	
14	43F-W0045-01-00	. BRAKE PAD KIT, FRO (11H-W0045-00)	1	
15	(11H-25827-00-00)	SHIM, CALIPER	1	
16	11H-25919-00-00	. SUPPORT, PAD	1	
17	4X8-W0057-00-00	. PISTON ASSEMBLY, CALIPER	1	
18	51L-W0048-00-00	. BLEED SCREW KIT	1	
19	4X8-25917-00-00	. BOOT, CALIPER	1	
20	5R2-25937-00-00	. BOOT 2	1	
21	90105-10638-00	BOLT, WASHER BASED	4	
22	92990-10100-00	WASHER, SPRING	4	
23	92990-10200-00	WASHER, PLAIN	4	


REAR WHEEL

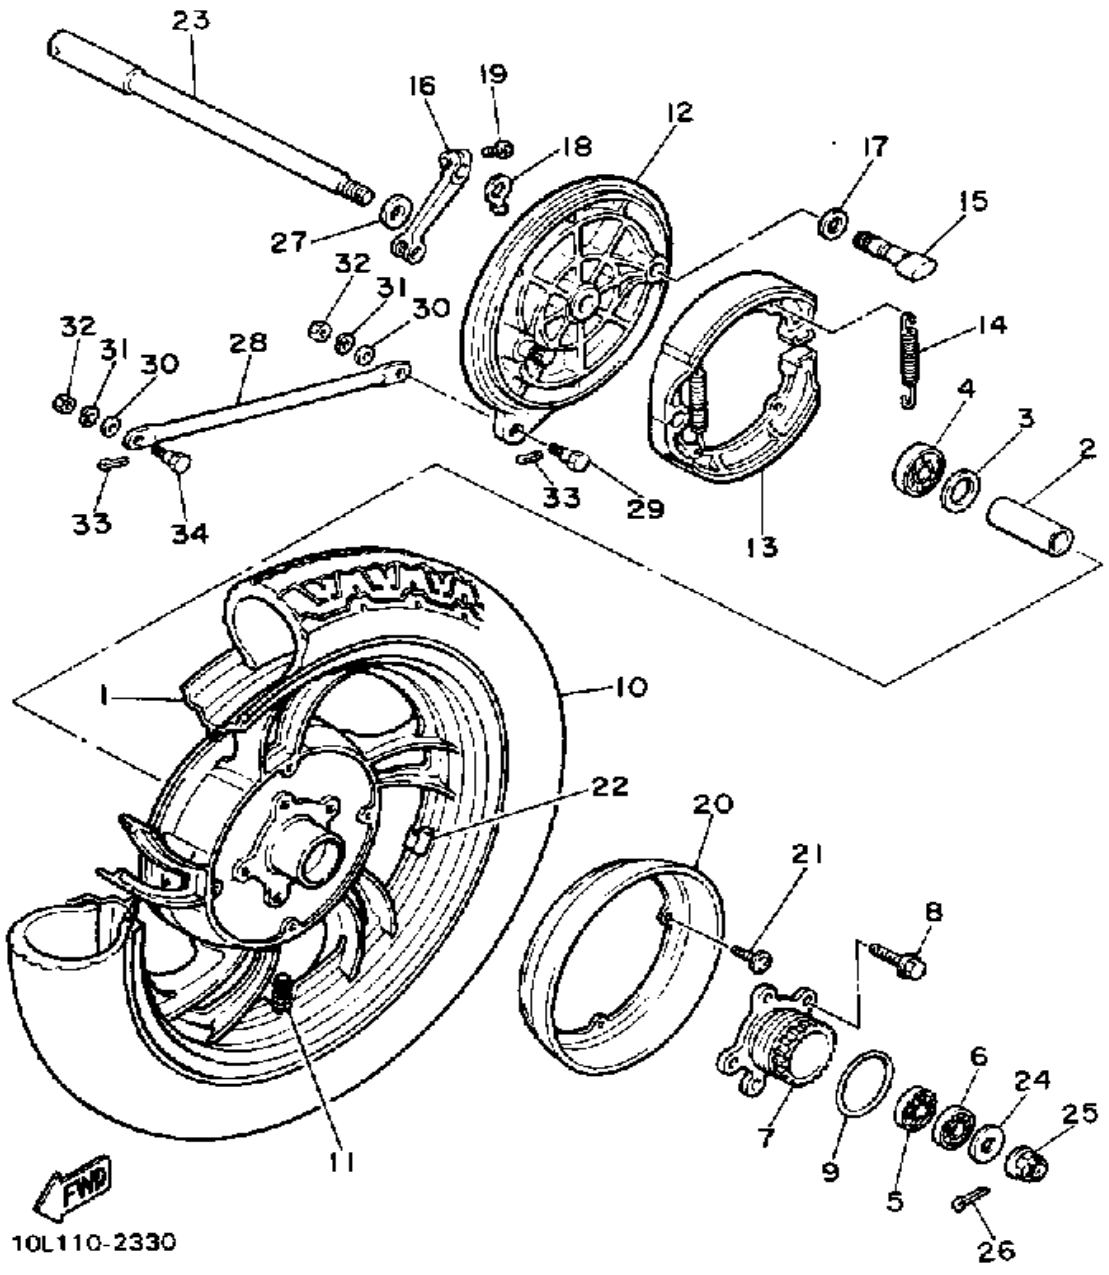

Ref. No.	Part Number	Description	Qty	Remarks
1	10L-25338-20-98	WHEEL, CAST REAR	1	LOW GLOSS BLK
2	90560-17125-00	SPACER	1	
3	146-25315-00-00	FLANGE, SPACER	1	
4	93306-30309-00	BEARING	1	
5	93306-20310-00	BEARING	1	
6	93306-20310-00	BEARING	1	
7	4H7-25366-01-00	CLUTCH, HUB	1	
8	90105-10200-00	BOLT, WASHER BASED	5	
9	93210-57428-00	O-RING	1	
10	94113-161J2-00	130/90-16 G528 BS	1	BRIDGESTONE
11	93900-00001-00	VALVE, RIM	1	BRIDGESTONE
12	4K0-25321-01-00	PLATE BRAKE SHOE	1	CLEAR BUFFING
13	5A8-W2536-00-00	BRAKESHOE SET-2PCS	2	
14	90507-20002-00	SPRING, TENSION	2	
15	4H7-25351-00-00	CAMSHAFT	1	
16	4V8-25355-00-00	LEVER, CAMSHAFT	1	
17	90201-14218-00	WASHER, PLATE	1	
18	4H7-2533A-02-00	PLATE, INDICATOR	1	
19	90101-06291-00	BOLT	1	
20	4H7-25327-00-00	COVER, PLATE	1	
21	90159-05018-00	SCREW, WITH WASHER	4	
22	1A1-25398-01-00	BALANCER, WHEEL	1	U.N.
	1A1-25399-00-00	BALANCER, WHEEL	1	U.N.
	2M0-25399-00-00	BALANCER, WHEEL	1	U.N.
23	4H7-25381-00-00	AXLE, WHEEL	1	
24	90201-144J5-00	WASHER, PLATE	1	
25	90179-14217-00	NUT, SPEC''L SHAPE	1	
26	91401-30030-00	PIN, COTTER	1	
27	56W-25377-00-00	COLLAR, WHEEL	1	


CONTINUED ON NEXT FRAME ➤

REAR WHEEL

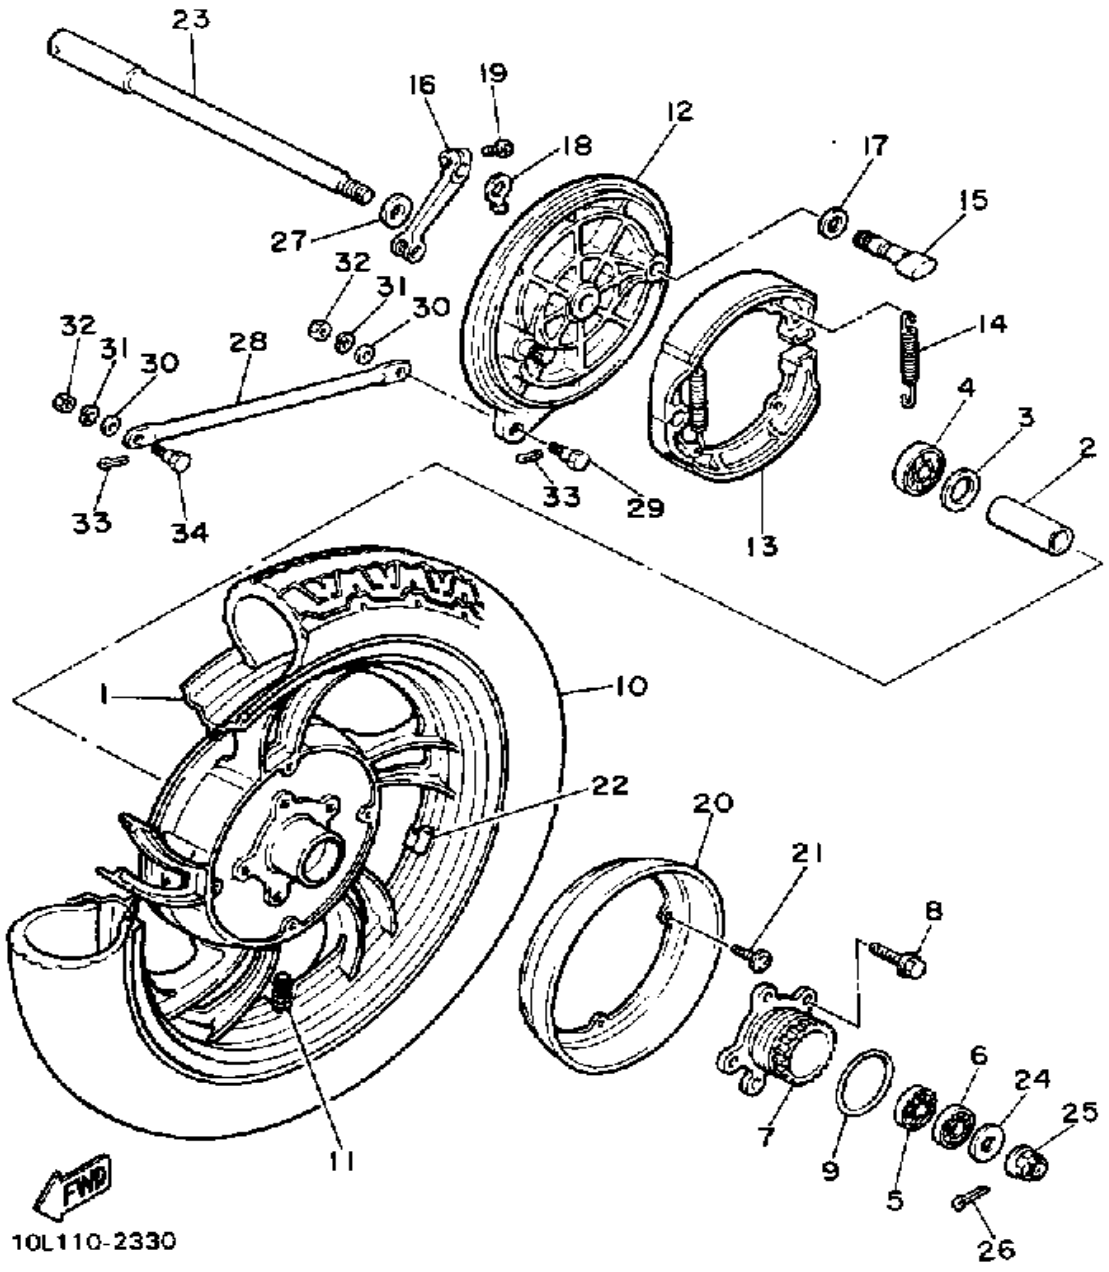

Ref. No.	Part Number	Description	Qty	Remarks
28	3H0-25371-00-00	BAR, TENSION	1	
29	90109-08406-00	BOLT	1	
30	92901-08600-00	WASHER	2	
31	92990-08100-00	WASHER	2	
32	95303-08700-00	NUT	2	
33	91490-20020-00	PIN, COTTER	2	
34	90109-08368-00	BOLT	1	


HANDLEBAR-CABLE

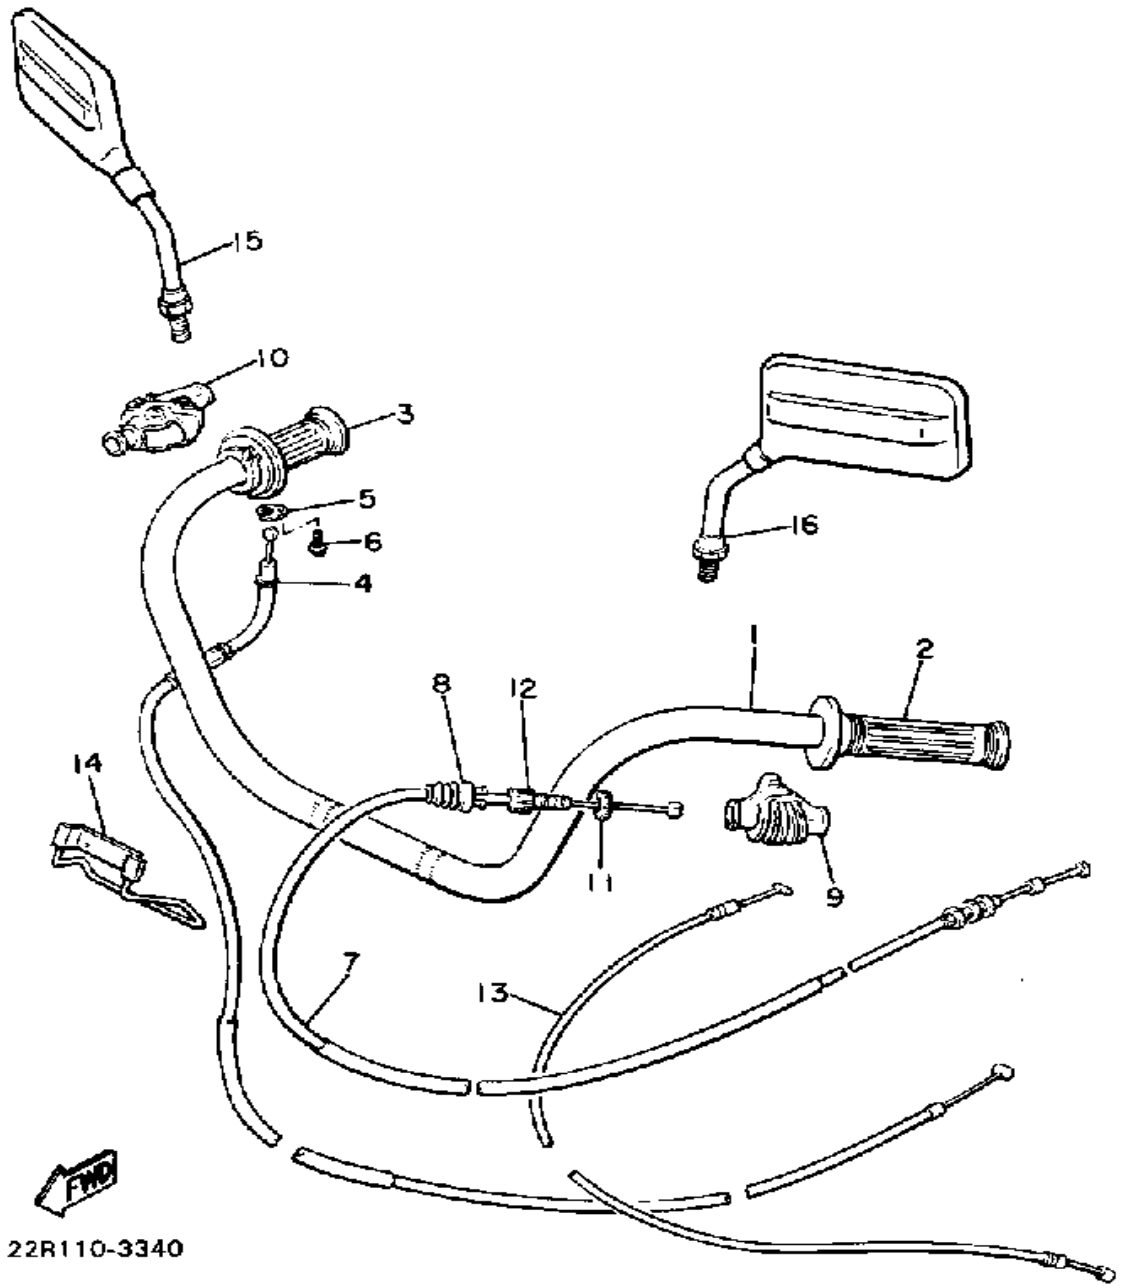

22R110-3340


Ref. No.	Part Number	Description	Qty	Remarks
1	22R-26111-00-00	HANDLEBAR	1	
2	5G2-26241-00-00	GRIP LH (L.H)	1	
3	5G2-26240-00-00	GRIP ASSEMBLY	1	
4	15R-26311-00-00	CABLE, THROTTLE 1	1	
5	5H0-26393-00-00	HOLDER	1	
6	98506-05008-00	SCREW, PAN HEAD	1	
7	15R-26335-00-00	CABLE, CLUTCH	1	
8	1E6-26342-00-00	BOOT, CABLE	1	
9	11H-26372-00-00	COVER, HANDLE LEVER	1	
10	1T5-26372-00-00	COVER, HANDLE LEVER	1	
11	90179-08148-00	NUT	1	
12	90123-08046-00	BOLT	1	
13	20X-26331-00-00	CABLE, STARTER 1	1	
14	(1J7-26399-00-00)	GUIDE, CABLE	1	
15	31A-26290-00-00	MIRROR ASSEMBLY (5G2-26290-00)	1	
16	31A-26290-10-00	MIRROR ASSEMBLY (5G2-26290-10)	1	

FRONT MASTER CYLINDER

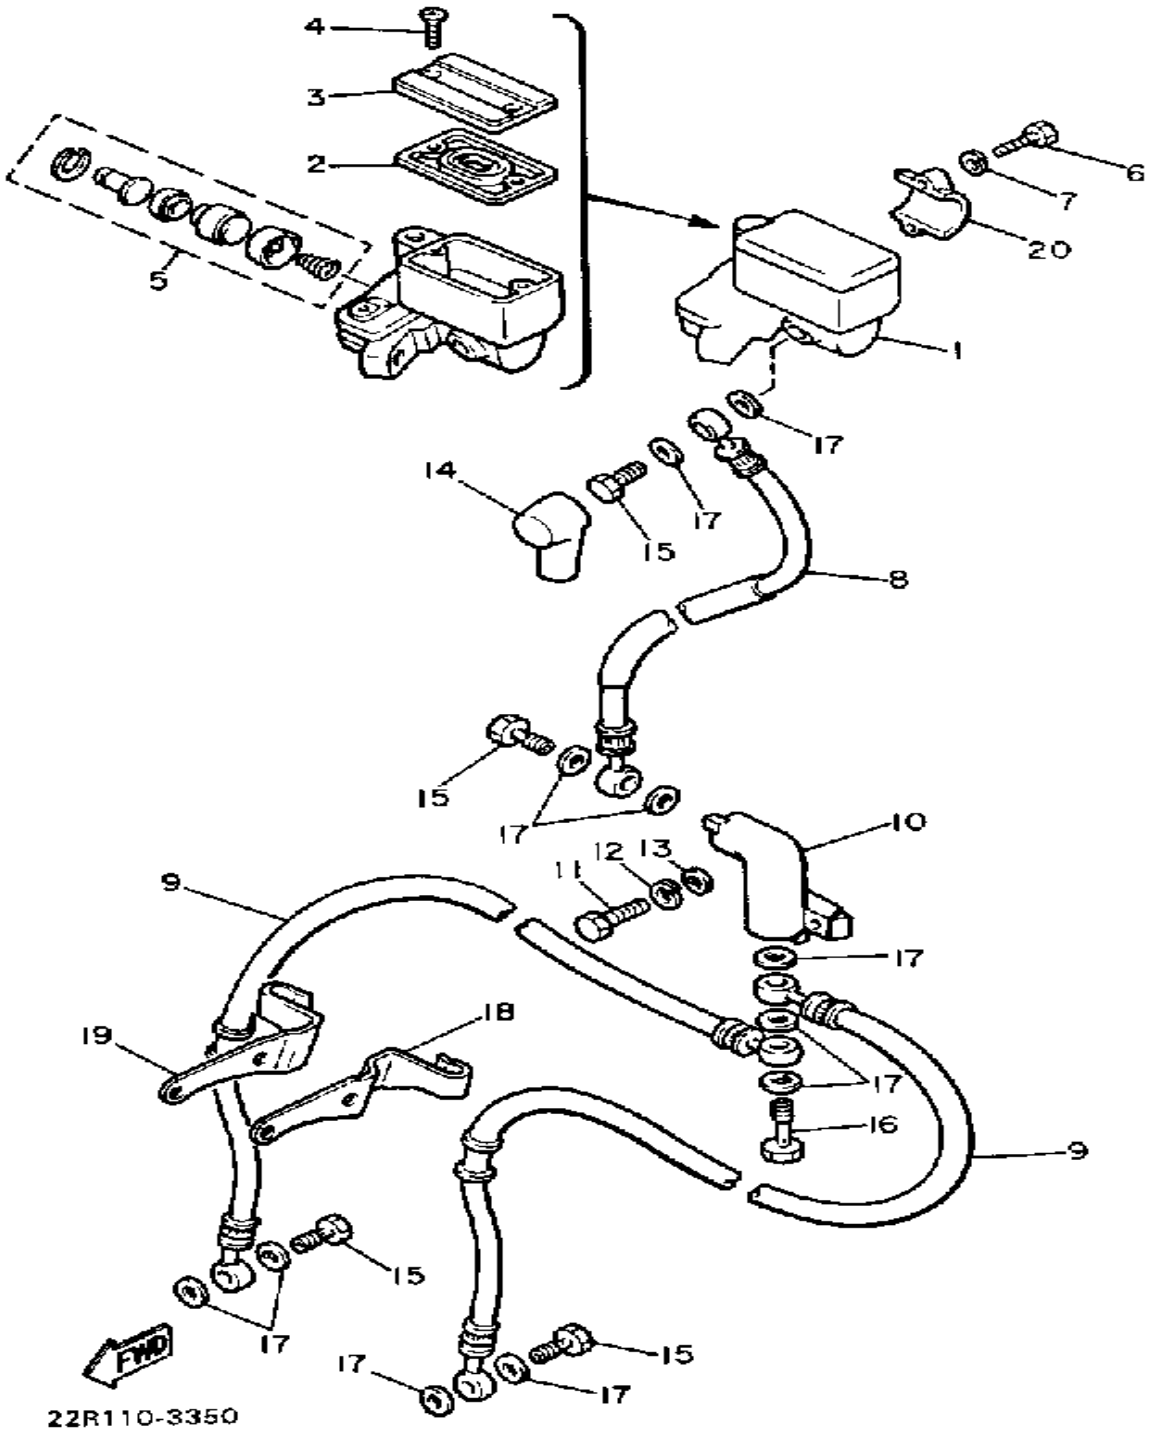

Ref. No.	Part Number	Description	Qty	Remarks
1	22R-25850-02-00	MASTER CYLINDER ASSEMBLY	1	
2	4K0-25854-00-00	. DIAPHRAGM RESERVOR	1	
3	3GM-25852-01-00	. CAP, RESERVOIR	1	
4	98706-04012-00	. SCREW, FLAT HEAD	2	
5	4K0-W0041-50-00	. CYLINDER KIT, MASTER	1	
6	97016-06025-00	BOLT	2	
7	92906-06100-00	WASHER, SPRING	2	
8	2G2-25872-01-00	HOSE, BRAKE 1	1	
9	22R-25873-00-00	HOSE, BRAKE 2	2	
10	1J7-25885-01-00	JOINT	1	
11	97011-06025-00	BOLT (97001-06025)	1	
12	92995-06100-00	WASHER, SPRING	1	
13	92901-06600-00	WASHER	1	
14	306-25862-00-00	BOOT, MASTER CYLINDER	1	
15	90401-10034-00	BOLT, UNION	4	
16	90401-10044-00	BOLT, UNION	1	
17	90201-10118-00	WASHER, PLATE	11	
18	10M-25875-00-00	HOLDER, BRKE HOSE 1	1	
19	10M-25876-00-00	HOLDER, BRKE HOSE 2	1	
20	4L0-25867-00-00	BRACKET, MASTER CYLINDER	1	


STAND-FOOTREST

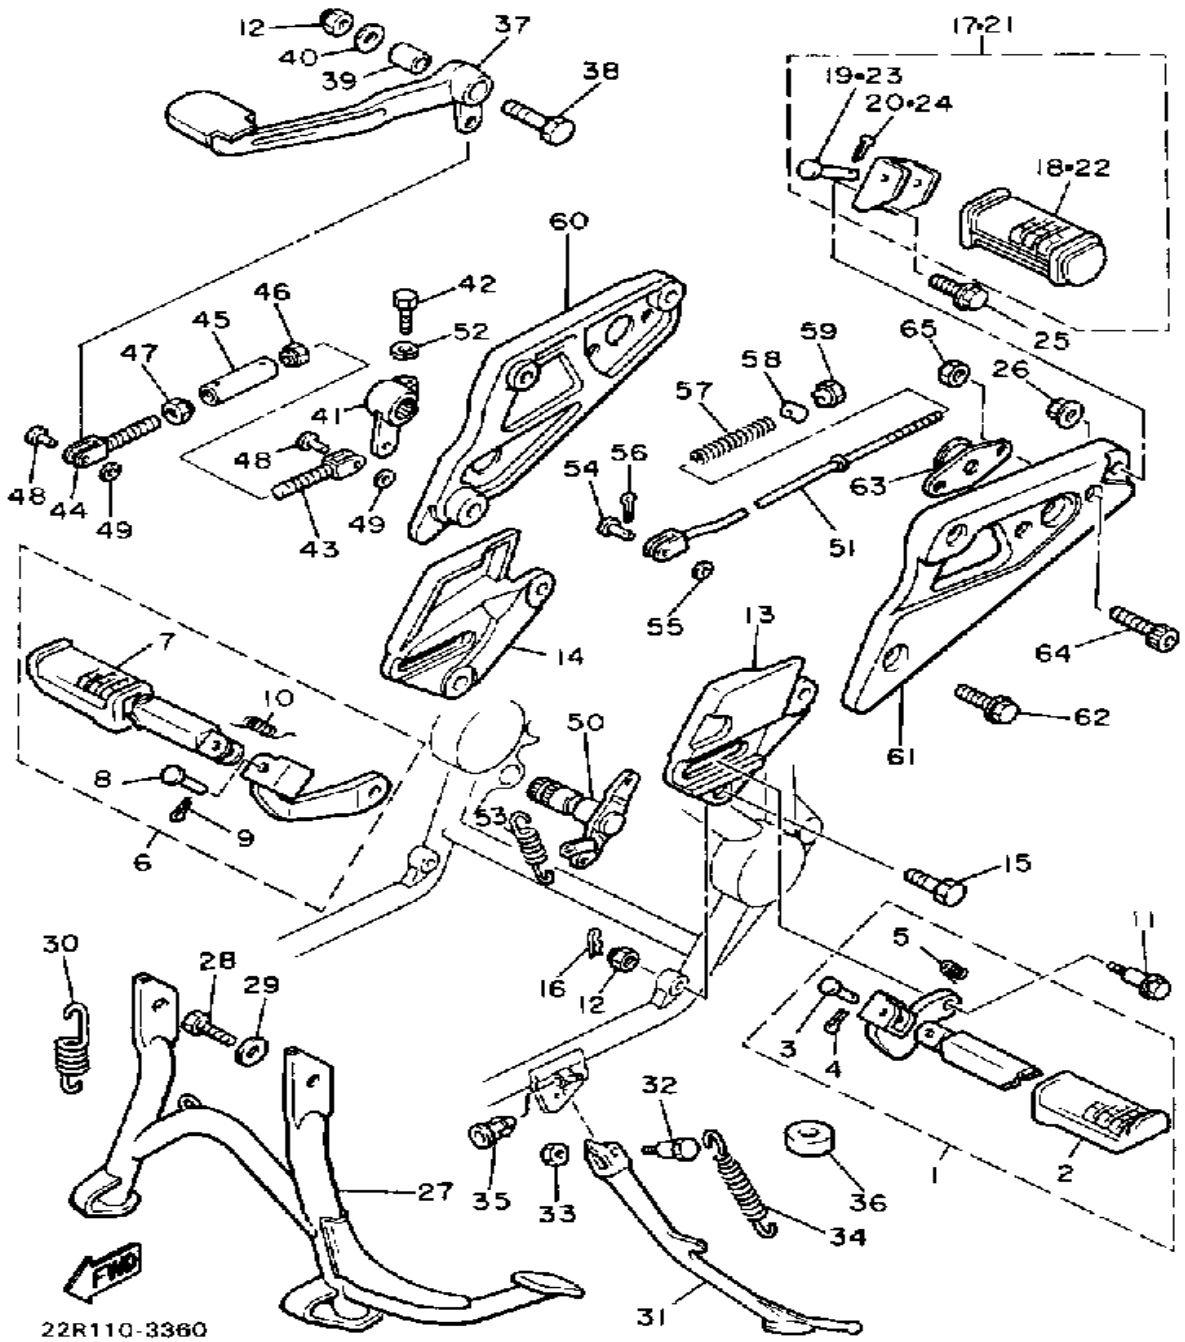

Ref. No.	Part Number	Description	Qty	Remarks
1	15R-27410-00-93	FRT FOOTREST ASSEMBLY L (L.H)	1	CHROME PLATED
2	5G2-27413-00-00	. COVER, FOOTREST	1	
3	90240-08063-00	. PIN, CLEVIS	1	
4	91401-30020-00	. PIN, COTTER	1	
5	90508-20154-00	. SPRING, TORSION	1	
6	15R-27420-00-93	FRT FOOTREST ASSEMBLY R (R.H)	1	CHROME PLATED
7	5G2-27413-00-00	. COVER, FOOTREST	1	
8	90240-08063-00	. PIN, CLEVIS	1	
9	91401-30020-00	. PIN, COTTER	1	
10	90508-20155-00	. SPRING, TORSION	1	
11	90109-12651-00	BOLT	1	
12	90185-12080-00	NUT, SELF-LOCKING	2	
13	(15R-2741L-00-00)	BRACKET 4	1	
14	(15R-2742L-00-00)	BRACKET 5	1	
15	91311-10020-00	BOLT, SOCKET HEAD	2	
16	90468-12006-00	CLIP	1	
17	5G2-27430-00-00	RR FOOTREST ASSEMBLY 1	1	
18	5G2-27433-00-00	. COVER, RR FOOTREST	1	
19	90240-06042-00	. PIN, CLEVIS	1	
20	91490-16020-00	. PIN, COTTER	1	
21	5G2-27440-00-00	RR FOOTREST ASSEMBLY 2	1	
22	5G2-27433-00-00	. COVER, RR FOOTREST	1	
23	90240-06042-00	. PIN, CLEVIS	1	
24	91490-16020-00	. PIN, COTTER	1	
25	95811-10035-00	BOLT, FLANGE	2	
26	95701-10500-00	NUT, FLANGE (95702-10500)	2	
27	15R-27111-00-R4	STAND, MAIN	1	BLACK

CONTINUED ON NEXT FRAME ➤


STAND-FOOTREST

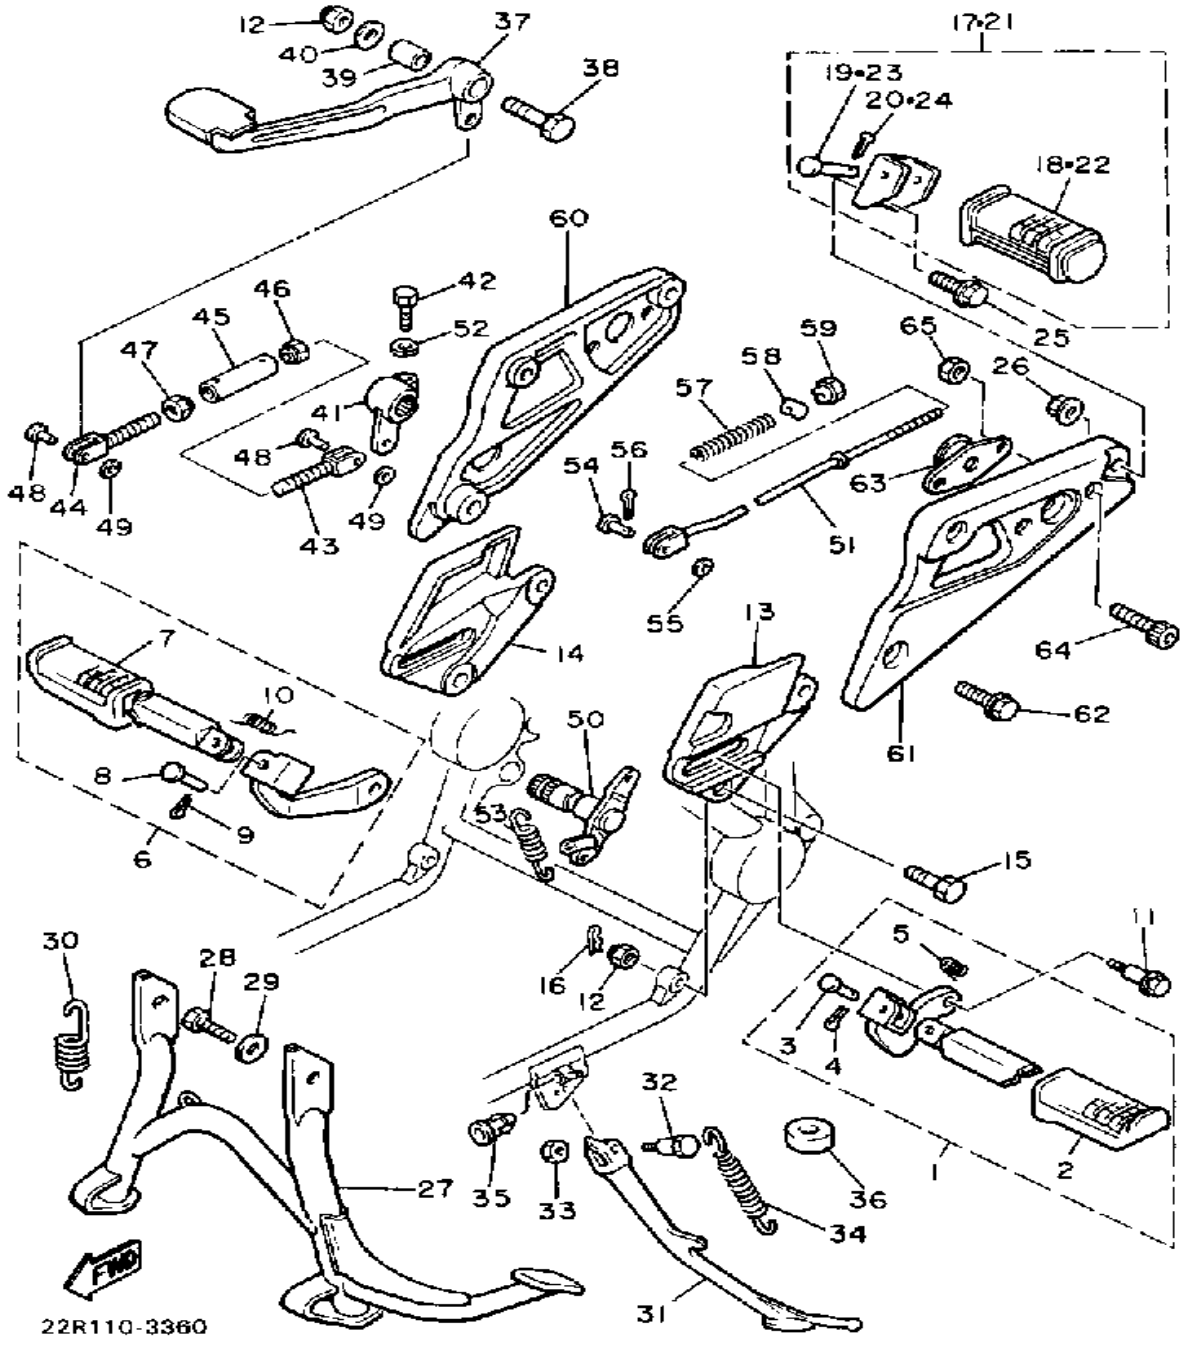

Ref. No.	Part Number	Description	Qty	Remarks
28	97011-10016-00	BOLT, HEXAGON	2	
29	90201-10752-00	WASHER, PLATE	2	
30	90506-40233-00	SPRING, TENSION	1	
31	5G2-27311-00-R4	STAND, SIDE	1	BLACK
32	90109-10590-00	BOLT	1	
33	95303-10700-00	NUT	1	
34	90507-29033-00	SPRING, TENSION	1	
35	5G2-27351-00-00	GUIDE, SIDE STAND	1	
36	116-27114-00-00	STOPPER, MAIN STAND	1	
37	15R-27211-00-93	PEDAL, BRAKE	1	CHROME PLATED
38	90101-12558-00	BOLT	1	
39	15R-27213-00-00	COLLAR	1	
40	92990-12200-00	WASHER, PLAIN	1	
41	15R-27243-00-00	BOSS, BRAKE PEDAL	1	
42	90109-06468-00	BOLT	1	
43	15R-27247-00-00	ROD 1	1	
44	15R-27248-00-00	ROD 2	1	
45	15R-27238-00-00	NUT, ADJUSTING	1	
46	95303-08700-00	NUT	1	
47	90170-08297-00	NUT, HEXAGON	1	
48	90243-06022-00	PIN	2	
49	92990-06200-00	WASHER	2	
50	(15R-27212-00-00)	SHAFT, BRAKE PEDAL	1	
51	5G2-27231-00-00	ROD, BRAKE	1	
52	92995-06100-00	WASHER, SPRING	1	
53	90506-20291-00	SPRING, TENSION	1	
54	90240-08067-00	PIN, CLEVIS	1	
55	90201-08083-00	WASHER, PLATE	1	
56	91490-20020-00	PIN, COTTER	1	


CONTINUED ON NEXT FRAME ➤

STAND-FOOTREST

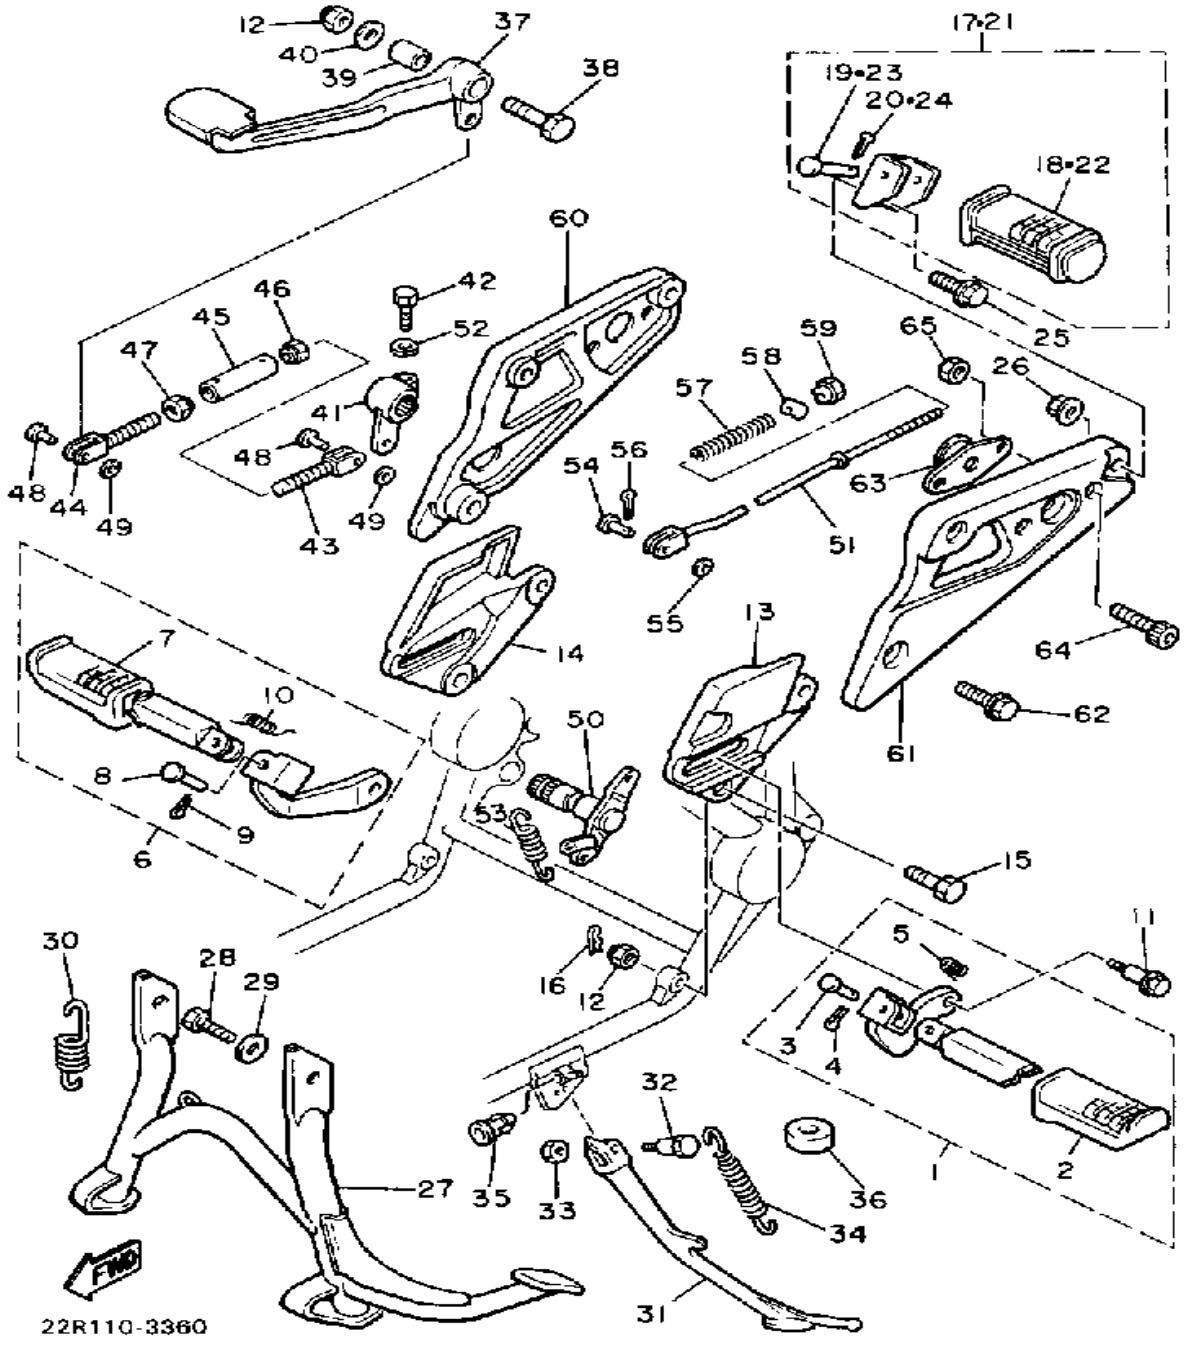


Ref. No.	Part Number	Description	Qty	Remarks
57	90501-10245-00	SPRING, COMPRESSION	1	
58	90249-12008-00	PIN	1	
59	90179-06411-00	NUT	1	
60	22R-27443-00-00	BRACKET 3	1	
61	22R-27442-01-00	BRACKET 2	1	
62	91316-10030-00	BOLT, SOCKET HEAD	4	
63	22R-27414-00-00	DAMPER, FOOTREST	2	
64	91311-06020-00	BOLT, SOCKET HEAD	4	
65	95380-06600-00	NUT	4	

METER

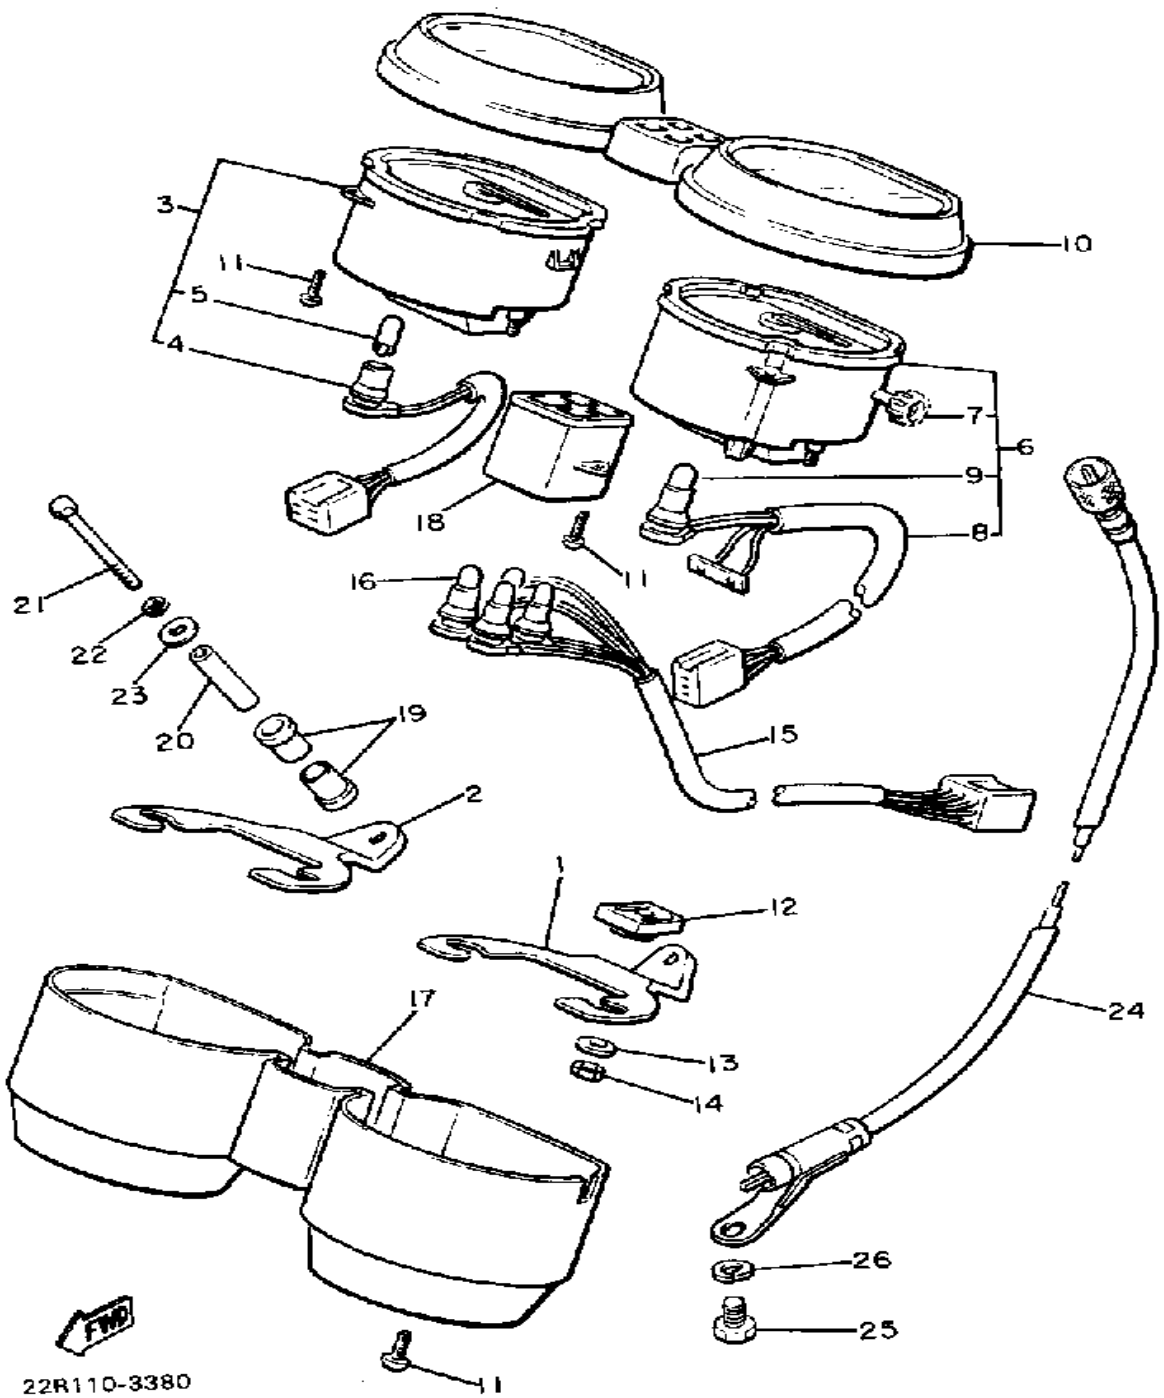

Ref. No.	Part Number	Description	Qty	Remarks
1	4H7-83519-00-00	BRACKET, METER	1	
2	4H7-83545-00-00	BRACKET, TACHOMETER	1	
3	5N8-83540-00-00	TACHOMETER ASSEMBLY	1	
4	5N8-83520-00-00	. SOCKET CORD ASSEMBLY	1	
5	4G1-84744-00-00	. BULB, MTR.12V3.4W	1	
6	5K5-83570-A0-00	SPEEDOMETER ASSEMBLY	1	
7	4U8-83578-00-00	. KNOB, TRIP METER	1	
8	10M-83520-20-00	. SOCKET CORD ASSEMBLY	1	
9	4G1-84744-00-00	. BULB, MTR.12V3.4W	1	
10	4H7-83559-A0-00	COVER, METER	1	
11	4H7-83616-00-00	SCREW, TAPPING	10	
12	4H7-83523-00-00	DAMPER	4	
13	90201-052E2-00	WASHER, PLATE	4	
14	95380-05600-00	NUT	4	
15	5K5-83509-00-00	SOCKET CORD ASSEMBLY	1	
16	4G1-84744-00-00	BULB, MTR.12V3.4W	4	
17	4H7-83579-00-00	COVER, METER 2	1	
18	4H7-83587-00-00	BODY, PILOT LIGHT	1	
19	584-83541-00-00	DAMPER	4	
20	90387-06249-00	COLLAR	2	
21	97026-06045-00	BOLT	2	
22	92906-06100-00	WASHER, SPRING	2	
23	90201-06067-00	WASHER, PLATE	2	
24	5K5-83550-00-00	SPEEDOMETER CABLE	1	
25	90153-06004-00	SCREW, HEXAGON	1	
26	92995-06100-00	WASHER, SPRING	1	

HEADLIGHT

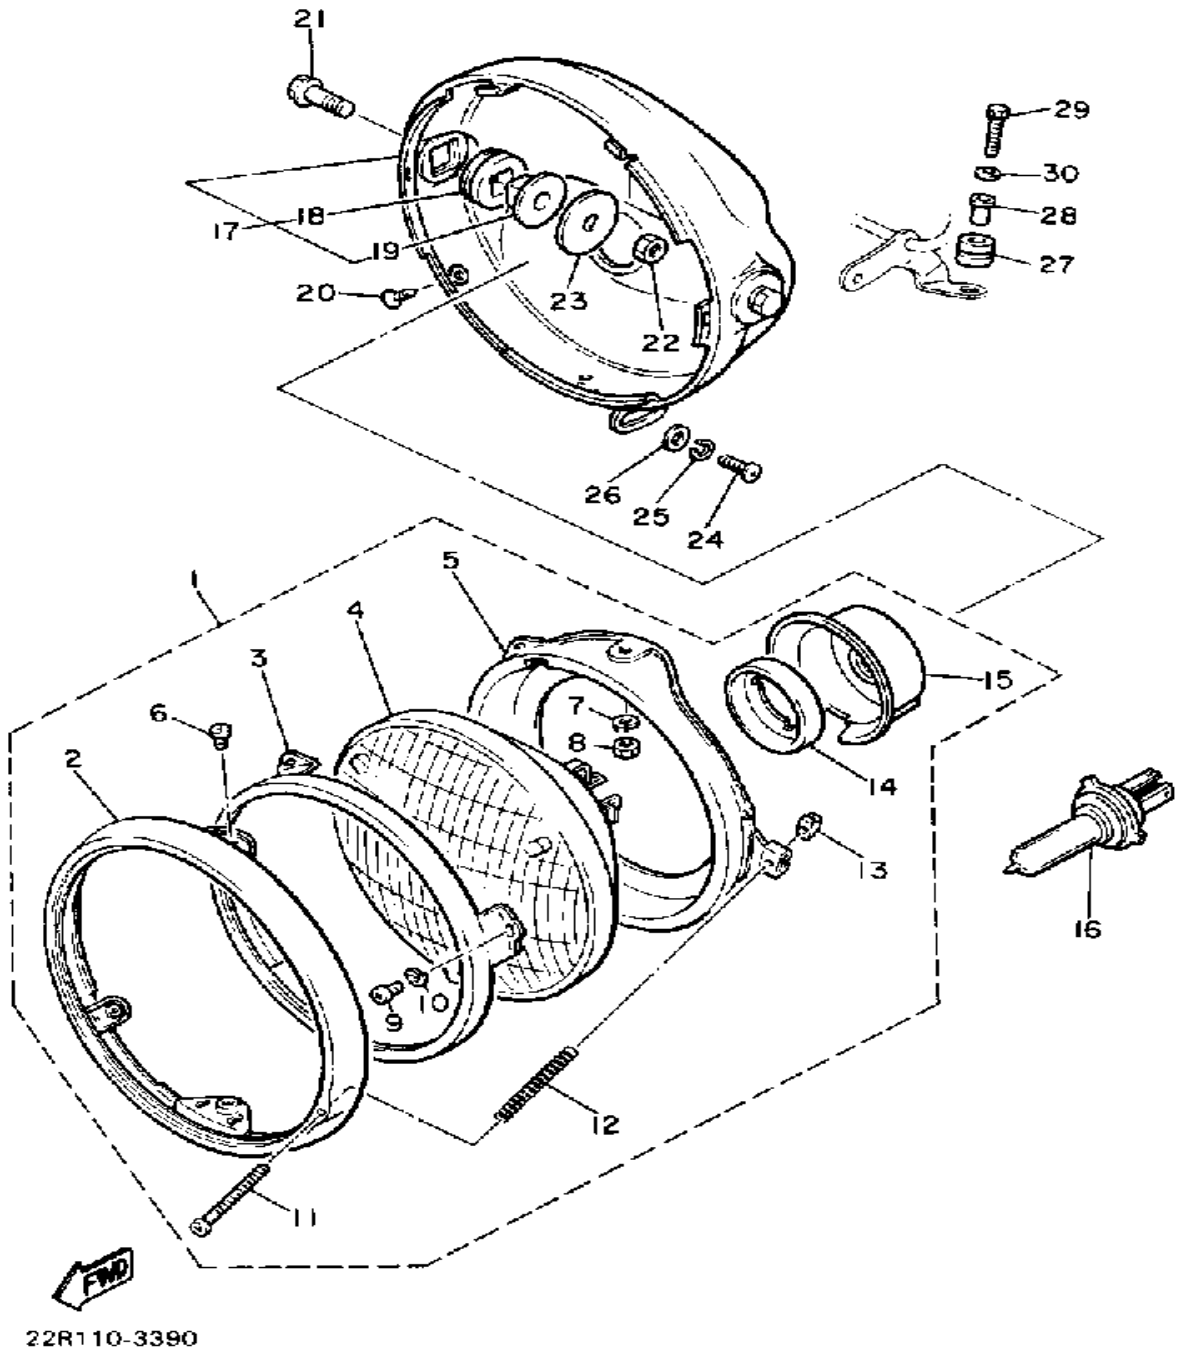


22R110-3390

Ref. No.	Part Number	Description	Qty	Remarks
1	2F3-84303-A0-00	HEADLIGHT UNIT ASSEMBLY .	1	
2	341-84315-40-00	. RIM, HEADLIGHT	1	
3	2F9-84395-00-00	. RING, RETAINING	1	
4	2F3-84321-A0-00	. LENS, HEADLIGHT	1	
5	2F9-84394-00-00	. RING, MOUNTING	1	
6	98580-05010-00	. SCREW, PAN HEAD	2	
7	92990-05100-00	. WASHER, SPRING	2	
8	95380-05600-00	. NUT	2	
9	98580-04008-00	. SCREW, PAN HEAD	3	
10	92901-04100-00	. WASHER, SPRING	3	
11	98580-04055-00	. SCREW, LENS FITTING	1	
12	341-84332-60-00	. SPRING, SCREW	1	
13	198-84334-60-00	. NUT, ADJUSTING	1	
14	2F9-84375-00-00	. SETTING PLATE, BULB	1	
15	2F9-84397-01-00	. COVER, SOCKET	1	
16	5V2-84314-00-XX	BULB, HL 12V60/55W (2F9-84314-00)	1	LM
17	3J6-84330-00-93	BODY ASSEMBLY	1	CHROME PLATED
18	584-84345-60-00	. DAMPER, HEADLIGHT	2	
19	584-84338-60-00	. COLLAR, BODY FTNG	2	
20	90152-05005-00	SCREW, COUNTERSUNK	2	
21	90105-08172-00	BOLT, WASHER BASED	2	
22	95333-08600-00	NUT	2	
23	90201-085E6-00	WASHER PLATE	2	
24	98503-06014-00	SCREW, PAN HEAD (92502-06016)	1	
25	92995-06100-00	WASHER, SPRING	1	
26	90201-06067-00	WASHER, PLATE	1	
27	90480-14023-00	GROMMET	1	

CONTINUED ON NEXT FRAME ➤


HEADLIGHT

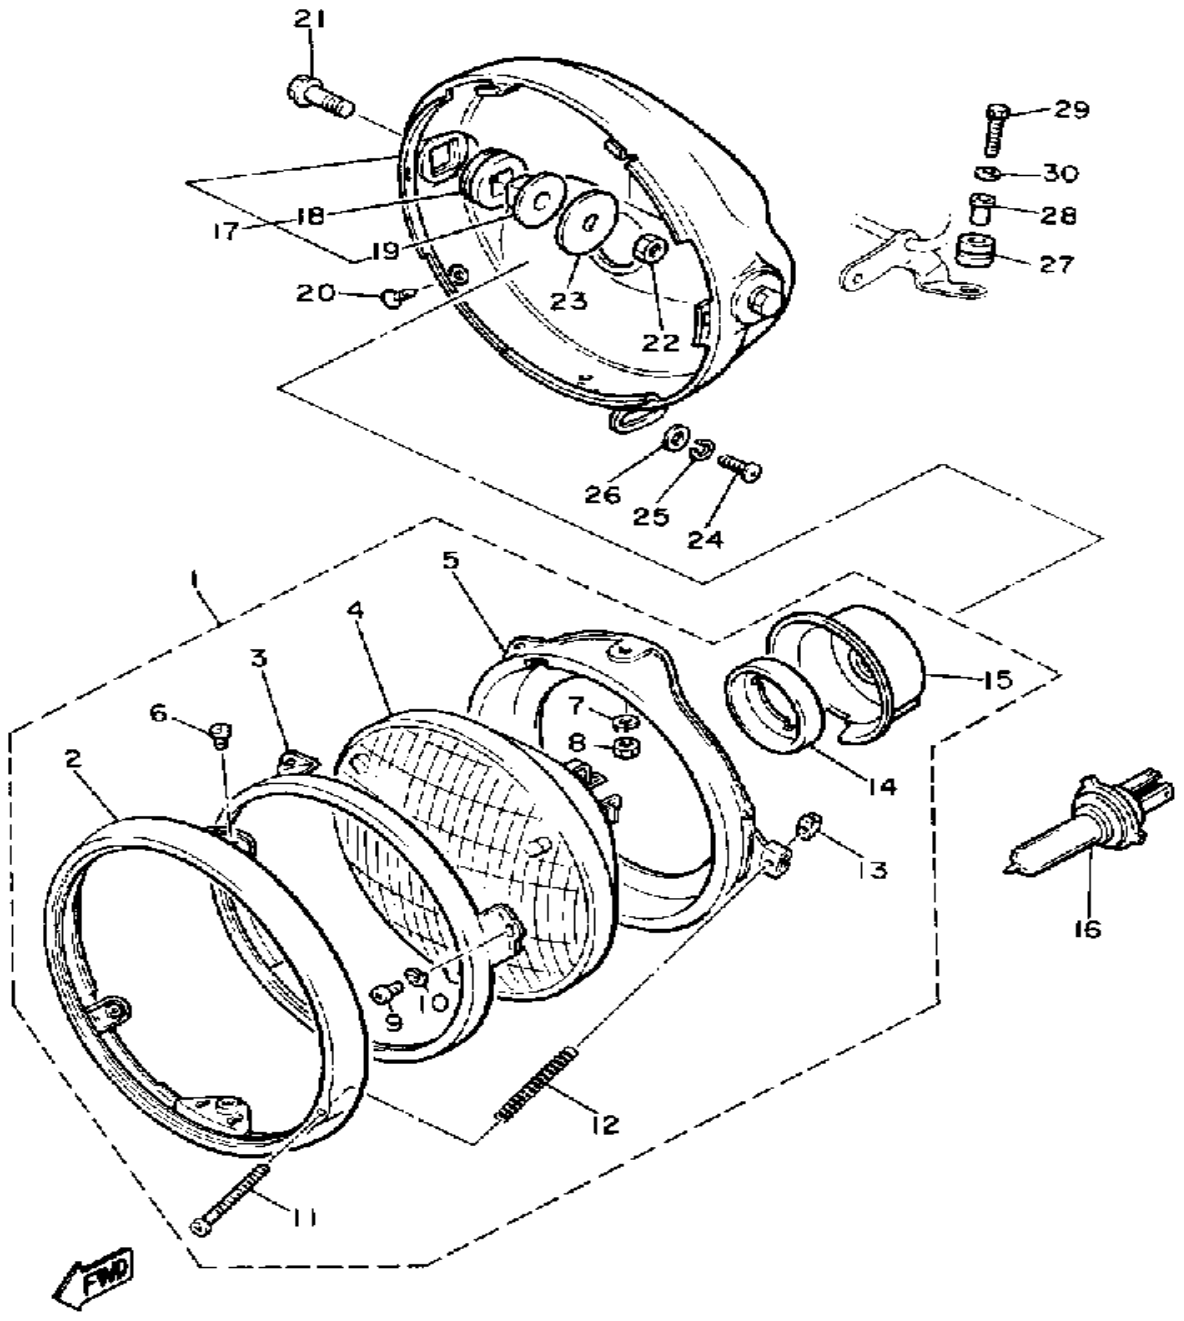

22R110-3390


Ref. No.	Part Number	Description	Qty	Remarks
28	90387-06388-00	COLLAR	1	
29	97011-06025-00	BOLT (97001-06025)	1	
30	92901-06600-00	WASHER	1	

TAILLIGHT

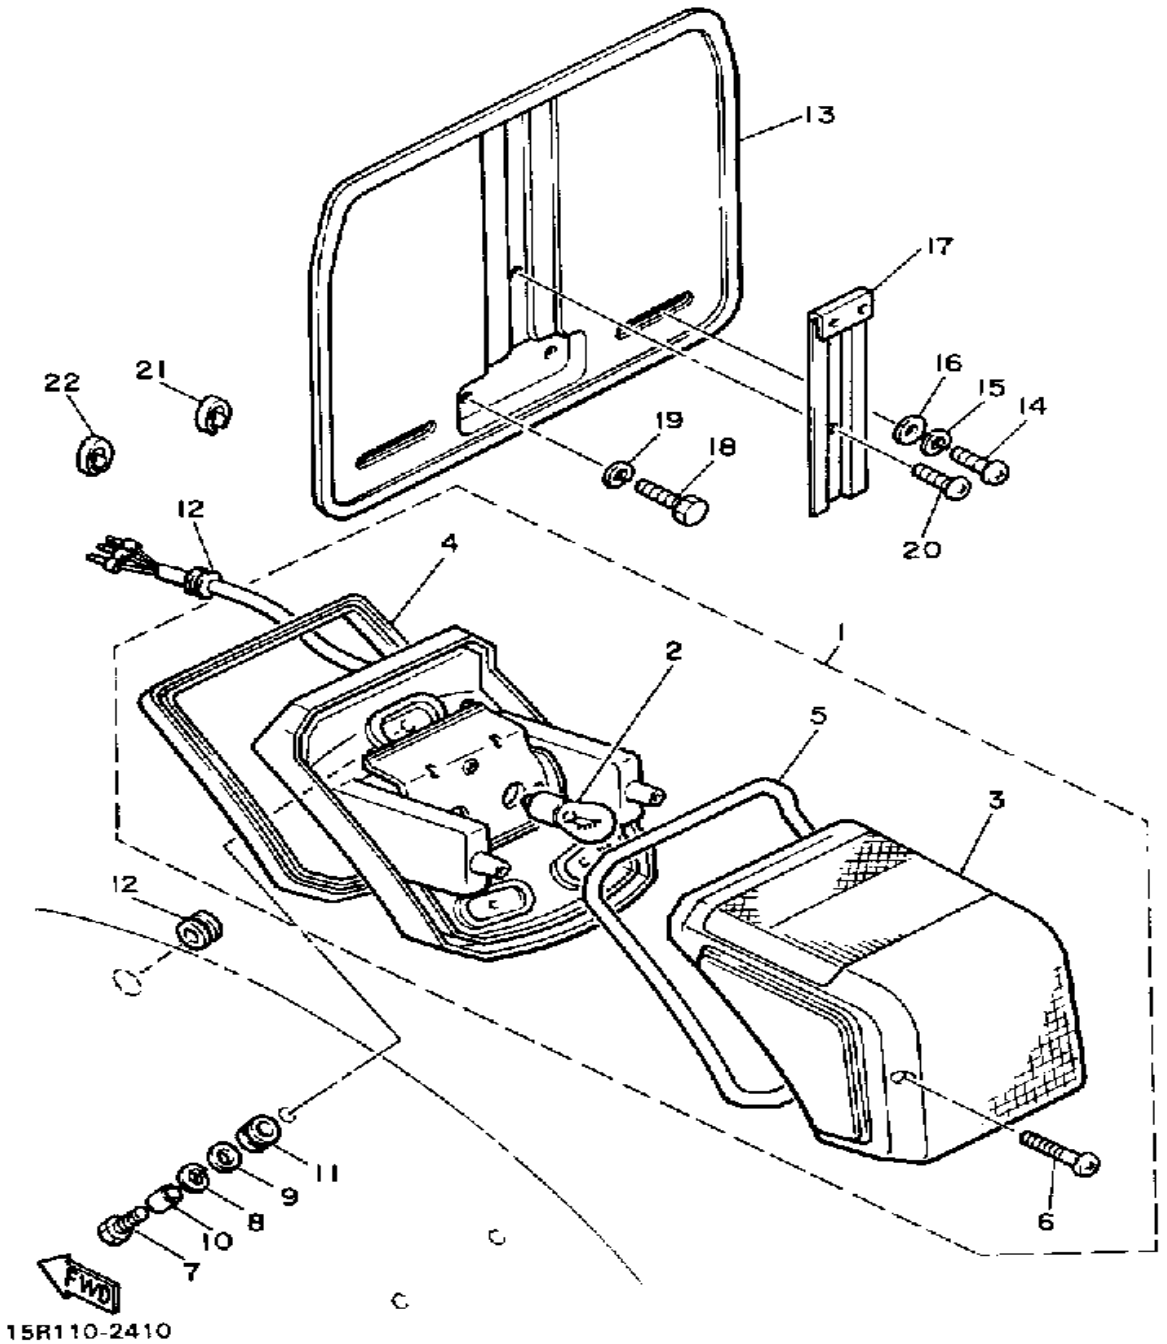

Ref. No.	Part Number	Description	Qty	Remarks
1	10M-84710-60-00	TAILLIGHT UNIT ASSEMBLY . .	1	
2	256-84714-61-00	. BULB (12V-27/8W)	2	
3	10M-84721-00-00	. LENS, TAILLIGHT	1	
4	(10M-84712-00-00)	SEAT, BASE	1	
5	10M-84723-00-00	. GASKET, TAIL LENS	1	
6	97780-40130-00	. SCREW, PANHEAD TAPPING (97701-40130-00)	2	
7	97011-06025-00	BOLT (97001-06025)	3	
8	92995-06100-00	WASHER, SPRING	3	
9	90201-06067-00	WASHER, PLATE	3	
10	90387-06026-00	COLLAR	3	
11	90480-14229-00	GROMMET	3	
12	90480-15061-00	GROMMET	2	
13	(10M-84751-10-93)	BRACKET, LICENSE	1	
14	98580-06012-00	SCREW, PAN HEAD	2	
15	92995-06100-00	WASHER, SPRING	2	
16	92990-06200-00	WASHER	2	
17	10M-84750-00-93	STOPPER, NO PLATE (10M-84750-00)	1	
18	97313-06016-00	BOLT, HEXAGON	2	
19	92995-06100-00	WASHER, SPRING	2	
20	98503-06014-00	SCREW, PAN HEAD (92502-06016)	1	
21	90464-16021-00	CLAMP	1	
22	90464-12027-00	CLAMP	1	


TURNSIGNAL

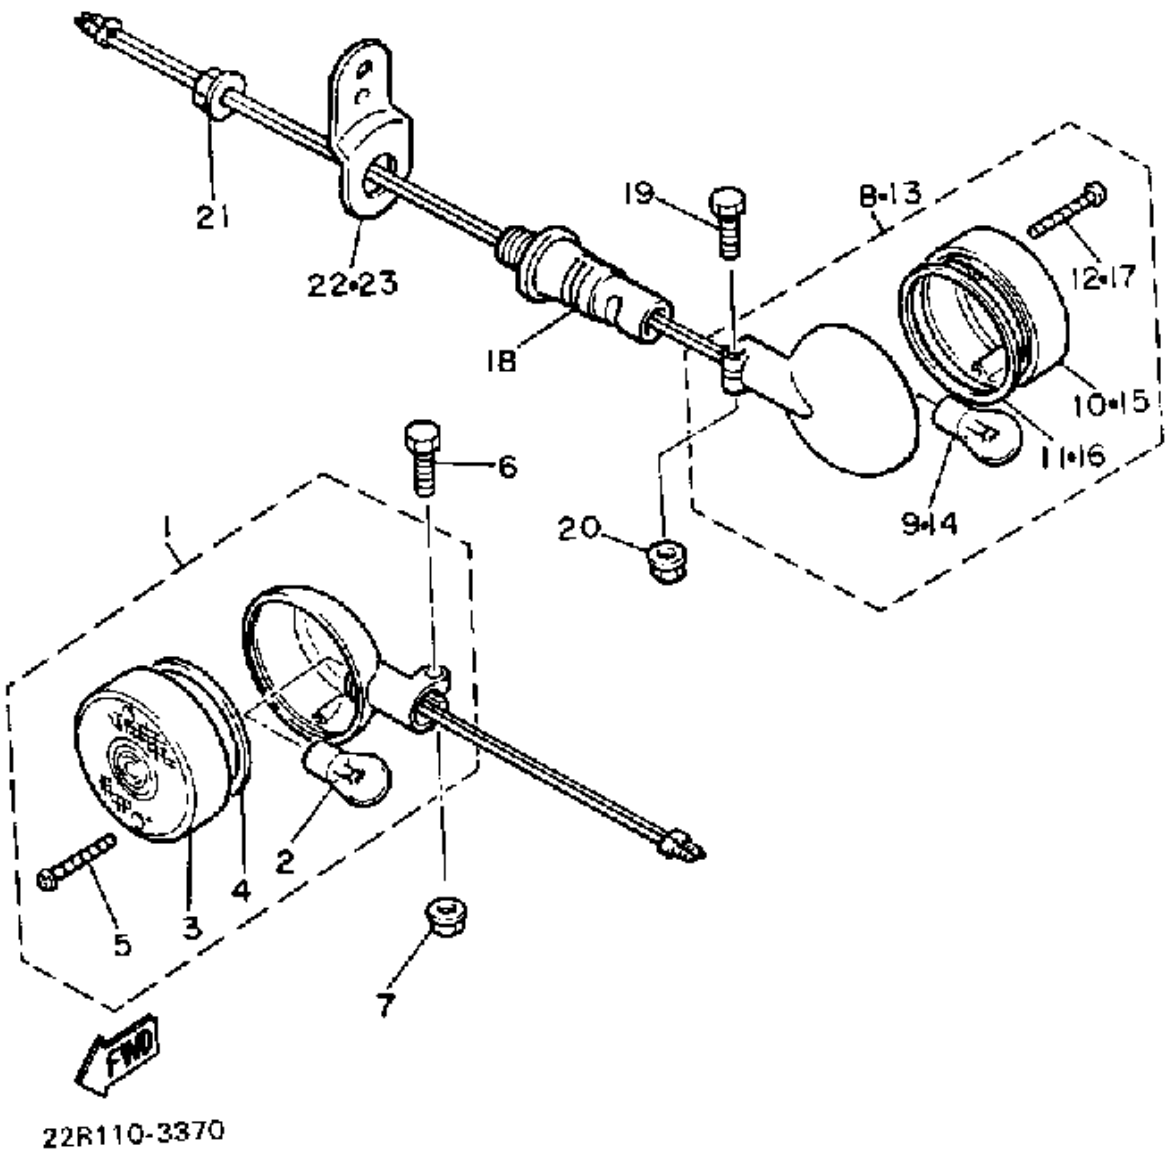

22R110-3370

Ref. No.	Part Number	Description	Qty	Remarks
1	4H7-83330-K0-00	R FLSHR LITE ASSEMBLYASSY 1	1	
2	256-83311-70-XX	. BULB, TS 12V27W	1	
3	4H7-83312-00-00	. LENS, FLASHER	1	
4	4H7-83313-00-00	. GASKET, FLSHR LENS	1	
5	98501-03030-00	. SCREW, PAN HEAD	2	
6	97021-06030-00	BOLT	2	
7	95701-06500-00	NUT, FLANGE	2	
8	5K5-83330-K0-00	R FLSHR LITE ASSEMBLY	1	
9	256-83311-70-XX	. BULB, TS 12V27W	1	
10	4H7-83312-00-00	. LENS, FLASHER	1	
11	4H7-83313-00-00	. GASKET, FLSHR LENS	1	
12	98501-03030-00	. SCREW, PAN HEAD	2	
13	4X7-83330-K0-00	R FLSHR LITE ASSEMBLY	1	
14	256-83311-70-XX	. BULB, TS 12V27W	1	
15	4H7-83312-00-00	. LENS, FLASHER	1	
16	4H7-83313-00-00	. GASKET, FLSHR LENS	1	
17	98501-03030-00	. SCREW, PAN HEAD	2	
18	1AA-83318-00-00	STAY, FLASHER 1	2	
19	97021-06030-00	BOLT	2	
20	95701-06500-00	NUT, FLANGE	2	
21	95701-12500-00	NUT, FLANGE	2	
22	15R-83368-00-00	STAY, FLASHER	1	
23	15R-83369-00-00	STAY, FLASHER	1	

ELECTRICAL 1

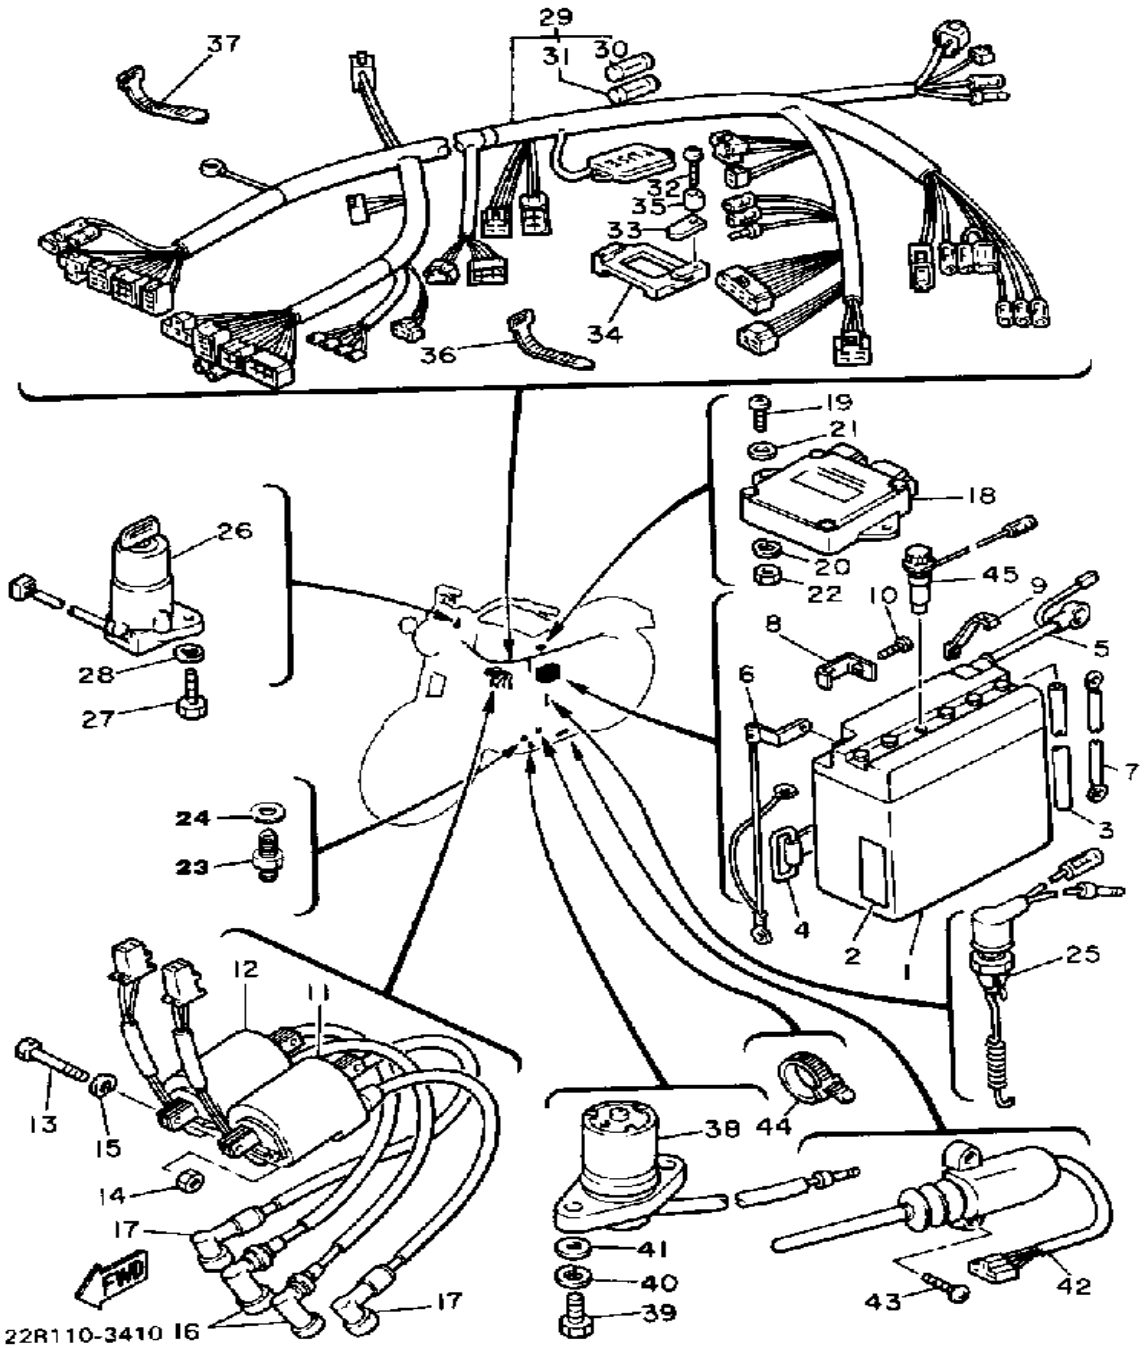


22R110-3410

Ref. No.	Part Number	Description	Qty	Remarks
1	BTY-YB14L-A2-00	BATTERY ASSEMBLY (YB14L-A2)	1	
2	118-82141-09-00	LABEL, BATTERY	1	
3	90445-08336-00	HOSE	1	
4	26H-82131-00-00	BAND, BATTERY	1	
5	12R-82115-00-00	WIRE, PLUS LEAD (15R-82115-00)	1	
6	5G2-82116-00-00	WIRE, MINUS LEAD	1	
7	4H7-82519-00-00	WIRE, EARTH LEAD	1	
8	5G2-82103-00-00	TERMINAL 1	1	
9	15R-82103-00-00	TERMINAL 1	1	
10	90153-06032-00	SCREW, HEXAGON	2	
11	4H7-82310-61-00	IGNITION COIL ASSEMBLY	1	
12	4H7-82320-61-00	IGNITION COIL ASSEMBLY (4H7-82320-60)	1	
13	97021-06080-00	BOLT (97001-06080-00)	2	
14	95380-06600-00	NUT	2	
15	92990-06200-00	WASHER	2	
16	1J7-82370-00-00	PLUG CAP ASSEMBLY	2	
17	256-82370-00-00	PLUG CAP ASSEMBLY	2	
18	5G2-82305-10-00	IGNITOR UNIT ASSEMBLY 1	1	
19	92503-06016-00	UNAVAILABLE IN PRICE BOOK (92502-06016)	2	
20	92995-06100-00	WASHER, SPRING	2	
21	92901-06600-00	WASHER	2	
22	95380-06700-00	NUT	2	
23	2H7-82540-00-00	NEUTRAL SWITCH ASSEMBLY	1	
24	90430-10171-00	GASKET	1	
25	1E9-82530-02-00	STOP SWITCH ASSEMBLY (1E9-82530-00-00)	1	


CONTINUED ON NEXT FRAME ➤

ELECTRICAL 1

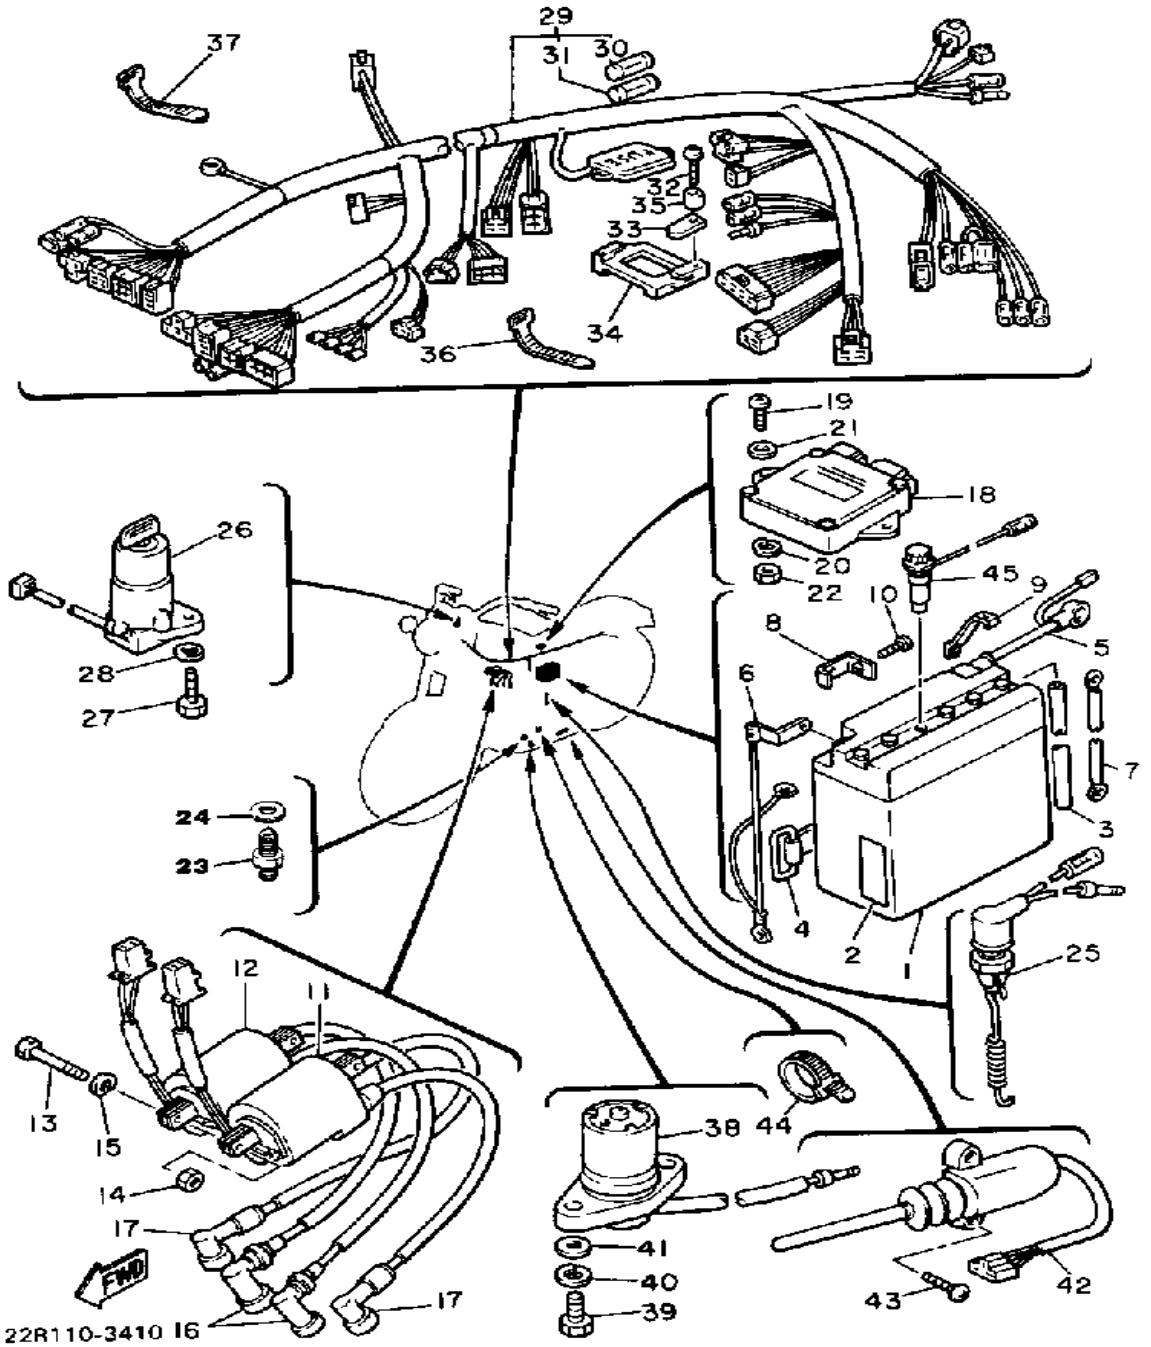

Ref. No.	Part Number	Description	Qty	Remarks
26	3JV-82501-00-00	MAIN SWITCH STEERING LOCK	1	
27	97011-06016-00	BOLT	2	
28	92901-06600-00	WASHER	2	
29	22R-82590-50-00	WIRE HARNESS ASSEMBLY	1	
30	116-82151-00-00	. FUSE (10A)	3	
31	1A0-82161-00-00	. FUSE (20A) (148-82151-00-00)	1	
32	97780-50125-00	SCREW, TAPPING	2	
33	(4K0-82558-00-00)	WASHER	2	
34	4K0-82157-00-00	DAMPER	1	
35	90387-056E6-00	INACTIVE PART NUMBER	2	
36	437-83936-11-00	BAND, SWITCH CORD	3	
37	25G-83936-01-00	BAND, SWITCH CORD	1	
38	4H7-85720-01-00	OIL LVL GAUGE ASSEMBLY	1	
39	97011-06020-00	BOLT	2	
40	92995-06100-00	WASHER, SPRING	2	
41	92901-06600-00	WASHER	2	
42	5G2-82566-01-00	SWITCH, SIDE STAND	1	
43	98706-05016-00	SCREW, FLAT HEAD	2	
44	341-26397-01-00	BAND	1	


ELECTRICAL 2

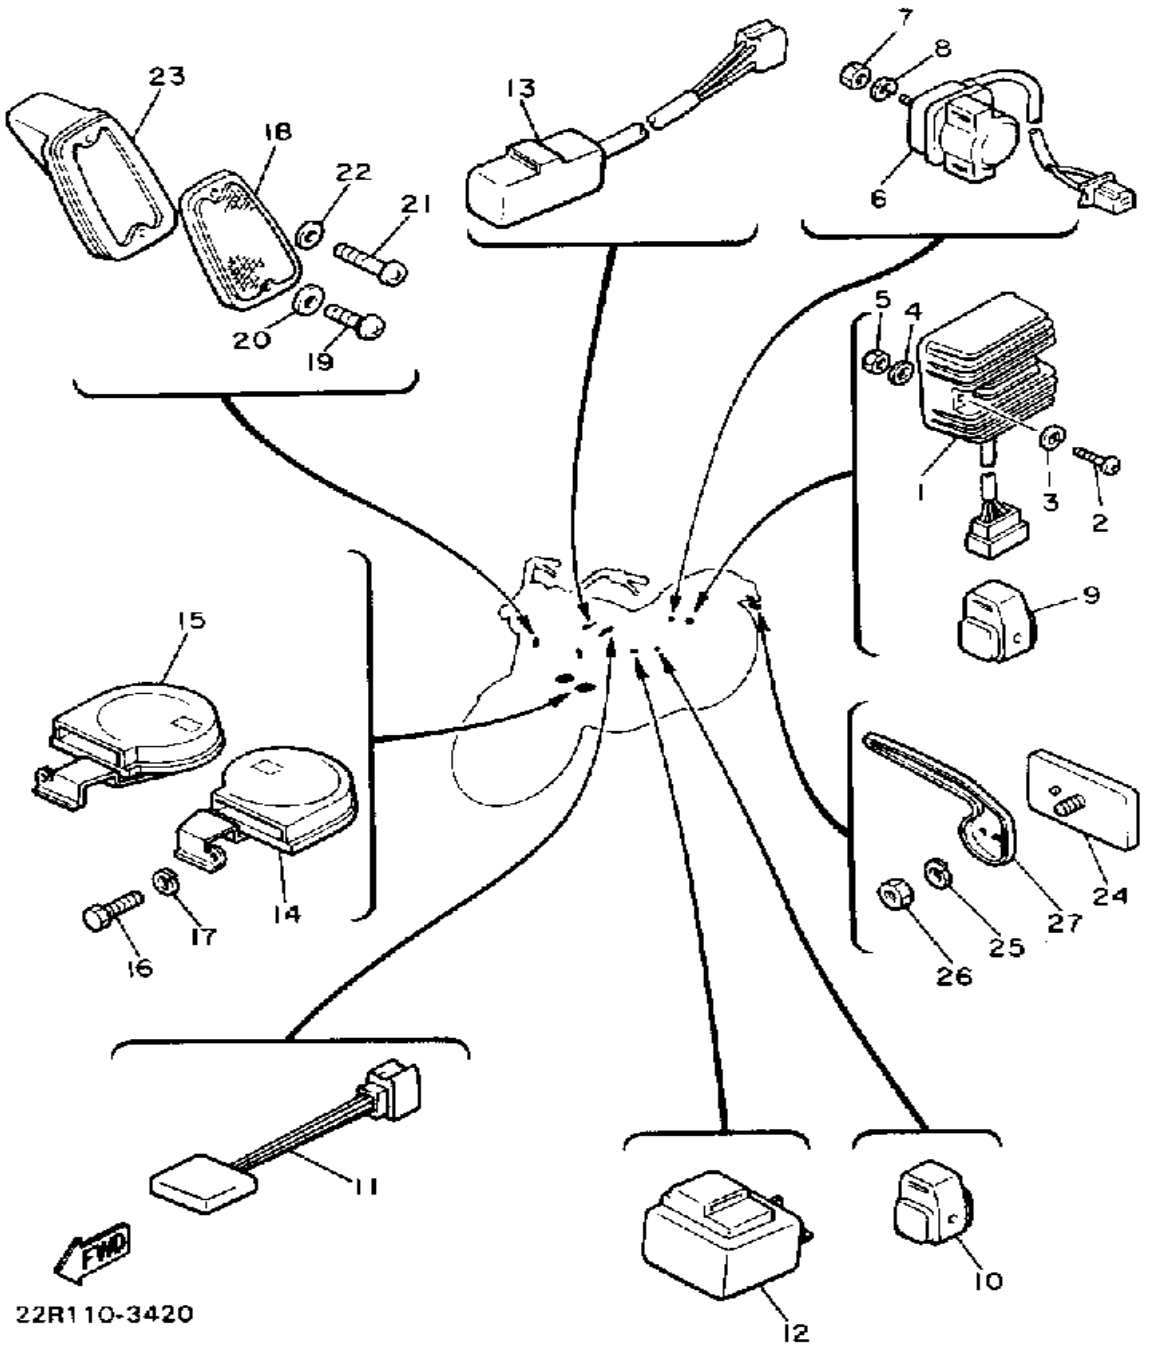

22R110-3420

Ref. No.	Part Number	Description	Qty	Remarks
1	12R-81960-A1-00	RECTIFIER/REG ASSEMBLY	1	
2	98580-06030-00	SCREW PAN HEAD	2	
3	92995-06100-00	WASHER, SPRING	2	
4	92901-06600-00	WASHER	2	
5	95380-06700-00	NUT	2	
6	3AY-81940-00-00	STARTER RELAY ASSEMBLY	1	
7	95380-06700-00	NUT	2	
8	92995-06100-00	WASHER, SPRING	2	
9	12R-81950-01-00	RELAY ASSEMBLY.RELAY (4H7-81950-01)	1	
10	4U8-81950-02-00	RELAY ASSEMBLY. (4U8-81950-00)	1	
11	4H7-81980-M0-00	DIODE ASSEMBLY	1	
12	4H7-83350-70-00	FLASHER RELAY ASSEMBLY	1	
13	1A0-83395-03-00	FLASHER CANCL UNIT	1	
14	15R-83371-20-00	HORN	1	
15	15R-83371-30-00	HORN	1	
16	97016-08016-00	BOLT	2	
17	92906-08100-00	WASHER, SPRING	2	
18	3G1-85110-00-00	FRT REFLECTOR ASSEMBLY	2	
19	98506-04018-00	SCREW, PAN HEAD	2	
20	92901-04600-00	WASHER, PLATE	2	
21	849-84724-00-00	SCREW, LENS FITTING	2	
22	92901-04600-00	WASHER, PLATE	2	
23	4H7-85127-01-00	BASE, REFLECTOR	2	
24	3Y6-85130-02-00	REAR REFLECTOR ASSEMBLY	1	
25	92990-05100-00	WASHER, SPRING	1	
26	95380-05600-00	NUT	1	
27	15R-85132-00-00	BRACKET, REFLECT 1	1	

HANDLE SWITCH-LEVER

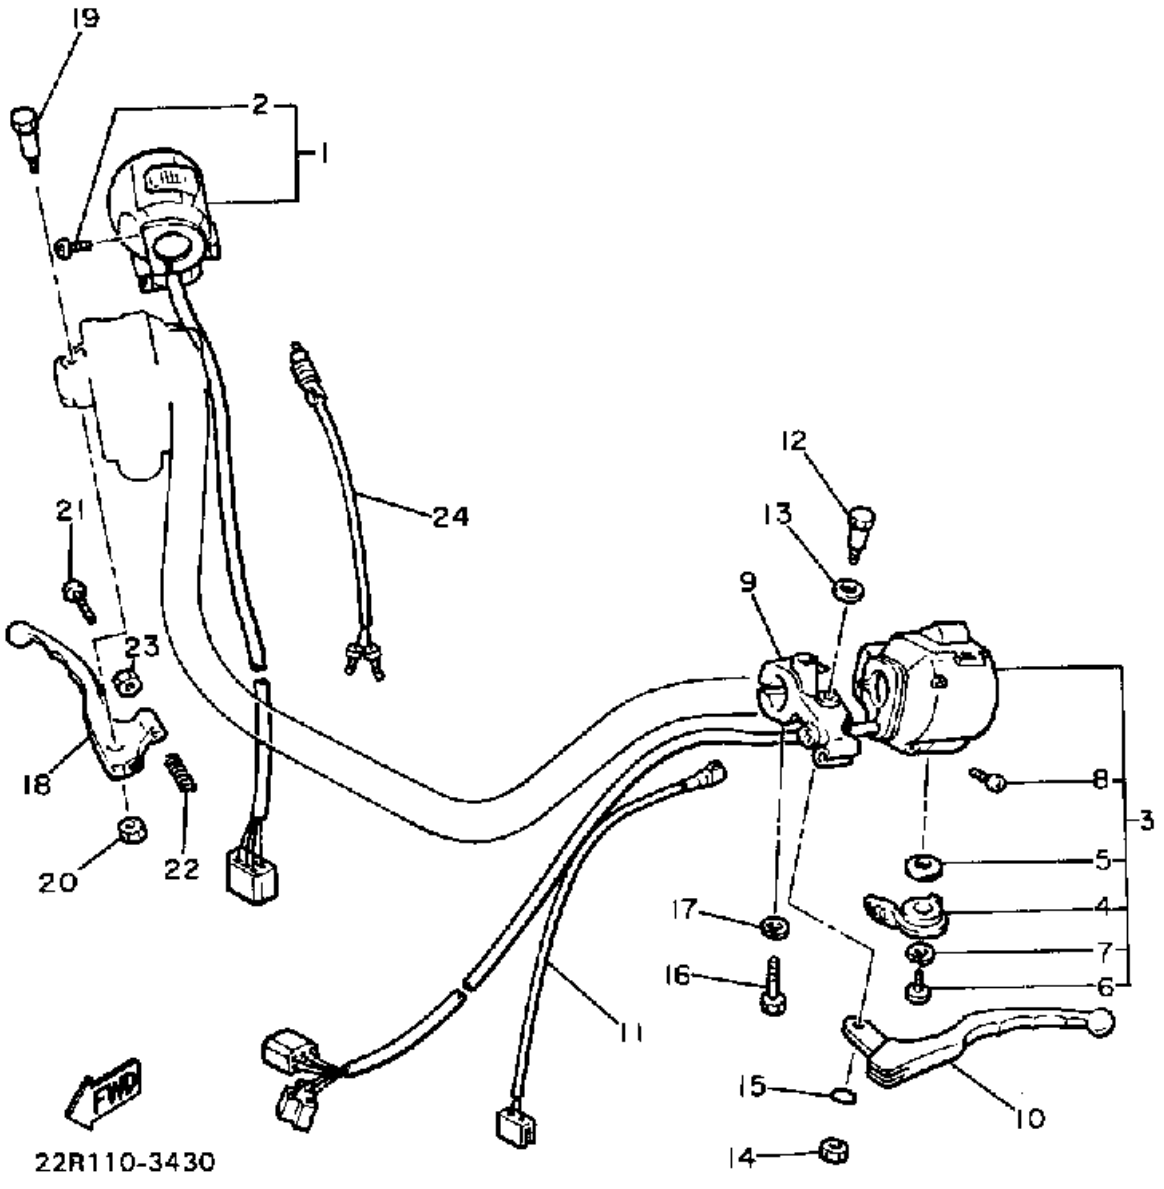

22R110-3430

Ref. No.	Part Number	Description	Qty	Remarks
1	26H-83975-00-00	SWITCH, HANDLE 2	1	
2	98506-05020-00	. SCREW, PAN HEAD	2	
3	15R-83973-00-98	SWITCH, HANDLE 3 (10M-83973-00-00)	1	LOW GLOSS BLK
4	10M-83941-00-00	. LEVER, STARTER	1	
5	90209-10131-00	. WASHER	1	
6	98580-06008-00	. SCREW, PAN HEAD	1	
7	92995-06100-00	. WASHER, SPRING	1	
8	98506-05020-00	. SCREW, PAN HEAD	2	
9	10M-82911-00-00	HOLDER, LEVER 1	1	
10	10W-83912-00-00	LEVER L	1	
11	3Y6-82917-00-00	SWITCH	1	
12	90109-06797-00	BOLT	1	
13	90201-082A9-00	WASHER, PLATE	1	
14	95616-06100-00	NUT, U	1	
15	93210-11368-00	O-RING	1	
16	97006-06022-00	BOLT	1	
17	92906-06100-00	WASHER, SPRING	1	
18	4L0-83922-00-00	LEVER RH	1	
19	90109-06465-00	BOLT	1	
20	90170-06010-00	NUT	1	
21	90149-06131-00	SCREW	1	
22	90501-10312-00	SPRING, COMPRESSION	1	
23	95601-06100-00	NUT, U	1	
24	1A0-83980-30-00	STOP SWITCH ASSEMBLY	1	

TOP END GASKET KIT

Ref. No.	Part Number	Description	Qty	Remarks
24	(5G2-W0001-90-00)	GASKT KIT TE XJ7 0	1	
	1J7-12119-01-00	. SEAL, VALVE STEM	8	
	3YX-12213-00-00	. GASKET, TENSNR CASE (5G2-12213-00)	1	
	4BB-11351-00-00	. GASKET, CYLINDER (5G2-11351-00)	1	
	4H7-13556-01-00	. GASKET, MANIFOLD	4	
	4H7-14613-00-00	. GASKET, EXST PIPE	4	
	5G2-11181-00-00	. GASKET, CYLINDER HEAD 1	1	
	5G2-11193-00-00	. GASKET, HD.COVER 1	1	
	5G2-11355-00-00	. SEAL, CYLINDER 1	1	
	90430-14131-00	. GASKET	2	
	93210-08006-00	. O-RING	1	
	93210-09443-00	. O-RING	4	
	93210-71462-00	. O-RING	4	