
PARTS CATALOGUE
MODEL YEAR 1994
YZF750RF (4LE1) U49
YZF750RFC (4LE2)

Frame Serial No.	4LE-001101 and following
Engine Serial No.	4LE-001101 and following

Frame Serial No.	4LE-000101 and following
Engine Serial No.	4LE-000101 and following


PUBLICATION	PART NUMBER	REMARKS
OWNER'S MANUAL	LIT-11626-09-20	
ASSEMBLY	LIT-11666-09-20	
SERVICE MANUAL	LIT-11616-09-20	

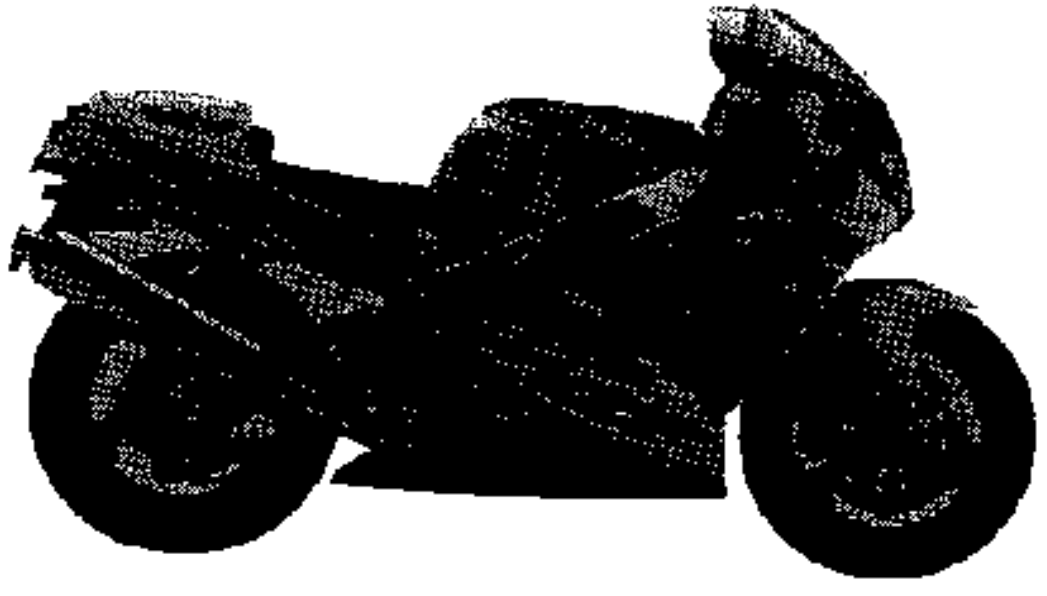

YAMAHA ONLINE Parts & Accessories

A1


CYLINDER HEAD

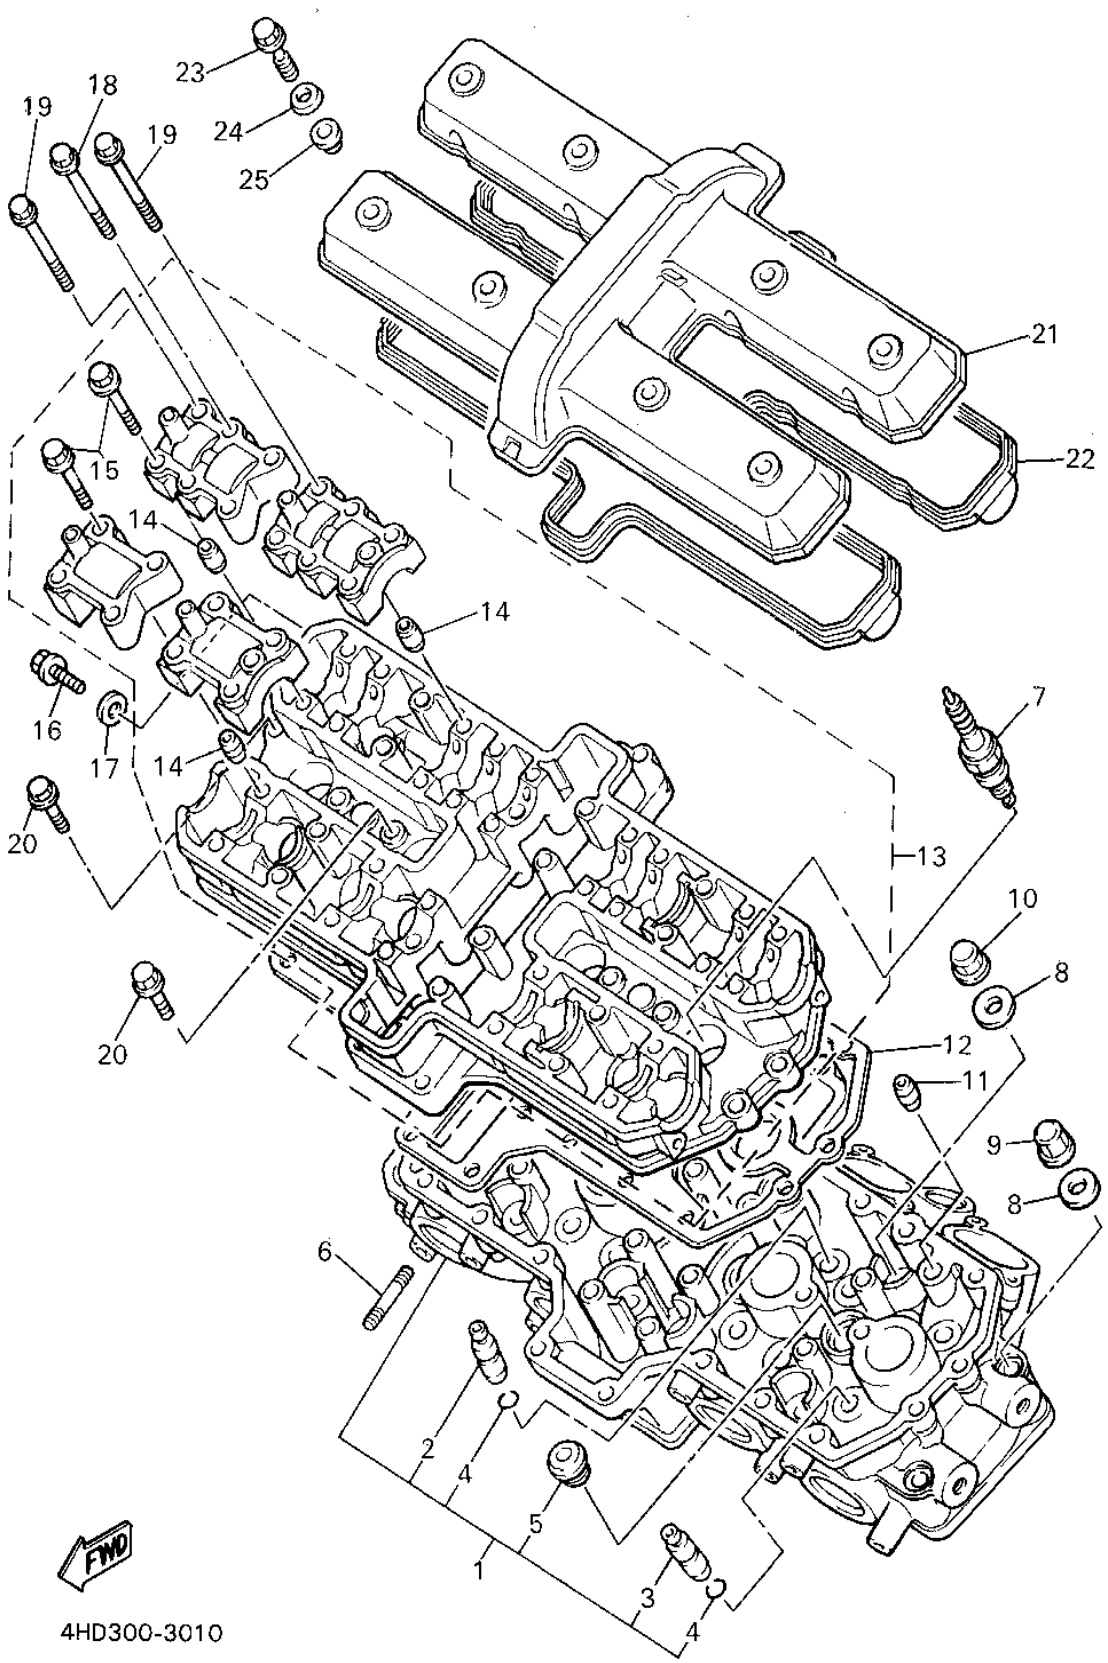

4HD300-3010

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-11102-00-00	CYLINDER HEAD ASSEMBLY .	1	
2	3GM-11133-10-00	. GUIDE, INTAKE VALVE	12	
3	3GM-11134-10-00	. GUIDE, EXHAUST VALVE ...	8	
4	93440-10153-00	. CIRCLIP	20	
5	90340-18101-00	. PLUG, STRAIGHT SCREW ...	4	
6	95611-08625-00	BOLT, STUD	8	
7	NGK-CR9E0-00-00	PLUG, SPARK (NGK R CR9E) .	4	UR
8	90201-103M4-00	WASHER, PLATE	12	
9	90176-10049-00	NUT, CROWN	4	
10	90179-10584-00	NUT	8	
11	91810-25008-00	PIN, DOWEL	2	
12	3FV-11182-00-00	GASKET, CYLINDER HEAD 2 .	1	
13	4FM-1115A-00-00	CAM CASE ASSEMBLY	1	
14	99510-08016-00	. PIN, DOWEL	16	
15	90105-06153-00	. BOLT, WASHER BASED	16	
16	95023-06012-00	BOLT, FLANGE	1	
17	90430-06014-00	GASKET	1	
18	90105-06541-00	BOLT, WASHER BASED	20	
19	90105-06693-00	BOLT, WASHER BASED	4	
20	95023-06025-00	BOLT, FLANGE	11	
21	3GM-11191-00-00	COVER, CYLINDER HEAD 1 ..	1	
22	3GM-11193-00-00	GASKET, HEAD COVER 1	1	
23	90109-064F0-00	BOLT	8	
24	90209-11262-00	WASHER	8	
25	2GH-1111G-00-00	RUBBER, MOUNT 1	8	


CYLINDER

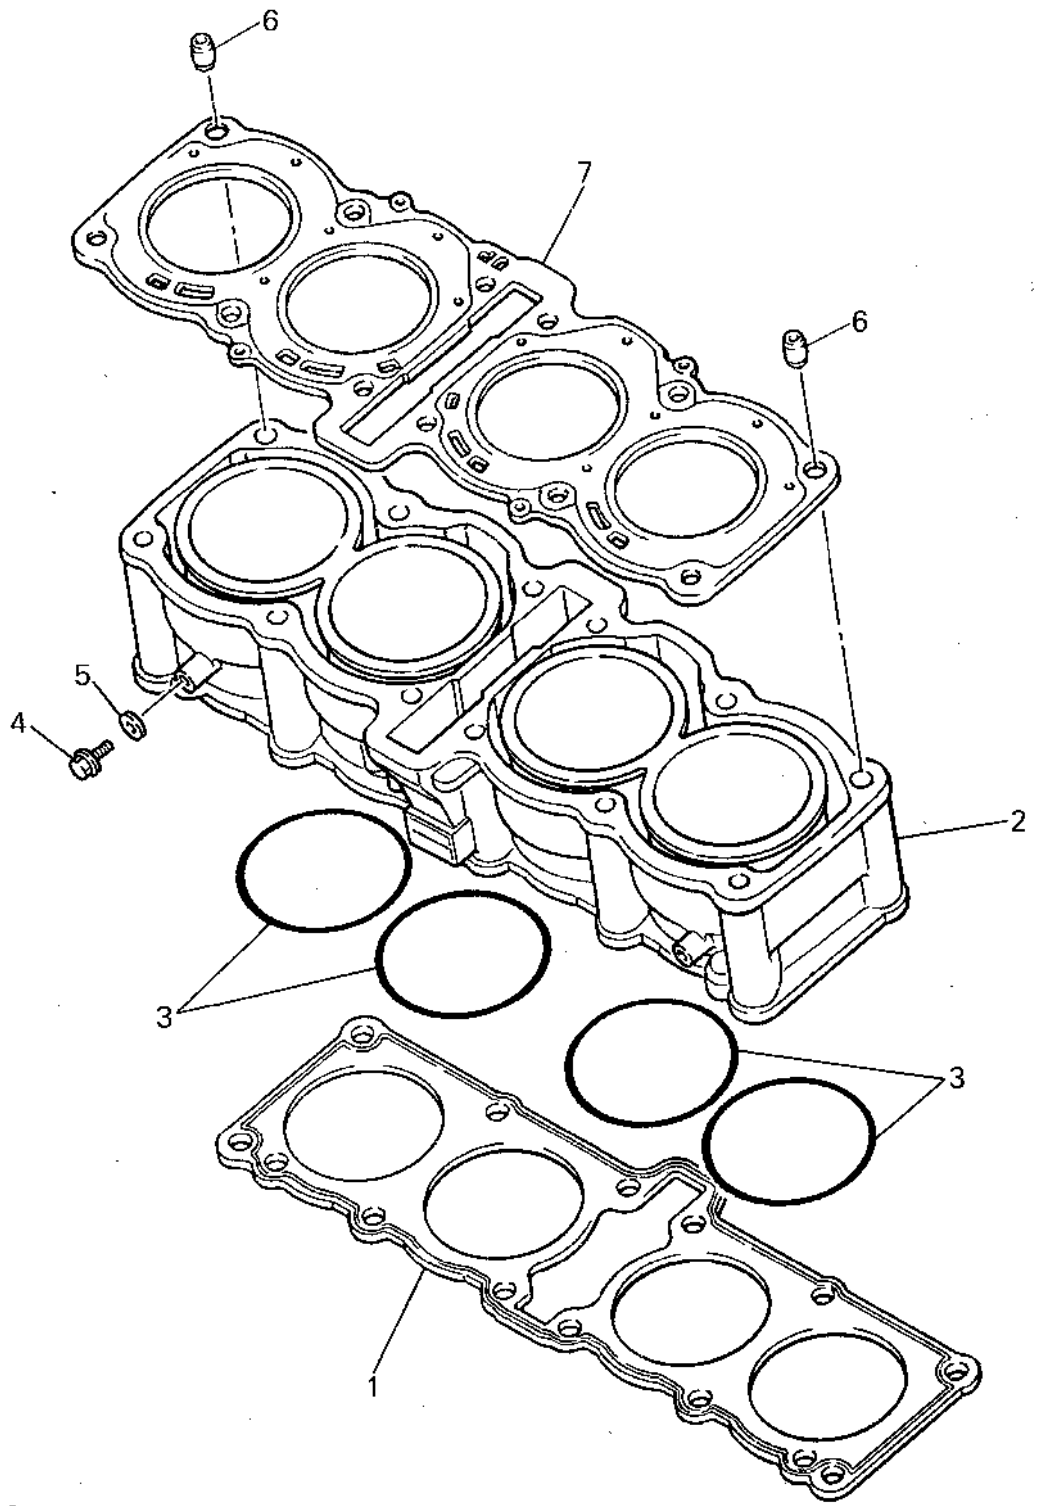

4HD300-3020

Ref. No.	Part Number	Description	Qty	Remarks
1	3FV-11351-00-00	GASKET, CYLINDER	1	
2	4FM-11310-00-00	CYLINDER	1	
3	93210-76211-00	O-RING	4	
4	95023-06012-00	BOLT, FLANGE	2	
5	90430-06014-00	GASKET	2	
6	99510-14016-00	PIN, DOWEL	2	
7	3FV-11181-00-00	GASKET, CYLINDER HEAD 1	1	


CRANKSHAFT - PISTON

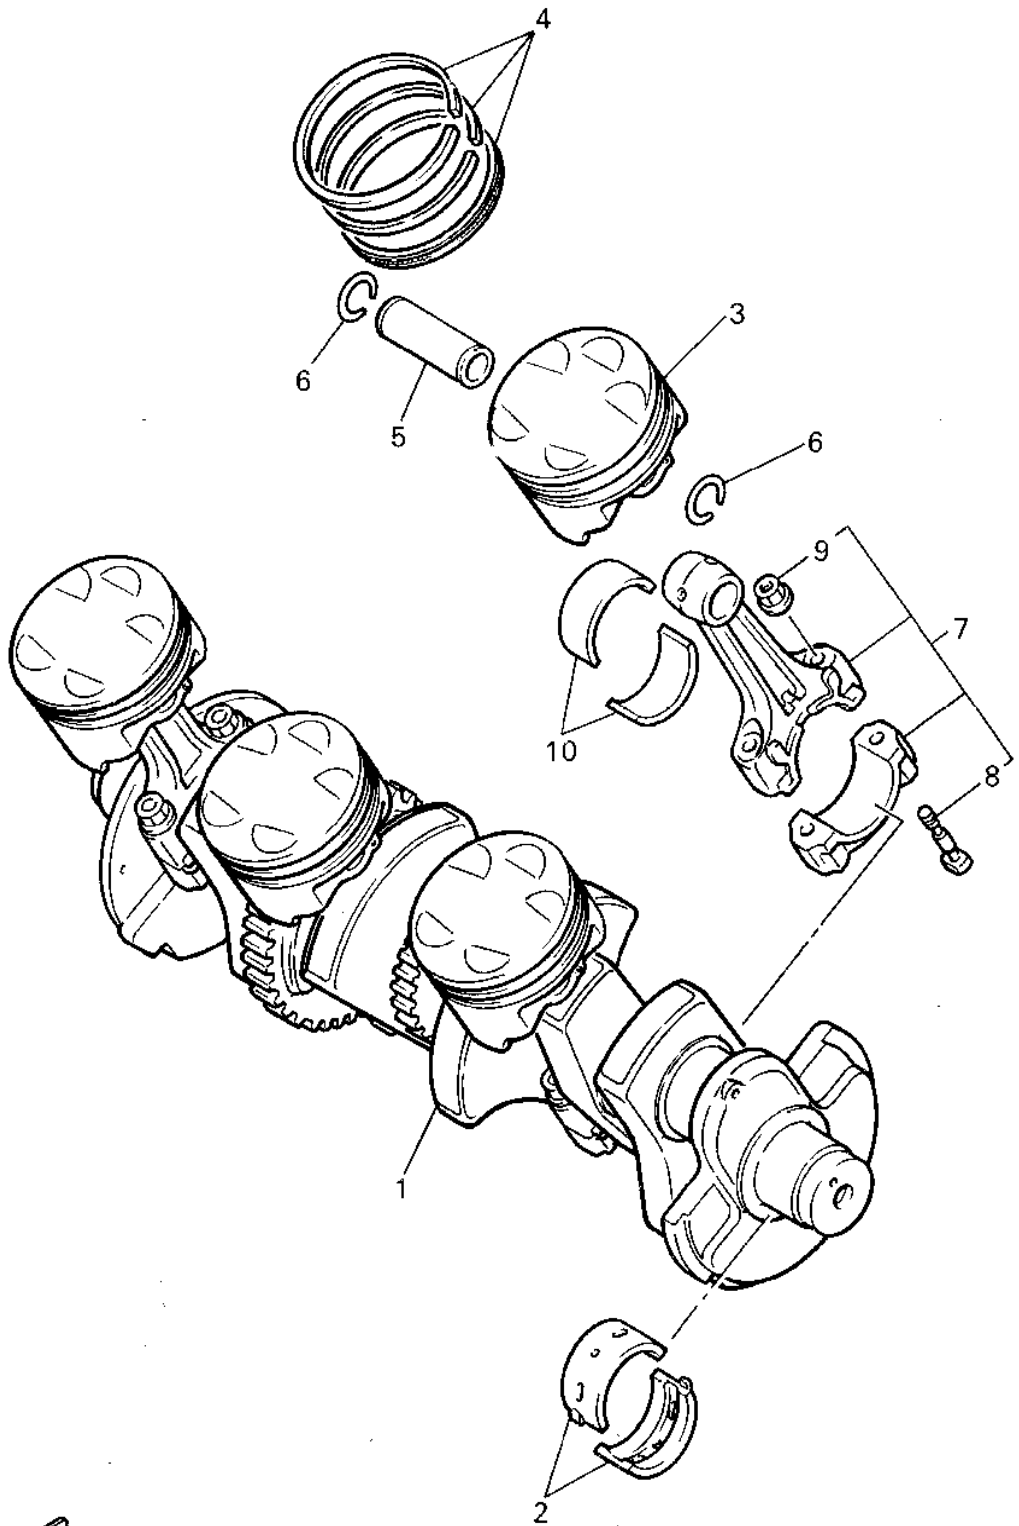

4HD300-3030

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-11411-00-00	CRANKSHAFT	1	
2	3GM-11416-00-00	PLANE BEARING, CRANKSHAFT 1	10	UR BLUE
	3GM-11416-10-00	PLANE BEARING, CRANKSHAFT 1	10	UR BLACK
	3GM-11416-20-00	PLANE BEARING, CRANKSHAFT 1	10	UR BROWN
	3GM-11416-30-00	PLANE BEARING, CRANKSHAFT 1	10	UR GREEN
	3GM-11416-40-00	PLANE BEARING, CRANKSHAFT 1	10	UR YELLOW
3	4FM-11631-00-A0	PISTON (STD)	4	
	4FM-11636-00-00	PISTON (0.50MM O/S)	4	AP
4	4FM-11603-00-00	PISTON RING SET (STD)	4	
	4FM-11605-00-00	PISTON RING SET (0.50MM O/S)	4	AP
5	3GM-11633-00-00	PIN, PISTON	4	
6	93450-19095-00	CIRCLIP	8	
7	4FM-11650-00-00	CONNECTING ROD ASSEMBLY	4	
8	36Y-11654-00-00	. BOLT, CONNECTING ROD	2	
9	90179-08327-00	. NUT	2	
10	3GM-11656-00-00	PLANE BEARING, CONNECTING ROD	8	UR BLUE
	3GM-11656-10-00	PLANE BEARING, CONNECTING ROD	8	UR BLACK
	3GM-11656-20-00	PLANE BEARING, CONNECTING ROD	8	UR BROWN
	3GM-11656-30-00	PLANE BEARING, CONNECTING ROD	8	UR GREEN


VALVE

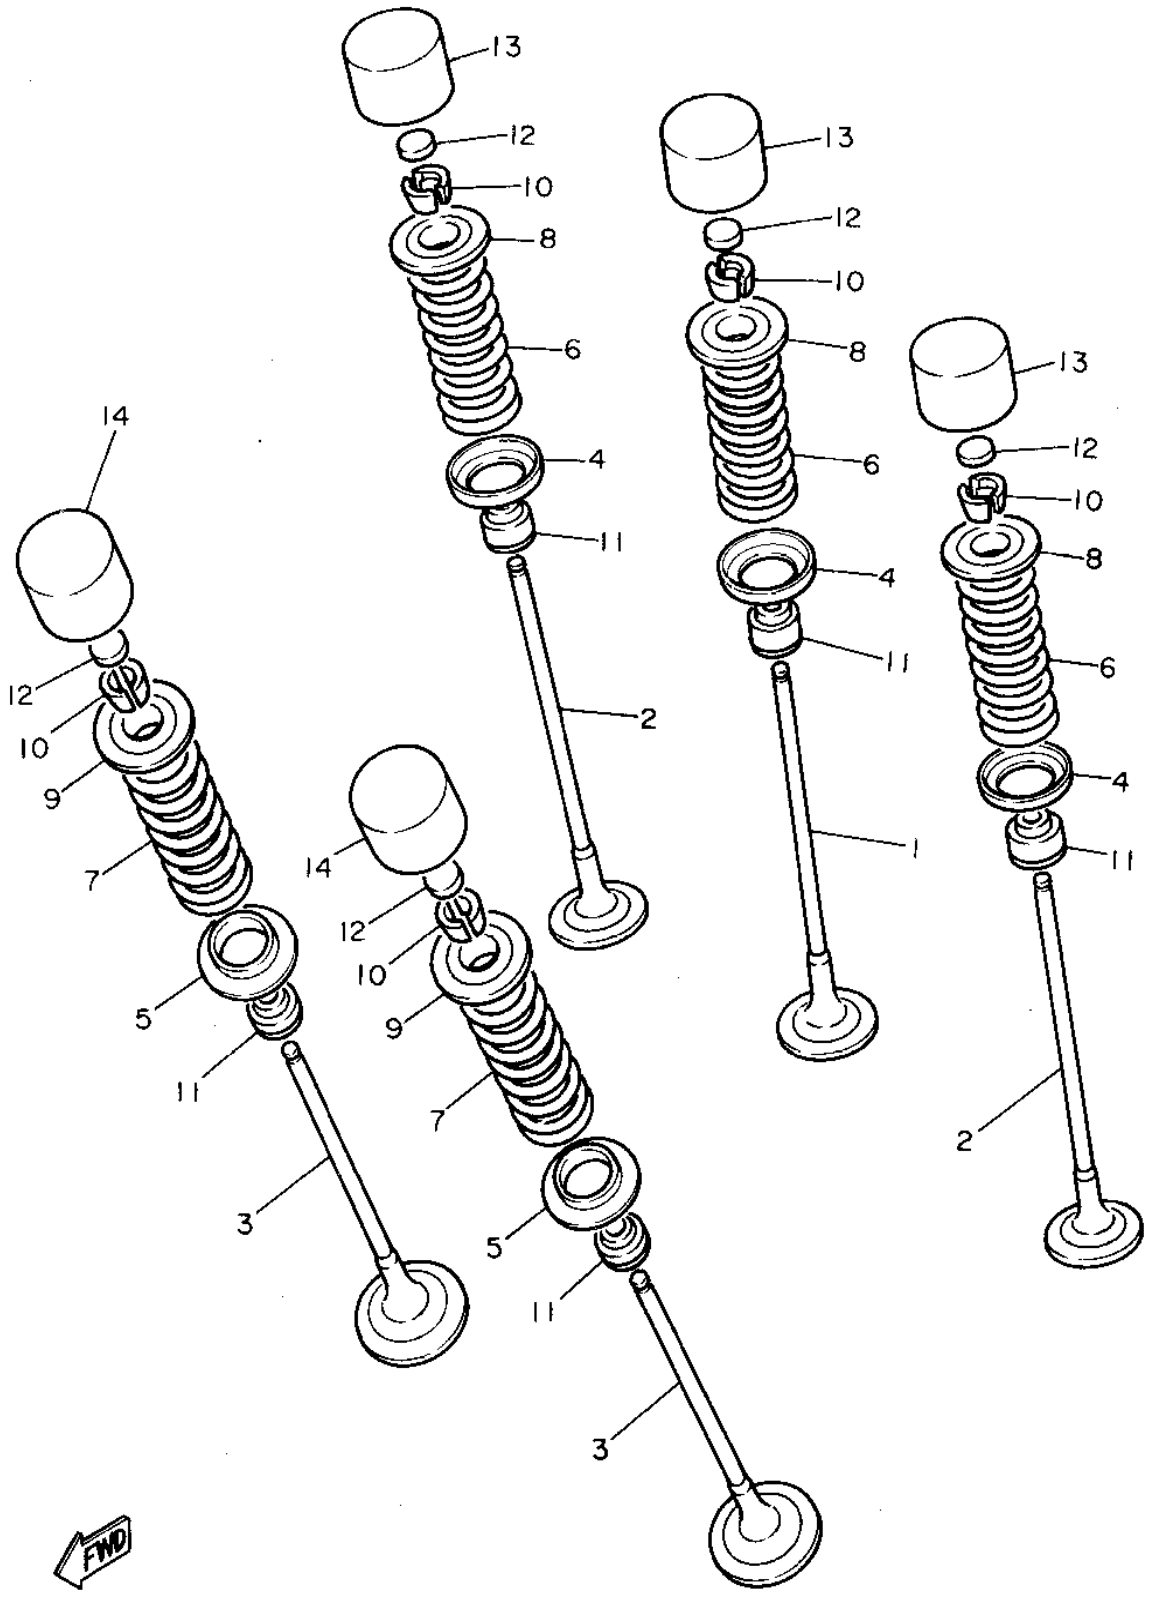

3LE332-9040

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-12111-00-00	VALVE, INTAKE	4	
2	4FM-12112-00-00	VALVE, INTAKE 2	8	
3	4FM-12121-00-00	VALVE, EXHAUST	8	
4	4FM-12116-00-00	SEAT, VALVE SPRING	12	
5	3GM-12126-00-00	SEAT, VALVE SPRING 2	8	
6	3FV-12113-00-00	SPRING, VALVE INNER	12	
7	3FV-12114-00-00	SPRING, VALVE OUTER	8	
8	3GM-12117-00-00	RETAINER, VALVE SPRING	12	
9	1WG-12117-00-00	RETAINER, VALVE SPRING	8	
10	1WG-12118-00-00	COTTER, VALVE	40	
11	1WG-12119-00-00	SEAL, VALVE STEM	20	
12	1HX-12168-00-00	PAD, ADJUSTING 2 (1.20)	20	UR
	1HX-12168-20-00	PAD, ADJUSTING 2 (1.25)	20	UR
	1HX-12168-40-00	PAD, ADJUSTING 2 (1.30)	20	UR
	1HX-12168-60-00	PAD, ADJUSTING 2 (1.35)	20	UR
	1HX-12168-80-00	PAD, ADJUSTING 2 (1.40)	20	UR
	1HX-12168-A0-00	PAD, ADJUSTING 2 (1.45)	20	UR
	1HX-12168-F0-00	PAD, ADJUSTING 2 (1.50)	20	UR
	1HX-12168-H1-00	PAD, ADJUSTING 2 (1.55)	20	UR
	1HX-12168-K1-00	PAD, ADJUSTING 2 (1.60)	20	UR
	1HX-12168-M1-00	PAD, ADJUSTING 2 (1.65)	20	UR
	1HX-12168-R1-00	PAD, ADJUSTING 2 (1.70)	20	UR
	1HX-12168-U1-00	PAD, ADJUSTING 2 (1.75)	20	UR
	1HX-12168-W1-00	PAD, ADJUSTING 2 (1.80)	20	UR
	1HX-12168-Y1-00	PAD, ADJUSTING 2 (1.85)	20	UR
	1HX-12169-11-00	PAD, ADJUSTING 2 (1.90)	20	UR
	1HX-12169-31-00	PAD, ADJUSTING 2 (1.95)	20	UR
	1HX-12169-50-00	PAD, ADJUSTING 2 (2.00)	20	UR
	1HX-12169-70-00	PAD, ADJUSTING 2 (2.05)	20	UR

CONTINUED ON NEXT FRAME ➤

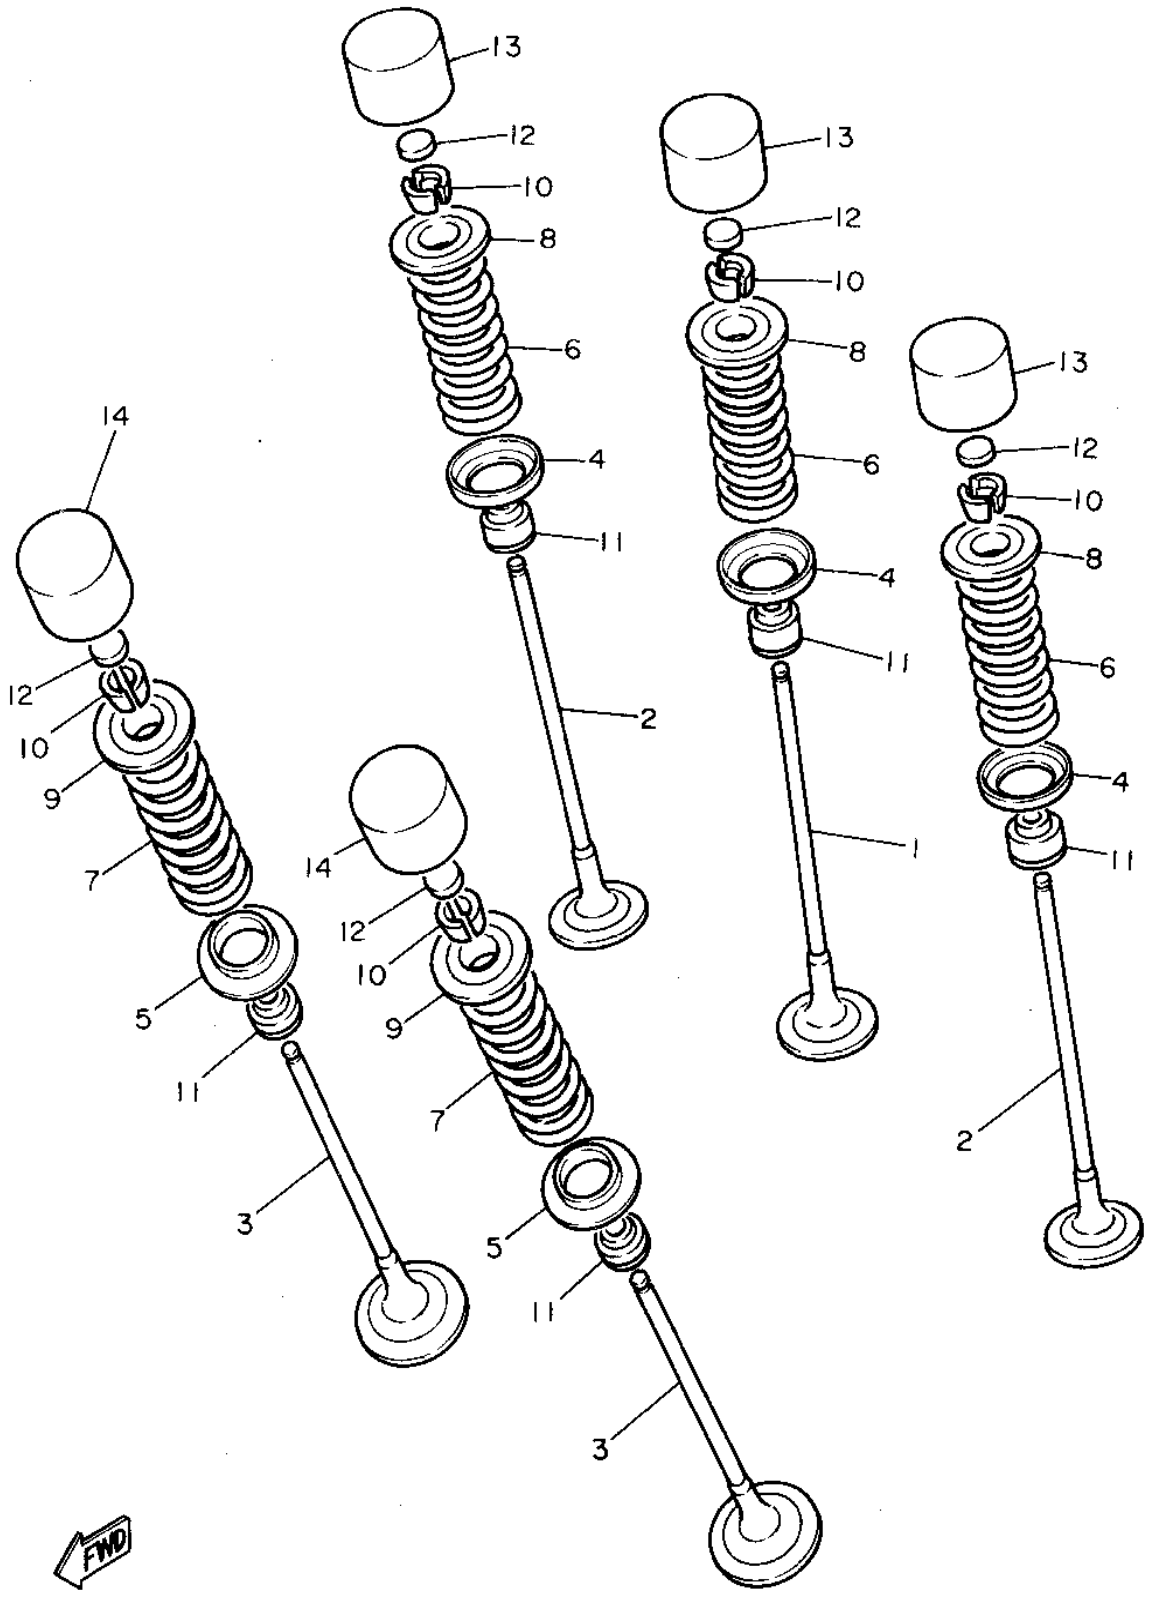


3LE332-9040

VALVE

Ref. No.	Part Number	Description	Qty	Remarks
12	1HX-12169-90-00	PAD, ADJUSTING 2 (2.10)	20	UR
	1HX-12169-E0-00	PAD, ADJUSTING 2 (2.15)	20	UR
	1HX-12169-G0-00	PAD, ADJUSTING 2 (2.20)	20	UR
	1HX-12169-J0-00	PAD, ADJUSTING 2 (2.25)	20	UR
	1HX-12169-L0-00	PAD, ADJUSTING 2 (2.30)	20	UR
	1HX-12169-N0-00	PAD, ADJUSTING 2 (2.35)	20	UR
	1HX-12169-T0-00	PAD, ADJUSTING 2 (2.40)	20	UR
13	3LN-12153-09-00	LIFTER, VALVE (O/S)	12	UR GREEN
	3LN-12153-20-00	LIFTER, VALVE	12	UR BLUE
	3LN-12153-30-00	LIFTER, VALVE	12	UR RED
14	3FV-12153-09-00	LIFTER, VALVE (O/S)	8	UR GREEN
	3FV-12153-10-00	LIFTER, VALVE	8	UR YELLOW

CAMSHAFT - CHAIN

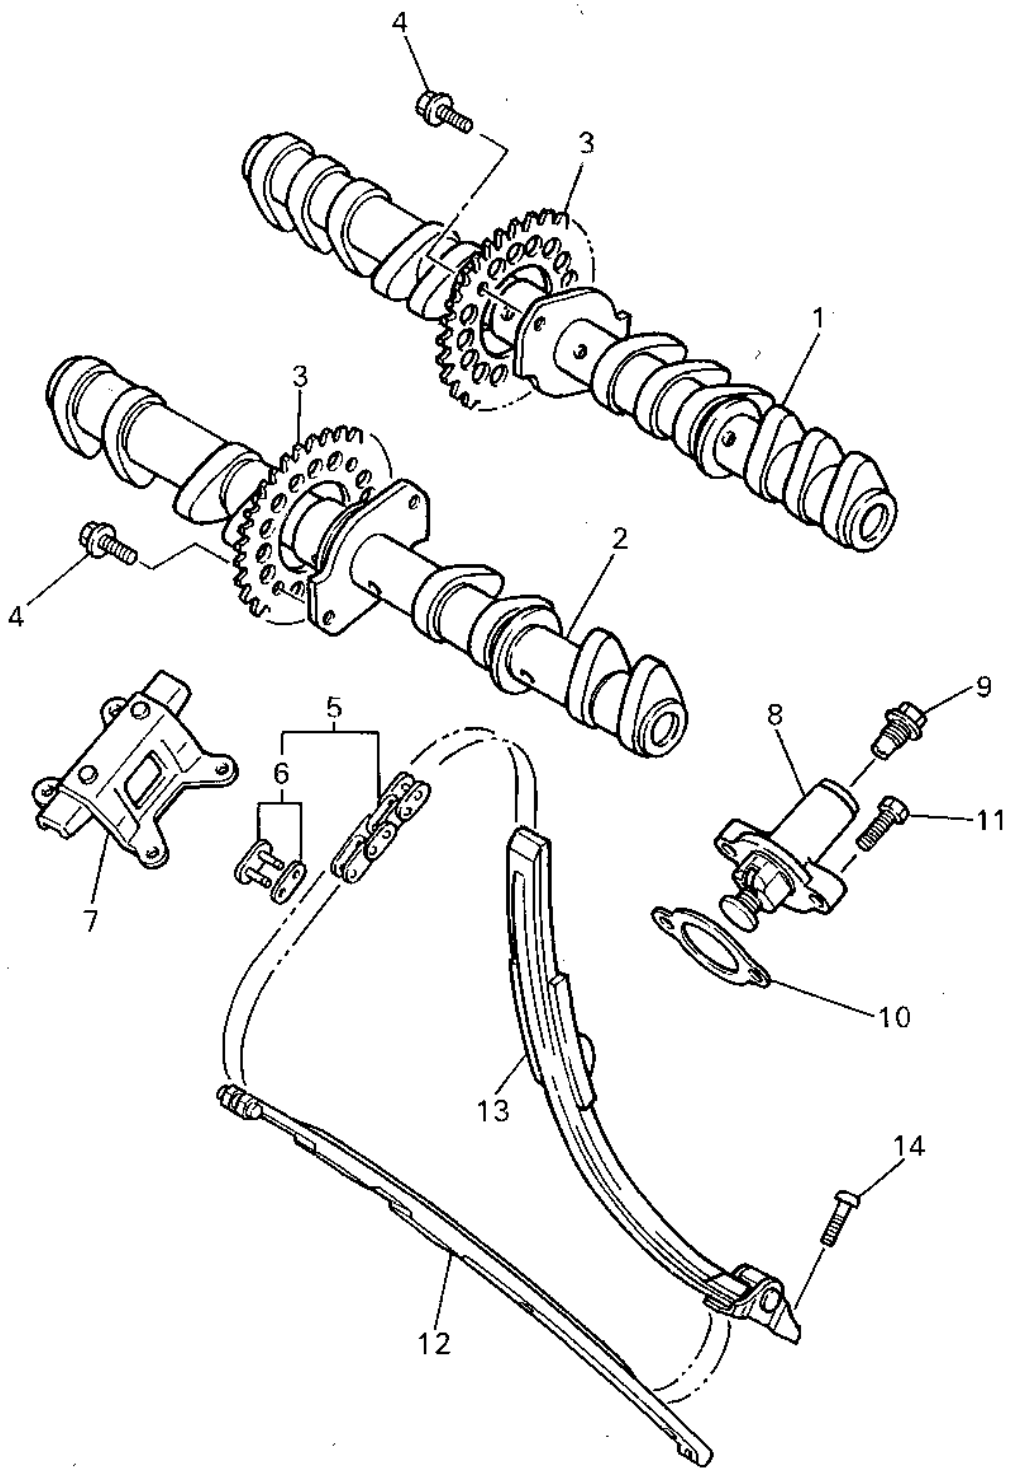


FWD

4HD300-3050

Ref. No.	Part Number	Description	Qty	Remarks
1	4HD-12171-00-00	CAMSHAFT 1	1	
2	4HD-12181-00-00	CAMSHAFT 2	1	
3	3GM-12176-00-00	SPROCKET, CAM CHAIN	2	
4	90105-07342-00	BOLT, WASHER BASED	4	
5	94580-81104-00	CHAIN (DID219FTS-104L)	1	
6	94680-81021-00	. JOINT, CHAIN	1	
7	2GH-12241-00-00	GUIDE, STOPPER 2	1	
8	4FM-12210-00-00	TENSIONER ASSEMBLY, CAM CHAIN	1	
9	90109-112F1-00	BOLT	1	
10	4FM-12213-00-00	GASKET, TENSIONER CASE	1	
11	91311-06025-00	BOLT, SOCKET HEAD	2	
12	3FV-12251-00-00	DAMPER, CHAIN 1	1	
13	4FM-12252-00-00	DAMPER, CHAIN 2	1	
14	90109-065A8-00	BOLT	2	


WATER PUMP

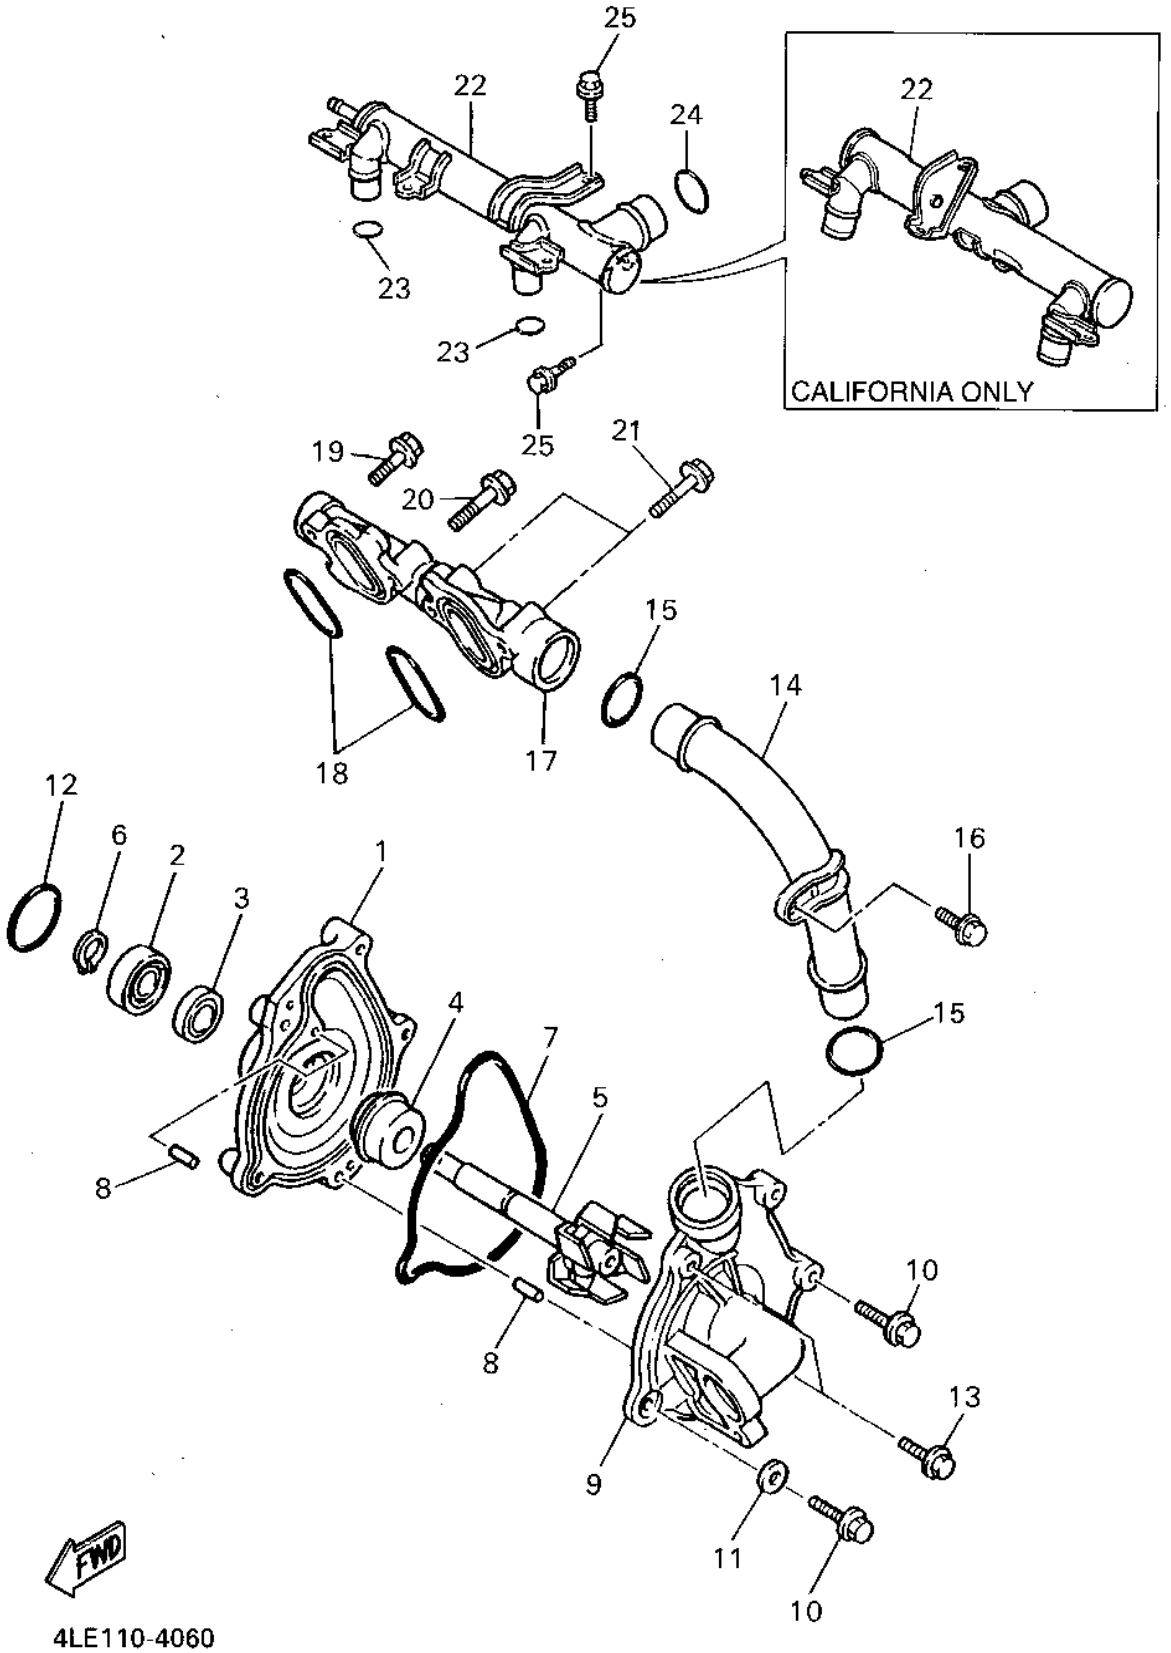

4LE110-4060

Ref. No.	Part Number	Description	Qty	Remarks
1	1UF-12421-09-00	HOUSING, WATER PUMP	1	
2	93306-00106-00	BEARING	1	
3	93101-12060-00	OIL SEAL	1	
4	11H-12438-00-00	SEAL, MECHANICAL	1	
5	1UF-12450-00-00	IMPELLER SHAFT ASSEMBLY	1	
6	99009-12400-00	CIRCLIP	1	
7	1AE-12439-00-00	O-RING	1	
8	93604-10011-00	PIN, DOWEL	2	
9	3GM-12422-00-00	COVER, HOUSING	1	
10	95023-06025-00	BOLT, FLANGE	3	
11	90430-06014-00	GASKET	1	
12	93210-33133-00	O-RING	1	
13	95021-06050-00	BOLT, FLANGE	2	
14	1AE-12481-01-00	PIPE 1	1	
15	93210-23787-00	O-RING	2	
16	95023-06012-00	BOLT, FLANGE	1	
17	3FV-12469-00-00	JOINT 1	1	
18	93210-30694-00	O-RING	2	
19	95023-06020-00	BOLT, FLANGE	1	
20	95023-06030-00	BOLT, FLANGE (95021-06030)	1	
21	95023-06040-00	BOLT, FLANGE (1YW)	2	
22	3GM-12482-00-00	PIPE 2	1	UR FOR CA
	4FN-12482-00-00	PIPE 2	1	UR
23	93210-18417-00	O-RING	2	
24	93210-23787-00	O-RING	1	
25	95023-06010-00	BOLT, FLANGE	2	

RADIATOR - HOSE

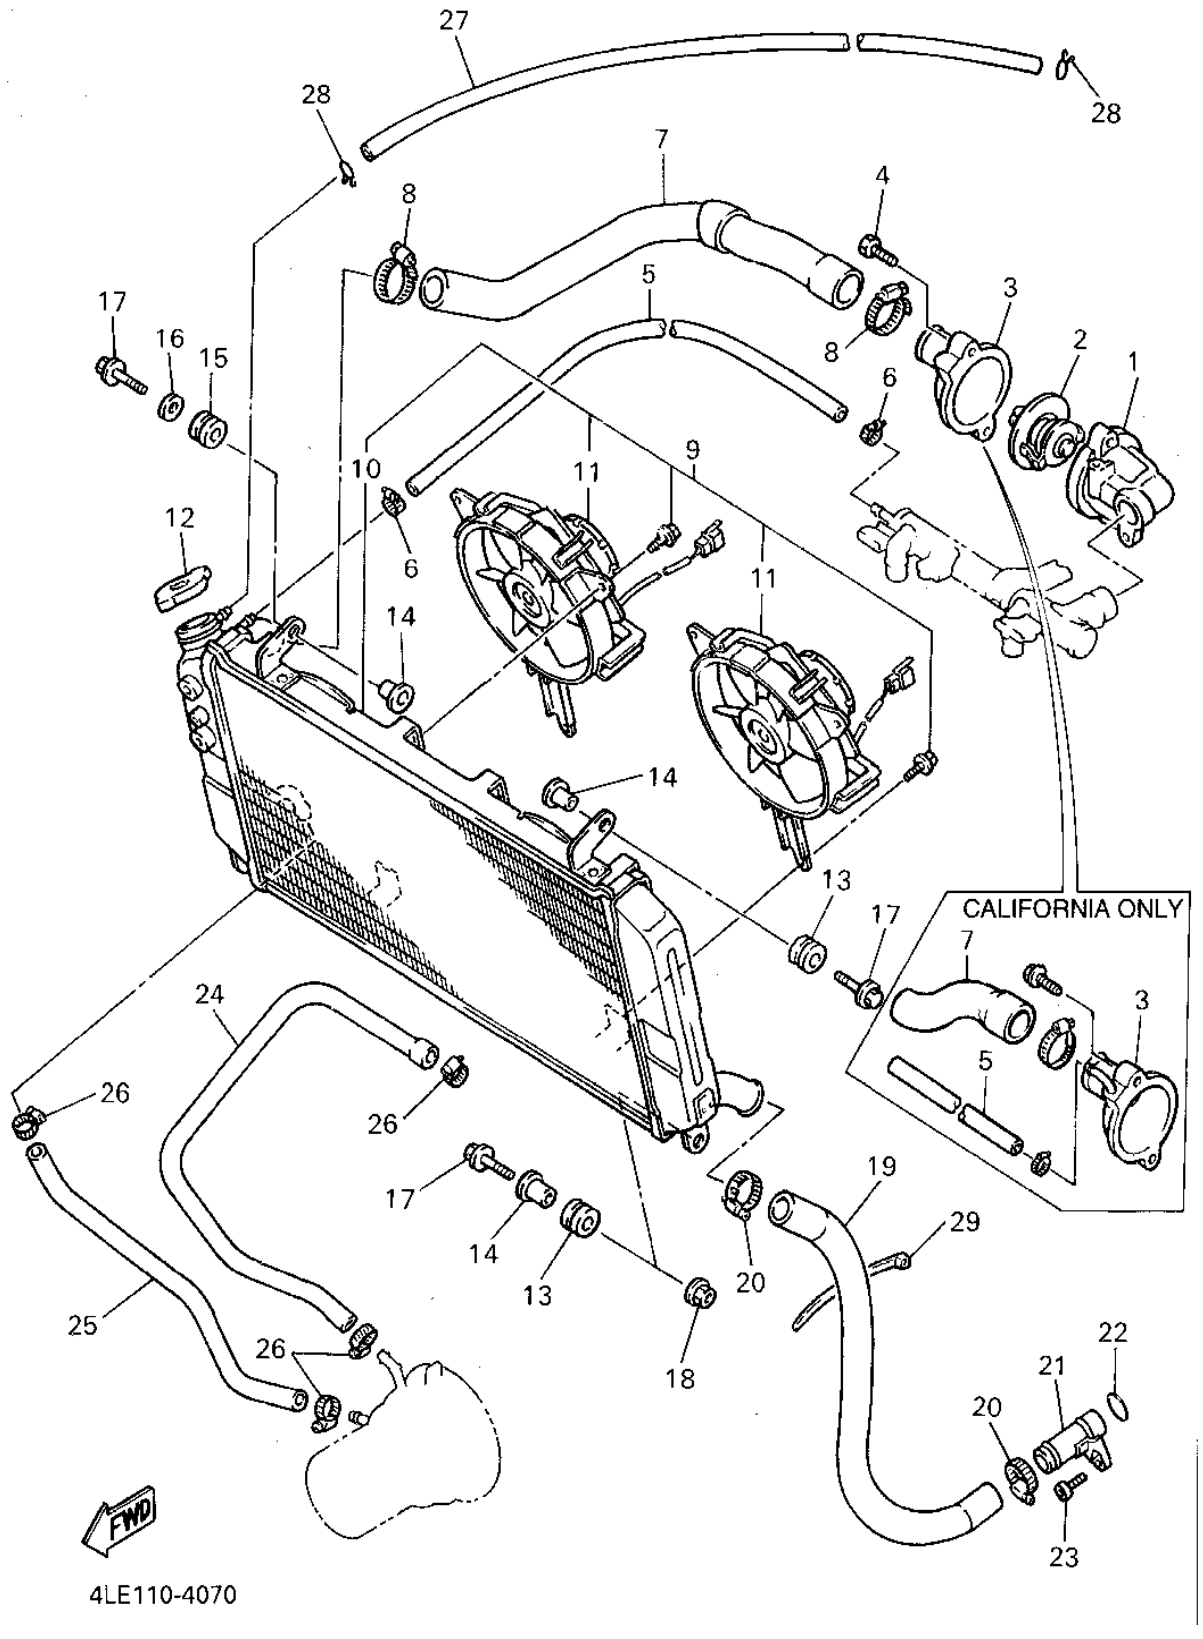


4LE110-4070

Ref. No.	Part Number	Description	Qty	Remarks
1	3GM-12417-00-00	HOUSING, THERMOSTAT	1	
2	4FM-12410-00-00	THERMOSTAT ASSEMBLY ...	1	
3	3FV-1240G-00-00	THERMOSTAT COVER ASSEMBLY	1	UR FOR CA
	3GM-12413-00-00	COVER, THERMOSTAT	1	UR
4	95023-06025-00	BOLT, FLANGE	2	
5	90445-120J1-00	HOSE	1	UR FOR CA
	90445-126H7-00	HOSE	1	UR
6	90467-11090-00	CLIP	2	
7	4FN-12576-01-00	HOSE 1	1	UR
	4LE-12576-00-00	HOSE 1	1	UR FOR CA
8	90450-38040-00	HOSE CLAMP ASSEMBLY ...	2	
9	4FM-1240A-01-00	RADIATOR ASSEMBLY (4FM-12461-00-00)	1	
10	4FM-1240A-01-00	. RADIATOR ASSEMBLY (4FM-12461-00-00)	1	
11	4FM-12405-01-00	. BLOWER ASSEMBLY	2	
12	22W-12462-00-00	CAP, RADIATOR	1	
13	90480-15363-00	GROMMET	3	
14	90387-07391-00	COLLAR	4	
15	90480-10542-00	GROMMET	1	
16	90201-063J2-00	WASHER, PLATE	1	
17	95816-06025-00	BOLT, FLANGE	4	
18	95701-06500-00	NUT, FLANGE	2	
19	4FM-12579-01-00	HOSE 4	1	
20	90450-38040-00	HOSE CLAMP ASSEMBLY ...	2	
21	2GH-12484-00-00	PIPE 4	1	
22	93210-23787-00	O-RING	1	
23	90110-06142-00	BOLT, HEXAGON SOCKET HEAD	1	

CONTINUED ON NEXT FRAME ➤


RADIATOR - HOSE

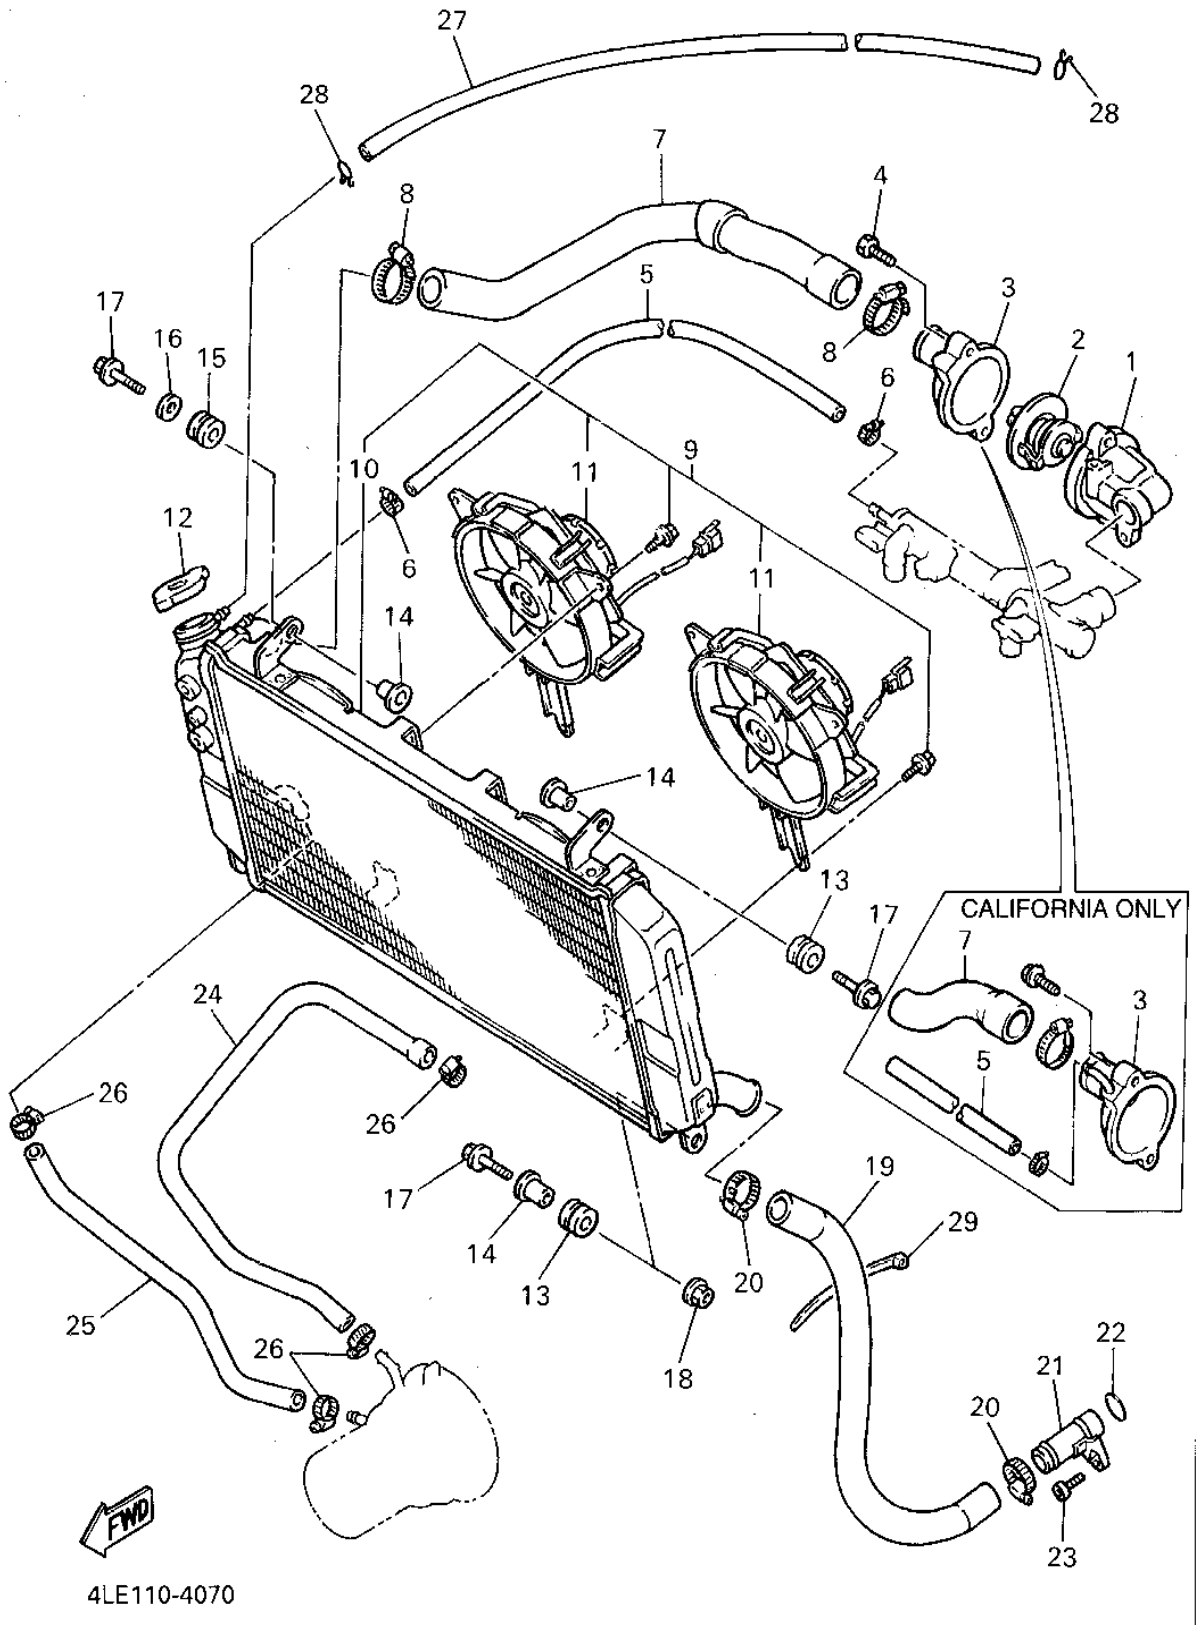

4LE110-4070

Ref. No.	Part Number	Description	Qty	Remarks
24	4FM-12588-01-00	HOSE 5	1	
25	4FM-12589-01-00	HOSE 6	1	
26	90450-22052-00	HOSE CLAMP ASSEMBLY	4	
27	90445-096F4-00	HOSE	1	
28	90467-08003-00	CLIP	2	
29	90464-13080-00	CLAMP	1	

OIL PUMP

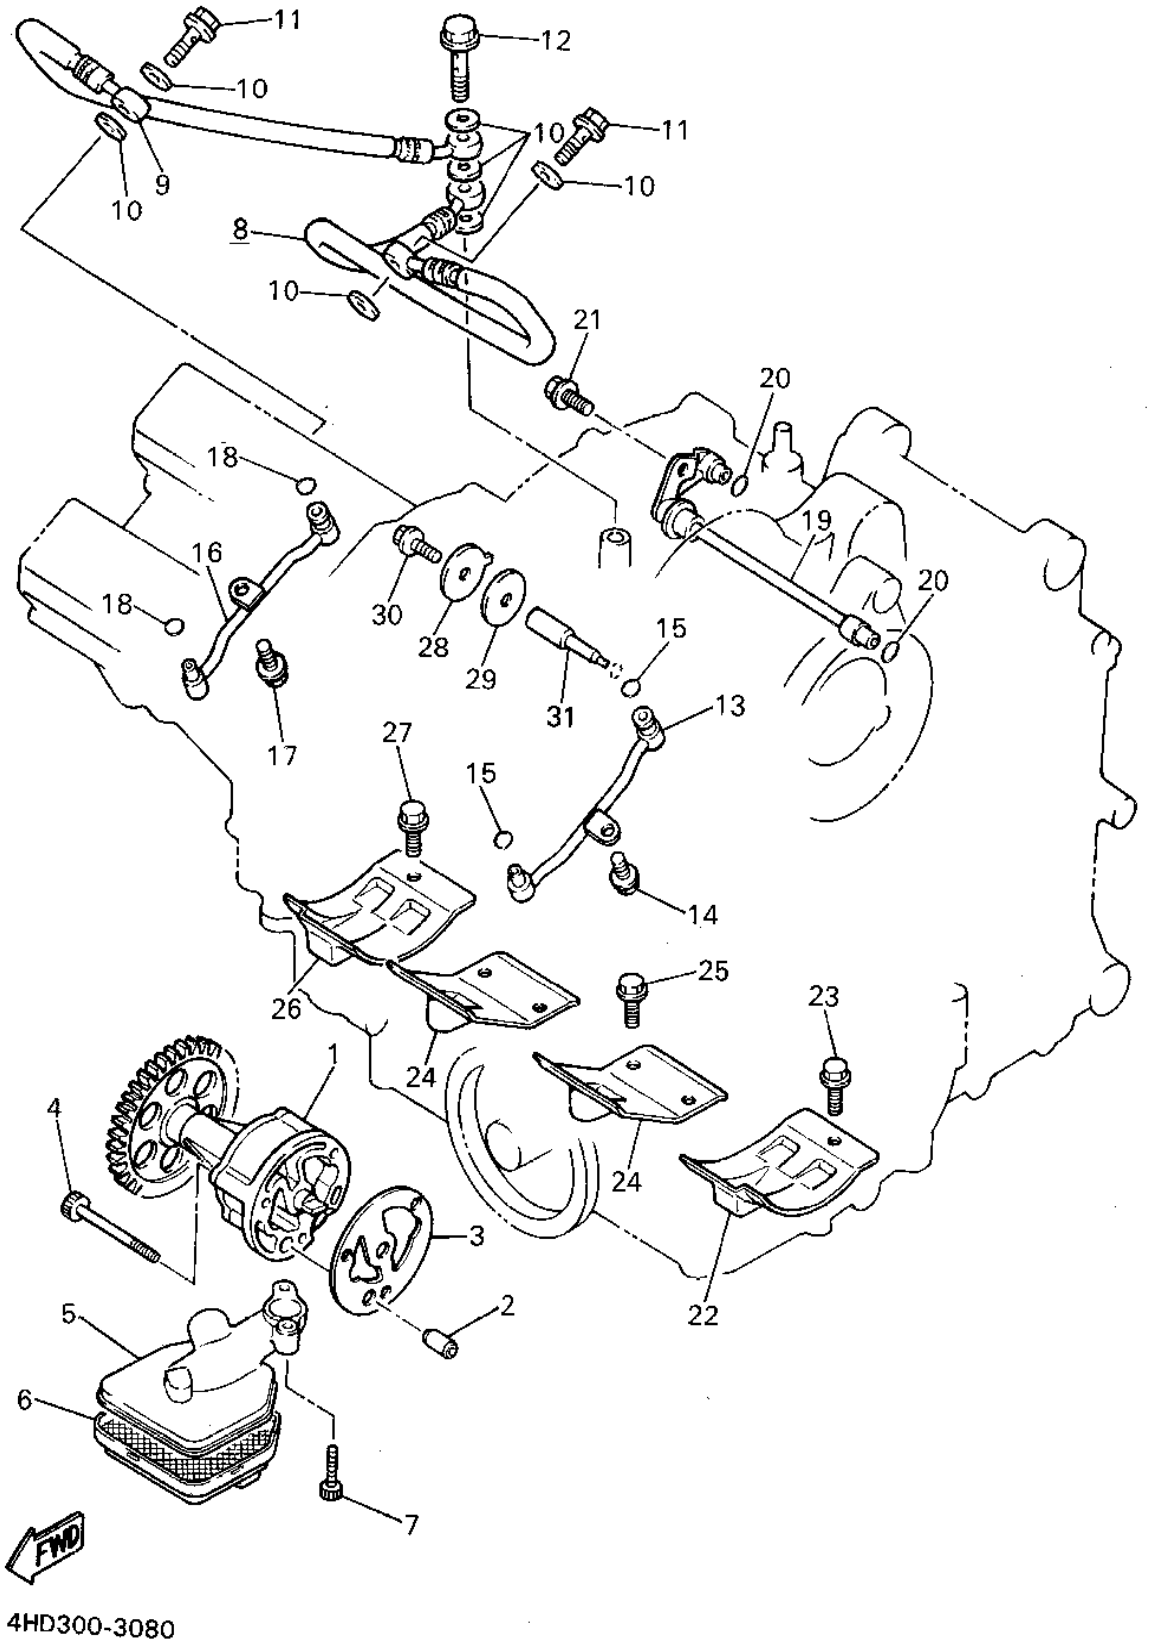


4HD300-3080

Ref. No.	Part Number	Description	Qty	Remarks
1	1AE-13300-00-00	OIL PUMP ASSEMBLY	1	
2	99510-08012-00	PIN, DOWEL	1	
3	2GH-13329-00-00	GASKET, PUMP COVER	1	
4	91316-06050-00	BOLT, SOCKET HEAD	3	
5	3GM-13412-50-00	HOUSING, STRAINER	1	
6	4FM-13411-00-00	STRAINER, OIL	1	
7	90110-06138-00	BOLT, HEX SKT HEAD	2	
8	4BH-1316F-00-00	HOSE, OIL 1	1	
9	4BH-1316G-00-00	HOSE, OIL 2	1	
10	90430-10171-00	GASKET	7	
11	90401-10096-00	BOLT, UNION	2	
12	90401-10044-00	BOLT, UNION	1	
13	3GM-13181-00-00	PIPE, DELIVERY 3	1	
14	95026-06012-00	BOLT, FLANGE	1	
15	93210-06632-00	O-RING	2	
16	3GM-13191-00-00	PIPE, DELIVERY 4	1	
17	95026-06012-00	BOLT, FLANGE	1	
18	93210-06632-00	O-RING	2	
19	1AE-1316E-00-00	PIPE, DELEVERY 5	1	
20	93210-07135-00	O-RING	2	
21	95026-06012-00	BOLT, FLANGE	1	
22	2GH-15123-00-00	PLATE, BUFFLE 1	1	
23	95026-06012-00	BOLT, FLANGE	2	
24	1AE-15124-00-00	PLATE, BUFFLE 2	2	
25	95026-06012-00	BOLT, FLANGE	6	
26	2GH-15133-00-00	PLATE, BUFFLE 3	1	
27	95026-06012-00	BOLT, FLANGE	2	
28	90201-061M7-00	WASHER, PLATE	1	
29	4FM-13475-00-00	GASKET	1	

CONTINUED ON NEXT FRAME ➤


OIL PUMP

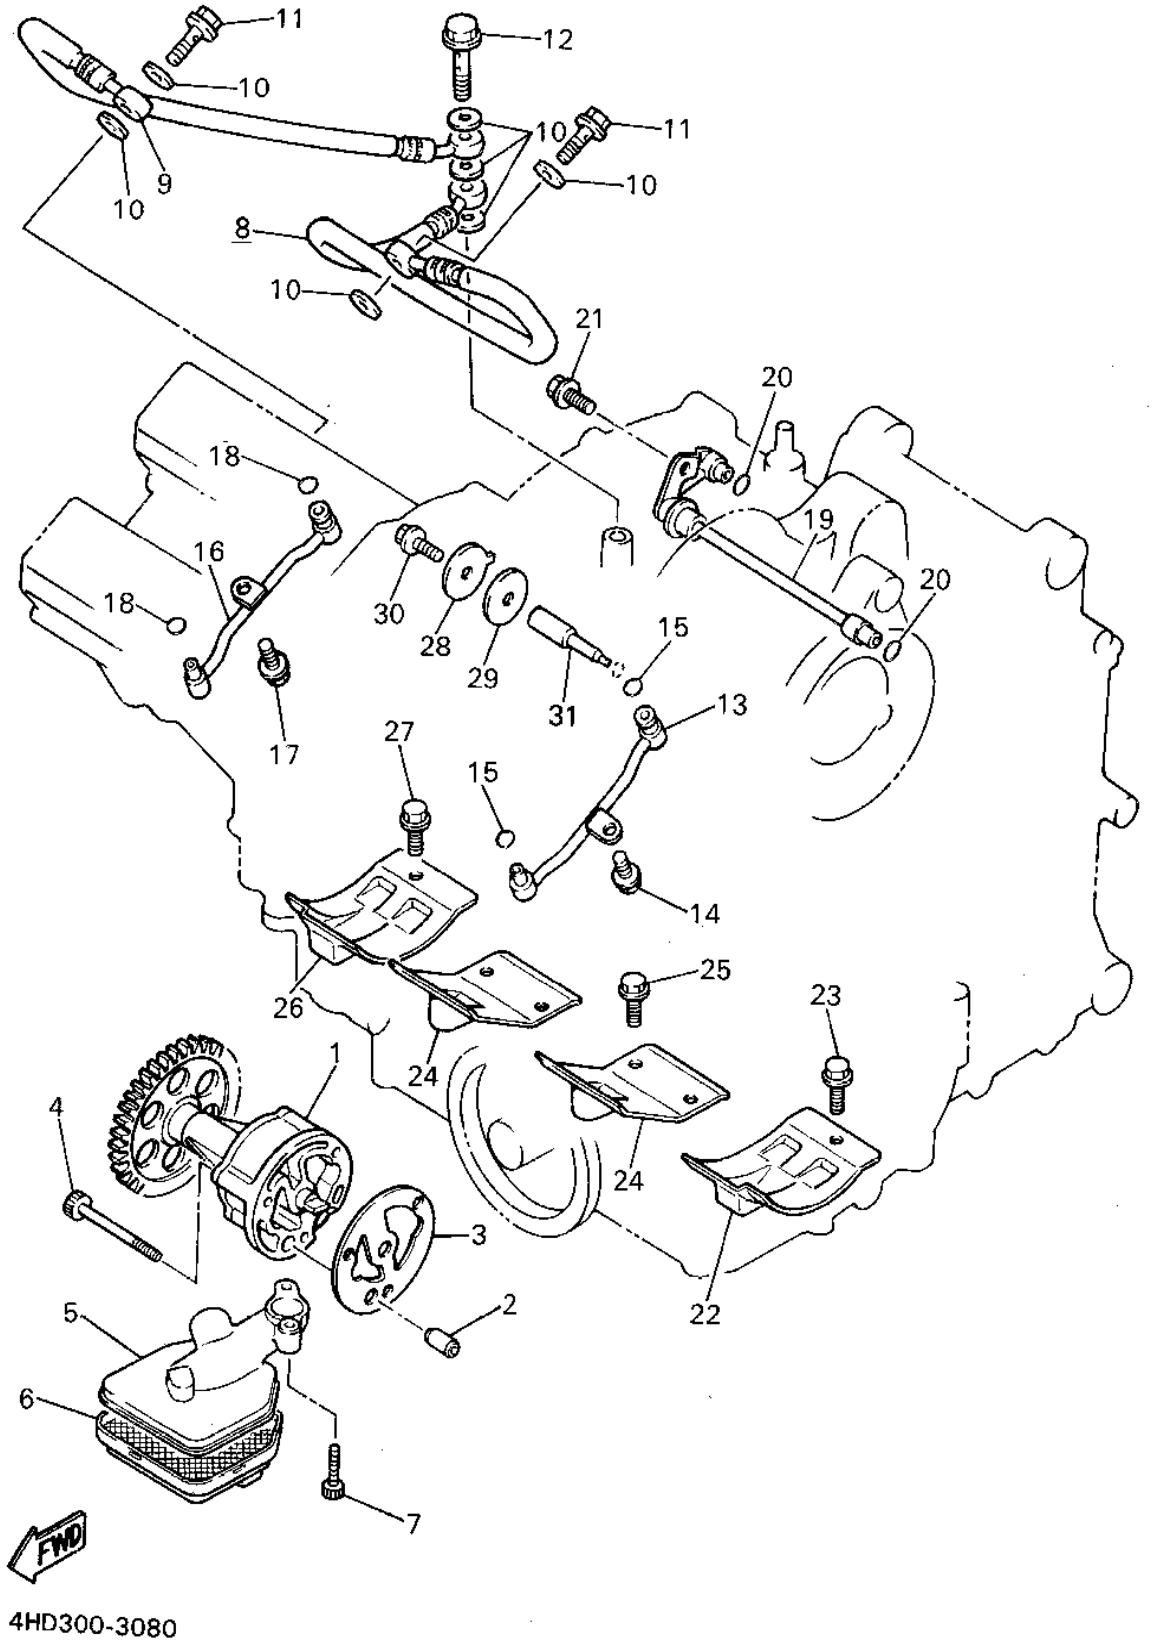

4HD300-3080

Ref. No.	Part Number	Description	Qty	Remarks
30	95811-06016-00	BOLT, FLANGE (95822-06016) .	1	
31	3GM-13454-00-00	NOZZLE	1	


OIL CLEANER

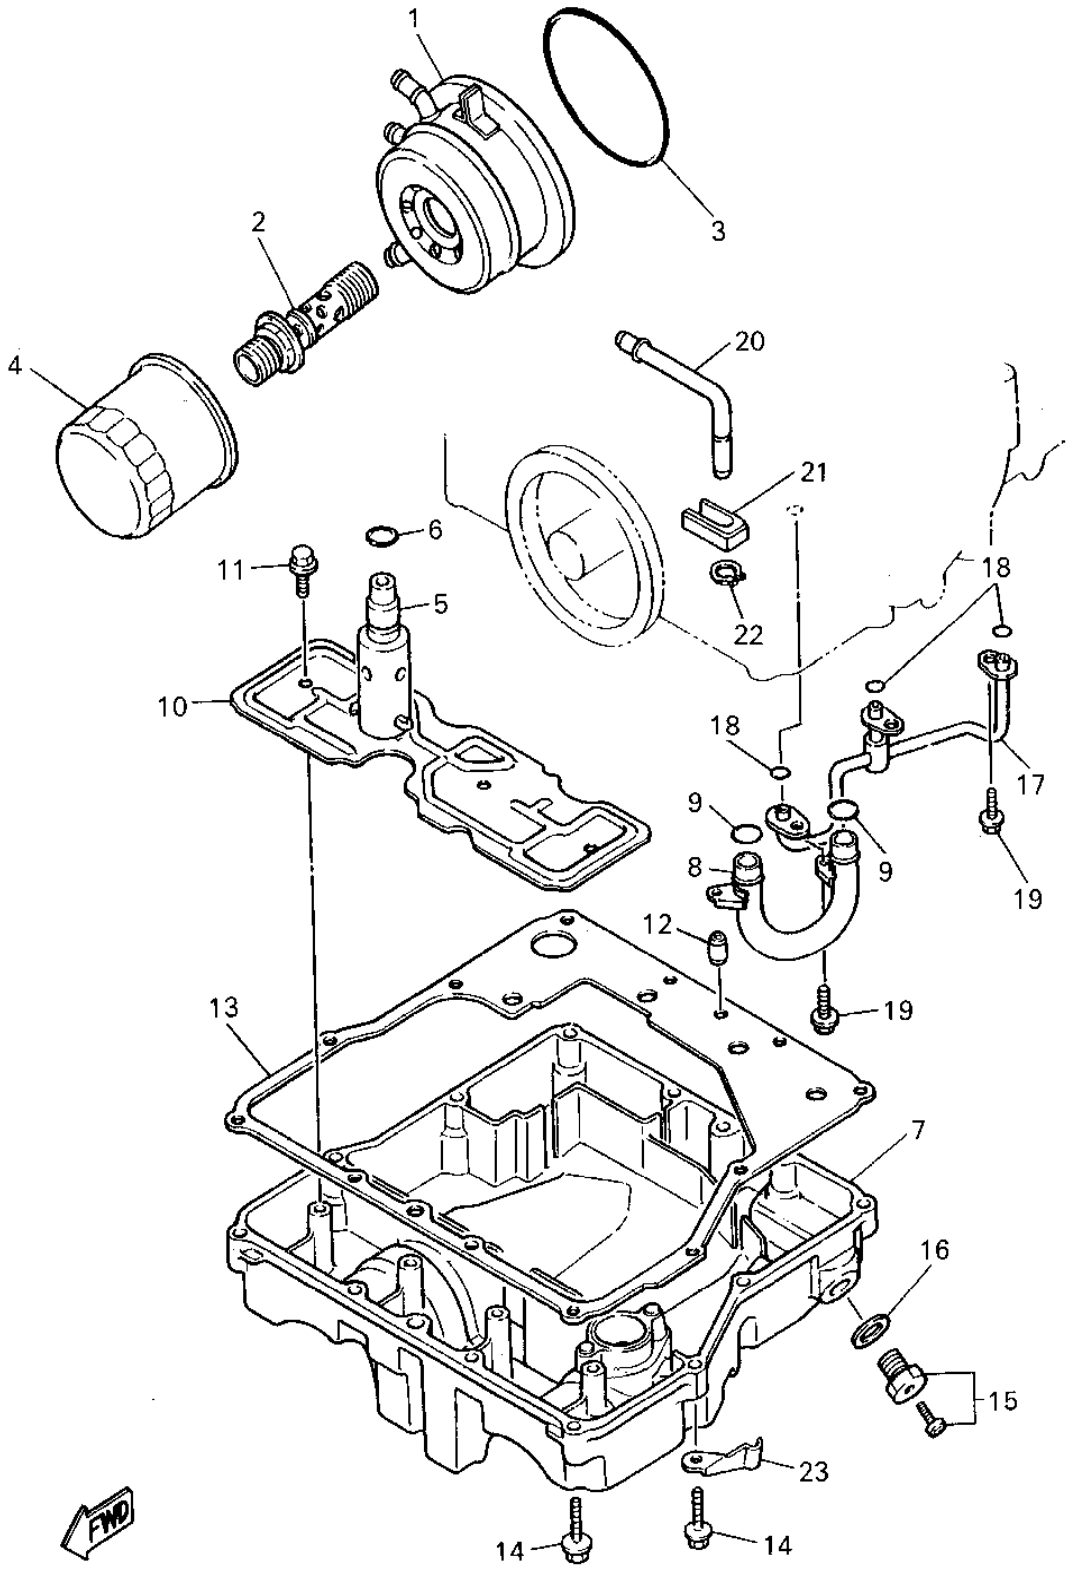

4LE110-4090

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-13470-00-00	OIL COOLER ASSEMBLY	1	
2	90401-20161-00	BOLT, UNION	1	
3	93210-87723-00	O-RING	1	
4	3FV-13440-00-00	ELEMENT ASSEMBLY, OIL CLEANER	1	
5	3KS-13490-00-00	RELIEF VALVE ASSEMBLY	1	
6	93210-15566-00	O-RING	1	
7	4FM-13417-00-00	COVER, STRAINER	1	
8	3FV-13416-01-00	PIPE, OIL 1	1	
9	93210-14579-00	O-RING	2	
10	3GM-13337-00-00	PLATE, BAFFLE LOWER	1	
11	95026-06010-00	BOLT, FLANGE	4	
12	99510-08016-00	PIN, DOWEL	2	
13	4FM-13414-00-00	GASKET, STRAINER COVER	1	
14	95023-06030-00	BOLT, FLANGE (95021-06030)	12	
15	3VD-13455-00-00	PLUG	1	
16	214-11198-01-00	GASKET	1	
17	3GM-13161-01-00	PIPE, DELIVERY 1	1	
18	93210-06714-00	O-RING	3	
19	95026-06012-00	BOLT, FLANGE	3	
20	3GM-15373-00-00	PIPE, BREATHER	1	
21	3GM-13174-00-00	HOLDER, OIL PIPE	1	
22	99009-10400-00	CIRCLIP	1	
23	90465-08076-00	CLAMP	1	

INTAKE

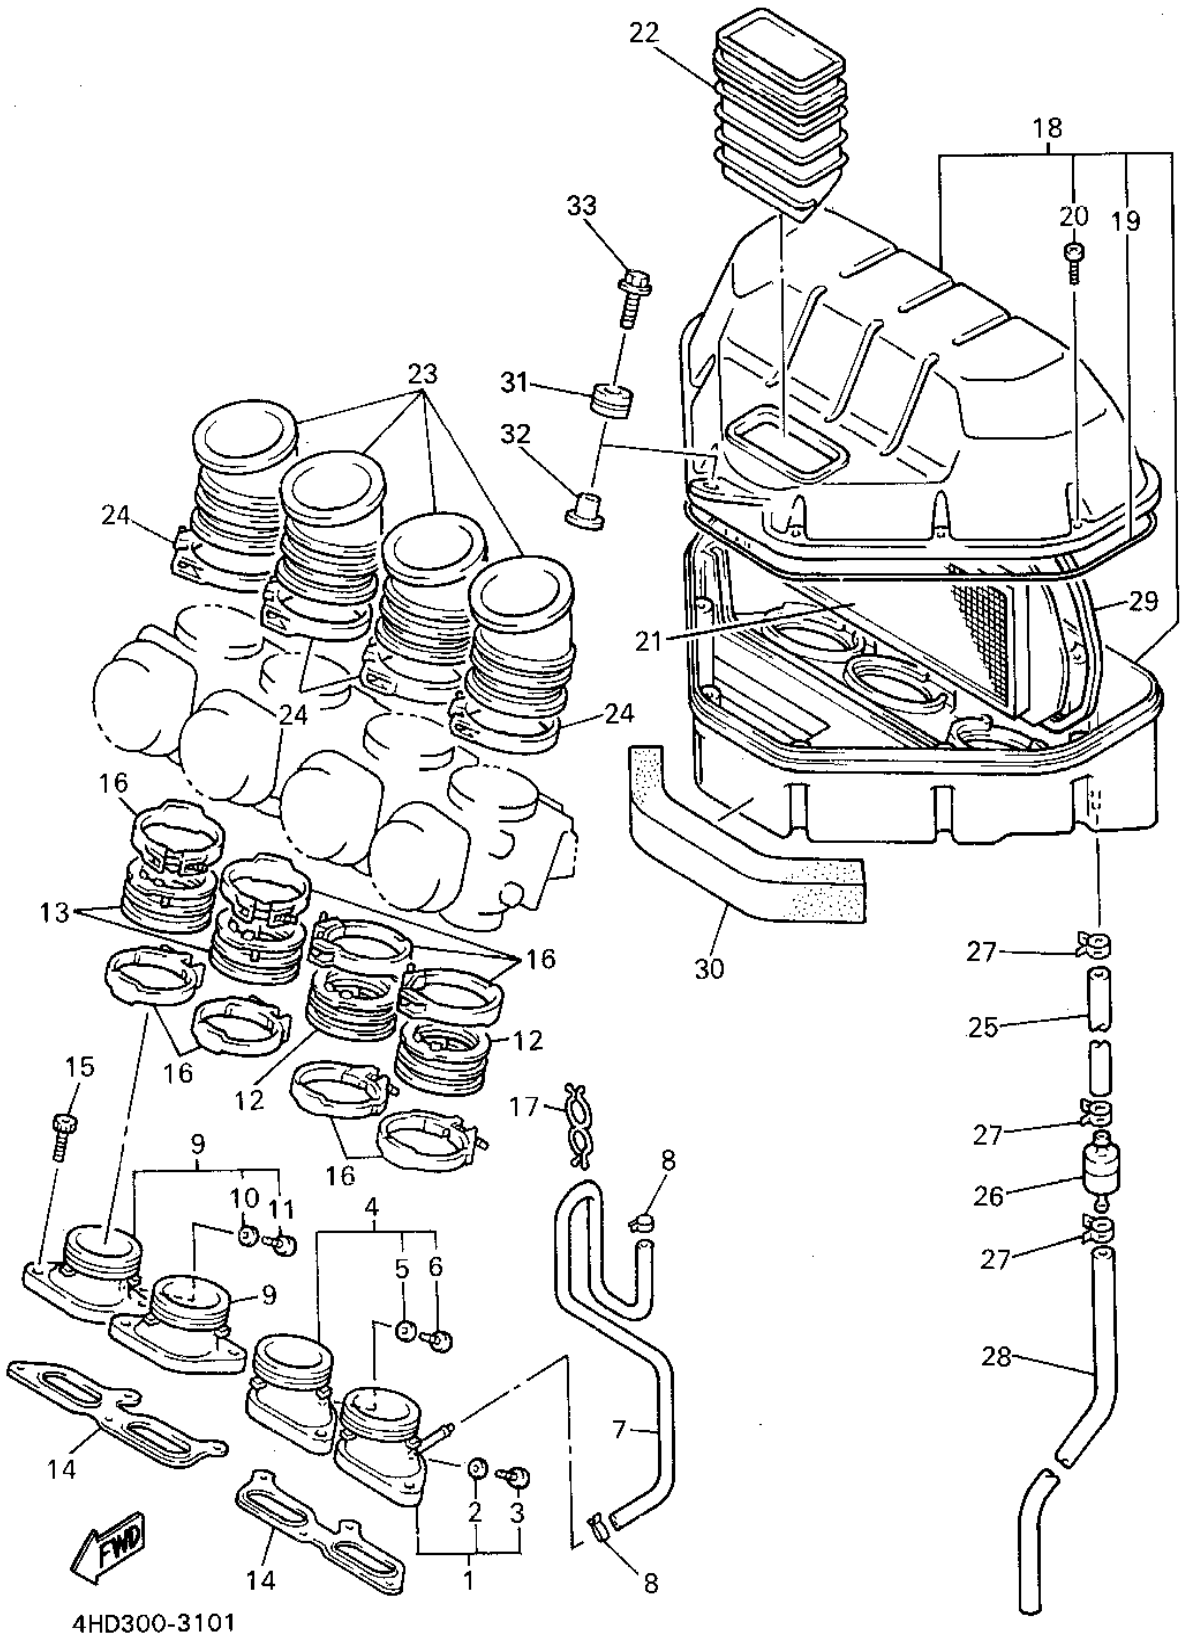


4HD300-3101

Ref. No.	Part Number	Description	Qty	Remarks
1	4FN-13586-00-00	JOINT, CARBURETOR 1	1	
2	90430-06014-00	. GASKET	1	
3	91312-06012-00	. BOLT	1	
4	4FM-13586-00-00	JOINT, CARBURETOR 1	1	
5	90430-06014-00	. GASKET	1	
6	91312-06012-00	. BOLT	1	
7	3FV-2416A-00-00	HOSE	1	
8	90467-08092-00	CLIP	2	
9	4FM-13596-00-00	JOINT, CARBURETOR 2	2	
10	90430-06014-00	. GASKET	1	
11	91312-06012-00	. BOLT	1	
12	3GM-13597-00-00	JOINT, CARBURETOR 3	2	
13	3GM-13598-00-00	JOINT, CARBURETOR 4	2	
14	4FM-13556-01-00	GASKET, MANIFOLD	2	
15	91316-06020-00	BOLT, SOCKET HEAD	8	
16	90450-57034-00	HOSE CLAMP ASSEMBLY	8	
17	90464-17184-00	CLAMP	1	
18	4FM-14401-00-00	AIR CLEANER CASE ASSEMBLY	1	
19	4FM-14452-00-00	. SEAL	1	
20	97780-50125-00	. SCREW, TAPPING	8	
21	4FM-14451-00-00	ELEMENT, AIR CLEANER	1	
22	4FM-14437-00-00	DUCT	1	
23	4FM-14453-00-00	JOINT, AIR CLEANER 1	4	
24	90450-67066-00	HOSE CLAMP ASSEMBLY	4	
25	1HX-1443E-00-00	PIPE, DRAIN	1	
26	4X7-2149Y-00-00	FILTER ASSEMBLY	1	
27	90467-11106-00	CLIP	3	
28	90445-116H6-00	HOSE	1	


CONTINUED ON NEXT FRAME ➤

INTAKE

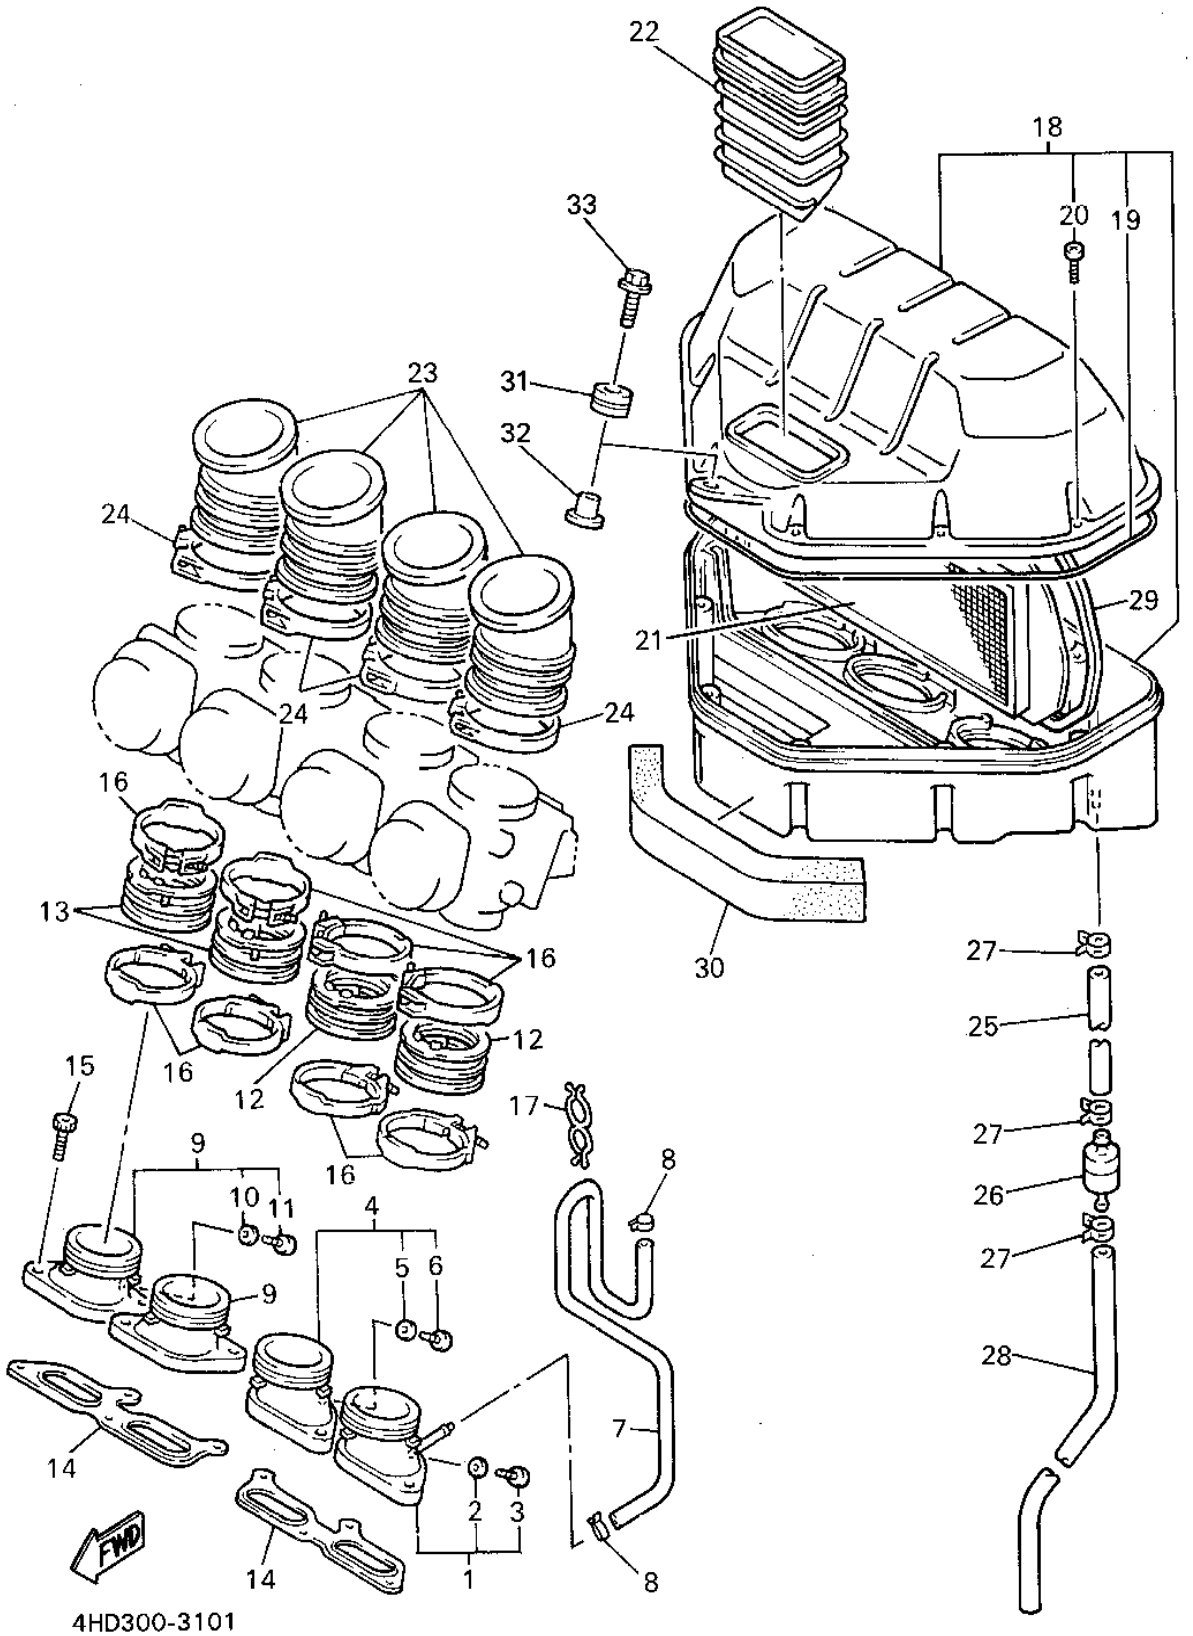

Ref. No.	Part Number	Description	Qty	Remarks
29	4FM-14462-00-00	SEAL	1	
30	4FN-14467-00-00	SEAL	1	
31	90480-12314-00	GROMMET	1	
32	90387-065J6-00	COLLAR	1	
33	95811-06020-00	BOLT, FLANGE	1	

CARBURETOR

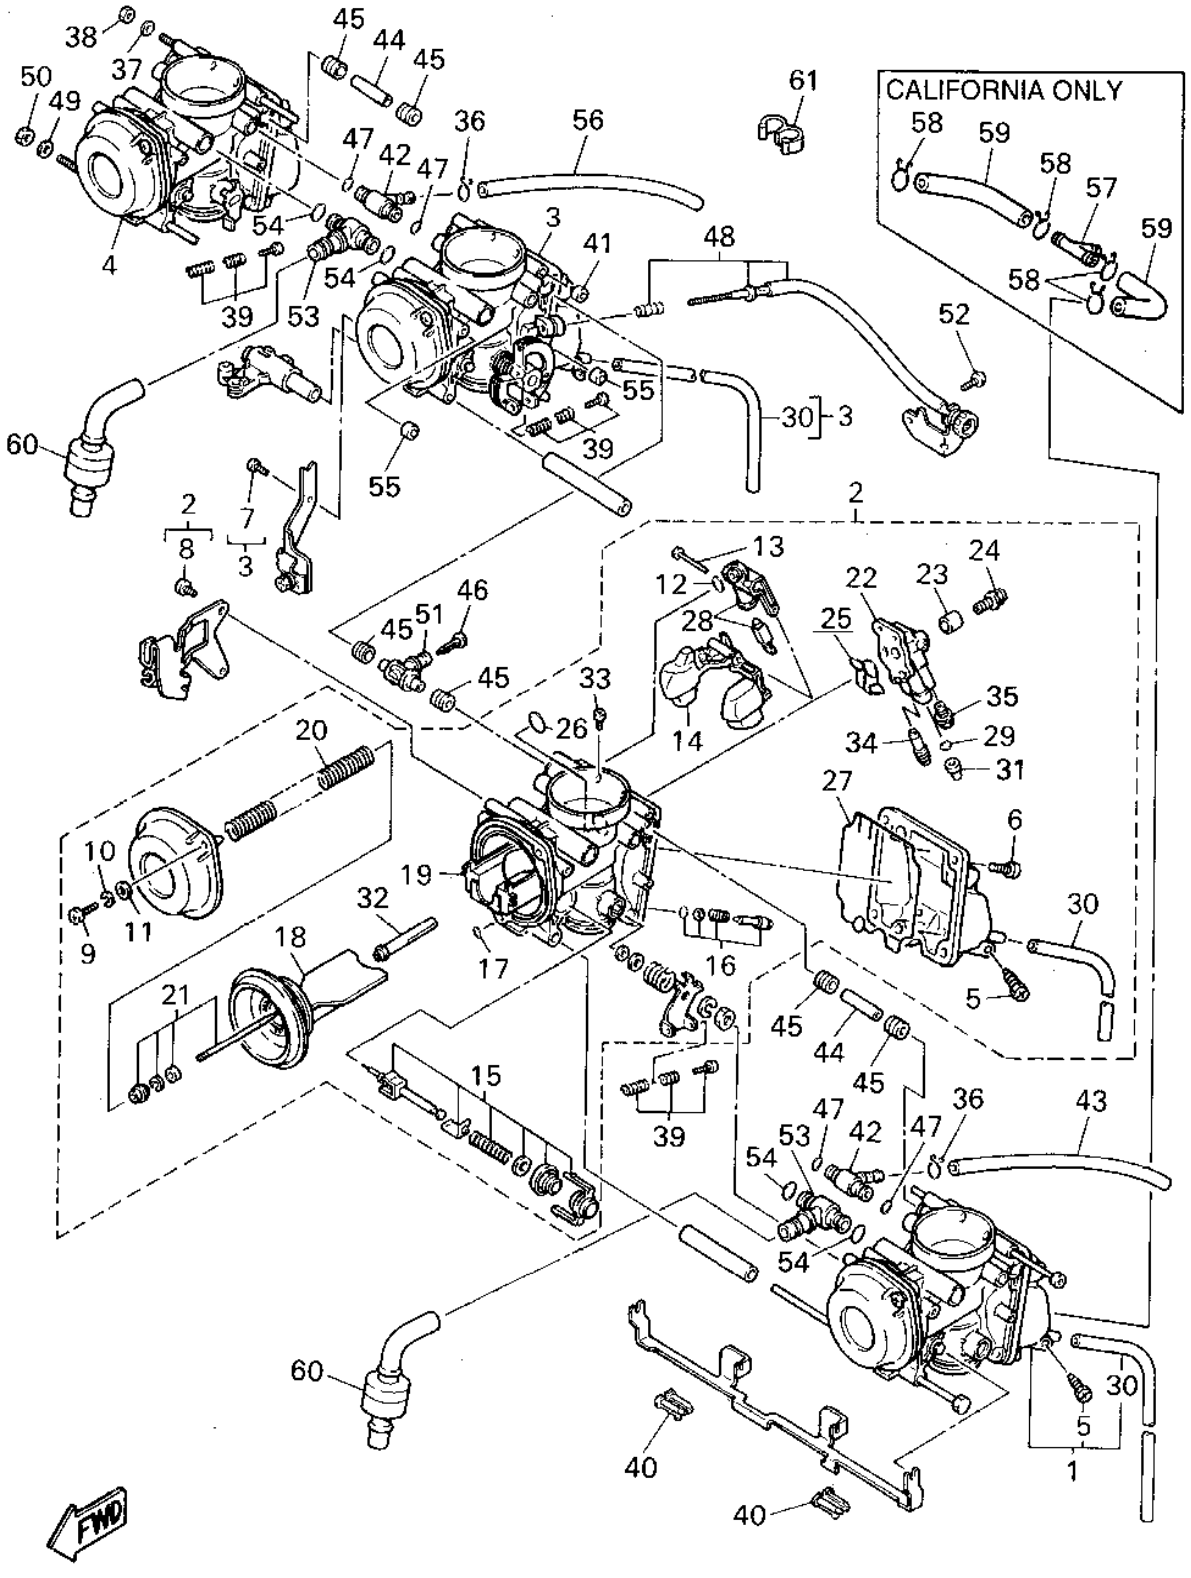


4LE110-4110

Ref. No.	Part Number	Description	Qty	Remarks
1	4LE-14901-00-00	CARBURETOR ASSEMBLY 1 .	1	UR
	4LE-14901-10-00	CARBURETOR ASSEMBLY 1 .	1	UR FOR CA
2	4LE-14902-00-00	CARBURETOR ASSEMBLY 2 .	1	UR
	4LE-14902-10-00	CARBURETOR ASSEMBLY 2 .	1	UR FOR CA
3	4LE-14903-00-00	CARBURETOR ASSEMBLY 3 .	1	UR
	4LE-14903-10-00	CARBURETOR ASSEMBLY 3 .	1	UR FOR CA
4	4LE-14904-00-00	CARBURETOR ASSEMBLY 4 .	1	UR
	4LE-14904-10-00	CARBURETOR ASSEMBLY 4 .	1	UR FOR CA
5	3FV-14191-00-00	. PLUG, DRAIN	1	
6	91316-05012-00	. BOLT	4	
7	98580-04008-00	. SCREW, PAN HEAD	1	
8	98580-04008-00	. SCREW, PAN HEAD	2	
9	98586-05016-00	. SCREW, PAN HEAD	2	
10	92906-05100-00	. WASHER, SPRING	2	
11	92906-05600-00	. WASHER, PLATE	2	
12	3EN-14147-00-00	. O-RING	1	
13	53L-14186-00-00	. PIN, FLOAT	1	
14	3GM-14985-00-00	. FLOAT	1	
15	3EN-1410A-01-00	. STARTER SET	1	
16	12R-14105-00-00	. PILOT SCREW SET	1	
17	3FV-14147-00-00	. O-RING	1	
18	3GM-14940-00-00	. DIAPHRAGM ASSEMBLY . . .	1	
19	3GM-1411E-00-00	. BLOCK, JET	1	
20	3LD-14933-00-00	. SPRING, DIAPHRAGM	1	
21	4LE-1490J-00-00	. NEEDLE SET	1	
22	4HD-1411A-00-00	. BLOCK JET ASSEMBLY	1	
23	3GM-14153-00-00	. WASHER, MAIN JET	1	
24	4HD-14565-00-00	. SCREW	1	
25	3LF-14147-00-00	. O-RING	1	

CONTINUED ON NEXT FRAME ➤

CARBURETOR

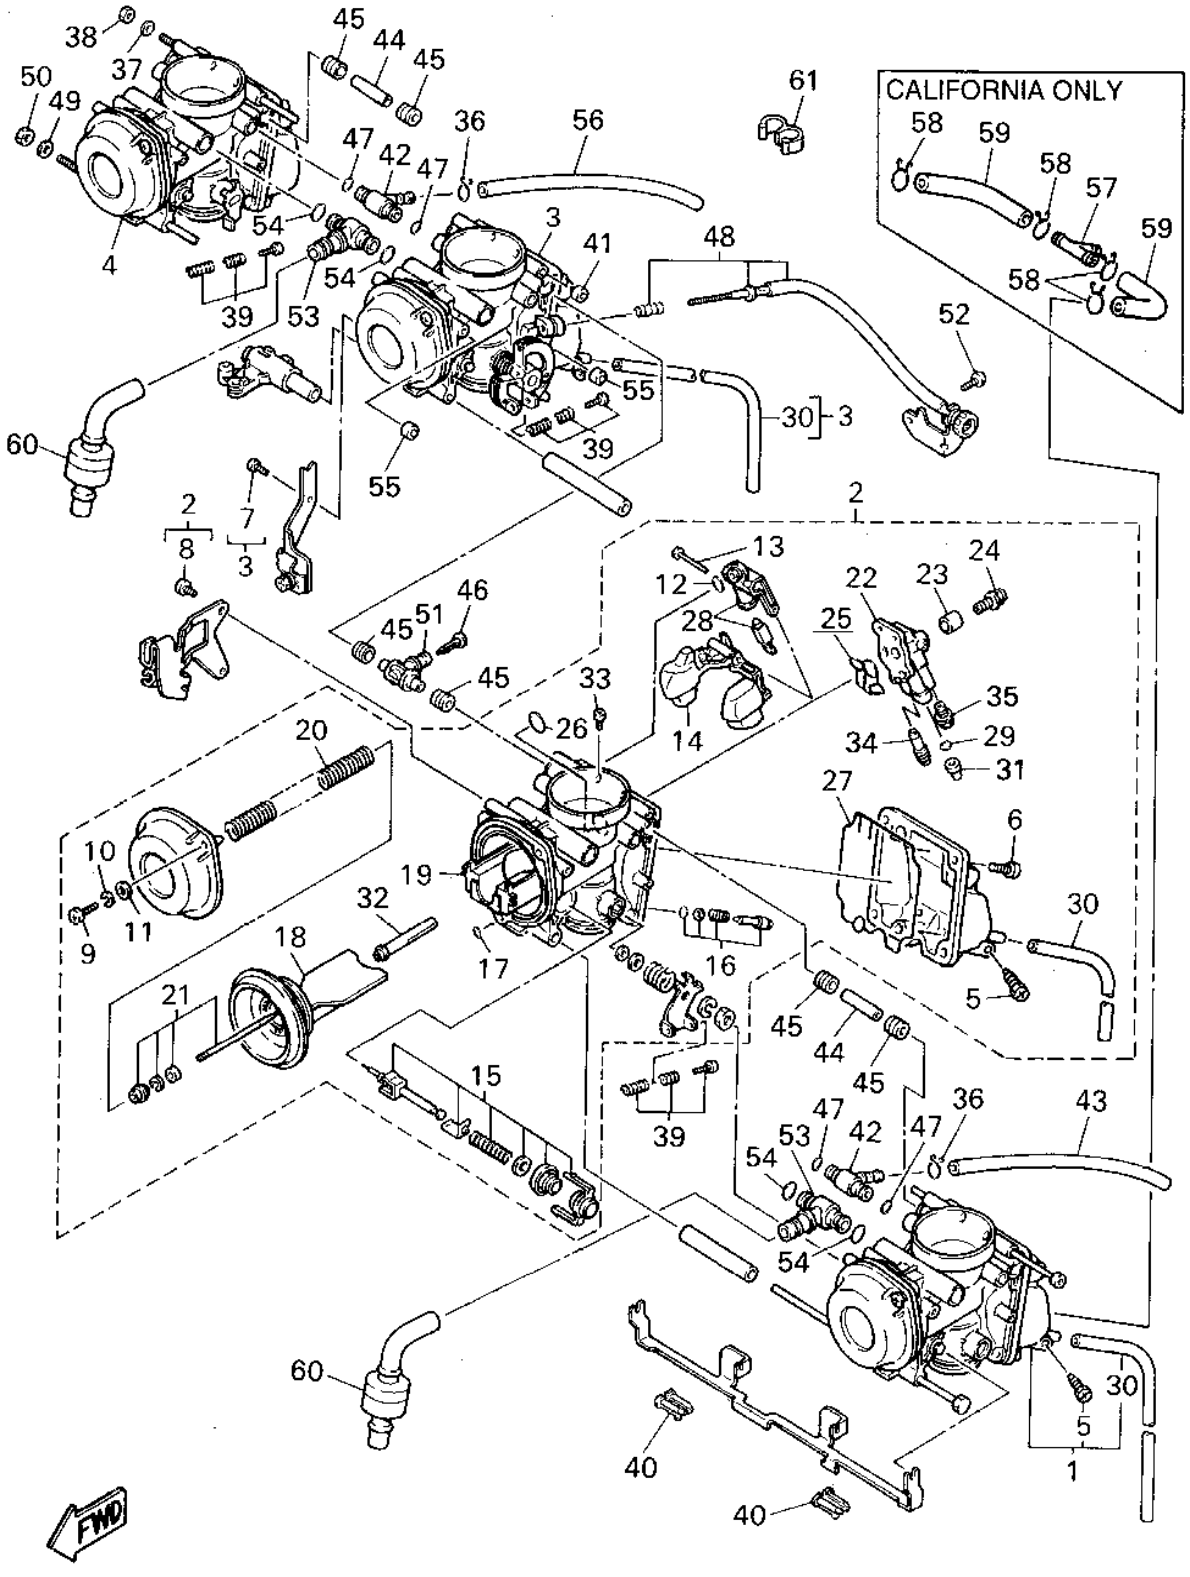


4LE110-4110

Ref. No.	Part Number	Description	Qty	Remarks
26	1AE-14147-00-00	. O-RING	1	
27	3GM-14997-00-00	. SEAL	1	
28	3GM-14107-10-00	. NEEDLE VALVE SET	1	
29	3LD-14147-00-00	. O-RING	1	
30	3LK-14987-00-00	. HOSE	1	
31	3LD-1414A-75-00	. JET, MAIN (#122.5)	1	
32	3GM-14141-08-00	. NOZZLE, MAIN	1	
33	830-1414A-75-00	. JET, MAIN (#122.5)	1	
34	4HR-14142-35-00	. JET, PILOT (# 35)	1	
35	620-1423A-62-00	. JET, MAIN (# 57.5)	1	
36	8U9-14139-00-00	CLIP, PIPE	2	
37	92901-05600-00	WASHER, PLATE	1	
38	95380-05600-00	NUT	1	
39	3EN-1490K-00-00	STOP SCREW SET	3	
40	3EN-14261-00-00	HOLDER	2	
41	3GM-14918-00-00	RING	1	
42	17A-14251-00-00	NIPPLE	2	
43	3FV-14197-00-00	PIPE	1	UR FOR CA
	3GM-14197-00-00	PIPE	1	UR
44	3GM-14988-00-00	PIPE, STARTER CONNECTING	2	
45	3EN-14997-00-00	SEAL	6	
46	1KT-14994-00-00	NET, FILTER	1	
47	822-14147-00-00	O-RING	4	
48	3GM-14103-00-00	THROTTLE SCREW SET	1	
49	92990-06600-00	WASHER, PLATE	1	
50	95601-06200-00	NUT, U FLANGE	1	
51	3EN-14988-00-00	PIPE, STARTER CONNECTING	1	
52	98580-05008-00	SCREW, PAN HEAD (98501-05008-00)	1	

CONTINUED ON NEXT FRAME ➤


CARBURETOR

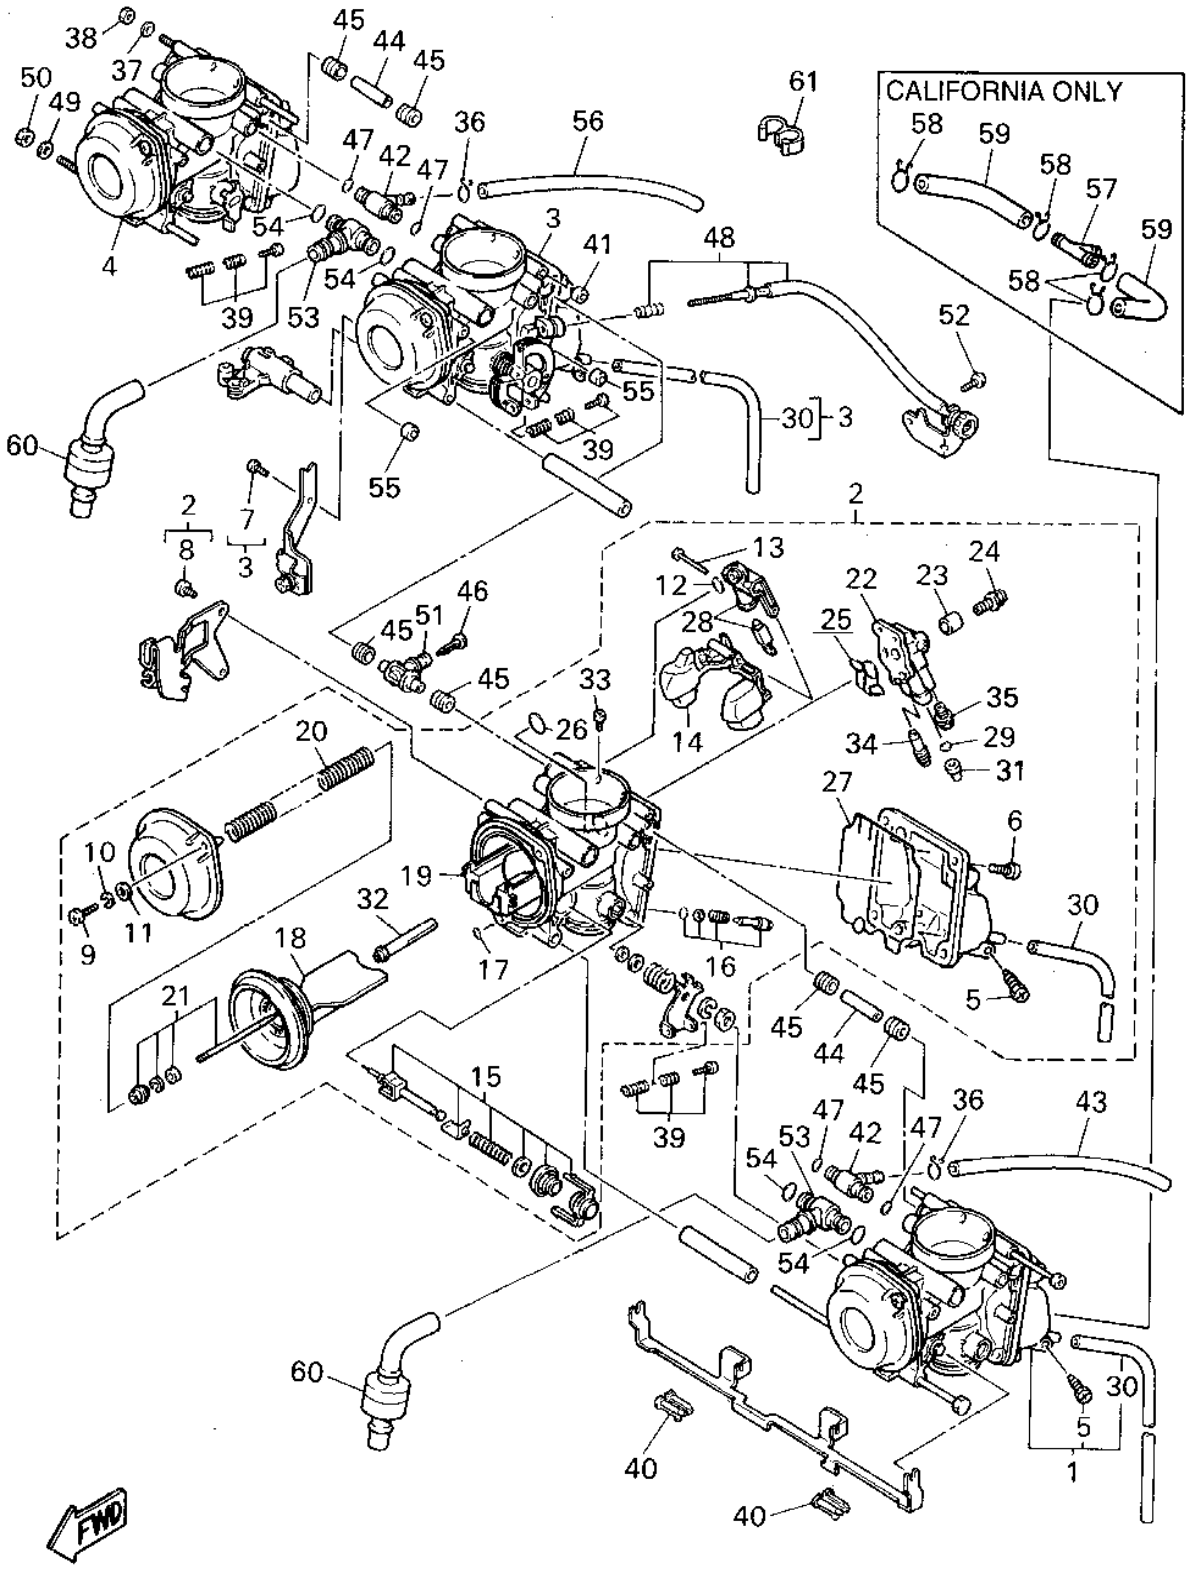

4LE110-4110

Ref. No.	Part Number	Description	Qty	Remarks
53	3GM-14251-00-00	NIPPLE	2	
54	3LK-14147-00-00	O-RING	4	
55	3GM-14992-00-00	ROD	2	
56	2LE-14197-00-00	PIPE	1	
57	3H3-24376-00-00	PIPE, JOINT 1	1	CA ONLY
58	4LE-14137-00-00	CLIP	4	CA ONLY
59	14X-14294-00-00	HOSE	2	CA ONLY
60	3GM-14197-00-00	PIPE	2	
61	90464-10075-00	CLAMP	1	UR FOR CA
	90464-10075-00	CLAMP	2	UR


EXHAUST

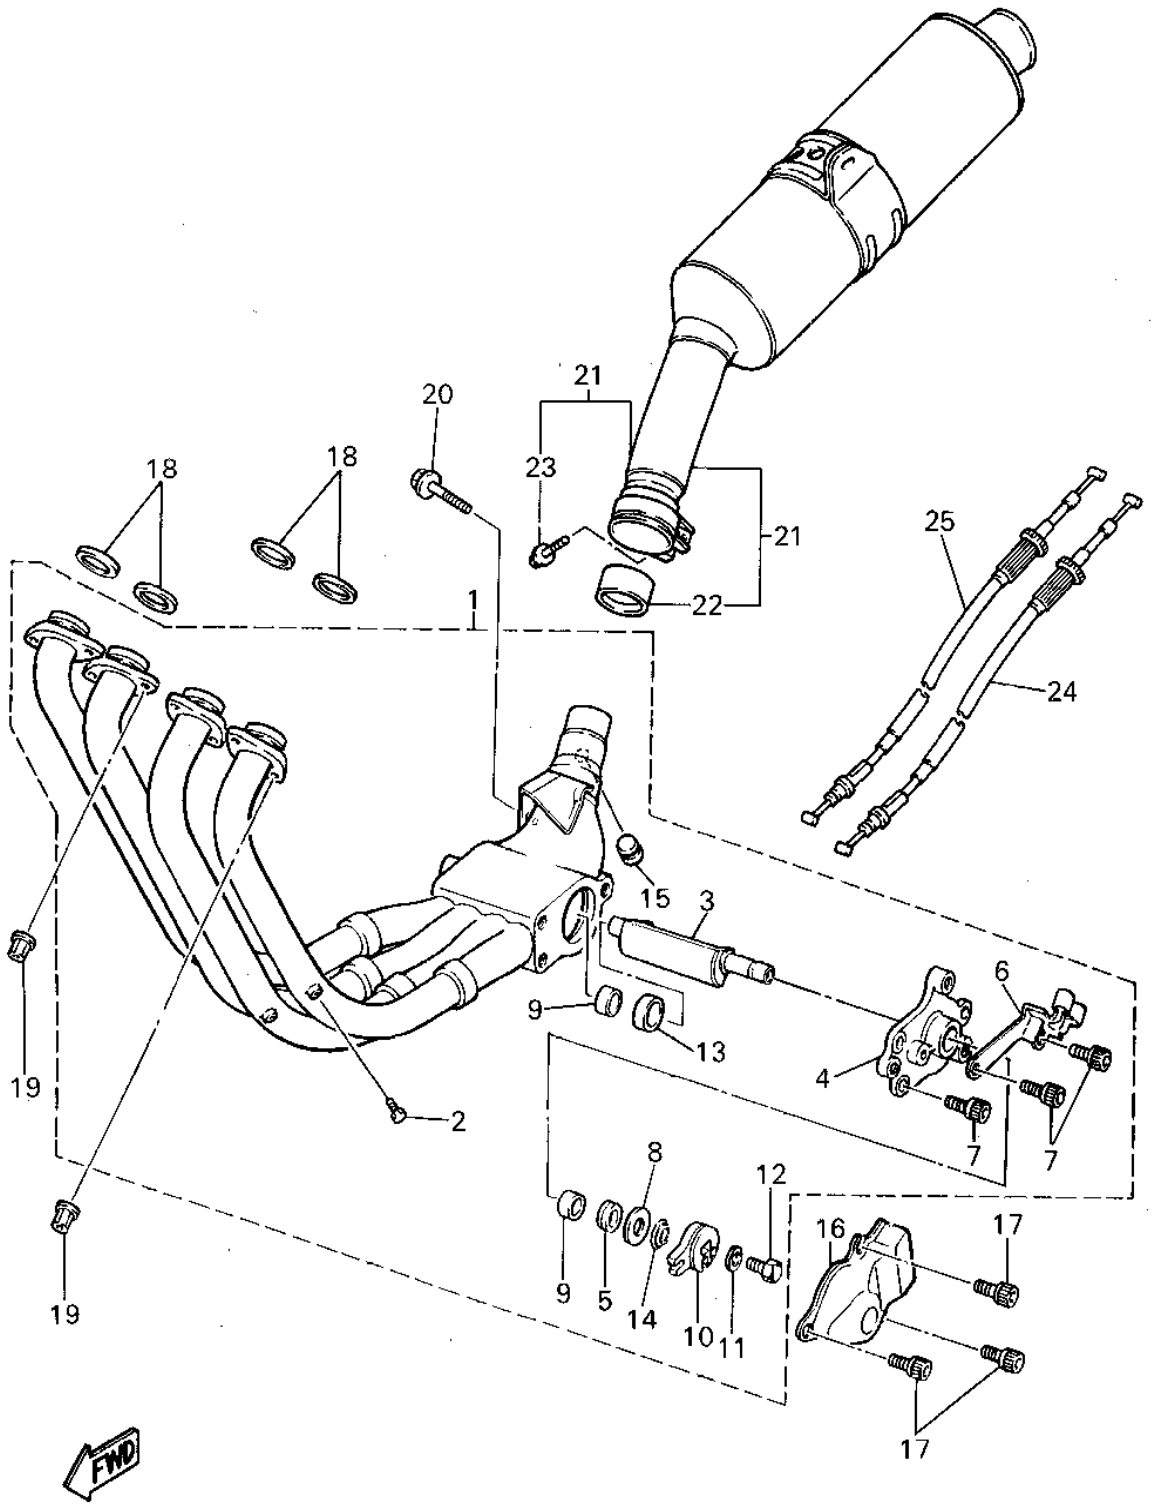

4HD300-3120

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-14610-01-00	EXHAUST PIPE ASSEMBLY 1 .	1	
2	90101-06576-00	. BOLT	4	
3	3GM-14821-00-00	. ARM, SHAFT (VALVE)	1	
4	3GM-14811-00-00	. HOUSING	1	
5	2TK-14845-00-00	. DUST SEAL ASSEMBLY	1	
6	2TK-14867-01-00	. BRACKET	1	
7	90119-06115-00	. BOLT, WITH WASHER	3	
8	90201-106M5-00	. WASHER, PLATE	1	
9	90380-10195-00	. BUSH, SOLID	2	
10	2TK-14865-01-00	. PULLEY	1	
11	92990-05200-00	. WASHER, PLAIN	1	
12	97395-05012-00	. BOLT HEX. HEAD	1	
13	90387-106U7-00	. COLLAR	1	
14	3GM-14683-00-00	. SPRING, HOOK	1	
15	4FM-24181-00-00	. DAMPER, LOCATING 1	1	
16	4HD-14826-00-00	PROTECTOR, EXHAUST	1	
17	90119-06187-00	BOLT, WITH WASHER	3	
18	4FM-14613-00-00	GASKET, EXHAUST PIPE	4	
19	90179-08410-00	NUT	8	
20	95816-08035-00	BOLT, FLANGE	1	
21	4HN-14710-01-00	MUFFLER ASSEMBLY 1	1	
22	3HE-14755-00-00	. GASKET, SILENCER	1	
23	95821-08025-00	. BOLT, FLANGE	1	
24	4FM-1133E-00-00	CABLE, PULLEY 1	1	
25	4FM-1133F-00-00	CABLE, PULLEY 2	1	


CRANKCASE

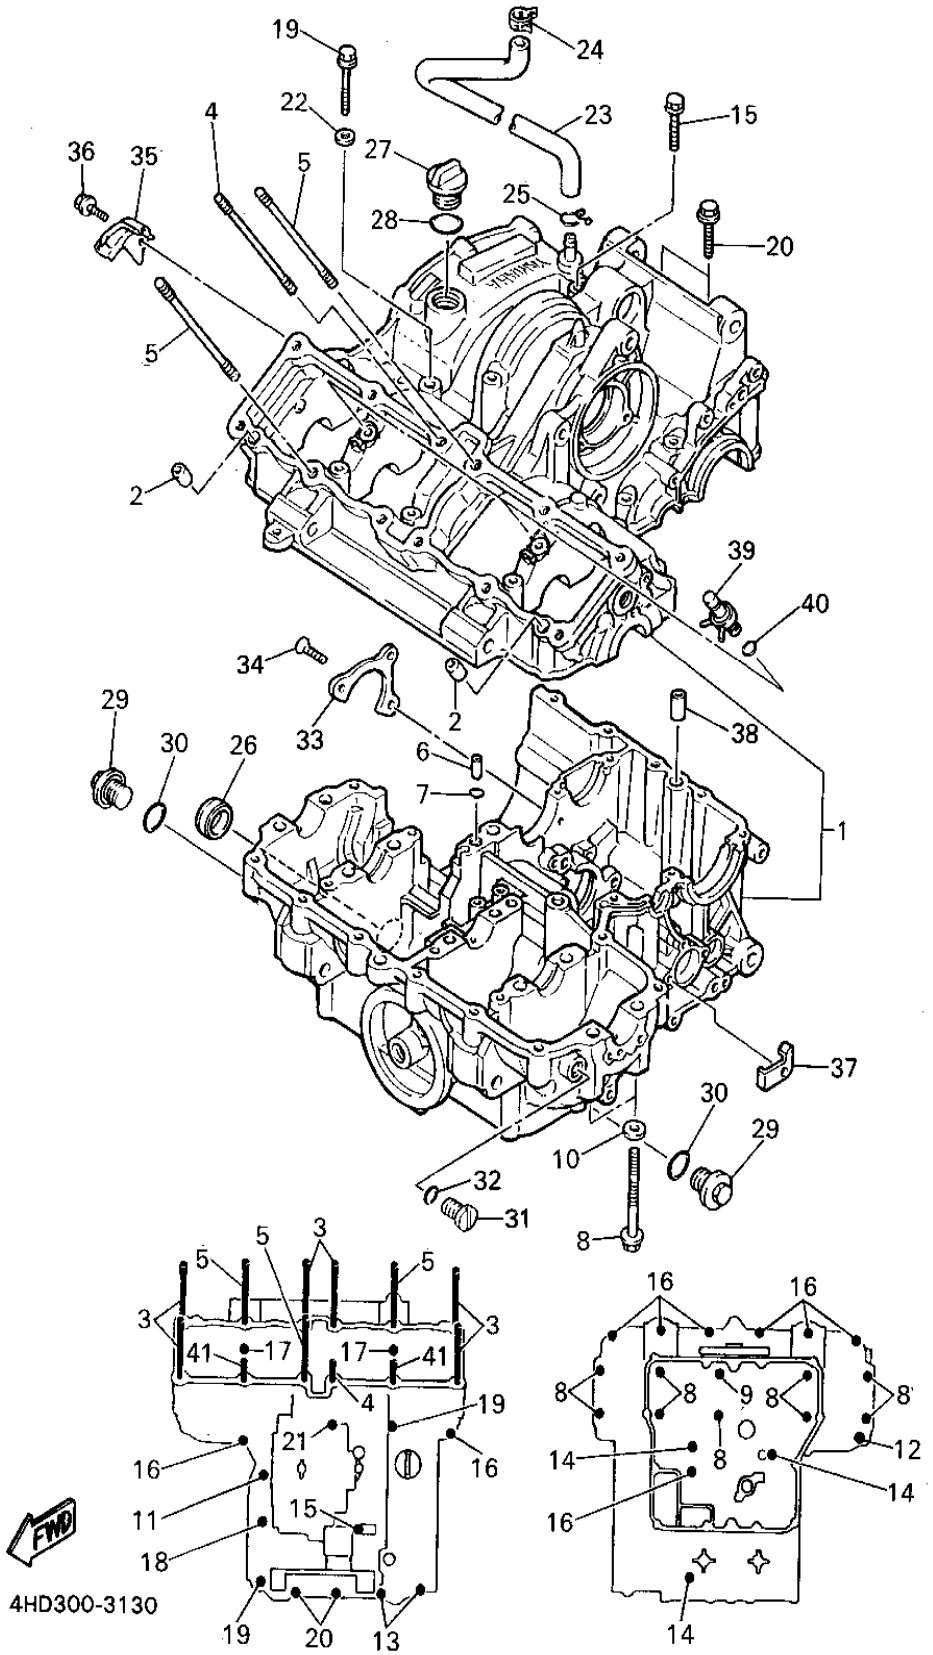

Ref. No.	Part Number	Description	Qty	Remarks
1	3GM-15100-52-00	CRANKCASE ASSEMBLY	1	
2	99530-10014-00	PIN, DOWEL	2	
3	90116-10529-00	BOLT, STUD	6	
4	90116-10528-00	BOLT, STUD	1	
5	90116-10569-00	BOLT, STUD	3	
6	90387-05383-00	COLLAR	1	
7	93210-07135-00	O-RING	1	
8	90105-09373-00	BOLT, WASHER BASED	9	
9	90105-09580-00	BOLT, WASHER BASED	1	
10	90201-096J9-00	WASHER, PLATE	4	
11	95811-06035-00	BOLT, FLANGE	1	
12	95811-08045-00	BOLT, FLANGE (JN5)	1	
13	95811-06060-00	BOLT, FLANGE	2	
14	95811-06080-00	BOLT, FLANGE	3	
15	95811-06140-00	BOLT, FLANGE	1	
16	95811-08045-00	BOLT, FLANGE (JN5)	9	
17	95811-08055-00	BOLT, FLANGE	2	
18	95811-08065-00	BOLT, FLANGE	1	
19	95811-08090-00	BOLT, FLANGE (95822-08090) .	2	
20	95811-08060-00	BOLT, FLANGE	2	
21	90105-09555-00	BOLT, WASHER BASED	1	
22	90201-08087-00	WASHER, PLATE	1	
23	3FV-11166-00-00	PIPE, BREATHER 1	1	
24	90467-15054-00	CLIP	1	
25	90467-14015-00	CLIP	1	
26	90338-30096-00	PLUG	1	
27	3FV-15363-00-00	PLUG, OIL	1	
28	93210-27778-00	O-RING	1	
29	4H7-15189-00-00	PLUG	2	

CONTINUED ON NEXT FRAME ➤


CRANKCASE

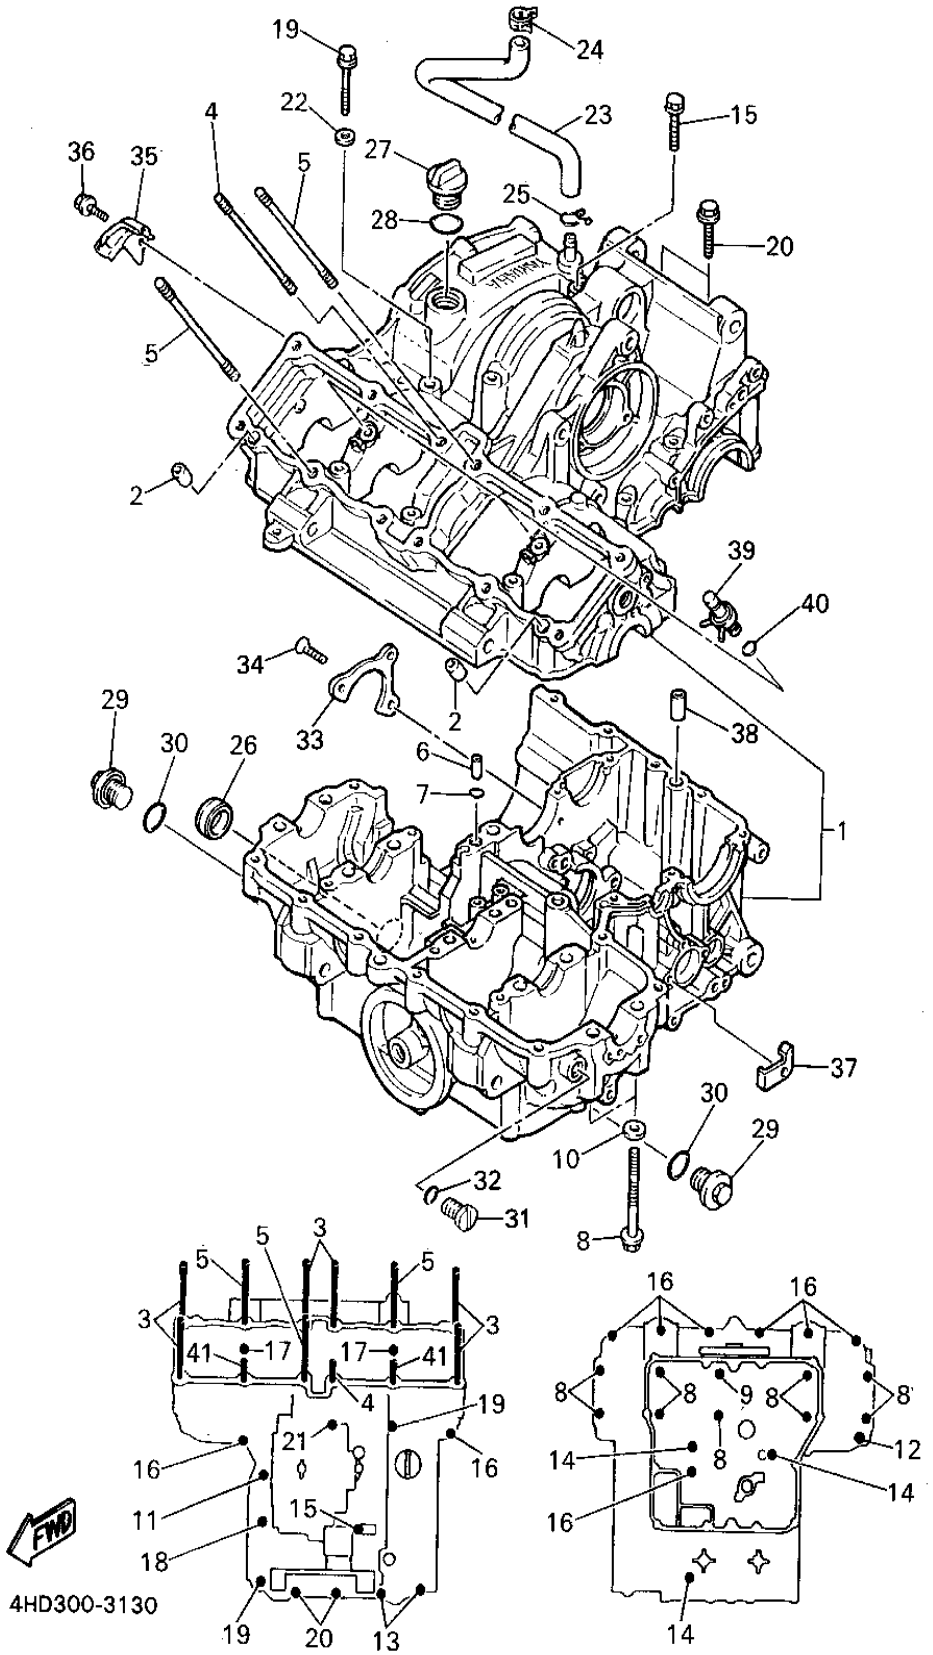

4HD300-3130

Ref. No.	Part Number	Description	Qty	Remarks
30	93210-20573-00	O-RING	2	
31	90340-14068-00	PLUG, STRAIGHT SCREW	1	
32	93210-14369-00	O-RING	1	
33	1AE-15383-00-00	PLATE, BEARING COVER	1	
34	90151-06014-00	SCREW, COUNTERSUNK	3	
35	90462-08184-00	CLAMP	1	
36	95023-06012-00	BOLT, FLANGE	1	
37	90462-08158-00	CLAMP	1	
38	99510-12016-00	PIN, DOWEL	1	
39	3FV-15105-00-00	NOZZLE ASSEMBLY	2	
40	93210-06632-00	O-RING	2	
41	90116-10568-00	BOLT, STUD	2	

CRANKCASE COVER 1

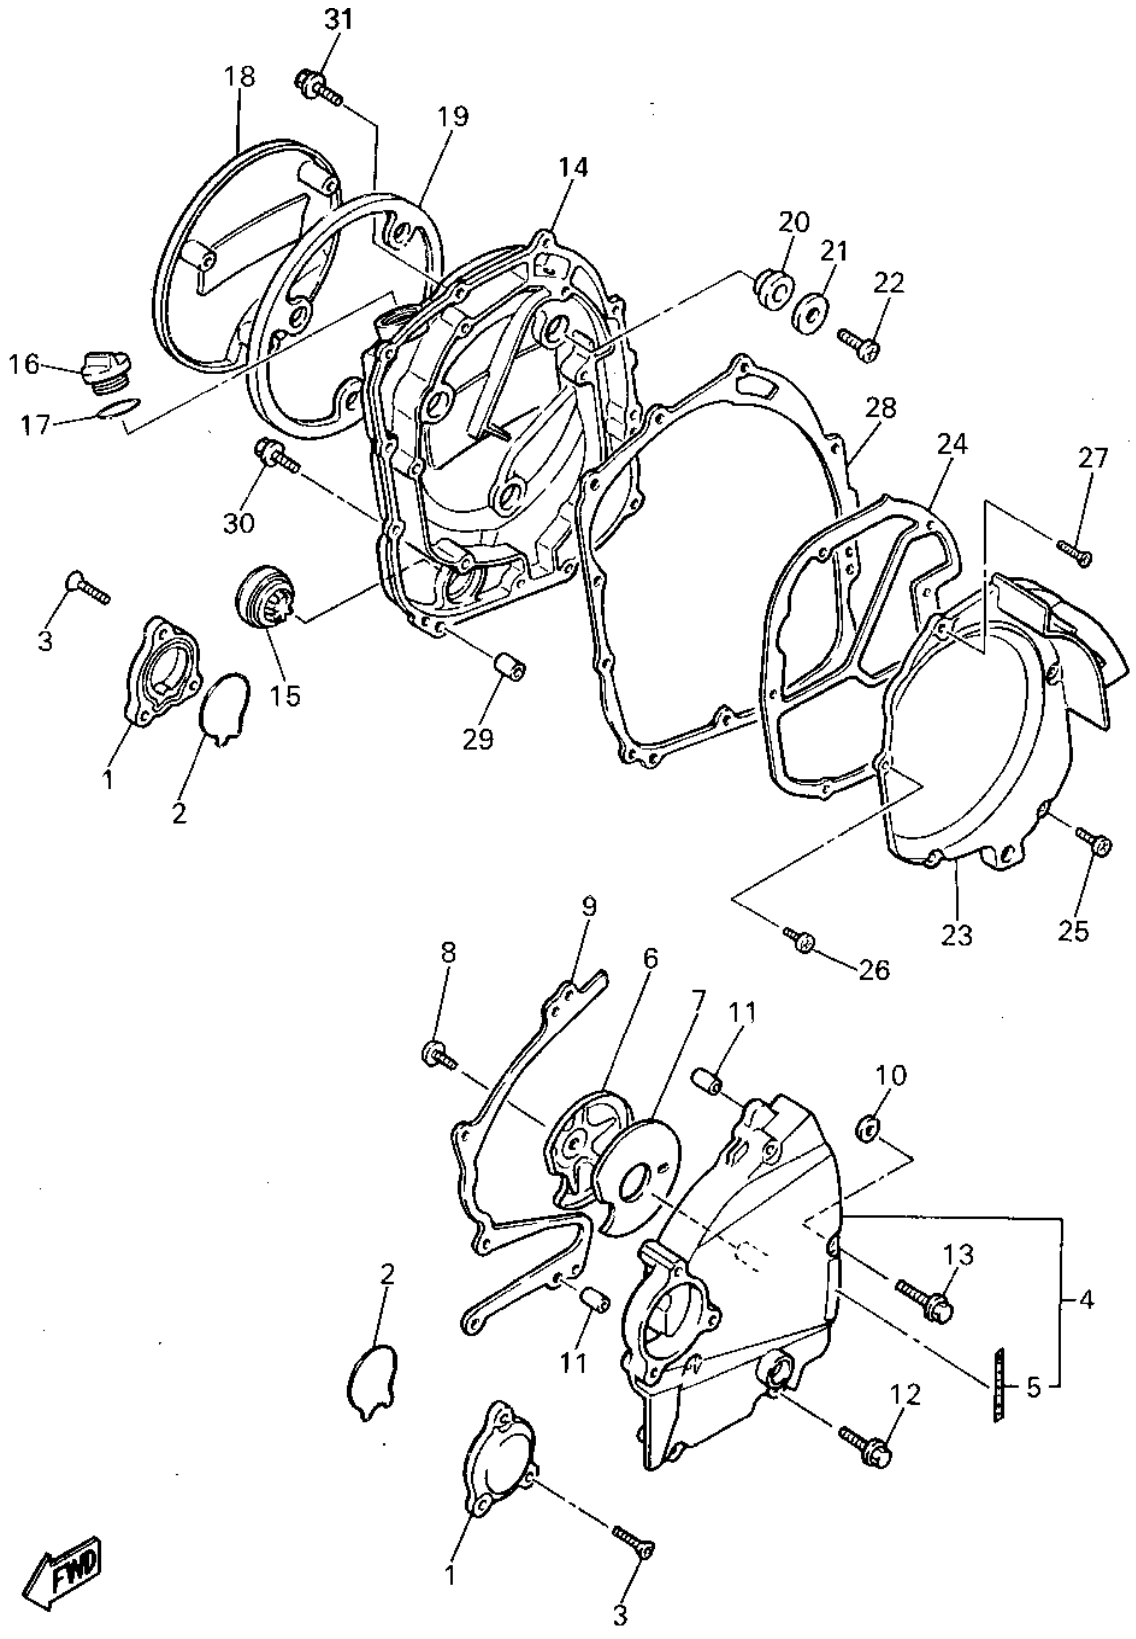


4HD300-3140

Ref. No.	Part Number	Description	Qty	Remarks
1	3GM-15416-00-00	COVER, OIL PUMP	2	
2	1AE-15456-00-00	GASKET, OIL PUMP COVER 1	2	
3	90152-06014-00	SCREW, COUNTERSUNK	6	
4	4FM-15410-00-00	CRANKCASE COVER ASSEMBLY 1	1	
5	1TV-15435-00-00	. EMBLEM	1	
6	3GM-15427-00-00	COVER, CAP 2	1	
7	1AE-15316-00-00	DAMPER, ENGINE MOUNT 1	1	
8	92011-06010-00	BOLT, BUTTON HEAD	1	
9	4FM-15451-00-00	GASKET, CRANKCASE COVER 1	1	
10	4FM-15467-00-00	GASKET	1	
11	99510-08012-00	PIN, DOWEL	2	
12	95023-06040-00	BOLT, FLANGE (1YW)	3	
13	95021-06050-00	BOLT, FLANGE	2	
14	4FM-15421-00-00	COVER, CRANKCASE 2	1	
15	3Y1-15361-00-00	GAUGE, LEVEL	1	
16	409-15363-01-00	PLUG, OIL LEVEL (4FM-15362-00-00)	1	
17	93210-27778-00	O-RING	1	
18	3GM-15417-00-00	COVER, CAP	1	
19	3GM-15449-00-00	RING, RUBBER	1	
20	4H7-15486-00-00	GROMMET	3	
21	90209-06096-00	WASHER	3	
22	98580-06010-00	SCREW, PAN HEAD (92503-06010)	3	
23	3GM-15346-00-00	BREATHER 1	1	
24	4FM-15463-00-00	GASKET, CARBURETOR COVER 2	1	
25	98580-06020-00	SCREW	4	

CONTINUED ON NEXT FRAME ➤


CRANKCASE COVER 1

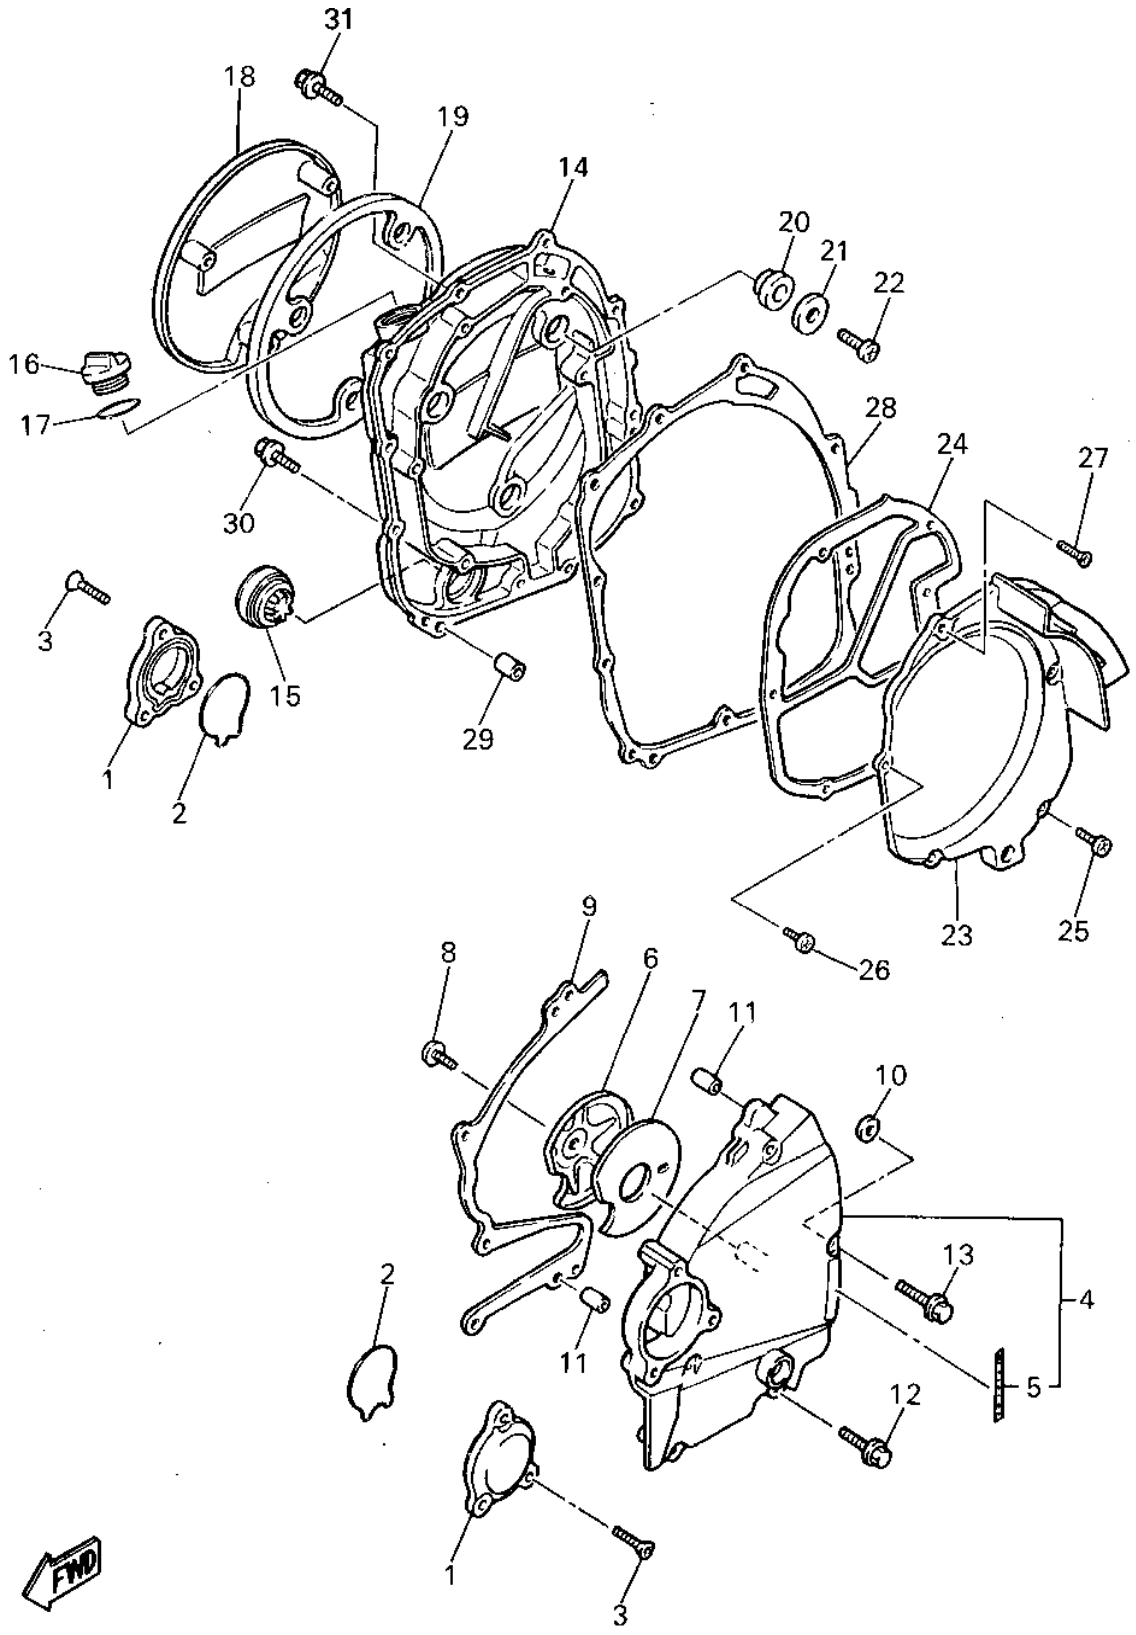

4HD300-3140

Ref. No.	Part Number	Description	Qty	Remarks
26	90157-06104-00	SCREW, PAN HEAD	1	
27	90152-06024-00	SCREW, COUNTERSUNK	1	
28	4FM-15461-00-00	GASKET, CRANKCASE COVER 2	1	
29	99510-08012-00	PIN, DOWEL	2	
30	95023-06030-00	BOLT, FLANGE (95021-06030)	2	
31	95023-06020-00	BOLT, FLANGE	9	


STARTER

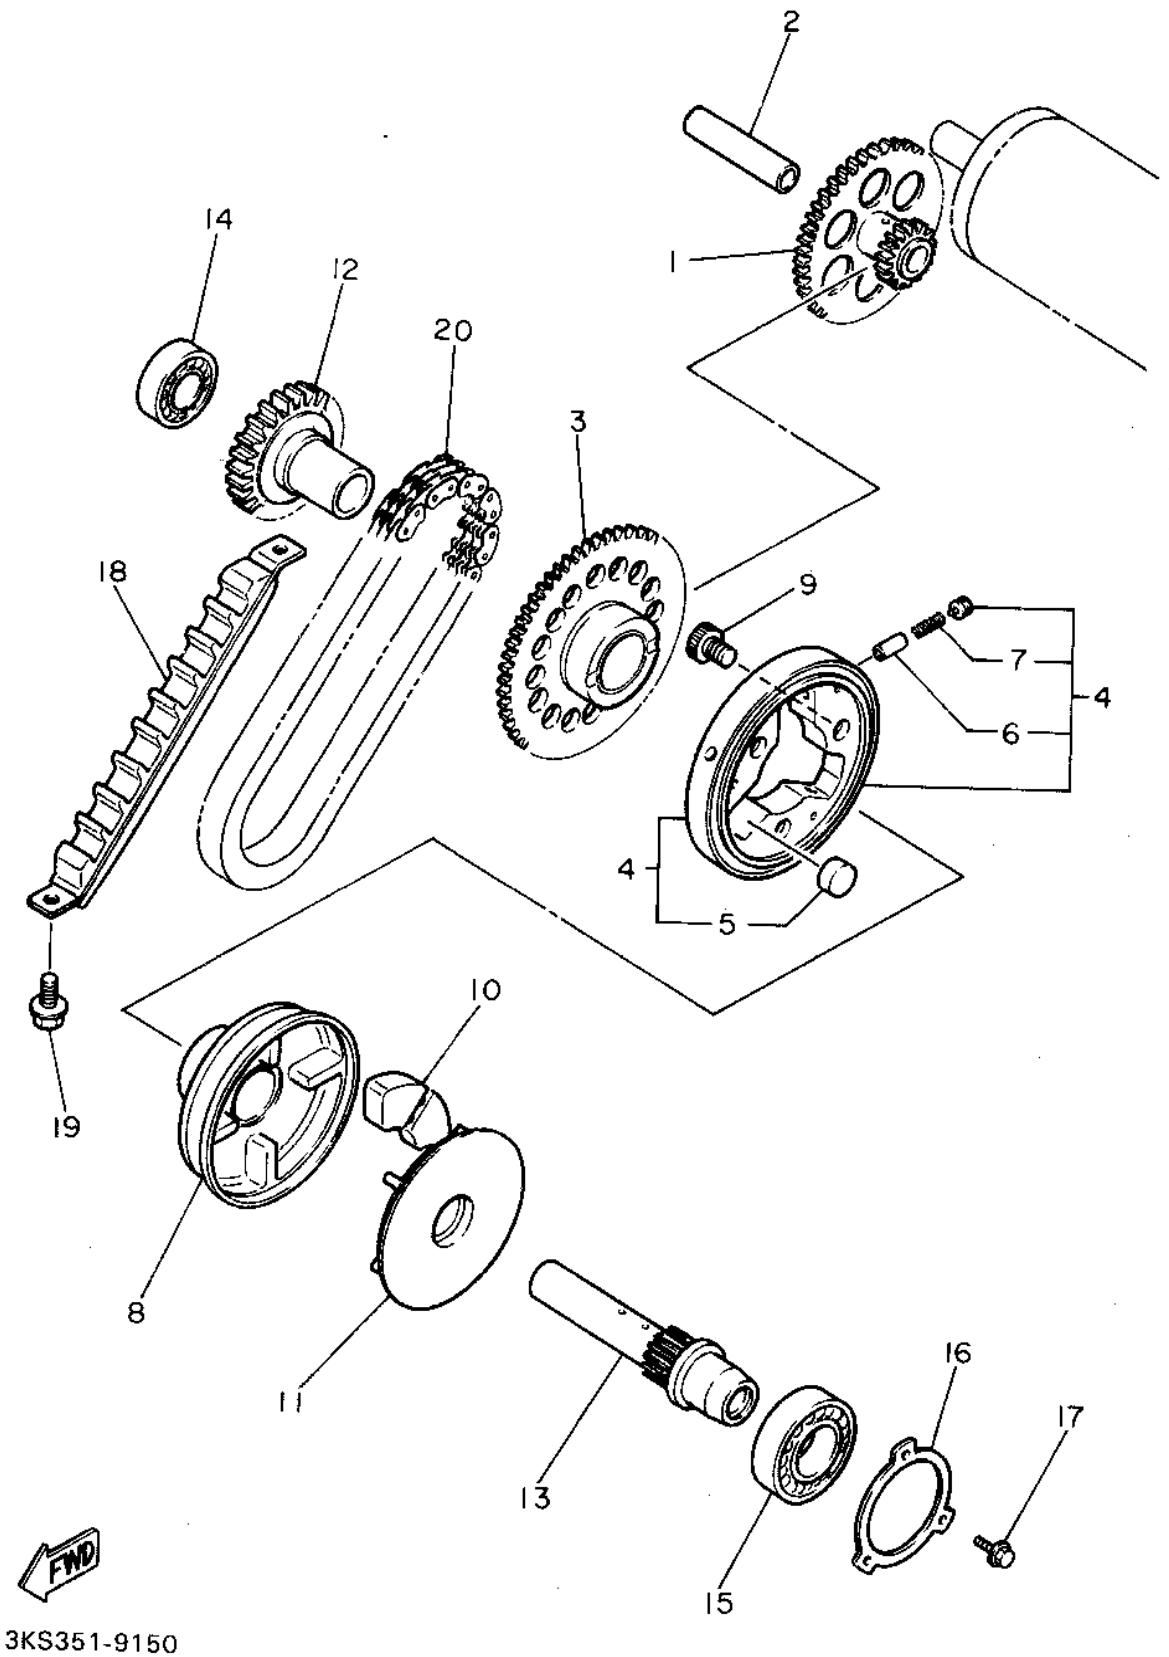

3KS351-9150


Ref. No.	Part Number	Description	Qty	Remarks
1	3GM-15512-00-00	GEAR, IDLER 1	1	
2	51Y-15521-00-00	SHAFT 1	1	
3	4BH-15517-00-00	GEAR, IDLER 2	1	
4	3GM-15580-00-00	STARTER CLUTCH OUTER ASSEMBLY	1	
5	93615-12088-00	. PIN, DOWEL	3	
6	1J7-15583-01-00	. CAP, STARTER CLUTCH SPRING	3	
7	90501-04623-00	. SPRING, COMPRESSION	3	
8	3GM-15524-00-00	WHEEL, STARTER	1	
9	90110-08177-00	BOLT, HEXAGON SOCKET HEAD	3	
10	4H7-16155-01-00	ABSORBER 1	4	
11	3GM-15689-00-00	RETAINER	1	
12	3GM-15519-00-00	SPROCKET, STARTER 2	1	
13	3GM-15522-00-00	SHAFT 2	1	
14	93306-20335-00	BEARING	1	
15	93306-20541-00	BEARING (B6205)	1	
16	1AE-15381-00-00	PLATE, BEARING COVER	1	
17	95026-06016-00	BOLT, FLANGE	3	
18	3GM-11474-00-00	GUIDE, UPPER	1	
19	95816-06014-00	BOLT, FLANGE	2	
20	4FM-11456-00-00	CHAIN, PRIMARY	1	

CLUTCH

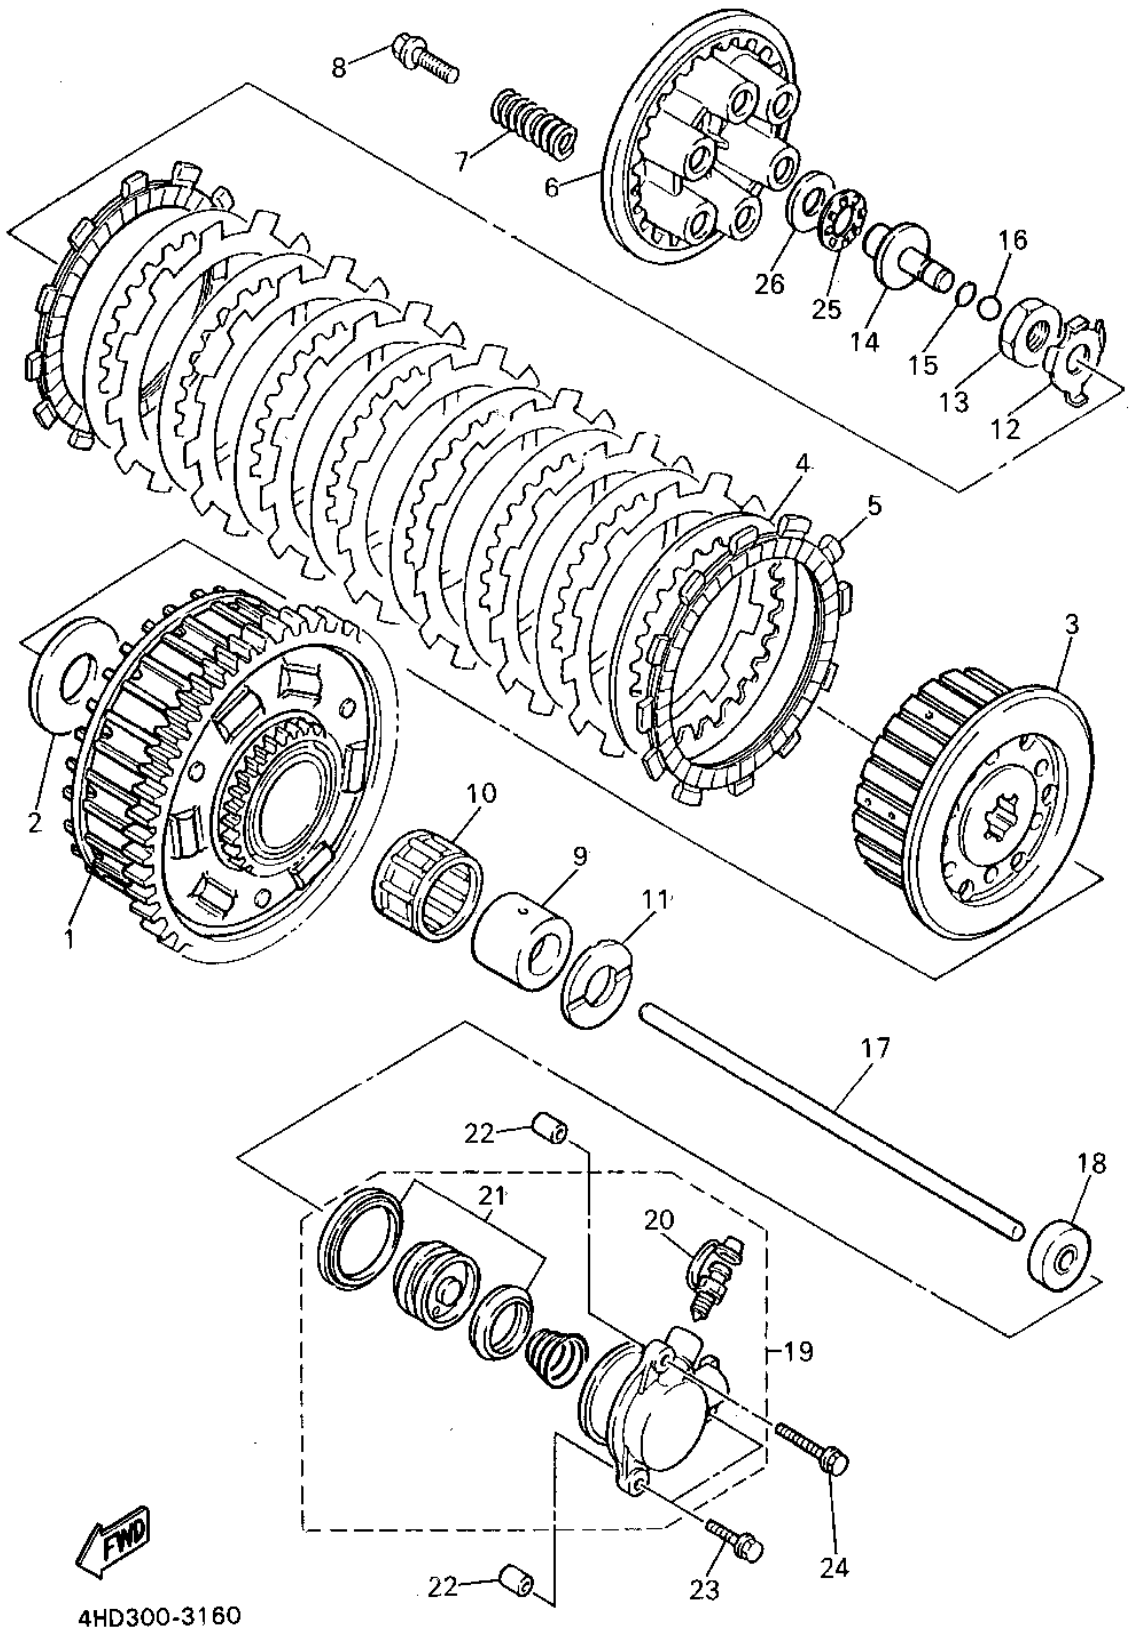

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-16150-00-00	PRIMARY DRIVEN GEAR COMP.	1	
2	1AE-16154-00-00	PLATE, THRUST 1	1	
3	2GH-16371-00-00	BOSS, CLUTCH	1	
4	3J2-16324-00-00	PLATE, CLUTCH 1	8	
5	4FN-16321-00-00	PLATE, FRICTION	9	
6	58L-16351-00-00	PLATE, PRESSURE 1	1	
7	90501-225A9-00	SPRING, COMPRESSION	6	
8	90159-06123-00	SCREW, WITH WASHER	6	
9	90560-25270-00	SPACER	1	
10	93310-340N8-00	BEARING, CYLINDRICAL	1	
11	1AE-16164-00-00	PLATE, THRUST 2	1	
12	90215-20231-00	WASHER, LOCK	1	
13	90170-20327-00	NUT	1	
14	1LJ-16356-00-00	ROD, PUSH 1	1	
15	93210-06632-00	O-RING	1	
16	93511-32027-00	BALL	1	
17	1AE-16357-00-00	ROD, PUSH 2	1	
18	93109-08061-00	OIL SEAL	1	
19	1TV-16381-10-00	PUSH LEVER COMP.	1	
20	36Y-W0048-00-00	. BLEED SCREW KIT	1	
21	26H-W0098-00-00	. PUSH LEVER SEAL KIT	1	
22	99510-08012-00	PIN, DOWEL	2	
23	95026-06030-00	BOLT, FLANGE	2	
24	95026-06090-00	BOLT, FLANGE	1	
25	93340-21505-00	BEARING	1	
26	90201-150H2-00	WASHER, PLATE	1	

TRANSMISSION

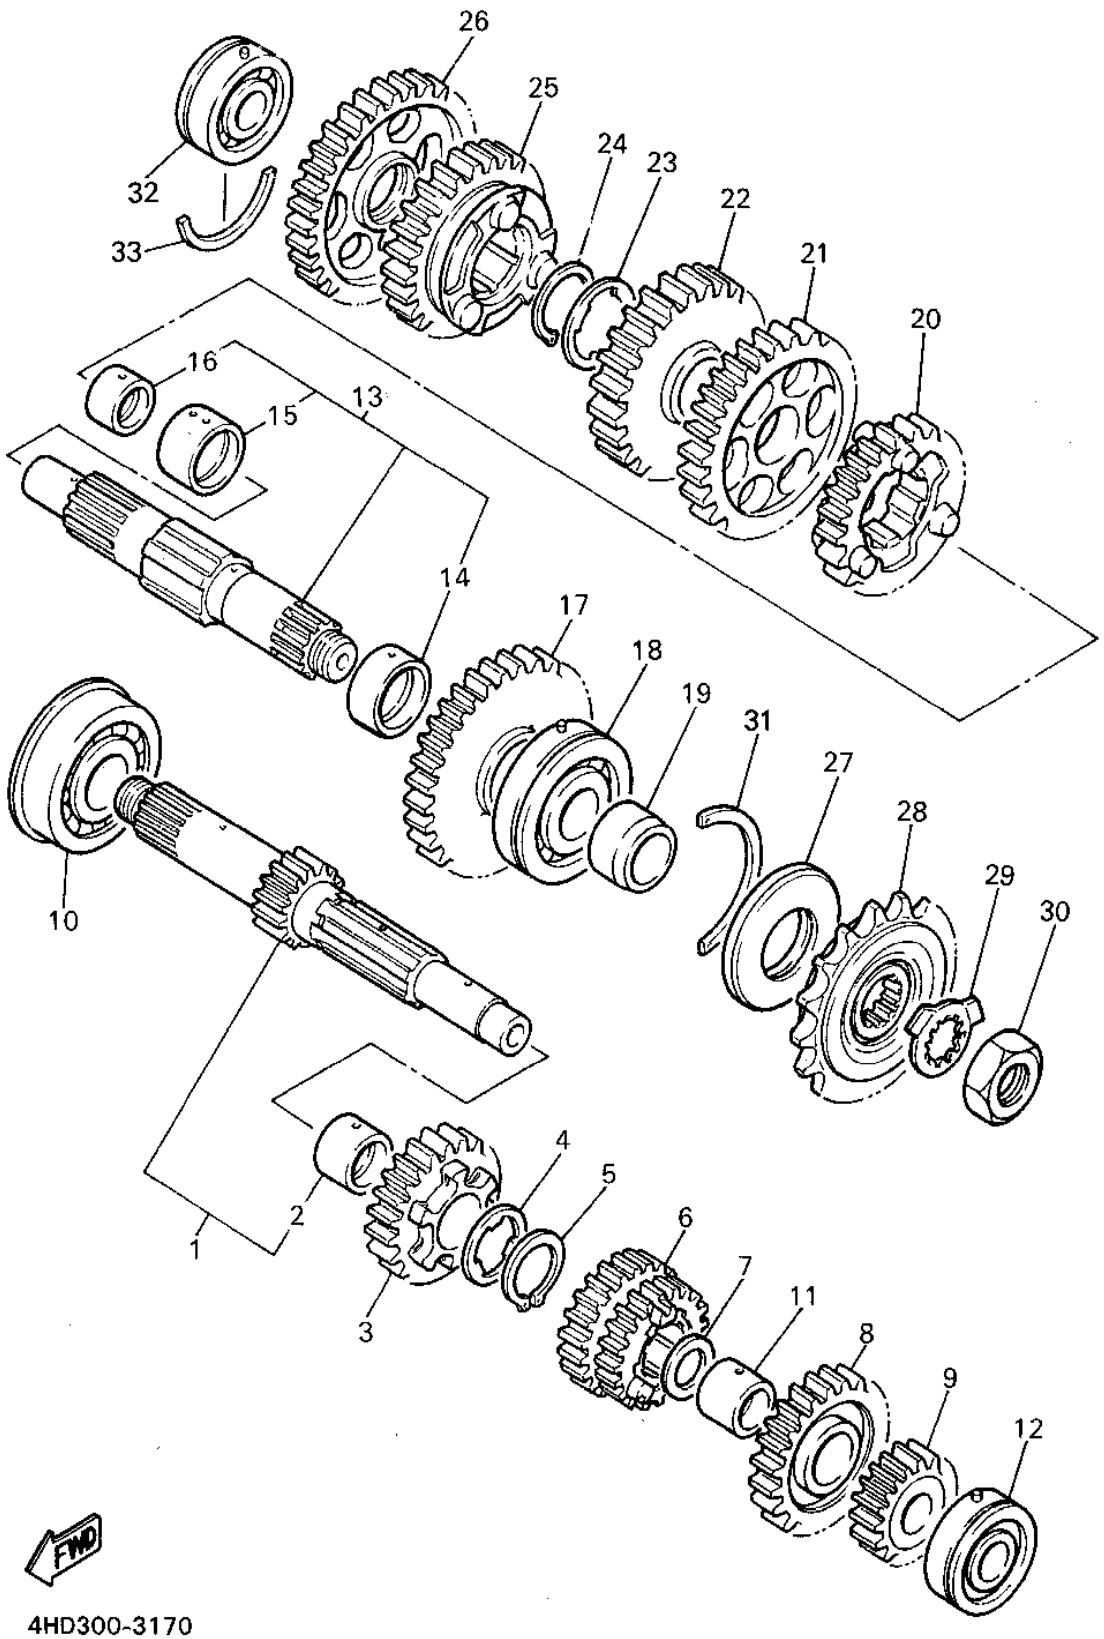


4HD300-3170

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-W1741-00-00	MAIN AXLE ASSEMBLY	1	
2	90387-253M6-00	. COLLAR	1	
3	4FM-17151-00-00	GEAR, 5TH PINION	1	
4	90209-22191-00	WASHER	1	
5	93440-25084-00	CIRCLIP	1	
6	4FM-17131-00-00	GEAR, 3RD PINION	1	
7	90201-200K3-00	WASHER, PLATE	1	
8	4FM-17161-00-00	GEAR, 6TH PINION	1	
9	3FV-17121-00-00	GEAR, 2ND PINION (17T)	1	
10	93306-30560-00	BEARING	1	
11	90387-203M7-00	COLLAR	1	
12	93306-20455-00	BEARING	1	
13	3FV-W1742-00-00	DRIVE AXLE ASSEMBLY	1	
14	90387-263M8-00	. COLLAR	1	
15	90387-284M0-00	. COLLAR	1	
16	90387-204M1-00	. COLLAR	1	
17	4FM-17221-00-00	GEAR, 2ND WHEEL	1	
18	93305-30501-00	BEARING	1	
19	90387-255V9-00	COLLAR	1	
20	4FM-17261-00-00	GEAR, 6TH WHEEL	1	
21	4FM-17231-00-00	GEAR, 3RD WHEEL	1	
22	4FM-17241-00-00	GEAR, 4TH WHEEL	1	
23	90209-25196-00	WASHER	1	
24	93440-28062-00	CIRCLIP	1	
25	4FM-17251-00-00	GEAR, 5TH WHEEL	1	
26	4FM-17211-00-00	GEAR, 1ST WHEEL	1	
27	93102-35423-00	OIL SEAL	1	
28	2GH-17460-00-00	SPROCKET, DRIVE 16T (2GH1746160)	1	

CONTINUED ON NEXT FRAME ➤


TRANSMISSION

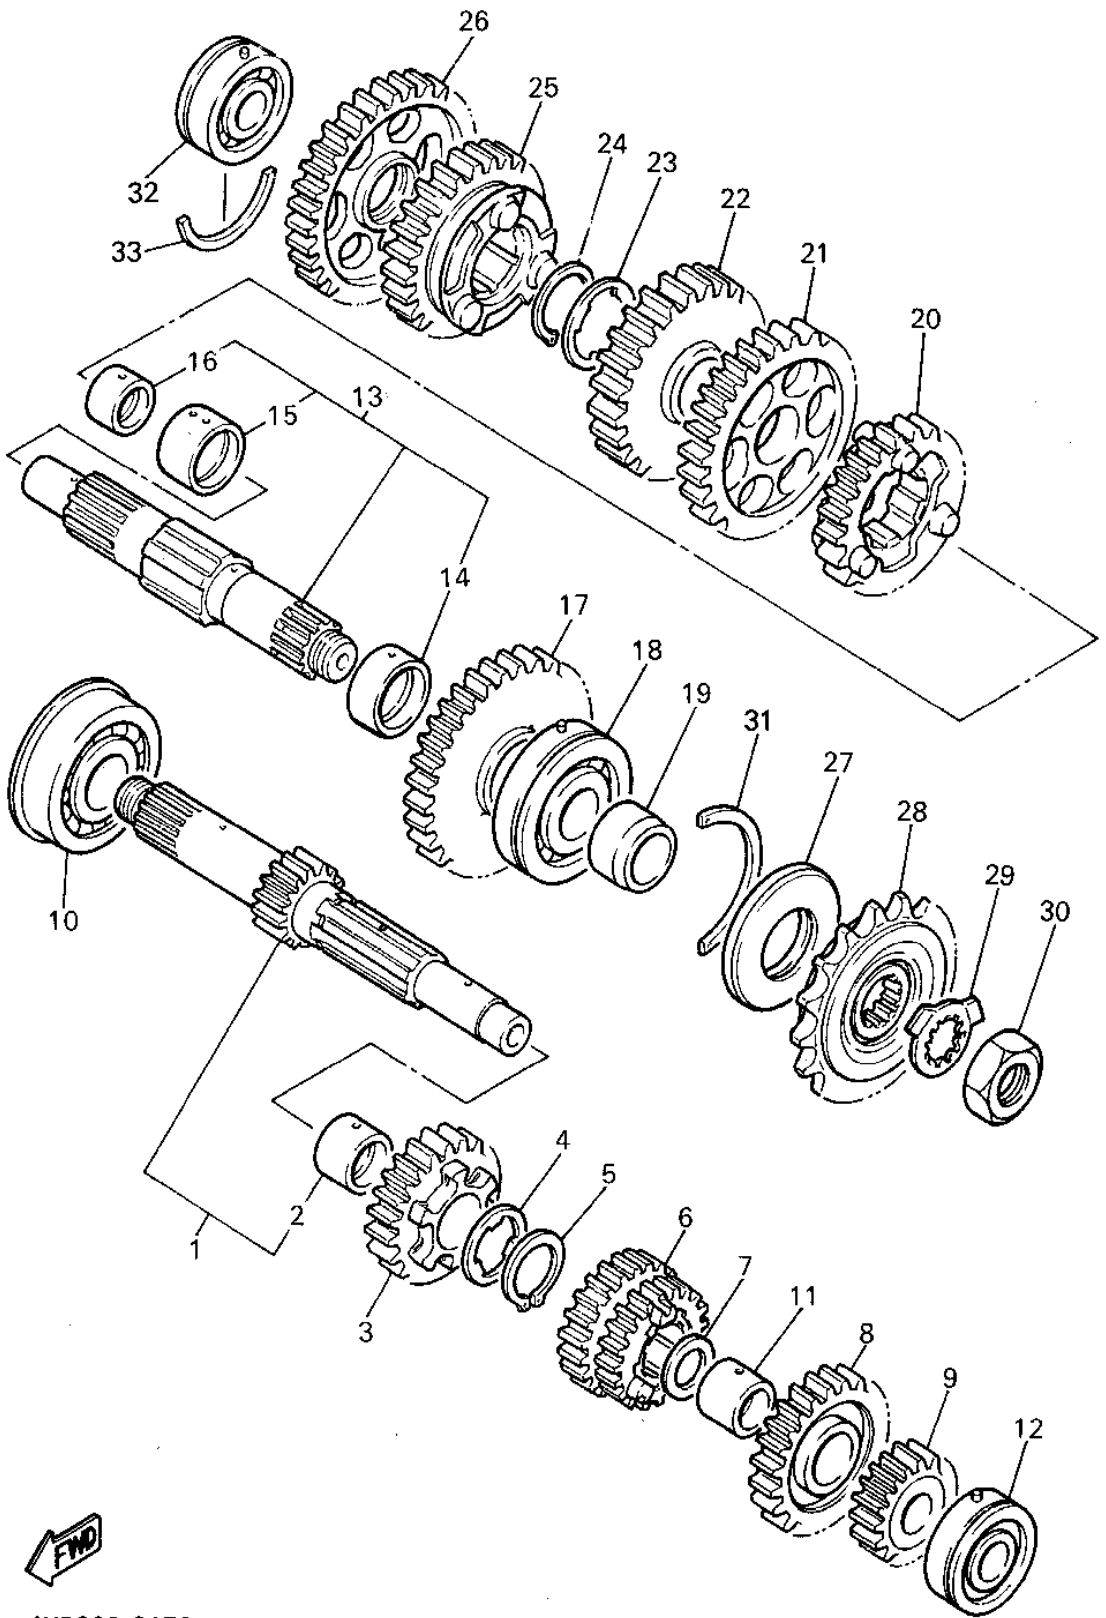

4HD300-3170

Ref. No.	Part Number	Description	Qty	Remarks
29	90215-21022-00	WASHER, LOCK	1	
30	90179-18020-00	NUT	1	
31	278-17424-01-00	CIRCLIP 1	1	
32	93306-20455-00	BEARING	1	
33	93440-45144-00	CIRCLIP	1	

SHIFT CAM - SHIFT FORK

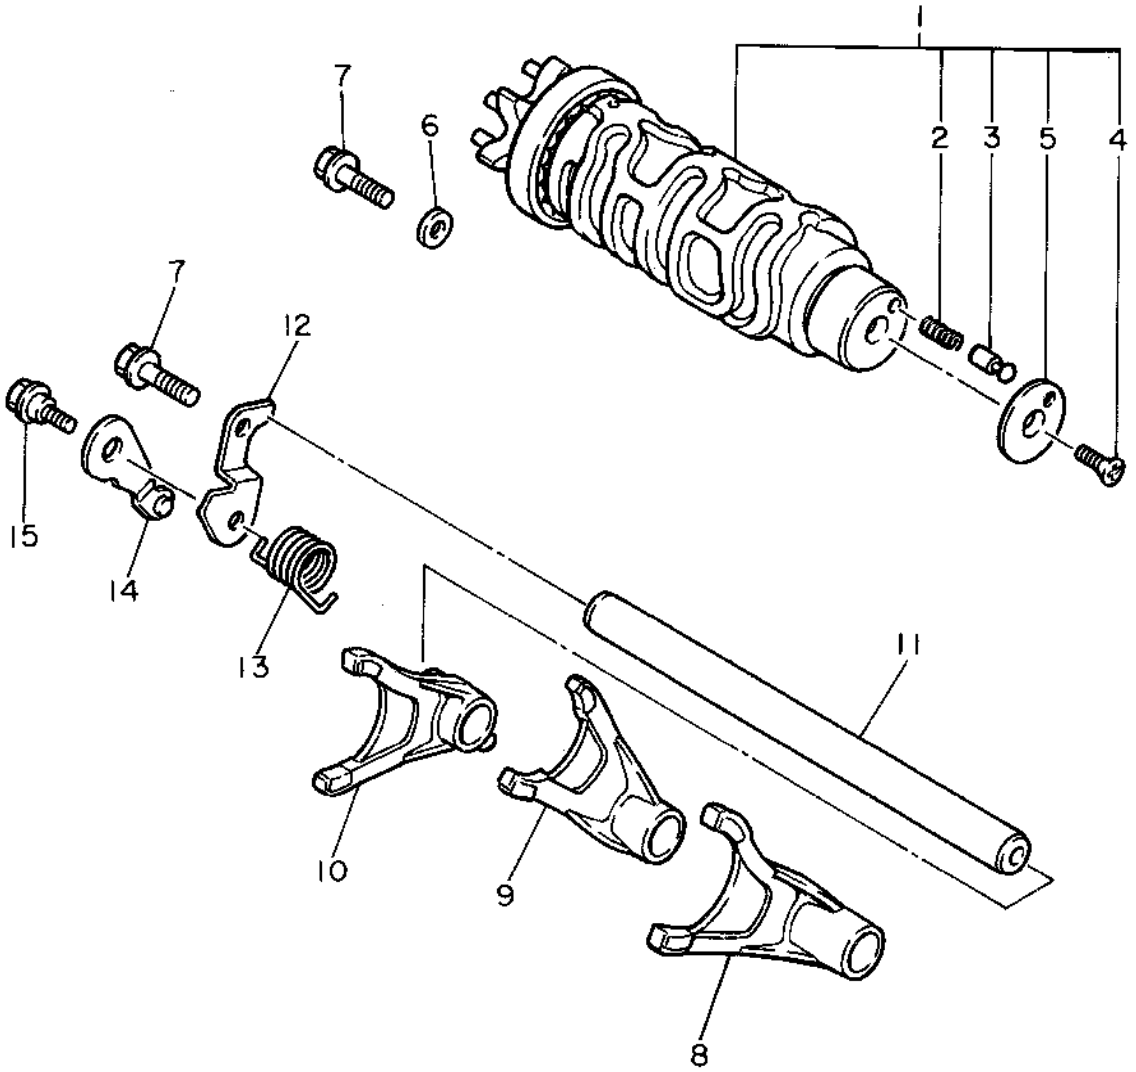


Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-18540-00-00	SHIFT CAM ASSEMBLY	1	
2	90501-06022-00	. SPRING, COMPRESSION	1	
3	278-18542-00-00	. POINT, NEUTRAL	1	
4	98701-05012-00	. SCREW, FLAT HEAD	1	
5	278-18566-00-00	. PLATE, SIDE 2	1	
6	90201-06643-00	WASHER, PLATE	1	
7	95811-06016-00	BOLT, FLANGE (95822-06016)	2	
8	4FM-18511-00-00	FORK, SHIFT 1	1	
9	4FM-18512-00-00	FORK, SHIFT 2	1	
10	4FM-18513-00-00	FORK, SHIFT 3	1	
11	4BH-18531-00-00	BAR, SHIFT FORK GUIDE 1	1	
12	1AE-18536-00-00	STOPPER, SHIFT BAR	1	
13	90508-26681-00	SPRING, TORSION	1	
14	36Y-18140-00-00	STOPPER LEVER ASSEMBLY	1	
15	90109-063F8-00	BOLT	1	

FWD

1FN310-5180


SHIFT SHAFT

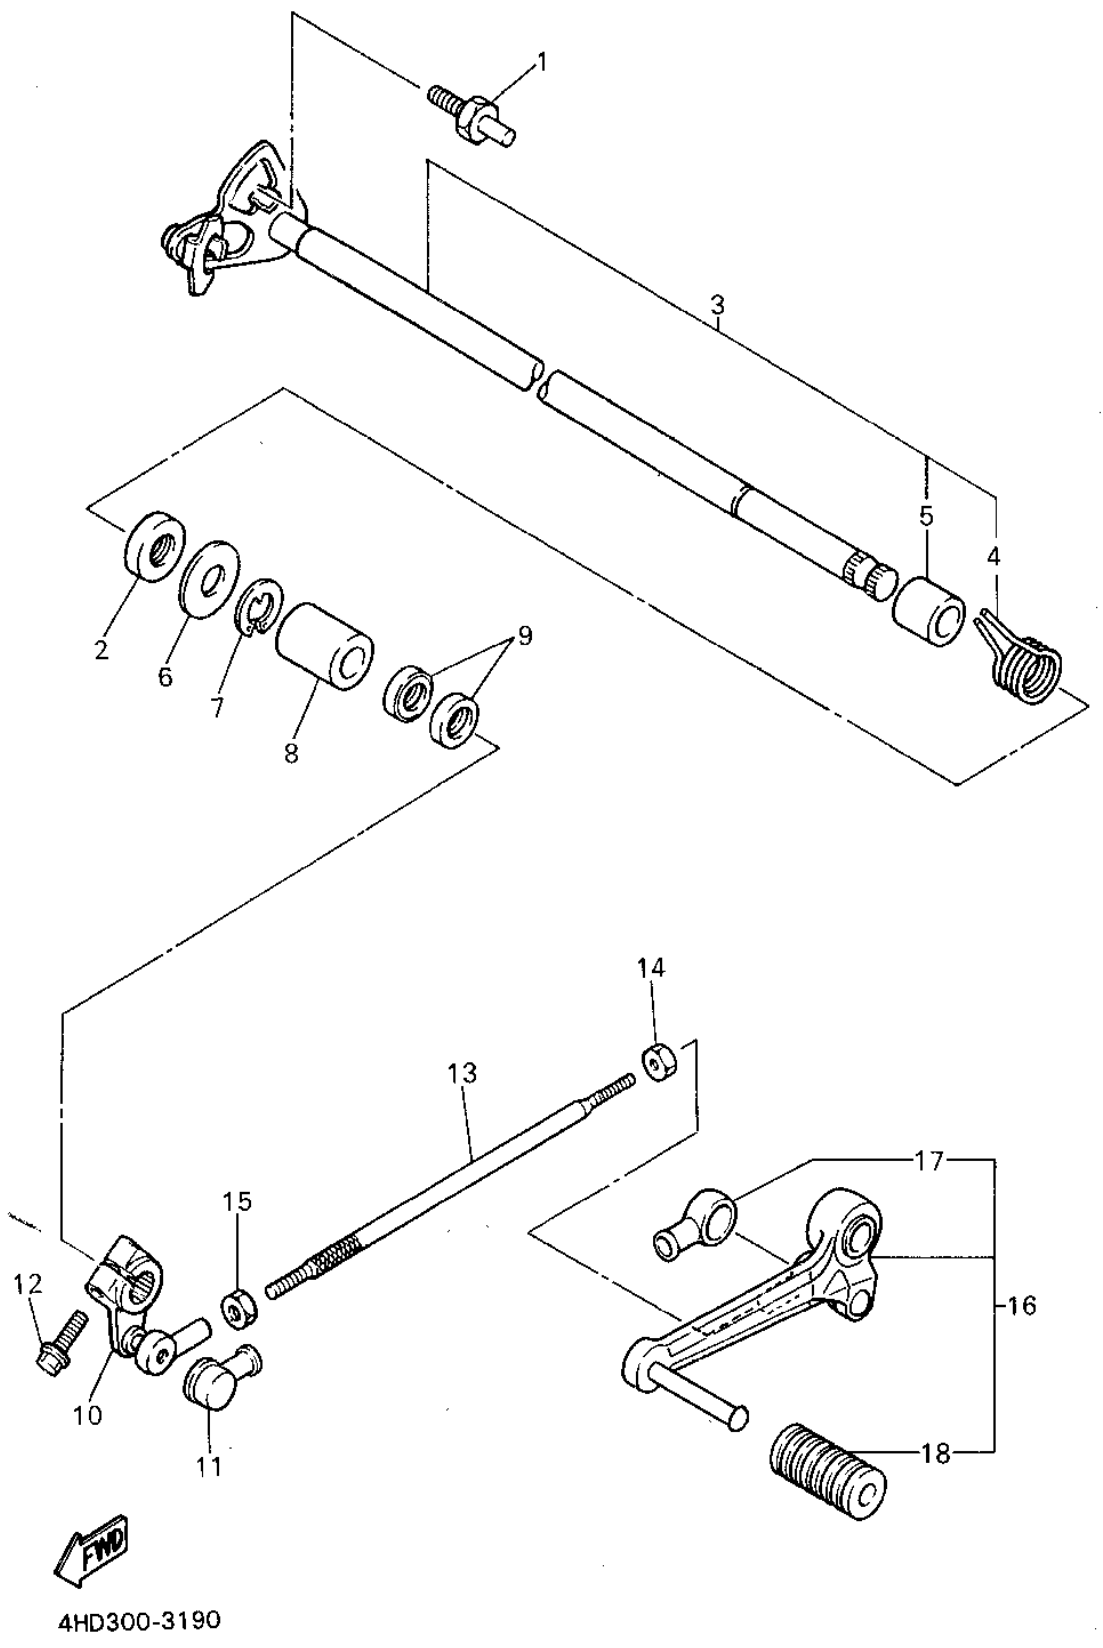

4HD300-3190

Ref. No.	Part Number	Description	Qty	Remarks
1	4G0-18127-00-00	STOPPER, SCREW	1	
2	93102-12321-00	OIL SEAL, SD-TYPE	1	
3	1AE-18101-01-00	SHIFT SHAFT ASSEMBLY	1	
4	90508-32682-00	. SPRING, TORSION	1	
5	90387-114K8-00	. COLLAR	1	
6	90201-12575-00	WASHER, PLATE	1	
7	99006-10600-00	CIRCLIP	1	
8	90560-12191-00	SPACER	1	
9	93109-12053-00	OIL SEAL (SDO 12/18/4-1)	2	
10	2GH-18112-01-00	ARM, SHIFT	1	
11	2H9-18154-00-00	COVER, DUST	1	
12	95826-06020-00	BOLT, flange (95806-06020-00)	1	
13	1WG-18115-00-00	ROD, SHIFT	1	
14	90170-06228-00	NUT (COUNTER CLOCKWISE)	1	
15	95380-06700-00	NUT	1	
16	4FM-18110-00-00	SHIFT PEDAL ASSEMBLY	1	
17	2H9-18154-00-00	. COVER, DUST	1	
18	132-18113-01-00	. COVER, SHIFT PEDAL	1	


FRAME

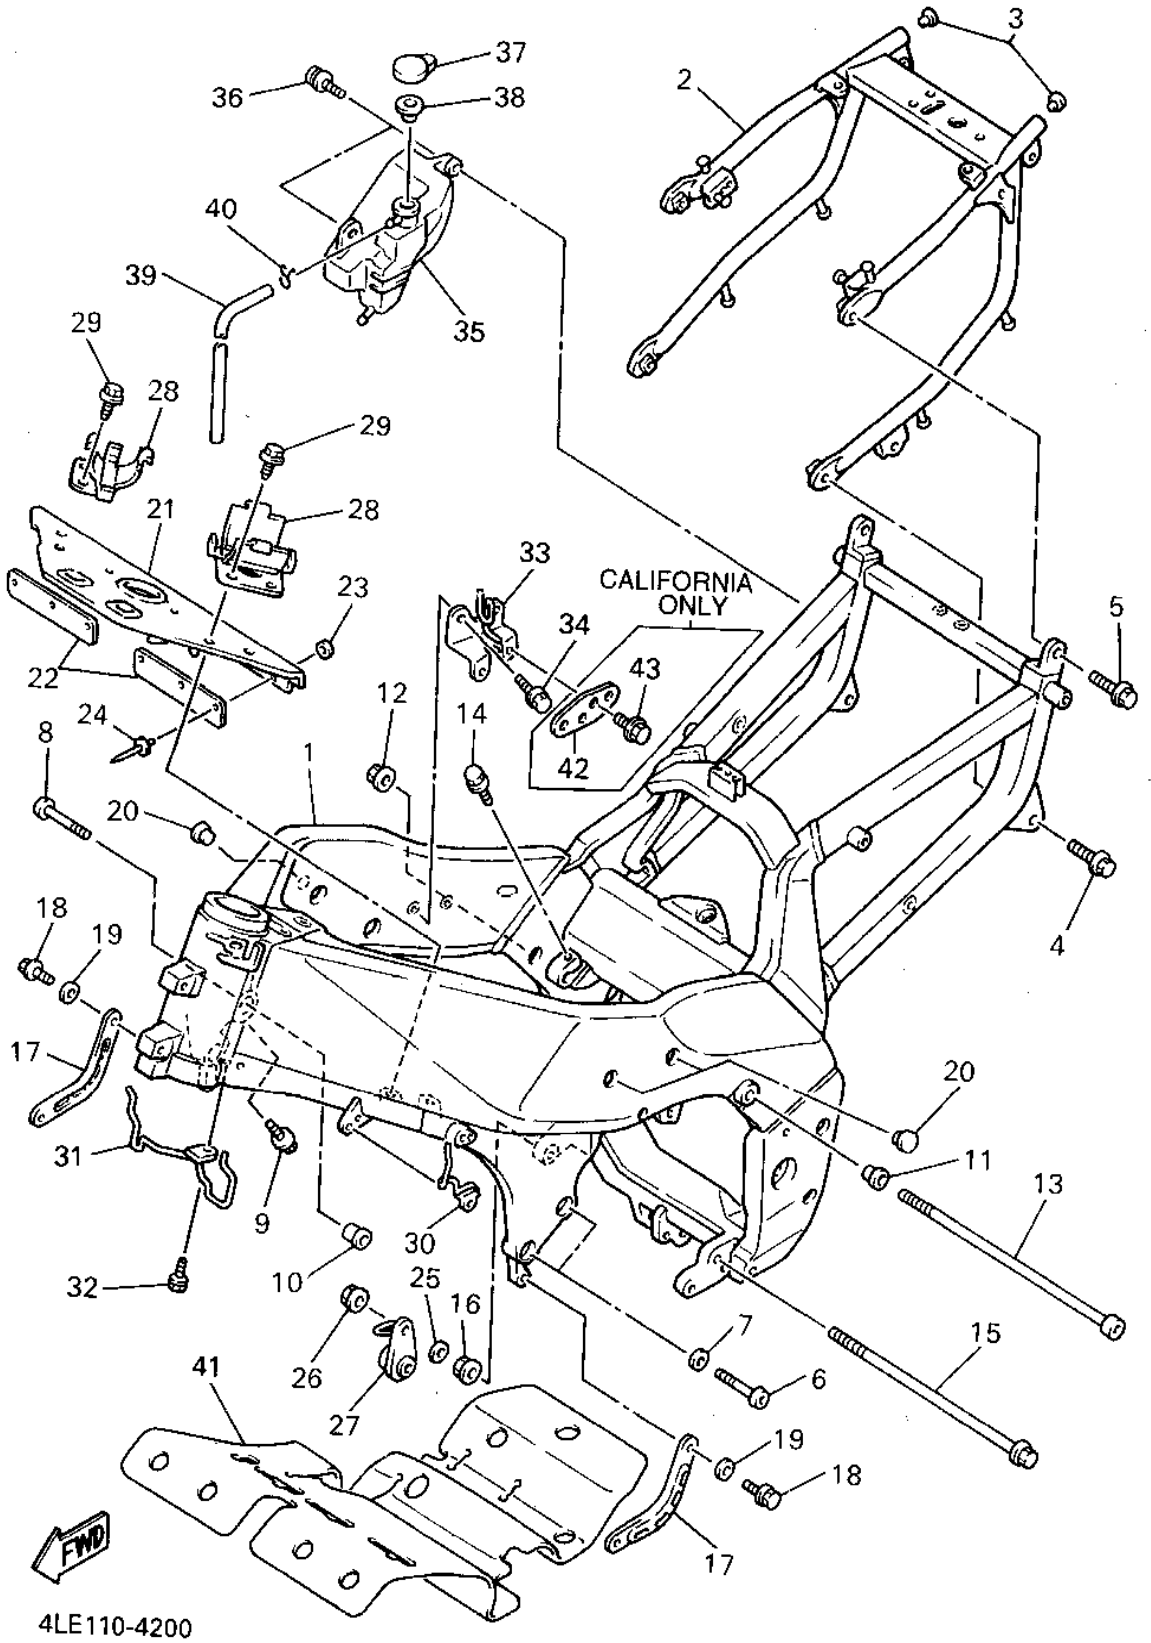

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-21110-00-00	FRAME COMP.	1	
2	4FM-21645-01-00	STAY, REAR	1	
3	90338-16148-00	PLUG	2	
4	95811-08035-00	BOLT, FLANGE (95821-08035)	2	
5	95811-08016-00	BOLT, FLANGE	2	
6	91311-10040-00	BOLT	2	
7	92900-10600-00	WASHER	2	
8	91311-10045-00	BOLT	2	
9	91311-08030-00	BOLT	2	
10	90387-115V8-00	COLLAR	2	
11	90387-105V7-00	COLLAR	1	
12	90179-10590-00	NUT	1	
13	90110-10169-00	BOLT, HEXAGON SOCKET HEAD	1	
14	95811-08030-00	BOLT, FLANGE	2	
15	90105-10716-00	BOLT, WASHER BASED	1	
16	90179-10247-00	NUT	1	
17	4FM-2142K-00-00	BRACKET, RADIATOR	2	
18	97026-06012-00	BOLT	2	
19	92906-06600-00	WASHER	2	
20	90338-15202-00	PLUG	3	
21	4FM-2117M-01-00	COVER 2	1	
22	4FM-2117N-00-00	COVER 3	2	
23	90201-044A2-00	WASHER, PLATE	6	
24	90267-40076-00	RIVET, BLIND	6	
25	90201-101J1-00	WASHER, PLATE	1	
26	95706-10500-00	NUT, flange	1	
27	4FM-21446-00-00	STAY, MUFFLER 2	1	
28	4FM-21359-00-00	BRACKET, COIL	2	


CONTINUED ON NEXT FRAME ➤

FRAME

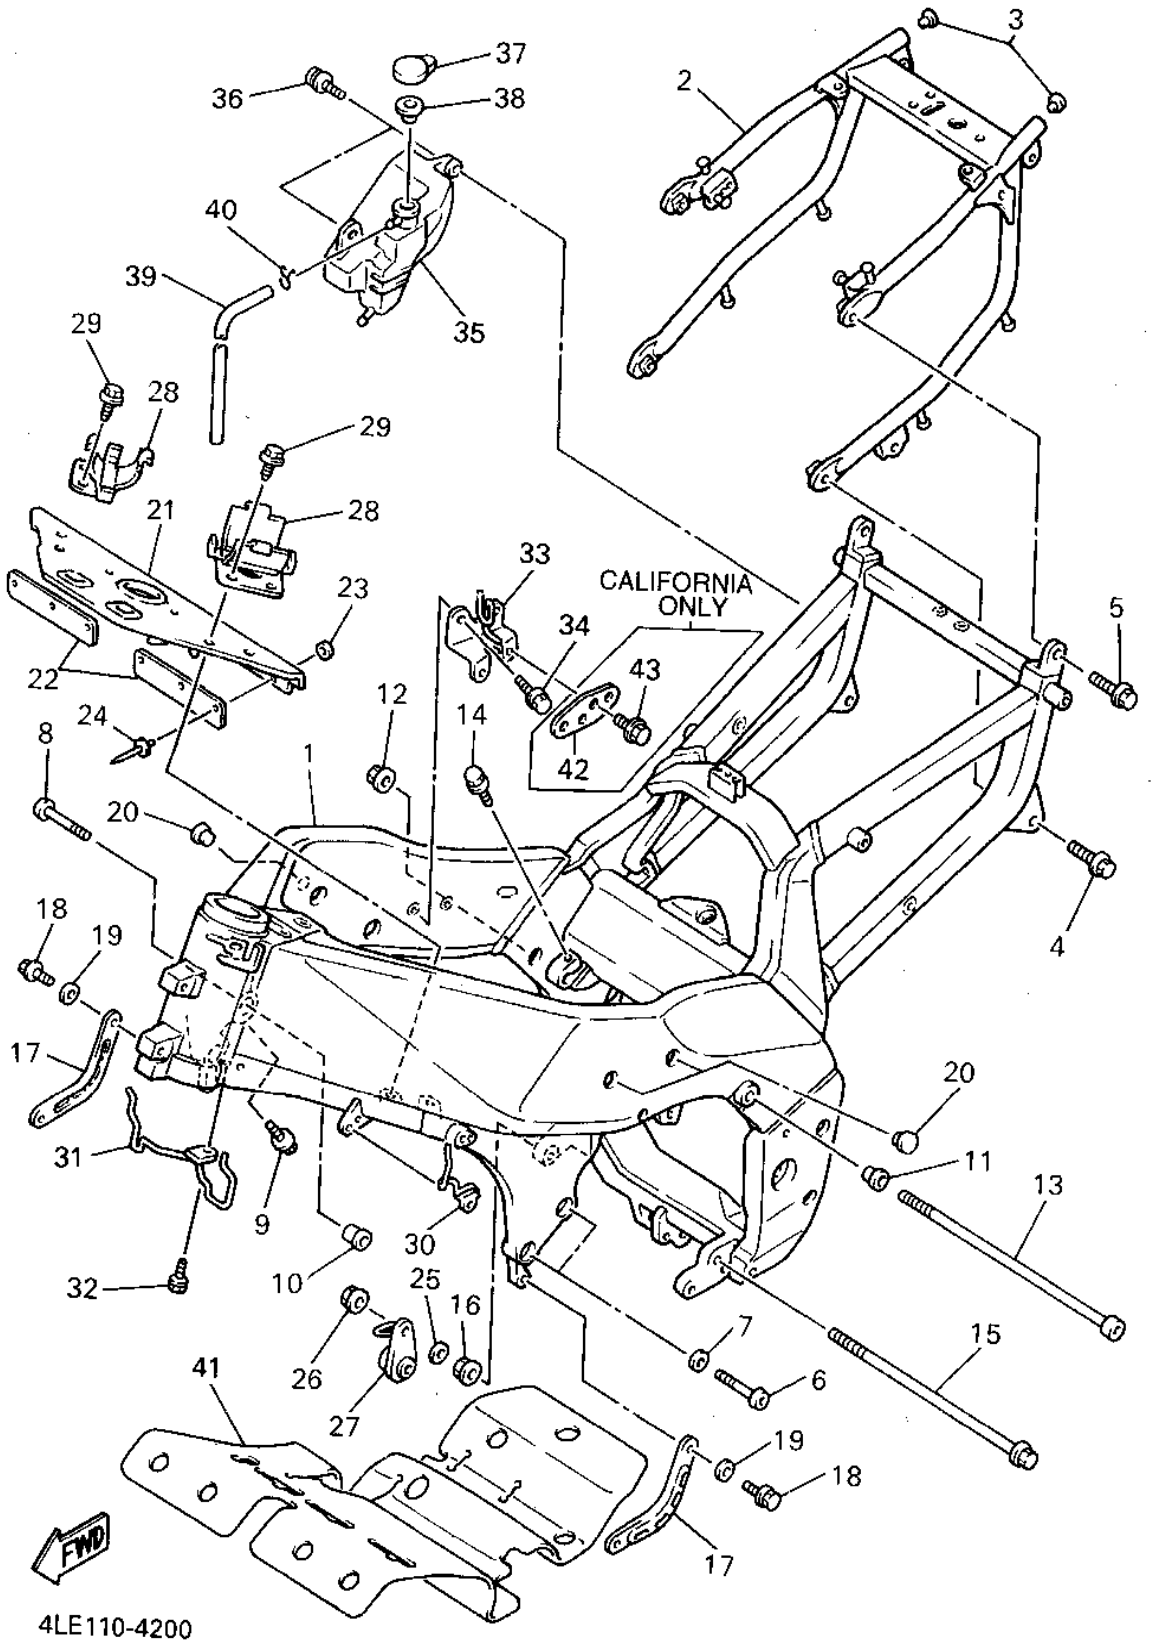

Ref. No.	Part Number	Description	Qty	Remarks
29	90119-06018-00	BOLT, WITH WASHER	4	
30	4FM-21161-01-00	HOLDER, CABLE	1	
31	4FM-21162-00-00	HOLDER, CLUTCH CABLE	1	
32	90101-06664-00	BOLT	1	
33	4FM-2116J-10-00	BRACKET 7	1	
34	95811-06016-00	BOLT, FLANGE (95822-06016)	2	
35	4FM-21871-00-00	TANK, RECOVERY	1	
36	90159-06033-00	SCREW, WITH WASHER	2	
37	4L0-21875-00-00	CAP	1	
38	1AA-21874-00-00	GASKET	1	
39	90445-084G9-00	HOSE	1	
40	90467-08003-00	CLIP	1	
41	4FM-12683-00-00	PROTECTOR, HEAT	1	
42	4FM-2116K-00-00	BRACKET 8	1	CA ONLY
43	95811-06010-00	BOLT, FLANGE	2	CA ONLY

FENDER

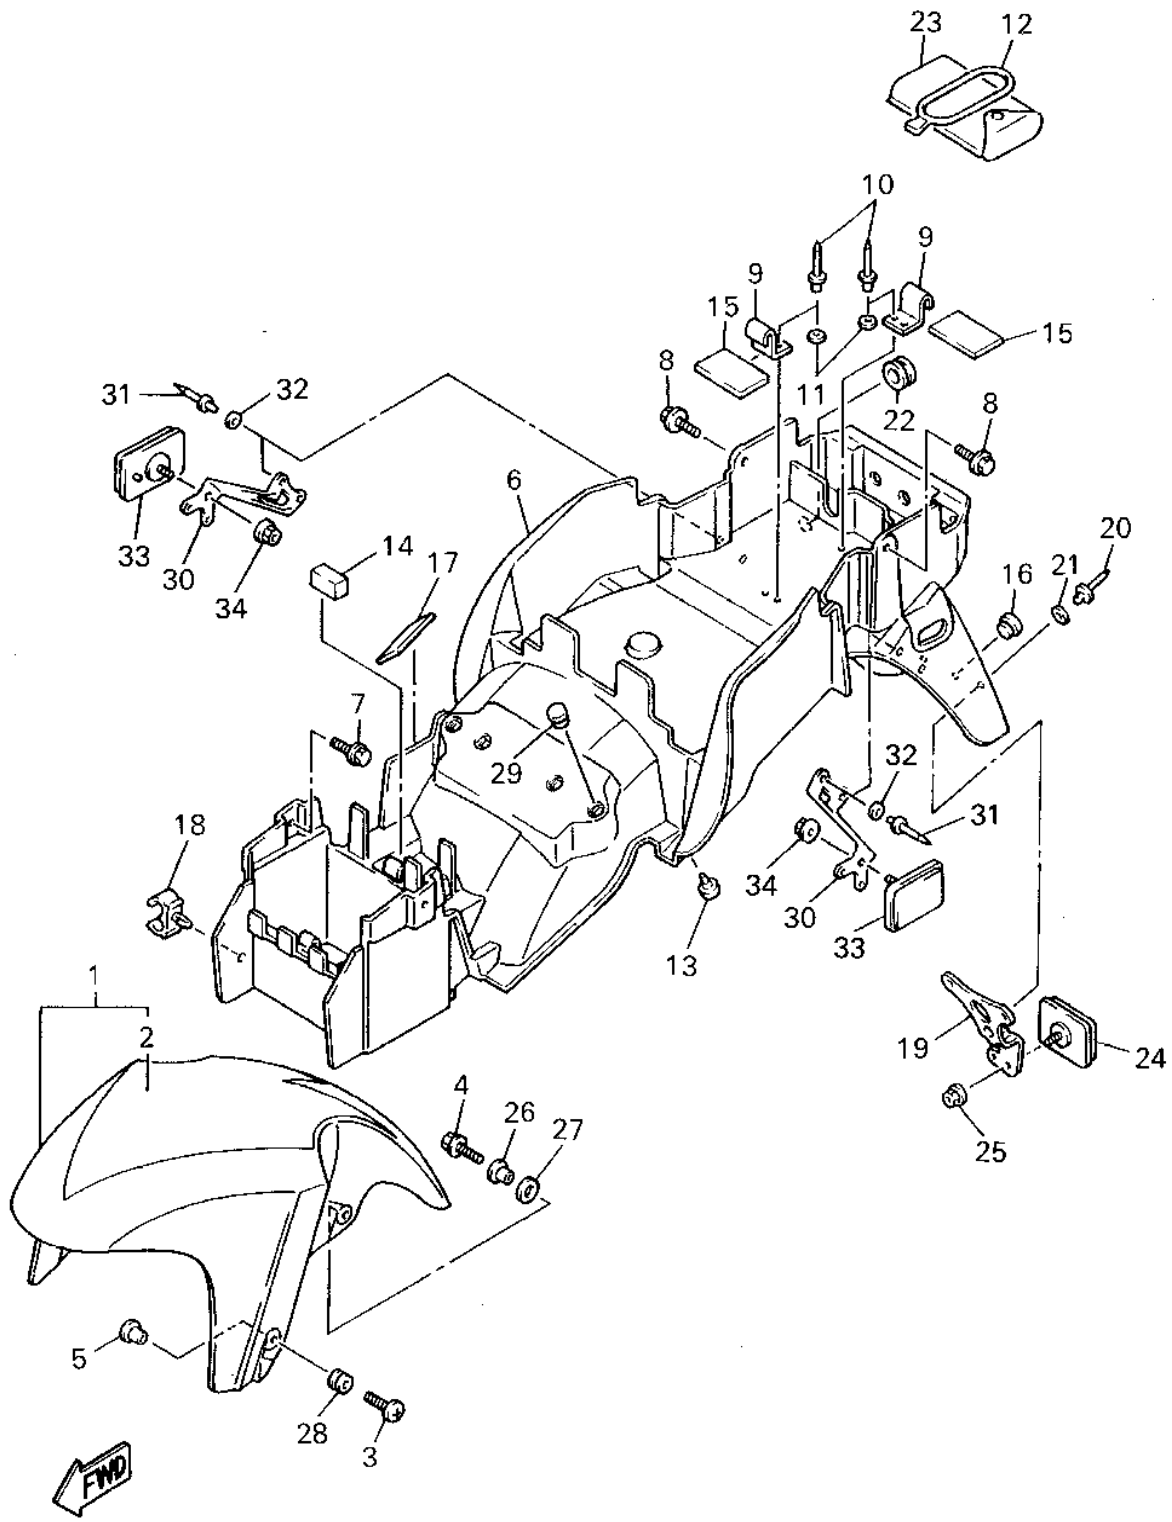


4LE110-4210

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-Y2151-01-P0	FRONT FENDER COMP.	1	BLUISH WHITE COCKTAIL 1
2	4FM-21569-20-00	. GRAPHIC 1	1	
3	90154-06061-00	SCREW, BINDING	2	
4	95811-06016-00	BOLT, FLANGE (95822-06016)	2	
5	90387-065J6-00	COLLAR	2	
6	4FM-21611-12-00	FENDER, REAR	1	
7	90119-06118-00	BOLT, WITH WASHER	2	
8	90119-06205-00	BOLT, WITH WASHER	2	
9	3VD-21366-00-00	HOOK, TOOL BAND	2	
10	90267-40054-00	RIVET, BLIND	4	
11	90201-044A2-00	WASHER, PLATE	4	
12	3YX-21376-00-00	BAND, TOOL	1	
13	35T-24724-00-00	DAMPER, SEAT	2	
14	1LJ-2414J-00-00	DAMPER, PLATE 2	1	
15	5H0-8235Y-M0-00	DAMPER, LOCATING 5 (2GH-24185-00-00)	2	
16	4G0-21639-00-00	DAMPER 2	1	
17	3XV-21778-00-00	DAMPER, LOCATING 1	1	
18	90464-09130-00	CLAMP	1	
19	4FM-85132-00-00	BRACKET, REFLECTOR 1	1	
20	90267-40076-00	RIVET, BLIND	2	
21	90201-044A2-00	WASHER, PLATE	2	
22	90480-10258-00	GROMMET	2	
23	4FM-28100-00-00	TOOL KIT	1	
24	3G1-85130-01-00	REAR REFLECTOR ASSEMBLY	1	
25	95701-05500-00	NUT, FLANGE	1	
26	90387-087L0-00	COLLAR	2	
27	4FM-28372-00-00	DAMPER	2	

CONTINUED ON NEXT FRAME ➤


FENDER

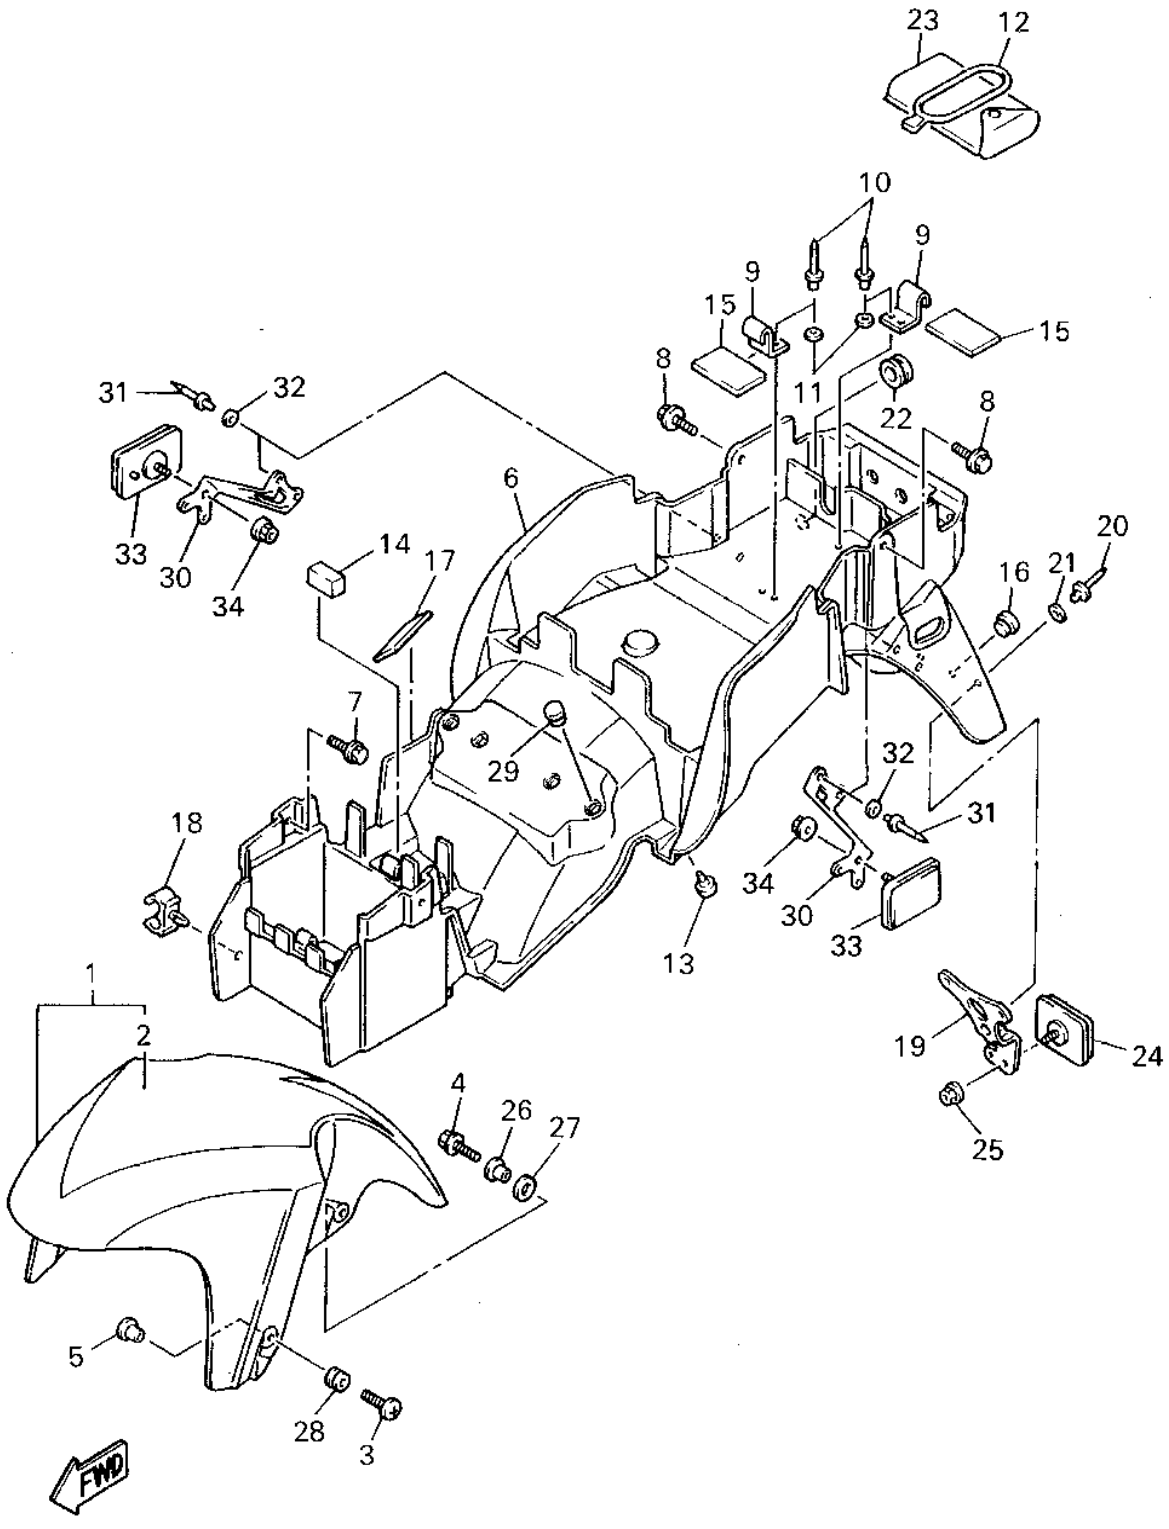

4LE110-4210


Ref. No.	Part Number	Description	Qty	Remarks
28	90480-12072-00	GROMMET	2	
29	90338-10132-00	PLUG	1	
30	4FM-21688-00-00	BRACKET, REAR STAY	2	
31	90267-40076-00	RIVET, BLIND	4	
32	90201-044A2-00	WASHER, PLATE	4	
33	3G1-85130-01-00	REAR REFLECTOR ASSEMBLY	2	
34	95701-05500-00	NUT, FLANGE	2	

SIDE COVER

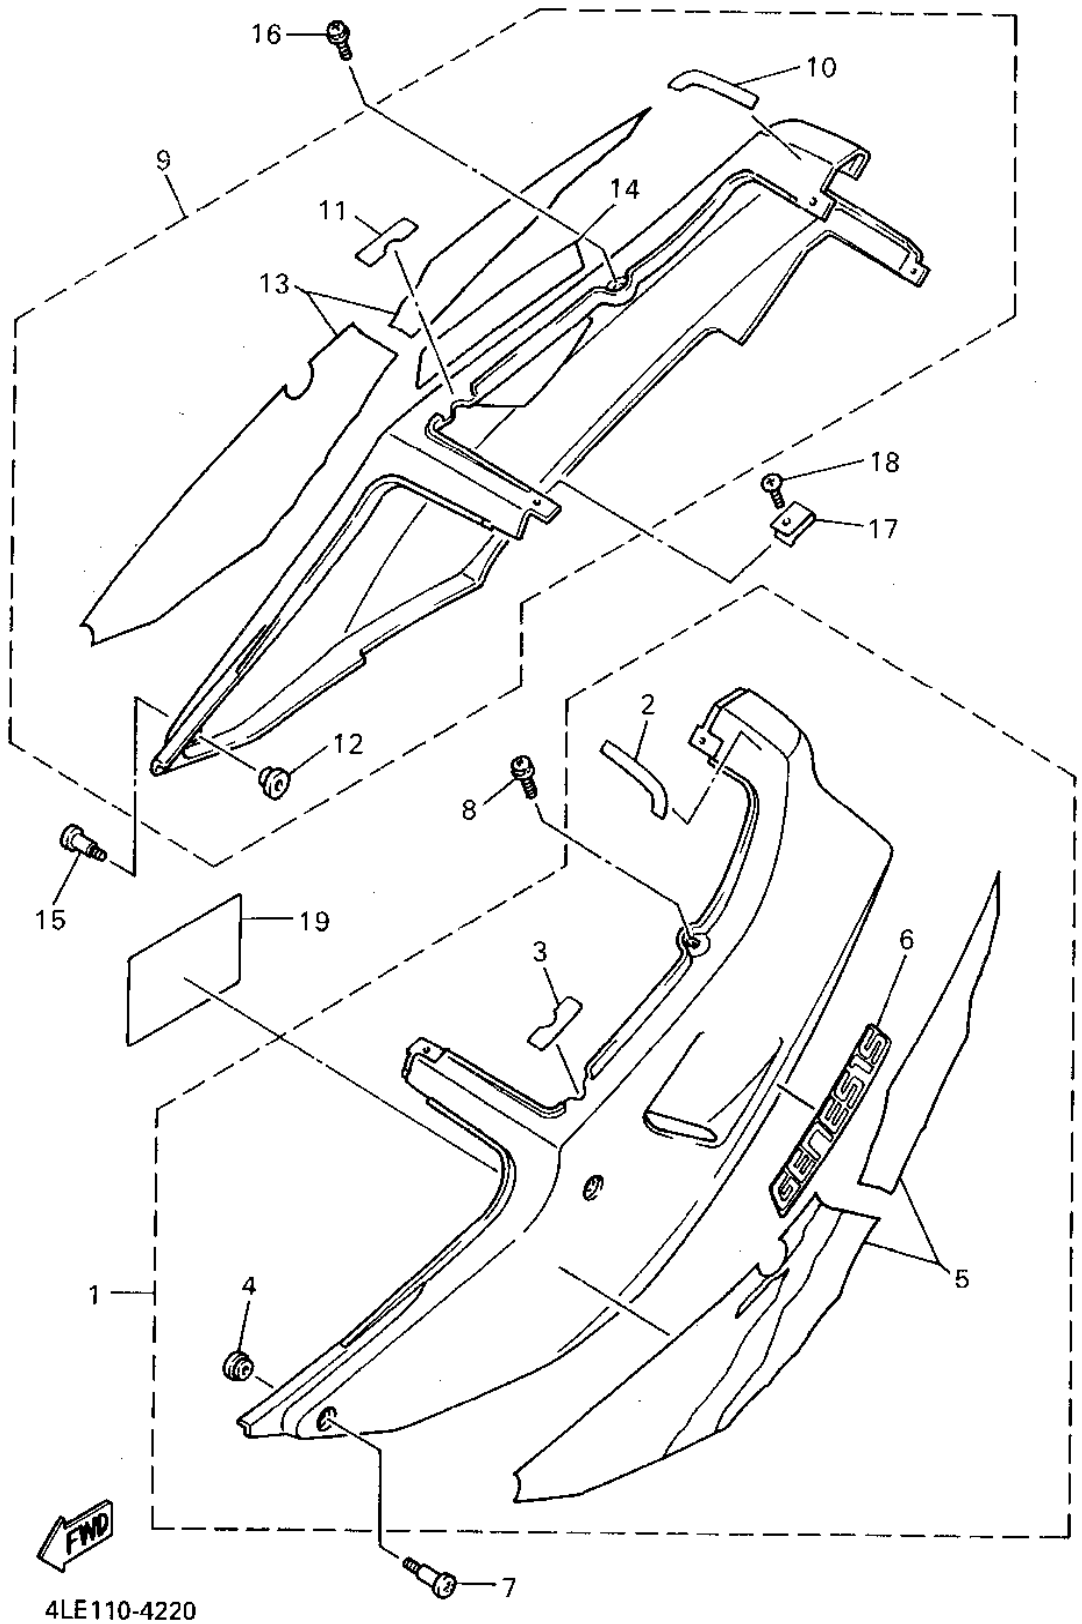

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-Y2171-41-P0	COVER, SIDE 1	1	BLUISH WHITE COCKTAIL 1
2	3GM-21575-00-00	. SEAL 1	1	
3	4FM-2173T-00-00	. TAPE 1	1	
4	90480-13398-00	. GROMMET	2	
5	4FM-2173L-20-00	. GRAPHIC SET 1	1	
6	4FM-21781-00-00	. EMBLEM 1	1	
7	90150-06036-00	SCREW, ROUND HEAD	2	
8	90159-06093-00	SCREW, WITH WASHER	1	
9	4FM-Y2172-31-P0	COVER, SIDE 2	1	BLUISH WHITE COCKTAIL 1
10	3GM-21576-00-00	. SEAL 2	1	
11	4FM-2173T-00-00	. TAPE 1	1	
12	90480-13398-00	. GROMMET	2	
13	4FM-2174L-20-00	. GRAPHIC SET 2	1	
14	4FM-21781-00-00	. EMBLEM 1	1	
15	90150-06036-00	SCREW, ROUND HEAD	2	
16	90159-06093-00	SCREW, WITH WASHER	1	
17	90183-04064-00	NUT, SPRING	3	
18	97706-40010-00	SCREW, TAPPING	3	
19	4LE-2179R-00-00	PLATE, EPA 2	1	UR CA ONLY
	4LE-2179V-00-00	PLATE, EPA 1	1	UR NON CA

REAR ARM

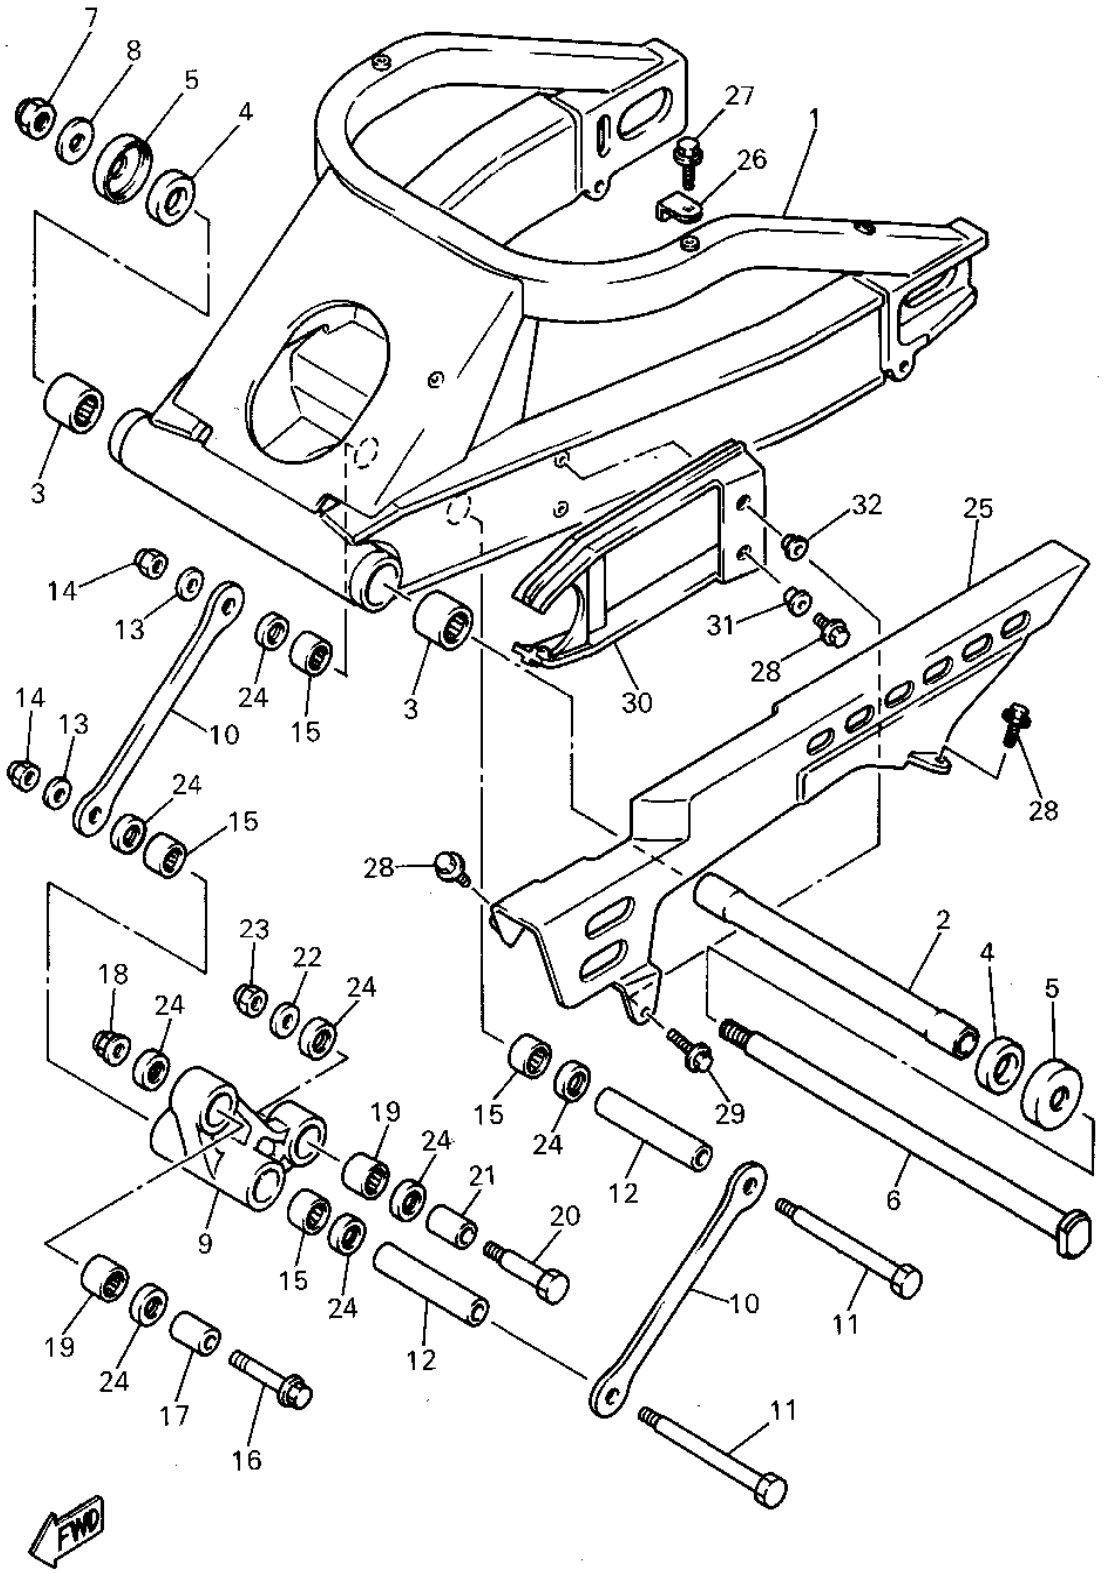


4HD300-3230

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-22110-00-00	REAR ARM COMP.	1	
2	3FV-22184-00-00	BUSH	1	
3	93315-42523-00	BEARING	2	
4	93342-22502-00	BEARING, THRUST	2	
5	3FV-22128-00-00	COVER, THRUST 1	2	
6	3GM-22141-00-00	SHAFT, PIVOT	1	
7	90185-18104-00	NUT, SELF-LOCKING	1	
8	90201-18264-00	WASHER, PLATE	1	
9	4FM-2217A-00-00	ARM, RELAY	1	
10	4BH-2217M-00-00	ARM 1	2	
11	90101-10658-00	BOLT	2	
12	90387-122R5-00	COLLAR	2	
13	90201-101J1-00	WASHER, PLATE	2	
14	95611-10100-00	NUT, U	2	
15	93317-21746-00	BEARING	4	
16	90105-10376-00	BOLT, WASHER BASED	1	
17	90387-102R4-00	COLLAR	1	
18	95611-10200-00	NUT, SELF-LOCKING	1	
19	93317-31771-00	BEARING	2	
20	90101-10659-00	BOLT	1	
21	90387-127W0-00	COLLAR	1	
22	90201-101J1-00	WASHER, PLATE	1	
23	95611-10100-00	NUT, U	1	
24	93109-17048-00	OIL SEAL (SDO 17-24-4)	8	
25	4FM-22311-00-00	CASE, CHAIN	1	
26	4FM-2213J-00-00	STAY, CHAIN CASE	1	
27	90105-06707-00	BOLT (95023-06016-00)	1	
28	90119-06088-00	BOLT, WITH WASHER	3	
29	90119-06163-00	BOLT, WITH WASHER	1	

CONTINUED ON NEXT FRAME ➤


REAR ARM

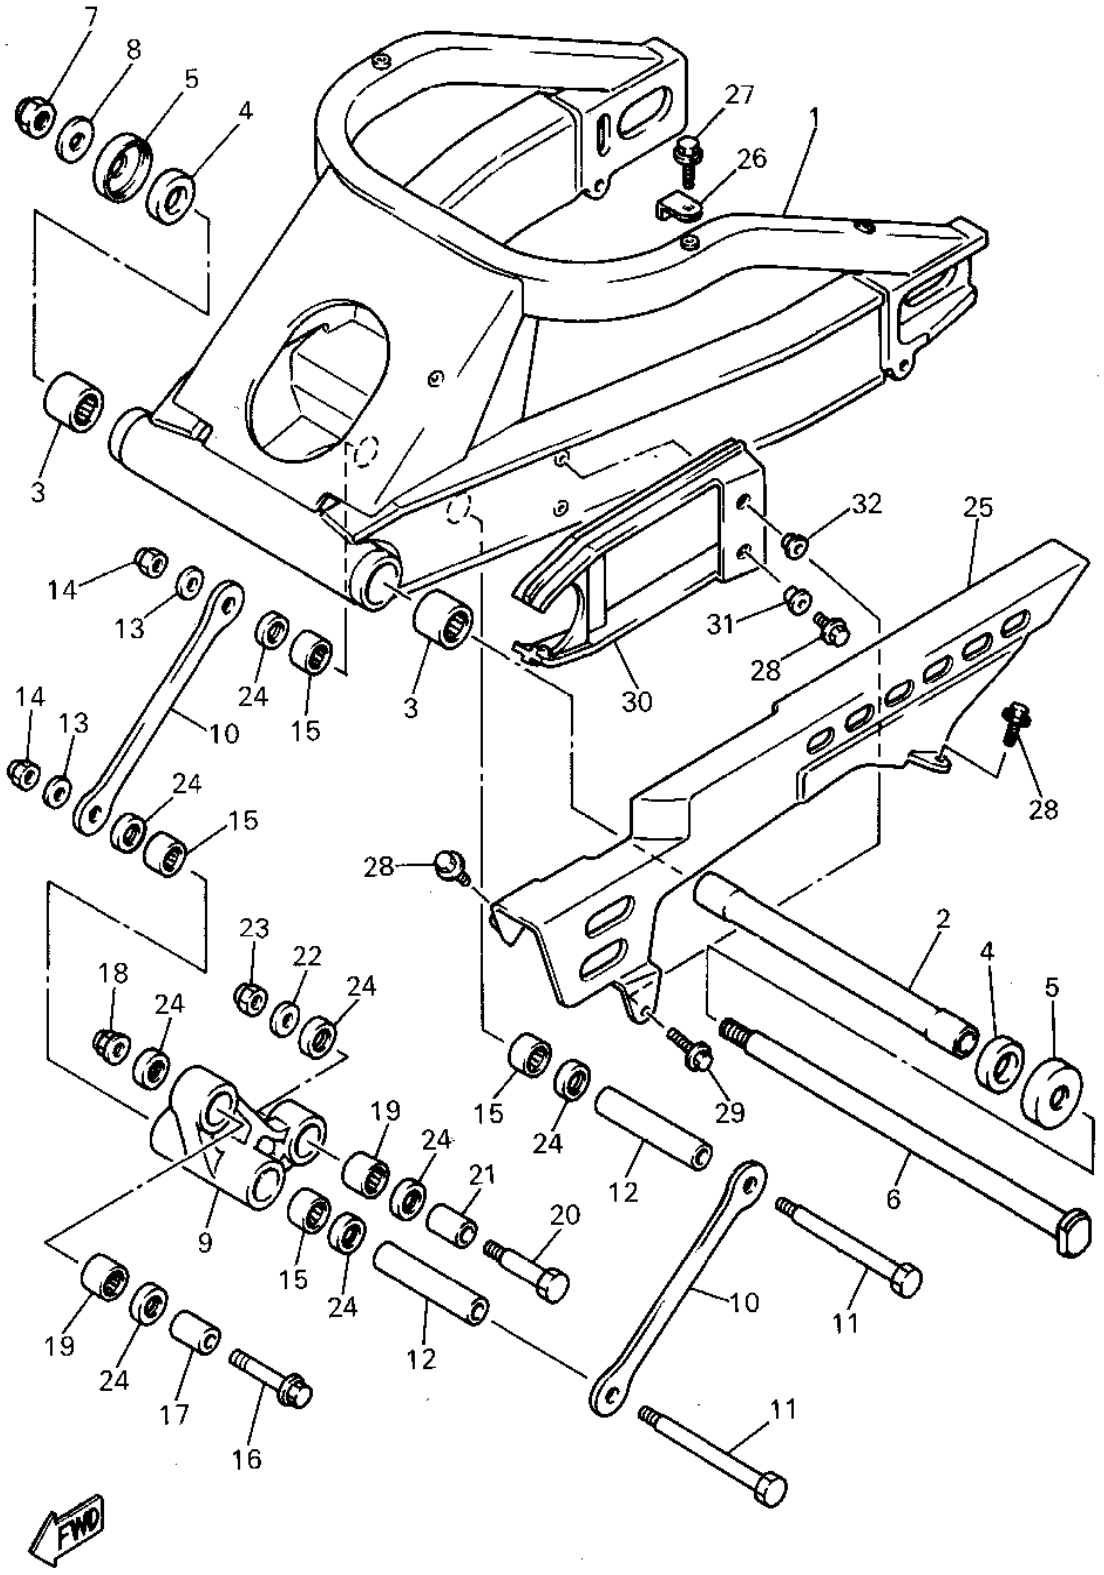

4HD300-3230

Ref. No.	Part Number	Description	Qty	Remarks
30	4FM-22151-01-00	SEAL, GUARD	1	
31	90387-06704-00	COLLAR	1	
32	90387-06681-00	COLLAR	1	


REAR SUSPENSION

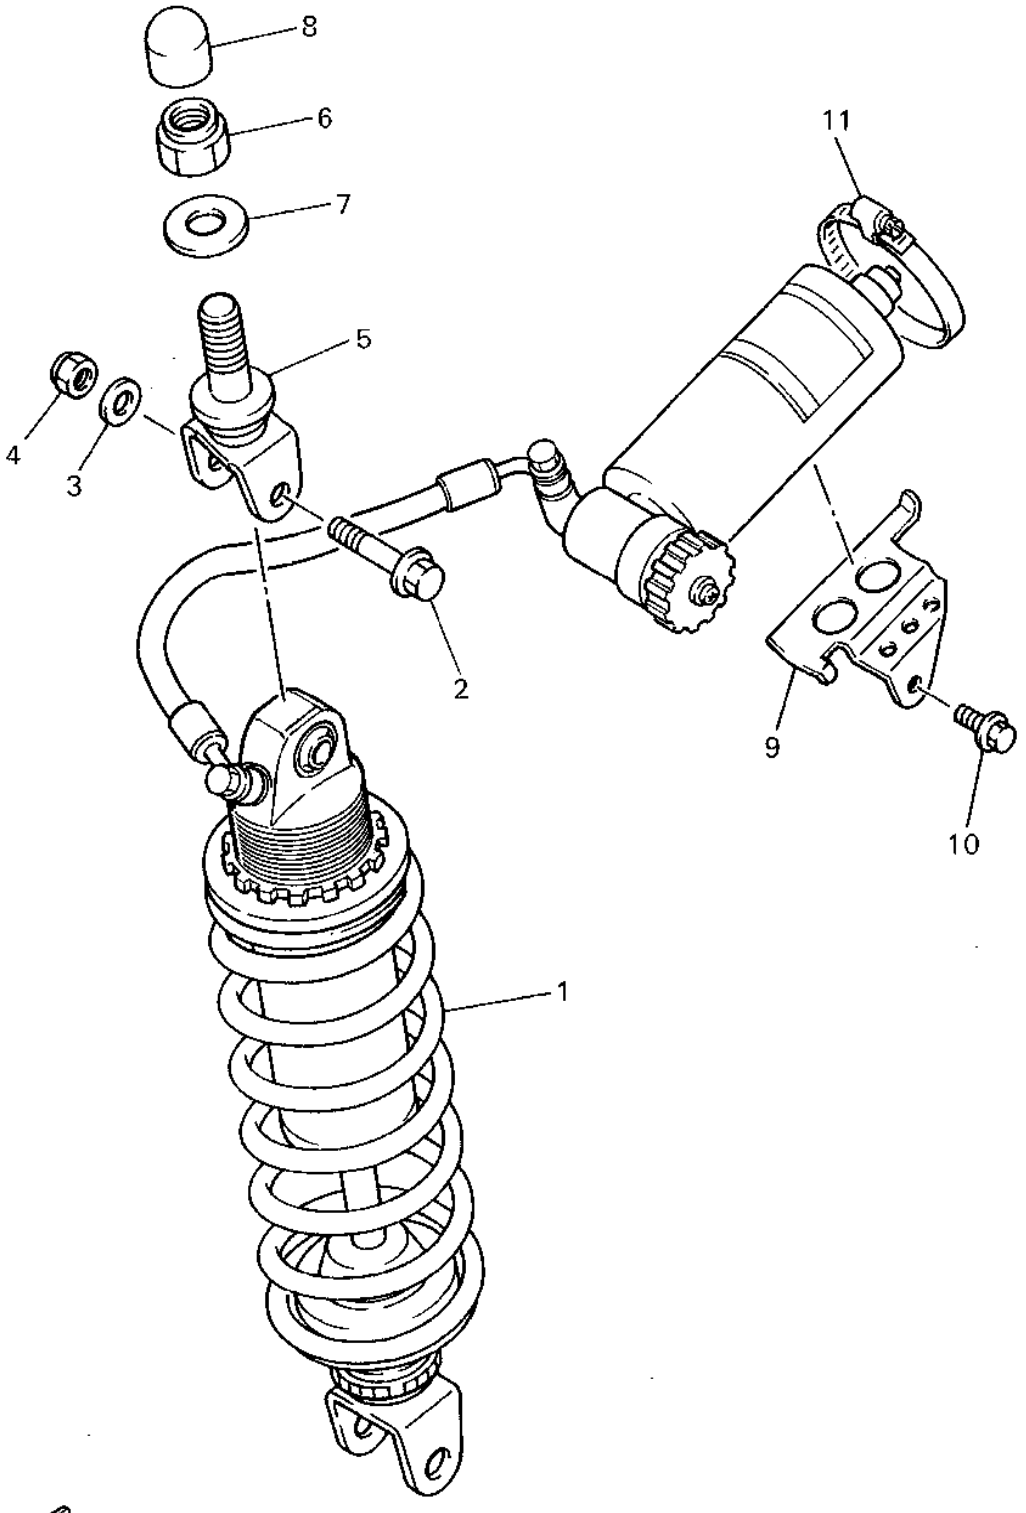

4LE110-4240

Ref. No.	Part Number	Description	Qty	Remarks
1	4LE-22210-00-00	SHOCK ABSORBER ASSEMBLY, REAR	1	
2	90105-10402-00	BOLT, WASHER BASED	1	
3	90201-101J1-00	WASHER, PLATE	1	
4	95611-10100-00	NUT, U	1	
5	4FM-22219-00-00	BRACKET, UPPER	1	
6	90185-16127-00	NUT, SELF-LOCKING	1	
7	90201-164H4-00	WASHER, PLATE	1	
8	478-25335-00-00	CAP	1	
9	4FM-22262-00-00	HOLDER, SUB TANK	1	
10	95811-06016-00	BOLT, FLANGE (95822-06016)	1	
11	90450-32008-00	HOSE CLAMP ASSEMBLY	1	


STEERING

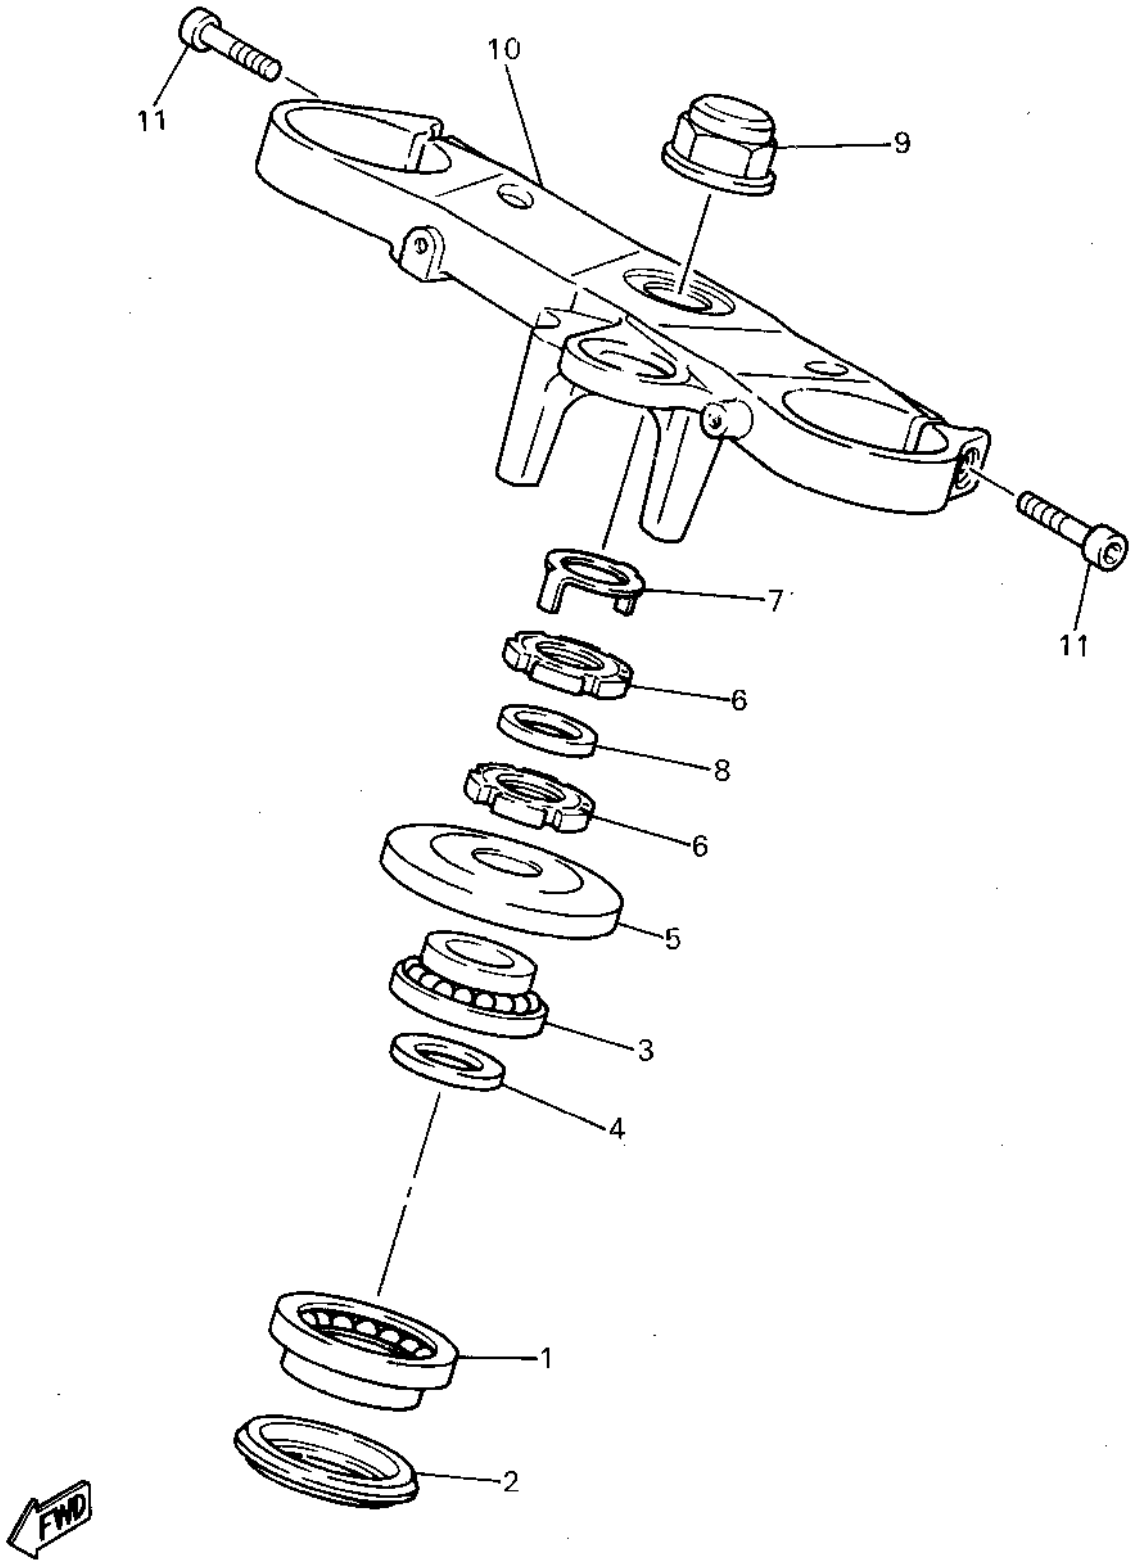

4HD300-3250

Ref. No.	Part Number	Description	Qty	Remarks
1	93399-99932-00	BEARING	1	
2	3FV-23462-00-00	SEAL, STEERING	1	
3	93399-99931-00	BEARING	1	
4	90202-24190-00	WASHER, PLATE	1	
5	3GM-23415-00-00	COVER, BALL RACE 1	1	
6	90179-25615-00	NUT	2	
7	3YF-23418-00-00	WASHER, SPECIAL	1	
8	90202-26142-00	WASHER, PLATE	1	
9	90176-22050-00	NUT, CROWN	1	
10	4FM-23435-00-00	CROWN, HANDLE	1	
11	91311-08030-00	BOLT	2	


FRONT FORK

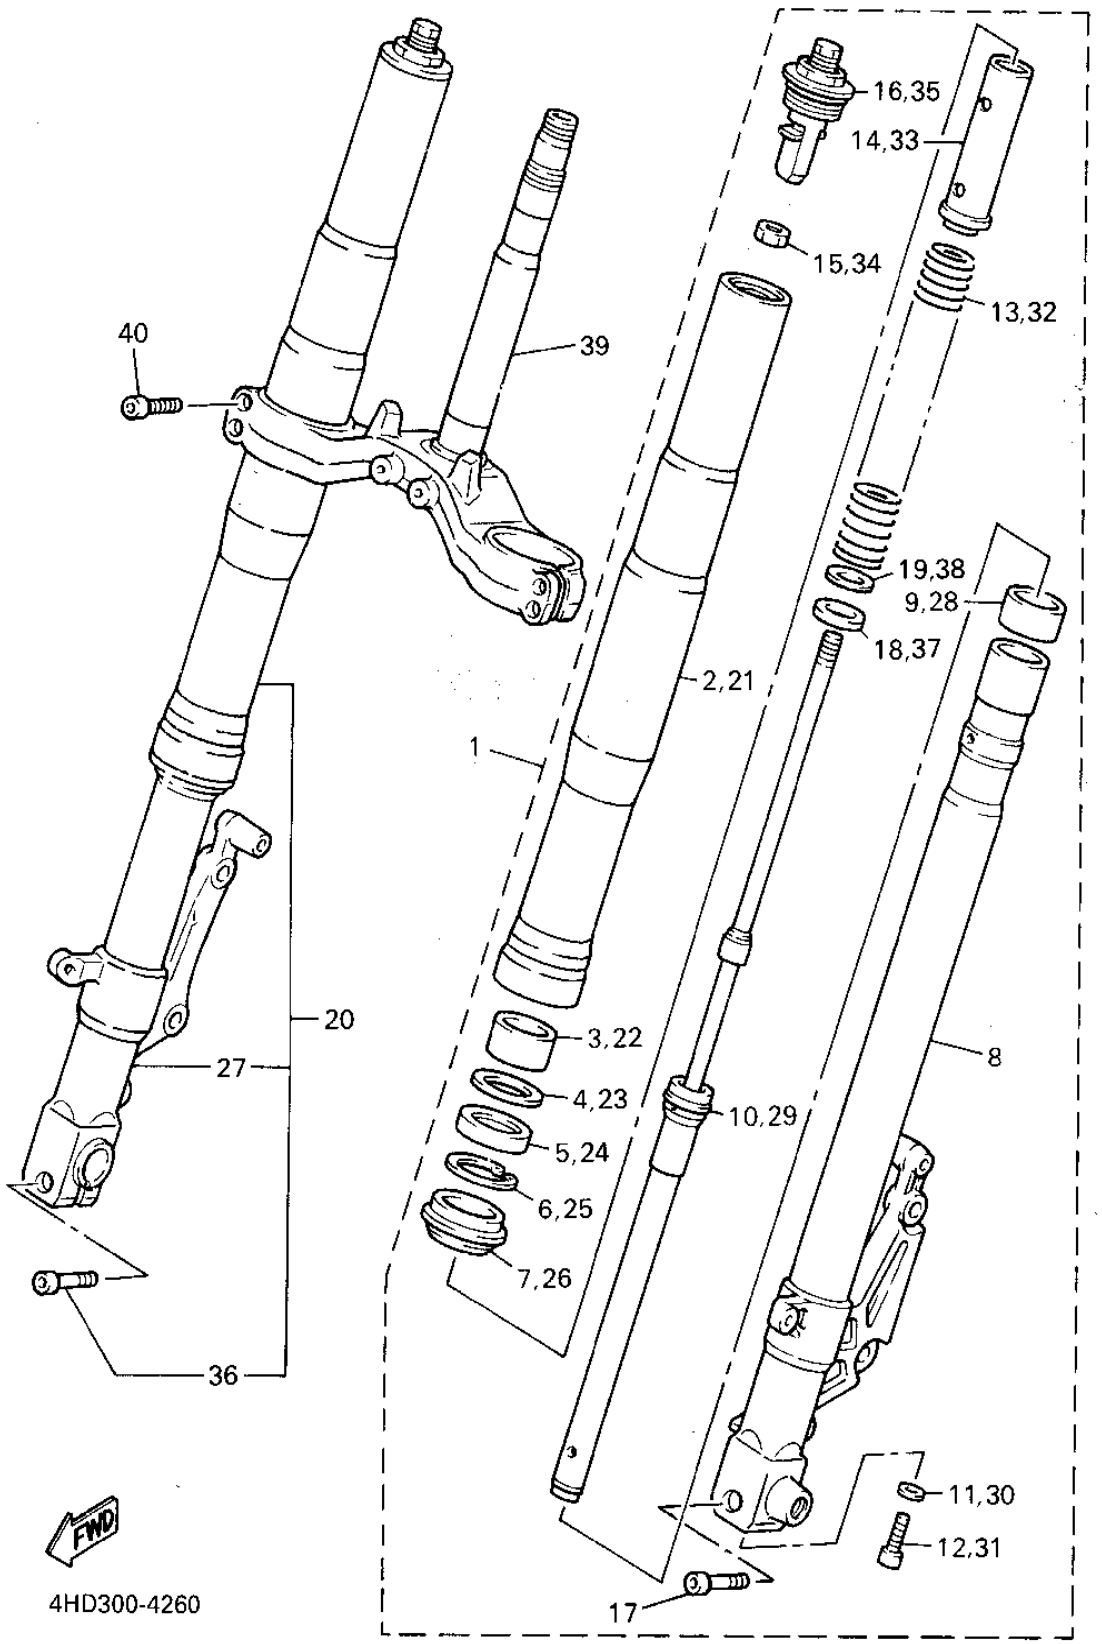

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-23102-20-00	FRONT FORK ASSEMBLY (L.H)	1	
2	4FM-23136-20-00	. TUBE, OUTER (RIGHT)	1	
3	3GM-23125-50-00	. METAL, SLIDE 1	1	
4	36Y-23146-10-00	. WASHER, OIL SEAL	1	
5	3SP-23145-L0-00	. OIL SEAL	1	
6	26H-23156-00-00	. CLIP, OIL SEAL	1	
7	3XV-23144-50-00	. SEAL, DUST	1	
8	4FM-23110-20-00	. INNER TUBE COMP 1	1	
9	3JD-23171-L0-00	. METAL, SLIDE	1	
10	4FM-23170-20-00	. CYLINDER COMP., FRONT FORK	1	
11	2K8-23158-L0-00	. GASKET	1	
12	3LC-23181-00-00	. BOLT, HEXAGON SOCKET HEAD	1	
13	4FM-23141-00-00	. SPRING, FRONT FORK	1	
14	4FM-23118-00-00	. SPACER	1	
15	3XJ-23357-L0-00	. NUT	1	
16	4FM-23111-10-00	. BOLT, CAP	1	
17	91311-08040-00	. BOLT, SOCKET HEAD	1	
18	4FM-23159-00-00	. WASHER, SPRING, LOWER	1	
19	4FM-23165-00-00	. WASHER, FELT	1	
20	4FM-23103-20-00	FRONT FORK ASSEMBLY (R.H)	1	
21	4FM-23136-20-00	. TUBE, OUTER (RIGHT)	1	
22	3GM-23125-50-00	. METAL, SLIDE 1	1	
23	36Y-23146-10-00	. WASHER, OIL SEAL	1	
24	3SP-23145-L0-00	. OIL SEAL	1	
25	26H-23156-00-00	. CLIP, OIL SEAL	1	
26	3XV-23144-50-00	. SEAL, DUST	1	
27	4FM-23120-20-00	. INNER TUBE COMP. 2	1	


CONTINUED ON NEXT FRAME ➤

FRONT FORK

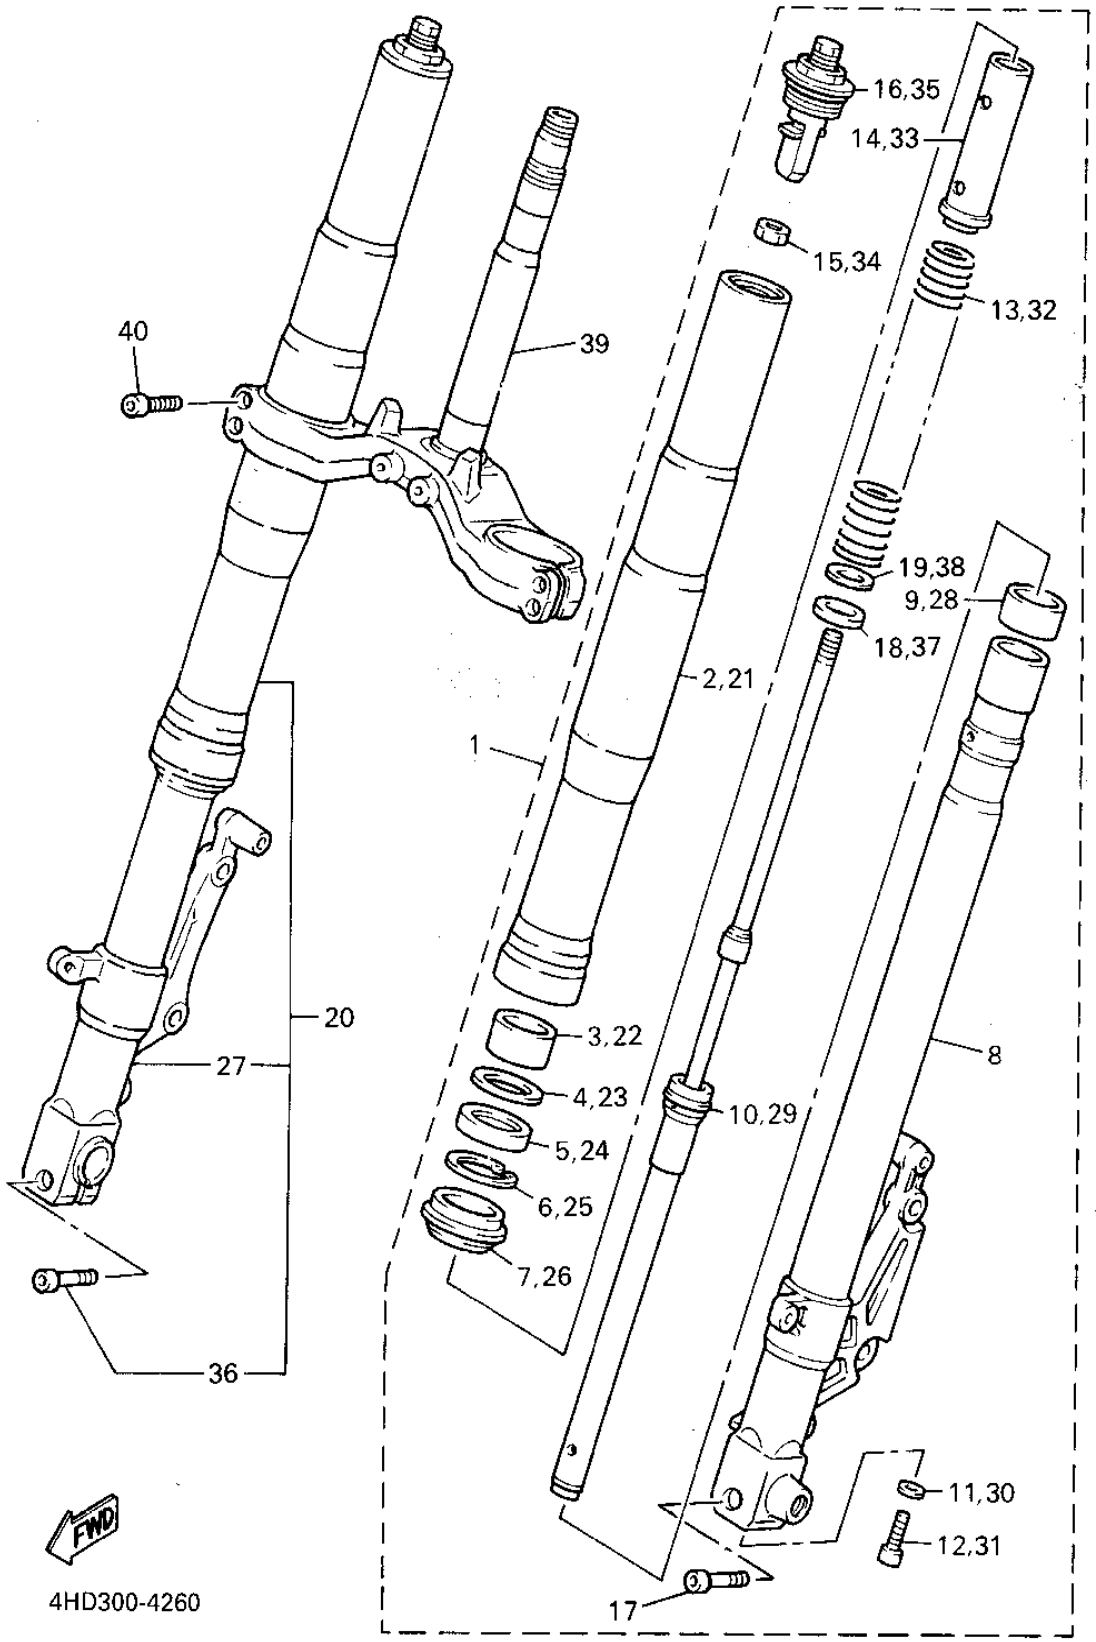

Ref. No.	Part Number	Description	Qty	Remarks
28	3JD-23171-L0-00	. METAL, SLIDE	1	
29	4FM-23170-20-00	. CYLINDER COMP., FRONT FORK	1	
30	2K8-23158-L0-00	. GASKET	1	
31	3LC-23181-00-00	. BOLT, HEXAGON SOCKET HEAD	1	
32	4FM-23141-00-00	. SPRING, FRONT FORK	1	
33	4FM-23118-00-00	. SPACER	1	
34	3XJ-23357-L0-00	. NUT	1	
35	4FM-23111-10-00	. BOLT, CAP	1	
36	91311-08040-00	. BOLT, SOCKET HEAD	1	
37	4FM-23159-00-00	. WASHER, SPRING, LOWER	1	
38	4FM-23165-00-00	. WASHER, FELT	1	
39	4FM-23340-00-00	UNDER BRACKET COMP.	1	
40	91311-08030-00	BOLT	4	

FUEL TANK

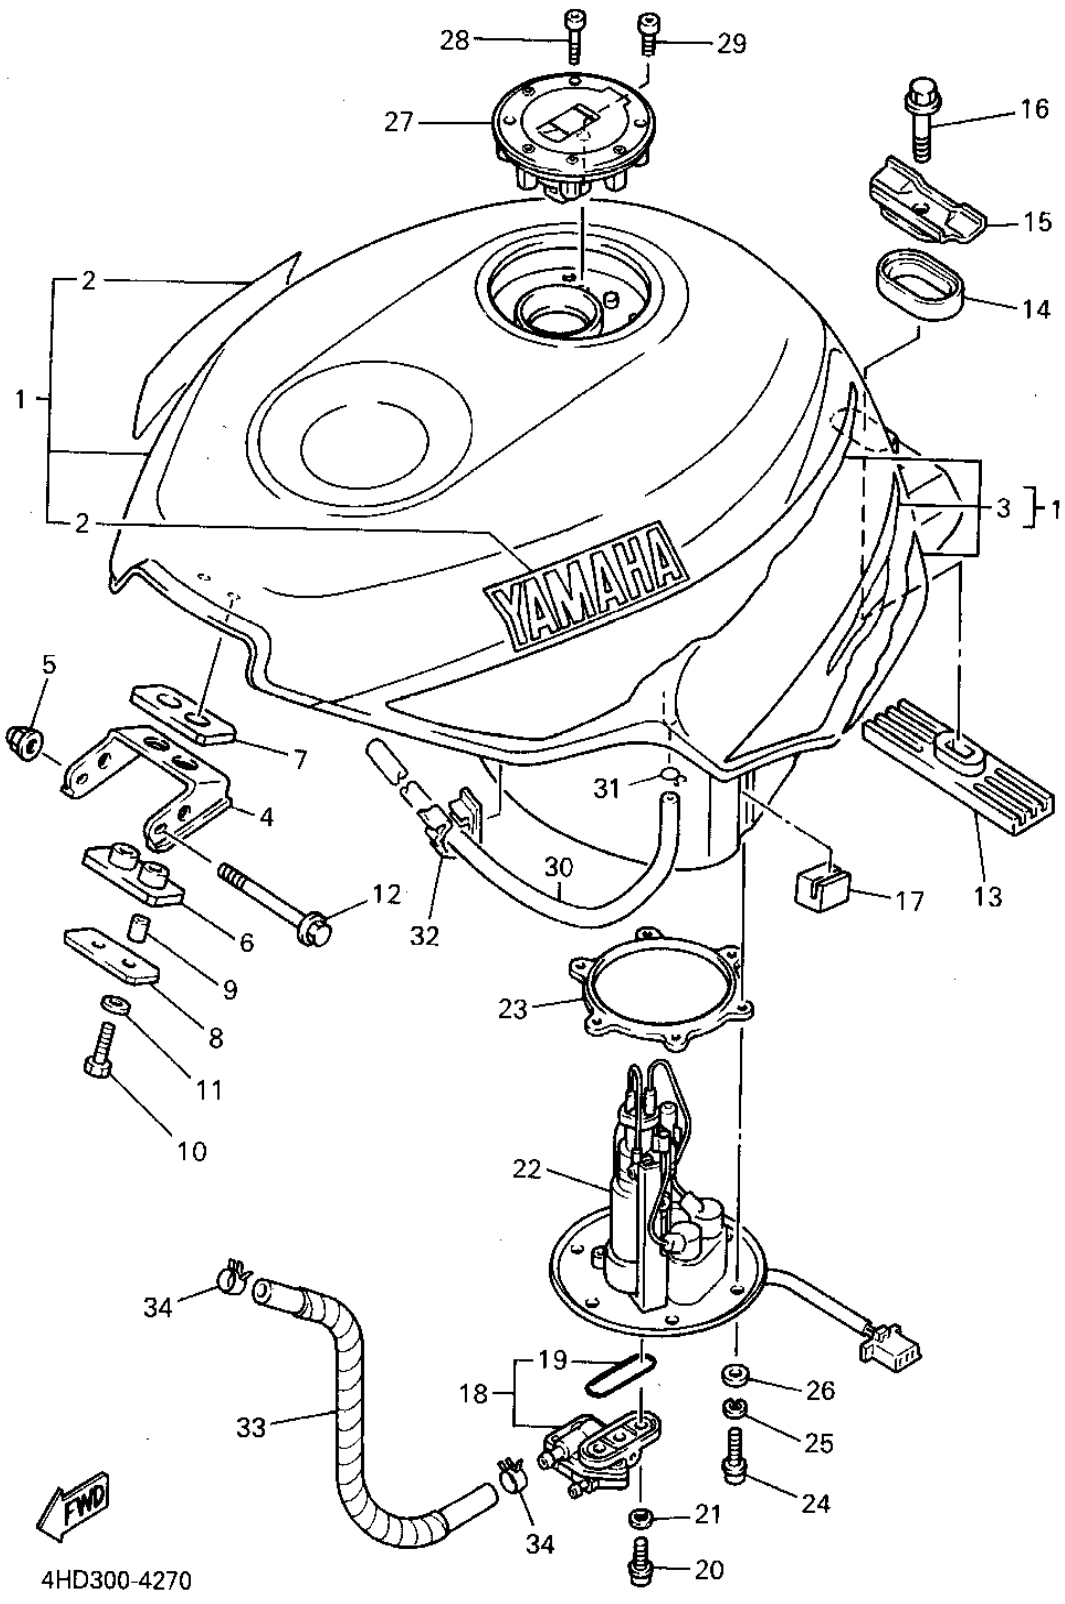


4HD300-4270

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-24110-30-01	FUEL TANK COMP.	1	BLUISH WHITE COCKTAIL 1/ DEEP VIOLET METALLIC 1
2	99226-00160-00	. EMBLEM, YAMAHA	2	
3	4FM-24240-01-00	. GRAPHIC SET	1	
4	4FM-24191-00-00	BRACKET, FUEL TANK 1	1	
5	90176-06055-00	NUT, CROWN	1	
6	2GH-24181-00-00	DAMPER, LOCATING 1	1	
7	2GH-24183-00-00	DAMPER, LOCATING 3	1	
8	2GH-24186-00-00	WASHER, SPECIAL	1	
9	90387-06553-00	COLLAR	2	
10	97011-06025-00	BOLT (97001-06025)	2	
11	92995-06100-00	WASHER, SPRING	2	
12	95816-06075-00	BOLT, FLANGE	1	
13	2GH-24184-00-00	DAMPER, LOCATING 4	1	
14	3Y6-24183-00-00	DAMPER, LOCATING 3	1	
15	4FM-24187-00-00	WASHER, SPECIAL	1	
16	95811-08016-00	BOLT, FLANGE	1	
17	4JH-24183-00-00	DAMPER, LOCATING 3	2	
18	3FV-24500-01-00	FUEL COCK ASSEMBLY 1 . . .	1	
19	4X8-24512-00-00	. O-RING	1	
20	90149-06008-00	SCREW	2	
21	90202-05187-00	WASHER, PLATE	2	
22	4FM-13910-00-00	FUEL PUMP ASSEMBLY	1	
23	4FM-2414G-00-00	SEAL	1	
24	98580-05016-00	SCREW, PAN HEAD	6	
25	92990-05100-00	WASHER, SPRING	6	
26	92901-05600-00	WASHER, PLATE	6	
27	4FM-24602-00-00	CAP ASSEMBLY	1	

CONTINUED ON NEXT FRAME ➤


FUEL TANK

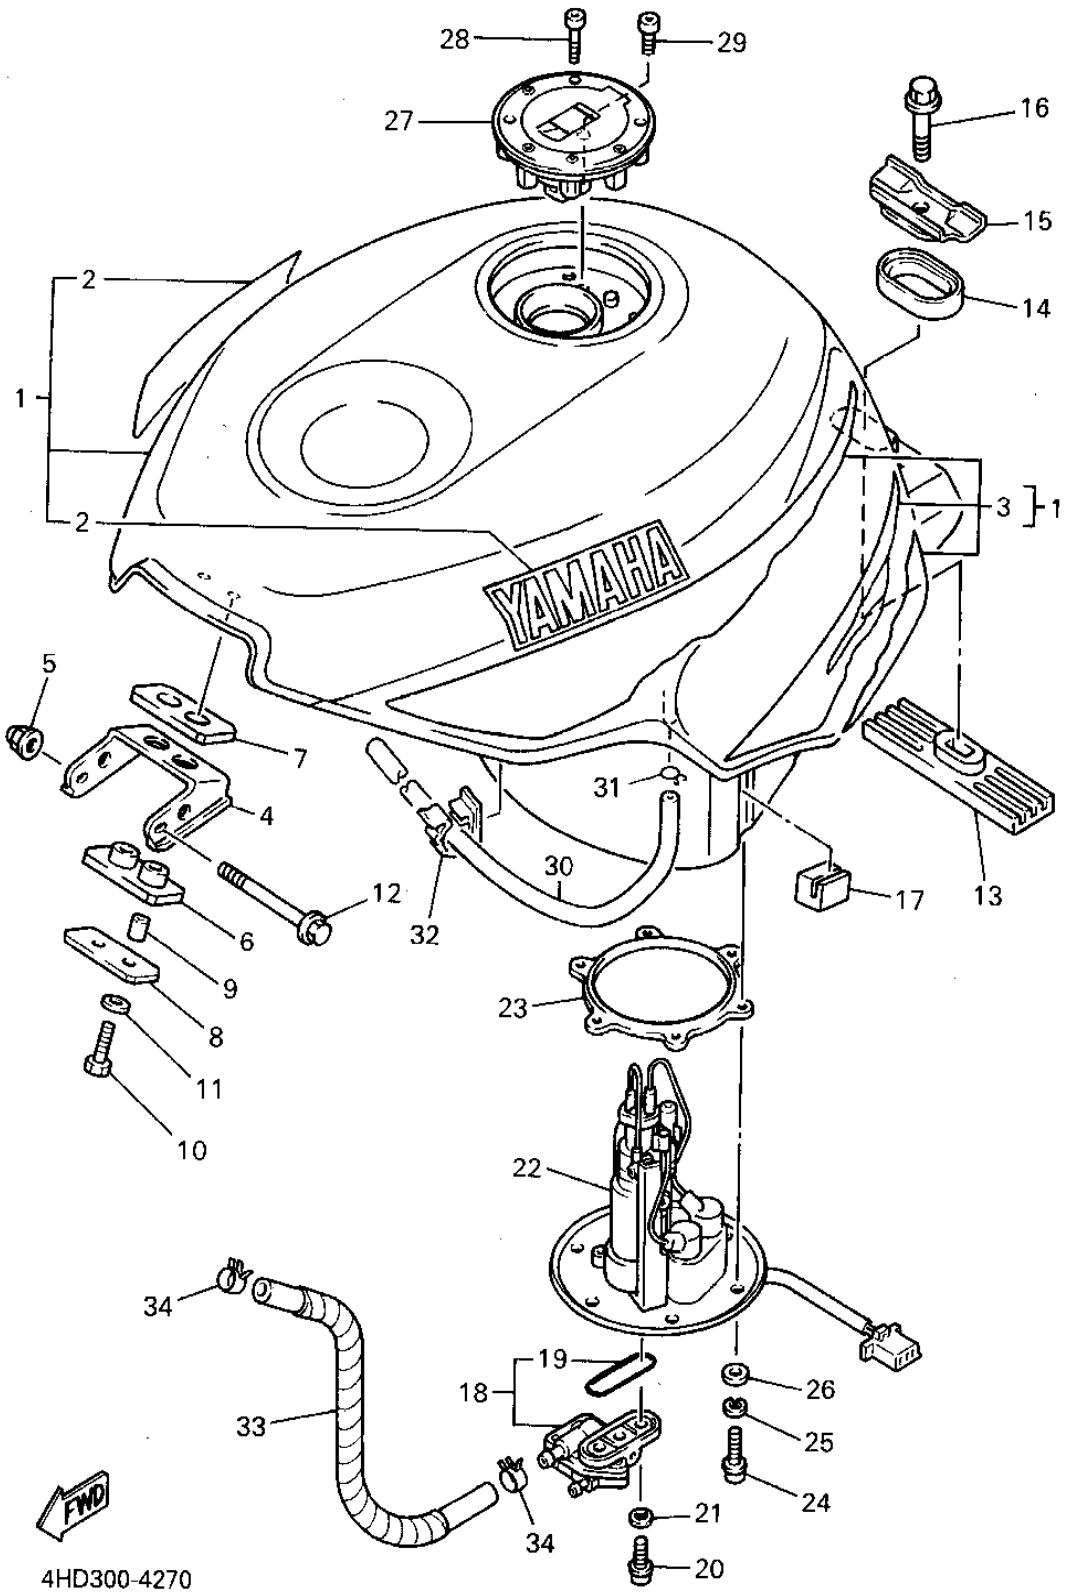

4HD300-4270

Ref. No.	Part Number	Description	Qty	Remarks
28	90110-05112-00	BOLT, HEXAGON SOCKET HEAD	3	
29	91311-05010-00	BOLT, SOCKET HEAD	1	
30	90445-102G7-00	HOSE	1	
31	90467-09006-00	CLIP	1	
32	90464-25160-00	CLAMP	1	
33	3FV-14294-02-00	HOSE	1	
34	90467-13123-00	CLIP	2	


SEAT

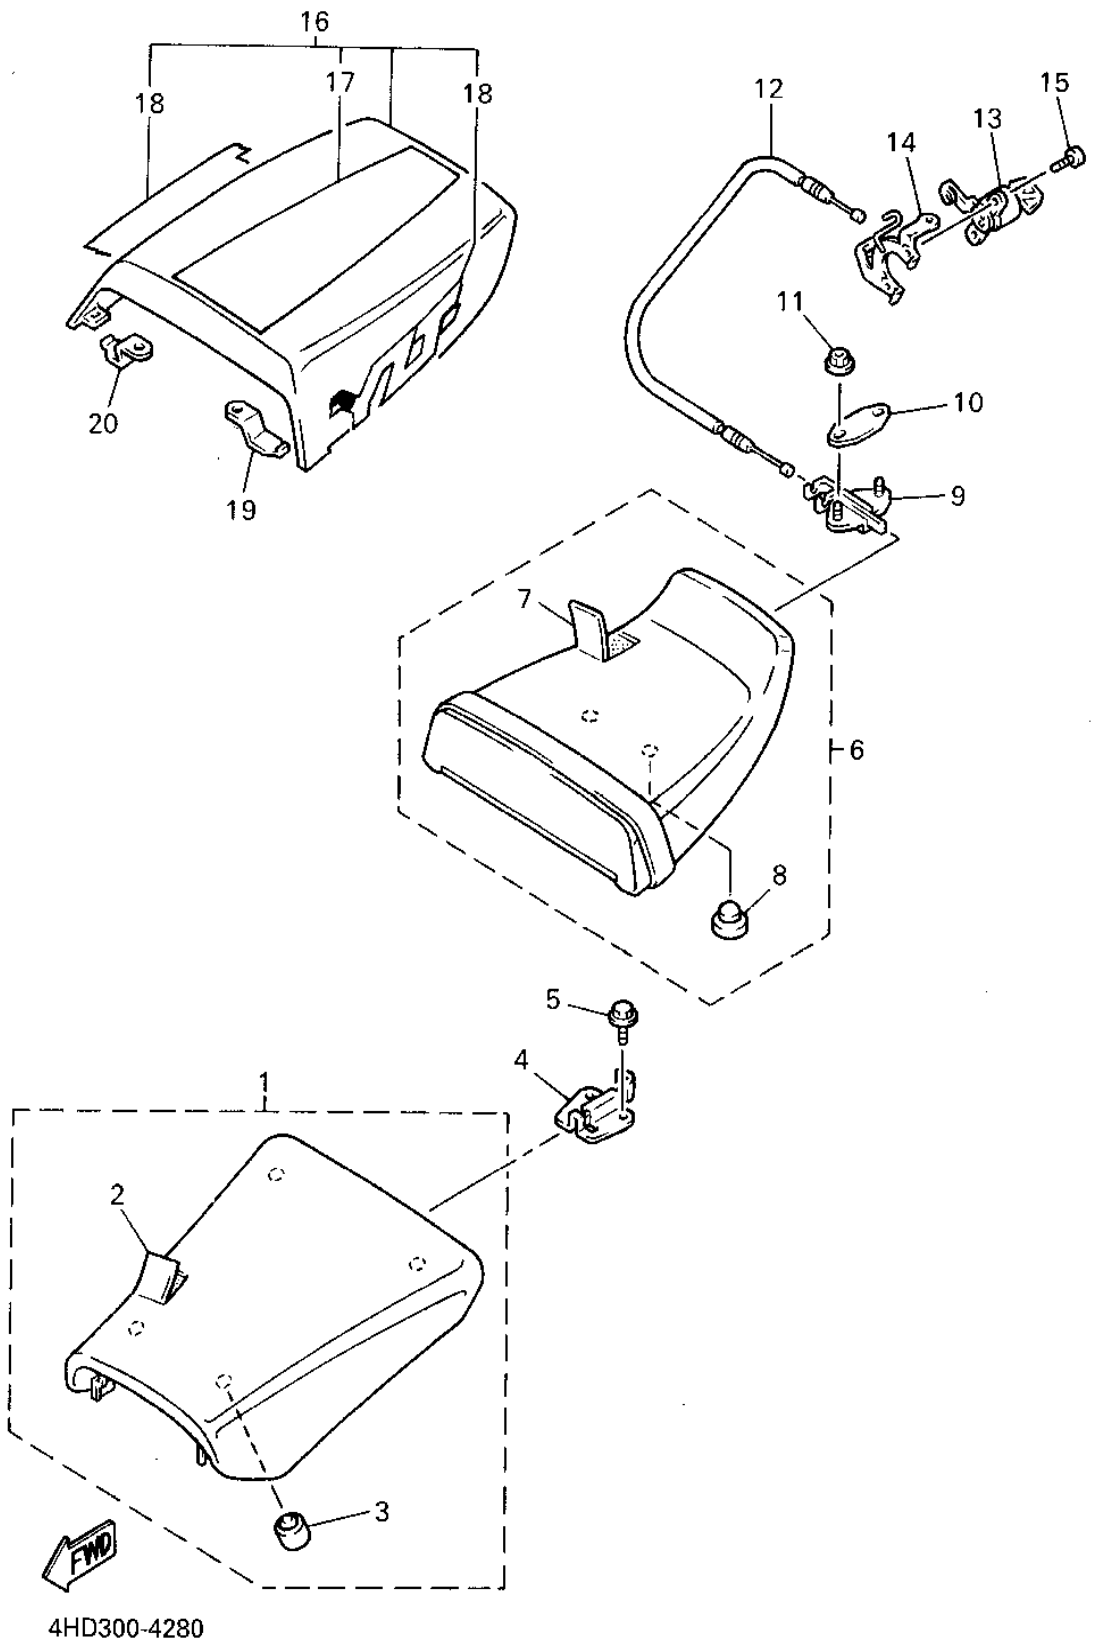

4HD300-4280

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-24710-01-00	SINGLE SEAT ASSEMBLY	1	
2	4FM-24711-00-00	. COVER, SINGLE SEAT	1	
3	4FM-24724-00-00	. DAMPER, SEAT	4	
4	4FM-24780-00-00	SEAT LOCK ASSEMBLY	1	
5	91002-06016-00	BOLT, FLANGE	2	
6	4FM-24750-00-00	TANDEM SEAT ASSEMBLY	1	
7	4FM-24751-00-00	. COVER, TANDEM SEAT	1	
8	509-24724-00-00	. DAMPER, SEAT	2	
9	4BP-24780-00-00	SEAT LOCK ASSEMBLY	1	
10	4BP-24792-00-00	PLATE	1	
11	95701-06500-00	NUT, FLANGE	2	
12	4FM-2478E-00-00	CABLE, SEAT LOCK	1	
13	3CK-W2470-00-00	SEAT LOCK ASSEMBLY	1	
14	4FM-2117K-00-00	STAY, LOCK	1	
15	90149-06308-00	SCREW	2	
16	4FM-Y2479-20-P0	COVER, SEAT	1	BLUISH WHITE COCKTAIL 1
17	4FM-2478M-00-00	. GRAPHIC, SEAT	1	
18	4FM-24786-00-00	. EMBLEM	2	
19	4FM-2475J-00-00	BRACKET, SEAT LEVER 2	1	
20	4FM-2475H-00-00	BRACKET, SEAT LEVER 1	1	


FRONT WHEEL

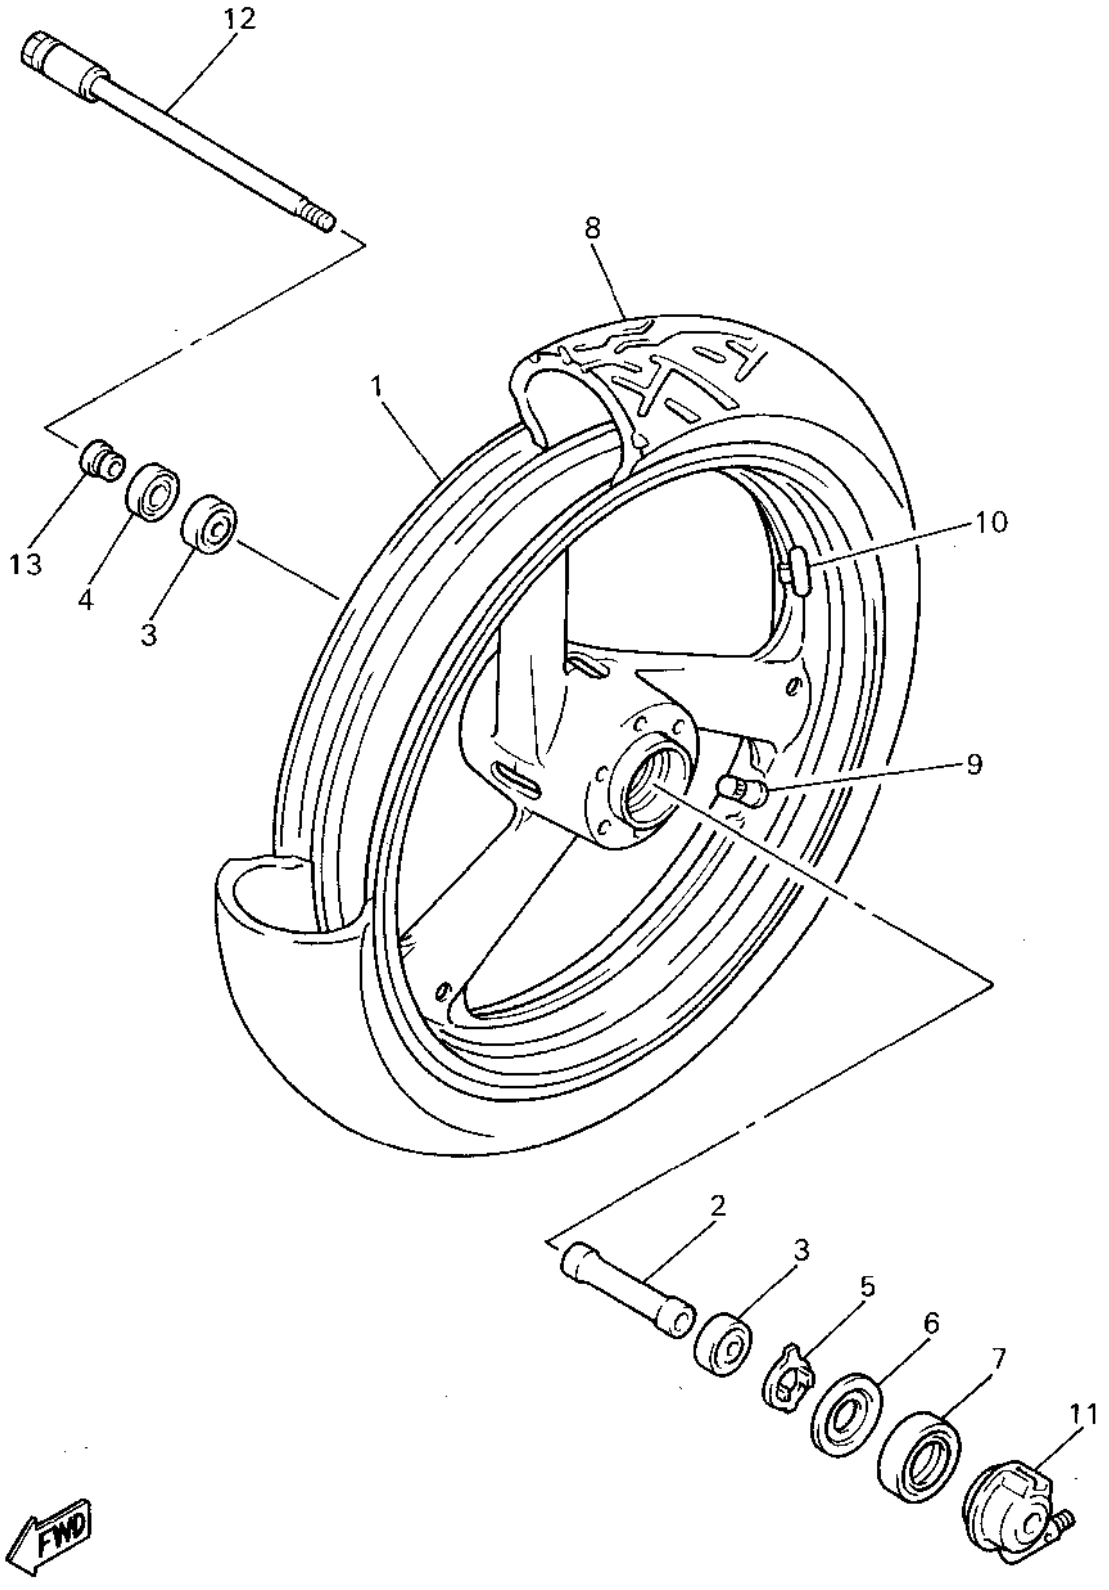

4LE110-4290


Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-25168-00-P4	CAST WHEEL, FRONT	1	LIGHT REDDISH YELLOW SOLID 1
2	90387-2200S-00	COLLAR	1	
3	93306-00420-00	BEARING (B6004)	2	
4	93102-28021-00	OIL SEAL	1	
5	4FM-25149-00-00	CLUTCH, METER	1	
6	341-25846-00-00	RETAINER, CLUTCH	1	
7	93105-45017-00	OIL SEAL	1	
8	94112-1700N-00	TIRE (120/70 ZR17 D202F)	1	DUNLOP
9	93900-00030-00	VALVE, RIM	1	
10	29L-25398-00-00	BALANCER, WHEEL (10G)	1	UN
	29L-25398-10-00	BALANCER, WHEEL (20G)	1	UN
	29L-25398-20-00	BALANCER, WHEEL (30G)	1	UN
11	4FM-25190-00-00	GEAR UNIT ASSEMBLY	1	
12	4FM-25181-01-00	AXLE, WHEEL	1	
13	90387-2200T-00	COLLAR	1	

FRONT BRAKE CALIPER

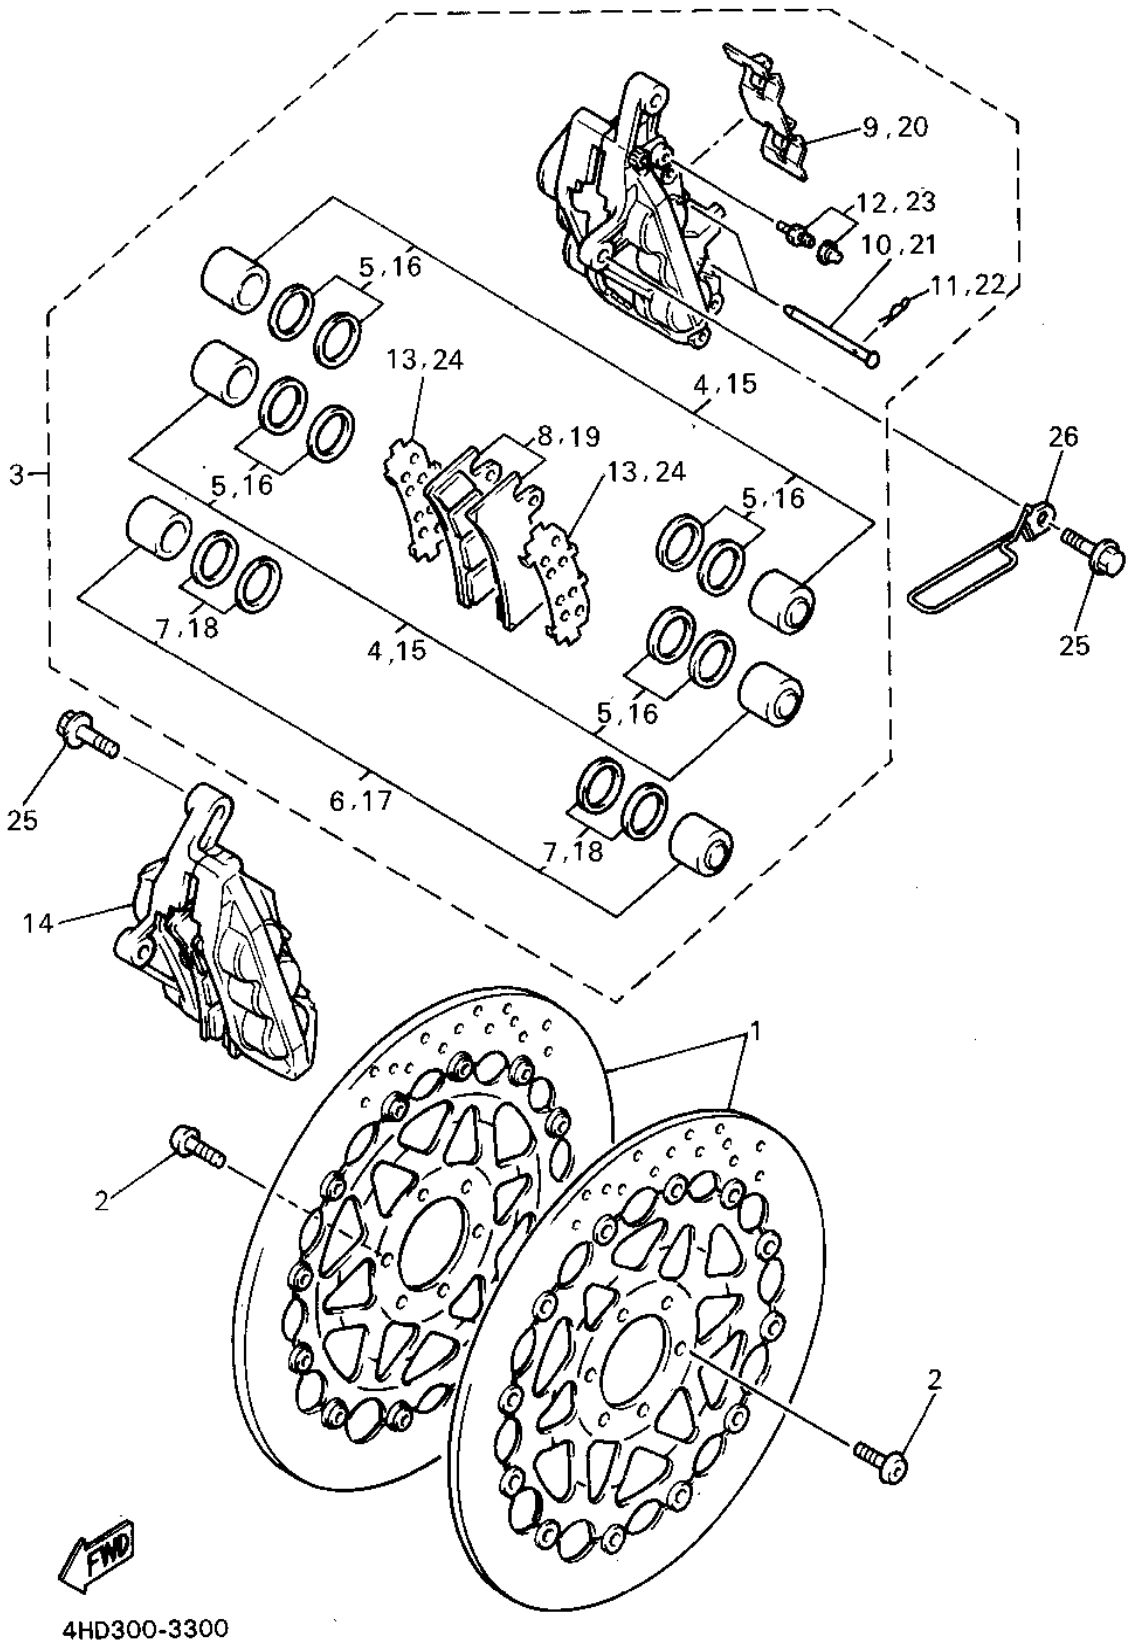

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-2581T-01-00	DISC BRAKE ASSEMBLY	2	
2	90109-08718-00	BOLT	12	
3	4FM-2580T-11-00	CALIPER ASSEMBLY (LEFT) ..	1	
4	4FM-W0057-10-00	. PISTON ASSEMBLY, CALIPER	2	
5	3MA-W0047-10-00	. . CALIPER SEAL KIT	1	
6	4FM-W0057-00-00	. PISTON ASSEMBLY, CALIPER	1	
7	4FM-W0047-00-00	. . CALIPER SEAL KIT	1	
8	4FM-W0045-10-00	. BRAKE PAD KIT	1	
9	4FM-25919-00-00	. SUPPORT, PAD	1	
10	4FM-25924-00-00	. PIN, PAD	2	
11	4FM-25925-00-00	. CLIP	2	
12	1J3-W0048-00-00	. BLEED SCREW KIT	1	
13	4FM-25827-00-00	. SHIM, CALIPER	2	
14	4FM-2580U-11-00	CALIPER ASSEMBLY (RIGHT) .	1	
15	4FM-W0057-10-00	. PISTON ASSEMBLY, CALIPER	2	
16	3MA-W0047-10-00	. . CALIPER SEAL KIT	1	
17	4FM-W0057-00-00	. PISTON ASSEMBLY, CALIPER	1	
18	4FM-W0047-00-00	. . CALIPER SEAL KIT	1	
19	4FM-W0045-10-00	. BRAKE PAD KIT	1	
20	4FM-25919-00-00	. SUPPORT, PAD	1	
21	4FM-25924-00-00	. PIN, PAD	2	
22	4FM-25925-00-00	. CLIP	2	
23	1J3-W0048-00-00	. BLEED SCREW KIT	1	
24	4FM-25827-00-00	. SHIM, CALIPER	2	
25	90105-10725-00	BOLT, WASHER BASED	4	
26	4FM-21596-00-00	HOLDER	1	

REAR WHEEL

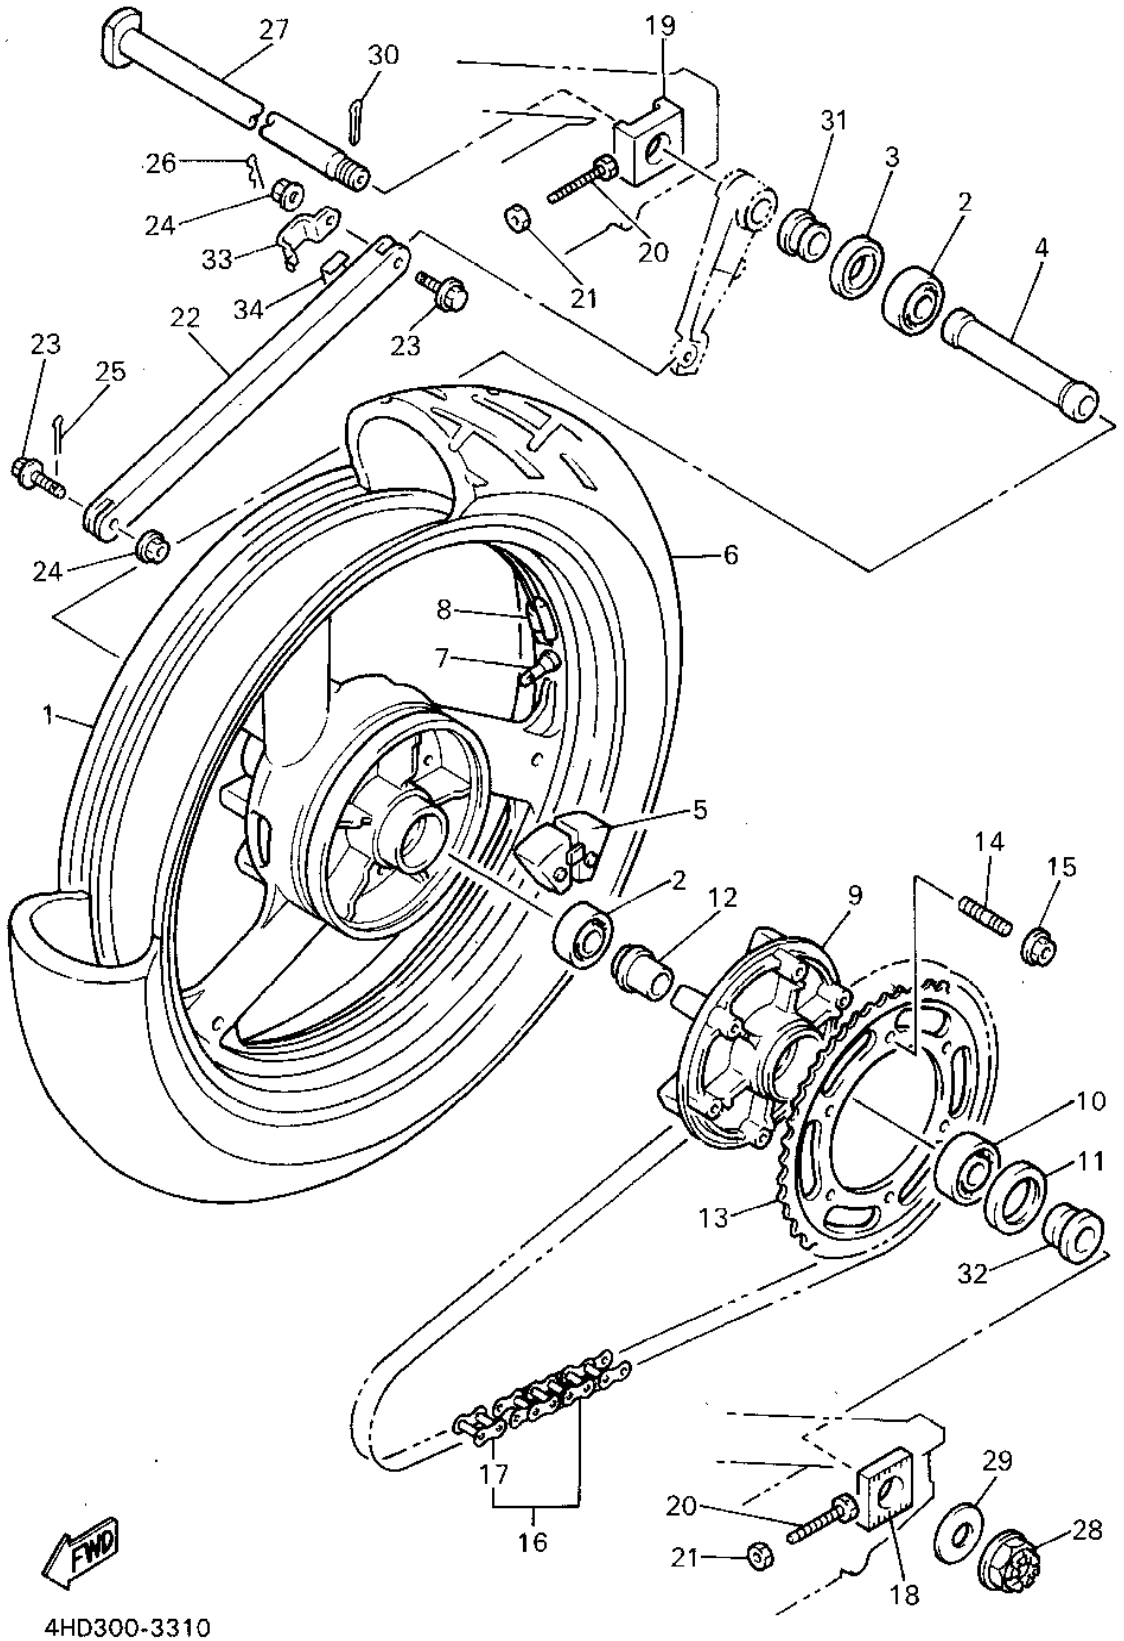


4HD300-3310

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-25338-00-P4	CAST WHEEL, REAR	1	LIGHT REDDISH YELLOW SOLID 1
2	93306-20567-00	BEARING	2	
3	93102-35412-00	OIL SEAL	1	
4	90560-28389-00	SPACER	1	
5	4FM-25364-00-00	DAMPER	6	
6	94118-1700T-00	TIRE (180/55 ZR17 D202)	1	DUNLOP
7	93900-00030-00	VALVE, RIM	1	
8	29L-25398-00-00	BALANCER, WHEEL (10G)	1	UN
	29L-25398-10-00	BALANCER, WHEEL (20G)	1	UN
	29L-25398-20-00	BALANCER, WHEEL (30G)	1	UN
9	4FM-25366-00-00	CLUTCH, HUB	1	
10	93306-20644-00	BEARING	1	
11	93102-40211-00	OIL SEAL	1	
12	4FM-25377-00-00	COLLAR, WHEEL	1	
13	3FV-25443-01-00	SPROCKET, DRIVEN (43T)	1	
14	90116-10575-00	BOLT, STUD	6	
15	95601-10200-00	NUT, SELF-LOCKING	6	
16	94581-55106-00	CHAIN (DID532ZLVKA1-L106)	1	
17	94681-55031-00	. JOINT, CHAIN	1	
18	4FM-25388-00-00	PULLER, CHAIN 1	1	
19	4FM-25389-00-00	PULLER, CHAIN 2	1	
20	90101-08705-00	BOLT	2	
21	95333-08600-00	NUT	2	
22	4FM-25371-00-00	BAR, TENSION	1	
23	90105-08321-00	BOLT, WASHER BASED	2	
24	95701-08500-00	NUT, FLANGE	2	
25	91490-20020-00	PIN, COTTER	1	
26	90468-16099-00	CLIP	1	

CONTINUED ON NEXT FRAME ➤


REAR WHEEL

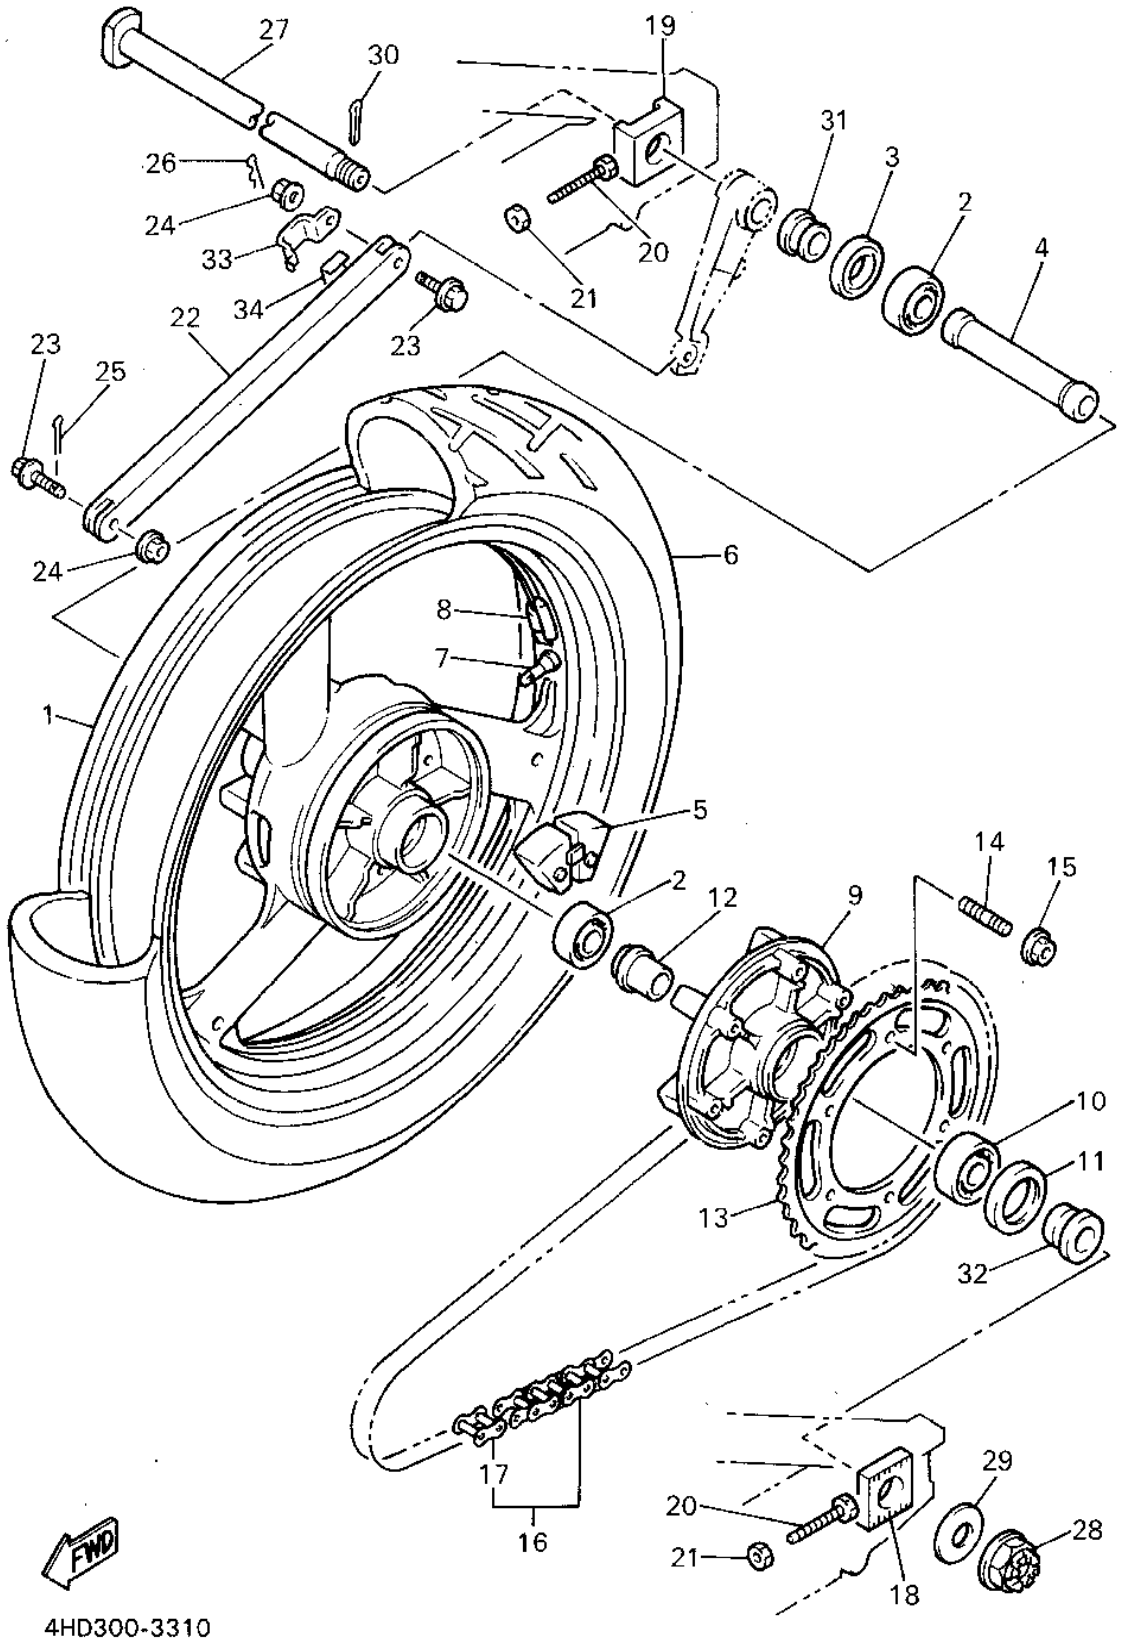

4HD300-3310


Ref. No.	Part Number	Description	Qty	Remarks
27	4FM-25381-01-00	AXLE, WHEEL	1	
28	90171-25054-00	NUT, CASTLE	1	
29	90201-263R9-00	WASHER, PLATE	1	
30	91401-40045-00	PIN, COTTER	1	
31	90387-2800P-00	COLLAR	1	
32	90387-2800R-00	COLLAR	1	
33	4FM-25887-00-00	HOLDER, BRAKE HOSE	1	
34	2AL-84553-00-00	DAMPER	1	

REAR BRAKE CALIPER

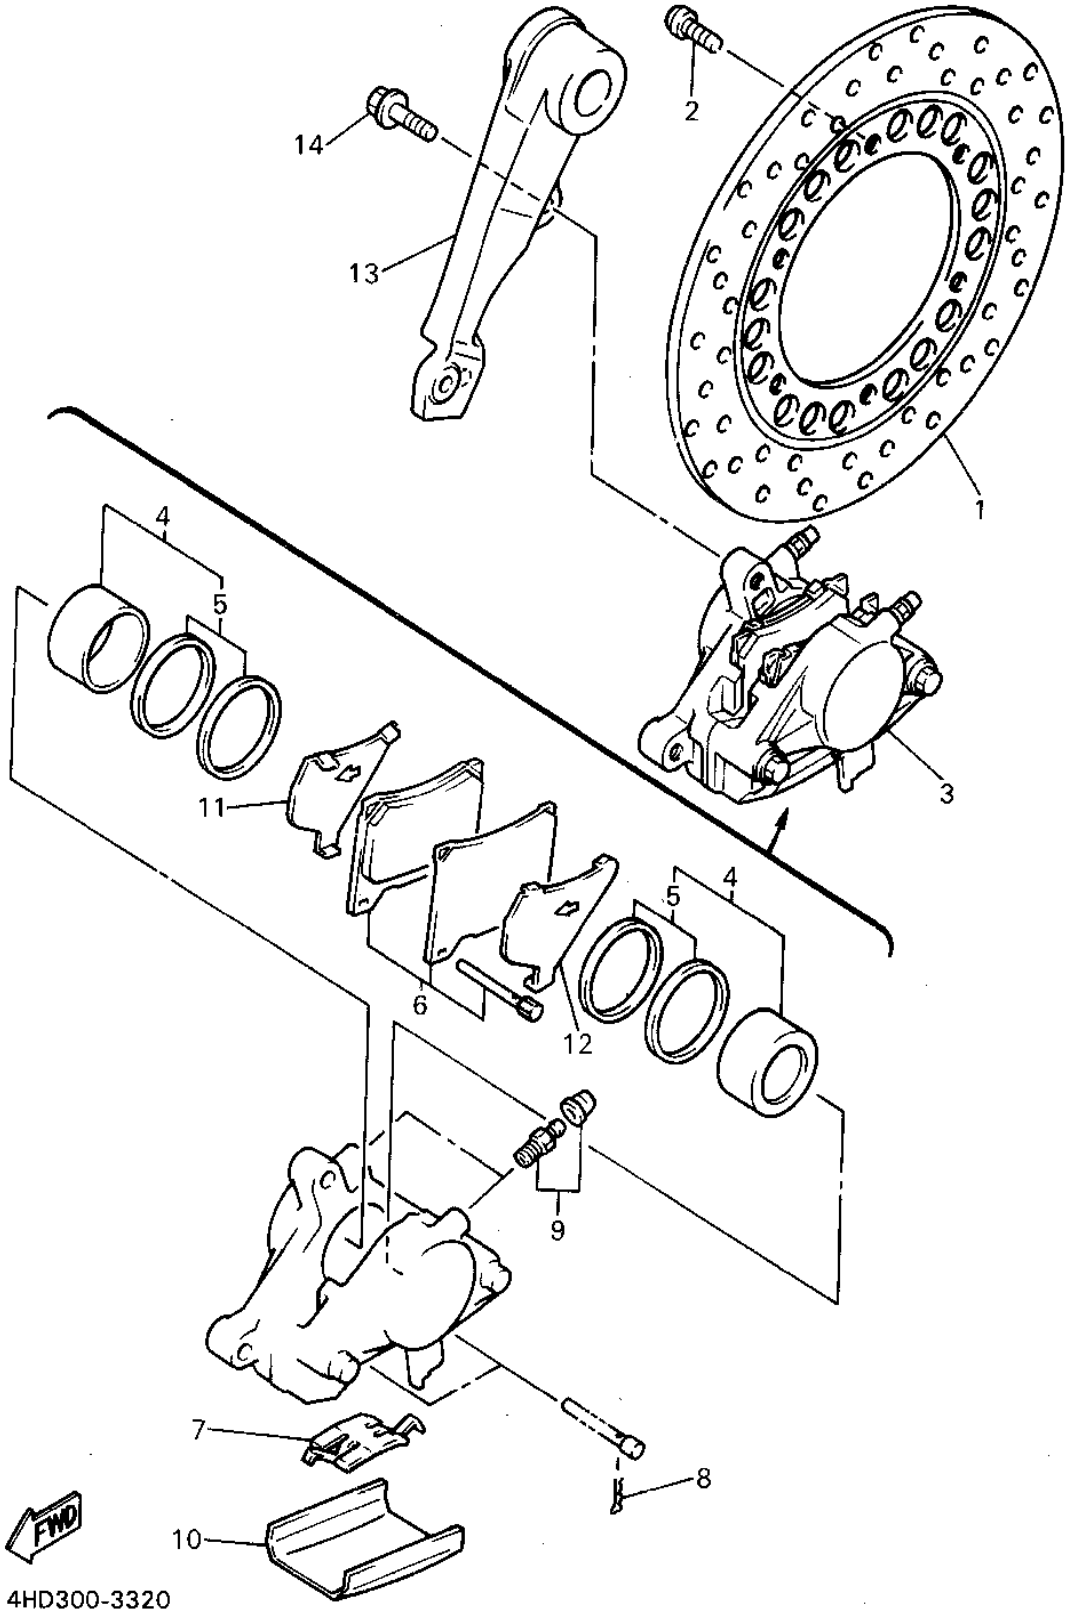

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-2582W-00-00	DISC, REAR BRAKE 2	1	
2	90109-08718-00	BOLT	6	
3	4FM-2580W-10-00	CALIPER ASSEMBLY, REAR 2	1	
4	31A-W0057-00-00	. PISTON ASSEMBLY, CALIPER	1	
5	31A-W0047-00-00	. . CALIPER SEAL KIT	1	
6	4FM-W0046-00-00	. BRAKE PAD KIT 2	1	
7	29L-25919-A0-00	. SUPPORT, PAD	1	
8	3HE-25925-00-00	. CLIP	2	
9	1J3-W0048-00-00	. BLEED SCREW KIT	2	
10	42H-25836-00-00	. COVER, DUST	1	
11	1FK-25827-00-00	. SHIM, CALIPER	1	
12	1FK-25828-00-00	. SHIM, CALIPER	1	
13	4FM-25819-01-00	BRACKET, CALIPER	1	
14	90105-10725-00	BOLT, WASHER BASED	2	


STEERING HANDLE - CABLE

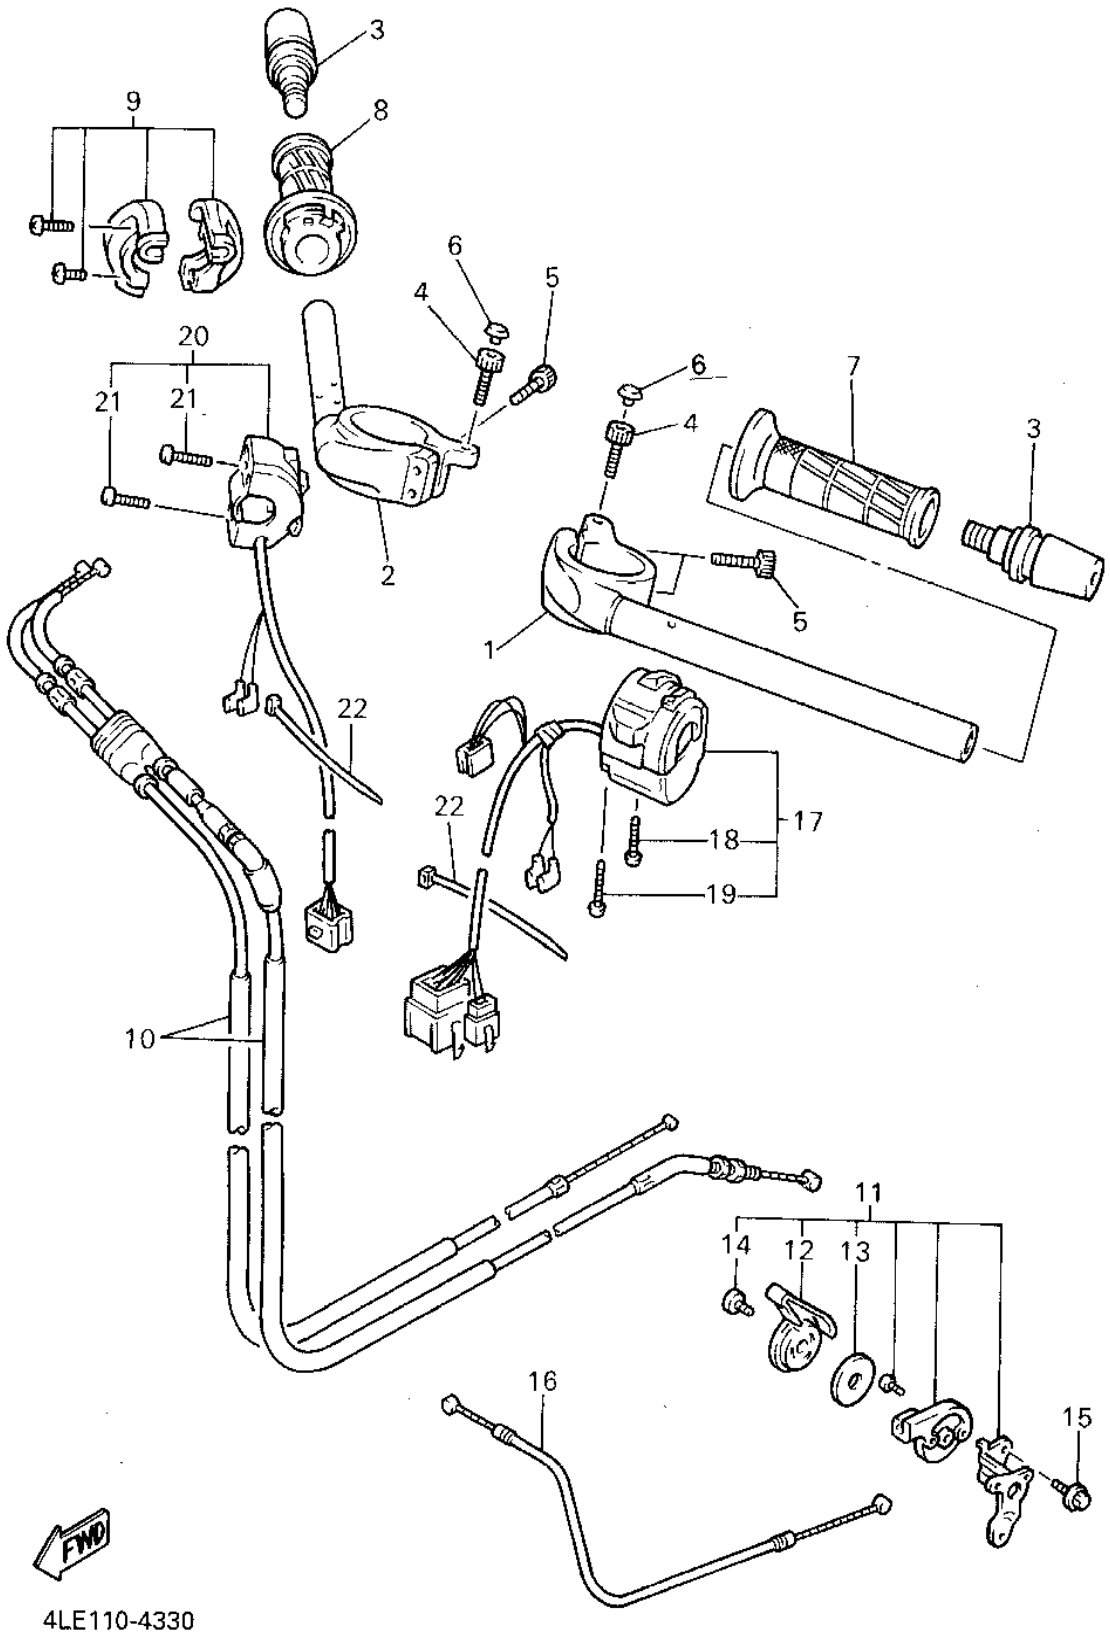

4LE110-4330

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-26121-01-00	HANDLEBAR (LEFT)	1	
2	4FM-26122-00-00	HANDLEBAR (RIGHT)	1	
3	36Y-26246-00-00	END, GRIP	2	
4	91311-06020-00	BOLT, SOCKET HEAD	2	
5	91311-06025-00	BOLT, SOCKET HEAD	4	
6	10L-23469-00-00	CAP, BOLT	2	
7	4FM-26241-00-00	GRIP (LEFT)	1	
8	4FM-26240-00-00	GRIP ASSEMBLY	1	
9	3LN-26270-01-00	CABLE CONNECTOR CAP ASSEMBLY	1	
10	4FM-26302-00-00	THROTTLE CABLE ASSEMBLY	1	
11	4FM-83940-00-00	STARTER ASSEMBLY	1	
12	1WG-83941-00-00	. LEVER, STARTER	1	
13	90209-10131-00	. WASHER	1	
14	98906-06008-00	. SCREW, BIND	1	
15	95826-06010-00	BOLT, FLANGE	1	
16	3FV-26331-00-00	CABLE, STARTER 1	1	
17	3LK-83973-10-00	SWITCH, HANDLE 3	1	
18	98506-05030-00	. SCREW, PAN HEAD	1	
19	98506-05040-00	. SCREW, PAN HEAD	1	
20	4FM-83975-00-00	SWITCH, HANDLE 2	1	
21	98506-05018-00	. SCREW, PAN HEAD	2	
22	25G-83936-01-00	BAND, SWITCH CORD	2	

FRONT MASTER CYLINDER

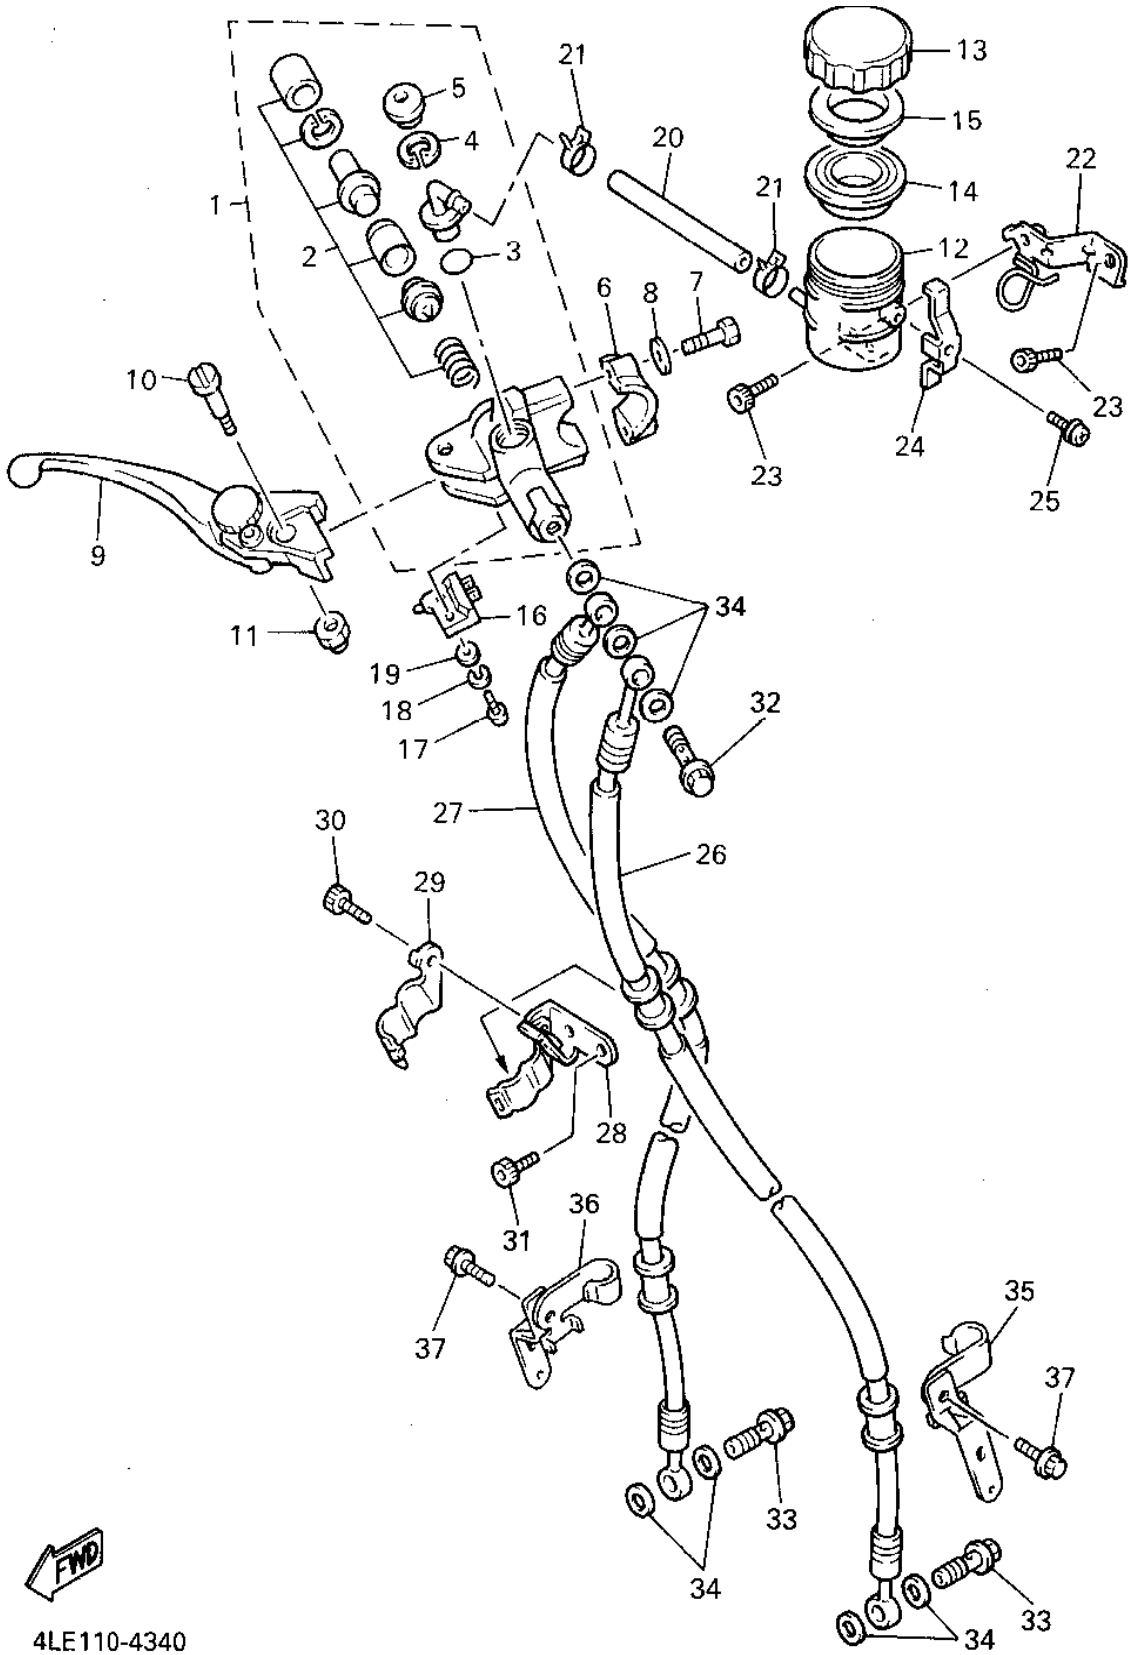


4LE110-4340

Ref. No.	Part Number	Description	Qty	Remarks
1	3GM-W2587-50-00	MASTER CYLINDER SUB ASSEMBLY	1	
2	3GM-W0041-50-00	. CYLINDER KIT, MASTER	1	
3	93210-15620-00	. O-RING	1	
4	2VN-25866-00-00	. CIRCLIP	1	
5	3FV-2589A-00-00	. COVER, DUST	1	
6	56A-25867-00-00	BRACKET, MASTER CYLINDER	1	
7	97016-06025-00	BOLT	2	
8	92906-06600-00	WASHER	2	
9	3GM-83922-50-00	LEVER 2	1	
10	3FV-2589F-00-00	BOLT, LEVER	1	
11	95616-06100-00	NUT, U	1	
12	3FV-25894-00-00	TANK, RESERVOIR	1	
13	3GM-25852-50-00	CAP, RESERVOIR	1	
14	3FV-25854-00-00	DIAPHRAGM, RESERVOIR	1	
15	2J2-25855-50-00	BUSH, DIAPHRAGM	1	
16	3FV-83980-00-00	FRONT STOP SWITCH ASSEMBLY	1	
17	98511-04012-00	SCREW, PAN HEAD	1	
18	92990-04100-00	WASHER, SPRING	1	
19	92901-04600-00	WASHER, PLATE	1	
20	3GM-2585F-00-00	HOSE	1	
21	3PA-24356-00-00	CLIP, PIPE 1	2	
22	4FM-26292-00-00	STAY	1	
23	91316-06012-00	BOLT, SOCKET HEAD	2	
24	3FV-2589G-00-00	HOLDER	1	
25	3GM-2589H-00-00	SCREW	1	
26	4FM-25872-00-00	HOSE, BRAKE 1	1	
27	4FM-25873-00-00	HOSE, BRAKE 2	1	

CONTINUED ON NEXT FRAME ➤


FRONT MASTER CYLINDER

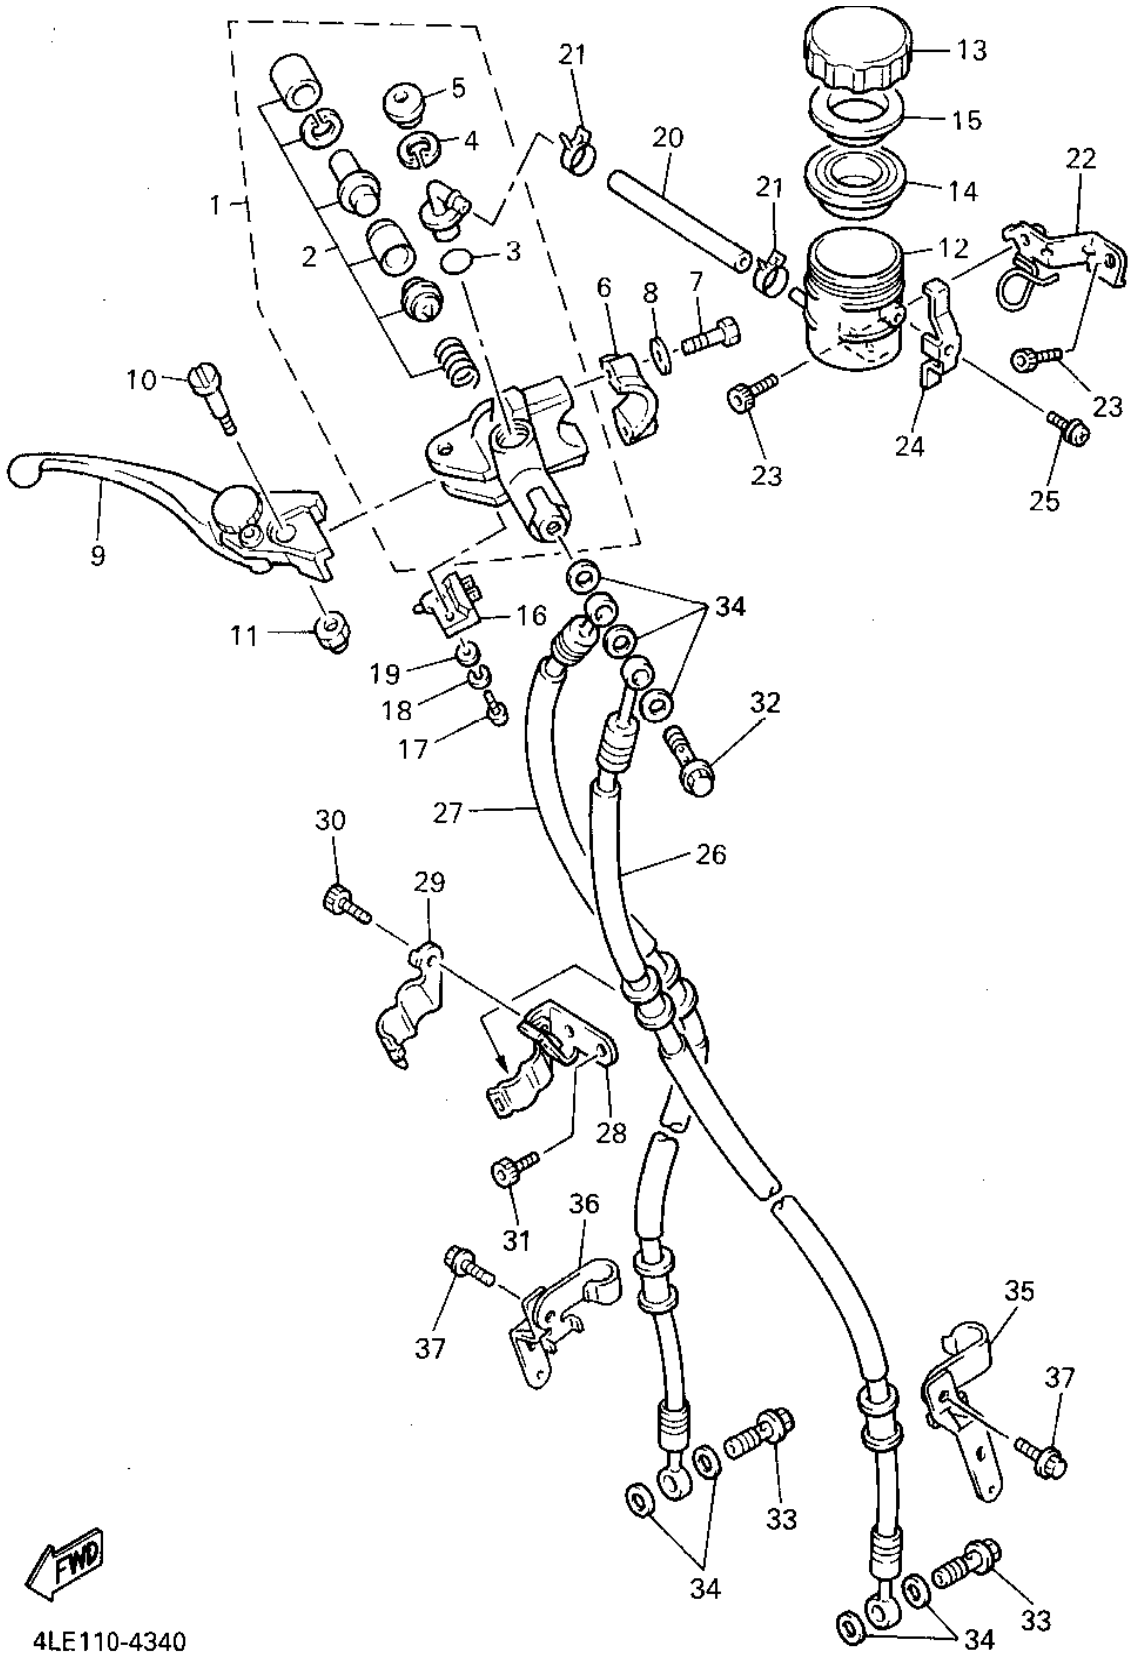

4LE110-4340

Ref. No.	Part Number	Description	Qty	Remarks
28	3GM-23377-00-00	BRACKET, HORN	1	
29	3GM-23378-00-00	BRACKET	1	
30	91316-06010-00	BOLT, SOCKET HEAD	1	
31	91316-06012-00	BOLT, SOCKET HEAD	2	
32	90401-10160-00	BOLT, UNION	1	
33	90401-10159-00	BOLT, UNION	2	
34	90201-10118-00	WASHER, PLATE	7	
35	3LK-25875-51-00	HOLDER, BRAKE HOSE 1	1	
36	3LK-25876-51-00	HOLDER, BRAKE HOSE 2	1	
37	95816-06012-00	BOLT, FLANGE	2	


FRONT MASTER CYLINDER 2

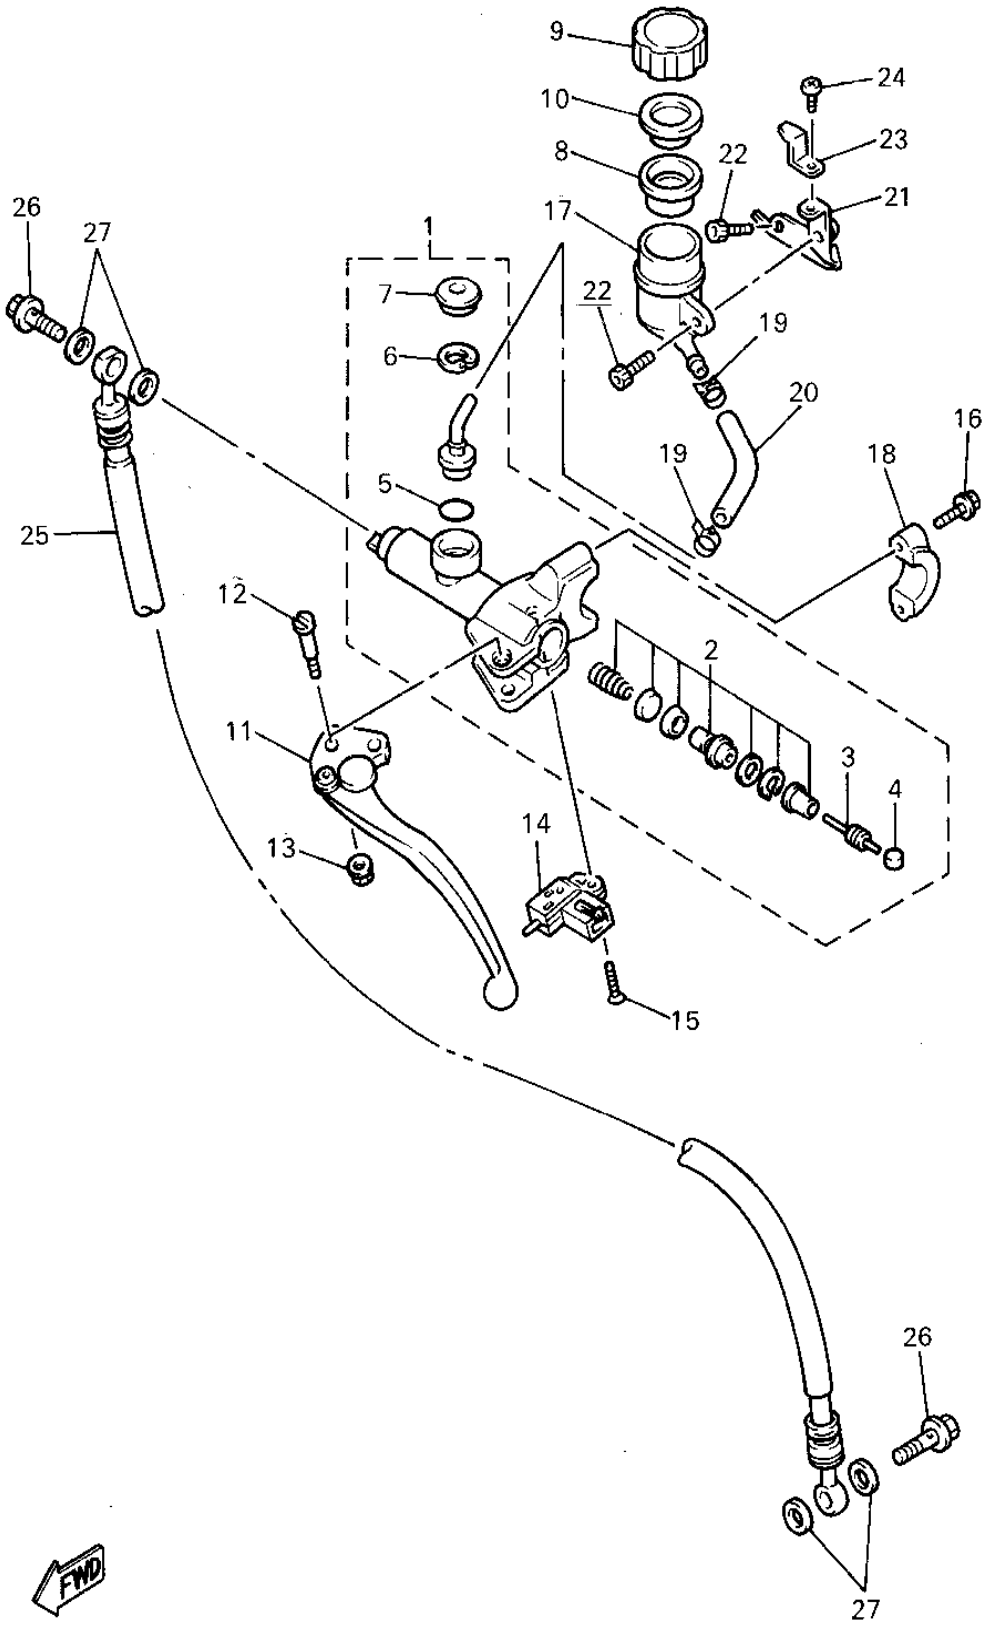

4HD300-3350

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-W2645-00-00	MASTER CYLINDER SUB ASSEMBLY	1	
2	3GM-W0099-00-00	. CYLINDER KIT, MASTER (CLUTCH)	1	
3	3GM-26464-00-00	. ROD, PUSH	1	
4	3GM-26455-00-00	. BUSH	1	
5	93210-15620-00	. O-RING	1	
6	2VN-25866-00-00	. CIRCLIP	1	
7	3FV-2589A-00-00	. COVER, DUST	1	
8	3GK-25854-50-00	DIAPHRAGM, RESERVOIR	1	
9	4FM-25852-00-00	CAP, RESERVOIR	1	
10	3GK-25855-50-00	BUSH, DIAPHRAGM	1	
11	4FM-83912-00-00	LEVER 1	1	
12	3FV-2589F-00-00	BOLT, LEVER	1	
13	95706-06500-00	NUT, FLANGE	1	
14	3GM-83980-00-00	FRONT STOP SWITCH ASSEMBLY	1	
15	98706-04016-00	SCREW, FLAT HEAD	1	
16	95026-06025-00	BOLT, FLANGE	2	
17	4FM-25894-00-00	TANK, RESERVOIR	1	
18	56A-25867-00-00	BRACKET, MASTER CYLINDER	1	
19	3PA-24356-00-00	CLIP, PIPE 1	2	
20	4FM-2585F-00-00	HOSE	1	
21	4FM-26296-00-00	BRACKET	1	
22	91316-06012-00	BOLT, SOCKET HEAD	2	
23	4FM-26475-00-00	HOLDER	1	
24	98506-04008-00	SCREW, PAN HEAD	1	
25	2GH-26470-01-00	HOSE, CLUTCH	1	
26	90401-10096-00	BOLT, UNION	2	
27	90201-10118-00	WASHER, PLATE	4	


STAND - FOOTREST

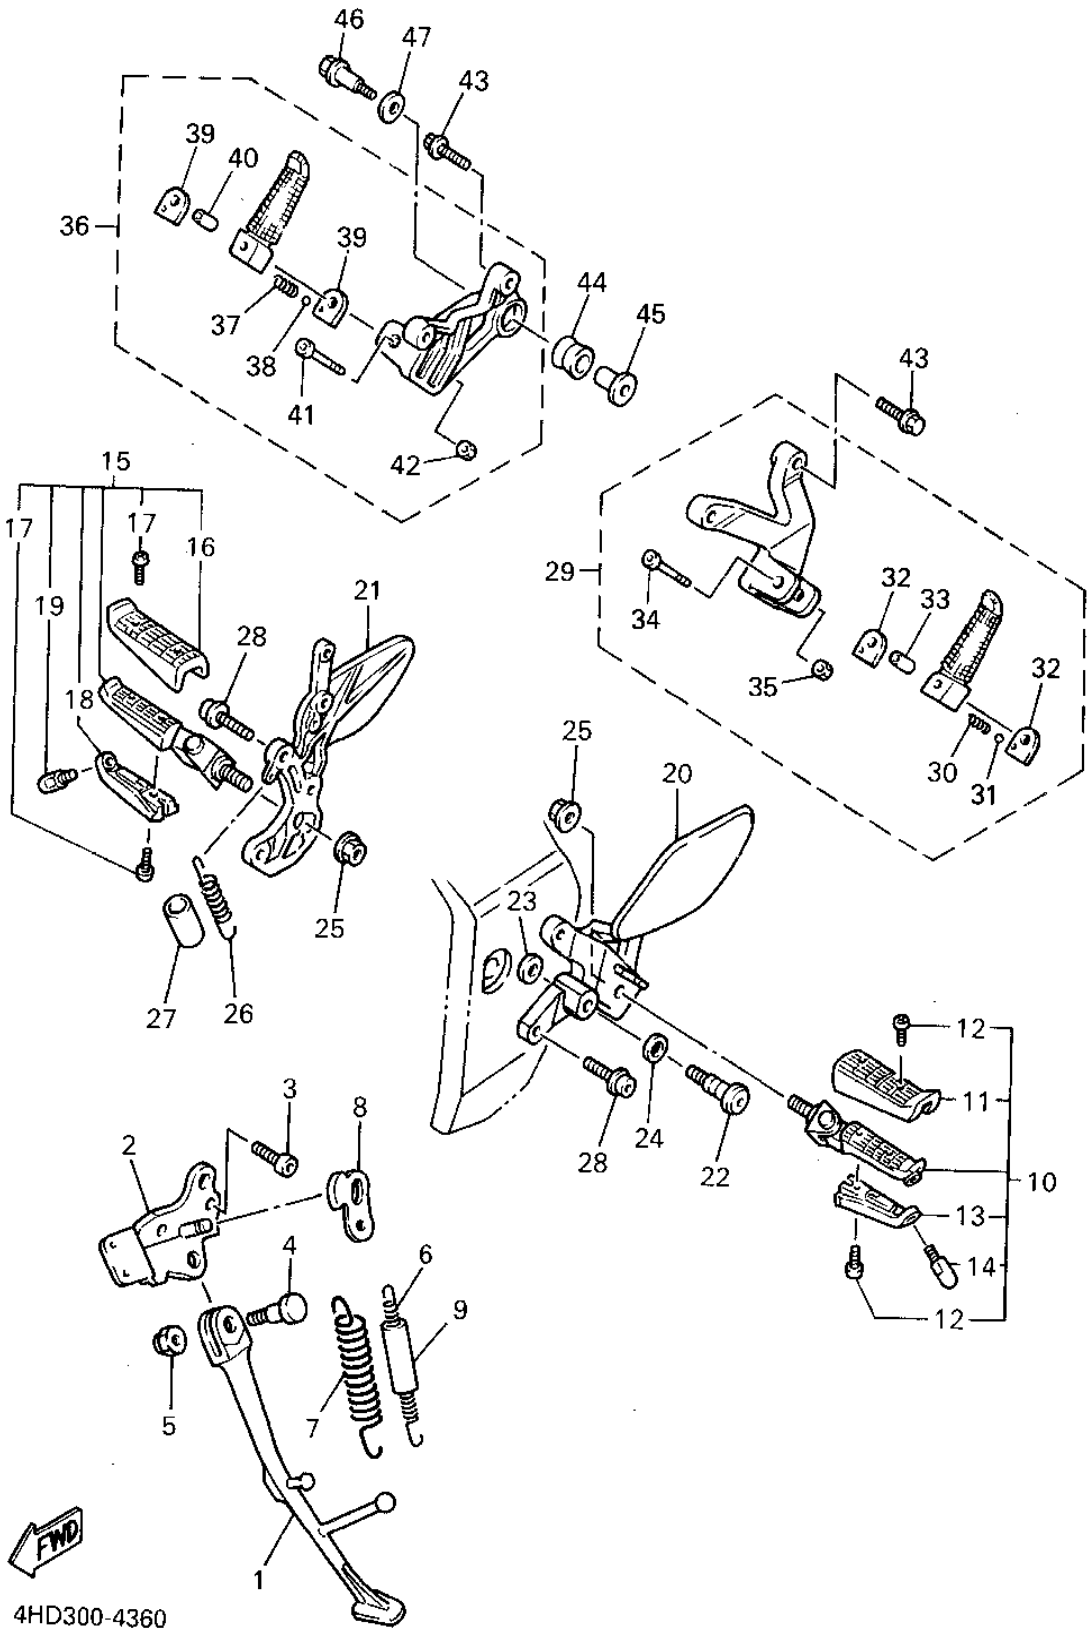

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-27311-00-00	STAND, SIDE	1	
2	4FM-27321-00-00	BRACKET, SIDE STAND	1	
3	90110-08155-00	BOLT, HEXAGON SOCKET HEAD	2	
4	90109-104E6-00	BOLT	1	
5	90185-10037-00	NUT, SELF-LOCKING	1	
6	90506-18224-00	SPRING, TENSION	1	
7	90506-26225-00	SPRING, TENSION	1	
8	4FM-27315-00-00	LINK, SIDE STAND	1	
9	1TX-27351-00-00	GUIDE, SIDE STAND	1	
10	4FM-27410-00-00	FRONT FOOTREST ASSEMBLY (LEFT)	1	
11	2GH-27413-00-00	. COVER, FOOTREST	1	
12	90157-05079-00	. SCREW, PAN HEAD	3	
13	4FM-27471-00-00	. BAR, FOOTREST 1	1	
14	4FM-27435-00-00	. BOLT	1	
15	4FM-27420-00-00	FRONT FOOTREST ASSEMBLY (RIGHT)	1	
16	2GH-27413-00-00	. COVER, FOOTREST	1	
17	90157-05079-00	. SCREW, PAN HEAD	3	
18	4FM-27471-00-00	. BAR, FOOTREST 1	1	
19	4FM-27435-00-00	. BOLT	1	
20	4FM-27442-00-00	BRACKET 2	1	
21	4FM-27443-00-00	BRACKET 3	1	
22	4BP-27434-01-00	BOLT	1	
23	90201-08326-00	WASHER, PLATE	1	
24	90201-127J6-00	WASHER, PLATE	1	
25	90179-10247-00	NUT	2	
26	90506-20377-00	SPRING, TENSION	1	
27	90446-17346-00	HOSE	1	


CONTINUED ON NEXT FRAME ➤

STAND - FOOTREST

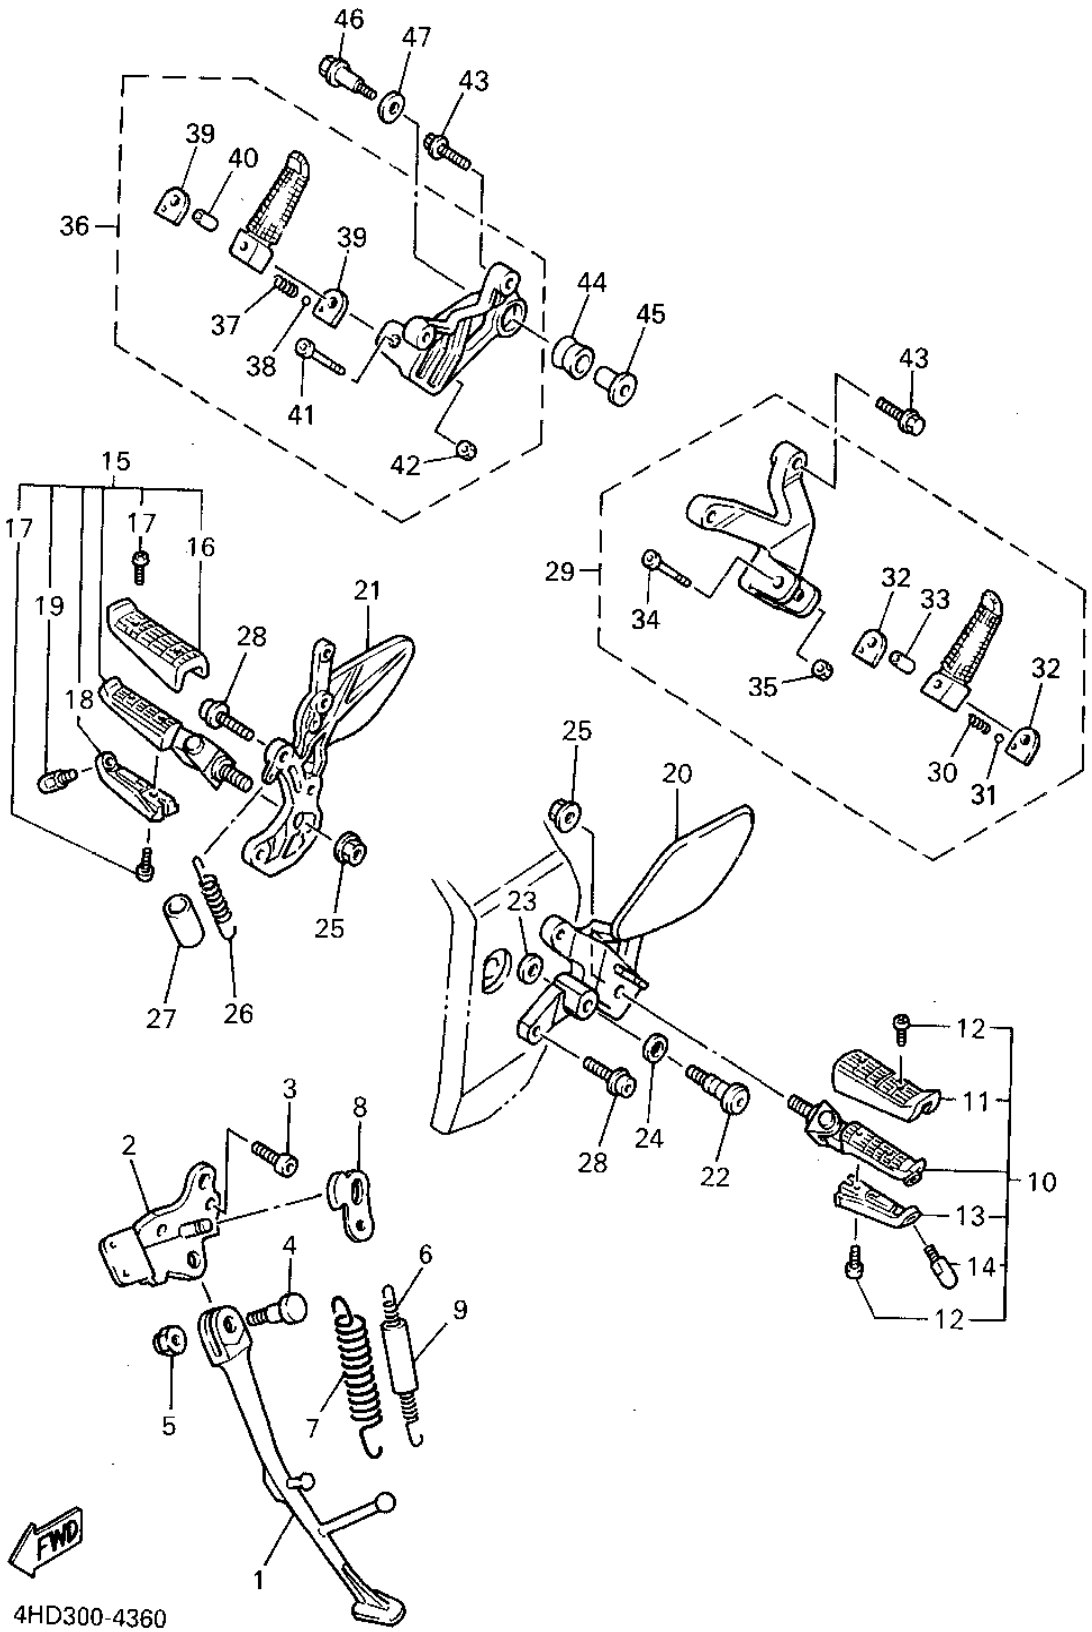

Ref. No.	Part Number	Description	Qty	Remarks
28	90110-08199-00	BOLT, HEXAGON SOCKET HEAD	4	
29	4FM-27430-10-00	REAR FOOTREST ASSEMBLY 1	1	
30	90501-12743-00	. SPRING, COMPRESSION	1	
31	93501-04011-00	. BALL	1	
32	1HX-27437-00-00	. WASHER, SPECIAL	2	
33	90387-064H8-00	. COLLAR	1	
34	91311-06045-00	. BOLT	1	
35	95601-06100-00	. NUT, U	1	
36	4FM-27440-10-00	REAR FOOTREST ASSEMBLY 2	1	
37	90501-12743-00	. SPRING, COMPRESSION	1	
38	93501-04011-00	. BALL	1	
39	1HX-27437-00-00	. WASHER, SPECIAL	2	
40	90387-064H8-00	. COLLAR	1	
41	91311-06045-00	. BOLT	1	
42	95601-06100-00	. NUT, U	1	
43	95811-08030-00	BOLT, FLANGE	2	
44	2H7-27414-00-00	DAMPER, FOOTREST	1	
45	90387-10636-00	COLLAR	1	
46	90105-10316-00	BOLT, WASHER BASED	1	
47	90201-10669-00	WASHER, PLATE	1	


REAR MASTER CYLINDER

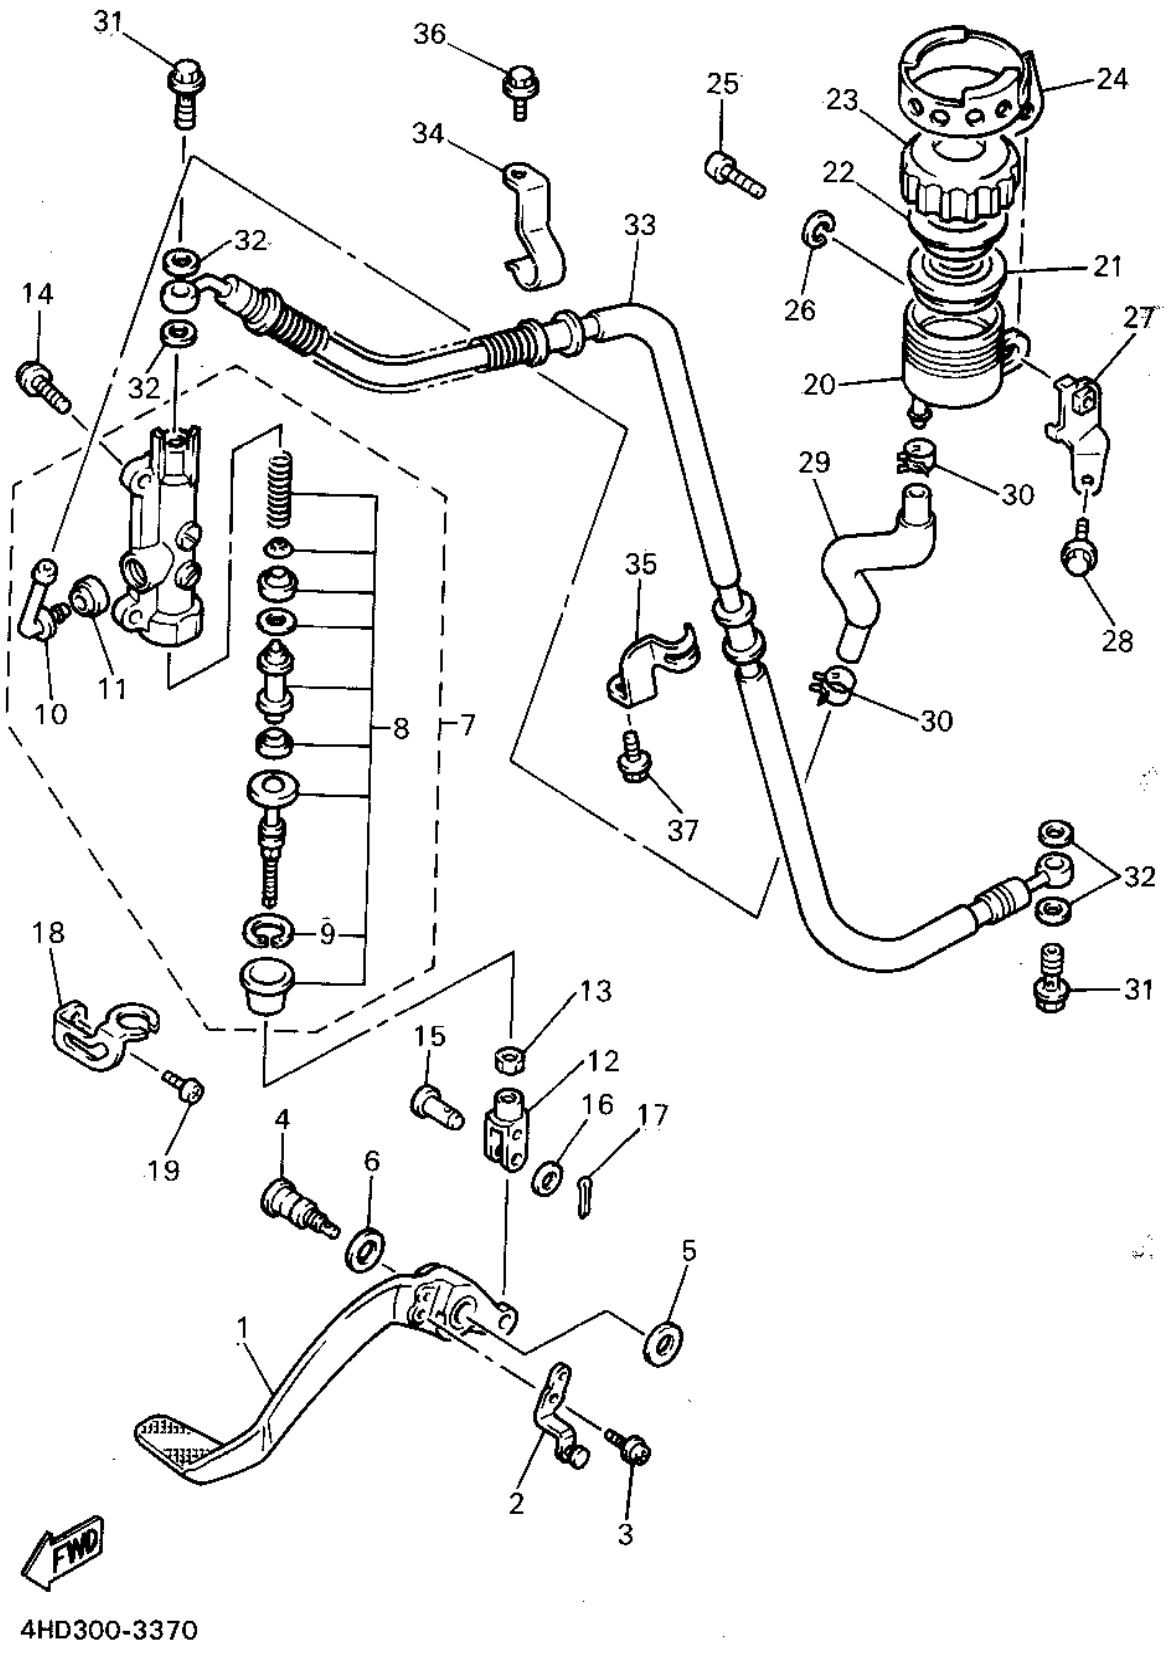

4HD300-3370

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-27211-00-00	PEDAL, BRAKE	1	
2	4FM-27254-00-00	HOOK	1	
3	90159-06045-00	SCREW, WITH WASHER	1	
4	3YF-27261-00-00	SHAFT	1	
5	90201-104R2-00	WASHER, PLATE	1	
6	90206-14086-00	WASHER, WAVE	1	
7	4BH-2583V-00-00	RR. MASTER CYLINDER ASSEMBLY.	1	
8	4BH-W0042-50-00	. CYLINDER KIT, MASTER	1	
9	3LN-2585G-00-00	. . CIRCLIP	1	
10	4BP-2582A-00-00	. JOINT	1	
11	4BP-2585F-00-00	. BUSH	1	
12	4FM-27222-00-00	JOINT	1	
13	95303-08700-00	NUT	1	
14	92011-08020-00	BOLT, BUTTON HEAD	2	
15	90240-08124-00	PIN, CLEVIS	1	
16	90201-08083-00	WASHER, PLATE	1	
17	91490-20020-00	PIN, COTTER	1	
18	4FM-2144G-00-00	STAY, STOP SWITCH	1	
19	98580-06010-00	SCREW, PAN HEAD (92503-06010)	1	
20	31A-25894-01-00	TANK, RESERVOIR	1	
21	360-25854-00-00	DIAPHRAGM, RESERVOIR	1	
22	2GU-25855-00-00	BUSH, DIAPHRAGM	1	
23	2KF-25852-50-00	CAP, RESERVOIR	1	
24	3PJ-25888-00-00	COVER, RESERVOIR TANK	1	
25	98516-06020-00	SCREW, PAN HEAD	1	
26	92906-06100-00	WASHER, SPRING	1	
27	4FM-2133G-00-00	BRACKET, RESERVER	1	

CONTINUED ON NEXT FRAME ➤

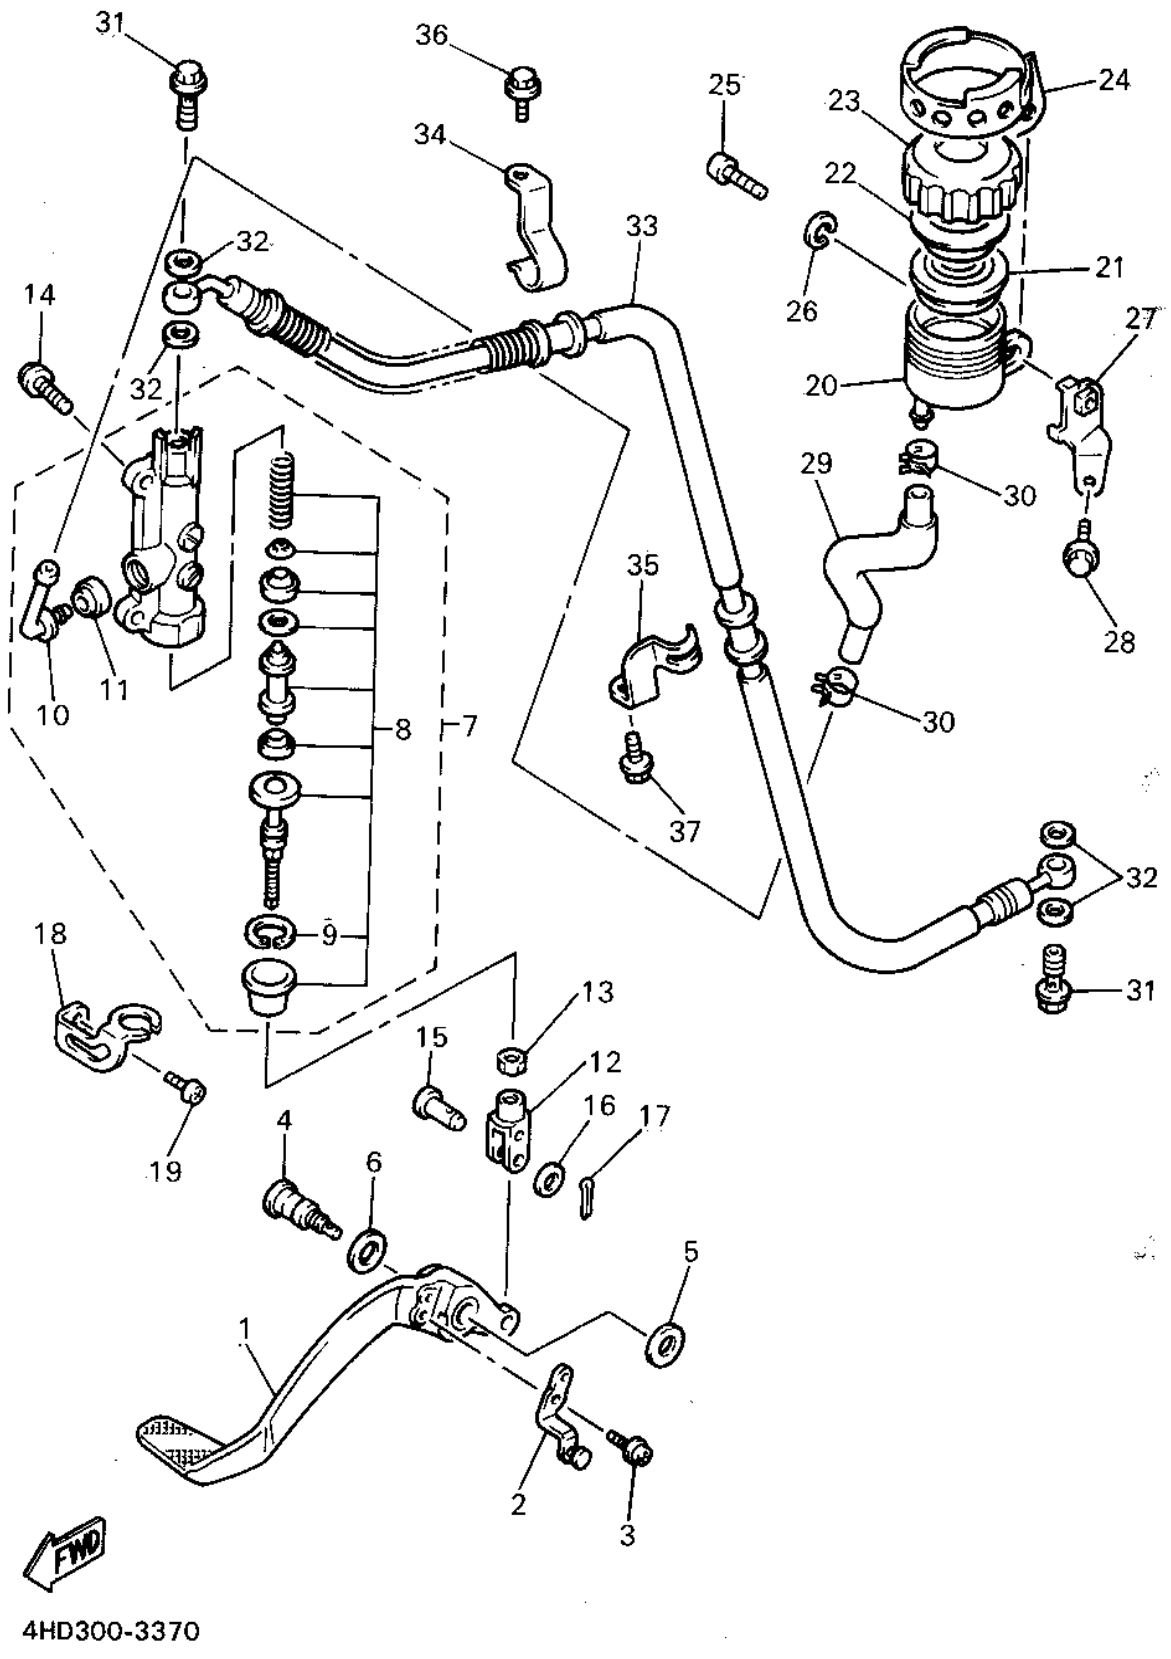


4HD300-3370

REAR MASTER CYLINDER

Ref. No.	Part Number	Description	Qty	Remarks
28	95811-06016-00	BOLT, FLANGE (95822-06016)	1	
29	4FM-25895-00-00	HOSE, RESERVOIR	1	
30	90467-14057-00	CLIP	2	
31	90401-10159-00	BOLT, UNION	2	
32	90201-10118-00	WASHER, PLATE	4	
33	4FM-25874-01-00	HOSE, BRAKE	1	
34	4FM-25875-00-00	HOLDER, BRAKE HOSE 1	1	
35	4FM-25876-00-00	HOLDER, BRAKE HOSE 2	1	
36	90105-06707-00	BOLT (95023-06016-00)	1	
37	95023-06008-00	BOLT	1	

COWLING 1

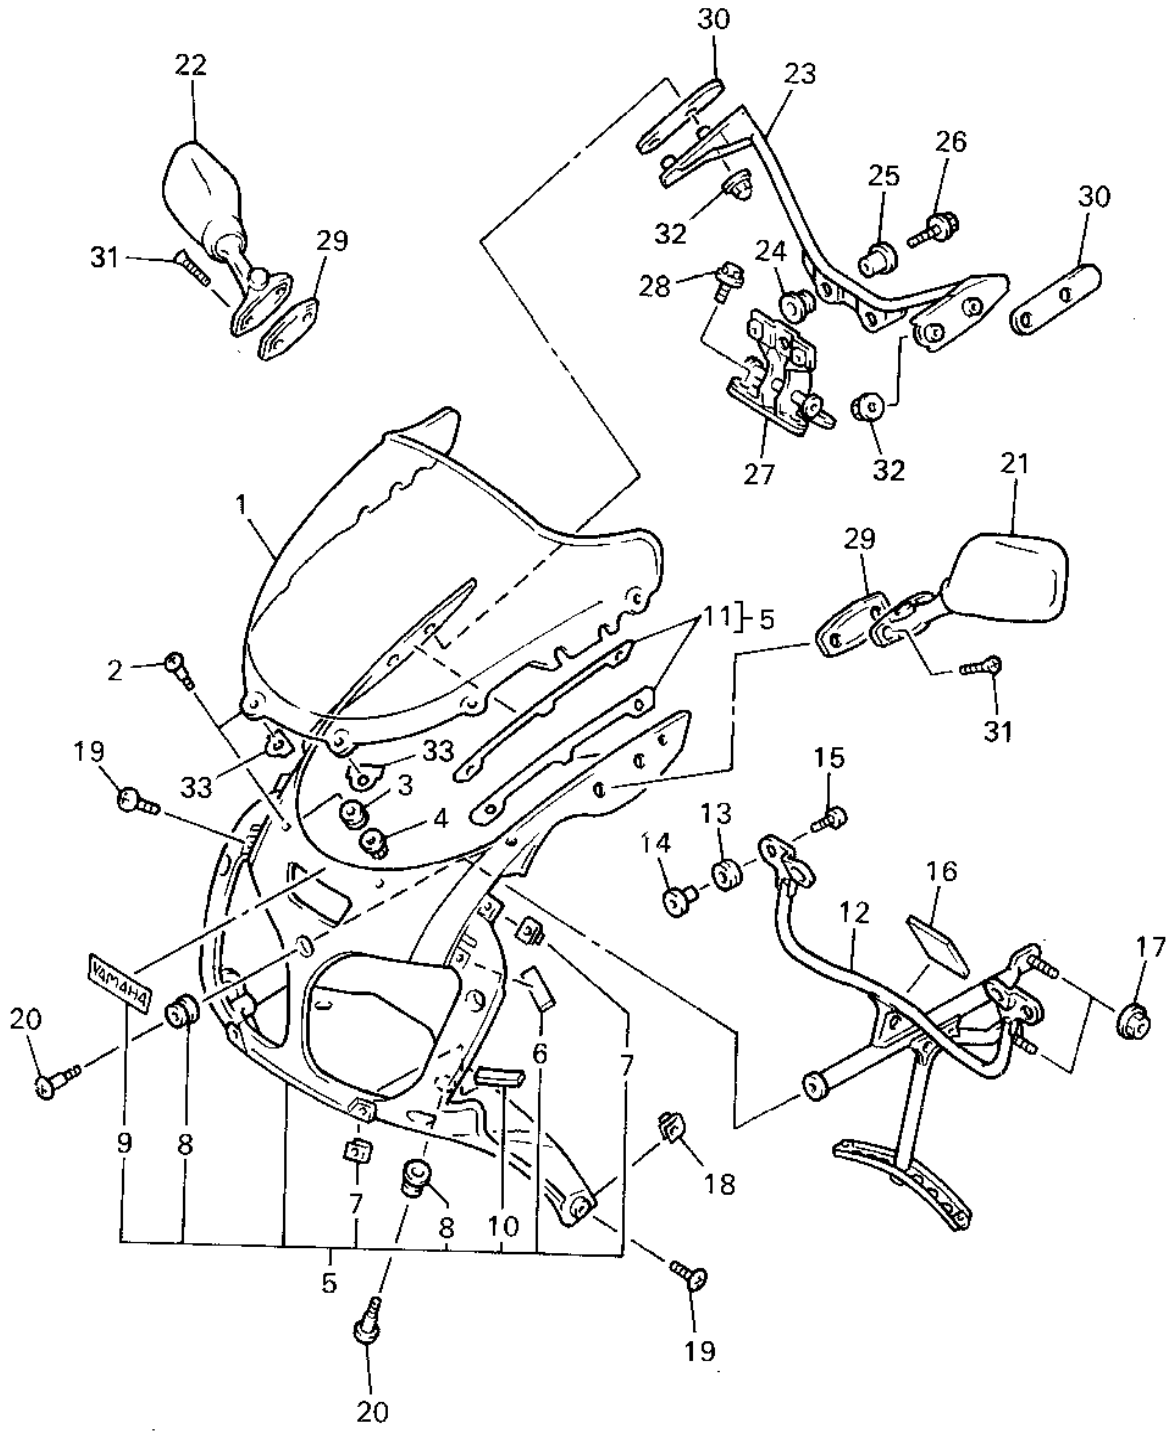


4HD300-4380

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-28381-00-00	WINDSHIELD	1	
2	90149-05273-00	SCREW	6	
3	4FM-28215-00-00	WASHER, SPECIAL	6	
4	95706-05500-00	NUT, FLANGE	6	
5	4FM-Y2835-30-P0	COWLING ASS''Y	1	DEEP VIOLET METALLIC 1
6	89X-77167-00-00	. TRIM 3	2	
7	90183-05024-00	. NUT, SPRING	6	
8	90480-13398-00	. GROMMET	3	
9	99236-00100-00	. EMBLEM, YAMAHA	1	
10	3MA-21649-00-00	. DAMPER	2	
11	4FM-2834V-00-00	. PROTECTOR 1	2	
12	4FM-28356-00-00	STAY 1	1	
13	90480-13163-00	GROMMET	2	
14	90560-06201-00	SPACER	2	
15	97706-50016-00	SCREW, TAPPING	2	
16	51L-28371-00-00	DAMPER	1	
17	95601-08200-00	NUT, U	2	
18	90183-05024-00	NUT, SPRING	2	
19	90150-05039-00	SCREW, ROUND HEAD	8	
20	90150-06036-00	SCREW, ROUND HEAD	3	
21	4FM-26280-00-00	REAR VIEW MIRROR ASSEMBLY (LEFT)	1	WHITE
22	4FM-26290-00-00	REAR VIEW MIRROR ASSEMBLY (RIGHT)	1	WHITE
23	4FM-2831W-00-00	STAY, MIRROR 1	1	
24	90480-13398-00	GROMMET	2	
25	90387-067N5-00	COLLAR	2	
26	95026-06016-00	BOLT, FLANGE	2	
27	4FM-2832W-00-00	STAY, MIRROR 2	1	


CONTINUED ON NEXT FRAME ➤

COWLING 1

Ref. No.	Part Number	Description	Qty	Remarks
28	95026-06012-00	BOLT, FLANGE	2	
29	4FM-26299-00-00	PLATE, MIRROR FITTING 2	2	
30	3XV-26298-00-00	PLATE, MIRROR FITTING 1	2	
31	98706-06025-00	SCREW, FLAT HEAD	4	
32	90176-06055-00	NUT, CROWN	4	
33	4FM-2834W-00-00	PROTECTOR 2	2	

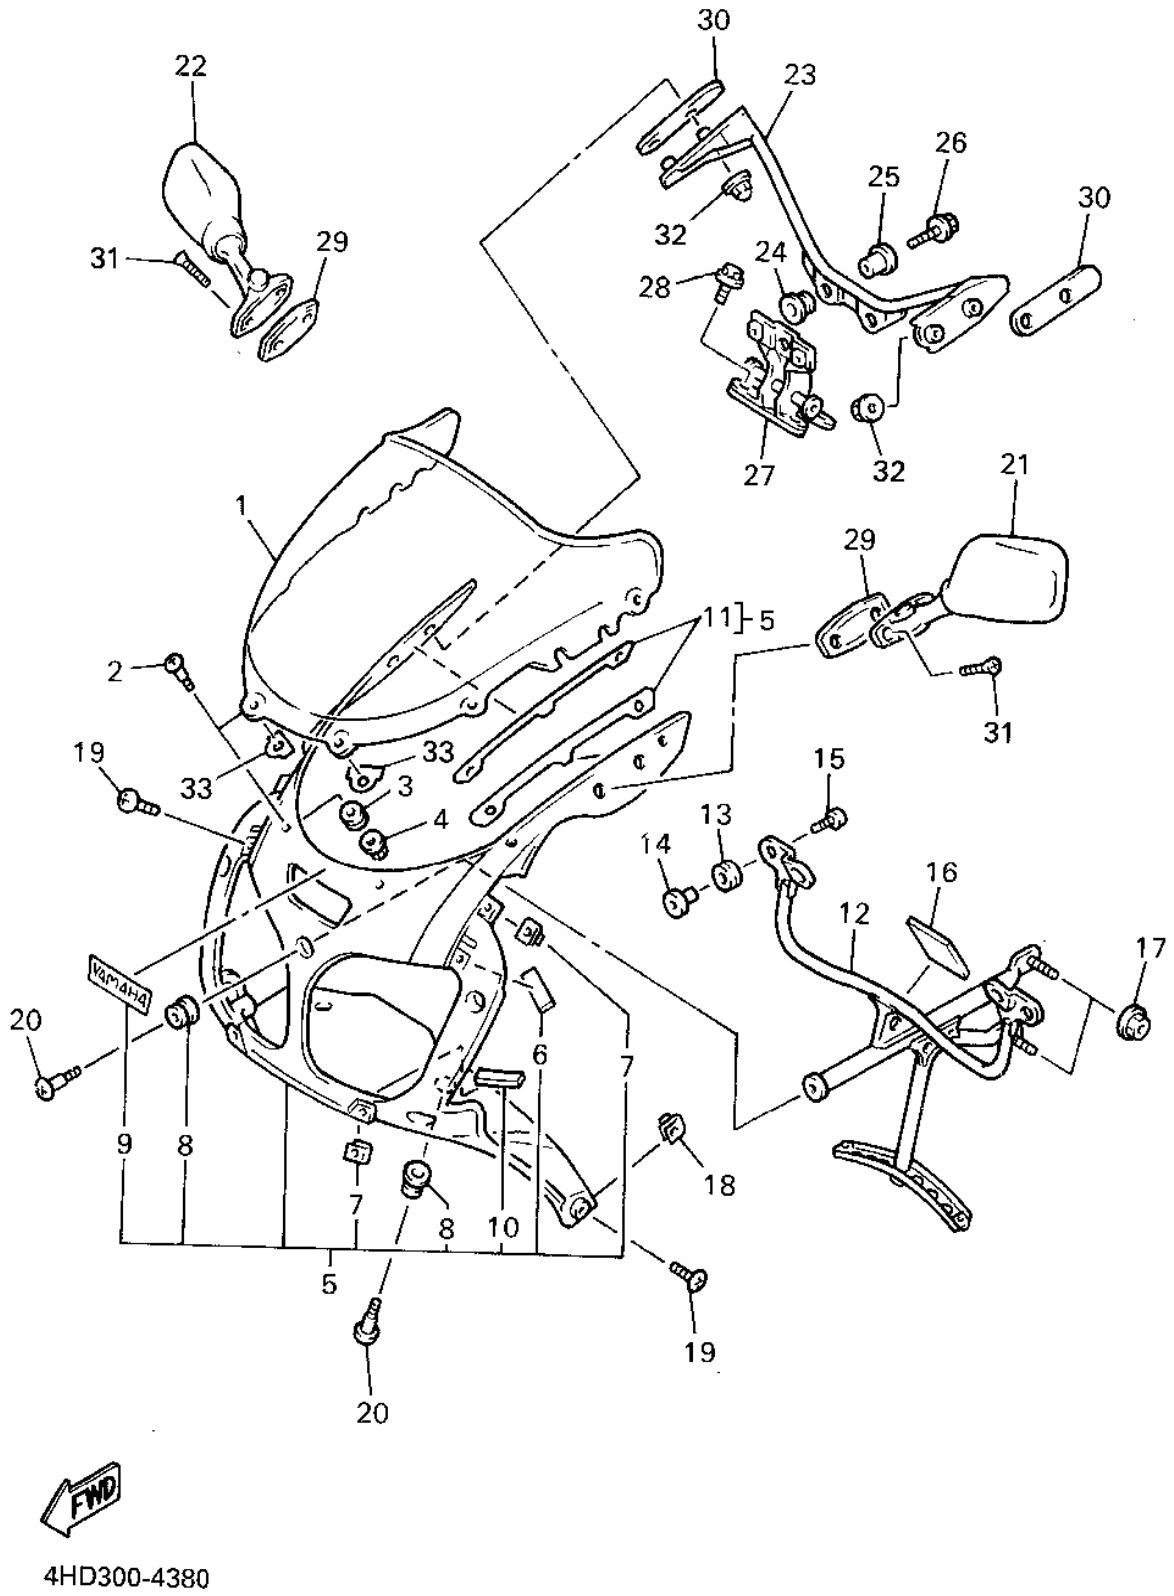


COWLING 2

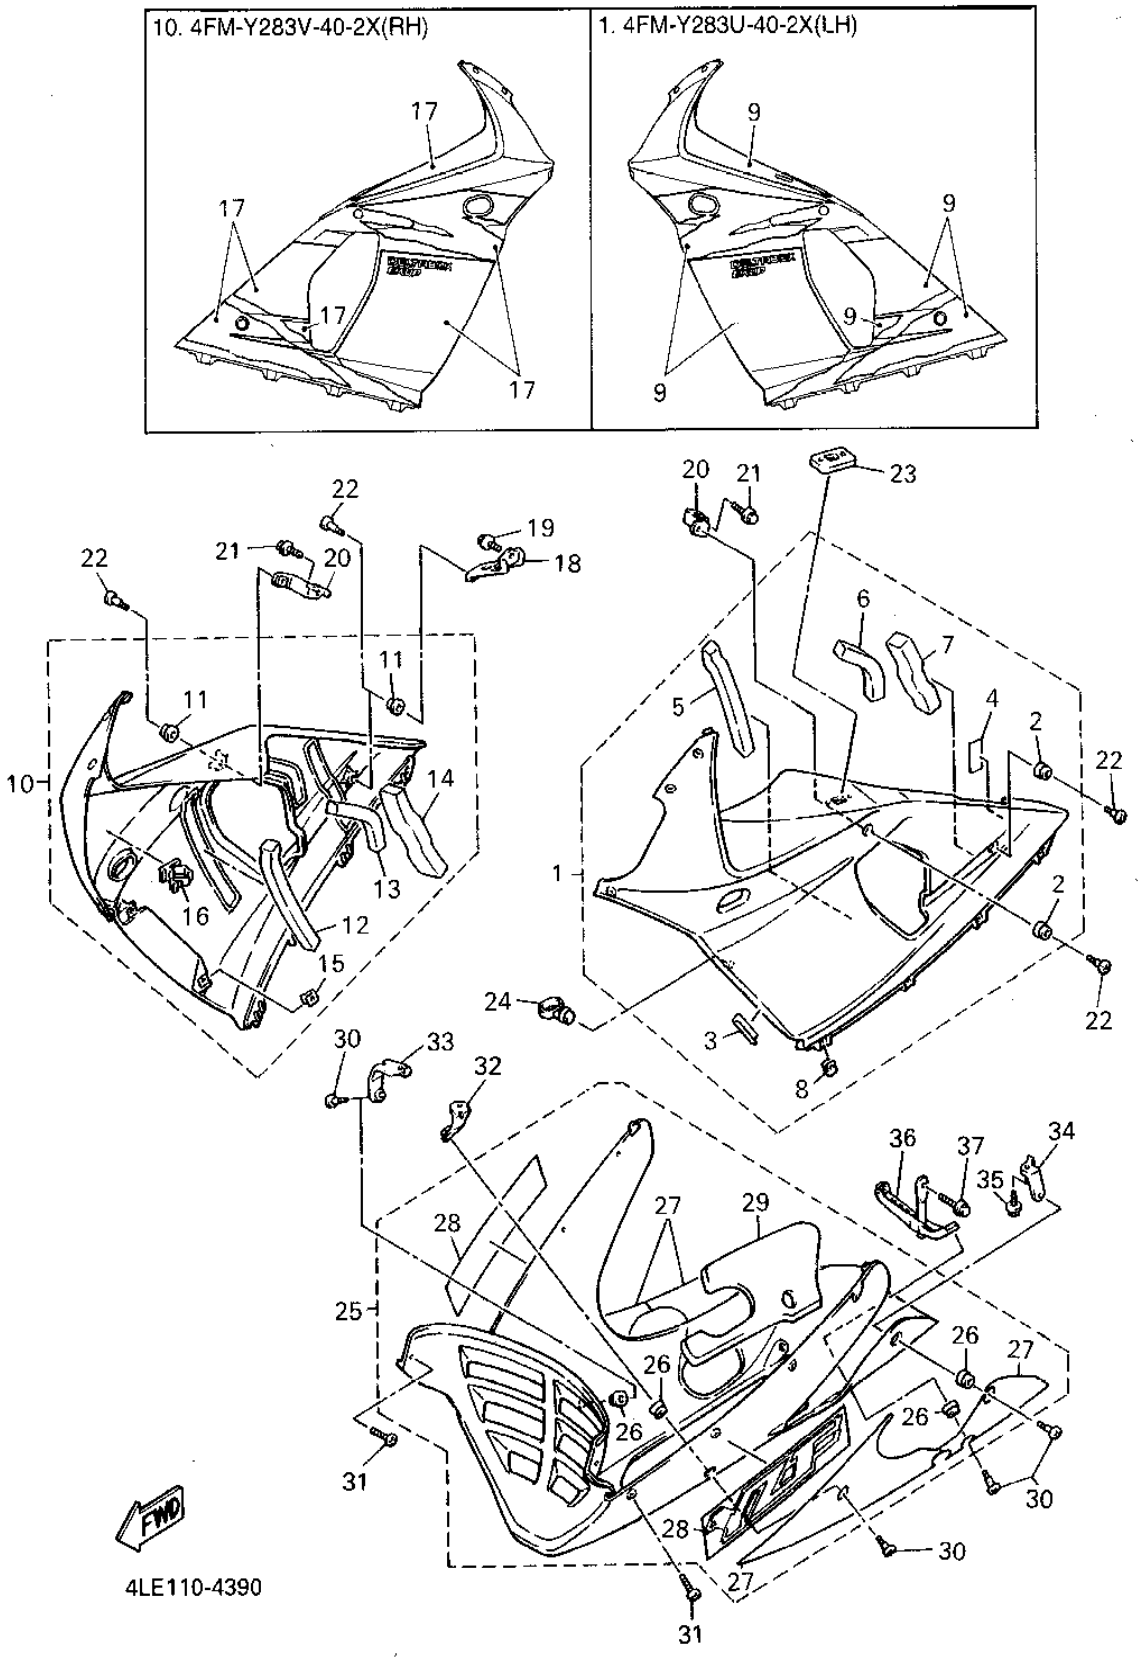

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-Y283U-40-2X	PANEL ASSEMBLY 1	1	BLUISH WHITE COCKTAIL 1/ DEEP VIOLET METALLIC 1
2	90480-13398-00	. GROMMET	2	
3	1JK-21735-00-00	. SEAL 2	1	
4	1JK-21268-00-00	. SEAL	1	
5	4FM-21639-00-00	. DAMPER 2	1	
6	3YL-21649-00-00	. DAMPER	1	
7	4FM-28371-00-00	. DAMPER	1	
8	90183-05024-00	. NUT, SPRING	5	
9	4FM-28301-21-00	. GRAPHIC SET, LOWER COVER 1	1	
10	4FM-Y283V-40-2X	PANEL ASSEMBLY 2	1	BLUISH WHITE COCKTAIL 1/ DEEP VIOLET METALLIC 1
11	90480-13398-00	. GROMMET	2	
12	4FM-21639-00-00	. DAMPER 2	1	
13	3YL-21649-00-00	. DAMPER	1	
14	4FM-28371-00-00	. DAMPER	1	
15	90183-05024-00	. NUT, SPRING	5	
16	90464-25160-00	. CLAMP	1	
17	4FM-28303-01-00	. GRAPHIC SET, LOWER COVER 2	1	
18	4FM-28322-00-00	STAY 2	1	
19	95826-06010-00	BOLT, FLANGE	1	
20	4FM-2836H-00-00	BRACKET 5	2	
21	95816-08012-00	BOLT, flange	2	
22	90150-06036-00	SCREW, ROUND HEAD	4	
23	3FV-28365-00-00	COVER	1	
24	1A8-21518-00-00	HOLDER, CABLE	1	
25	4FM-Y2808-11-P0	COVER ASSEMBLY, UNDER	1	BLUISH WHITE COCKTAIL 1


CONTINUED ON NEXT FRAME ➤

COWLING 2

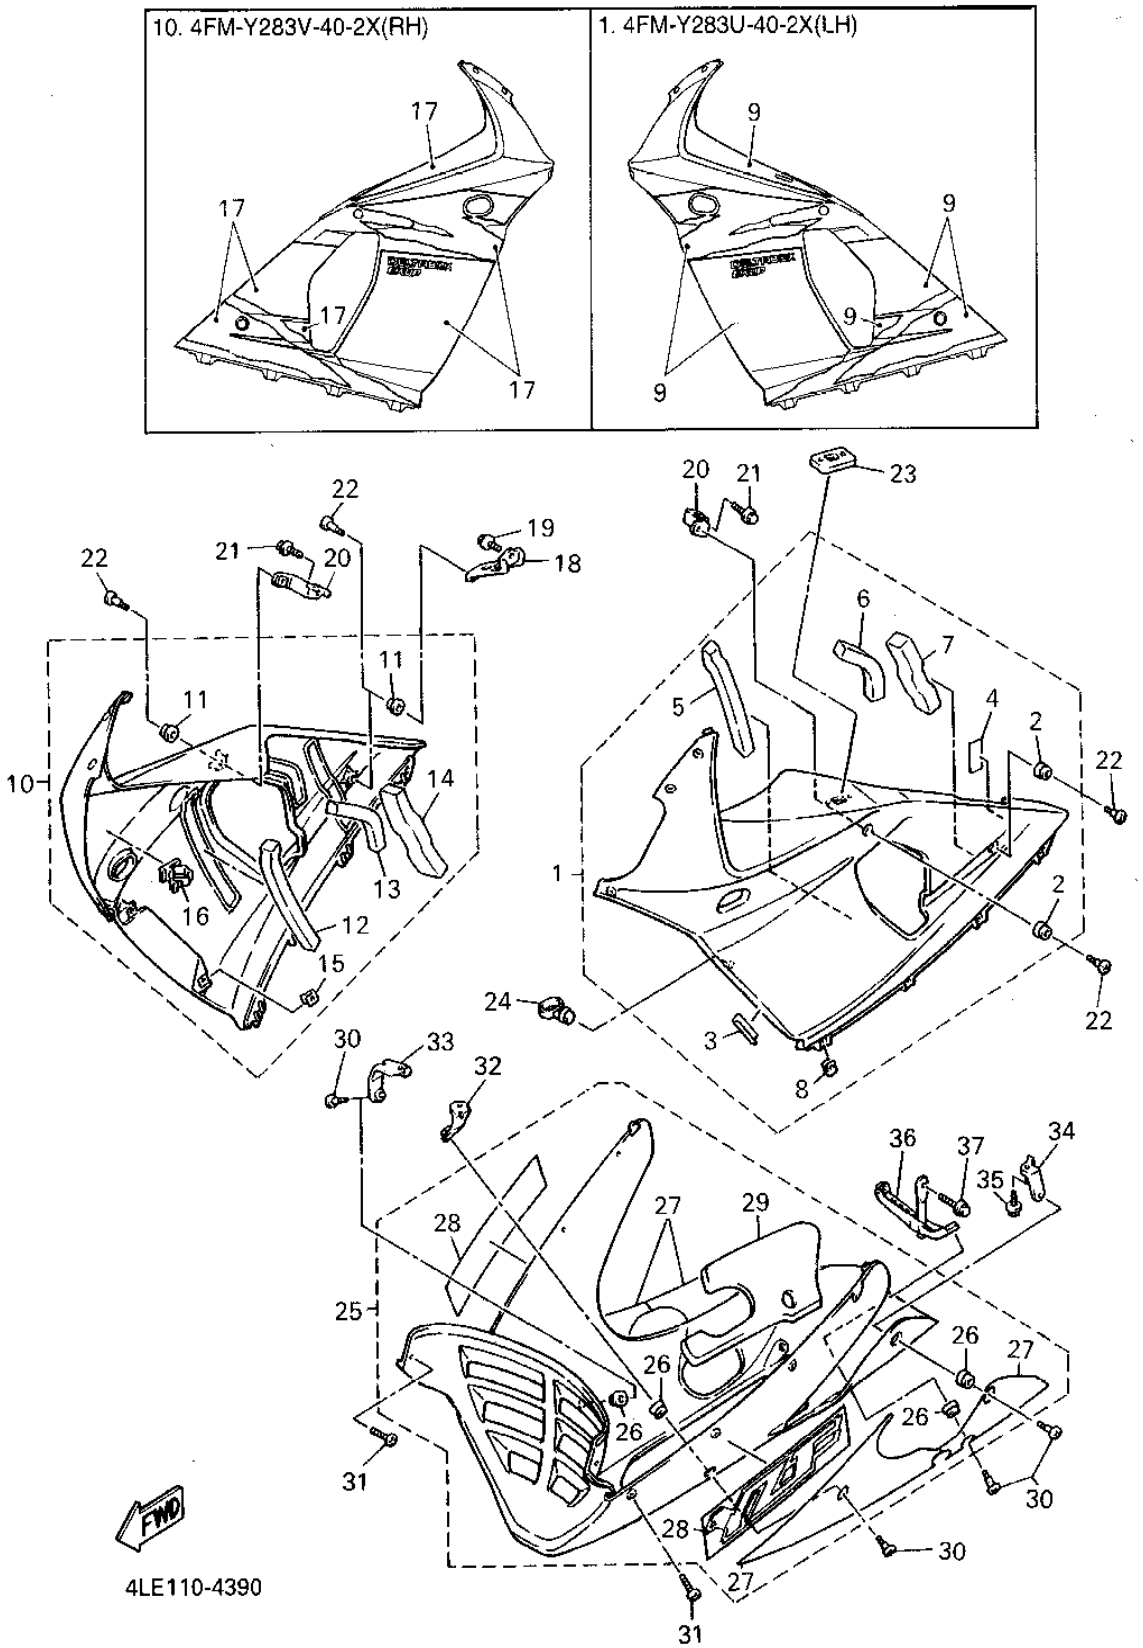

Ref. No.	Part Number	Description	Qty	Remarks
26	90480-13398-00	. GROMMET	5	
27	4FM-28304-00-00	. GRAPHICSET, LOWER COVER 3	1	
28	4FM-2815-40-00	. EMBLEM	2	
29	4FM-2848K-00-00	. SEAT 2	1	
30	90150-06036-00	SCREW, ROUND HEAD	5	
31	90150-05039-00	SCREW, ROUND HEAD	10	
32	4FM-2836F-00-00	BRACKET 3	1	
33	4FM-2836G-00-00	BRACKET 4	1	
34	4FM-2836A-01-00	BRACKET 1	1	
35	95826-06010-00	BOLT, FLANGE	1	
36	4FM-2831T-00-00	STAY, SUPPORT 1	1	
37	90119-06018-00	BOLT, WITH WASHER	1	


GENERATOR

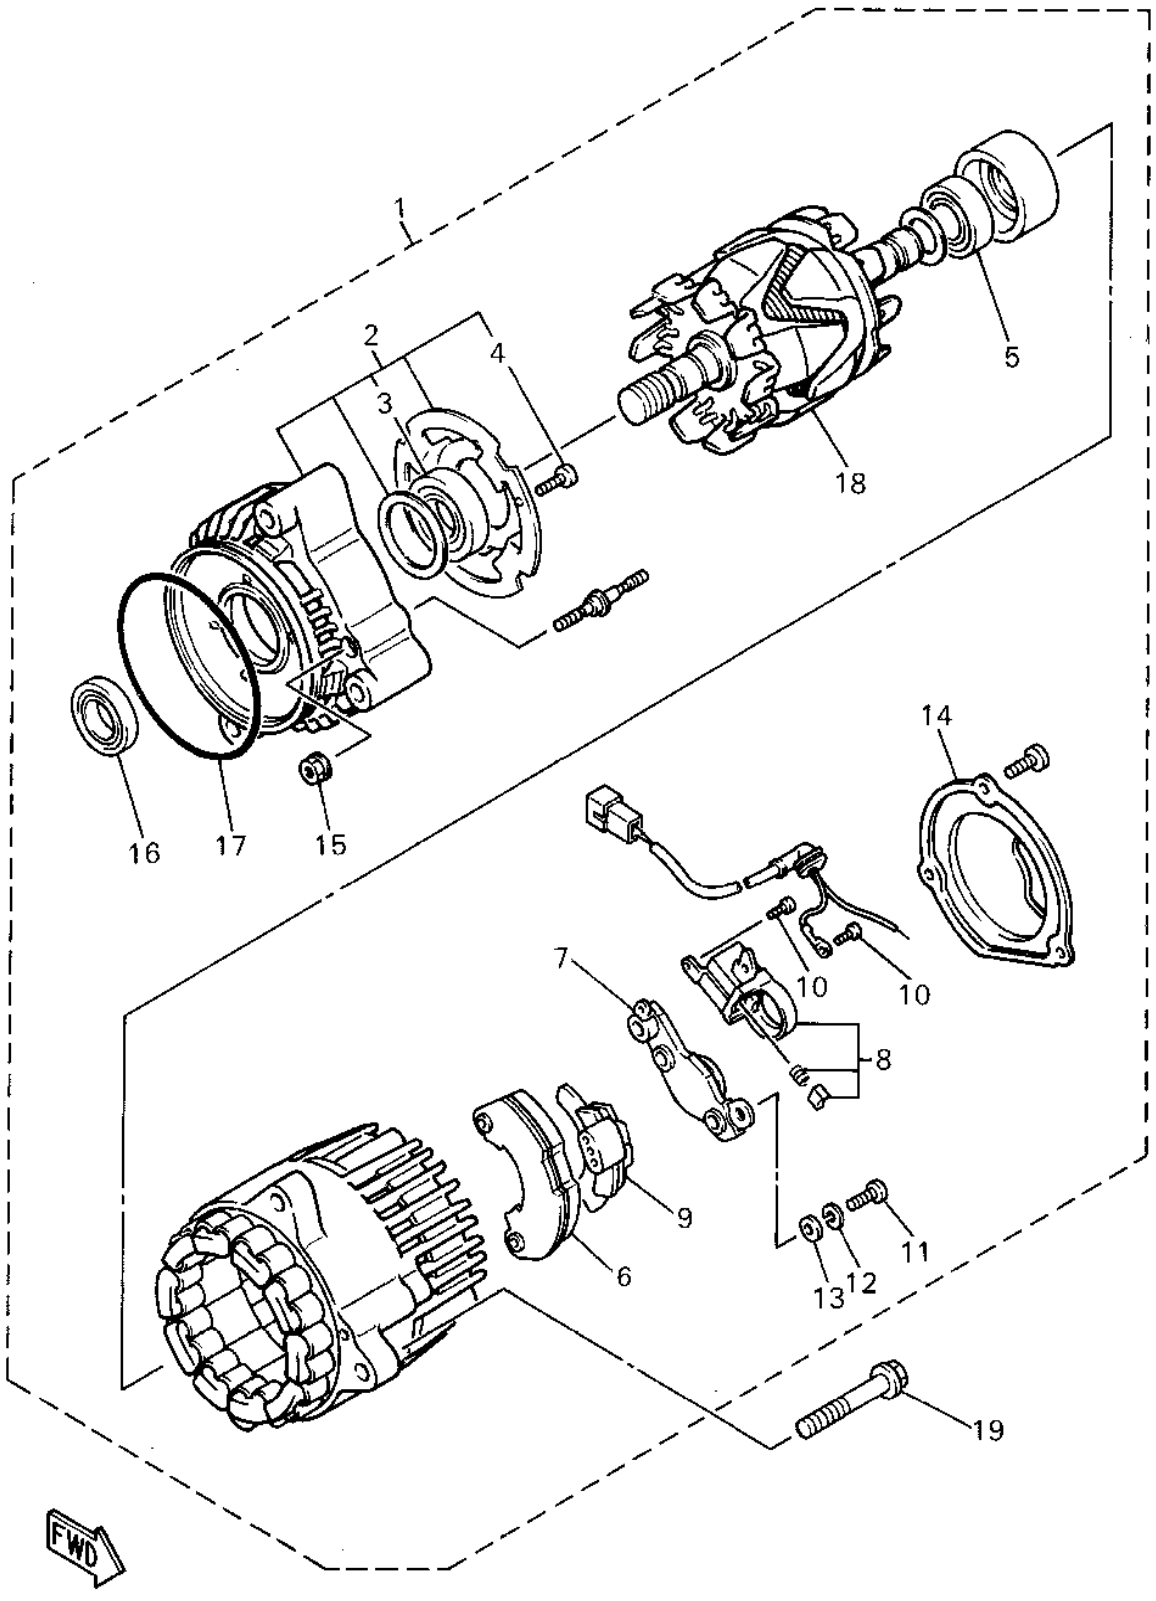

4BH332-3430

Ref. No.	Part Number	Description	Qty	Remarks
1	4BH-81600-00-00	A.C. GENERATOR ASSEMBLY	1	
2	4BH-81634-00-00	. STATOR ASSEMBLY	1	
3	4BH-81643-00-00	. . BEARING	1	
4	4BH-81645-00-00	. . SCREW	4	
5	4BH-81643-10-00	. BEARING	1	
6	4BH-81970-00-00	. RECTIFIER ASSEMBLY	1	
7	36Y-81910-50-00	. VOLTAGE REGULATOR ASSEMBLY	1	
8	3FV-81619-00-00	. BRUSH HOLDER ASSEMBLY	1	
9	4BH-81972-00-00	. COVER, RECTIFIER	1	
10	3FV-81645-00-00	. SCREW	2	
11	98580-05018-00	. SCREW, PAN HEAD (97803-05017)	3	
12	92990-05100-00	. WASHER, SPRING	3	
13	92901-05600-00	. WASHER, PLATE	3	
14	4BH-81604-00-00	. COVER ASSEMBLY	1	
15	95701-05500-00	. NUT, FLANGE	2	
16	36Y-81638-50-00	. OIL SEAL	1	
17	2KT-81642-50-00	. O-RING	1	
18	4BH-81660-00-00	. ROTOR ASSEMBLY	1	
19	95816-08065-00	BOLT, FLANGE	3	


PICK UP COIL - GOVERNOR

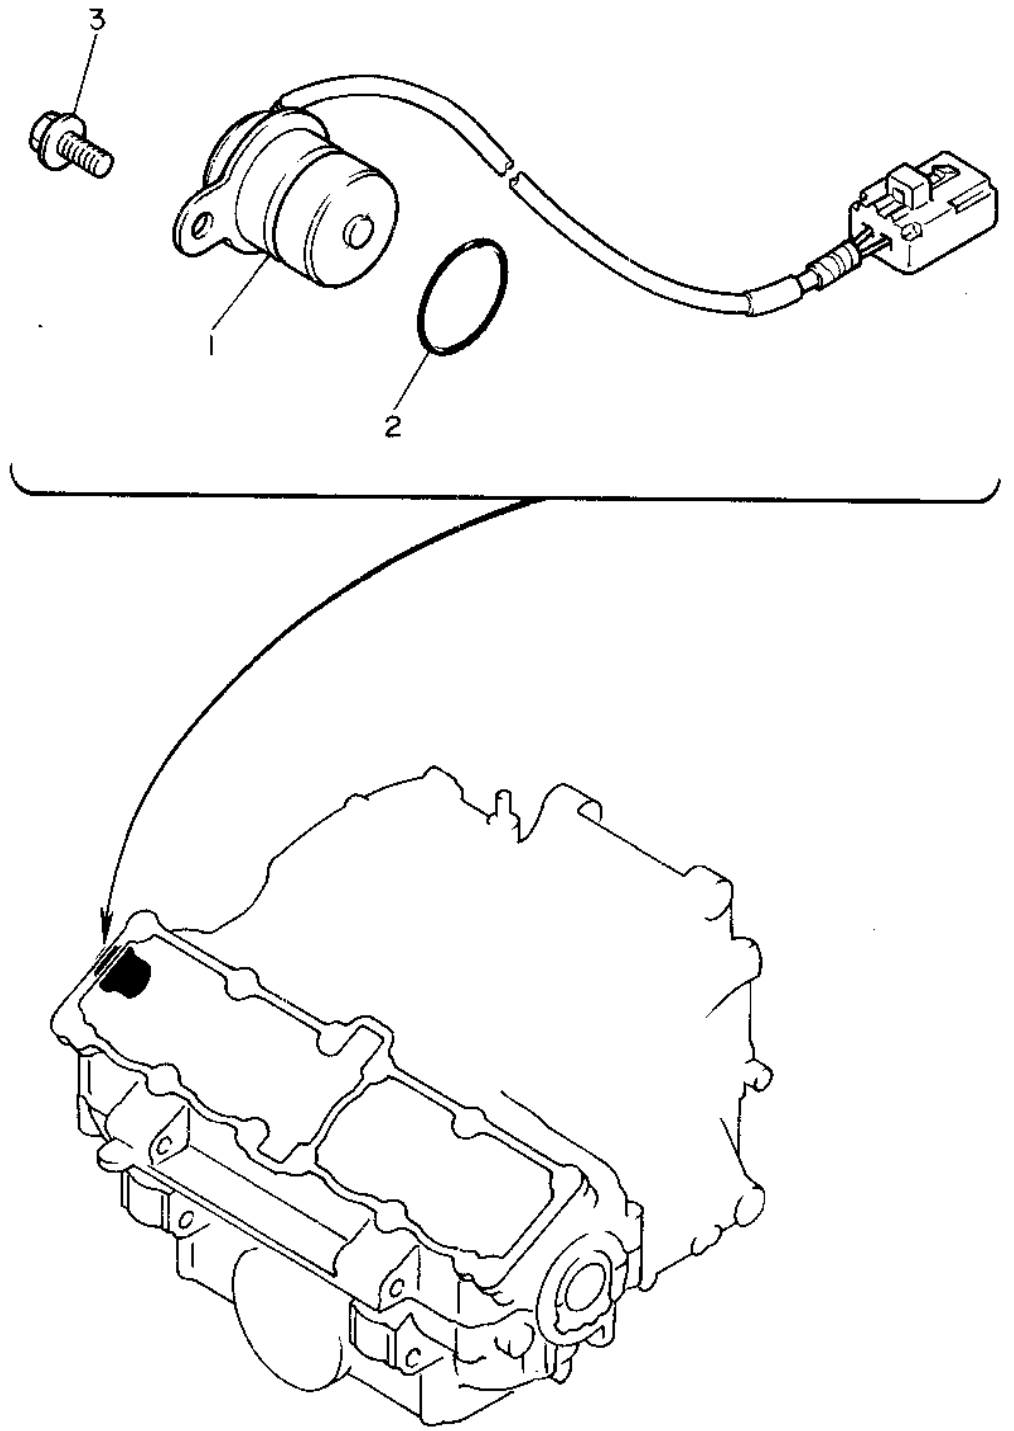


2GH300-7400

Ref. No.	Part Number	Description	Qty	Remarks
1	3GM-81670-00-00	PICK-UP ASSEMBLY	1	
2	93210-19216-00	O-RING	1	
3	95023-06012-00	BOLT, FLANGE	1	

STARTING MOTOR

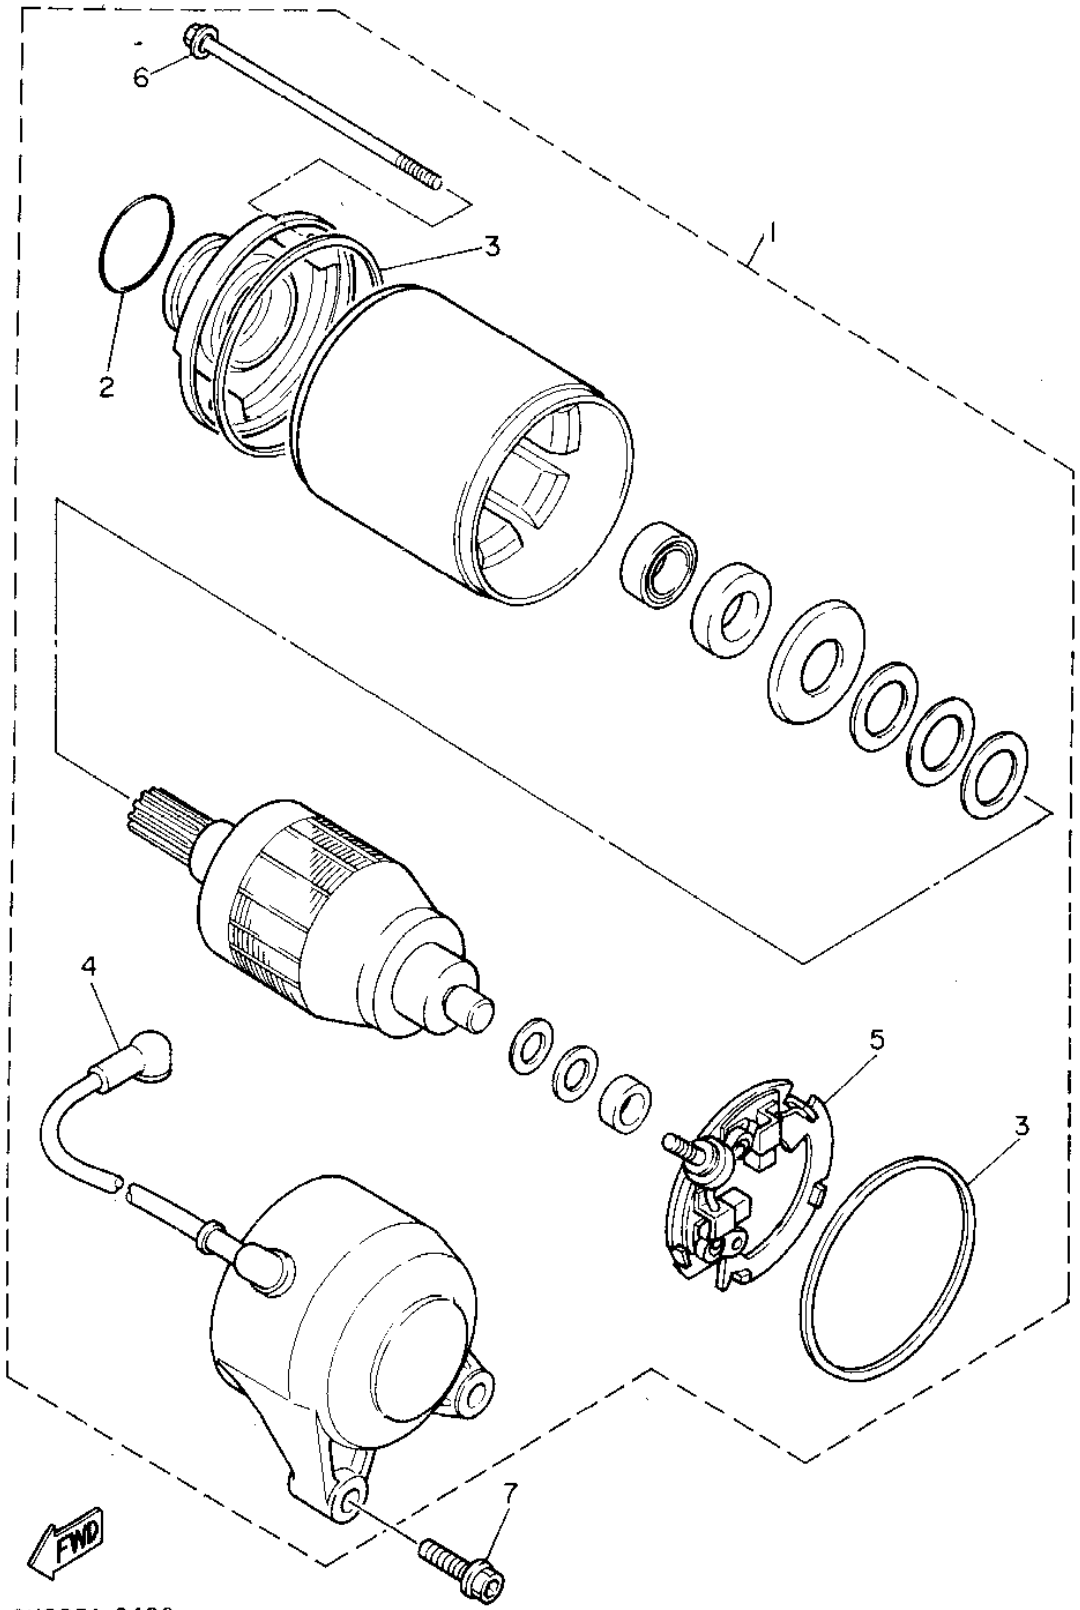


Ref. No.	Part Number	Description	Qty	Remarks
1	3XF-81800-00-00	STARTING MOTOR ASSEMBLY	1	
2	26H-81847-00-00	. O-RING	1	
3	11H-81844-00-00	. GASKET	2	
4	2KT-81815-00-00	. CORD, STARTER MOTOR	1	
5	3KS-81840-00-00	. BRUSH HOLDER ASSEMBLY	1	
6	3HE-81826-00-00	. BOLT	2	
7	95811-06025-00	BOLT, FLANGE	2	

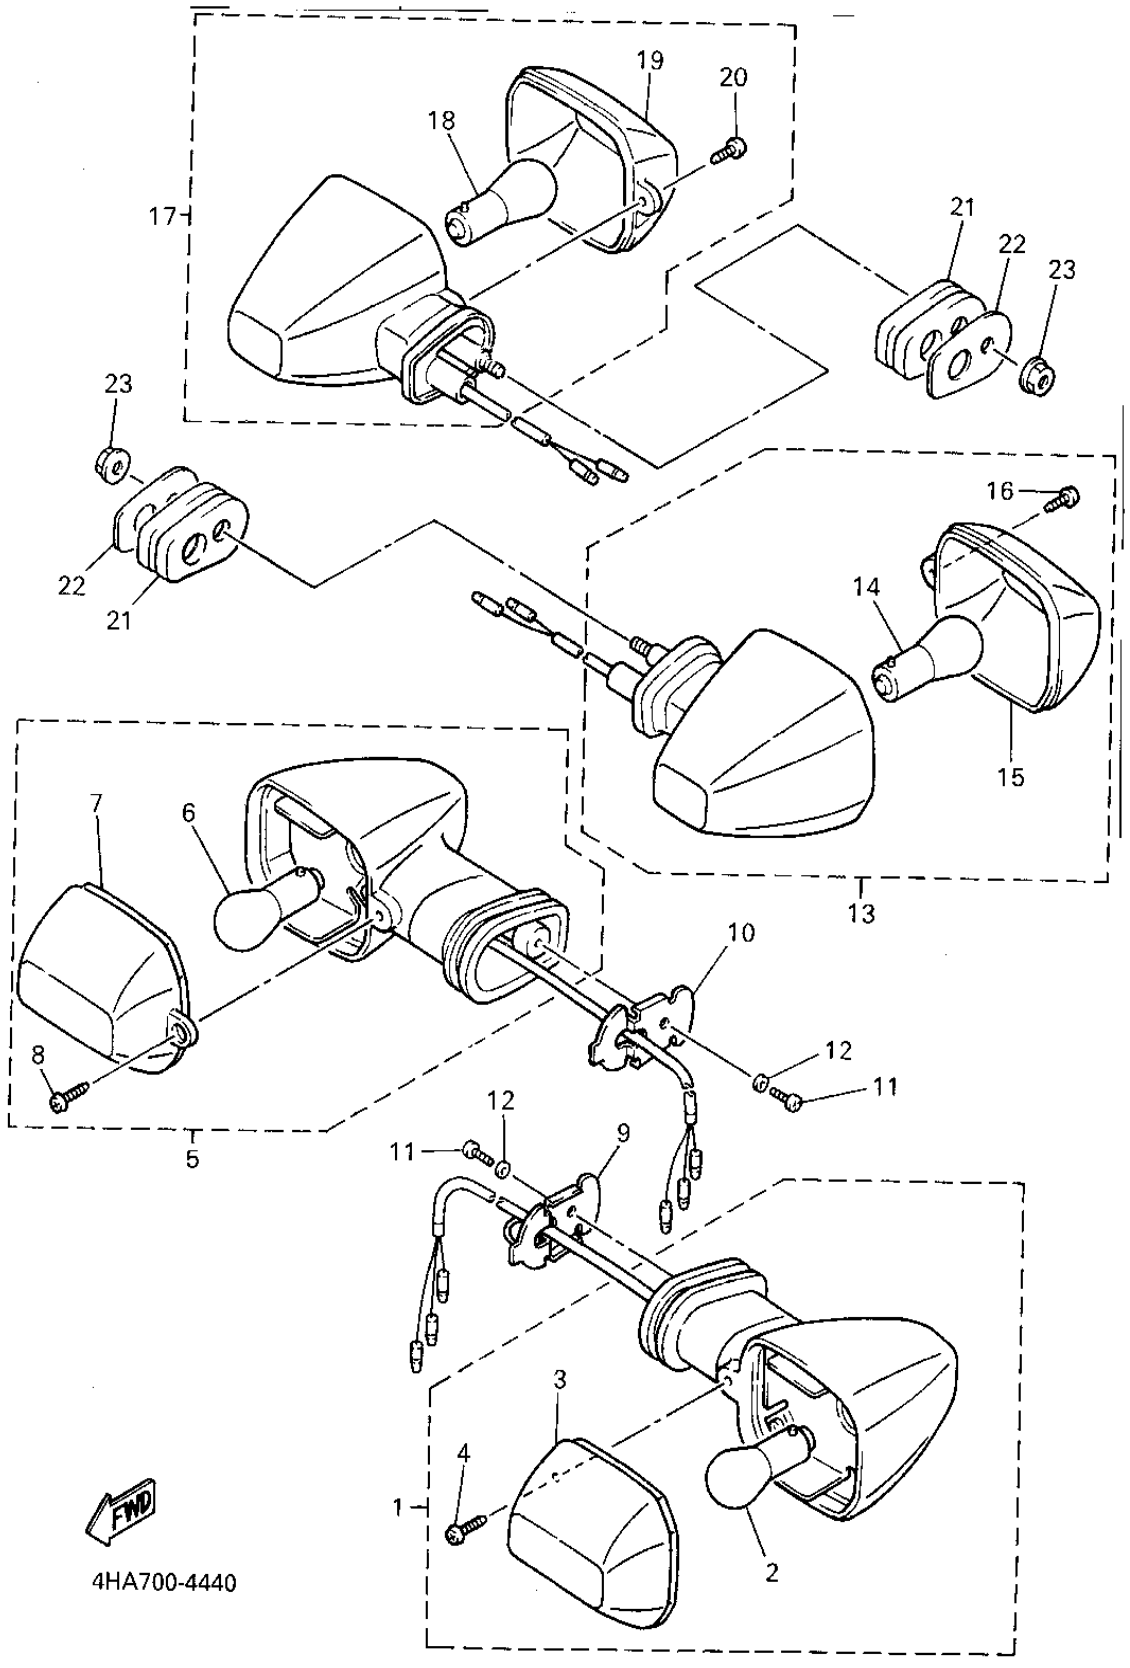

FLASHER LIGHT - TURNSIGNAL

Ref. No.	Part Number	Description	Qty	Remarks
1	4JH-83310-10-00	FRONT FLASHER LIGHT ASSEMBLY 1	1	
2	256-84714-61-00	. BULB (12V-27/8W)	1	
3	4JH-83332-10-00	. LENS, FLASHER	1	
4	97702-40610-00	. SCREW, TAPPING	1	
5	4JH-83320-10-00	FRONT FLASHER LIGHT ASSEMBLY 2	1	
6	256-84714-61-00	. BULB (12V-27/8W)	1	
7	4JH-83342-10-00	. LENS, FLASHER 2	1	
8	97702-40610-00	. SCREW, TAPPING	1	
9	4JH-83318-10-00	STAY, FLASHER 1 (4JH-83318-00-00)	1	
10	4JH-83318-00-00	STAY, FLASHER 1	1	
11	98506-04008-00	SCREW, PAN HEAD	2	
12	92906-04600-00	WASHER, PLATE	2	
13	4JH-83330-20-00	REAR FLASHER LIGHT ASSEMBLY 1	1	
14	256-83311-70-XX	. BULB, TS 12V27W	1	
15	4JH-83332-10-00	. LENS, FLASHER	1	
16	97702-40610-00	. SCREW, TAPPING	1	
17	4JH-83340-20-00	FLASHER LIGHT ASSEMBLY 2	1	
18	256-83311-70-XX	. BULB, TS 12V27W	1	
19	4JH-83342-10-00	. LENS, FLASHER 2	1	
20	97702-40610-00	. SCREW, TAPPING	1	
21	4FM-83345-00-00	PLUG, BLIND	2	
22	4FM-83369-00-00	STAY, FLASHER 2	2	
23	95701-06500-00	NUT, FLANGE	2	


METER

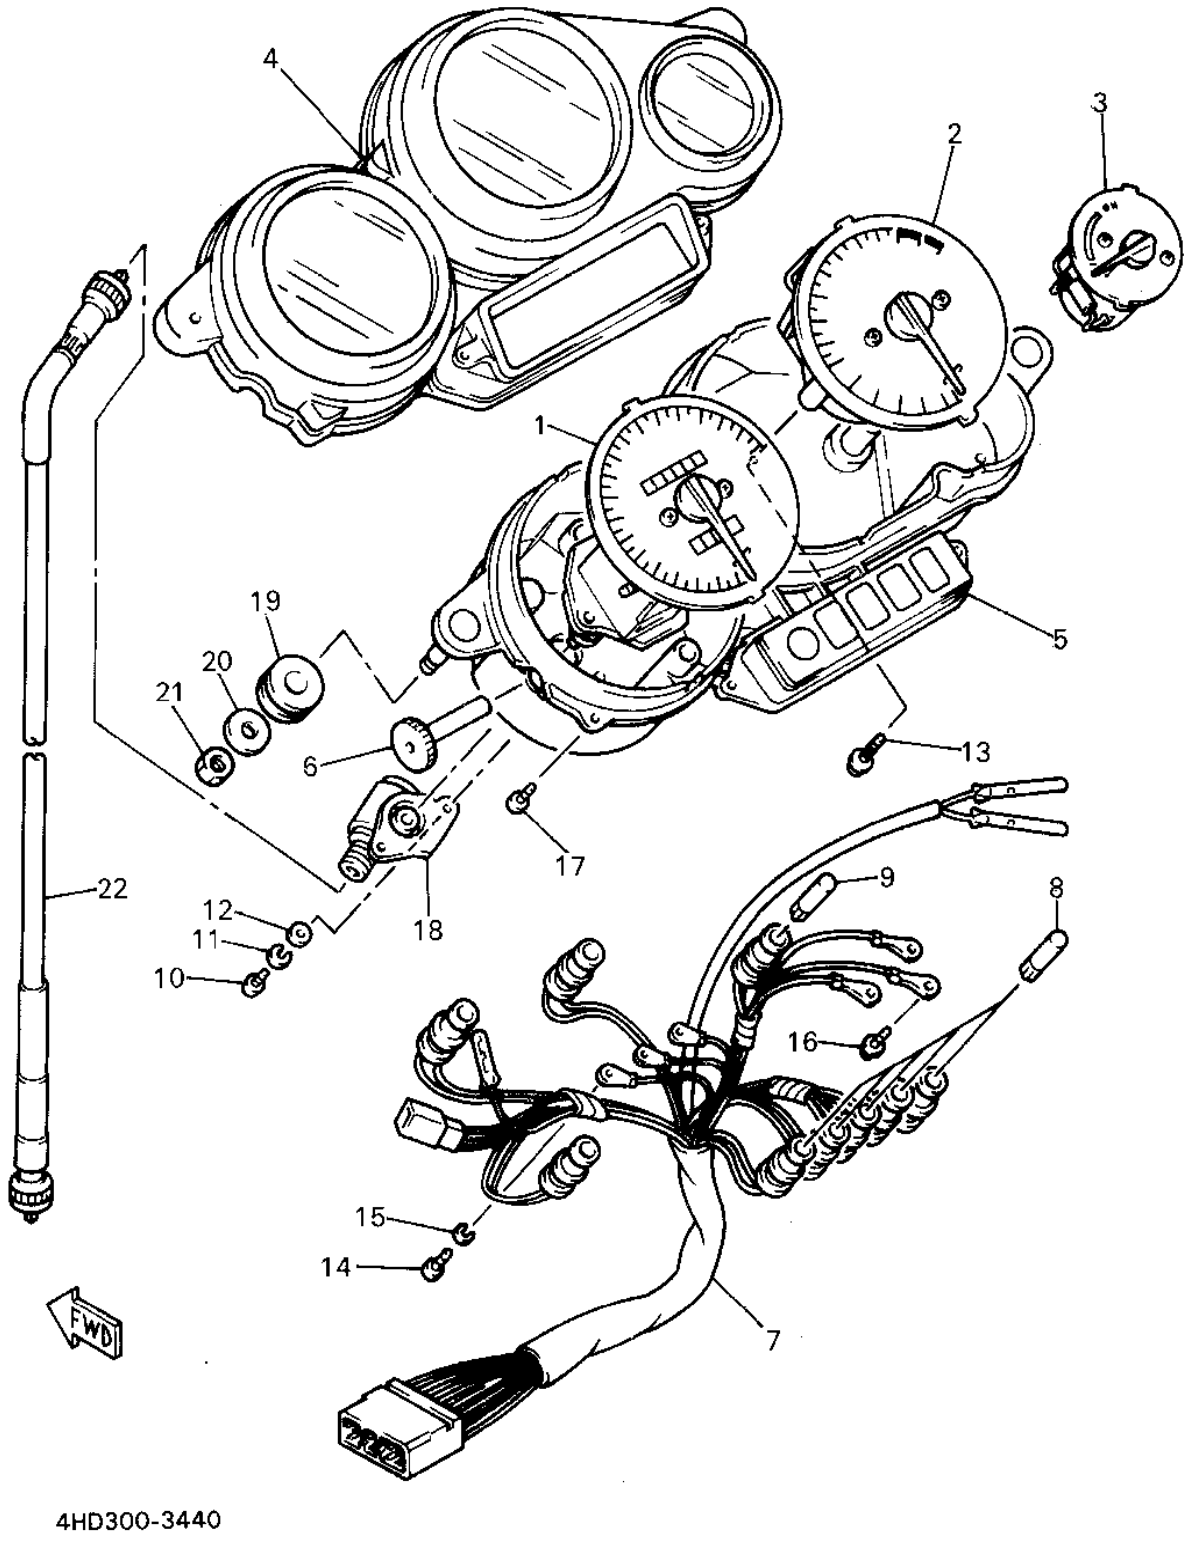

4HD300-3440

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-83570-10-00	SPEEDOMETER ASSEMBLY ..	1	
2	4FM-83540-00-00	TACHOMETER ASSEMBLY ...	1	
3	4FM-83590-00-00	WATER TEMPERATURE ASSEMBLY	1	
4	4FM-83559-00-00	COVER, METER	1	
5	4FM-8353H-50-00	CASE, UNDER	1	
6	2GH-83578-00-00	KNOB, TRIP METER	1	
7	4FM-83509-00-00	SOCKET CORD ASSEMBLY ..	1	
8	4G1-84744-00-00	BULB, MTR.12V3.4W	5	
9	2GV-83517-00-00	BULB (12V-1.7W, T6.5)	4	
10	98580-04010-00	SCREW, PAN HEAD	4	
11	92990-04100-00	WASHER, SPRING	4	
12	92901-04600-00	WASHER, PLATE	4	
13	97902-04122-00	SCREW, WITH WASHER	2	
14	98580-03010-00	SCREW, PAN HEAD (98502-03010)	3	
15	92990-03100-00	WASHER, SPRING (92901-03100)	3	
16	90159-03102-00	SCREW, WITH WASHER	3	
17	90164-04023-00	SCREW, TAPPING	5	
18	4FM-83520-00-00	SOCKET CORD ASSEMBLY ..	1	
19	5J0-83513-00-00	DAMPER	2	
20	90201-06059-00	WASHER, PLATE	2	
21	95316-06600-00	NUT	2	
22	4FM-83550-00-00	SPEEDOMETER CABLE ASSEMBLY	1	


HEADLIGHT

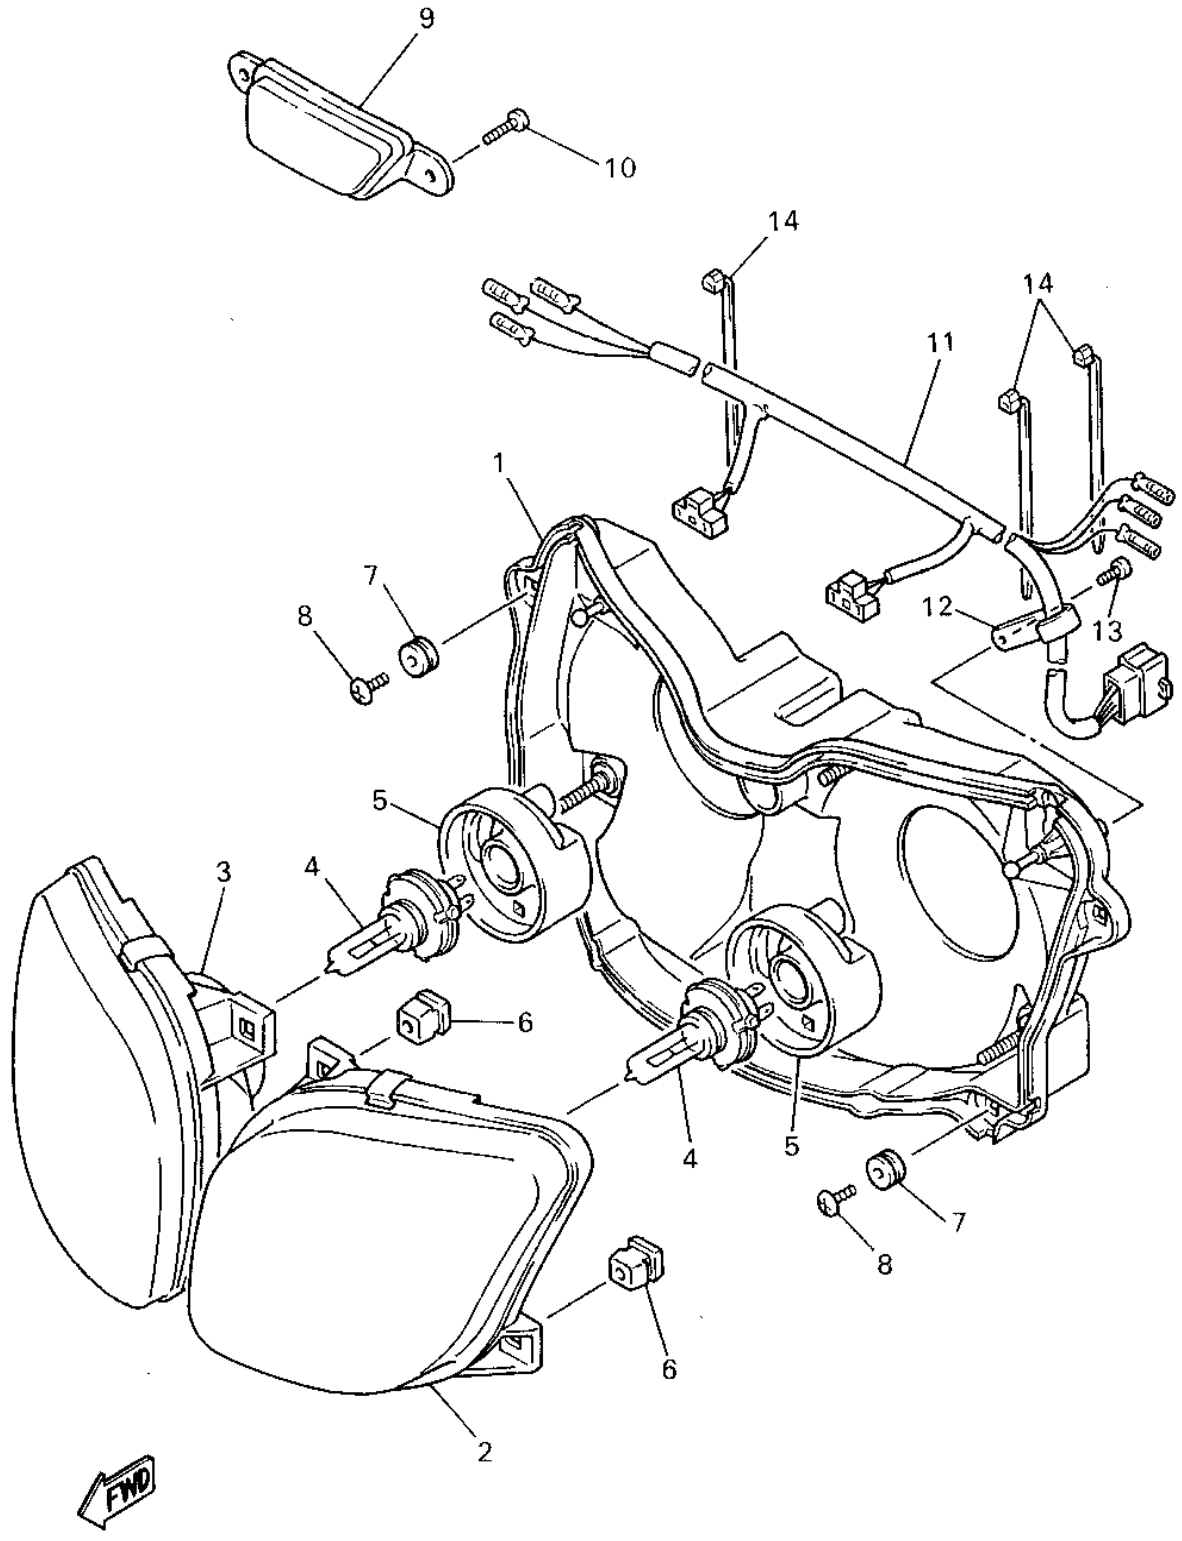

4HA700-4460

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-84330-41-00	BODY ASSEMBLY	1	
2	4FM-84320-40-00	LENS ASSEMBLY	1	
3	4FM-8432A-40-00	LENS ASSEMBLY	1	
4	1ML-84314-00-XX	BULB (12V-35/35W) (1FM-84314-H0-00)	2	HALOGEN
5	4JG-84397-00-00	COVER, SOCKET	2	
6	51L-84334-00-00	NUT, ADJUSTING	4	
7	90480-10584-00	GROMMET	4	
8	97706-60014-00	SCREW, TAPPING	4	
9	3LK-84378-00-P3	CAP	1	DEEP VIOLET METALLIC 1
10	90167-05041-00	SCREW, TAPPING	2	
11	4HY-84359-10-00	CORD, HEADLIGHT	1	
12	90462-05061-00	CLAMP	1	
13	90167-05041-00	SCREW, TAPPING	1	
14	90464-13073-00	CLAMP	3	


TAILLIGHT

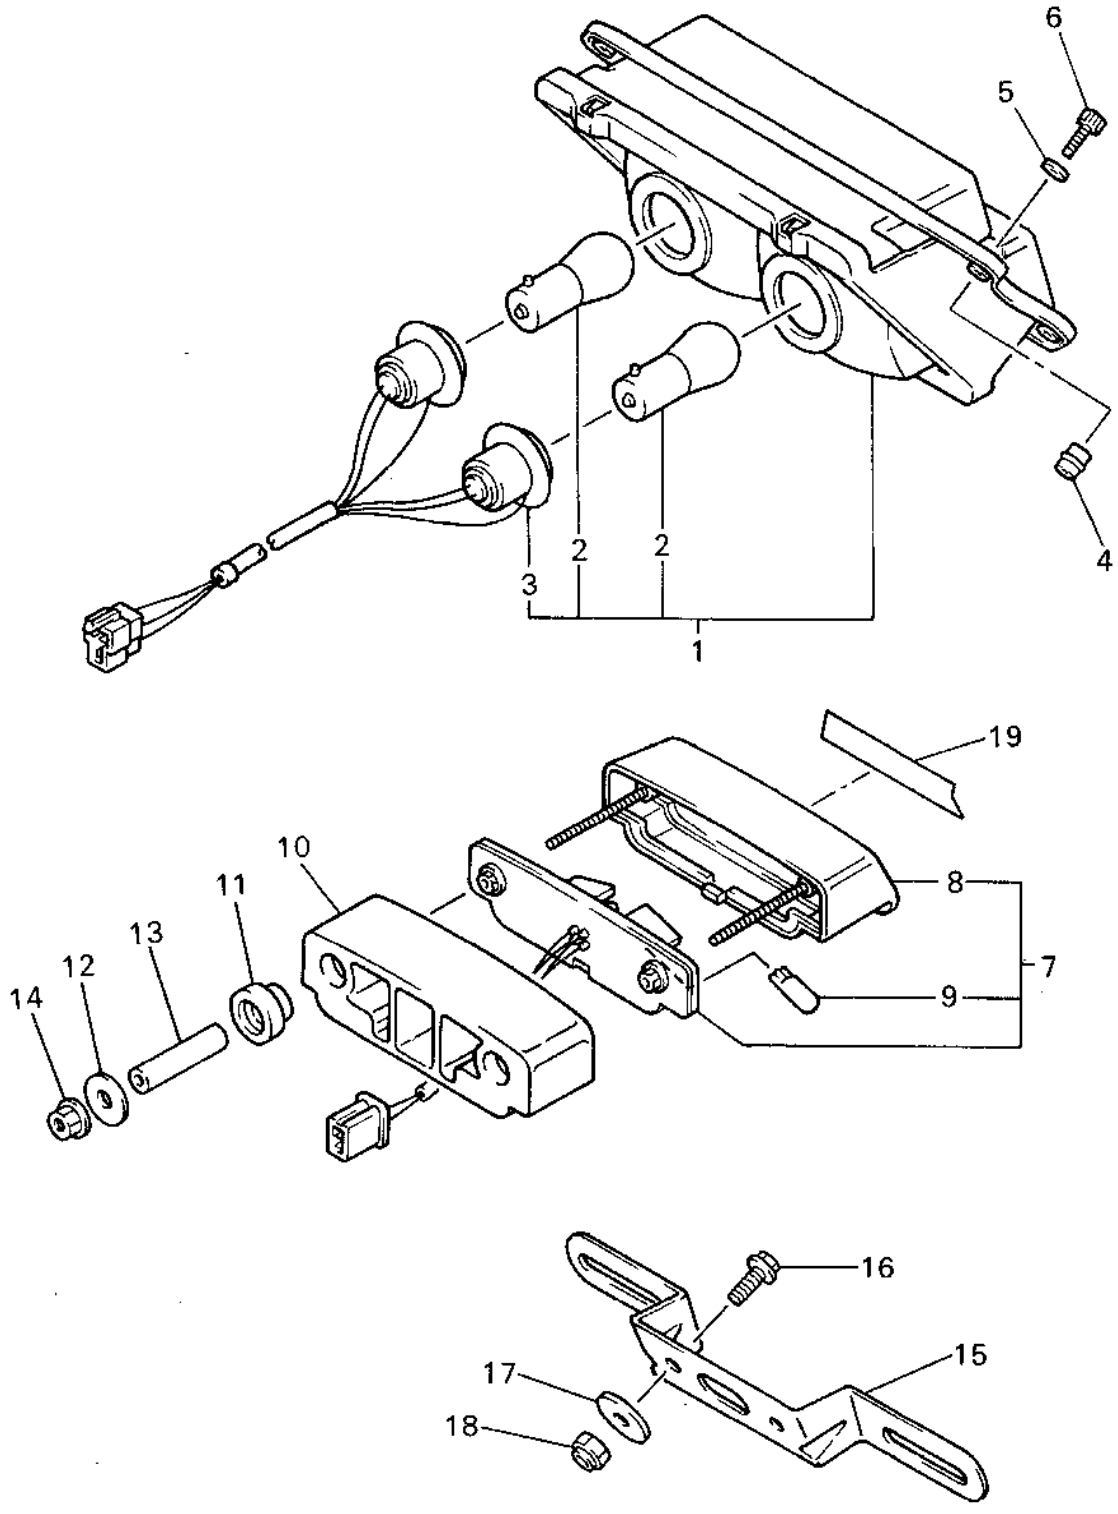

4HA700-3480


Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-84710-10-00	TAILLIGHT UNIT ASSEMBLY . .	1	
2	31L-84714-00-00	. BULB, TAILLIGHT (12V-21/5W)	2	
3	4FM-84735-00-00	. CORD ASSEMBLY	1	
4	90179-05523-00	NUT	4	
5	92906-05600-00	WASHER, PLATE	4	
6	90110-05112-00	BOLT, HEXAGON SOCKET HEAD	4	
7	4FM-84745-10-00	LICENCE LIGHT UNIT ASSEMBLY	1	
8	4FM-84749-10-00	. BODY, LICENCE LIGHT	1	
9	3F9-84744-00-XX	. BULB, METER 12V3.8W	2	
10	4FM-84742-00-00	SEAT, BASE	1	
11	3F9-84553-00-00	DAMPER	2	
12	90201-05033-00	WASHER, PLATE	2	
13	90387-0601Y-00	COLLAR	2	
14	95706-05500-00	NUT, FLANGE	2	
15	4FM-84751-00-00	BRACKET, LICENSE	1	
16	95026-06016-00	BOLT, FLANGE	2	
17	90201-06059-00	WASHER, PLATE	2	
18	95616-06100-00	NUT, U	2	
19	99236-00080-00	EMBLEM, YAMAHA	1	

ELECTRICAL 1

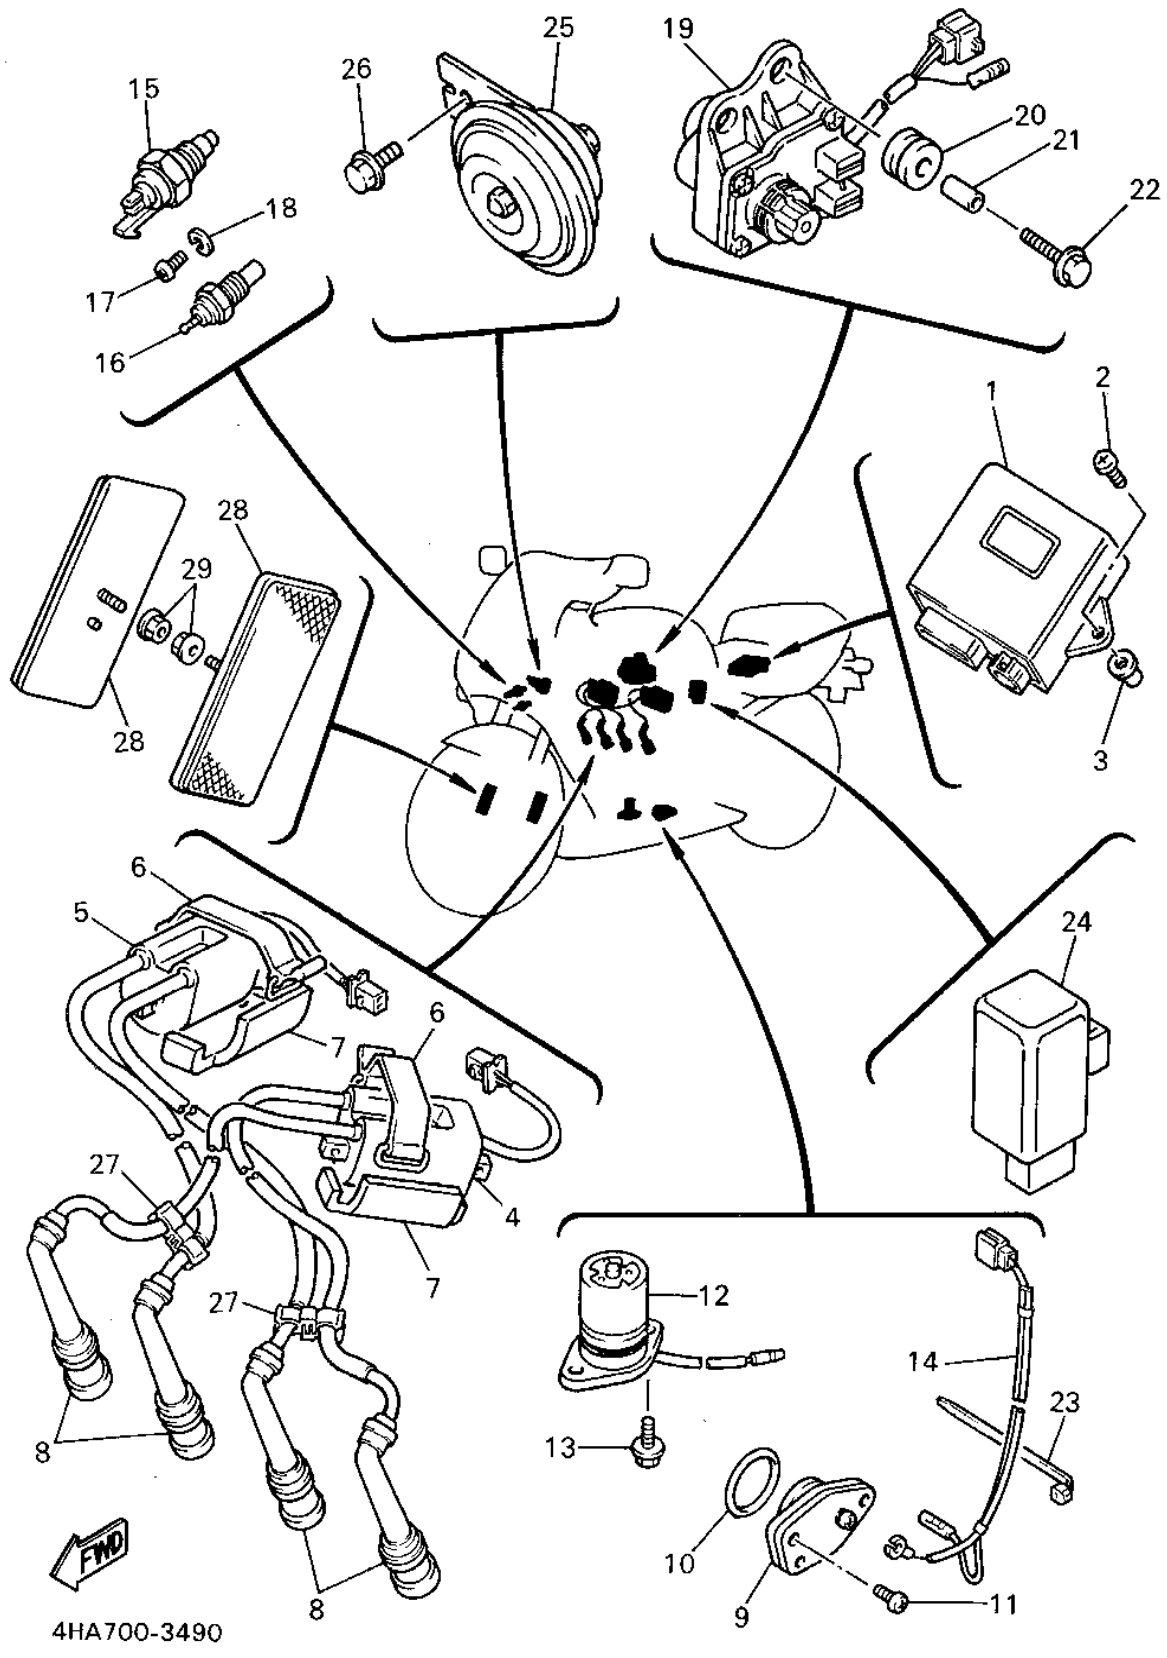

Ref. No.	Part Number	Description	Qty	Remarks
1	4LE-82305-00-00	IGNITOR UNIT ASSEMBLY	1	
2	97706-60016-00	SCREW, TAPPING	2	
3	90338-08226-00	PLUG	2	
4	2XL-82310-10-00	IGNITION COIL ASSEMBLY	1	
5	3CV-82320-00-00	IGNITION COIL ASSEMBLY	1	
6	3TJ-82131-00-00	BAND, BATTERY	2	
7	3TJ-2139U-00-00	DAMPER 2	2	
8	2KT-82370-00-00	PLUG CAP ASSEMBLY	4	
9	1AE-82540-00-00	NEUTRAL SWITCH ASSEMBLY	1	
10	93210-29196-00	O-RING	1	
11	98580-06016-00	SCREW, PAN HEAD	2	
12	3GM-85720-00-00	OIL LEVEL GAUGE ASSEMBLY	1	
13	95021-06014-00	BOLT, FLANGE	2	
14	4FM-82541-00-00	WIRE, LEAD	1	
15	2EL-82560-00-00	THERMO SWITCH ASSEMBLY	1	
16	11H-83591-00-00	THERMO UNIT	1	
17	98506-05008-00	SCREW, PAN HEAD	1	
18	92906-05100-00	WASHER, SPRING	1	
19	4FM-85820-00-00	SERVO MOTOR ASSEMBLY	1	
20	90480-14412-00	GROMMET	2	
21	90387-065V1-00	COLLAR	2	
22	95811-06030-00	BOLT, FLANGE	2	
23	90464-13073-00	CLAMP	1	
24	3YA-83350-00-00	FLASHER RELAY ASSEMBLY	1	UR OMRON
	3YA-83350-10-00	FLASHER RELAY ASSEMBLY	1	UR N.D.
25	4FM-83371-00-00	HORN	1	
26	95811-06010-00	BOLT, FLANGE	1	
27	90464-10186-00	CLAMP	2	
28	11H-85110-01-00	REFLECTOR ASSEMBLY	2	


CONTINUED ON NEXT FRAME ➤

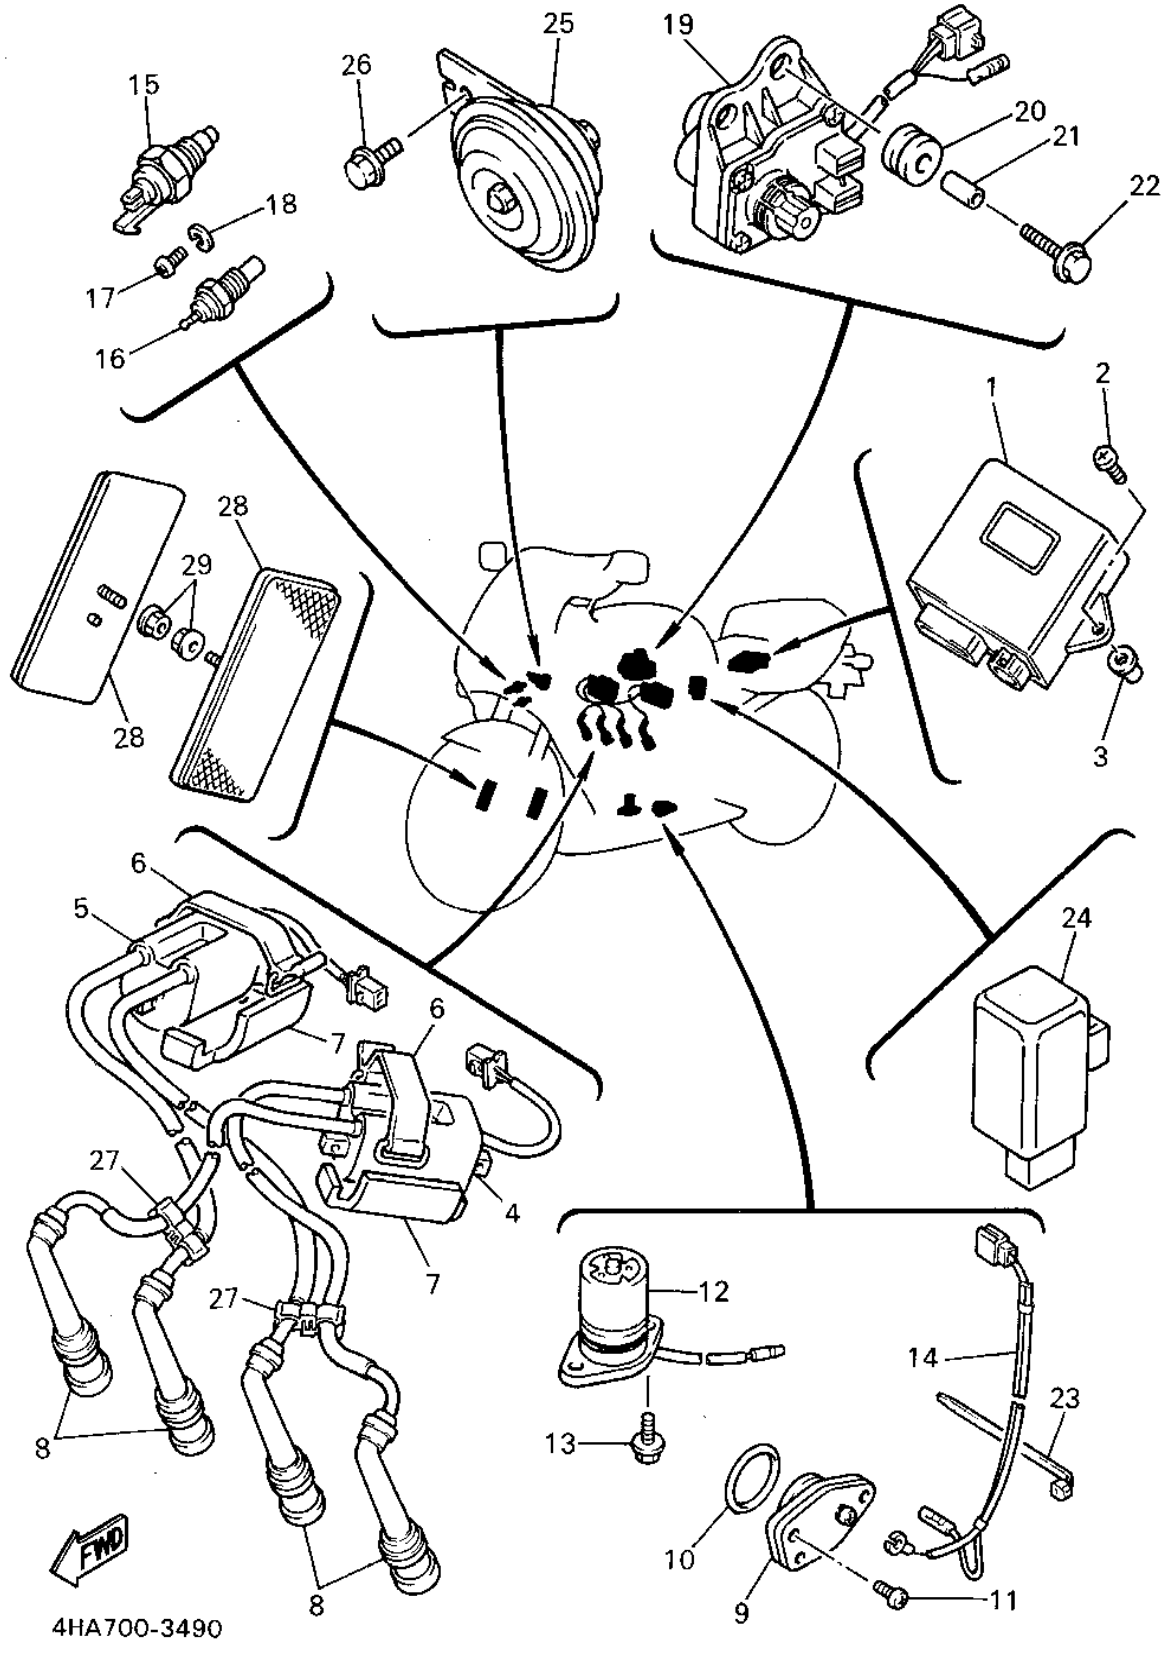

ELECTRICAL 1


Ref. No.	Part Number	Description	Qty	Remarks
29	95701-05500-00	NUT, FLANGE	2	

ELECTRICAL 2

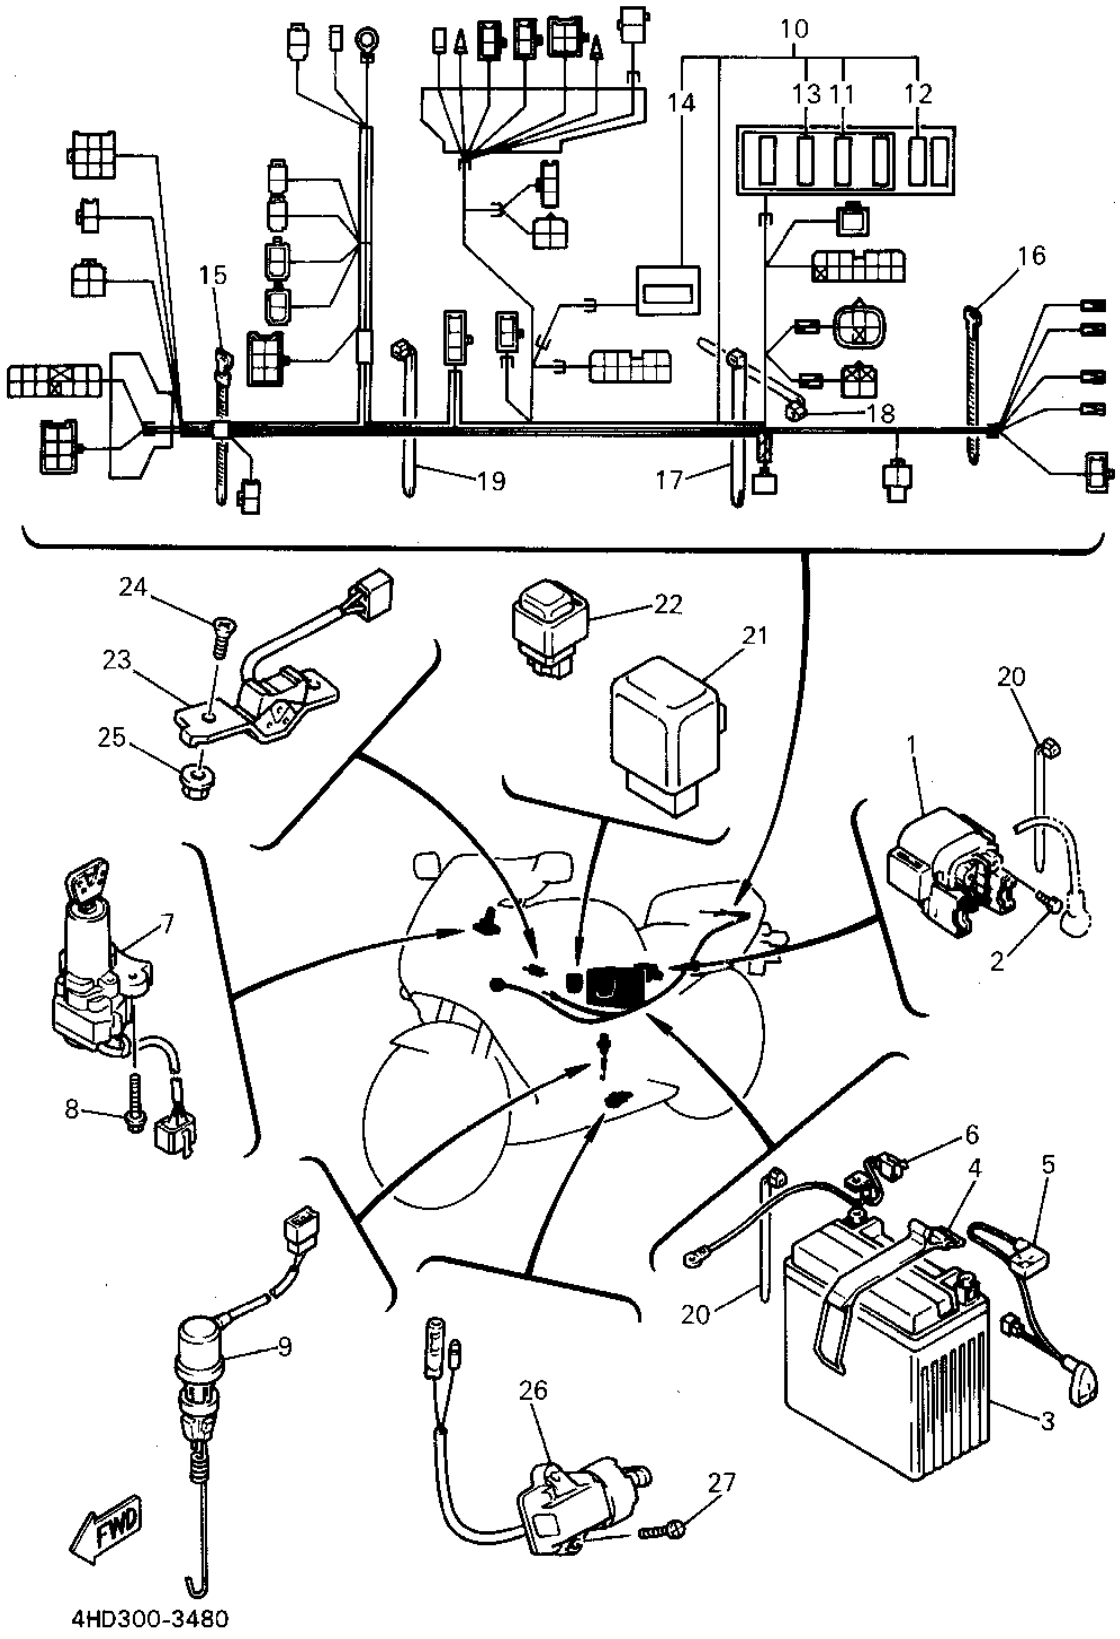

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-81940-00-00	STARTER RELAY ASSEMBLY	1	
2	95023-06008-00	BOLT	2	
3	BTY-YTX12-BS-00	BATTERY ASSEMBLY (YTX12-BS)	1	
4	4BP-82131-00-00	BAND, BATTERY	1	
5	4FM-82115-00-00	WIRE, PLUS LEAD	1	
6	3FV-82116-00-00	WIRE, MINUS LEAD	1	
7	4FM-82501-00-00	MAIN SWITCH STEERING LOCK	1	
8	90109-060G4-00	BOLT	2	
9	1KT-82530-02-00	STOP SWITCH ASSEMBLY	1	
10	4HY-82590-10-00	WIRE HARNESS ASSEMBLY	1	
11	2KW-82151-00-00	. FUSE (7.5A-BL)	3	
12	2GH-82151-00-00	. FUSE (20A-BL)	2	
13	36Y-82151-00-00	. FUSE (15A-BL)	1	
14	4FM-82151-00-00	. FUSE (30A)	1	
15	437-83936-01-00	BAND, SWITCH CORD	1	
16	90464-12089-00	CLAMP	6	
17	90464-13080-00	CLAMP	1	
18	90464-13073-00	CLAMP	1	
19	90464-13073-00	CLAMP	8	
20	90464-15195-00	CLAMP	2	
21	3EN-81950-00-00	RELAY ASSEMBLY	1	
22	3GM-81950-00-00	RELAY ASSEMBLY	1	
23	3TJ-83964-00-00	SWITCH	1	
24	98780-05016-00	SCREW, FLAT HEAD	2	
25	95701-05500-00	NUT, FLANGE	2	
26	4FM-82566-00-00	SWITCH, SIDE STAND	1	
27	90157-05079-00	SCREW, PAN HEAD	2	

FUEL TANK (CALIFORNIA ONLY)

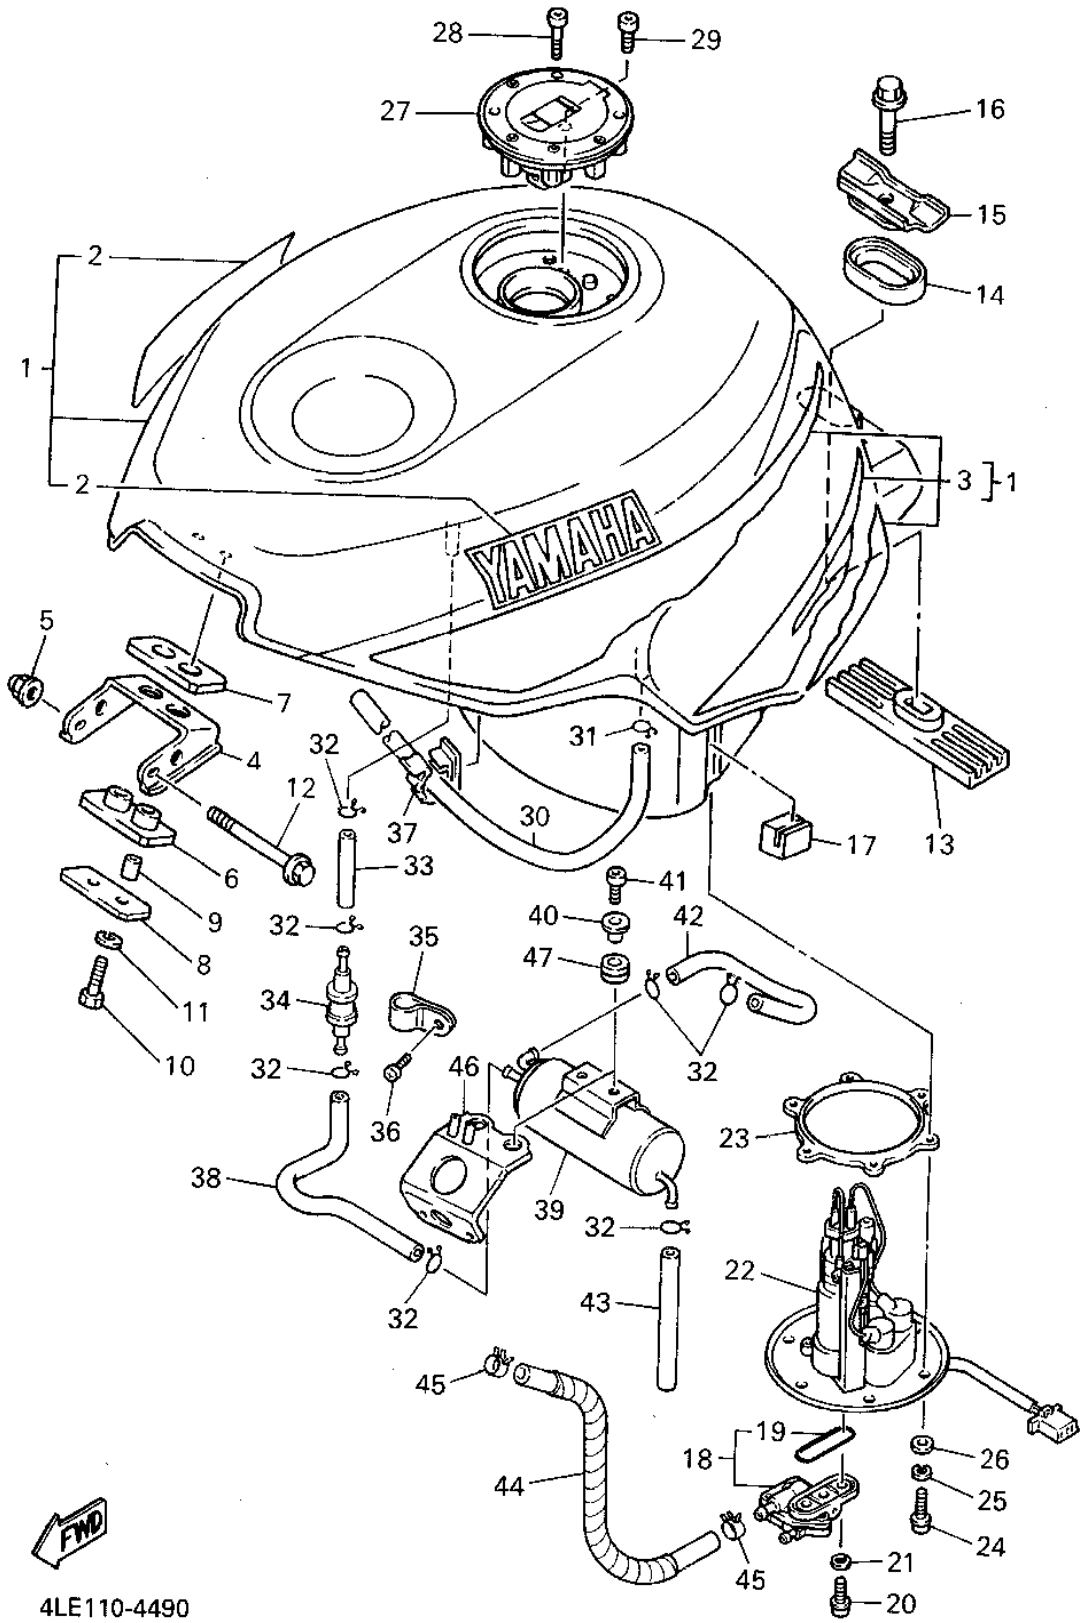


4LE110-4490

Ref. No.	Part Number	Description	Qty	Remarks
1	4FM-24110-70-01	FUEL TANK COMP.	1	BLUISH WHITE COCKTAIL 1/ DEEP VIOLET METALLIC 1
2	99226-00160-00	. EMBLEM, YAMAHA	2	
3	4FM-24240-01-00	. GRAPHIC SET	1	
4	4FM-24191-00-00	BRACKET, FUEL TANK 1	1	
5	90176-06055-00	NUT, CROWN	1	
6	2GH-24181-00-00	DAMPER, LOCATING 1	1	
7	2GH-24183-00-00	DAMPER, LOCATING 3	1	
8	2GH-24186-00-00	WASHER, SPECIAL	1	
9	90387-06553-00	COLLAR	2	
10	97011-06025-00	BOLT (97001-06025)	2	
11	92995-06100-00	WASHER, SPRING	2	
12	95816-06075-00	BOLT, FLANGE	1	
13	2GH-24184-00-00	DAMPER, LOCATING 4	1	
14	3Y6-24183-00-00	DAMPER, LOCATING 3	1	
15	4FM-24187-00-00	WASHER, SPECIAL	1	
16	95811-08016-00	BOLT, FLANGE	1	
17	4JH-24183-00-00	DAMPER, LOCATING 3	2	
18	3FV-24500-01-00	FUEL COCK ASSEMBLY 1	1	
19	4X8-24512-00-00	. O-RING	1	
20	90149-06008-00	SCREW	2	
21	90202-05187-00	WASHER, PLATE	2	
22	4FM-13910-00-00	FUEL PUMP ASSEMBLY	1	
23	4FM-2414G-00-00	SEAL	1	
24	98580-05016-00	SCREW, PAN HEAD	6	
25	92990-05100-00	WASHER, SPRING	6	
26	92901-05600-00	WASHER, PLATE	6	
27	4HN-24602-00-00	CAP ASSEMBLY	1	

CONTINUED ON NEXT FRAME ➤

FUEL TANK (CALIFORNIA ONLY)

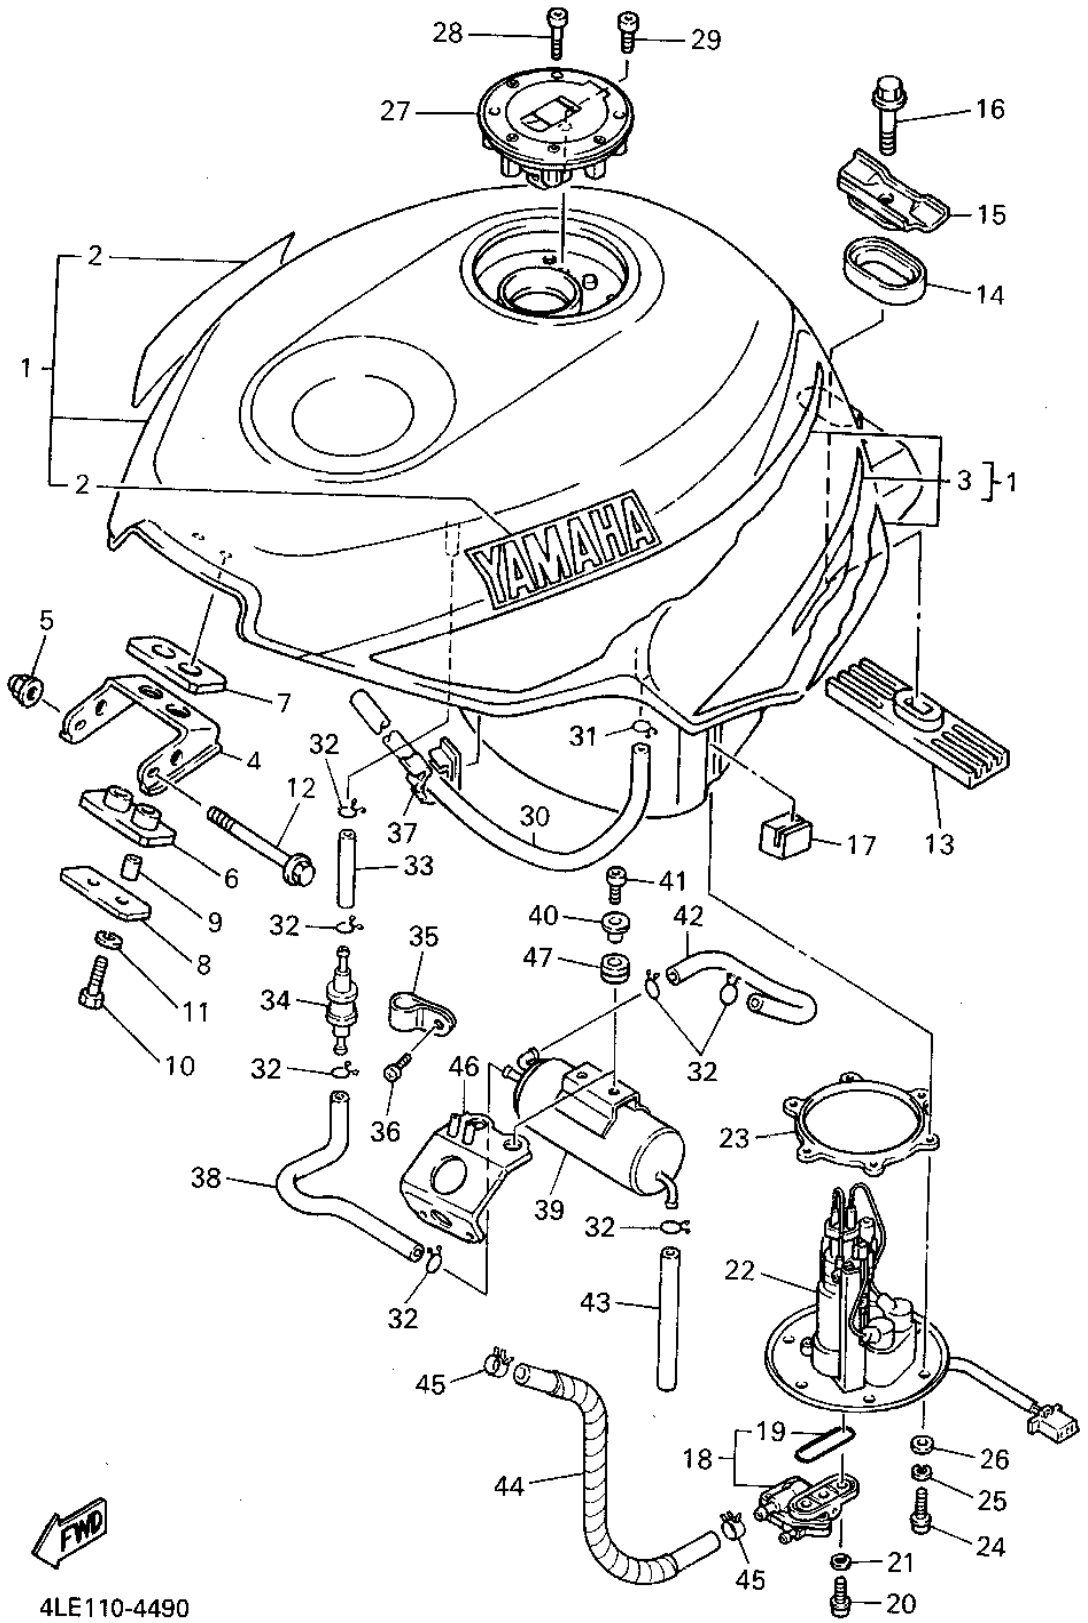

4LE110-4490

Ref. No.	Part Number	Description	Qty	Remarks
28	90110-05112-00	BOLT, HEXAGON SOCKET HEAD	3	
29	91311-05010-00	BOLT, SOCKET HEAD	1	
30	90445-102G7-00	HOSE	1	
31	90467-09006-00	CLIP	1	
32	90467-10008-00	CLIP	7	
33	90445-11763-00	HOSE	1	
34	25H-24180-00-00	ROLL OVER VALVE ASSEMBLY	1	
35	90461-15100-00	CLAMP	1	
36	98507-05010-00	SCREW, PAN HEAD	1	
37	90464-25160-00	CLAMP	1	
38	3LK-24311-00-00	PIPE, FUEL 1	1	
39	3LK-24170-00-00	CANISTER ASSEMBLY	1	
40	90387-062L2-00	COLLAR	2	
41	91316-06016-00	BOLT, SOCKET HEAD	2	
42	90445-11701-00	HOSE	1	
43	90445-11587-00	HOSE	1	
44	3FV-14294-02-00	HOSE	1	
45	90467-13123-00	CLIP	2	
46	4LE-14413-00-00	STAY	1	
47	90480-13163-00	GROMMET	2	

MODEL	PUBLICATION	PART NUMBER	REMARKS
FZR600RF, RFC	Owner's Manual	LIT-11626-09-02	
	Service Manual	LIT-11616-FZ-00	Same as FZR600RB, RD, RE
	Assembly Manual	LIT-11666-07-60	Same as FZR600RB, RD, RE
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
XV535F, FC, SF, SFC	Owner's Manual	LIT-11626-09-16	
	Service Manual	LIT-11616-XV-35	
	Assembly Manual	LIT-11666-09-16	
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
Dual Purpose			
XT600EF, EFC	Owner's Manual	LIT-11626-09-01	
	Service Manual	LIT-11616-07-43	Same as XT600EA/B/D/E
	Assembly Manual	LIT-11666-07-43	Same as XT600EA/B/D/E
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
XT350F, FC	Owner's Manual	LIT-11626-09-08	
	Service Manual	LIT-11616-04-73	Same as XT350N~E
	Assembly Manual	LIT-11666-04-73	Same as XT350N~E
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
XT225F, FC "Serow"	Owner's Manual	LIT-11626-09-04	
	Service Manual	LIT-11616-07-99	Same as XT225D, E
	Assembly Manual	LIT-11666-07-99	Same as XT225D, E
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
TW200F, FC	Owner's Manual	LIT-11626-09-18	
	Service Manual	LIT-11616-06-26	Same as TW200T~E
	Assembly Manual	LIT-11666-05-93	Same as TW200T~E
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
Motocross/ Competition Off-Road			
WR250ZF	Owner's Service Manual	LIT-11626-09-15	
	Assembly Manual	LIT-11666-09-15	
	Warranty Statement*	LIT-11790-40-91	"YZ-WR Motorcycle"
YZ250F1	Owner's Service Manual	LIT-11626-09-10	
	Assembly Manual	LIT-11666-08-63	Same as YZ250E1
	Warranty Statement*	LIT-11790-40-91	"YZ-WR Motorcycle"
YZ125F1	Owner's Service Manual	LIT-11626-09-14	
	Assembly Manual	LIT-11666-08-63	Same as YZ125E1
	Warranty Statement*	LIT-11790-40-91	"YZ-WR Motorcycle"
YZ80F1	Owner's Service Manual	LIT-11626-08-88	
	Assembly Manual	LIT-11666-08-88	
	Warranty Statement*	LIT-11790-40-91	"YZ-WR Motorcycle"

1994 MODELS
ENGINE/FRAME NUMBERS

For identification purposes, the factory has released the following list of engine (Primary I.D.) and frame numbers. Production started with the numbers listed below.

MODEL	ACTUAL DISPLACEMENT (CC)	STARTING PRIMARY ID NUMBER	STARTING VIN/FRAME NUMBER
Street			
VMX12FC*	1198	2WF-009101	JYA2WFC0( )RA009101
VMX12F	1198	2WE-039101	JYA2WEE0( )RA039101
XV1100FC*	1063	1TA-020101	JYA1TAC0( )RA020101
XV1100F	1063	1TE-054101	JYA1TEE0( )RA054101
FZR1000FC*	1003	3LK-029101	JYA3LKC0( )RA029101
FZR1000F	1003	3LK-026101	JYA3LKE0( )RA026101
GTS1000AFC*	1003	4HH-004101	JYA4HHC0( )RA004101
GTS1000AF	1003	4HH-003101	JYA4HHE0( )RA003101
XV750FC*	749	3CM-014101	JYA3CMC0( )RA014101
XV750F	749	3AL-034101	JYA3ALE0( )RA034101
YZF750RFC*	749	4LE-000101	JYA4LEC0( )RA000101
YZF750RF	749	4LE-001101	JYA4LEE0( )RA001101
XJ600SFC*	599	4DU-043101	JYA4DUC0( )RA043101
XJ600SF	599	4DU-032101	JYA4DUE0( )RA032101
FZR600RFC*	599	3UU-013101	JYA3UUC0( )RA013101
FZR600RF	599	3HH-067101	JYA3HHE0( )RA067101
XV535SFC*	535	3JC-033101	JYA3JCC0( )RA033101
XV535SF	535	3JC-028101	JYA3JCE0( )RA028101
XV535FC*	535	3JC-025101	JYA3JCC0( )RA025101
XV535F	535	3JC-021101	JYA3JCE0( )RA021101
Dual Purpose			
XT600EFC*	595	3UY-022101	JYA3UYC0( )RA022101
XT600EF	595	3UY-020101	JYA3UYE0( )RA020101
XT350FC*	346	3NV-029101	JYA3NVC0( )RA029101
XT350F	346	3NV-026101	JYA3NVE0( )RA026101
XT225FC*	223	4BE-027101	JYA4BEC0( )RA027101
XT225F	223	4BE-024101	JYA4BEE0( )RA024101
TW200FC*	196	3AW-056101	JYA3AWC0( )RA056101
TW200F	196	3AW-049101	JYA3AWE0( )RA049101
Motocross/Off-Road Competition			
YZ250F1	249	4JX-009101	JYA4JXW0( )RA009101
WR250ZF	249	4JW-000101	JYA4JWW0( )RA000101
YZ125F1	124	4JY-009101	JYA4JYW0( )RA009101
YZ80F1	82.9	4ES-012101	JYA4ESW0( )RA012101

*California Models

MODEL	ACTUAL DISPLACEMENT (CC)	STARTING PRIMARY ID NUMBER	STARTING VIN/FRAME NUMBER
Off-Road			
RT100F	97	3UL-050101	JYA3ULW0( )RA050101
PW80F	79	3RV-032101	JYA3RVW0( )RA032101
PW50F	49	3PT-099101	JYA3PTW0( )RA099101
Road Racer			
TZ250F1	249	4DP-004101	JYA4DPW0( )RA004101

NOTE: "( )" in the VIN/frame number designates a check digit. This number plays an important role in registering the unit, and will change with each individual unit. It is the product of a special government computing procedure designed to help reduce the number of vehicle theft losses.

1994 MODELS
SERVICE LITERATURE

This bulletin contains a comprehensive listing of service literature available for 1993 models. Certain models will not have new literature if the prior year's information is still current. Those literature part numbers will still be listed, but "Same as. . . " will appear in the Remarks column.

MODEL	PUBLICATION	PART NUMBER	REMARKS
Street			
VMX12F, FC "V-MAX"	Owner's Manual	LIT-11626-09-09	
	Service Manual	LIT-11616-VM-12	
	Assembly Manual	LIT-11666-08-08	Same as VMX12E
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
XV1100F, FC "Virago 1100"	Owner's Manual	LIT-11626-09-05	
	Service Manual	LIT-11616-XV-11	Same as XV700~1100 (L~E)
	Assembly Manual	LIT-11666-04-99	Same as XV1100S~E
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
GTS1000AF, AFC	Owner's Manual	LIT-11626-09-19	
	Service Manual	LIT-11616-09-19	Suppl. to LIT-11616-08-78
	Assembly Manual	LIT-11666-08-78	Same as GTS1000AE
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-22-93	"GTS1000"
FZR1000F, FC	Owner's Manual	LIT-11626-09-21	
	Service Manual	LIT-11616-FZ-02	
	Assembly Manual	LIT-11666-09-21	
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
YZF750RF, RFC	Owner's Manual	LIT-11626-09-20	
	Service Manual	LIT-11616-09-20	
	Assembly Manual	LIT-11666-09-20	
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
XV750F, FC "Virago 750"	Owner's Manual	LIT-11626-08-98	
	Service Manual	LIT-11616-XV-11	Same as XV700~1100 (L~E)
	Assembly Manual	LIT-11666-04-99	Same as XV700/750 (U~E)
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"
XJ600SF, SFC "Seca II"	Owner's Manual	LIT-11626-08-87	"Street & Enduro"
	Service Manual	LIT-11616-XJ-62	
	Assembly Manual	LIT-11666-08-87	
	Consumer Information	LIT-11656-04-64	
	Warranty Statement*	LIT-11790-21-87	"Street & Enduro"

MODEL	PUBLICATION	PART NUMBER	REMARKS
Off-Road			
RT100F	Owner's Manual	LIT-11626-08-93	
	Service Manual	LIT-11616-07-35	Same as RT100A, D, E
	Assembly Manual	LIT-11666-07-35	Same as RT100A, D, E
	Warranty Statement*	LIT-11790-30-91	"Off-Road Motorcycle"
PW80F	Owner's Service Manual	LIT-11626-08-90	
	Assembly Manual	LIT-11666-07-72	Same as PW50/80B, D, E
	Warranty Statement*	LIT-11790-30-91	"Off-Road Motorcycle"
PW50F	Owner's Service Manual	LIT-11626-08-89	
	Assembly Manual	LIT-11666-07-72	Same as PW50/80B, D, E
	Warranty Statement*	LIT-11790-30-91	"Off-Road Motorcycle"

OTHER MOTORCYCLE PUBLICATIONS	PART NUMBER
California Emissions-Related Warranty Statement	LIT-11790-01-88
Warranty Handbook **	LIT-11760-10-91
Parts Policies and Procedures Manual	LIT-10080-05-00
Assembly & Preparation Checklist	LIT-11161-00-90
Service Schedule Pad	LIT-11561-00-80
EGA Manual	LIT-11661-00-90
Heavy Duty Service Binder	LIT-10501-01-80
Small Binder for Service Data	LIT-11571-DB-00
DOES PLUS User's Manual	LIT-11760-50-86
Y.E.S. Dealer Policies & Procedures Manual **	LIT-11580-01-01
Riding Tips Booklet-Street Motorcycle	LIT-11626-07-31
Riding Tips Booklet-Off-Road Motorcycle	LIT-11626-07-32

*The Limited Warranty Statement is also printed in each Owner's Manual.
**Contact Service Communications, (714) 761-7462, for the latest updates to these manuals.

ROUTE TO: ✓ SERVICE ✓ PARTS ✓ WARRANTY ✓ SALES